

Chevrolet







1988

UNIT REPAIR MANUAL

COVERING LIGHT DUTY TRUCKS

The Table of Contents on this page indicates the sections covered in this manual. At the beginning of each individual section is a Table of Contents which gives the page number on which each major subject begins.

When reference is made in this manual to a brand name, number, or specific tool, an equivalent product may be used in place of the recommended item.

All information, illustrations, and specifications contained in this Manual are based on the latest product information available at the time of publication approval. The right is reserved to make changes at any time without notice.

Throttle Body Injection is not included in this manual. Unit repair information on TBI is included in the Service Manual.

ST333-88 Printed in U.S.A. © 1987 General Motors Corporation September, 1987 All rights reserved.

TABLE OF CONTENTS

SEC.	SECTION NAME
0A	GENERAL INFORMATION
1	AIR CONDITIONING 1B1 A6 Air Conditioning Compressor 1B2 DA-6 Air Conditioning Compressor 1B3 R-4 Air Conditioning Compressor 1B4 DA-V5 Air Conditioning Compressor 1B5 HR-6 Air Conditioning Compressor
3	STEERING 3B2 Manual Steering Gear 3B3 Power Steering
4	AXLES 4B Rear Axle 4B1 7 ¹ / ₂ and 7 ⁵ / ₈ -Inch Ring Gear 4B2 8 ¹ / ₂ -Inch Ring Gear 4B3 9 ¹ / ₂ -Inch Ring Gear 4B4 10 ¹ / ₂ -Inch Ring Gear 4B5 Dana Rear Axles 4B6 12-Inch Ring Gear (Rockwell) 4B7 Locking Differentials 4C Front Axle 4C1 8 ¹ / ₂ -Inch Ring Gear 4C2 9 ³ / ₄ -Inch Ring Gear (Dana) 4C3 T Truck Front Axle 4C4 K Truck Front Axle
5	BRAKES
6	ENGINE 6A General Engine Mechanical 6A1 2.5 Liter L4 6A2 2.8 Liter V6 6A3 4.3 Liter V6 6A4 4.8 Liter L6 6A5 V8 Engine 6A7 6.2 Liter Diesel 6C1 Model 1MEF Carburetor 6C2 Model M4MEF Carburetor 6D Engine Electrical
7	TRANSMISSION7AAutomatic Transmission7A1700-R4 Automatic Transmission7A2400/475 Automatic Transmission7A3180C Automatic Transmission7BManual Transmission7B1Hydra-Matic Muncie Transmission7B2New Process Transmission7B3Borg Warner Transmissions7DTransfer Case7D1New Process 205 Transfer Case7D2New Process 208 Transfer Case7D3New Process 241 Transfer Case7D5New Process 231 H.D. Transfer Case

iv

PAGE


SECTION 0A

GENERAL INFORMATION

CONTENTS

SUBJECT

Service Parts Identification Label0A- 1
Vehicle Identification Plate
Certification Label
Engine Identification Number
Model Reference
Metric Fasteners
Fastener Strength Identification
Six Lobed Socket Head Fasteners
Prevailing Torque Fasteners
Conversion Table
Decimal and Metric Equivalents

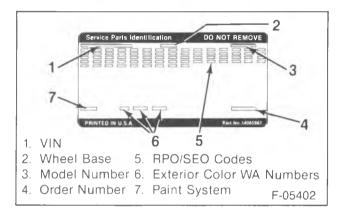



SERVICE PARTS IDENTIFICATION LABEL

The Truck Service Parts Identification Label is provided on all models (figure 1). It is located on the inside of the glove box door (or on an inner body panel for Forward Control models). The Label lists the VIN (Vehicle Identification Number), wheelbase, paint information and all Production options or Special Equipment on the vehicle when it was shipped from the factory. ALWAYS REFER TO THIS INFORMATION WHEN ORDERING PARTS.

VEHICLE IDENTIFICATION NUMBER

The VIN is the legal identifier of the vehicle. On all models except Forward Control, it is located on a plate which is attached to the left top of the instrument panel and can be seen through the windshield from the outside of the vehicle (figure 2). On Forward Control models, the plate is on the dash and toe panel. To find out the

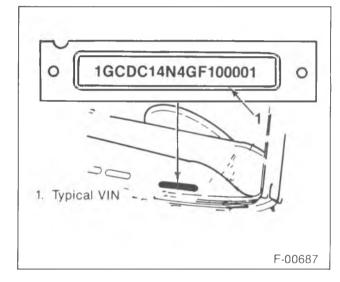


Figure 2—VIN Location

manufacturer, model and chassis type, engine type, GVW range, model year, plant code, and sequential number, refer to figure 3.

CERTIFICATION LABEL

The Certification Label shows the GVWR, and the front and rear GAWRs, and the Payload Rating for your vehicle (figure 4).

Gross Vehicle Weight (GVW) is the weight of the orginally equipped vehicle and all items added to it after it has left the factory. This would include bodies, winches, booms, etc.; the driver and all occupants; and the load the vehicle is carrying. The GVW must not exceed the GVWR. Also, the front and rear gross axle weights must not exceed the front and rear GAWRs.

The Payload Rating shown on the label is the maximum allowable cargo load (including the weight of the driver and all occupants) that the vehicle can carry based on all

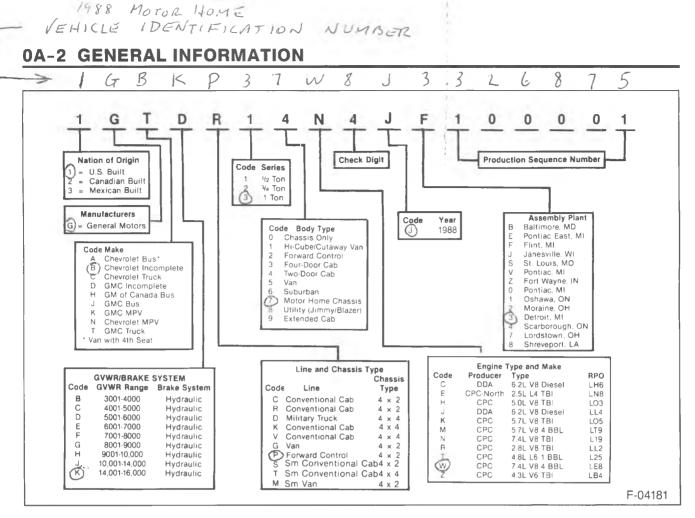


Figure 3—Vehicle Identification Number

factory installed equipment on the vehicle. The Payload Rating is reduced if any accessories or other equipment is added to the vehicle after final date of manufacture. The weight of these items should be determined and deducted from the Payload Rating.

The vehicle may also have a GCWR (Gross Combination Weight Rating). The GCW (Gross Combination Weight) is the total weight of the loaded tow vehicle (including passengers) and a loaded trailer.

The tires on the vehicle must be the proper size and properly inflated for the load which you are carrying. The

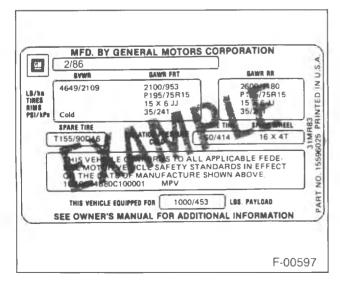


Figure 4—Certification Label

vehicle Certification Label shows the originally equipped tire size and recommended inflation pressures.

ENGINE IDENTIFICATION NUMBER

Refer to figures 5, 6 and 7 to determine the location of the engine 1.D. number.

MODEL REFERENCE

Refer to figures 8 through 12 for determining vehicle model. C, R, and S models are two wheel drive. K, V, and T models are four wheel drive.

METRIC FASTENERS

Models are primarily dimensioned in the metric system. Many fasteners are metric and are very close in dimension to well-known customary fasteners in the inch system. It is most important that replacement fasteners be of the correct nominal diameter, thread pitch and strength.

Original equipment metric fasteners (except "beauty" bolts, such as exposed bumper bolts, and cross recess head screws) are identified by a number marking indicating the strength of the material in the fastener as outlined later. Metric cross recess screws are identified by a Posidriv or Type 1A shown in figure 13. Either a Phillips head or Type 1A cross recess screwdriver can be used in Posidriv recess screw heads, but Type 1A cross recess screwdrivers will perform better.

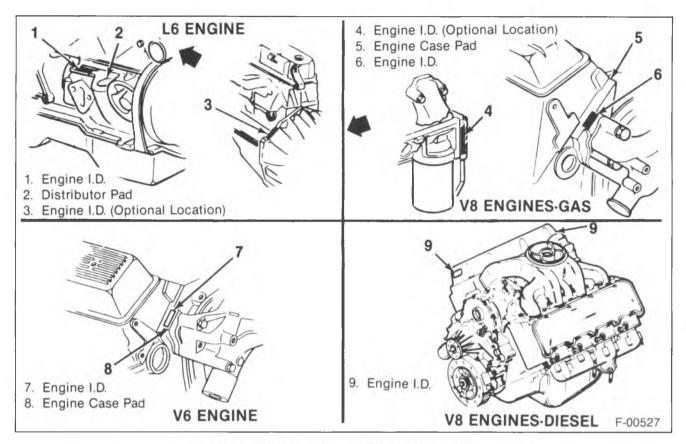


Figure 5-4.3L V6 and all V8 Engine I.D. Locations

NOTICE: Most metric fasteners have a blue color coating. However, this should not be used as positive identification as some fasteners are not color coated.

General Motors Engineering Standards, along with other North American Industries, have adopted a portion of the standard metric fastener sizes defined by ISO (International Standards Organization). This was done to reduce the number of fastener sizes used and yet retain the best strength qualities in each thread size. For

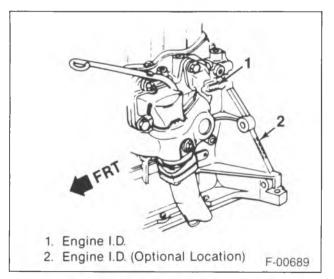


Figure 6-2.5L Engine I.D. Location

example, the customary 1/4-20 and 1/4-28 screws are replaced by the metric $M6.0 \times 1$ screw which has nearly the same diameter and has 25.4 threads per inch. The thread pitch is in between the customary coarse and fine thread pitches.

Metric and customary thread notation differ slightly. The difference is shown in figure 14.

FASTENER STRENGTH IDENTIFICATION

Most commonly used metric fastener strength properly classes are 9.8 and 10.9 with the class identification embossed on the head of each bolt. Customary (inch) strength classes range from grade 2 to 8 with radial line identification embossed on each bolt head. Markings correspond to two lines less than the actual grade (i.e. grade 7 bolt will exhibit 5 embossed radial lines on the bolt head). Some metric nuts will be marked with single digit strength identification numbers on the nut face. Figure 6 shows the different strength markings.

When replacing metric fasteners, be careful to use bolts and nuts of the same strength or greater than the original fasteners (the same number marking or higher). It is likewise important to select replacement fasteners of the correct size. Correct replacement bolts metric fasteners available in the aftermarket parts channels were designed to metric standards of countries other than the United States, and may be of a lower strength, may not have the numbered head marking system, and may be of a different thread pitch. The metric fasteners used on GM

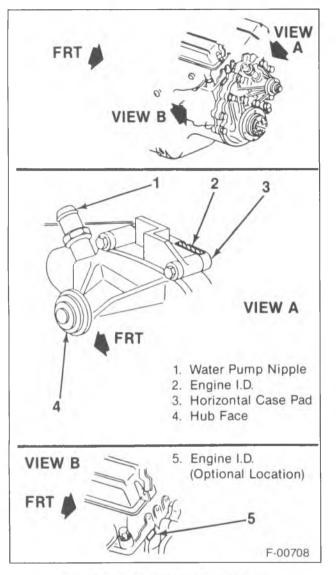


Figure 7-2.8L Engine I.D. Location

products are designed to new, international standards that may not yet be manufactured by some non-domestic bolt and nut suppliers. In general, except for special applications, the common sizes and pitches are:

M6.0 x 1	Μ	10	Х	1.5
M8 x 1.25	Μ	12	х	1.75

SIX LOBED SOCKET HEAD FASTENERS

Six lobed socket head (Torx) fasteners are used in some applications on vehicles covered in this manual (figure 15). The door striker bolt is of this design.

Tools designed for these fasteners are available commercially. However, in some cases, if the correct tool is not available, a hex socket head wrench may be used.

PREVAILING TORQUE FASTENERS

A prevailing torque nut is designed to develop an interference between the nut and bolt threads. This is most often accomplished by distortion of the top of an all-metal nut by using a nylon patch on the threads in the middle of the hex flat. A nylon insert may also be used as a method of interference between nut and bolt threads (figure 16).

A prevailing torque bolt is designed to develop an interference between bolt and nut threads, or the threads of a tapped hole. This is accomplished by distorting some of the threads or by using a nylon patch or adhesive (figure 16).

RECOMMENDATIONS FOR REUSE:

- 1. Clean, unrusted prevailing torque nuts and bolts may be reused as follows:
 - a. Clean dirt and other foreign material off the nut or bolt.
 - b. Inspect the nut or bolt to insure there are no cracks, elongation, or other signs of abuse of overtightening. (If there is any doubt, replace with a new prevailing torque fastener or equal or greater strength.)
 - c. Assemble the parts and hand start the nut or bolt.
 - d. Observe that, before fastener seats, it develops torque per the chart in figure 13 (if there is any doubt, replace with a new prevailing torque fastener of equal or greater strength).
 - e. Tighten the fastener to the torque specified in the appropriate section of this manual.
- 2. Bolts and nuts which are rusty or damaged should be replaced with new parts or equal or greater strength.

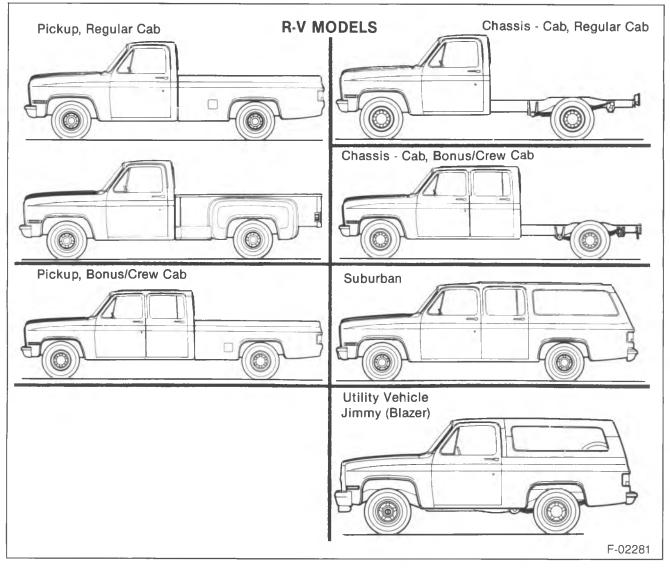


Figure 8—RV Models

0A-6 GENERAL INFORMATION

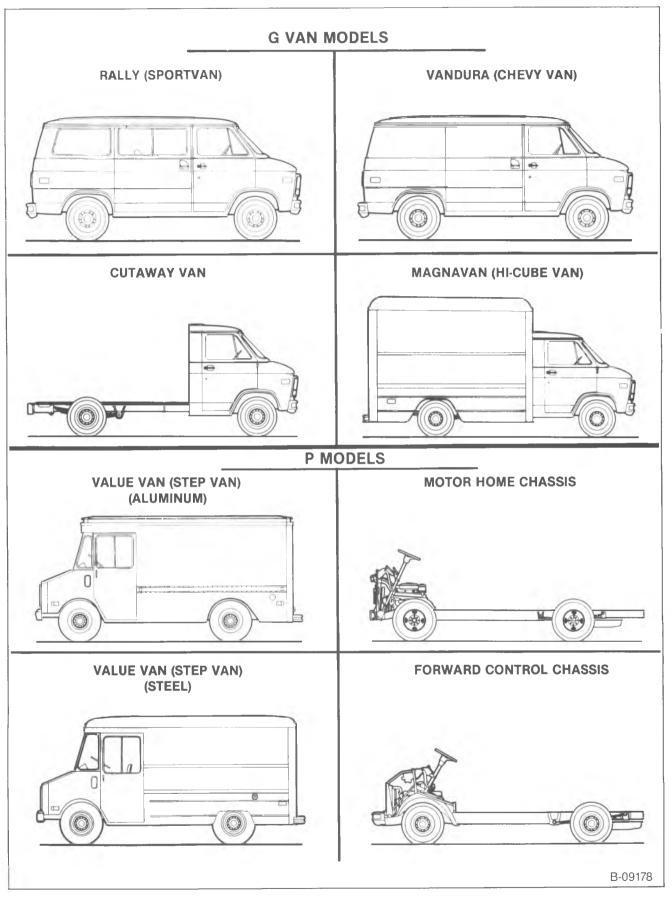


Figure 9—G and P Models

GENERAL INFORMATION 0A-7

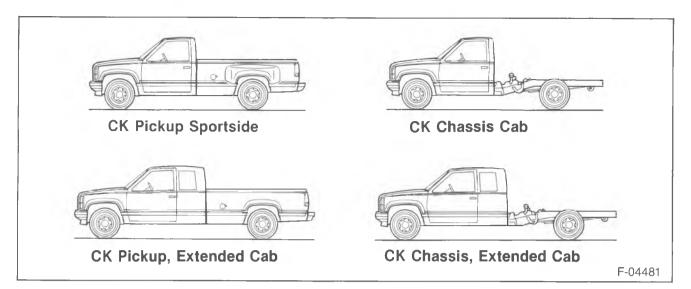


Figure 10—CK Models

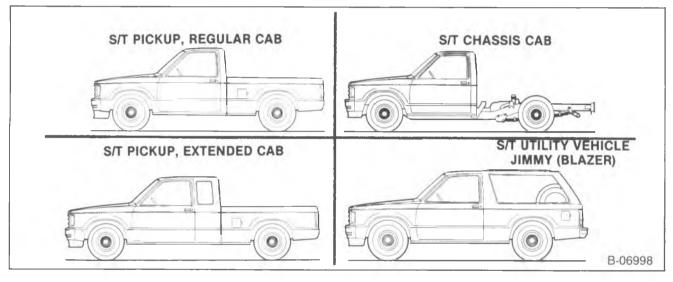


Figure 11—ST Models

0A-8 GENERAL INFORMATION

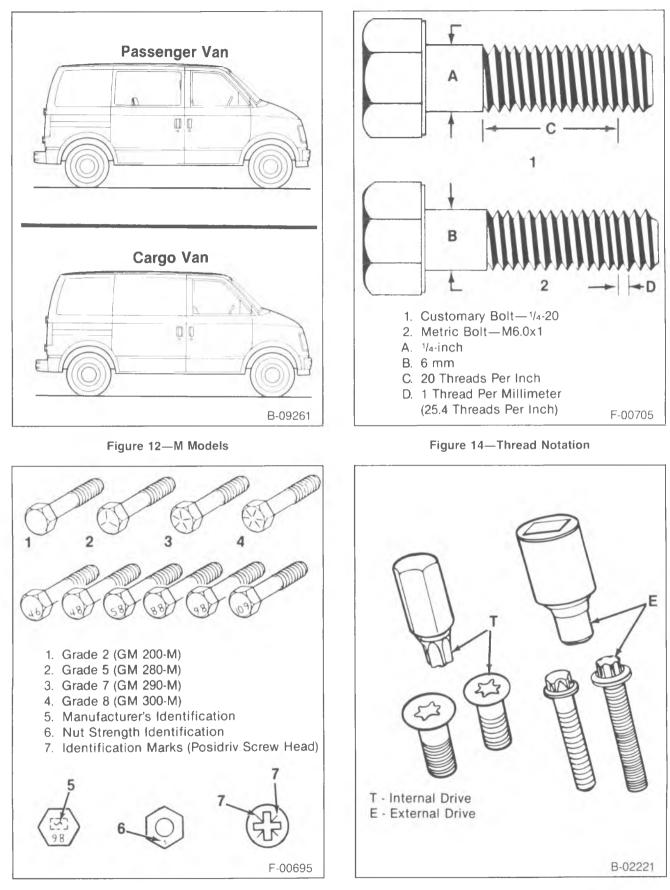


Figure 13—Bolt and Nut Identification

Figure 15—Six Lobed Socket Head Fasteners

GENERAL INFORMATION 0A-9

	80		2 2				G		
i 😁 🔞	00) 👘		3		4	
9			8			DQ	C	ATT	0
)	7	-			6		5	
						<u> </u>			
		6 & 6.3	8	10	12	14	16	20	
4, 5	N·m	0.4	0.8	1.4	2.2	3.0	4.2	7.0	
	In. Lbs.	4.0	7.0	12	18	25	35	57	
1, 2, 3, 6,	N·m	0.4	0.6	1.2	1.6	2.4	3.4	5.6	
7, 8, 9	In. Lbs.	4.0	5.0	10	14	20	28	46	
			1	E	1				
		.250	.312	.375	.437	.500	.562	.625	.750
4, 5	N·m	0.4	0.6	1.4	1.8	2.4	3.2	4.2	6.2
	In. Lbs.	4.0	5.0	12	15	20	27	35	51
1, 2, 3, 6,	N·m	0.4	0.6	1.0	1.4	1.8	2.6	3.4	5.2
8, 9	In. Lbs.	4.0	5.0	9.0	12	15	22	28	43
A. Metric Sizes 3. Inch Sizes		2. (3. [4. (Fop Lock T Center Loc Dry Adhesi Dut Of Rou Deformed	k ve Coati Ind Thre	ad				B-0240

Figure 16—Torque Nuts and Bolt Chart

CONVERSION TABLE

Multiply	by	to get equivalent number of:
	LENGTH	
Inch	25.4	millimeters (mm)
Foot	0.304 8	meters (m)
Yard	0.914 4	meters
Mile	1.609	kilometers (km)
	AREA	
Inch ²	645.2	millimeters ² (mm ²)
	6.45	centimeters ² (cm ²)
Foot ²	0.092 9	meters ² (m ²)
Yard ²	0.836 1	meters ²
	VOLUME	
Inch ³	16.387	mm ³
	16.387	cm
	0.016 4	liters (I)
Quart 0.9464	liters	
Gallon	3.785 4	liters
Yard ³	0.764 6	meters ³ (m ³)
	MASS	
Pound	0.4536	kilograms (kg)
Ton	907.18	kilograms (kg)
Ton	0.907	tonne (t)
	FORCE	
Kilogram	9.807	newtons (N)
Ounce	0.278 0	newtons
Pound	4.448	newtons
	TEMPERATU	IRE
Degree		
Fahrenheit	(†°F-32) ÷ 1.8	degree Celsius (C)

-		to get equivalent
Multiply	by	number of:
	ACCELERA	ΓΙΟΝ
Foot/sec ²	0.304 8	meter/sec2 (m/s2)
Inch/sec ²	0.025 4	meter/sec ²
	TORQUE	
Pound-inch	0.112 98	newton-meters (N·m)
Pound-foot	1.355 8	newton-meters
	POWER	
Horsepower	0.746	kilowatts (kW)
PF	RESSURE OR	STRESS
Inches of water	0.249 1	kilopascals (kPa)
Pounds/sq. in.	6.895	kilopascals
	ENERGY OR \	VORK
BTU	1 055	joules (J)
Foot-pound	1.355 8	joules
Kilowatt-hour	3 600 000	joules (J \$ one W)
	or 3.6 x 106	
	LIGHT	
Foot candle	1.076 4	lumens/meter ² (lm/m ²)
F	UEL PERFOR	MANCE
Miles/gal	0.425 1	kilometers/liter (km/l)
Gal/mile	2.3527	liter/kilometer (l/km)
	VELOCIT	Y
Miles/hour	1.609 3	kilometers/hr. (km/h)

B-05497

-

Fractions	Decimal In.	Metric mm	Fractions	Decimal In.	Metric mr
1/64	0.015625	0.39688	33/64	0.515625	13.09687
1/32	0.03125	0.79375	17/32	0.53125	13.49375
3/64	0.046875	1.19062	35/64	0.546875	13.89062
1/16	0.0625	1.58750	9/16	0.5625	14.28750
5/64	0.078125	1.98437	37/64	0.578125	14.68437
3/32	0.09375	2.38125	19/32	0.59375	15.08125
7/64	0.109375	2.77812	39/64	0.609375	15.47812
1/8	0.125	3.1750	5/8	0.625	15.87500
9/64	0.140625	3.57187	41/64	0.640625	16.27187
5/32	0.15625	3.96875	21/32	0.65625	16.66875
11/64	0.171875	4.36562	43/64	0.671875	17.06562
3/16	0.1875	4.76250	11/16	0.6875	17.46250
13/64	0.203125	5.15937	45/64	0.703125	17.85937
7/32	0.21875	5.55625	23/32	0.71875	18.25625
15/64	0.234375	5.95312	47/64	0.734375	18.65312
1/4	0.250	6.3500	3/4	0.750	19.05000
17/64	0.265625	6.74687	49/64	0.765625	19.44687
9/32	0.28125	7.14375	25/32	0.78125	19.84375
19/64	0.296875	7.54062	51/64	0.796875	20.24062
5/16	0.3125	7.93750	13/16	0.8125	20.63750
21/64	0.328125	8.33437	53/64	0.828125	21.03437
11/32	0.34375	8.73125	27/32	0.84375	21.43125
23/64	0.359375	9.12812	55/64	0.859375	21.82812
3/8	0.375	9.52500	7/8	0.875	22.22500
25/64	0.390625	9.92187	57/64	0.890625	22.62187
13/32	0.40625	10.31875	29/32	0.90625	23.01875
27/64	0.421875	10.71562	59/64	0.921875	23.41562
7/16	0.4375	11.11250	15/16	0.9375	23.81250
29/64	0.453125	11.50937	61/64	0.953125	24.20937
15/32	0.46875	11.90625	31/32	0.96875	24.60625
31/64	0.484375	12.30312	63/64	0.984375	25.00312
1/2	0.500	12.7000	1	1.00	25.40000



PAGE

PAGE

SECTION 1

AIR CONDITIONING

CONTENTS

	TAVE
A-6 Air Conditioning Compressor	1B1-1
DA-6 Air Conditioning Compressor	1 B2- 1
R-4 Air Conditioning Comrpessor	1B3-1
DA-V5 Air Conditioning Compressor	
HR-6 Air Conditioning Compressor	1 B 5-1

SECTION 1B1

A-6 AIR CONDITIONING COMPRESSOR

CONTENTS

SUBJECT

SUBJECT

Description	.1B1- 1
Minor Repair to the Compressor	.1B1- 3
Clutch Plate and Hub Assembly Replacement	.1B1- 3
Pulley and Bearing Assembly Replacement	.1B1- 4
Clutch Coil and Housing Assembly Replacement	.1B1- 6
Major Repair to the Compressor	.1 B 1- 7
Shaft Seal Replacement	.1B1- 7
Pressure Relief Valve Replacement	.1 B 1- 9
Compressor Disassembly	.1B1-10
Gaging Operation	.1B1-12
Gaging Procedure	
Piston Ring Replacement	
Compressor Assembly	.1B1-18
Leak Testing	
Specifications	
Special Tools	.1 B 1-24

DESCRIPTION

When servicing the Harrison A-6 compressor, prevent dirt or foreign material from getting on or into the compressor parts and system during disassembly or reassembly.

Keep tools and work area clean. Clean the compressor exterior before disassembly. Clean parts with trichloroethane, naptha or Stoddard solvent, kerosene or equivalent. Dry with air.

Use a non-lint producing type cloth to clean each part.

Although certain service operations can be performed without removing the compressor from the vehicle, the operations described here are based on bench repair with the compressor removed from the vehicle. They have been prepared in sequence in order of accessibility of the components (figure 1). For compressor removal and installation, refer to the proper truck service manual.

Do not kink or place excessive tension on lines or hoses.

After removing the compressor from the vehicle, drain and measure the refrigerant oil. Add new 525 viscosity refrigerant oil after repair. Refer to "Specifications."

IDENTIFICATION

An identification label attached to the compressor provides the name of the manufacturer, model number and build code. If the label is removed or becomes dislodged during service operation, reattach it using an adhesive sealant such as Loctite 312 or equivalent.

1B1-2 A-6 AIR CONDITIONING COMPRESSOR


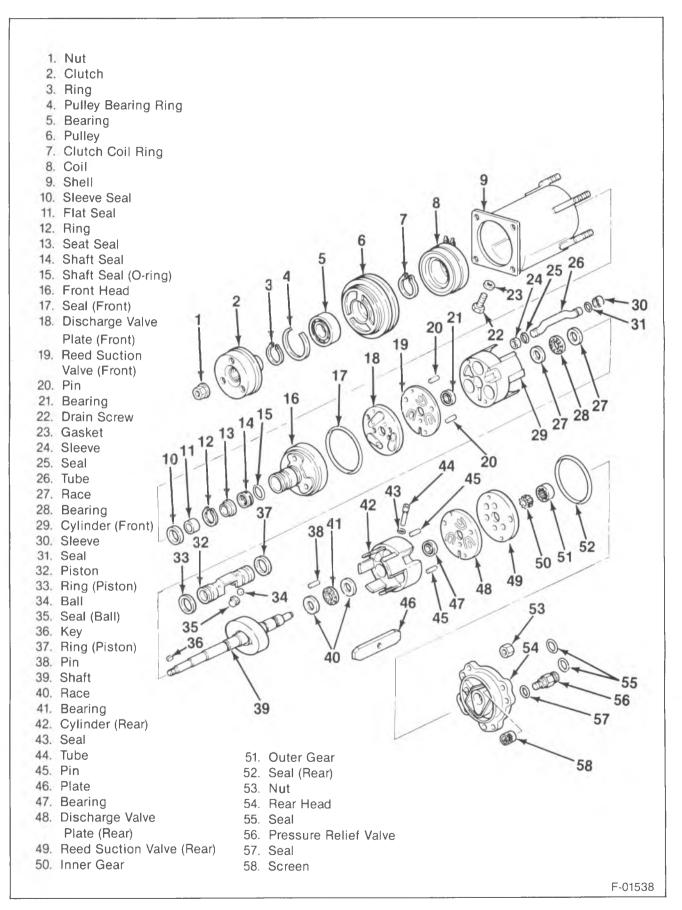


Figure 1—Compressor Component View

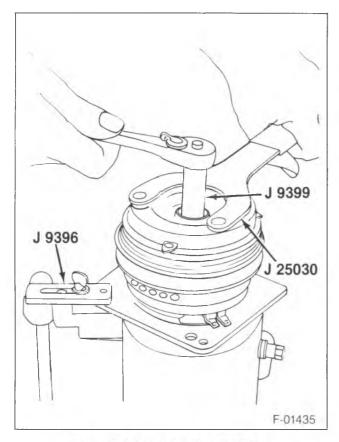

MINOR REPAIR TO THE COMPRESSOR

Figure 2—Removing the Shaft Nut

Operations to the clutch plate and hub, pulley and bearing, and coil and housing are covered as "Minor" because they may be performed without purging the system.

Servicing the shaft seal and pressure relief valve are covered in "Major Repair Procedures" because the system must be purged of Refrigerant-12.

Illustrations used in describing these operations show the compressor removed from the vehicle to illustrate the various operations.

When servicing the compressor, remove the components that preliminary diagnosis indicates need servicing. Refer to figure 1 for part name and location.

Keep the work area, tools and parts clean. Use Piston Tray J 9402 (refer to "Special Tools") for parts removed and for replacement parts.

When a compressor is removed from the vehicle for servicing, drain and measure the amount of oil remaining in the compressor. After servicing, add new 525 viscosity refrigerant oil to the compressor.

CLUTCH PLATE AND HUB ASSEMBLY REPLACEMENT

Remove or Disconnect (Figures 1, 2 and 3)

Tools Required:

J 9396 Compressor Holding Fixture

J 9399 Compressor Shaft Nut Socket

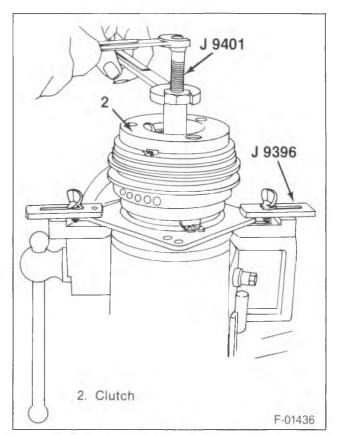


Figure 3—Removing the Clutch Plate and Hub Assembly

- J 9401-A Hub Drive Plate Remover
- J 25030 Clutch Hub Holding Tool
- Clamp J 9396 in a vise.
- Compressor to J 9396. Secure with thumb screws (figure 2).
- 1. Shaft nut (1) with J 9399.
 - Hold the clutch plate and hub assembly (2) with J 25030 (figure 2).
- 2. Clutch plate and hub assembly (2).
 - Thread J 9401-A into the clutch plate and hub (2) (figure 3).
 - Hold the body of J 9401 with a winch and tighten the center screw into the remover body.
- 3. Shaft key (36).
 - Retain the shaft key (36) if usable.

Inspect

• All parts and replace as necessary.

→← Install or Connect (Figures 1, 4 and 5)

- Tools Required:
 - J 9399 Compressor Shaft Nut Socket
 - J 9480-B Hub and Drive Plate Assembly Installer
 - J 25030 Clutch Hub Holding Tool
- 1. Shaft key (36).

1B1-4 A-6 AIR CONDITIONING COMPRESSOR

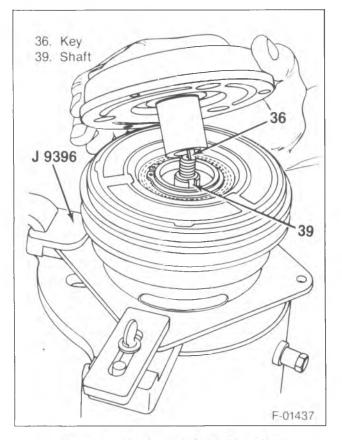


Figure 4—Aligning the Drive Plate Key

- Allow the shaft key (36) to extend 4.5 mm (3/16-inch) out of the bottom of the hub keyway (figure 4).
- The shaft key (36) is curved to give an interference fit in the groove.

Important

8

- Do not drive or pound on the clutch hub or the shaft (39). Internal damage to the compressor may result.
- 2 Clutch plate and hub assembly (2) (figure 4).
 - Install the clutch plate and hub assembly (2) over the compressor shaft lining up the key slot on the hub with the keyway slot in the shaft.
 - Install J 9480-B on the threaded end of the shaft (figure 5).
 - Back off J 9480-B body to allow the center screw to be threaded against the end of the compressor shaft (39).
 - Hold the center screw with a wrench and tighten the hex portion of J 9480-B body while pressing the hub onto the shaft (39). After tightening the body several turns, remove J 9480-B and check that the shaft key (36) is properly in place in the keyway.
 - Air gap between contact surfaces of the clutch plate and hub assembly (2) and the pulley (6) should be 0.56-1.34 mm (0.022-0.057-inch).
 - Remove J 9480-B.

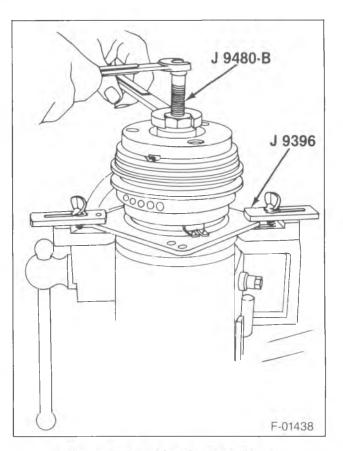


Figure 5—Installing the Drive Plate

Inspect
Position of the shaft (39) (even with or

- slightly above the clutch hub).
- 3. Shaft nut (1).
 - Use J 9396 to hold the clutch plate and hub assembly (2).

၃ Tighten

- Shaft nut (1) to 27 N m (20 ft. lbs.) with J 9399.
- Hand spin the pulley (6) to check for free rotation.

PULLEY AND BEARING ASSEMBLY REPLACEMENT

←→ Remove or Disconnect (Figures 1, 6 through 9)

Tools Required:

- J 0435 Snap Ring Pliers
- J 8092 Driver Handle
- J 8433 Heavy Duty Pulley Puller
- J 9395 Pulley Puller Adapter
- J 9398-A Pulley Bearing Remover
- J 9481-A Pulley Bearing and Pulley Installer
- J 24092 Pulley Hub Adapter Set
- 1. Clutch plate and hub assembly (2).
- 2. Pulley bearing retainer (2) with J 6435 (figure 6).
- 3. Pulley (6).

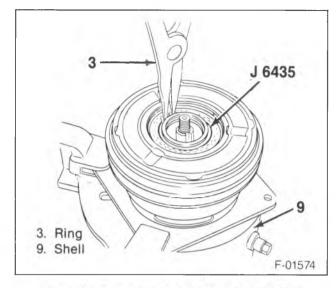


Figure 6-Removing the Pulley Retainer Ring

• Install J 9395 over the end of the compressor shaft (38) (figure 7).

? Important

- Use J 9395 puller pilot to prevent internal damage to the compressor when removing the pulley. Do not use the pulley directly against the end of the shaft.
- Place J 8433 over J 9395 for the regular V-groove pulley.

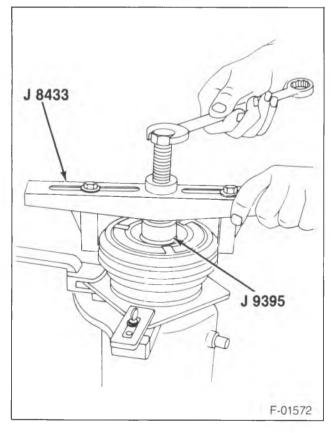


Figure 7—Removing the Pulley and Bearing

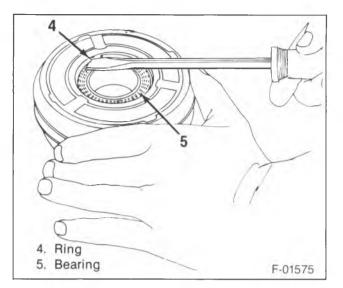


Figure 8—Removing the Pulley and Bearing Retainer Ring

- Place J 24092 over J 9395 for the multi-groove pulley.
- Turn the screw on J 8433 to remove the pulley (6).

? Important

- When using J 24092, the puller arms must extend around to the rear side of the pulley. Do not attempt to pull the pulley off by engaging the puller arms in a multi-groove pulley.
- 4. Bearing (5) from the pulley (6) (figure 8).
 - Remove the retaining ring (3).
 - Pulley (6) to J 21352 (figure 9).
 - Drive the bearing 95) from the pulley (6) with J 9398 and J 8092.

Install or Connect (Figures 1 and 10)

Tools Required:

- J 6435 Snap Ring Pliers
- J 8092 Driver Handle

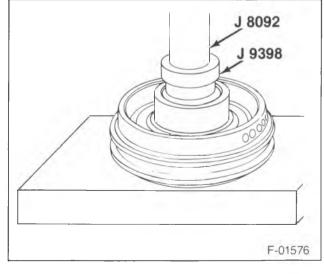


Figure 9-Removing the Bearing from the Pulley

1B1-6 A-6 AIR CONDITIONING COMPRESSOR

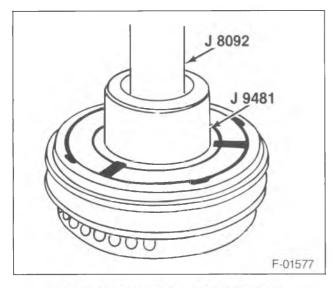


Figure 10-Installing the Pulley Bearing

J 9481-A Pulley Bearing and Pulley Installer 1. Bearing (5) to the pulley (6) with J 8092 and J 9481-A (figure 10).

- 2. Retainer ring (4) to the pulley (6).
- 3. Pulley (6) and bearing (5) to shaft (38) with J 8092 and J 9481-A.
- 4. Retainer ring (4) to pulley (6) and bearing (5).
- 5. Pulley retainer ring (3) with J 0435.
- 6. Clutch plate and hub assembly(2).
 - Refer to "Clutch Rotor and Hub Assembly Replacement."

CLUTCH COIL AND HOUSIONG ASSEMBLY REPLACEMENT

+> Remove or Disconnect (Figure 1)

Tool Required:

- J 6435 Snap Ring Pliers
- 1. Clutch plate and hub assembly (2).
- 2. Pulley (6).
- Mark or scribe the location of the clutch coil (8) to terminal on the compressor front head (16).
- 3 Clutch coil assembly (8).
 - Coil housing retaining ring (7) with J 6435.
 - Using a large screwdriver or small pry bar. pry the clutch coil away from the front head. If necessary, hand impact a blow to the screwdriver handle or pry bar to break the adhesive bond of the clutch coil to the front head.

📕 Clean

- Adhesive from the coil by scraping with a putty knife.
- Remove any adhesive around the three locator hole areas of the front head and around the three clutch coil locator protrusions at the rear of the clutch coil housing.
- Use a suitable solvent to clean the coil.

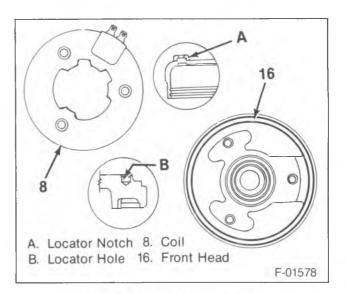


Figure 11-Adhesive Fill Guide

Important

• After applying Loctite Depend, Loctite Trim and Detail Adhesive or equivalent to the coil, install all the clutch parts to the compressor. Allow 30 minutes for the adhesive to set.

++ Inst

Install or Connect (Figures 11 and 12)

Tool Required:

- J 6435 Snap Ring Pliers
- 1. Adhesive to the clutch coil (8) (figure 11)

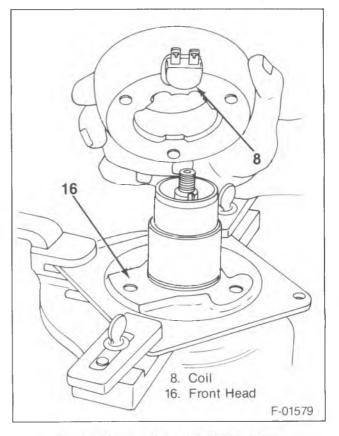


Figure 12—Installing the Coil Housing

- Place the clutch coil "face down" and apply the adhesive in a circular bead around the three coil locator protrusions.
- 2. Clutch coil (8) to the front head (16) (figure 12).
 - Align the coil and housing assembly on the compressor front head (16) so that the electrical terminals line up the marks scribed on the compressor.
- Align the coil locator projections on the coil housing with the holes in the front head (16).
- 3. Coil and housing retainer ring (7) with J 6435.



- Remove any excess adhesive.
- 4. Pulley and bearing assembly (5 and 6).
- 5. Clutch plate and hub assembly (2).

MAJOR REPAIR TO THE COMPRESSOR

Service repair procedures to the compressor shaft seal and pressure relief valve or disassembly of the internal compressor mechanism are considered "Major" since the refrigeration system must be purged of refrigerant before proceeding.

If servicing or replacing the internal cylinder and shaft assembly chain, measure and replace the oil with new 525 viscosity refrigerant oil.

Disassemble the compressor in a clean work area. Use clean tools. Disassembly procedures require proper service tools. Using inadequate equipment may damage the compressor.

Replacement parts are packaged and can be used without cleaning.

Piston shoe discs and shaft thrust races are "numbered." To determine size and dimension, refer to the chart in this section.

SHAFT SEAL REPLACEMENT

★→ Remove or Disconnect (Figures 1, 13, 14 and 15)

Tools Required:

- J 5403 Snap Ring Pliers
 - J 9392-01 Shaft Seal Remover and Installer
 - J 9553 Seal Remover

J 22974-A Compressor Shaft Oil Seal Protector

J 23128-A Compressor Shaft Seal Seat Remover and Installer

1. Clutch plate and hub assembly(2).

P Clean

- The inside of the compressor around the shaft (38). Prevent dust and dirt from entering the compressor.
- 2. Sleeve retainer (10).
- 3. Absorbent felt sleeve (11).
- 4. Shaft seat retaining ring (12) with J 5403 (figure 13).
- 5. Shaft seat (13) (figure 14).
 - Place J 22974-A over the end of the shaft (38) to prevent chipping the ceramic seat (13).
 - Engage J 23128 into the recessed portion of the seat by turning J 23128 to the right (clockwise).
 - Lift the seat (13) from the compressor with a rotary motion.
- 6. Shaft seal (14) (figure 15).
 - Insert J 9392-01 over the compressor shaft (39).



Figure 13—Removing/Installing the Shaft Seal Retaining Ring

- Engage the tabs on the seal (14) by twisting the J 9392-01 downward to the right.
- Engage the tabs and lift the seal (14) out of the shaft (39) cavity.
- 7. Seal (O-ring) (15) with J 9553-01.

+ Install or Connect (Figures 1, 13 through 16)

Tools Required:

- J 5403 Snap Ring Pliers
- J 9392-01 Shaft Seal Remover and Installer
- J 9393-A Seal Seat Remover and Installer
- J 9366 Compressor Shaft Nut Socket
- J 9625-A Pressure Test Set with Schrader Valves
- J 22974-A Shaft Seal Protector
- J 23128-A Ceramic Seal Remover and Installer

1B1-8 A-6 AIR CONDITIONING COMPRESSOR

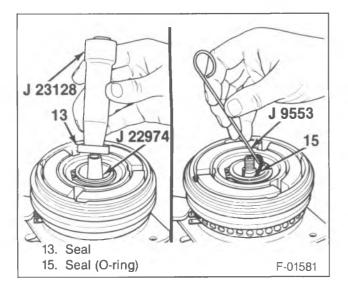


Figure 14—Removing/Installing the Shaft Seal Seat and Seal

- J 24340 Retainer Ring Pliers
- J 33011 Seal Remover
- 1. Seal (O-ring) (15) with J 33011 (figure 15).
 - Dip the seal (15) into clean 525 viscosity refrigerant oil.
 - Insert J 33011 down into the compressor neck until the tool "bottoms."
 - Lower the movable slide of J 33011 into the lower groove.

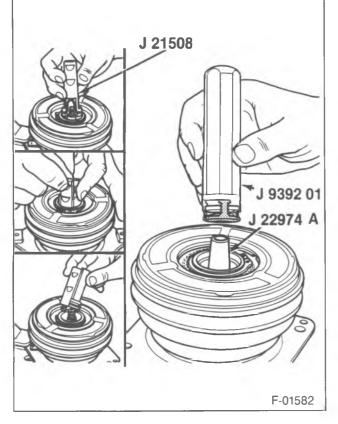


Figure 15—Removing/Installing the Shaft Seal and Seal

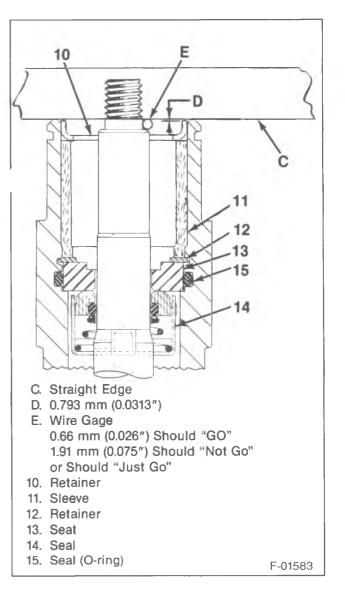


Figure 16—Shaft and Seal Position and Correct Position Gaging Guide

- Rotate J 33011 to seat the seal (15).
- Remove J 33011.
- 2. Seal seat (14) (figure 15).
 - Coat the seal (14) with clean 525 viscosity refrigerant oil.
 - Mount the seal (14) to J 9392-01 by engaging the tabs of the seal with the tangs of J 9392-01.
 - Place J 22974 over the end of the compressor shaft (39).
 - Slide the seal (14) and J 22974 down onto the compressor shaft (38).
 - Twist J 9392-01 to the right (clockwise) while pushing the seal assembly down the shaft (38) until the seal assembly (14) engages the flats on the shaft and seat in place.
 - Disengage J 9392-01 by pressing downward and twisting to the left (counterclockwise).
- 3. Ceramic seal seat (13) (figure 14).
 - Seal (13) to J 23128.

- Dip the seal (13) into clean 525 viscosity refrigerant oil.
- Install J 23128 and the seal (13) over the compressor shaft (39).
- Push the seal (13) into place with a rotary motion.

? Important

• Do not dislodge the seal (O-ring) (15).

- 4. Seal shaft retainer ring (12) with J 5403 (figure 13).
 - Place the flat side against the seal seat.
 - Use the sleeve of J 9393-B to press the ring into its groove.
- 5. J 9625 to the rear head of the compressor:
 - Gage charging lines or pressurize the suction side (low pressure side) of the compressor with refrigerant to equalize the pressure to the drum pressure.
- 6. Shaft nut (1) with J 9399.
 - Place the compressor in a horizontal position with the oil sump down.
 - Rotate the compressor shaft by hand.
 - Leak test with J 23400.
 - Replace shaft nut (1) with a new one.
- 7. New absorbent sleeve (11).
 - Roll the material into a cylinder, overlapping the ends.
 - Slip the sleeve into the compressor neck with the overlap toward the top of the compressor.
 - With a screwdriver spread the sleeve ends of the sleeve butt at the top vertical centerline.
- 8. Sleeve retainer (10) with J 9393.
 - Place the flange face against the front end of the sleeve.
 - Press and tap with a mallet to set the retainer and sleeve into place. Place the retainer 0.7937 mm (0.03125-inch) from the face of the compressor neck (figure 16).
- 9. Clutch plate and hub assembly (2).
 - Refer to "Clutch Plate and Hub Assembly Replacement."

? Important

• Using improper procedures, pounding or collisions can damage the shaft seal and the axial plate. If the axial plate is out of position, the carbon face of the shaft seal may not contact the seal seat.

- To check the position of the axial plate on the shaft, remove the clutch driven plate and measure the distance between the front head extension and the flat shoulder on the shaft with a wire gage. The clearance should be 0.66-1.9 mm (0.026-0.075-inch) (figure 16).
- If the shaft has been pushed back in the axial plate (measurement greater than 1.9 mm (0.075-inch), disassemble the compressor and replace the shaft and axial plate assembly, thrust races and thrust bearings.
- If there is too much or not enough air gap between the drive and driven plates, check for shaft dislocation. It will not be possible to service the compressor if the carbon seat is not seating against the seal seat.


PRESSURE RELIEF VALVE REPLACEMENT

The pressure relief valve is located at the rear of the compressor.

Remove or Disconnect (Figure 1) Valve (56). Seal (57). Clean The valve cavity to remove any dust or dirt before installing a new seal. Install or Connect (Figure 1) Seal (57) to the compressor. Dip the seal (57) in 525 viscosity refrigerant oil. Valve (56) to the compressor. Valve (56) to the compressor. Tighten

• Valve (56) to 19 N m (14 ft. lbs.)

1B1-10 A-6 AIR CONDITIONING COMPRESSOR

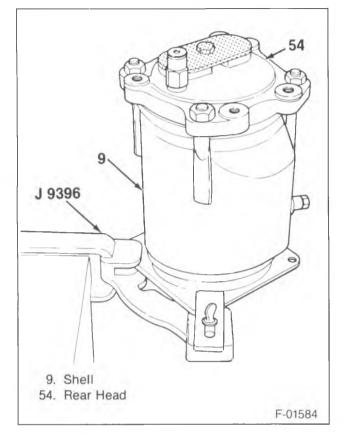

COMPRESSOR DISASSEMBLY

Figure 17—Compressor to J 9396

Remove or Disconnect (Figures 1, 17 through 26)

- Tools Required:
- J 9396 Compressor Holding Fixture
- J 9397 Compressing Fixture
- J 9402 Piston Assembly Tray
- J 21352-A Compressor Support Block
- J 9396 to a vise.
- Compressor to J 9396. Secure with thumb screws (figure 17).
- 1. Nuts (42) from the threaded studs.
- 2. Rear head (43) (figure 18).
 - Tap around the edge to remove the rear head (43).
- 3. Suction screen (47).
- 4. Gears (50 and 51).
 - Mark the face of the gears before removing.
- 5. Seal (52).
- 6. Rear discharge valve plate assembly (49) (figure 19).
 - Use two small screwdrivers under the reed retainers to remove the assembly.
 - Do not position the screwdrivers between the reeds and the reed seats.
- 7. Rear suction reed plate (48) (figure 20).
 - Do not pry up on the horse-shoe shaped reed valves.
- 8. Oil pick-up tube (37) with J 5239 (figure 21).
- 9. Seal (36).
- 10. Compressor to J 21352.

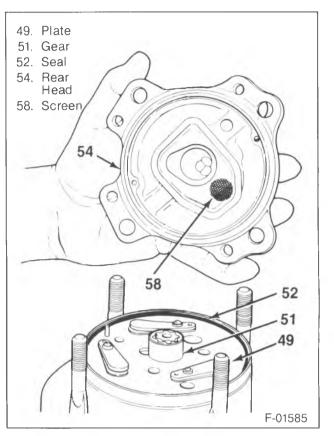


Figure 18—Removing the Rear Head

- · Loosen the compressor from J 9396.
- Place J 21352 over the oil pump end of the shaft.
- Holding the support block in position with one hand, lift the compressor from the holding fix-ture with the other hand.


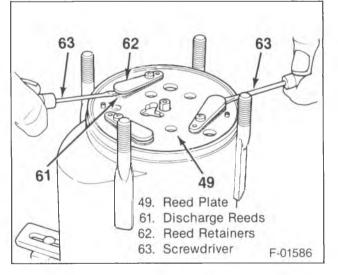


Figure 19—Removing the Rear Discharge Valve Plate and Seal




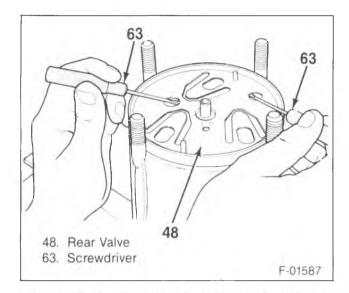



 Invert the compressor and place the shaft end up on the bench with the internal assembly support block resting on the bench.

Important

• To prevent damaging the shaft, do not tap on the end of the compressor shaft to remove the internal mechanism. If the mechanism will not slide out of the compressor shell, tap on the front head with a plastic hammer.

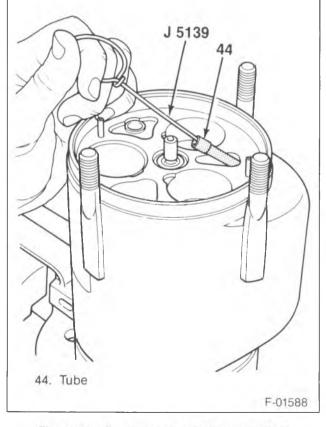

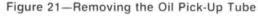

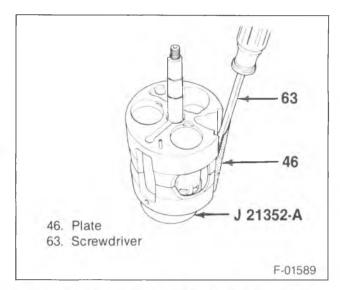



- 11. Front head assembly (16) from the shell (9).
 - Rest the compressor shell (9) on its side and push the fronthead assembly (16) through the shell (9).
- 12. Front seal (17).
 - Tap on the outside of the front head (16) with a plastic hammer to overcome the friction of the seal (17) between the fronthead (16) and the shell (9).
- 13. Front discharge valve plate (18).
- 14. Front suction reed plate (19).
- 15. Suction cross-over plate (46) (figure 22).
 - Pry with a screwdriver between the casting (29) and the cover.
- 16. Cylinder halves (29 and 42).
 - Number the piston and the piston bores with the same numbers so the pistons can be installed in their bores (figure 23).
 - Separate the cylinders (29 and 42) with a block of wood and a mallet (figure 24).
 - Do not let the discharge cross-over tube (26) touch the axial plate (39).
 - Do not strike the shaft at either end to separate the upper and lower cylinder halves because the shaft (39) can be damaged.
- 17. Rear half (42) of the compressor from the pistons (30).
- Front cylinder half (29) with the piston (38), shaft and axial plate (38) to J 9397.
- 19. Pistons (30), balls (31) and seats (33) in the order in which the pistons are marked.
 - Place parts in J 9402.
 - Place the pistons (32) in J 9402 with the notch in the casting web at the front end of the piston into the dimpled groove of the J 9402 (figure 25).
- 20. Rear thrust races (40) and thrust bearing (41) from the shaft (39) (figure 26).
- 21. Shaft (39) from the front cylinder half (29).
 - If necessary, bend the discharge cross-over tube (26) to remove the shaft (39).
- 22. Front thrust races (27) and thrust bearing (28).

1B1-12 A-6 AIR CONDITIONING COMPRESSOR

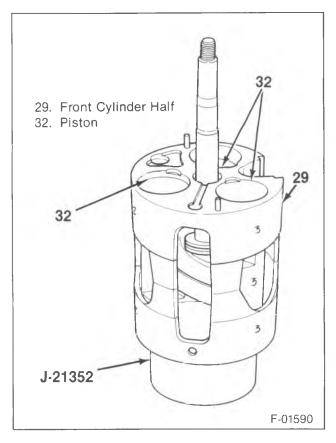


Figure 23—Numbering the Pistons and Cylinders

- Discharge crossover tube (26) from the cylinder half
 (29) with locking jaw pliers.
 - This is necessary on original factory equipment because the tube ends are swedged into the cylinder halves.
 - If previously serviced, the discharge crossover tubes (26) will have a seal and bushing at the end of the tube. Remove these tubes by hand.

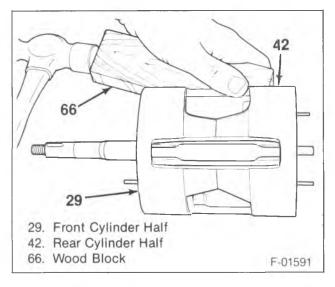


Figure 24—Separating the Cylinder Halves

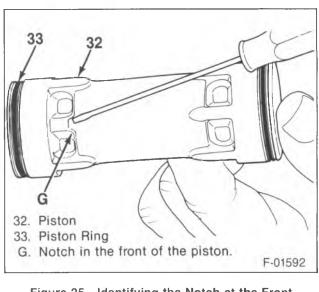


Figure 25—Identifying the Notch at the Front of the Piston

GAGING OPERATION

Install or Connect (Figures 27 through 31)

Tools Required:

- J 9396 Compressor Holding Fixture
- J 9397 Compressing Fixture
- J 9432 Needle Bearing Installer
- J 21352-A Compressor Support Block

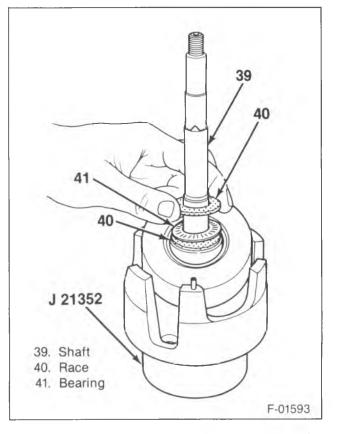


Figure 26—Removing the Front Thrust Races and Bearing

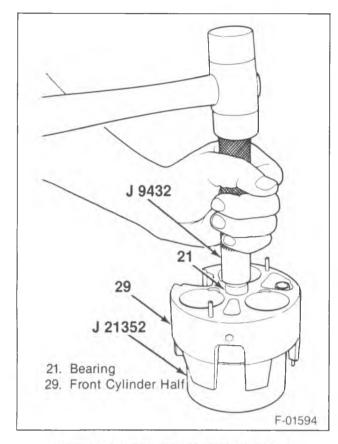


Figure 27—Installing the Needle Bearing

- 1. Needle bearing (21) to the front cylinder (29) with J 9432 (figure 27).
 - Support the cylinder half (29) on J 21352-A.
 - Insert needle bearing (21).
 - Insert J 9432 into the hub end (inner side) of the cylinder head (29) and drive the needle bearing into the cylinder.
 - Production compressors use 1/2- and 5/8-inch needle bearings. The bearings are interchangeable.
 - · Remove cylinder half (29) from J 21352-A.
- 2. J 9397 on J 9396.
- 3. The front cylinder half (29) in J 9397 flat side down.
 - The front cylinder half (29) has a long slot extending out from the shaft hole. The "legs" of the front cylinder half (29) will point upward.
- 4. "Zero" thrust race (27), thrust bearing (28) and "zero" thrust race (27) to the front end of the shaft (38) (figure 28).
 - Lubricate the races (27) and the bearing (28) with petroleum jelly.
- 5. Threaded end of the shaft (39) through the needle bearing (21) in the front cylinder half (29) and allow the thrust race (27) and bearing (28) to rest on the hub of the cylinder.
- 6. Insert a thrust race on the rear end of the shaft (38) so that it rests on the hub of the axial plate.
 - Lubricate the races and bearing with petroleum jelly.
- 7. Place the balls (32) into the sockets of number one piston (figure 29).

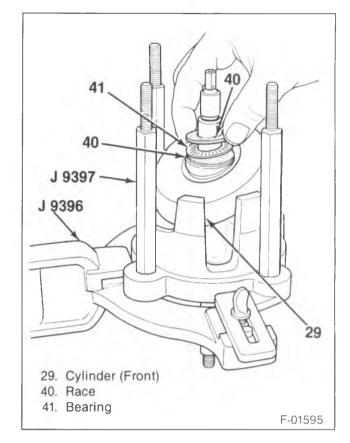


Figure 28—Installing the Rear Thrust Races and Bearing

- Lubricate the ball sockets with 525 viscosity refrigerant oil.
- 8. Place the shoe discs (33) over the ball (32) in the front end of the piston.
 - Lubricate the cavity of the shoe disc with 525 refrigerant oil.
 - The front end of the piston (32) has an identifying notch in the casting web.

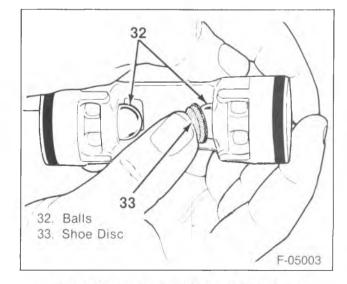


Figure 29-Installing the Front Shoe Disc

1B1-14 A-6 AIR CONDITIONING COMPRESSOR

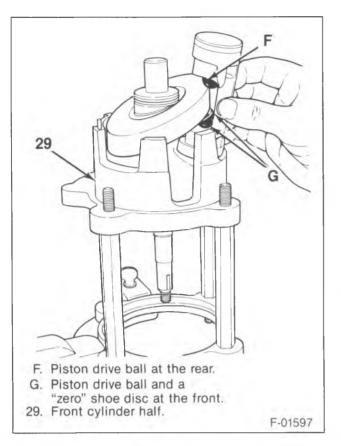


Figure 30—Installing the Piston during the Gaging Operation

Important

- Do not install the shoe discs (34) on the rear of the piston (32).
- 9. Rotate the shaft and axial plate (39) until the high point of the axial plate is over the No. 1 piston cylinder bore.
- 10. Lift the axial shaft assembly (39) up a little out of front cylinder half (29).
 - Hold the front thrust races and bearing ("zero" race, race bearing, "zero" race) against the axial plate hub.
- 11. Position the No. 1 piston (32) over the No. 1 cylinder bore (notched end of the piston being on the bottom and the piston straddling the axial plate) and lower the shaft to allow No. 1 piston to drop into its bore (figure 30).
- 12. Repeat step 11 for pistons Nos. 2 and 3.
- Install the rear cylinder half (42) on the pistons, aligning the cylinder with the discharge cross-over tube hole in the front cylinder.
 - Tap the piston into place using a plastic mallet or piece of clean wood and a hammer (figure 31).
- 14. Position the discharge cross-over tube opening between a pair of compressing fixture bolts to permit access for the feeler gage.
- 15. Install the top plate to J 9397.



• Nuts to 20 N m (15 ft. lbs.).

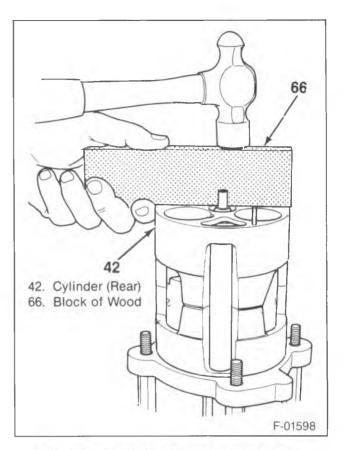


Figure 31—Assembling the Cylinder Halves

GAGING PROCEDURE

Tools Required:

- J 8001 Dial Indicator Set
- J 9397 Compressing Fixture
- J 9402 Piston Assembly Tray
- J 9661-01 Feeler Tension Gage Set

Two gaging procedures provide the running tolerances. The first procedure determines the size shoe discs to provide at each piston a 0.041-0.061 mm (0.0016-0.0024-inch) total preload between the seats and the axial plate at the tightest place through the 360 degree rotation of the axial plate. The bronze shoe discs are available in 0.013 mm (0.0005-inch) variations.

The second procedure, performed at the rear shaft thrust bearing and race pack, provides a 0.064–0.077 mm (0.0025–0.0030-inch) preload between the hub surfaces of the axial plate, and the front and rear hubs of the cylinder. Fourteen steel thrust races, including a basic "zero" race, are available in 0.013 mm (0.0005-inch) increments. Use J 9661-01 for gaging the shoe disc size. Use J 8001 to determine the thrust race size.

- 1. Measure the clearance between the rear ball of the No. 1 piston and axial plate in the following manner:
 - a. Select a combination of oiled feeler gage leaves to fit snugly between the ball and axial plate.
 - b. Attach J 9661-01 to the feeler gage. A distributor point checking scale may be used.
 - c. Pull on the spring scale to slide the feeler gage stock out from between the ball and axial plate. Note the reading on spring scale as the

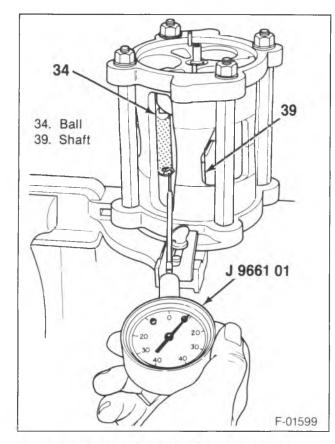


Figure 32—Gaging the Rear Piston Ball

feeler gage is sliding out (figure 32). The reading should be between 1.1 and 2.2 N (4 and 8 ounces).

- d. If the reading in step c above is under 1.1 N (4 ounces) or over 2.2 N (8 ounces), reduce or increase the thickness of the feeler gage leaves and repeat steps a through c to obtain a reading of 1.1 N to 2.2 N (4 to 8 ounces). Record the clearance between the ball and axial plate that results in the 1.1 N to 2.2 N (4 to 8 ounces) pull on the spring scale.
- 2. Rotate the shaft 120 degrees and repeat for the No. 2 cylinder.
 - If the shaft is hard to rotate, install the shaft nut onto the shaft and turn the shaft with a wrench.
- 3. Rotate the shaft another 120 degrees and repeat for cylinder No. 3.
- Select a numbered shoe disc corresponding to the minimum feeler gage reading recorded in the three checks:

-	POSITION 1	POSITION 2	POSITION 3	SELECT AND USE SHOE NO
PISTON NO. 1	.019"	.0195"	.019"	19
PISTON NO. 2	.020"	.020"	.020	20
PISTON NO. 3	.021″	.021″	.022″	21

dentification Stamp 0 171/2 18 181/2 19 191/2 20 201/2 21 211/2 22 ST BEARING R Identification Stamp 0 5	Dial Indicator Reading .0000 .0050
171/2 18 181/2 19 191/2 20 201/2 21 211/2 22 ST BEARING R dentification Stamp 0 5	.0175 .0180 .0185 .0190 .0195 .0200 .0205 .0210 .0215 .0220 ACE Dial Indicator Reading
18 18 ¹ / ₂ 19 19 ¹ / ₂ 20 20 ¹ / ₂ 21 21 ¹ / ₂ 22 ST BEARING R dentification Stamp 0 5	.0180 .0185 .0190 .0195 .0200 .0205 .0210 .0215 .0220 ACE Dial Indicator Reading
18 1/2 19 19 1/2 20 20 1/2 21 21 1/2 22 ST BEARING R dentification Stamp 0 5	.0185 .0190 .0195 .0200 .0205 .0210 .0215 .0220 ACE Dial Indicator Reading
19 191/2 20 201/2 21 211/2 22 ST BEARING R dentification Stamp 0 5	.0190 .0195 .0200 .0205 .0210 .0215 .0220 ACE Dial Indicator Reading .0000 .0050
191/2 20 201/2 21 211/2 22 ST BEARING R dentification Stamp 0 5	.0195 .0200 .0205 .0210 .0215 .0220 ACE Dial Indicator Reading .0000 .0050
20 20 1/2 21 21 1/2 22 ST BEARING R Identification Stamp 0 5	.0200 .0205 .0210 .0215 .0220 ACE Dial Indicator Reading .0000 .0050
201/2 21 211/2 22 ST BEARING R Identification Stamp 0 5	.0205 .0210 .0215 .0220 ACE Dial Indicator Reading .0000 .0050
21 21 ¹ /2 22 ST BEARING R Identification Stamp 0 5	.0205 .0210 .0215 .0220 ACE Dial Indicator Reading .0000 .0050
21 1/2 22 ST BEARING R Identification Stamp 0 5	.0215 .0220 ACE Dial Indicator Reading .0000 .0050
22 ST BEARING R Identification Stamp 0 5	.0220 ACE Dial Indicator Reading .0000 .0050
ST BEARING R dentification Stamp 0 5	ACE Dial Indicator Reading .0000 .0050
dentification Stamp 0 5	Dial Indicator Reading .0000 .0050
Stamp 0 5	Reading .0000 .0050
0 5	.0000 .0050
5	.0050
5	.0050
-	
51/2	.0055
6	.0060
61/2	.0065
7	.0070
71/2	.0075
8	.0080
-	.0085
	.0090
	.0095
	.0100
	.0105
11	.0100
	.0115
	.0120
	8 ¹ / ₂ 9 9 ¹ / ₂ 10 10 ¹ / ₂

Figure 33—Service Shoes and Thrust Washers

- Place the shoe discs in J 9402 compartment with the discs corresponding to piston No. 1 and the rear ball pocket position.
- Shoe discs are available in 0.013 mm (0.0005-inch) variations. Eleven sizes are available for field servicing. Shoe discs are marked with the shoe size which corresponds to the last three digits of the part number (figure 33).
- After selecting the shoe size, the matched combination of the shoe disc to the rear ball spherical cavity in the piston must be kept in the proper relationship during disassembly after performing the gaging operation and the final assembly of the internal mechanism.
- 5. Repeat the gaging procedure for pistons Nos. 2 and 3.
- 6. Mount a dial indicator on the edge of J 9397 with J 8001.
- 7. Position the dial indicator on the rear of the shaft (39) and adjust to zero (figure 34).

1B1-16 A-6 AIR CONDITIONING COMPRESSOR

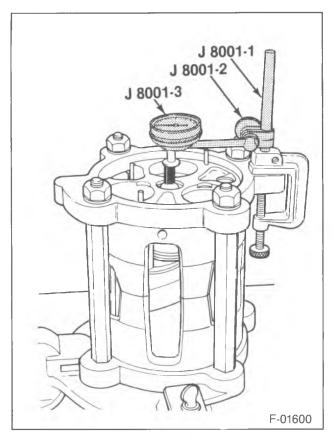


Figure 34—Gaging the Rear Thrust Plate

- From the bottom, apply full hand force at the end of the shaft a few times before reading the clearance. This will squeeze the oil out from between the mating parts. Now push upward and record the measurement. Dial indicator increments are 0.03 mm (0.001-inch); estimate the reading to the nearest 0.013 (0.0005-inch).
- An alternate method is to use J 9661-01 in selecting a suitable feeler gage leaf until the result is a 1.1 N to 2.2 N (4 to 8 ounces) pull on the scale between the rear thrust bearing and upper (or outer rear) thrust race (figure 35).

If the pull is just less than 1.1 N (4 ounces), add 0.013 mm (0.0005-inch) to the thickness of the feeler stock used to measure the clearance. If the pull on the scale reads just over 2.2 N (8 ounces), then subtract 0.013 mm (0.0005-inch) from the thickness of the feeler stock.

7. For either method used, select a thrust race with a "number" corresponding to TWO (2) FULL SIZES LARGER than the dial indicator or feeler gage measurement of the amount of end play shown. (If measurement is 0.18 mm (0.007-inch), select a No. 9 or 090 race).

Fifteen thrust races are provided in increments of 0.013 mm (0.0005-inch) thickness and one ZERO gage thickness providing a total of 16 sizes. The thrust race "number" corresponds to the last three digits of the part number. Refer to figure 33.

8. Remove the nuts from the top plate of the J 9397.

9. Remove the top plate.

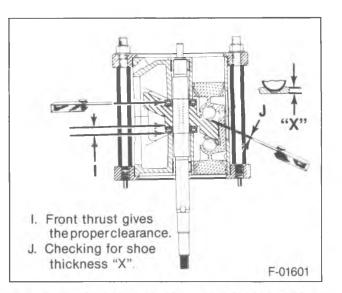


Figure 35-Checking the Piston and Shaft End Play

- 10. Separate the cylinder halves while the unit is in the fixture.
 - If necessary, use a wood block and a mallet.
- 11. Remove the rear cylinder half; remove one piston at a time from the axial plate and front cylinder half.
 - Do not lose the relationship of the front ball and shoe disc and rear ball.
 - Transfer each of the piston, ball and shoe disc sets to J 9402.
- Remove the rear outer "zero" thrust race (it will be on top) from the shaft and install the thrust race just selected in Steps 6 and 7 that is in J 9402.
 - The "zero" thrust race may be put aside for reuse in additional gaging or rebuilding operations.

PISTON RING REPLACEMENT

Remove or Disconnect (Figures 1, 36 through 39)

Tool Required:

J 24608 Teflon Piston Ring Installer

- Piston rings (31).
 - Slice through the ring with a knife while holding the blade flat with the piston surface.
 - Do not damage the aluminum piston (32) or piston groove.

Clean

Clean the piston and piston ring grooves with a recommended cleaning solvent (trichloroethane, naptha, Stoddard solvent, kerosene, or equivalent) and blow the piston dry with dry air.



Install or Connect (Figures 1, 36 through 39)

- 1. Piston (32) to J 24608-2 (figure 36).
- Set the piston on a clean, flat surface.
- 2. Piston ring (33) to J 24608-2.Place the dished or dull side down and the glossy side up.
- 3. Piston ring (33) to piston (32) (figure 37).

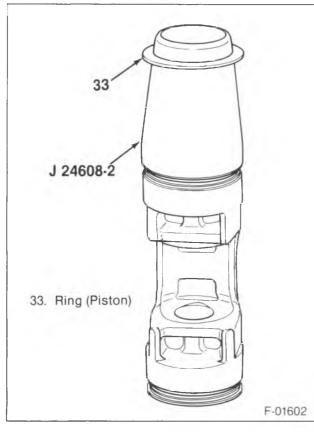


Figure 36—Piston Ring Position and Installer Guide

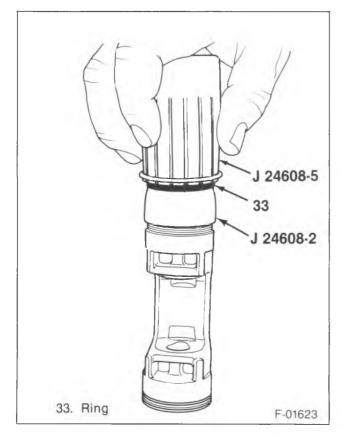


Figure 37—Installing the Piston Ring

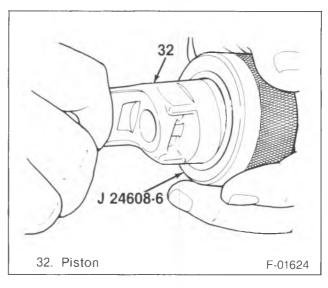


Figure 38—Sizing the Piston Ring

- Push J 24608-5 (installer) down over J 24608-2 (guide).
- If the piston ring is off-positive in the groove, reposition by moving with a fingernail or a blunt-edge tool.
- J 24608-5 (installer) will keep the J 24608-2 (guide) inside when the piston ring is installed on the piston (32).
- Remove the guide from the installer and do not store the guide in the installer because the seal will be stretched and weakened during storage. This can cause the seal not to hold the ring installer segments tight enough to the J 24608-2 (guide) when installing the piston ring (33) to the piston (32).
- 4. Piston (32) to J 24608-6 (figure 38).
 - Lubricate the piston ring (33) area with 525 viscosity refrigerant oil.
 - Rotate the piston (32) and ring (33) into J 24608-6 at a slight angle until the piston is inserted against the center stop of J 23608-6.

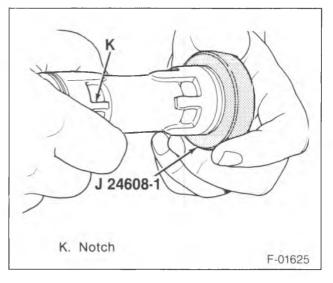


Figure 39—Gaging the Piston Ring Size

1B1-18 A-6 AIR CONDITIONING COMPRESSOR

NOTICE: Do not push the piston and ring assembly into J 24608-6 without positioning and rotating because the needle bearings of the ring sizer may damage the end of the piston.

- Rotate the piston and ring assembly in J 24608-6 several turns until the assembly rotates relatively free in the ring sizer.
- 5. Piston (32) to J 24608-1 (figure 39).
 - The piston (32) should pass through the ring gage with a two to eight pound force.
- 6. Repeat for the opposite end of the piston (32).
- 7. Lubricate both ends of the piston (32) with 525 viscosity refrigerant oil before installing the piston into the cylinder bore.

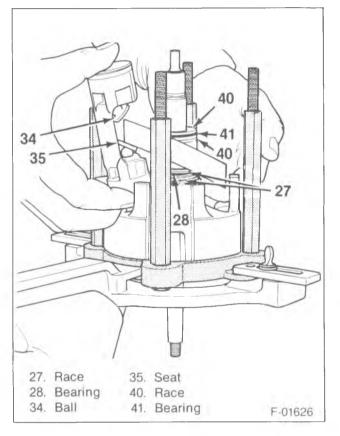


Figure 40-Installing No. 1 Piston

Assemble the cylinder assembly after performing the "Gaging Procedure," choosing the correct shoe discs and thrust races and installing any piston rings. Install new seals supplied in the service kit.

→← Install or Connect (Figures 1, 40 through 51)

- Support the front half of the cylinder (29) on J 9397.Shaft and axial plate (38).
 - Place the shaft, threaded-end down, with the front bearing race pack (race and bearing) into the cylinder if this was not done at the end of the "Gaging Procedure."
- 2. Balls (32) and shoe discs (33) to the pistons (30).
 - Apply a coat of petroleum jelly to the "numbered" shoe discs.
- 3. Piston assembly (30) into the front cylinder half (29) (figure 40).
 - Rotate the axial plate (39) to place the high point above cylinder bore No. 1.

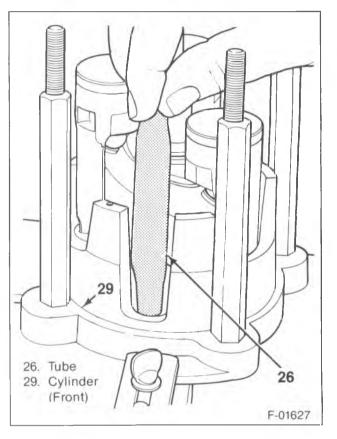


Figure 41—Installing the Discharge Crossover Tube

- Hold the front thrust bearing pack against the axial plate hub.
- Repeat for pistons Nos. 2 and 3.
- 4. Discharge the cross-over tube (26) (figure 41).
 - Face the flattened portion of the tube to the inside of the compressor to allow for axial plate clearance.
- 5. Rear cylinder half (42) over the shaft (39).
 - Rotate the shaft (39) to position the pistons in a stair-step arrangement.
 - Start the pistons into the cylinder bores.
- 6. Discharge cross-over tubes (26) into the rear half of the cylinder (29).
- 7. Rear cylinder half (42) over the locating dowel pins (45).
 - After aligning, tap the rear half of the cylinder with a mallet and wood block.
 - If necessary, clamp the cylinder in J 9397 to draw the halves together.

COMPRESSOR ASSEMBLY

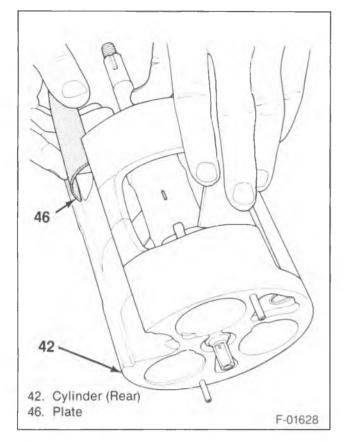


Figure 42—Installing the Suction Crossover Tube Plate

- Lubricate all the moving parts with clean 525 viscosity refrigerant oil.
- Check for free rotation.
- 8. Suction cross-over cover (46) (figure 42).
 - Remove J 9397.
 - Compress the cover (46) to start it into the slot.
 - Press or top the cover (46) until the ends are flush.
- 9. Seal 925) and bushing (24) to the front end of the discharge cross-over tube (26) (figure 43).
 - Place the internal assembly on J 21352
- 10. Dowel pins (20) to the front head (figure 44).
- 11. Front suction reed plate (19) to the front cylinder half (29) (figure 44).
 - Align the dowel pins (20), suction ports, oil return slot and discharge cross-over tube (26).
- 12. Front discharge valve plate (18) (figure 45).
 - Align the holes with the dowel pins (20) and the openings in the front suction reed plate (18). The front discharge plate (18) has a large hole in the center.
- 13. Front head (16) (figure 46).
 - Coat the sealing surfaces on the webs of the compressor front head casting with clean 525 viscosity refrigerant oil.
 - Determine the position of the front head (16) in relation to the dowel pins (20).
 - Mark the position of the dowel pins (20) on the sides of the front head (16) and on the sides of the internal assembly with a grease pencil.
 - Lower the front head (16).



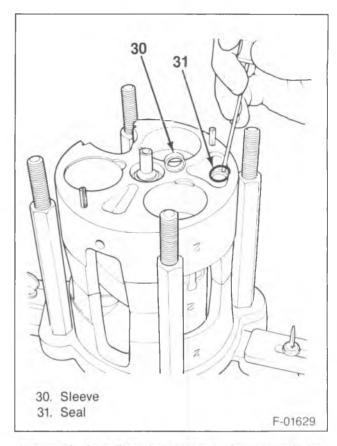


Figure 43—Installing the Discharge Crossover Tube

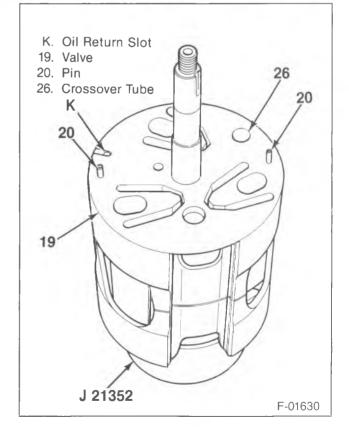


Figure 44—Installing the Front Suction Reed Plate

1B1-20 A-6 AIR CONDITIONING COMPRESSOR

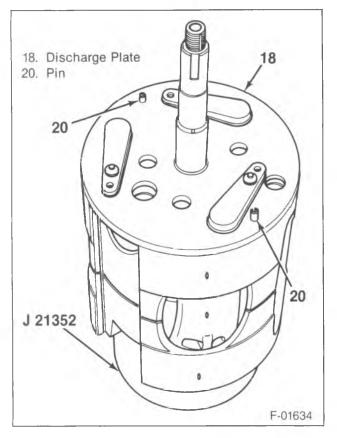


Figure 45—Installing the Front Discharge Valve Plate

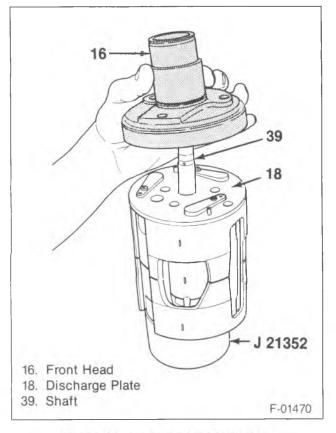


Figure 46-Installing the Front Head

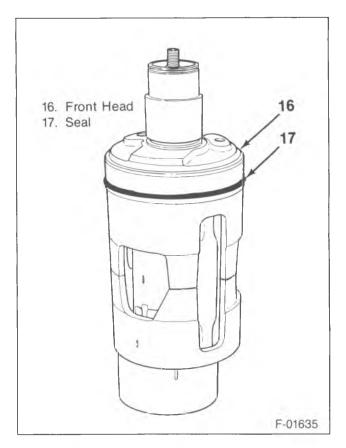


Figure 47—Installing the Front Head Seal

Important

- Do not let the sealing area around the center bore of the head touch the shaft as the head is lowered.
- Do not rotate the front head (16) to line up with the dowel pins because this will contact the reed container.
- 14. Seal (17) to the front head (16) (figure 47).
 - Lubricate the seal (17) and groove with clean 525 viscosity refrigerant oil.
- 15. Shell (9) to the internal assembly (figure 48).
 - Coat the inside of the shell (9) with clean 525 viscosity refrigerant oil.
 - Position the shell (9) on the internal assembly. Rest the shell (9) on the seal.
 - With the flat side of a small screwdriver, position the seal (17) in a round, circle shape to the inside of the shell (9).
 - Slide the shell (9) down. Line up the oil sump with the oil intake tube hole.
- 16. New dowel pins (20) to the rear cylinder half.
 - Remove J 21352.
 - Install the compressor into J 9396.
- 17. Seal (43) to oil pick-up tube (44).
- 18. Oil pick-up tube (44) to the compressor (figure 49).
 - Lubricate the oil pick-up tube (44) with clean 525 viscosity refrigerant oil.
 - Place the oil pick-up tube (44) in the cavity.
 - Rotate the compressor assembly to align the tube (44) with the hole in the shell baffle.

A-6 AIR CONDITIONING COMPRESSOR 1B1-21

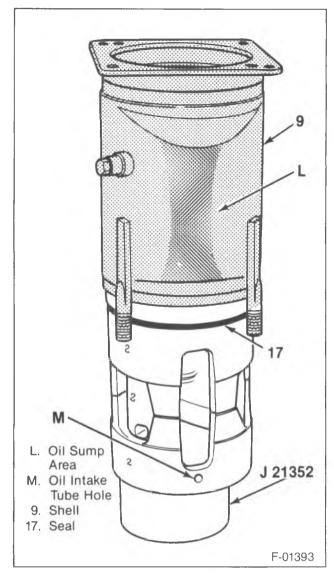


Figure 48—Installing the Compressor Shell

- 19. Seal (31) and bushing (30) to the rear of the discharge cross-over tube (26).
- 20. Rear suction reed (48) over the dowel pins (45).Place the slot toward the sump.
- 21. Rear discharge valve plate (49) over the dowel pins (45).
 - Place the reed retainer up.
- 22. Inner oil pump gar (50) over the shaft (39).Line up the identification marks.
- 23. Outer oil pump gear (51) over the inner gear (figure 50).
 - Line up the identification marks.
 - Face the compressor oil sump and position the outer gear (51) so that it meshes with the inner gear (50) at the 9 o'clock position. The cavity between the gear teeth will be at the 3 o'clock position.
- 24. Seal (52) to the discharge valve plate (49).
 - Lubricate the seal (52), shell (9), discharge plate (49) and gears (50 and 51) with 525 viscosity refrigerant oil.
- 25. Suction screen (58) to the rear head (54).

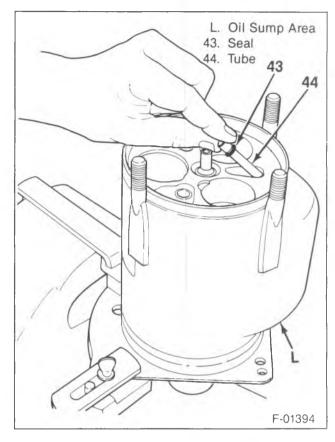


Figure 49—Installing the Oil Pick-Up Tube

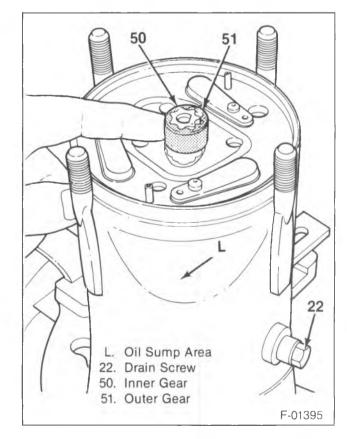


Figure 50—Positioning the Oil Pump Gears

1B1-22 A-6 AIR CONDITIONING COMPRESSOR

• Lubricate the surface of the rear head (54) with 525 viscosity refrigerant oil.

26. Rear head (54) to the shell (9) (figure 51).

- Align the two lower threaded compressor mounting holes with the compressor sump.
- Do not let the suction screen (58) fall out of the rear head (54).
- If the rear head (54) will not slide down over the dowel pins (45), twist the front head (16) back and front by hand until the rear head (54) drops over the dowel pins (45).

री Tighten

- Nuts (53) to 35 N-m (25 ft. lbs.).
- 27. Shaft seal (14).
 - Invert the compressor in J 9396
- 28. Clutch coil (8).
- 29. Pulley (6).
- 30. Clutch (2).
- 31. Add the required amount of 525 viscosity refrigerant oil to the compressor.
- 32. Leak Test.
 - Refer to "Leak Testing."

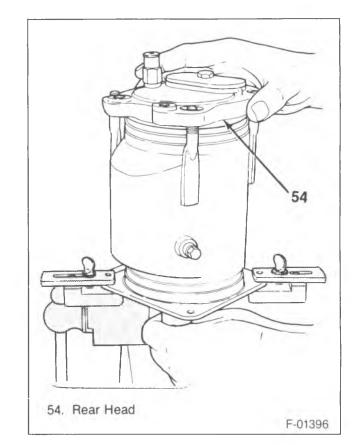


Figure 51-Installing the Rear Head

LEAK TESTING

Tools Required:

- J 5420 Straight Adapter
- J 9396 Compressor Holding Fixture
- J 9459 90 Degree Adapter
- J 9625-A Pressure Test Set with Schrader Valves
- 1. Install J 9625 on the rear head of the compressor.
- Attach a center hose of manifold gage set on to a charging station with a refrigerant drum standing in an upright position and open the valve on the drum.
- Connect the charging station "high" and "low" pressure lines to the correct fittings on J 9625-A, using J 5420 (7/16-inch) gage adapters. Adapters are not necessary if the hoses are equipped with Schrader core depressors.
 - Suction port of the compressor has a large internal opening. The discharge port has a small internal opening into the compressor.
- Open the "low" pressure control, "high" pressure control and refrigerant control on charging station to allow refrigerant vapor to flow into the compressor.
- 5. With J 29547, check for leaks at the pressure relief valve, compressor shell to cylinder, compressor front head seal, rear head seal, oil charge port, and the compressor shaft seal. After checking, shut off the "low" pressure control and the "high" pressure control on the charging station.
- 6. If an external leak is present, repair and recheck.

- 7. Loosen the manifold gage hose connections to the gage adapters connected to the "low" and "high" sides and allow the vapor pressure to release slowly from the compressor.
- 8. Disconnect both of the gage adapters or hoses from J 9625-A.
- Rotate the complete compressor assembly (not the crankshaft or drive plate hub) end to end several turns to distribute the oil to the cylinder and piston areas.
- Install the shaft nut on the compressor crankshaft if the drive plate and clutch assembly are not installed.
- 11. Using a box-end wrench or socket and handle, rotate the compressor crankshaft several turns to ensure the piston assembly lubrication.
- Connect the charging station "high" pressure line or a "high" pressure gage and J 5420 or J 9459 to the J 9625 high side connector.
- 13. Attach J 5420 or J 9459 to the suction or "low" pressure port on J 9625-A to open the Schradertype valve to atmosphere.
 - Gage adapters are not required to connect to the test plate if the hoses have built-in Schrader depressors.
 - Oil will drain out of the compressor suction port adapter if the compressor is positioned with the suction port down.

A-6 AIR CONDITIONING COMPRESSOR 1B1-23

- Attach the compressor to J 9396 and clamp the fixture in a vise so that the compressor can be manually turned with a wrench.
- 15. Using a wrench, rotate the compressor crankshaft about 10 complete revolutions at a speed of about one revolution per second.

NOTICE: Turning the compressor at less than one revolution per second can result in a lower pump up pressure and disqualify a good pumping compressor.

- 16. Observe the reading on the "high" pressure gage at the completion of the tenth revolution of the compressor.
 - The pressure reading for a good pumping compressor should be 430 kPa (60 psi) or above.

- A pressure reading of less than 342 kPa (50 psi) would indicate one or more suction and/or discharge valves are leaking, an internal leak. or an inoperative valve.
- Disassemble the compressor and repair the leak. Assemble and repeat the test. Externally leak test.
- 17. After testing, release the air pressure from the "high" side and remove J 5420 or J 9459 and J 9625-A
- 18. Remove the oil charge screw and drain the oil sump.
- Allow the compressor to drain for 10 minutes, then charge with the proper amount of oil. The new oil may be poured into the suction port. Torque the charge screw to 20 N m (15 ft. lbs.).
- 20. If more processing is required, install the shipping plate or J 9625 to keep air, dirt and moisture out of the compressor until installed.

SPECIFICATIONS

COMPRESSOR

Type — Harrison A-6 compressor	
Displacement	
Rotation	
Belt Tension	
Oil Capacity	


COMPRESSOR CLUTCH COIL

Ohms at 26°C (80°F)	
Amps at 26°C (80°F)	
Clutch	

TORQUE SPECIFICATIONS


Rear Head to Shell Stud Nuts	.34 N m (25 ft. lbs.)
Shaft Mounting Nut	.27 N m (20 ft. lbs.)
Pressure Relief Valve	.19 N m (14 ft. lbs.)
Oil Drain Screw	.20 N m (15 ft. lbs.)

1B1-24 A-6 AIR CONDITIONING COMPRESSOR

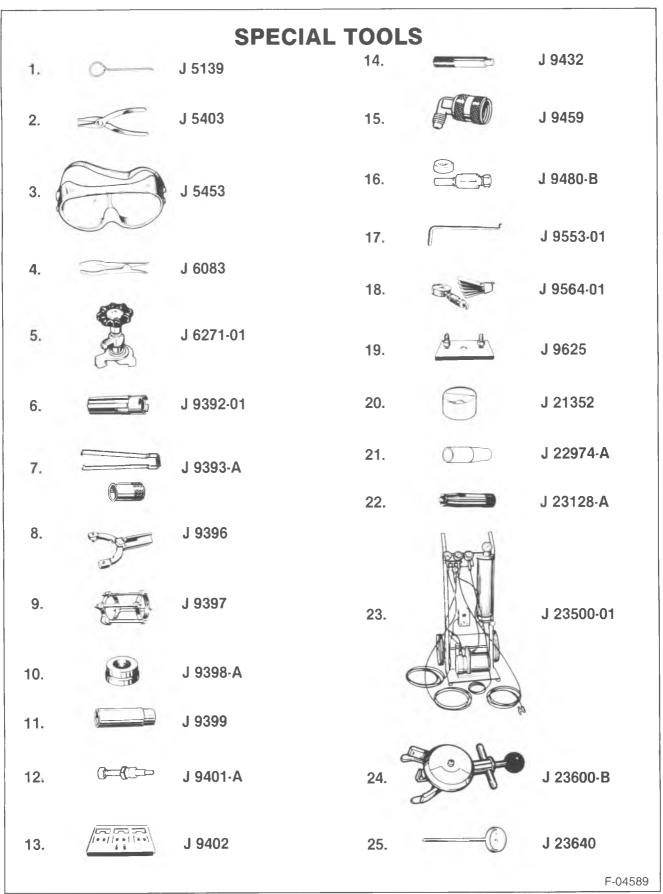

......

A-6 AIR CONDITIONING COMPRESSOR 1B1-25

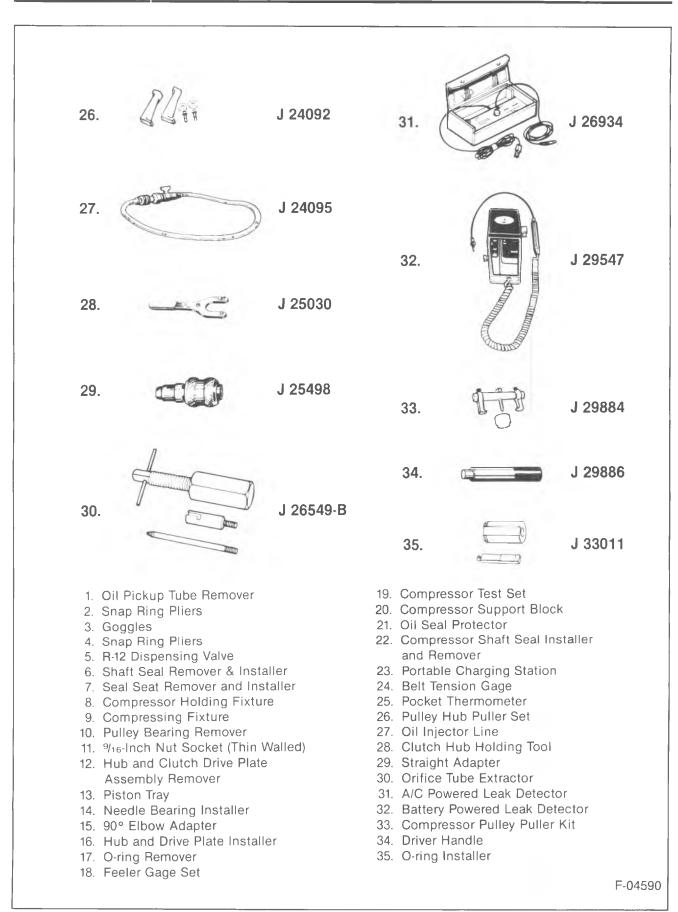

1B1-26 A-6 AIR CONDITIONING COMPRESSOR


DACE

SECTION 1B2

DA-6 AIR CONDITIONING COMPRESSOR

CONTENTS

3000201	FAGE
Description	1B2- 1
Minor Repair to the Compressor	1B2- 2
Clutch Plate and Hub Assembly Replacement	
Pulley and Bearing Assembly Replacement	
Clutch Coil and Housing Assembly	1 B2- 6
Major Repair to the Compressor	1B2- 8
Shaft Seal Replacement	1B2- 8
Pressure Relief Valve Replacement	1 B2 -10
Compressor Disassembly—Internal Cylinder and Shaft	1 B2-1 0
Compressor Assembly—Internal Cylinder and Shaft	1B2-11
Leak Testing	1B2-14
Specifications	1 B2-1 5
Special Tools	1B2-16

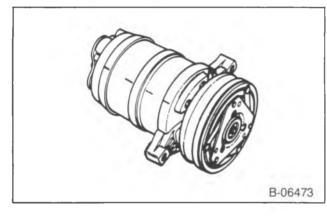

SUB IECT

Figure 1—DA-6 Compressor, V-Groove Pulley and Standard Mounting

The Harrison DA-6 compressor is a fixed displacement axial piston pump, with three double-ended pistons actuated by an axial (swash) plaste shaft assembly (figure 1). The main parts are the front and rear cylinder, the shaft and axial swash plate, piston group, and valve mechanisms. The cylinders and heads provide an integral external shell.

The piston group of the compressor will not be serviced. If piston, bearing, ball shoe, shaft and axial plate, or cylinder repair is needed, replace the internal cylinder assembly. All clutch parts, valve mechanisms, and head assemblies are serviced, plus seals and gaskets.

Refrigerant oil, dispersed in the refrigerant vapor, lubricates the system.

The front head is shown with three integral mounting flange ears (figure 2). These ears have 19 mm flats cast to provide for a wrench to be used as a prying means when tensioning the compressor drive belt.



Figure 2—DA-6 Front Head Assembly

Keep dirt or foreign material from getting on or into the compressor parts and system. Keep the work area and tools clean.

Keep the parts clean at all times. Clean assembled parts with Trichloroethane, naphtha, Stoddard solvent, kerosene or equivalent solvent and dried with dry air. Use only lint free cloths to wipe parts.

Drain and measure the refrigerant oil. Add new 525 viscosity refrigerant oil to the compressor. Refer to "Specifications."

IDENTIFICATION

An identification label attached to the compressor provides the name of the manufacturer, model number and build code. If the label is removed or becomes dislodged during service operation, reattach it using an adhisive sealant such as Loctite 312 or equivalent.

DESCRIPTION

1B2-2 DA-6 AIR CONDITIONING COMPRESSOR

MINOR REPAIR TO THE COMPRESSOR

Illustrations show the compressor removed from the vehicle for easier viewing.

Remove only the parts that need servicing. Refer to figure 3 for part names and location.

CLUTCH PLATE AND HUB ASSEMBLY REPLACEMENT

Clean

The compressor assembly with solvent and blow dry with dry air.

Remove or Disconnect (Figures 3, 4 and 5)

- Tools Required:
 - J 33026 Compressor Holding Fixture
 - J 33027 Clutch Hub Holding Tool
 - J 33022 6-Point 13 mm Socket
 - J 33013 Hub and Drive Plate Remover and Installer.
- Clamp J 33026 in a vise and attach the compressor to the holding fixture with thumb screws (figure 4).
- 1. Shaft nut (1) using J 33022 (figure 4).
 - Hold the clutch plate and hub assembly (2) steady using J 33027.
- 2. Clutch plate and hub assembly (2).
 - Thread J 33013-A into the clutch plate and hub assembly (2).
 - Hold the body of J 33013-A with a wrench and tighten the center screw into the remover body (figure 5).
- 3. Shaft key (21).
 - Retain shaft key (21) if usable.

Inspect

All parts and replace as necessary.

Install or Connect (Figures 3, 6 and 7)

Tools Required:

- J 33026 Compressor Holding Fixture
- J 33027 Clutch Hub Holding Tool
- J 33022 6-Point 13 mm Socket
- J 33013-B Hub and Drive Plate Remover and Installer
- 1. Shaft key (1).
 - Allow the shaft key (21) to extend 3.2 mm (1/8-inch) out of the bottom of the hub keyway (figure 6).
 - The shaft key is curved slightly to give an interference fit in the groove.



Important

- Do not drive or pound on the clutch hub or the shaft (20). Internal damage to the compressor may result.
- 2. Clutch plate and hub assembly (2) (figure 6).
 - Make sure the contact surfaces of the clutch plate (2) and the pulley (5) are clean.

- Remove the forcing screw tip from J 33013-B and reverse the body direction on the center screw.
- Install J 33013-B with bearing (figure 7).
- Back off J 33013-B body enough to allow the center screw to be threaded against the end of the compressor shaft.
- Hold the center screw with a wrench and tighten the hex portion of J 33013-B body while pressing the hub onto the shaft. After tightening the body several turns, remove J 33013-B and check that the shaft key (21) is properly in place in the keyway, then install the clutch plate and hub assembly (2) to its final position.
- Measure the air gap between contact surfaces of the clutch plate and hub assembly (2) and the pulley (5). The gap should be 0.38-0.64 mm (0.015-0.025-inch) (figure 7).
- Remove J 33013-B.

Inspect

- Position of the shaft (20) (even with or slightly above the clutch hub).
- Use J 33027 to hold the clutch plate and hub assembly (2).

၃ Tighten

- Shaft nut (1) to 16 N m (12 ft. lbs.) with J 33022.
- Hand spin the pulley (5) to check for free rotation.
- Remove J 33026.

PULLEY AND BEARING ASSEMBLY REPLACEMENT

Remove or Disconnect (Figures 3, 8, 9 10 and 11)

Tools Required:

- J 6983 Snap Ring Pliers
- J 8092 Driver Handle
- J 9398-A Pulley Bearing Remover
- J 33020 Pulley Puller
- J 33023-A Puller Pilot
- 1. Clutch plate and hub assembly (2).
- 2. Pulley bearing retainer (3) using J 6083 (figure 8).
- 3. Pulley (5).
 - Install J 33023-A to the front head (figure 9).
 - Install J 33020 tangs into the inner circle of slots in the pulley (5) contact surface. Rotate J 33020 clockwise so the tangs will lock into the segments between the slots (figure 10).
 - Hold J 33020 in place and tighten the puller screw against J 33023-A puller pilot to remove the pulley (5) (figures 10 and 11).
- 4. Pulley bearing (4) from the pulley (5) using J 9398-A and J 8092 (figure 11).

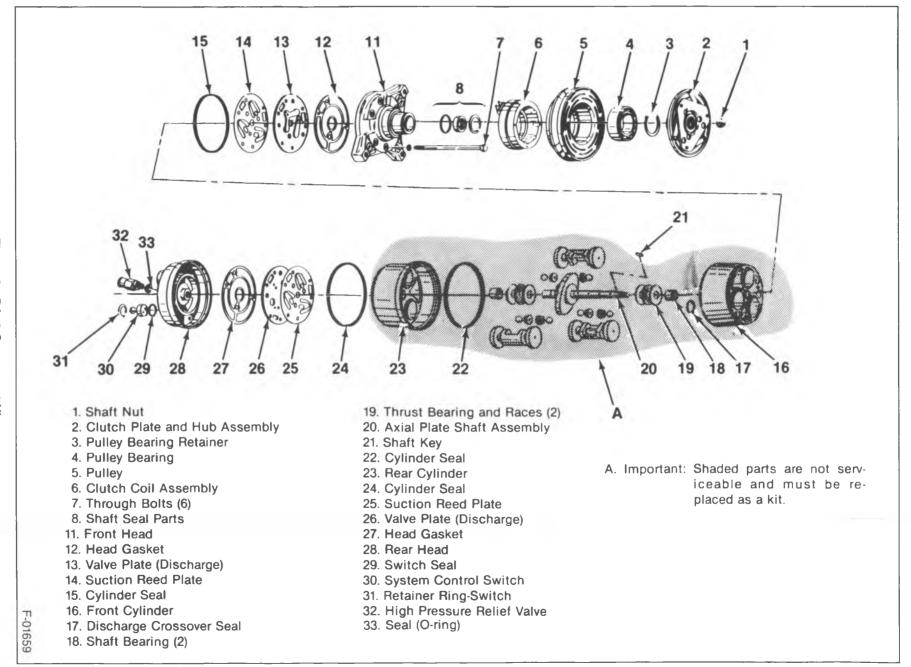


Figure 3—DA-6 Component View

DA-6 **AIR CONDITIONING COMPRESSOR 1B2-3**

1B2-4 DA-6 AIR CONDITIONING COMPRESSOR

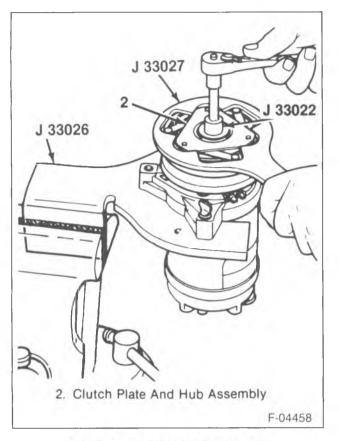


Figure 4-Removing the Shaft Nut

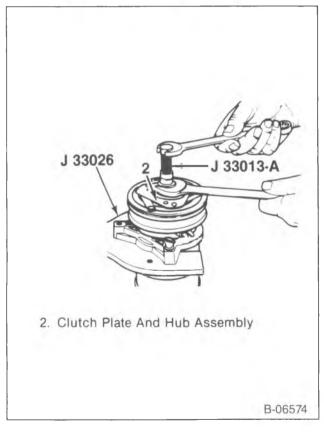


Figure 5—Removing the Clutch Plate and Hub Assembly

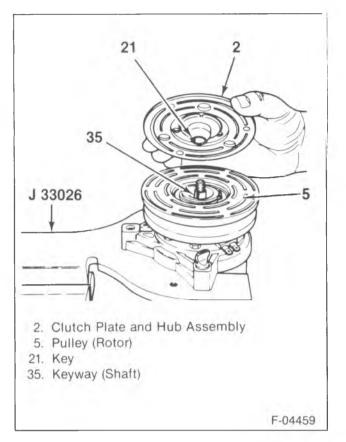


Figure 6—Positioning the Shaft Key, Clutch Plate, and Hub Assembly

- Remove the forcing screw from J 33020 and with the puller tangs still in place in the pulley slots, turn the assembly upside down onto a flat surface (figure 11).
- When removing the old pulley bearing (5) allow the staking to remain, then file away the old staked metal for proper fit when installing a new bearing (5) in the pulley bore.

Install or Connect (Figures 3, 12, 13, 14 and 15)

Tools Required:

- J 21352-A Compressor Support Block
- J 9481-A Pulley Bearing Installer
- J 33019 Bearing Staking Tool (with staking pin and retaining band)
- J 33017 Pulley and Bearing Assembly Installer
- J 33023-A Puller Pilot
- J 8433-1 Puller Bar
- J 33026 Compressor Holding Fixture
- J 6083 Snap Ring Pliers
- 1. Pulley (5) on J 21352-A.

NOTICE: Do not support the rotor by resting the pulley rim on a flat surface during bearing installation or the rotor face will be bent.

- 2. Pulley bearing (4) into the hub using J 8092, J 9481-A and J 21352-A (figure 12).
 - J 33019 in the pulley bore (figure 13).

DA-6 AIR CONDITIONING COMPRESSOR 1B2-5


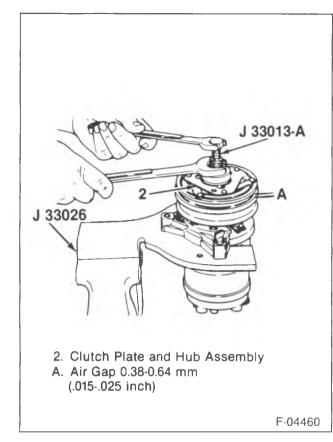


Figure 7—Installing the Clutch Plate and Hub Assembly

- Seat the pulley and bearing assembly on J 21352-A to support to the hub under the staking pin location.
- Strike the staking pin with a hammer until a metal stake, similar to the original, is formed down to, but not touching the bearing.
 - Position the stake pin after striking.



Figure 8—Removing the Pulley Rotor and Bearing Retaining Ring

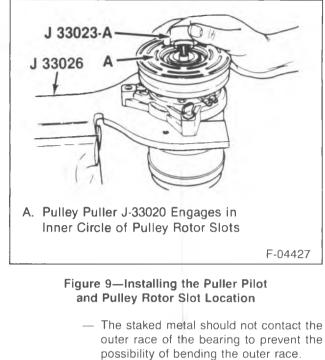

- Stake 3 places 120 degrees apart (figure 14).
- 3. Pulley (5) on the front head.
 - Position J 33017 and J 33023-A over the inner race of the bearing (figure 15).
 - Position J 8433-1 on J 33023-A and assemble the through bolts and washers through the puller bar slots and thread them into J 33026 (figure 15).
 - The thread of the through bolts should engage the full thickness of J 33026.
 - Tighten the center screw in J 8433-1 to force the pulley and bearing assembly onto the compressor front head (11) (figure 15).
 - Should J 33017 become misaligned with the inner race of the bearing, back off J 8433-1 and relocate center, then continue installation.

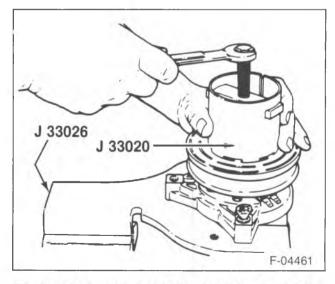


Figure 10-Installing J-33020 in the Pulley Rotor Slots

1B2-6 DA-6 AIR CONDITIONING COMPRESSOR


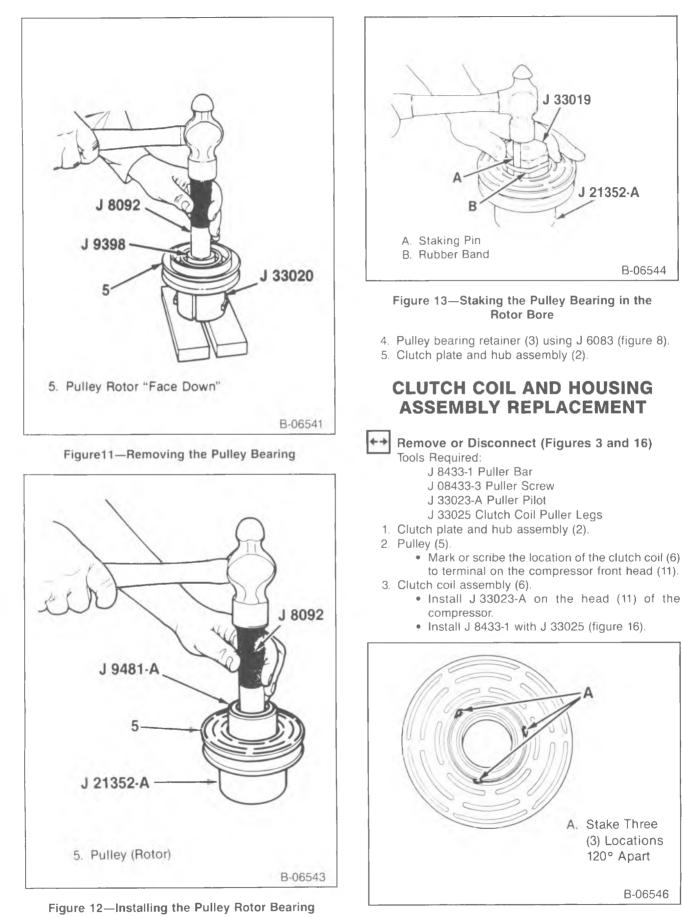


Figure 14—Staking Locations

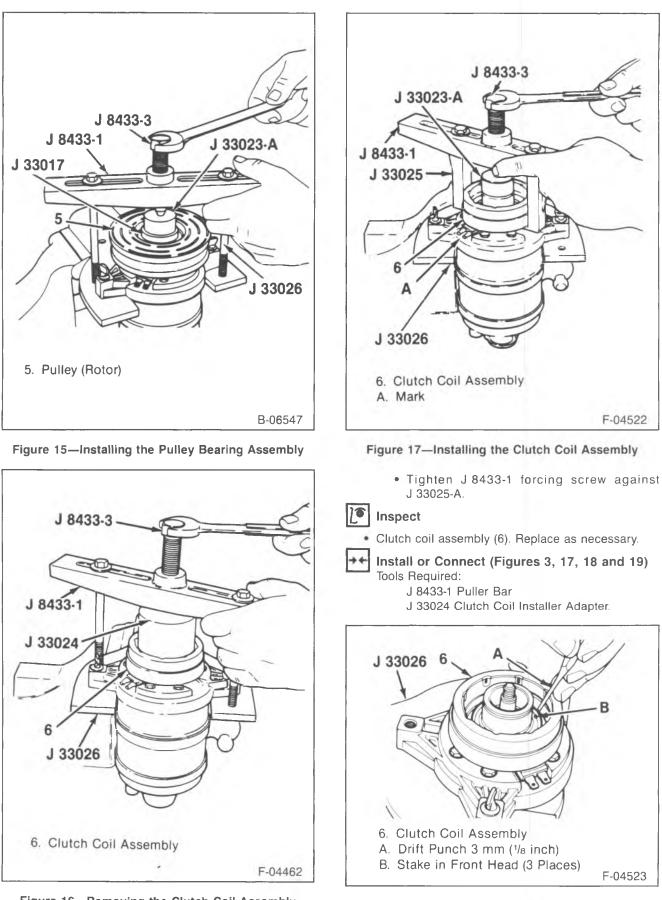

DA-6 AIR CONDITIONING COMPRESSOR 1B2-7


Figure 16—Removing the Clutch Coil Assembly

Figure 18—Staking the Clutch Coil Assembly to the Coil Head

1B2-8 DA-6 AIR CONDITIONING COMPRESSOR

J 33026 Compressor Holding Fixture

- 1. Compressor assembly on J 33026.
- 2. Clutch coil assembly (6) onto the front head (11) with the terminals positioned at the "marked" location.
 - J 33024 over the internal opening of the clutch coil assembly (6).
 - J 8433-1 with through colts, washers and forcing screw over J 33024.
 - Thread through bolts into J 33026 to full fixture thickness (figure 17).
 - Be sure J 8433-1 and the clutch coil assembly (6) stay "in line" during installation.
 - When the clutch coil assembly (6) is seated on the front head (11), use a 3 mm (1/8-inch) diameter drift punch to stake the head (11) at 3 places, 120 degrees apart to assure the clutch coil assembly (6) remains in position (figure 18).
 - Stake size should be one half the area of the punch tip and 0.28-0.35 mm (0.010-0.015-inch) deep (figure 19).
- 3. Pulley (5)
- 4. Clutch plate and hub assembly (2).

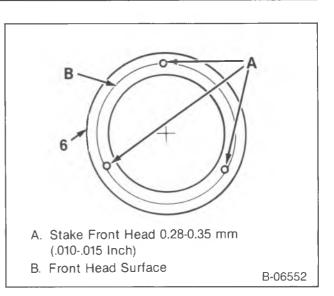



MAJOR REPAIR TO THE COMPRESSOR

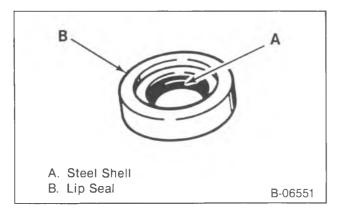


Figure 20—Compressor Shaft Seal

Replacement of the shaft seal assembly or the pressure relief valve will require the discharge of the vehicle's refrigerating system (figure 20). Other than clutch repair procedures, the same holds true for any disassembly of the compressor. To discharge the refrigerant, refer to the vehicle service manual.

After servicing or repairing the compressor, always add the proper amount of new 525 viscosity refrigerant oil. Refer to "Specifications."

Keep the workbench and work area clean when servicing the compressor, and use proper, clean service tools.

NOTICE: Any attempt to use makeshift or inadequate service tools or equipment may result in damage and/or improper compressor operation.

All parts used for servicing the compressor internally are protected by a preservative and packaged in a man-

ner which does not require cleaning, washing or flushing. The parts can be used in the internal assembly just as they are removed from the service package.

SHAFT SEAL REPLACEMENT

Remove or Disconnect (Figures 3, 21, 22 and 23)

Tools Required:

- J 5403 Snap Ring Pliers
- J 34614 Shaft Seal Protector
- J 23128-A Seal Remover and Installer
- J 9553-01 O-Ring Seal Remover.
- 1. Clutch plate and hub assembly (2).
 - Install J 34614 over the threaded end of the shaft (20).
- 2. Shaft seal retainer ring using J 5403 (figure 21).
 - Clean the compressor neck area around the shaft (20), the exposed part of the shaft seal (8) and the O-ring seal groove.
- 3. Shaft lip seal using J 23128-A (figure 22).
 - Insert J 23128-A into the shaft lip seal, tighten and remove lip seal.
- 4. O-Ring seal using J 9553-01 (figure 23).



- Make sure the compressor neck area is clean.
- All parts. Replace as necessary.

Install or Connect (Figures 3 and 24)

- Tools Required:
 - J 33011 O-Ring Seal Installer
 - J 23128-A Seal Seat Remover and Installer.
 - J 34614 Shaft Seal Protector

DA-6 AIR CONDITIONING COMPRESSOR 1B2-9

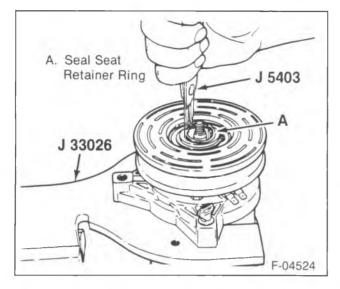


Figure 21—Removing or Installing the Shaft Lip Seal Retaining Ring

- J 5403 Snap Ring Pliers
- Dip the new O-ring seal in clean 525 viscosity refrigerant oil.
- J 34614 onto the shaft (20).
- 1. O-ring seal using J 33011 (figure 24).
 - Insert J 33011 into the compressor neck until the installer "bottoms."
 - Lower the movable slide of J 33011, releasing the O-ring seal into the lower groove.

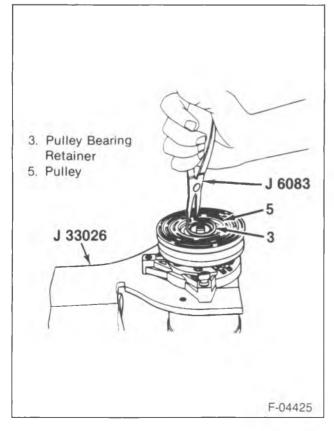


Figure 22—Removing or Installing the Shaft Tip Seal

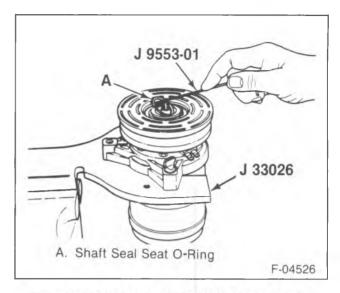


Figure 23—Removing the Shaft Seal Seat O-Ring

- Rotate J 33011 to seat the O-ring seal and remove J 33011.
- 2. Shaft lip seal using J 23128-A (figure 22).
 - Dip the shaft lip seal in clean 525 viscosity refrigerant oil and install shaft lip seal on J 23128-A.
 - Bottom the shaft lip seal into the compressor neck area using J 23128-A.
 - Release and remove J 23128-A.
- 3. Shaft seal retainer ring using J 5403 (figure 21).
 - Install flat side of shaft seal retainer ring against the lip seal.
 - Remove J 34614.

Important

- · Leak test the compressor.
- Refer to "Leak Testing.".

Clean

• Shaft (20) and inside the compressor neck area.

4. Clutch plate and hub assembly (2).


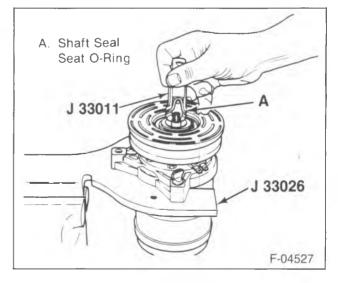


Figure 24—Installing the Seal Seat O-Ring

1B2-10 DA-6 AIR CONDITIONING COMPRESSOR



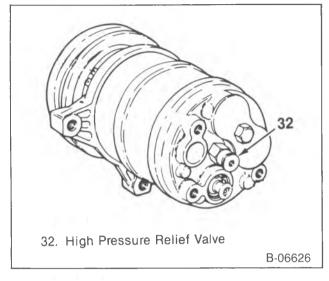

PRESSURE RELIEF VALVE REPLACEMENT

Remove or Disconnect (Figures 3 and 25)

- Be sure the compressor has no charge.
- 1. Pressure relief valve (32) (figure 25).
- O-ring seal (33).

Install or Connect (Figures 3 and 25)

Lubricate the threads of the pressure relief valve (32) and new seal with 525 viscosity refrigerant oil.
Pressure relief valve (32) with new seal.

된 Tighten

Pressure relief valve (32) to 9 N m (84 in. lbs.).

Important

- Leak test the compressor.
- Refer to "Leak Testing."

COMPRESSOR DISASSEMBLY —INTERNAL CYLINDER AND SHAFT

Remove or Disconnect (Figures 3, 26, 27, 28 and 29)

- Mark the front head (11) alignment with cylinders (16) (23) and rear head (28) alignment.
- 1. Clutch plate and hub assembly (2).
- 2. Pulley (5).
- 3. Clutch coil assembly (6).
- 4. Shaft seal parts (8).
 - Note the compressor alignment marks and use them as a reference for compressor assembly (figure 26).
- 5. Through bolts (7) and gaskets (figure 27).
 - · Hand-support the compressor from below.
 - Remove compressor assembly from J 33026.
- 6. Rear head (28) (figure 28).

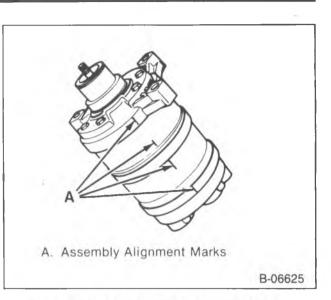


Figure 26—Compressor Alignment Marks


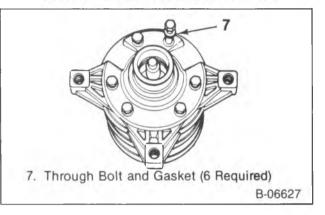


Figure 27—Installing the Through Bolts in the Front Head

- Using a wood block, tap around the edge of the rear head (28) to ease removal.
- Mount the compressor on J 33026 front head (11) down (figure 29).



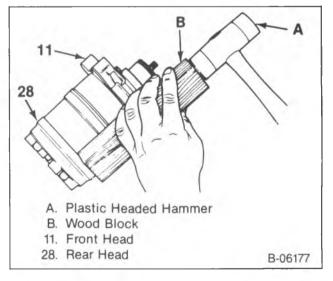

DA-6 AIR CONDITIONING COMPRESSOR 1B2-11

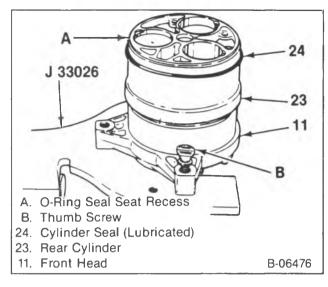


Figure 29—Installing the O-Ring Seals on the Cylinder Seal Races

- 7. Head gasket (27)
- 8. Valve plate (26).
- 9. Suction reed plate (25).
- 10. Cylinder seal (24).
- 11. Cylinder (23).

Importantt

- Shaded parts shown in figure 3 are not serviceable. A replacement kit (gut pack) is available.
- Cylinders (23) (16), cylinder seal (22), discharge crossover seal (17), piston group, axial plate shaft assembly (20) and bearings replace as a kit.
- 12. Cylinder seal (22).
- 13. Cylinder (16).
- 14. Cylinder seal (15).
- 15. Suction reed plate (14).
- 16. Valve plate (13).
- 17. Head gasket (12)
- 18. Front head (11).
 - Clean
 - All parts.

Inspect

· All parts and replace as necessary.

COMPRESSOR ASSEMBLY —INTERNAL CYLINDER AND SHAFT

Install or Connect (Figures 3, 30 through 38)

Tools Required:

- J 21352-A Support Block
- J 33016 Cylinder Alignment Rods
- J 33026 Compressor Holding Fixture
- Use new seals and gaskets.

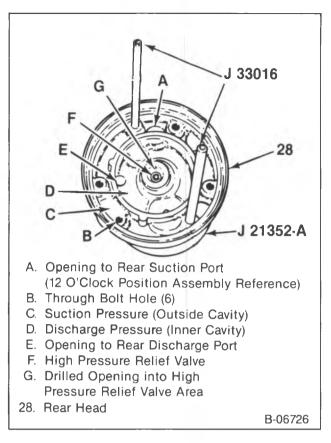


Figure 30—Positioning the J-33016 Guide Pins

- Place J 21352-A on the workbench or suitable flat work surface.
- 1. Rear head (28) onto J 21352-A.
 - Install J 33016 guide pins small diameter ends into the through bolt holes (figure 30).
- 2. Head gasket (27).
 - Over guide pins into head (28) (figure 31).

Important

- Locate the head gasket (27) to prevent the discharge valve reed retainer on the rear valve plate (26) from hitting the internal segment of the head gasket (27) (figure 31).
- 3. Valve plate (26).
- Over the guide pins into position (figure 32).
- 4. Suction reed plate (25).
 - Over the guide pins into proper position (figure 33).
 - Be sure all three suction reed tips cover the suction ports in the rear valve plate (26).
- 5. Cylinder seal (24).
 - Lubricate a new cylinder seal (24) with clean 525 viscosity refrigerant oil and position the seal on the rear cylinder (23) (figure 29). Roll the cylinder seal into the groove. Cylinder (23) surface must be clean at the rear.
 - Apply refrigerant oil to the seal surface of the rear head to easy assembly.
- 6. Cylinder and shaft assembly (gut pack).
 - Shaded parts shown in figure 3 are not serviceable. A replacement kit (gut pack) is available for replacement.

1B2-12 DA-6 AIR CONDITIONING COMPRESSOR

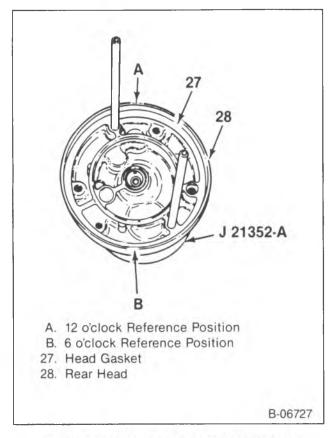


Figure 31—Installing the Rear Head Gasket

- Assemble cylinder and shaft assembly over the guide pins onto the rear head (28) (figure 34).
- Using both hands, press the cylinder and shaft assembly down into the rear head (28).

? Important

• Center cylinder seal (22) is not serviceable.

7. Cylinder seal (15).

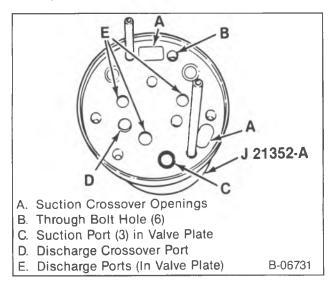


Figure 32—Installing the Rear Valve Plate

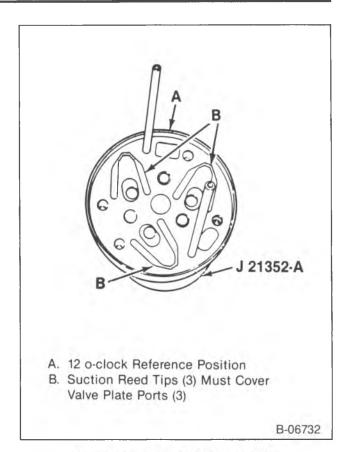


Figure 33-Installing the Reed Plate

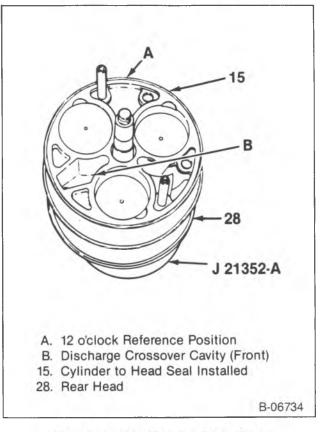


Figure 34—Installing the Front Head

DA-6 AIR CONDITIONING COMPRESSOR 1B2-13

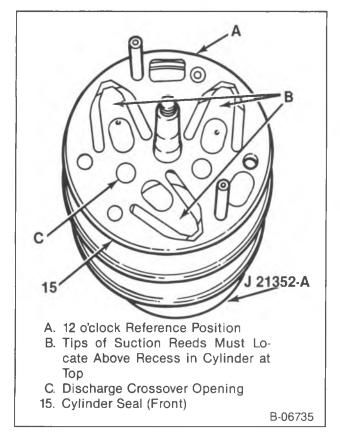


Figure 35—Installing the Front Suction Reed Plate

- Lubricate a new cylinder to front head seal with clean 525 viscosity refrigerant oil and install in the front seal groove (figure 34).
- 8. Suction reed plate (14).
 - Over J 33016 guide pins (figure 35).
 - Check the alignment.
- 9. Valve plate (13).
 - Over J 33016 guide pins (figure 36).
- 10. Head gasket (12).
 - Over J 33016 guide pins (figure 37).
- 11. Front head (11).
 - Line up mark on front head (11) with the alignment marks on the compressor cylinders and assemble head over J 33016 guide pins (figure 26).

Important

- Front head (11) is now assembled in the "standard" position and may differ 120 degrees either direction. Assemble front head (11) according to location marked before removal.
- Using both hands, press down on front head (11) for installation over the seal (15) at the front of the cylinder (16).
- 12. Through bolts (7) with new gaskets.
 - Thread four of the through bolts (7) into the rear head (28) before removing J 33016 guide pins. Install two remaining through bolts (7) finger tight.
 - Mount the compressor on J 33026 (figure 38).

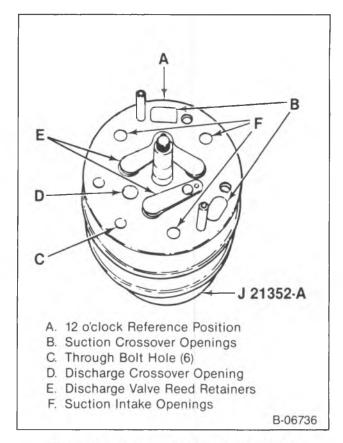


Figure 36—Installing the Front Valve Plate

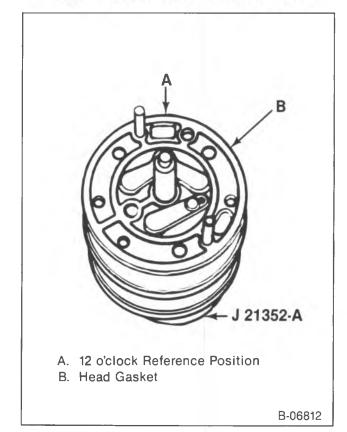


Figure 37—Installing the Seal to the Front Head

1B2-14 DA-6 AIR CONDITIONING COMPRESSOR

री Tighten

- Six through bolts (7) alternately to 9 N·m (84 in. lbs.).
- 13. Shaft seal parts (8).

Important

- · Add new 525 viscosity refrigerant oil.
- Refer to vehicle service manual for fill quantity.
 Place shaft nut (1) on the shaft (20) and rotate the compressor shaft (20) several times and remove nut (1).
- Leak test the compressor.
- · Refer to "Leak Testing."
- 14. Clutch coil assembly (6).
- 15. Pulley (5).
- 16. Clutch plate and hub assembly (2).

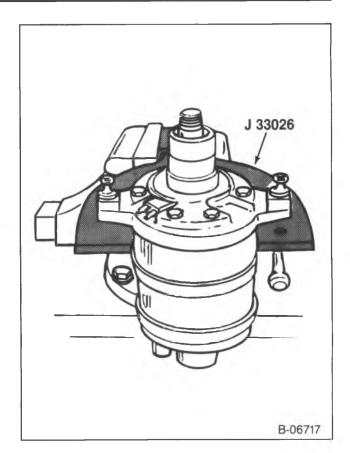


Figure 38—Installing the Compressor to J-33026

LEAK TESTING

Tools Required:

- J 9625-A Pressure Test Plate
- J 23500-01 Portable Charging Station
- J 33026 Compressor Holding Fixture
- · Be sure the compressor has no oil internally.
- 1. Install J 9625-A on the rear head of compressor (figure 3).
- Install the center hose of the manifold gage set on J 23500-01 to a refrigerant drum standing in an upright position and open the valve on the drum.
- 3. Install the charging station high and low pressure lines to corresponding fittings on J 9625-A using gage adapters or hoses equipped with valve depressors. Suction port (low side) of the compressor has large internal opening. Discharge port (high side) has a smaller internal opening into the compressor.
- Open the low pressure control, high pressure control and the refrigerant control on the charging station to allow refrigerant vapor to flow into the compressor.

Important

 Check for leaks at pressure relief valve (32), compressor front and rear head seals (15) (24), center cylinder seal (22), through bolt head gaskets and compressor shaft seal.

- After leak check, shut off the low pressure control and the high pressure control on charging station.
- If an external leak is present, perform the necessary correction and recheck to assure the correction.
- If an external leak is present, perform the necessary correction and recheck to assure the correction.
- Loosen the manifold gage hose connections to the gage adapters connected to the low and high sides and allow the vapor pressure to release from the compressor. If valve depressor type hoses are used, loosen the hose connections at gage manifold to release the vapor pressure from the compressor.
- Disconnect both gage adapters or hoses from J 9625-A.
- Add 0.085 kg (3 oz.) new 525 viscosity refrigerant oil to the compressor assembly. Rotate the complete compressor assembly (not the shaft or drive plate hub) slowly several turns to distribute oil to all cylinder and piston areas.
- Install the shaft nut (1) on the compressor shaft (20) if the pulley assembly and clutch plate and hub assembly are not installed.

- Using a box-end wrench, or a socket and handle, rotate the compressor shaft (20) or clutch plate on the shaft (20) several turns to lubricate the pistons and cylinder walls.
- Connect the charging station high-pressure line, or a high-pressure gage and gage adapter to J 9625-A high-side connector.
- Attach an adapter or depressor-type hose to the suction or low-pressure port of J 9625-A to open the Schrader-type valve. Oil will drain out of the compressor suction port adapter if the compressor is positioned with the suction port downward.
- Attach the compressor to J 33026 fixture and mount the compressor in a vise so that the compressor will be in a horizontal position and the shaft (20) can be turned with a wrench.
- Rotate the compressor shaft (20) or drive plate hub six to eight complete revolutions at a speed of approximately one revolution per second. A slower rotation can result in a lower pump-up pressure and disqualify a good pumping compressor.
- Observe the reading on the high-pressure gage at the completion of the tenth revolution of the compressor shaft (20). The pressure reading for a good pumping compressor should be 690 kPa (100 psi) or above. A pressure reading of less than 620 kPa (90 psi) would indicate one or more suction and/or discharge valves leaking, an internal leak, or an inoperative valve. Disassemble the compressor and repair as necessary. Reassemble and repeat the pump-up test.
- Following the pressure pump-up test, release the air pressure from the high side and remove the gage adapters and J 9625-A test plate.
- Tilt the compressor to place the suction and discharge ports downward to allow the oil to drain from the compressor.
- Allow a 10-minute drain period and then charge the compressor with the proper amount of oil. Pour the new 525 viscosity refrigerant oil into the suction port.
- If further assembly or processing is required, install a shipping plate or test plate J 9625-A to protect the compressor from contamination.

SPECIFICATIONS

DA-6 COMPRESSOR

Type — Harrison DA-6 compressor	
Displacement	
Rotation	Clockwise
Clutch Plate Air Gap).64 mm (0.015-0.025 inch)
Oil Capacity	


CLUTCH COIL

Ohms (at 27°C-80°F)	
Amps (at 27°C–80°F)	

TORQUE SPECIFICATIONS

Compressor Suction and Discharge Connector Bolt	24 N·m (18 Ft. Lbs.)
Through Bolts	
Shaft Nut	
Pressure Relief Valve	9 N·m (84 In. Lbs.)

1B2-16 DA-6 AIR CONDITIONING COMPRESSOR

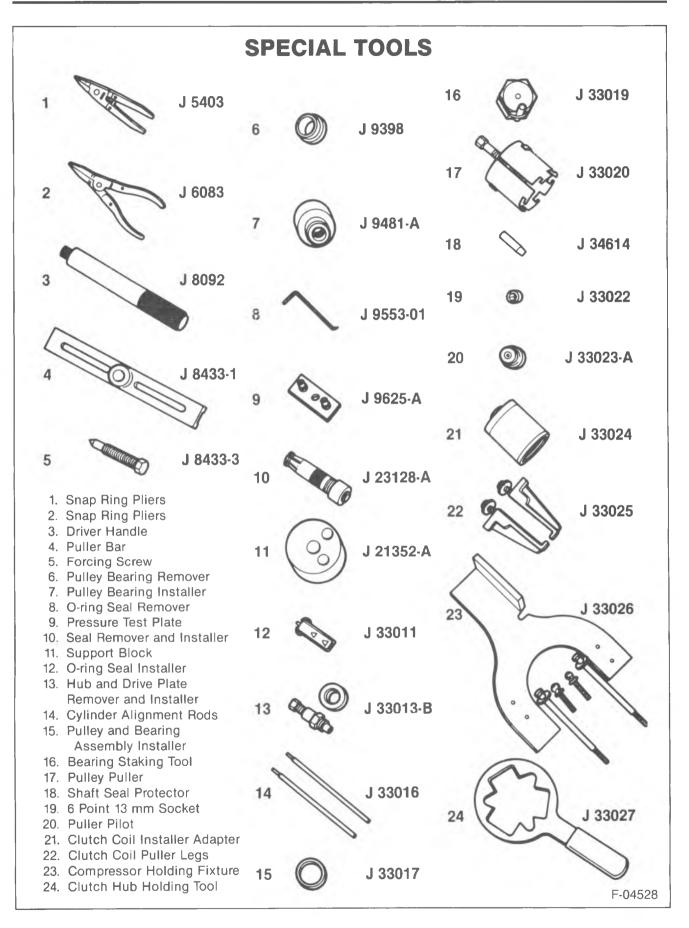

SECTION 1B3

R-4 AIR CONDITIONING COMPRESSOR

CONTENTS

SUBJECT

PAGE

Description	IB3- 1	L
Minor Repair to the Compressor	1B3- 2	2
Clutch Drive Hub Replacement.	IB3- 2	2
Clutch Rotor and/or Bearing Replacement — V-Groove Type	1B3- 4	4.
Clutch Rotor and/or Bearing Replacement — Poly-Groove Type	1B3- 5	5
Clutch Coil and/or Pulley Rim Replacement — V-Groove Type		
Clutch Coil and/or Pulley Rim Replacement — Poly-Groove Type		
Major Repair to the Compressor		
Shaft Seal Replacement	1B3- 8	3
Pressure Relief Valve Replacement	1B3- 8	3
High-Side High-Pressure Cut-Off Switch Replacement	1B3- 9	3
Front Head and/or Seal Replacement		
Main Bearing Replacement	1B3- 9	9
Thrust and Belleville Washers Replacement	IB3-10)
Shell and/or Seal Replacement.	1B3-10)
Discharge Value Plate and/or Retainer Replacement	IB3-11	L
Cylinder and Shaft Assembly Replacement	IB3-12	2
Leak Testing	IB3-12	2
Specifications	IB3-13	3
Special Tools	IB3-14	ŧ.

DESCRIPTION


The Harrison R-4 compressor is a four cylinder, radial opposed with 10.0 cubic-inch displacement.

Two belt-driven systems are available: V-groove and poly-groove. The drive system affects minor repair procedures.

Clean the compressor before servicing. Clean replacement parts with trichloroethane, naptha, stoddard solvent, kerosene or equivalent. Blow dry with dry air. Use a nonlint producing cloth. After removing the compressor from the vehicle, drain and measure the refrigerant oil. Add new 525 viscosity refrigerant oil after repair. Refer to "Specifications."

IDENTIFICATION

An identification label attached to the compressor provides the name of the manufacturer, model number and build code. If the label is removed or becomes dislodged during service operation, reattach it using an adhesive sealant such as Loctite 312 or equivalent.

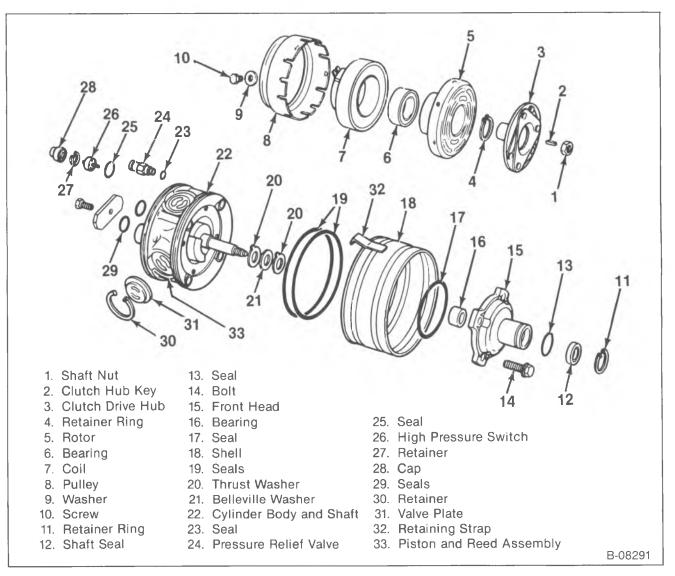

MINOR REPAIR TO THE COMPRESSOR

Figure 1—Compressor Component View

Illustrations show the compressor removed from the vehicle for easier viewing. Refer to figure 1 for part names and location.

CLUTCH DRIVE HUB REPLACEMENT



The compressor with solvent and blow dry with air.

Remove or Disconnect (Figures 1, 2, 3 and 4)

Tools Required:

- J 9399 Thin Wall Socket
- J 25008-A Holding Fixture
- J 25030 Clutch Hub Holding Tool
- J 34019 Clutch Plate and Hub Assembly Remover

- Clamp J 25008-A to the compressor (figure 2).
- Mount J 25008-A and the compressor in a vise.
- 1. Shaft nut (1) with J 9399 (figure 3).

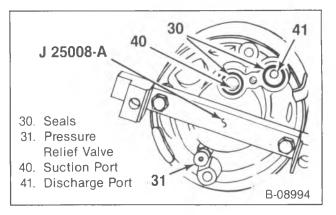


Figure 2—Compressor in J 25008-A Holding Fixture

R-4 AIR CONDITIONING COMPRESSOR 1B3-3

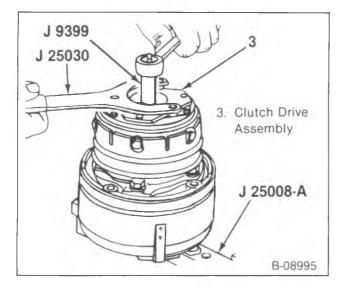


Figure 3—Removing the Shaft Nut

- Hold the clutch plate and hub assembly (3) with J 25030.
- 2. Clutch drive hub (3) (figure 4).
 - Thread J 34019 into the clutch plate and hub assembly (2).

Important

- · Do not drive or pound on the clutch hub or the shaft. This may cause internal damage.
- Make sure the contact surfaces of the clutch plate and the pulley are clean.
- Align the shaft key with the shaft key way and place the clutch plate and hub assembly onto the compressor shaft.
- · Hold the body of J 34019 with a wrench and turn the center screw into the remover body (figure 3).
- 3. Shaft key (2).
 - · Retain the shaft key (2) if usable.

Inspect

- All parts and replace if necessary.

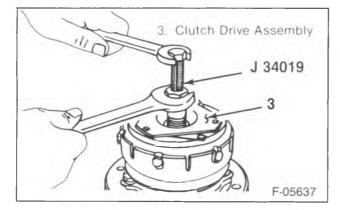


Figure 4—Clutch Plate and Hub Removal

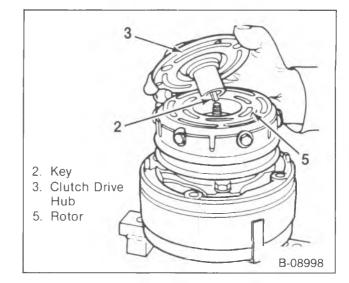


Figure 5—Installing the Shaft Key

Install or Connect (Figures 1, 3, 5 and 6) ++

Tools Required:

- J 9399 Thin Wall Socket
- J 9408-B Clutch Plate and Hub Installer
- J 25030 Clutch Hub Holding Tool
- 1. Shaft key (2) (figure 5).
 - Allow the shaft key (21) to extend 4.8 mm (3/16-inch) out of the key way.
 - The shaft key (2) is curved slightly to give an interference fit in the groove.
- 2. Clutch drive hub (3) (figure 6).
 - Install J 9480-B.
 - Hold the hex portion of J 9480-B with a wrench and tighten the center screw to press the hub onto the shaft until there is a 0.5-1.0 mm (0.20-.040-inch) air gap between the frictional surfaces of the clutch plate and clutch rotor.
 - Remove J 9480-B.
- 2. Shaft nut (1) with J 9399 (figure 3).

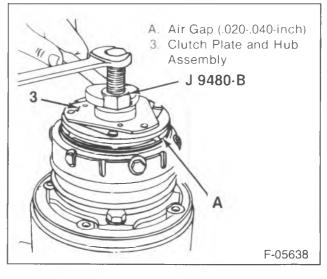


Figure 6—Installing the Clutch Plate and Hub Assembly

1B3-4 R-4 AIR CONDITIONING COMPRESSOR

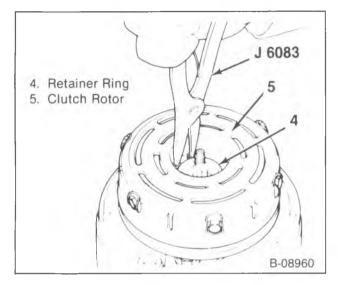


Figure 7—Removing the Rotor and Bearing Assembly Retainer Ring

• Use J 25030 to hold the clutch plate and hub assembly.

री Tighten

- Shaft nut (1) to 17 N m (13 ft. lbs.).
- Hand spin the pulley (11) to check for free rotation.

CLUTCH ROTOR AND/OR BEARING REPLACEMENT — V-GROOVE TYPE

Remove or Disconnect (Figures 1, 7, 8, 9 and 10)

Tools Required:

- J 6083 Snap Rings Pliers
- J 9398 Rotor Bearing Remover
- J 25031 Rotor and Bearing
- J 8092 Driver Handle
- 1. Clutch drive hub (3).
- 2. Snap ring (4) with J 6083 (figure 7).
- Mark the location of the clutch coil terminals.
- 3. Rotor (6) and bearing (5) assembly.

Important

- If the clutch rotor and/or rotor bearing are to be replaced, bend the washers (9) away from the pulley rim mounting screws (10). Remove the six mounting screws (10) and washers (9).
- Install J 25031 guide over the compressor shaft (22) (figure 8).
- Place J 25031 down into the rotor until the puller legs engage the recessed edge of the rotor hub (figure 9).
- Tighten the puller screw against the puller guide and remove the clutch rotor and bearing.

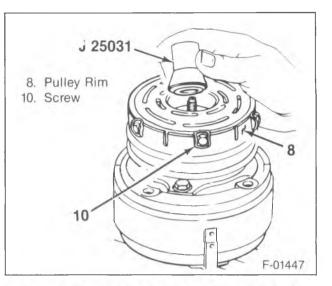


Figure 8-Installing the Rotor and Bearing Guide

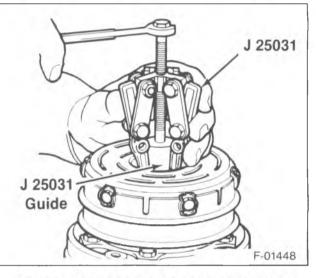


Figure 9—Removing the Clutch Rotor Assembly

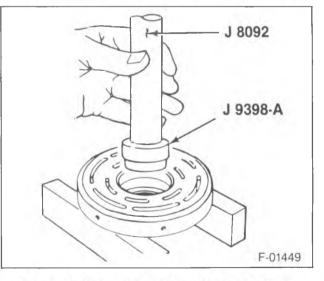


Figure 10—Removing the Clutch Rotor Bearing

R-4 AIR CONDITIONING COMPRESSOR 1B3-5

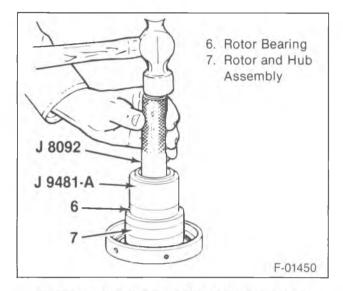


Figure 11-Installing the Clutch Rotor Bearing

Important

- If the pulley rim mounting screws (10) and washers (9) were removed, only the clutch rotor and bearing assembly will be removed for replacement. The clutch coil and housing assembly is pressed into the compressor and will not be removed unless the pulley rim mounting screws are left in place and the pulley rim pulls the coil and housing assembly off with the clutch rotor and pulley rim assembly.
- 3. Bearing (6) from the clutch rotor (5) with J 8092 and J 9398-A (figure 10).
 - Place the clutch assembly face on wood blocks to remove the bearing.

? Important

 It is not necessary to remove the staking at the rear of the rotor hub to remove the bearing. However, file away the old staked metal to provide a clearance for the new bearing.

++

Install or Connect (Figures 1, 11, 12 and 13)

Tools Required:

- J 6083 External Snap Ring Pliers
- J 8092 Drive Handle
- J 9481-A Pulley Bearing and Pulley Installer
- Bearing (6) to the rotor hub with J 8092 and J 9481-A (figure 11).
 - Place the rotor and hub assembly face down on a clean, flat surface.
 - · Align the bearing with the hub bore.
 - Drive the bearing with J 8092 and J 9481-A.
 - Using a center punch with a 45 degree angle point, stake 1.1-1.4 mm (0.045-0.055-inch) deep the bearing in three places 120 degrees apart (figure 12).
- 2. Rotor (6) and bearing (5) assembly to the compressor with J 8092 (figure 13).
- 3. Retainer ring (4) with J 6083.
- 4. Pulley rim mounting screws (10) and washers (9).

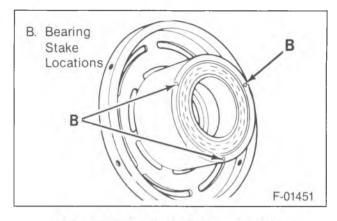


Figure 12—Staking the Rotor Bearing

- Apply Loctite 601 or equivalent to the threads.
- Hand spin the pulley to check for free rotation.

૱ Tighten

- Screws to 11 N m (100 in, lbs.).
- Bend the washers to lock the rim in place.
- 5. Rotor (5) and hub (3) assembly.

CLUTCH ROTOR AND/OR BEARING REPLACEMENT — POLY-GROOVE TYPE

★→ Remove or Disconnect (Figures 1, 7, 8, and 10)

Tools Required:

- J 6083 Snap Ring Pliers
- J 8092 Driver Handle
- J 9398 Rotor Bearing Remover
- J 9481-A Pulley Bearing and Pulley Installer
- 1. Rotor (5) and hub (3) assembly (figure 1).
- 2. Retaining ring (4) with J 6083 (figure 7).
- 3. Rotor (5) and bearing (6) assembly with J 25031 (figure 8).
 - Install the J 25031 guide over the shaft (39) end.
 - Install the J 25031 puller over the guide.
 - Engage the arms of J 25031 down into the recessed edge of the rotor hub (5).
 - Hold the arms of J 25031 and tighten the screw against the guide.
- 4. Bearing (6) from the rotor hub (5) with J 9398 and J 8092 (figure 10).
 - Place the rotor hub clutch face up on wooden blocks on a flat surface.
 - Drive the bearing out with J 9398 and J 8092.

Install or Connect (Figures 11 and 14)

- Tools Required:
 - J 6083 Snap Ring Pliers
 - J 8092 Universal Handle
 - J 9481-A Pulley and Bearing Installer
- 1. Bearing to the rotor and hub assembly with J 8029 and J 9481-A (figure 11).
 - Place the pulley rotor and hub assembly face down on a flat surface.

1B3-6 R-4 AIR CONDITIONING COMPRESSOR

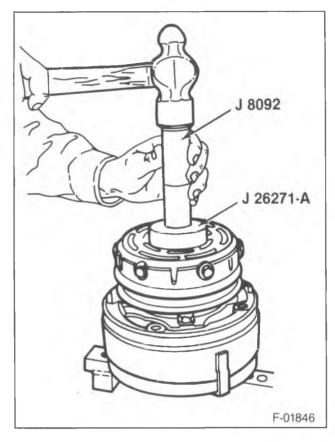


Figure 13—Installing the Rotor and Bearing Assembly — V-Groove Type

- · Align the bearing to the pulley rotor and hub bore.
- Using a center punch with a 45 degree angle point, stake 1.1-1.4 mm (0.45-0.55 inch) deep in the places 120 degrees apart (figure 11).
- 2. Rotor (5) and bearing (6) assembly to the compressor with J 26271-A and J 8092 (figure 14).
 - Position the pulley rotor and bearing assembly to the compressor.
 - Drive with J 26271-A and J 8092.
- 3. Retainer ring (4) with J 6083.
- 4. Clutch drive hub (3).

CLUTCH COIL AND/OR PULLEY RIM REPLACEMENT — **V-GROOVE DRIVE**

Remove or Disconnect (Figure 1)

Tool Required:

- J 25031 Rotor and Bearing Puller
- 1. Clutch drive hub (3).
- 2. Rotor (5) and bearing (6) assembly.
- 3. Pulley rim mounting screws (9) and washers (10).
- 4. Pulley rim (11).

++

Install or Connect (Figures 1, 14 and 15)

Tool Required: J 26271-A Rotor and Bearing Installer

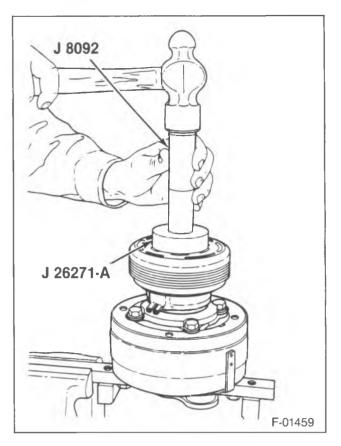


Figure 14—Installing the Rotor and Bearing Assembly — Poly-Groove Type

 Clutch (7), pulley rim (8), clutch rotor (5) and bearing (6) (figure 15).



Important

- Use new screws (10) and washers (9). Apply Loctite 601 or equivalent to the screw threads, but do not tighten.
- Before seating the assembly, place the clutch coil terminals in relation to the compressor. Align the three protrusions on the rear of the clutch coil with the locator holes in the front head.

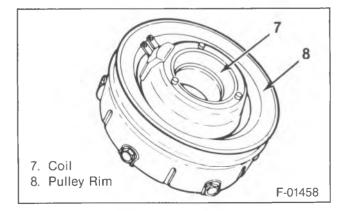


Figure 15—Clutch Coil, Pulley Rim, Rotor and **Bearing Assembly**

R-4 AIR CONDITIONING COMPRESSOR 1B3-7

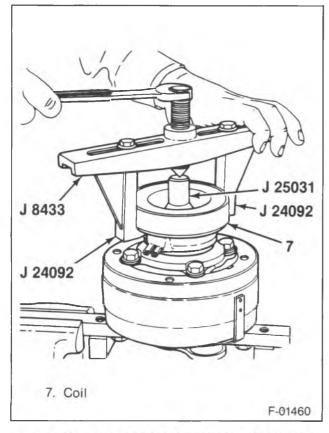


Figure 16—Removing the Poly-Groove Clutch Coil

- Clutch coil pulley rim (8) and the clutch rotor (5) and bearing (6) to the compressor with J 26271-A and J 8092.
- 2. Retainer ring (4).
- 3. Clutch drive hub (3).

🖳 Measure

• Clutch plate to clutch rotor gap is 0.5 to 1.0 mm (0.020 to 0.040-inches).

Important ?

• Hand spin the pulley to check for free rotation.

হ্ব Tighten

- Pulley rim mounting screws (10) to 11 N·m (100 in. lbs.).
- Bend the washers (9) to secure the screws (10).

CLUTCH COIL AND/OR PULLEY RIM REPLACEMENT — POLY-GROOVE TYPE

+> Remove or Disconnect (Figures 1 and 16)

Tools Required:

- J 8433 Heavy Duty Pulley Puller
- J 24092 Clutch Coil Puller Legs
- J 25031 Rotor and Bearing Assembly Remover
- 1. Clutch drive hub (3).
- 2. Rotor (5) and bearing (6) assembly.
- Mark the location of the clutch coil terminals on the compressor.
- 3. Clutch coil (7) from the front head (15) (figure 16).
 - Install J 25031 guide to the shaft (34).
 - Install J 24092 with J 8433.
 - Turn the screw in J 8433 to remove the clutch coil.

→← Install or Connect (Figures 1 and 16)

- 1. Clutch coil (7) to the front head (15).
 - Position the coil terminals as marked during removed.
- 2. Rotor (5) and bearing (6) to the compressor with J 26271.

? Important

- Before seating the assembly, position the clutch coil terminals in the proper location to the compressor.
- Align the three protrusions on the rear of the clutch coil housing with the locator holes in the front head.
- 3. Retainer ring (4).

A Measure

 Clutch plate to clutch rotor air gap is 0.5-1.0 mm (0.020-0.040-inch).

MAJOR REPAIR TO THE COMPRESSOR

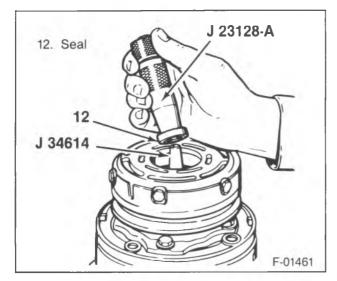


Figure 17-Removing the Shaft Seal with J 23128-A

SHAFT SEAL REPLACEMENT

The shaft seal is designed to seep oil for lubrication. Replace the seal if a large leak is detected. Use J 29547 to determine refrigerant oil leakage.

If the seal needs replacing, remove the accumulator. Drain, measure and replace the refrigerant oil with new 525 viscosity refrigerant oil.

Remove or Disconnect (Figures 1, 17 and 18)

Tools Required:

- J 5403-A Internal Snap Ring Pliers
- J 22974-A Compressor Shaft Oil Seal Protector
- J 23128-A Ceramic Seal Remover and Installer J 34614 Shaft Seal Protector
- 1. Clutch drive hub (3).
- 2. Retainer ring (11).

Clean

- The inside of the compressor neck area.
- 3. Shaft seal (12).
 - Engage J 23138-A into the recessed portion of the seal by turning with a hand motion (figure 17).
 - Lift the seal with a rotary-pulling motion.
- 4. Seal (o-ring) (13) with J 9553-01 (figure 18).

→← Install or Connect (Figures 1 and 19)

Tool Required:

J 33011 "O" Ring Installer

- 1. Seal (o-ring) (14) to the shaft (22) (figure 19).
 - Dip the seal in clean 525 viscosity refrigerant oil.
 - Seal (o-ring) to J 33011.
 - Insert J 33011 over the shaft and down until it reaches the bottom of the shaft.
 - Tower the slide on J 33011 to release the seal (o-ring) into its groove.

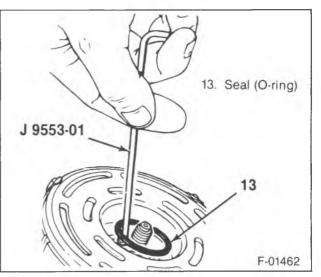


Figure 18—Removing and Installing the Shaft Seal

• Rotate J 21508-A to seat the seal (o-ring).

- 2. Shift seal (12).
 - Shaft seal to J 23128-A.
 - J 23128-A and shaft seal to the shaft.
 - Slide J 23128-A over and down the shaft until it stops.
 - Disengage J 23128-A from the shaft seal with a reverse hand twisting motion.
- 4. Retainer ring (11).
- 5. Clutch drive hub (3).

PRESSURE RELIEF VALVE REPLACEMENT



- 1. Valve (24).
- 2. Seal (23)


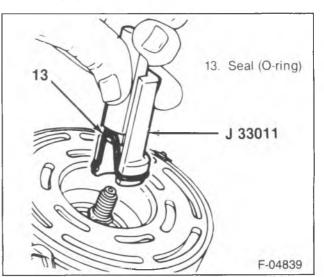


Figure 19-Installing the Seal

R-4 AIR CONDITIONING COMPRESSOR 1B3-9

5

F-01464

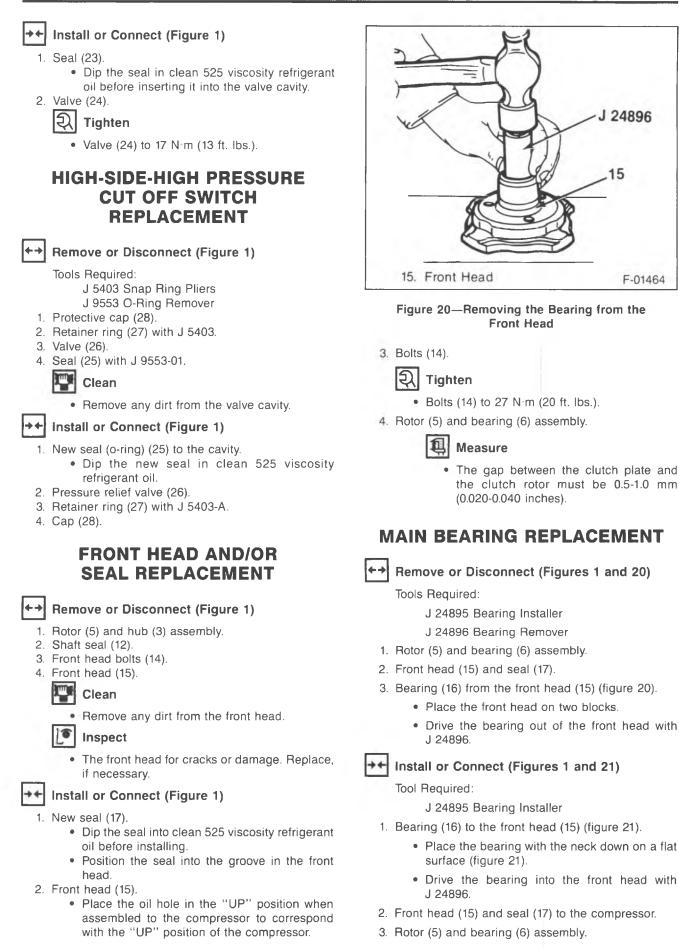

1B3-10 R-4 AIR CONDITIONING COMPRESSOR

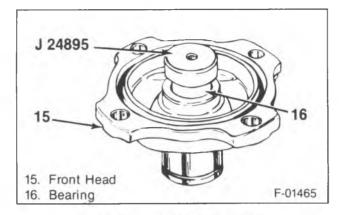


Figure 21—Installing the Bearing

THRUST AND BELLEVILLE WASHERS REPLACEMENT

Remove or Disconnect (Figures 1 and 22)

- 1. Rotor (5) and bearing (6) assembly.
- 2. Front head (15) and seal (17).
- 3. Two thrust washers (20) (figure 22).
- 4. Belleville washer (21).
 - Note the position of the washers.

++ Install or Connect (Figures 1 and 22)

- 1. One new thrust washer (20).
 - Place the washer over the shaft with the washer tang pointing UP.
- 2. New Belleville washer (21).
 - Place the high center of the washer UP.
- 3. One new thrust washer (20).
 - Place the washer over the shaft with the washer tang pointing down.

? Important

 Lubricate the washers with clean 525 viscosity refrigerant oil.

4. Front head (15) and seal (17).

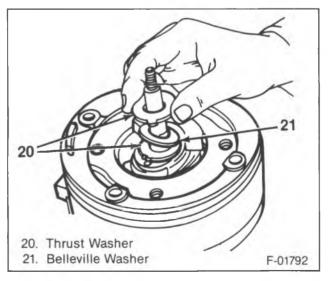


Figure 22—Replacing the Thrust and Belleville Washers

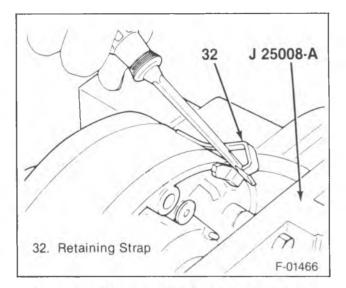


Figure 23—Releasing the Shell Retaining Strap

5. Rotor (5) and bearing (6) assembly.

SHELL AND/OR SEAL REPLACEMENT

Remove or Disconnect (Figures 1, 23 and 24)

Tool Required:

- J 25008-A
- 1. Clutch drive hub (3).
- 2. Rotor (5) and bearing (6) assembly.

Important

- Do not loosen or remove the pulley rim mounting screws to remove the clutch rotor and bearing, clutch coil and pulley rim.
- 3. Shell retainer strap (32) (figure 23).
 - Pry the strap away from the cylinder and position it high enough to clear the cylinder when removing the shell.
- 4. Shell (18) (figure 24).
 - Remove J 25008-A from the compressor.
 - Reverse J 25008-A with the step block protrusions engaging the shell.
 - Install the medium length metric threaded mounting bolts through J 25008-A.
 - Thread the bolts finger tight on both sides into the compressor cylinder until the step of the J 25008-A protrusions contact the shell.
 - Alternately tighten each bolt 1/4-turn to push the shell free of the seals (19) on the cylinder.
 - If one screw requires more force to turn than the other, immediately turn the other screw to bring the screw threading sequence in-step or the shell will be cocked and be difficult to remove. Normal removal does not require much force on the wrench if the screws are kept in-step while turning. The shell can be removed by hand as soon as the shell is free

R-4 AIR CONDITIONING COMPRESSOR 1B3-11

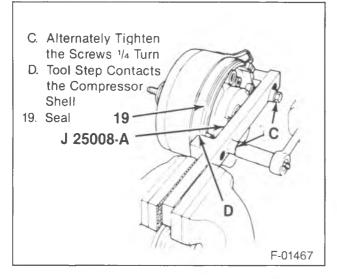


Figure 24—Removing the Shell

of the shell to cylinder seals. Do not turn the screws any further than necessary to release the shell.

- Remove J 25008-A from the compressor.
- Reverse J 25008-A to hold the compressor by the opposite side using the compressor short-length screws with metric threads.

Clean

Remove dirt and lint from the shell.

Inspect

• The shell for cracks or burrs that may damage the seals.

Install or Connect (Figures 1, 23 and 25)

- 1. Seals (19) to the front and rear of the shell (18).
 - Dip the seals (o-rings) in clean 525 viscosity refrigerant oil before installing.
 - Coat the seal grooves with clean 525 viscosity refrigerant oil.
- 2. Shell (18) to the cylinder (22) with J 25008-A (figure 25).
 - Rotate the retaining strap to its original location.
 - Alternately tighten each bolt 1/4-turn to push the shell over the seals.
 - If one screw requires more force to turn than the other, immediately turn the other screw to bring the screw threading sequence in-step or the shell will be cocked and made more difficult to install. Normal installation does not require much force on the wrench if the screws are kept in-step while turning.
- 3. Retaining strap (32).
 - After seating the shell against the stop, bend the strap into place.
- 4. Rotor (5) and bearing (6) assembly, clutch coil (7) and pulley rim with J 26271-A.
- 5. Clutch drive hub (3).

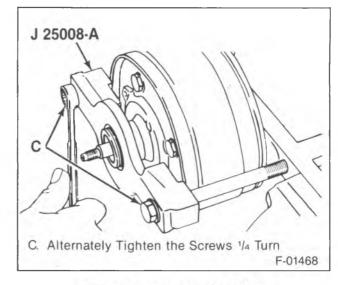


Figure 25—Installing the Shell

DISCHARGE VALVE PLATE AND/OR RETAINER REPLACEMENT

Remove or Disconnect (Figures 1, 26 and 27)

Tools Required:

- J 4245 Snap Ring Pliers
- J 25008-A Compressor Shell Remover, Installer and Holding Fixture
- 1. Clutch drive hub (3).
- 2. Rotor (5) and bearing (6) assembly.
- 3. Compressor shell (18).
- 4. Retainer ring (30) with J 4245 (figure 26).
- 5. Valve plate (31) (figure 27).

++ Install or Connect (Figures 1, 26 and 27)

- 1. Valve (31).
- 2. Retainer ring (30) with J 4245.
- 3. Shell (18).
- 4. Rotor (5) and bearing (6).

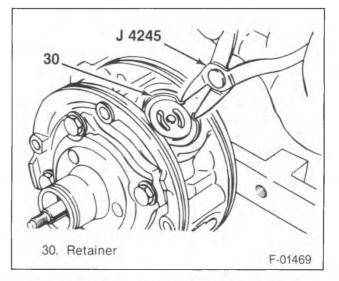


Figure 26—Replacing the Valve Plate Retainer

1B3-12 R-4 AIR CONDITIONING COMPRESSOR

5. Clutch drive hub (3).

CYLINDER AND SHAFT ASSEMBLY REPLACEMENT

- Remove or Disconnect (Figure 1)
 - 1. Clutch drive hub (3).
 - 2. Rotor (5) and bearing (6).
 - 3. Shaft seal (12).
 - 4. Front head (15).
 - 5. Thrust (20) and Belleville (21) washers.
 - 6. Shell (18)
 - 7. Discharge plate (31).
 - 8. High pressure cut-off switch (26).
 - 9. Pressure relief valve (24).

++ Install or Connect (Figure 1)

- 1. Pressure relief valve (24).
- 2. High pressure cut-off switch (26).
- 3. Discharge reed (33) and plate (31).
- 4. Shell (18).
- 5. Thrust (20) and Belleville (21) washers.
- 6. Front head (15).
- 7. Shaft seal (12).
- 8. Rotor (5) and bearing (6) assembly.
- 9. Clutch drive hub (3).

LEAK TESTING

Tools Required:

- J 5420 Straight Fitting
- J 9625-A Pressure Test Set with Schrader Valve
- J 23500-01 Portable Charging Station
- 1. Install J 9625-A on the rear head of the compressor.
- 2. Install the center hose of the manifold gage set on the charging station to a refrigerant drum standing in an upright position and an open valve on the drum.
- Install the charging station high and low pressure lines to the corresponding fittings on J 9526-A using J 5420 gage adapters or hoses equipped with valve depressors.
 - The suction port (low side) of the compressor has a large internal opening. The discharge port (high side) has a smaller internal opening into the compressor.
 - Open the low-pressure control, the high-pressure control and the refrigerant control on the charging station to allow refrigerant vapor to flow into the compressor.

? Important

 Check for leaks at the pressure relief valve, compressor front and rear head seals, center cylinder seal, through bolt head gaskets and the compressor shaft

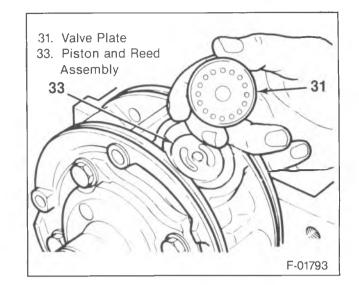


Figure 27—Replacing the Discharge Plate

seal. After checking, shut off the low pressure control and the high pressure control on the charging station.

- Loosen the manifold gage hose connections to the gage adapters connected to the low and high sides and allow the vapor pressure to release from the compressor.
- If valve depressor-type hoses are used, loosen the hose connections at the gage manifold to release the vapor from the compressor.
- 4. Disconnect J 5420 from J 9625-A.
- Rotate the compressor (not the crank shaft or drive plate hub) to distribute oil to the cylinder and pistons.
- Install a shaft nut on the compressor crankshaft if the drive plate and clutch assembly are not installed.
- With a box-end wrench, or a socket and handle, rotate the compressor crankshaft or clutch drive plate on the crankshaft to lubricate the piston assembly and cylinder wall.
- Connect the J 23500-01 Portable Charging Station high pressure line or a high pressure gage and J 5420 gage adapter to the J 9625 test plate highside connector.

Important


- Oil will drain out of the compressor suction port adapter if the compressor is placed with the suction port downward.
- 9. Attach the compressor to the J 25008-A holding fixture with metric mounting screws. Clamp the compressor holding fixture in a vise so that the compressor can be turned with a wrench.
- 10. With a wrench, rotate the compressor crankshaft or drive plate hub ten revolutions at a speed of one revolution per second.
 - Turning the compressor at less than one revolution per second can cause a lower pump-up pressure and disqualify a good pumping compressor.
- 11. Watch the reading on the high-pressure gage at the completion of the tenth revolution.
 - The reading for a good pumping compressor should be 344.75 kPa (50 psi).

- A reading of less than 310.275 kPa (45 psi) would indicate one or more suction and/or discharge valves are leaking, an internal leak and/or discharge valves leaking, an internal leak or an inoperative valve. Disassemble and check the compressor.
- 12. After completing the pressure pump-up test, release the air pressure from the high side and remove J 5420 gage adapter and J 9625 test plate.
- 13. Tilt the compressor to place the suction and discharge ports downward.
- 14. Drain oil from the compressor. After 10 minutes, charge with the proper amount of oil. Pour the oil into the suction port.
 - If further assembly or processing is required, install a shipping plate or J 9625 to keep air, dirt and moisture out of the compressor unit it is installed.

SPECIFICATIONS

Type — Harrison R-4 compressor4 Displacement Rotation Oil Capacity	10.0 Cu. In.
TORQUE SPECIFICATIONS 17 Oil Drain Screw 17 Cycling Pressure Switch 10 Shaft Nut 17 Pressure Relief Valve 17 Front Head Bolts 27 Rim Mounting Screws 11	N m (7.5 ft. lbs.) ' N m (13 ft. lbs.) ' N m (13 ft. lbs.) ' N m (20 ft. lbs.)

1B3-14 R-4 AIR CONDITIONING COMPRESSOR

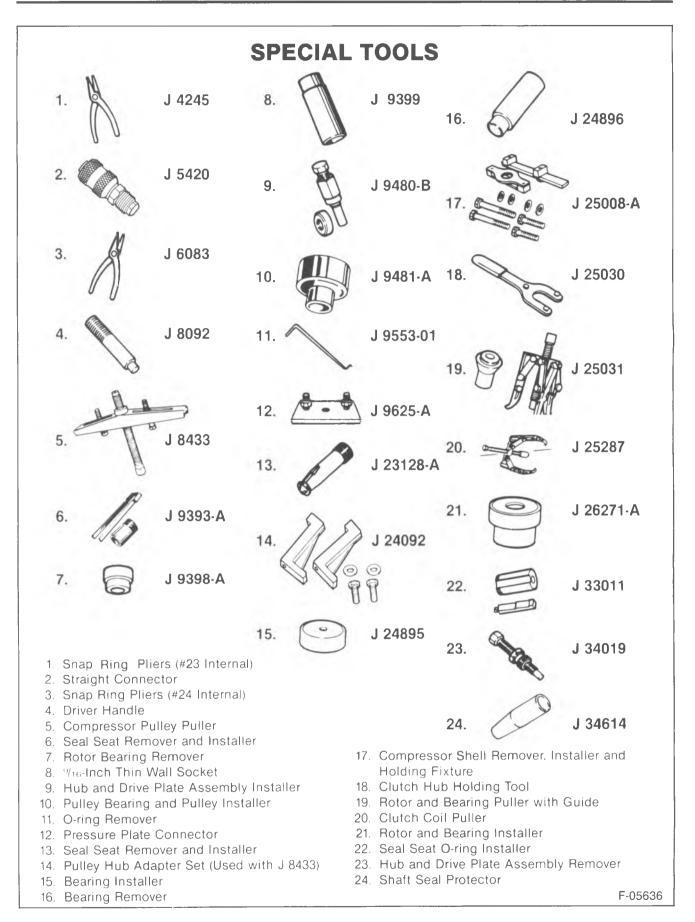

SECTION 1B4

DA-V5 AIR CONDITIONING COMPRESSOR

CONTENTS

SUBJECT

PAGE

Description	1B4- 1
Theory of Operation	1B4- 1
Minor Repair to the Compressor	1B4- 4
Clutch Plate and Hub Assembly Replacement	
Pulley and Bearing Assembly Replacement	
Clutch Coil Replacement	
Pressure Relief Valve Replacement	
High-Side Pressure and High-Side Low Pressure Cutoff Switches Replacement	
Control Valve Replacement	
Major Repair to the Compressor	1B4- 9
Shaft Seal Replacement	
Rear Head, Head Gasket, Rear Valve Plate, Suction Reed Plate and	
Cylinder to Rear Head Seal Replacement	1B4-11
Leak Testing	
Specifications	
Special Tools	

DESCRIPTION

When servicing the Harrison DA-V5 compressor, keep dirt and foreign material from getting on or into the compressor parts and system. Clean tools and a clean work area are important for proper service. The compressor connections and the outside of the compressor should be cleaned before any "on vehicle" repairs, or before removal of the compressor. The parts must be kept clean at all times and any parts to be reassembled should be cleaned with Trichloroethane, naptha, stoddard solvant, kerosene or equivalent solvent and dried with dry air. Use only lint free cloths to wipe parts.

Drain the compressor and measure the amount of oil. Replace with new 525 viscosity refrigerant oil. Refer to "Specifications" (figures 1, 2, 3 and 4).

NOTICE: Remove the oil drain plug to make sure the compressor is drained completely of oil (figure 1).

THEORY OF OPERATION

The DA-V5 is a variable displacement compressor that can match the automotive air conditioning demand under all conditions without cycling. The basic compressor mechanism is a variable angle wobble-plate with five axially oriented cylinders. The center of control of the compressor displacement is a bellows actuated control valve located in the rear head of the compressor that senses compressor suction pressure. The wobble-plate angle and compressor displacement are controlled by the crankcase-suction pressure differential. When the AC

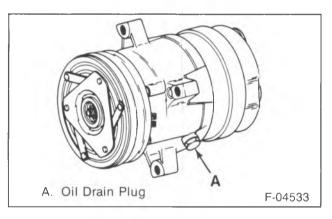


Figure 1—Mounting View

capacity demand is high, the suction pressure will be above the control point; the valve will maintain a bleed from crankcase to suction; no crankcase-suction pressure differential; and the compressor will have maximum displacement. When the AC capacity demand is lower and the suction pressure reaches the control point, the valve will bleed discharge gas into the crankcase and close off a passage from the crankcase to the suction plenum. The angle of the wobble-plate is controlled by a force balance on the five pistons. A slight elevation of the crankcase-suction pressure differential creates a total force on the pistons resulting in a movement about the wobble-plate pivot pin that reduces the plate angle.

The crankcase-suction bleed is routed through the rotating wobble-plate for lubrication of the wobble-plate

1B4-2 DA-V5 AIR CONDITIONING COMPRESSOR

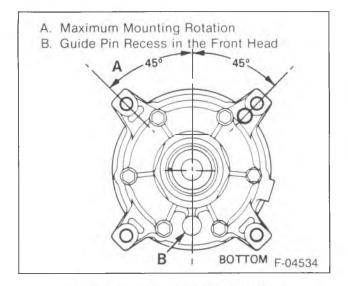


Figure 2—Front Head Orientation

bearing. The rotation acts as an oil separator, which removes some of the oil from the crankcase-suction bleed, rerouting it to the crankcase where it can lubricate the compressor mechanism.

Up to 0.113 kg (4 oz.) of oil can collect in the crankcase. Therefore, it is important when replacing a compressor that the oil in the old compressor crankcase be drained through the drain plug and measured (discard after recording amount).

All replacement compressors will be shipped from Harrison with 0.2268 kg (8 oz.) of oil in the crankcase. The oil must be drained and retained. Then replace the oil in the same amount as previously recorded from the old compressor. Refer to "Specifications."

IDENTIFICATION

An identification label attached to the compressor provides the name of the manufacturer, model number and build code. If the label is removed or becomes dislodged during service operation, reattach it using an adhesive sealant such as Loctite 312 or equivalent.

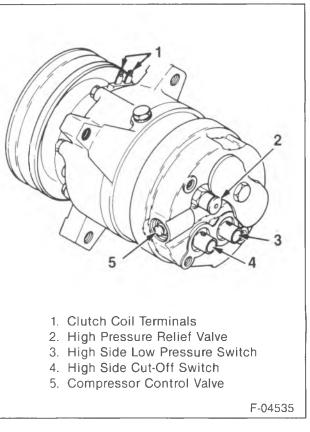


Figure 3—Rear Head Details

DA-V5 AIR CONDITIONING COMPRESSOR 1B4-3

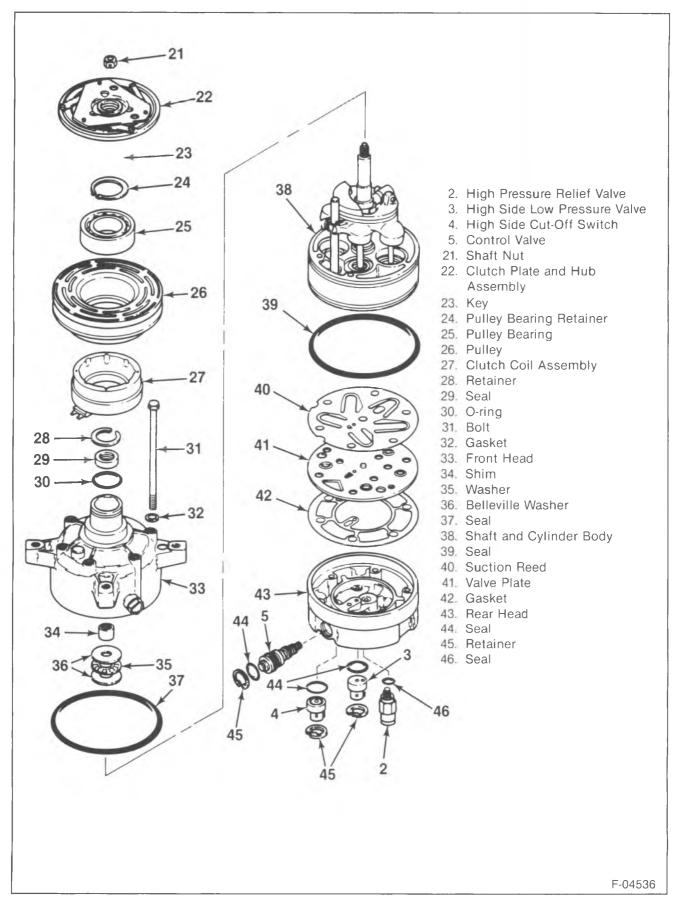


Figure 4—Compressor Component View

MINOR REPAIR TO THE COMPRESSOR

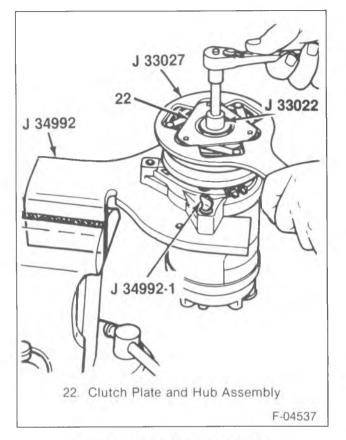


Figure 5—Removing the Shaft Nut

CLUTCH PLATE AND HUB ASSEMBLY REPLACEMENT

Clean

The compressor assembly with solvent and blow dry with dry air.

Remove or Disconnect (Figures 1, 5, and 6)

Tools Required:

J 33013-B Hub and Drive Plate Remover and Installer

- J 33022 6-Point 13 mm Socket
- J 33027 Clutch Hub Holding Tool
- J 34992 Compressor Holding Fixture
- Clamp J 34992 in a vise and attach the compressor
- to the holding fixture with thumb screws. 1. Shaft nut (21) using J 33022 (figure 5).
- Shaft nut (21) using J 33022 (figure 5).
 Hold the clutch plate and hub assembly (2)
- Hold the clutch plate and hub assembly (22) steady using J 33027.
- 2. Clutch plate and hub assembly (22).
 - Thread J 33013-B into the clutch plate and hub assembly (22).
 - Hold the body of J 33013-B with a wrench and tighten the center screw into the remover body (figure 6).
- 3. Shaft key (21).
 - Retain shaft key (21) if usable.

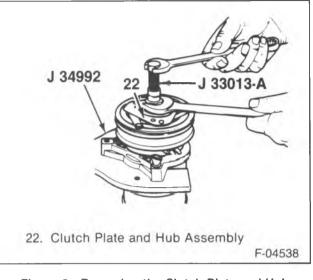


Figure 6—Removing the Clutch Plate and Hub Assembly

Inspect

All parts and replace as necessary.

++ Install or Connect (Figures 1, 7 and 8)

Tools Required:

- J 33013-B Hub and Drive Plate Remover and Installer
- J 33022 6-Point 13 mm Socket
- J 33027 Clutch Hub Holding Tool
- J 34992 Compressor Holding Fixture
- 1. Shaft key (21).
 - Allow the shaft key (21) to extend 3.2 mm (1/8-inch) out of the bottom of the hub keyway (figure 7).
 - The shaft key (21) is curved slightly to give an interference fit in the groove.

Important

- Do not drive or pound on the clutch hub or the shaft (38). Internal damage to the compressor may result.
- 2. Clutch plate and hub assembly (2) (figure 8).
 - Make sure the contact surfaces of the clutch plate (22) and the pulley (26) are clean.
 - Remove the forcing screw tip from J 33013-B and reverse the body direction on the center screw.
 - Install J 33013-B with bearing (B) (figure 8).
 - Back off J 33013-B body enough to allow the center screw to be threaded against the end of the compressor shaft (38).
 - Hold the center screw with a wrench and tighten the hex portion of J 33013-B body while pressing the hub onto the shaft (38). After tightening the body several turns, remove J 33013-B and check that the shaft key (21) is

DA-V5 AIR CONDITIONING COMPRESSOR 1B4-5

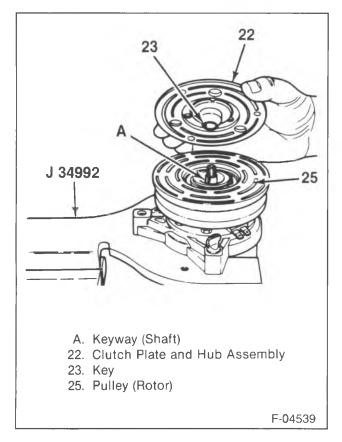


Figure 7—Removing the Clutch Plate and Hub and Shaft Key

properly in place in the keyway, then install the clutch plate and hub assembly (22) to its final position.

- Measure the air gap between contact surfaces of the clutch plate and hub asssembly (22) and the pulley (26). The gap should be 0.38-0.64 mm (0.015-0.025-inch).
- Remove J 33013-B.

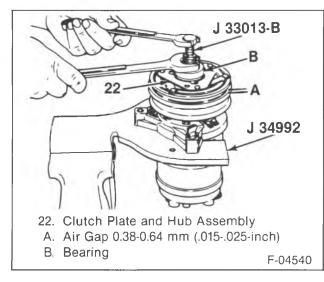


Figure 8—Installing the Clutch Plate and Hub Assembly

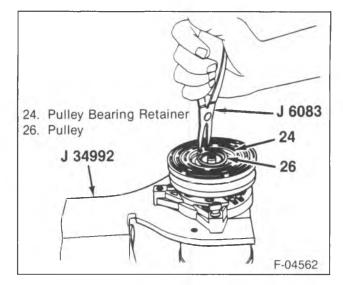


Figure 9—Removing the Pulley Rotor and Bearing Assembly Retaining Ring

Inspect

- Position of the shaft (38) (even with or slightly above the clutch hub).
- Use J 33027 to hold the clutch plate and hub assembly (22).

री Tighten

- Shaft nut (21) to 17 N/m (12 ft. lbs.) with J 33022.
- Hand spin the pulley (26) to check for free rotation.
- Remove the compressor from J 34992.

PULLEY AND BEARING ASSEMBLY REPLACEMENT

Remove or Disconnect (Figures 4, 9, 10, 11 and 12)

Tools Required:

- J 6083 Snap Ring Pliers
- J 8092 Driver Handle
- J 9398-A Pulley Bearing Remover
- J 33020 Pulley Puller
- J 33023-A Puller Pilot
- 1. Clutch plate and hub assembly (22).
- Pulley bearing retainer (24) using J 6083 (figure 9).
 Pulley (26).
 - Install J 33023-A to the front head (figure 10).
 - Install J 33020 tangs into the inner circle of slots in the pulley (26) contact surface. Rotate J 33020 clockwise so the tangs will lock into the segments between the slots (figure 11).
 - Hold J 33020 in place and tighten the puller screw against J 33023-A puller pilot to remove the pulley (26) (figure 11).
- 4. Pulley bearing (25) from the pulley (26) using J 9398-A and J 8092 (figure 12).
 - Remove the forcing screw from J 33020 and with the puller tangs still in place in the pulley slots, turn the assembly upside down onto a flat surface (figure 12).

1B4-6 DA-V5 AIR CONDITIONING COMPRESSOR

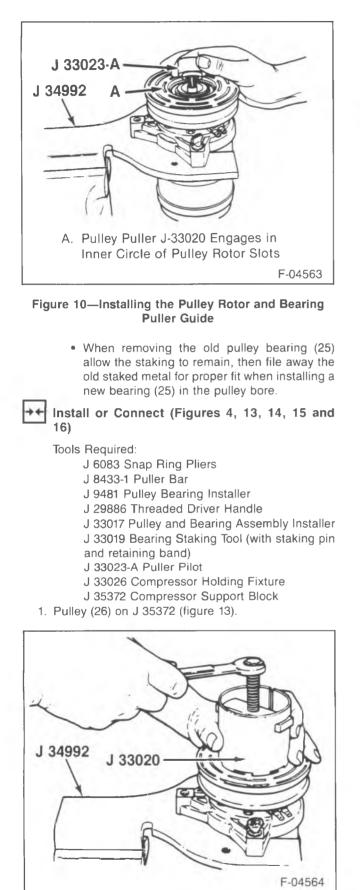


Figure 11—Removing the Pulley Rotor and Bearing Assembly

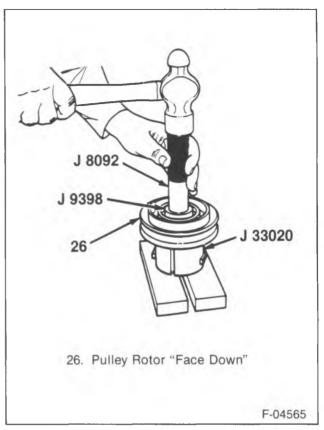


Figure 12—Removing the Bearing from the Pulley Rotor Assembly

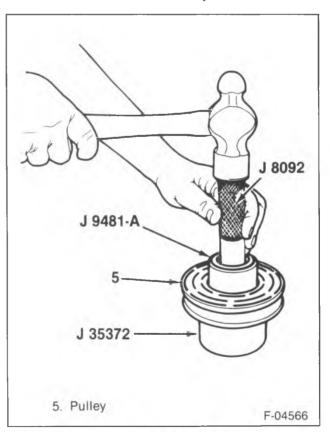


Figure 13-Installing the Pulley Rotor Bearing

DA-V5 AIR CONDITIONING COMPRESSOR 1B4-7

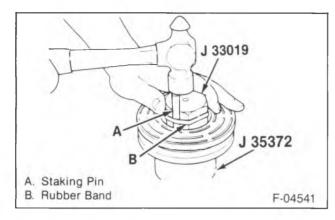


Figure 14—Staking the Pulley Bearing in the Pulley Bore

NOTICE: Do not support the rotor by resting the pulley rim on a flat surface during bearing installation or the rotor face will be bent.

- 2. Pulley bearing (25) into the hub using J 29886, J 9481-A and J 35372 (figure 13).
 - J 33019 in the pulley bore (figure 13).
 - Seat the pulley and bearing assembly on J 35372 to support to the hub under the staking pin location (figure 14).
 - Strike the staking pin with a hammer until a metal stake, similar to the original, is formed down to, but not touching the bearing.
 - Position the stake pin after striking.
 - The staked metal should not contact the outer race of the bearing to prevent the possibility of bending the outer race.
 - Stake 3 places 120 degrees apart (figure 15).
- 3. Pulley (26) on the front head.
 - Position J 33017 and J 33023 over the inner race of the bearing (figure 16).
 - Position J 8433-1 on J 33023 and assemble the through bolts and washers through the puller bar slots and thread them into J 33026 (figure 16).

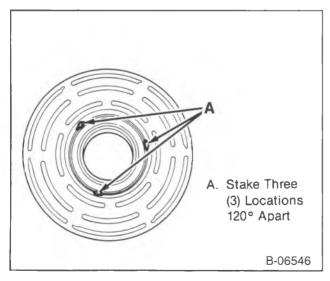


Figure 15—Bearing Stake Locations

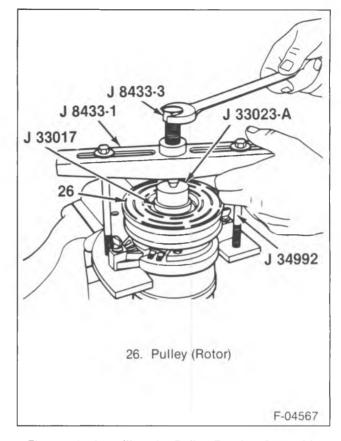


Figure 16—Installing the Pulley Bearing Assembly

- The thread of the through bolts should engage the full thickness of the compressor holding fixture.
- Tighten the center screw in J 8433-1 to force the pulley and bearing assembly onto the compressor front head (33).
 - Should J 33017 become misaligned with the inner race of the bearing, back off J 8433-1 and relocate center, then continue installation.
- 4. Pulley bearing retainer (24) using J 6083 (figure 9).
- 5. Clutch plate and hub assembly (22).

CLUTCH COIL ASSEMBLY REPLACEMENT

Remove or Disconnect (Figures 4 and 17)

Tools Required:

- J 8433-1 Puller Bar
- J 8433-3 Puller Screw
- J 33023-A Puller Pilot
- J 33025 Clutch Coil Puller Legs
- 1. Clutch plate and hub assembly (22).
- 2. Pulley (26).
 - Mark or scribe the location of the clutch coil (27) to terminal on the compressor front head (33).
- 3. Clutch coil assembly (27).
 - Install J 33023-A on the head (33) of the compressor.

1B4-8 DA-V5 AIR CONDITIONING COMPRESSOR

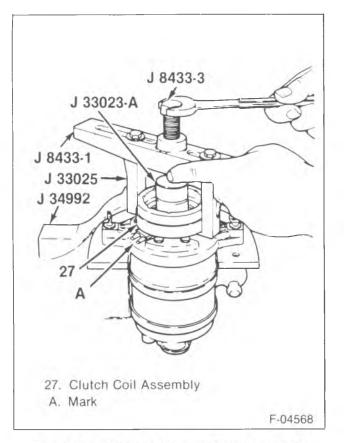


Figure 17-Removing the Clutch Coil Assembly

- Install J 8433-1 with J 33025 (figure 17).
- Tighten J 8433-3 forcing screw against J 33025.

Inspect

Clutch coil assembly (27). Replace as necessary.

Install or Connect (Figures 4, 18, 19 and 20)

Tools Required:

- J 8433-1 Puller Bar
- J 33024 Clutch Coil Installer Adapter
- Clutch coil assembly (27) onto the front head (33) with the terminals positioned at the "marked" location.
 - J 33024 over the internal opening of the clutch coil assembly (27) (figure 18).
 - J 8433-1 with through bolts, washers and forcing screw over J 33024.
 - Be sure J 8433-1 and the clutch coil assembly (27) stay "in line" during installation.
 - When the clutch coil assembly (27) is seated on the front head (33), use a 3 mm (¹/₈-inch) diameter drift punch to stake the head (33) at 3 places, 120 degrees apart to assure the clutch coil assembly (27) remains in position (figure 19).
 - Stake size should be one half the area of the punch tip and 0.28-0.35 mm (0.010-0.015-inch) deep (figure 20).
- 2. Pulley (24).
- 3. Clutch plate and hub assembly (22).

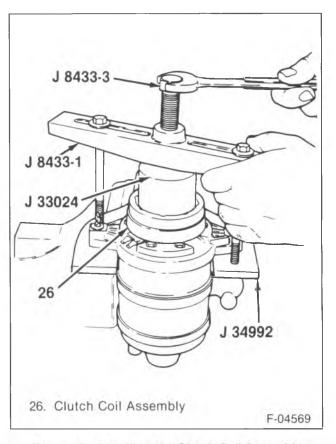


Figure 18—Installing the Clutch Coil Assembly

PRESSURE RELIEF VALVE REPLACEMENT



- Be sure the compressor has no charge.
- 1. Pressure relief valve (2).
- 2. O-ring seal (46).


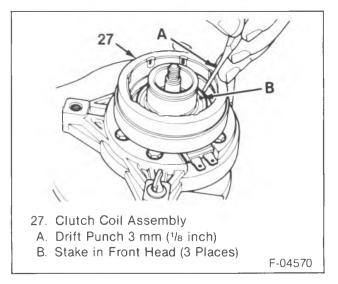


Figure 19—Staking the Clutch Coil to the Front Head

DA-V5 AIR CONDITIONING COMPRESSOR 1B4-9

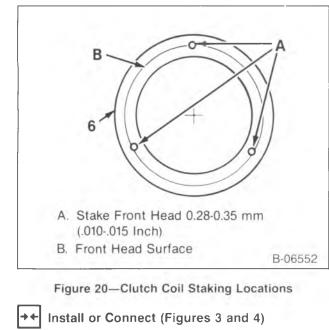

- Lubricate the threads of the pressure relief valve (2) and new O-ring seal with 525 viscosity refrigerant oil.
- 1. Pressure relief valve (2) with new O-ring seal.

၃ Tighten

· Pressure relief valve (2) to 9 N m (84 in. lbs.).

Important

- Leak test the compressor.
- Refer to "Leak Testing."

HIGH-SIDE PRESSURE AND HIGH-SIDE LOW-PRESSURE CUTOFF SWITCHES REPLACEMENT

Remove or Disconnect (Figures 3 and 4)

Tool Required: J 9553-01 O-ring Remover

- 1. Retainers (44) from switches (3) and (4).
- 2. Switches (3) and (4).
- 3. O-ring seals (44) from the switch cavities with J 9553-01.



→ ← l

· Switch cavity and O-ring seal groove.

Install or Connect (Figures 3 and 4)

Tools Required:

- J 5403 Snap Ring Pliers
- J 33011 O-ring Seal Installer
- O-ring seals (44) to the switch cavity with J 33011.
 Dip the O-ring seals into clean 525 refrigerant oil.
- 2. Switches (3) and (4).
- 3. Retainers (45).

CONTROL VALVE REPLACEMENT

Remove or Disconnect (Figures 3 and 4)

Tools Required:

- J 5403 Snap Ring Pliers
- J 9553-01 O-ring Seal Remover
- 1. Retainer ring with J 5403.
- 2. O-ring seal (44) with J 9553-01.
- 3. Valve (5).

++ Install or Connect (Figures 3 and 4)

- Tools Required: J 5403 Snap Ring Pliers
 - J 33011 O-ring Seal Installer
- 1. Valve (5).
- 2 O-ring seal (44) with J 33011.
 - Dip the seals into new clean 525 refrigerant oil.
- Retainer (45) with J 5403.

MAJOR REPAIR TO THE COMPRESSOR

Replacement of the shaft seal assembly or the pressure relief valve will require the discharge of the vehicle's refrigerating system (figure 21). Other than clutch repair procedures, the same holds true for any disassembly of the compressor. To discharge the refrigerant, refer to the vehicle service manual.

After servicing, add fresh 525 viscosity refrigerant oil equal to the amount drained from the compressor.

Keep the workbench and work area clean when servicing the compressor, and use proper, clean service tools.

NOTICE: Any attempt to use makeshift or inadequate service tools or equipment may result in damage and/or improper compressor operation. All parts used for servicing the compressor internally are protected by a preservative and packaged in a manner which does not require cleaning, washing or flushing. The parts can be used in the internal assembly as they are removed from the service package.

SHAFT SEAL REPLACEMENT



Remove or Disconnect (Figures 4, 22, 23 and 24)

Tools Required: J 5403 Snap Ring Pliers J 9553-01 O-Ring Seal Remover

1B4-10 DA-V5 AIR CONDITIONING COMPRESSOR

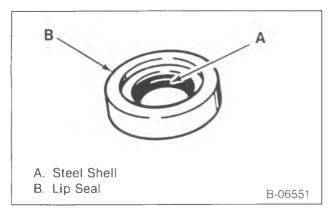


Figure 21—Compressor Shaft Seal Details

J 23128-A Seal Remover and Installer

- J 34614 Shaft Seal Protector
- 1. Clutch plate and hub assembly (22).
 - Install J 34614 over the threaded end of the shaft (38).
- 2. Shaft seal retainer ring using J 5403 (figure 22).
 - Clean the compressor neck area around the shaft (38), the exposed part of the shaft seal (29) and the O-ring seal groove.
- 3. Shaft lip seal using J 23128-A (figure 23).
 - Insert J 23128-A into the shaft lip seal, tighten and remove lip seal.
- 4. O-ring seal using J 9553-01 (figure 24).

Inspect

- · Make sure the compressor neck area is clean.
- · All parts. Replace as necessary.

Install or Connect (Figures 4 and 25)

Tools Required:

- J 5403 Snap Ring Pliers
- J 23128-A Seal Seat Remover and Installer
- J 33011 O-Ring Seal Installer
- J 34614 Shaft Seal Protector

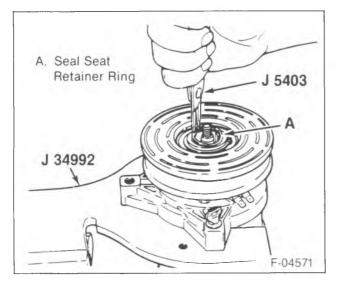


Figure 22—Removing or Installing the Shaft Seal Seat Retainer

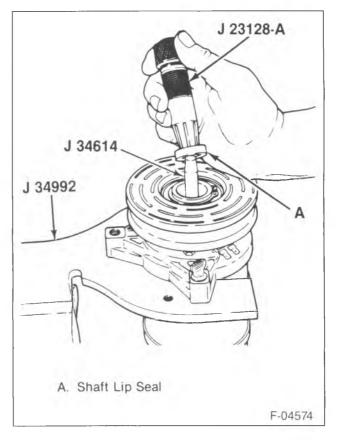


Figure 23—Removing or Installing the Shaft Seal

- Dip the new O-ring seal in clean 525 viscosity refrigerant oil.
- 1. J 34614 onto the shaft (38).
- 2. O-ring seal using J 33011 (figure 25).
 - Insert J 33011 into the compressor neck until the installer "bottoms."
 - Lower the movable slide of J 33011, releasing the O-ring seal into the lower groove.
 - Rotate J 33011 to seat the O-ring seal and remove J 33011.
- 3. Shaft lip seal using J 23128-A (figure 22).

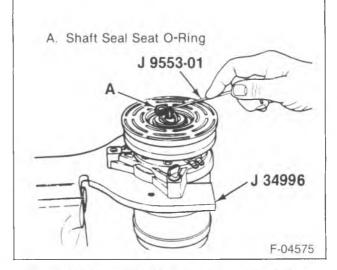


Figure 24—Removing the Shaft Seal Seat O-Ring

DA-V5 AIR CONDITIONING COMPRESSOR 1B4-11

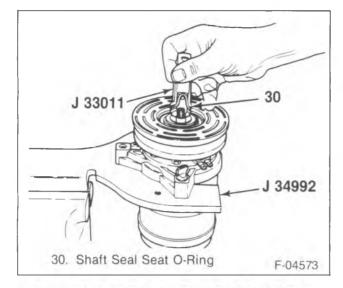


Figure 25-Installing the Shaft Seal Seat O-Ring

- Dip the shaft lip seal in clean 525 viscosity refrigerant oil and install the shaft lip seal on J 23128-A.
- Bottom the shaft lip seal into the compressor neck area using J 23128-A.
- 4. Shaft seal retainer ring using J 5403 (figure 21).
 - Install the flat side of the shaft seal retainer ring against the lip seal.
 - Remove J 34614.

Important

- · Leak test the compressor.
- Refer to "Leak Testing."

Clean

9

- Shaft (38) and inside the compressor neck area.
- 5. Clutch plate and hub assembly (22).

FRONT HEAD SEAL, REAR HEAD GASKET, REAR VALVE PLATE, SUCTION REED PLATE AND REAR HEAD SEAL REPLACEMENT

Remove or Disconnect (Figures 4 and 26)

- 1. Clutch drive and hub assembly (22).
- 2. Pulley (26) and bearing (25).
- 3. Clutch coil assembly (27).
- 4. Shaft seal (29)
- 5. Through bolts (31).
- 6. Front head (33) from the shaft and cylinder body (38).
 - Using a wood block, tap around the edge of the front head (33) to remove.
- 7 Rear head (43), head gasket (42), rear valve plate (41), suction reed plate and cylinder-to-rear head seal (39).
 - Using a wood block, tap around the edge of the rear head to remove (figure 26).

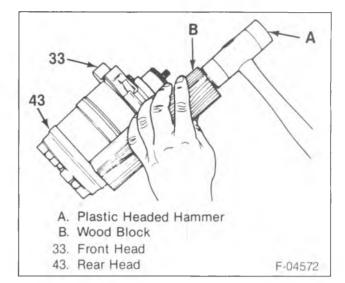


Figure 26—Tapping the Front or Rear Head Free of the Cylinder

Install or Connect (Figures 4, 27 and 28)

Tools Required:

- J 9625-A Pressure Test Set with Schrader Valve
 - J 33016 Cylinder Alignment Rods
- J 35372 Support Block
- Use new seals and gaskets.
- Place the rear head on J 35372 with the control valve (5) facing the technician.
- Cylinder Alignment Rods J 33016 in the mounting hole facing the technician and at the upper left position (figure 27).
- 2. Gasket (42) (figure 28).
 - Place the elongated hole in the gasket over the rod at the upper left position.
- 3. Rear valve plate (41).
 - Place the elongated hole in the valve plate over the rod at the upper left position.
- 4 Suction reed plate (40).
 - Place the elongated hole in the plate over the rod at the upper left position.
 - Remove J 33016 Cylinder Alignment Rod from the hole facing the technician.
- 5. Seals (39 and 37) to the shaft and cylinder body grooves (38).
 - Dip the seals into 525 viscosity refrigerant oil.
- 6. Shaft and cylinder body (38) to the rear head (43).
 - Locate the relief boss at the rod in the hole at the upper left position.
- 7. Belleville washer (35) and washers (36).
- 8. Shim (34).
- 9. Front head (33).
 - Locate the relief boss at the pin in the hole at the upper left position.
 - Remove J 33016 Cylinder Alignment Rod from the hole at the upper left position.
- 10. Through bolts (31) and gaskets (32).



Bolts (31) alternately to 9 N m (80 in. lbs.).
11. Refrigerant oil to the compressor.

1B4-12 DA-V5 AIR CONDITIONING COMPRESSOR

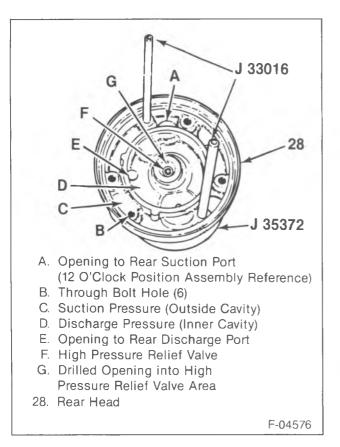


Figure 27—Positioning the J 33016 Guide Pins

- 12. Test plate J 9625-A.
 - Leak test. Refer to "Leak Testing."

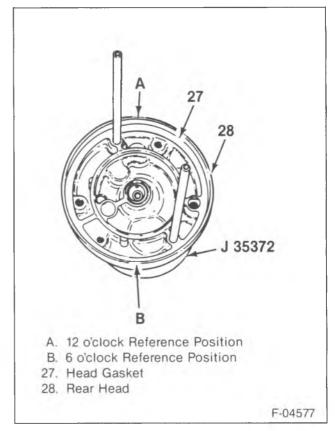


Figure 28—Installing the Rear Head Gasket

LEAK TESTING

Tools Required:

- J 9625-A Pressure Test Plate
- J 23500-01 Portable Charging Station
- J 34492 Compressor Holding Fixture
- Be sure the compressor has no oil internally.
- 1. Install J 9625-A on the rear head of the compressor.
- 2. Install the center hose of the manifold gage set on J 23500-01 to a refrigerant drum standing in an upright position and open the valve on the drum.
- 3. Install the charging station high and low pressure lines to the corresponding fittings on J 9625-A using gage adapters or hoses equipped with valve depressors. The suction port (low side) of the compressor has a large internal opening. The discharge port (high side) has a smaller internal opening into the compressor.
- Open the low pressure control, high pressure control and the refrigerant control on the charging station to allow the refrigerant vapor to flow into the compressor.

] Important

- Check for leaks at the pressure relief valve (2), compressor front and rear head seals (37) (39), through bolt head gaskets (32) and compressor shaft seal (29).
- After the leak check, shut off the low pressure control and the high pressure control on charging station.
- If an external leak is present, perform the necessary correction and recheck for leaks.
- Loosen the manifold gage hose connections to the gage adapters connected to the low and high sides and allow the vapor pressure to release from the compressor. If valve depressor type hoses are used, loosen the hose connections at the gage manifold to release the vapor pressure from the compressor.
- Disconnect both gage adapters or hoses from J 9625-A.
- Add 0.085 kg (3 oz.) new 525 viscosity refrigerant oil to the compressor assembly. Rotate the complete compressor assembly (not the shaft or drive plate hub) slowly several turns to distribute oil to all cylinder and piston areas.

DA-V5 AIR CONDITIONING COMPRESSOR 1B4-13

- Install the shaft nut (21) on the compressor shaft (38) if the pulley assembly and clutch plate and hub assembly are not installed.
- Using a box-end wrench, or a socket and handle, rotate the compressor shaft (38) several turns to lubricate the pistons and cylinder walls.
- Connect the charging station high-pressure line, or a high-pressure gage and gage adapter to J 9625-A high-side connector.
- Attach an adapter or depressor-type hose to the suction or low-pressure port of J 9625-A to open the Schrader-type valve. Oil will drain out of the compressor suction port adapter if the compressor is positioned with the suction port downward.
- Attach the compressor to J 34992 fixture and mount the compressor in a vise so that the compressor will be in a horizontal position and the shaft (38) can be turned with a wrench.
- Rotate the compressor shaft (38) or drive plate hub six to eight complete revolutions at a speed of approximately one revolution per second. A slower rotation can result in a lower pump-up pressure and disgualify a good pumping compressor.

- Observe the reading on the high-pressure gage at the completion of the tenth revolution of the compressor shaft (38). The pressure reading for a good pumping compressor should be 690 kPa (100 psi) or above. A pressure reading of less than 620 kPa (90 psi) would indicate one or more suction and/or discharge valves leaking, an internal leak, or an inoperative valve. Disassemble the compressor and repair as necessary. Reassemble and repeat the pump-up test.
- Following the pressure pump-up test, release the air pressure from the high side and remove the gage adapters and J 9625-A test plate.
- Tilt the compressor to place the suction and discharge ports downward to allow oil to drain from the compressor.
- Allow a 10-minute drain period and then charge the compressor with the proper amount of oil. Pour the new 525 viscosity refrigerant oil into the suction port.
- If furthjer assembly or processing is required, install a shipping plate or test plate J 9625-A to protect the compressor from contamination.


SPECIFICATIONS

Type — Harrison DA-V5.	Cylinder Axial
Displacement	
Rotation	
525 Viscosity Compressor Oil (Full Charge)	0.226 8 kg (8 oz.)

TORQUE SPECIFICATIONS

Compressor Suction and Discharge Connector Bolt	.34 N m (25 ft. lbs.)
Shaft Nut	.17 N m (12 ft. lbs.)
Pressure Relief Valve	.9 N m (80 in. lbs.)
Through Bolts.	.9 N m (80 in. lbs.)
Oil Drain Plug	.16 N m (12 ft. lbs.)

1B4-14 DA-V5 AIR CONDITIONING COMPRESSOR

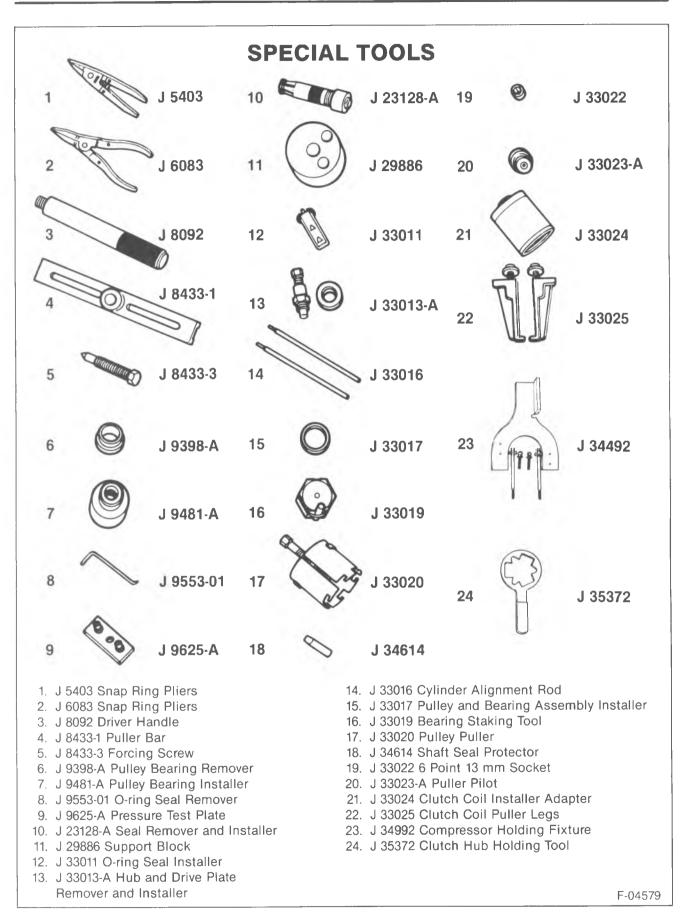

SECTION 1B5

HR-6 AIR CONDITIONING COMPRESSOR

CONTENTS

SUBJECT

PAGE

Description	
Minor Repair to the Compressor	1 B 5- 3
Clutch Plate and Hub Assembly Replacement	
Pulley and Bearing Assembly Replacement	1B5 - 4
Clutch Coil and Housing Assembly Replacement	1B5- 6
Major Repair to the Compressor	1B5- 8
Shaft Seal Replacement	1 B 5- 8
Pressure Relief Valve Replacement	1B5-10
Compressor Disassembly—Internal Cylinder and Shaft	1B5-10
Compressor Assembly—Internal Cylinder and Shaft	
Leak Testing	
Specifications	1B5 -15
Special Tools	1B5 -16

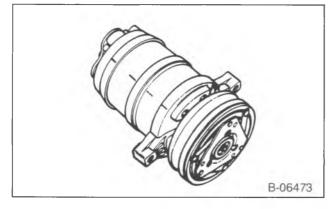


Figure 1—HR-6 Compressor, V-Groove Pulley and Standard Mounting

The Harrison HR-6 compressor is a fixed displacement axial piston pump, with three double-ended pistons actuated by an axial (swash) plaste shaft assembly (figure 1). The main parts are the front and rear cylinder, the shaft and axial swash plate, piston group, and valve mechanisms. The cylinders and heads provide an integral external shell.

The piston group of the compressor is not serviceable. If piston, bearing, ball shoe, shaft and axial plate, or cylinder repair is needed, replace the internal cylinder assembly. All clutch parts, valve mechanisms, and head assemblies are serviceable, plus seals and gaskets.

Refrigerant oil, dispersed in the refrigerant vapor, lubricates the system.



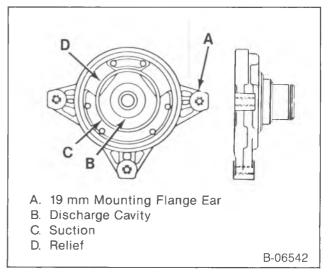


Figure 2—HR-6 Front Head Assembly

The front head is shown with three integral mounting flange ears (figure 2). These ears have 19 mm flats cast to provide for a wrench to be used as a prying means when tensioning the compressor drive belt.

There are two clutch driver designs for the HR-6 compressor: The clutch driver without a torque cushion and the clutch driver having a thin torque cushion (figures 3 and 4).

Note: When servicing clutch drivers with a torque cushion, the clutch hub holding tool J 25030 is used in place of J 33027.

1B5-2 HR-6 AIR CONDITIONING COMPRESSOR

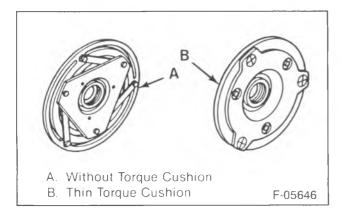


Figure 3—HR-6 Clutch Driver Designs

Keep dirt or foreign material from getting on or into the compressor parts and system. Keep the work area and tools clean.

Keep the parts clean at all times. Clean assembled parts with Trichloroethane, naphtha, Stoddard solvent,

kerosene or equivalent solvent and dry with dry air. Use only lint free cloths to wipe parts.

Drain and measure the refrigerant oil. Add new 525 viscosity refrigerant oil to the compressor. Refer to "Specifications."

IDENTIFICATION

An identification label attached to the compressor provides the name of the manufacturer, model number and build code. If the label is removed or becomes dislodged during service operation, reattach it using an adhesive sealant such as Loctite 312 or equivalent.


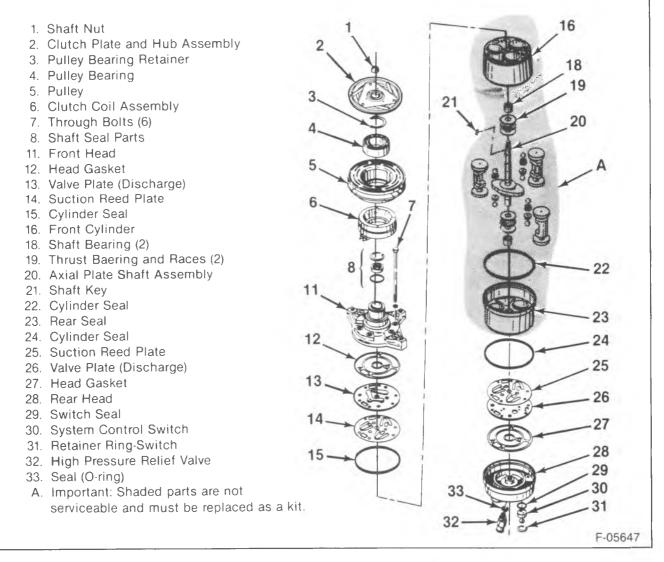


Figure 4—HR-6 Component View

MINOR REPAIR TO THE COMPRESSOR



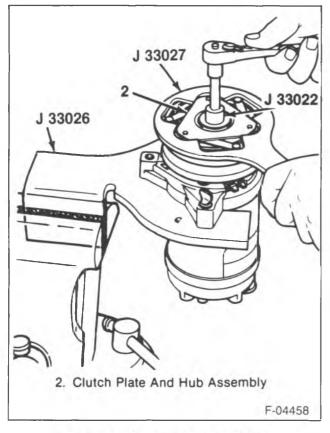

Illustrations show the compressor removed from the vehicle for easier viewing.

Remove only the parts that need servicing. Refer to figure 3 for part names and location.

CLUTCH PLATE AND HUB ASSEMBLY REPLACEMENT

🖵 Clean

 The compressor assembly with solvent and blow dry with dry air.

Remove or Disconnect (Figures 4, 5 and 6)

Tools Required:

- J 33026 Compressor Holding Fixture
- J 33027 Clutch Hub Holding Tool
- J 33022 6-Point 13 mm Socket
- J 33013-B Hub and Drive Plate Remover and Installer.
- Clamp J 33026 in a vise and attach the compressor to the holding fixture with thumb screws (figure 5).
- 1. Shaft nut (1) using J 33022 (figure 5).
 - Hold the clutch plate and hub assembly (2) steady using J 25030.
- 2. Clutch plate and hub assembly (2).
 - Thread J 33013-B into the clutch plate and hub assembly (2).

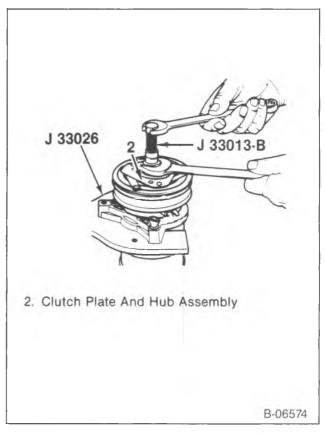


Figure 6—Removing the Clutch Plate and Hub Assembly

- Hold the body of J 33013-B with a wrench and tighten the center screw into the remover body (figure 6).
- 3. Shaft key (21).
 - Retain shaft key (21) if usable.

Inspect

· All parts and replace as necessary.

++ Install or Connect (Figures 4, 7 and 8)

- Tools Required:
 - J 33026 Compressor Holding Fixture
 - J 33027 Clutch Hub Holding Tool
 - J 33022 6-Point 13 mm Socket
 - J 33013-B Hub and Drive Plate Remover and Installer
- 1. Shaft key (1).
 - Allow the shaft key (21) to extend 3.2 mm (1/8-inch) out of the bottom of the hub keyway (figure 7).
 - The shaft key is curved slightly to give an interference fit in the groove.

Important

- Do not drive or pound on the clutch hub or the shaft (20). Internal damage to the compressor may result.
- 2. Clutch plate and hub assembly (2) (figure 8).

1B5-4 HR-6 AIR CONDITIONING COMPRESSOR

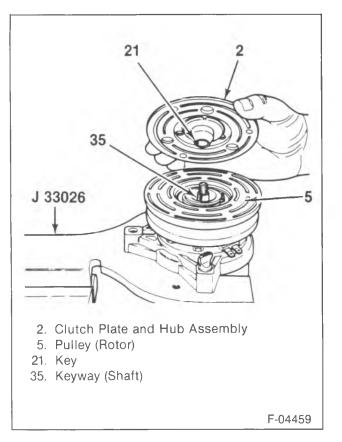


Figure 7—Positioning the Shaft Key, Clutch Plate, and Hub Assembly

- Make sure the contact surfaces of the clutch plate (2) and the pulley (5) are clean.
- Remove the forcing screw tip from J 33013-B and reverse the body direction on the center screw.
- Install J 33013-B with bearing (figure 8).
- Back off J 33013-B body enough to allow the center screw to be threaded against the end of the compressor shaft.
- Hold the center screw with a wrench and tighten the hex portion of J 33013-B body while pressing the hub onto the shaft. After tightening the body several turns, remove J 33013-B and check that the shaft key (21) is properly in place in the keyway, then install the clutch plate and hub assembly (2) to its final position.
- Measure the air gap between contact surfaces of the clutch plate and hub assembly (2) and the pulley (5). The gap should be 0.38-0.64 mm (0.015-0.025-inch) (figure 8).
- Remove J 33013-B.

Inspect

- Position of the shaft (20) (even with or slightly above the clutch hub).
- Use J 33027 to hold the clutch plate and hub assembly (2).

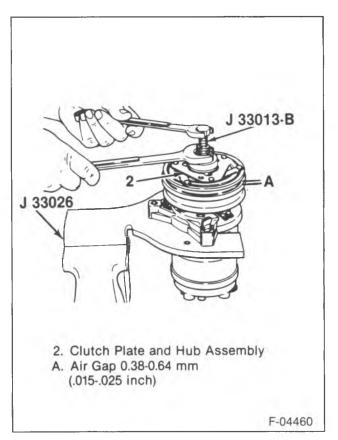


Figure 8—Installing the Clutch Plate and Hub Assembly

L Tighten

- Shaft nut (1) to 16 N-m (12 ft. lbs.) with J 33022.
- Hand spin the pulley (5) to check for free rotation.
- Remove J 33026.

PULLEY AND BEARING ASSEMBLY REPLACEMENT

Remove or Disconnect (Figures 4, 9, 10, 11 and 12)

Tools Required:

- J 6983 Snap Ring Pliers
- J 8092 Driver Handle
- J 9398-A Pulley Bearing Remover
- J 33020 Pulley Puller
- J 33023-A Puller Pilot
- 1. Clutch plate and hub assembly (2).
- 2. Pulley bearing retainer (3) using J 6083 (figure 9).
- 3. Pulley (5).
 - Install J 33023-A to the front head (figure 10).
 - Install J 33020 tangs into the inner circle of slots in the pulley (5) contact surface. Rotate J 33020 clockwise so the tangs will lock into the segments between the slots (figure 11).
 - Hold J 33020 in place and tighten the puller screw against J 33023-A puller pilot to remove the pulley (5) (figures 11 and 12).

HR-6 AIR CONDITIONING COMPRESSOR 1B5-5

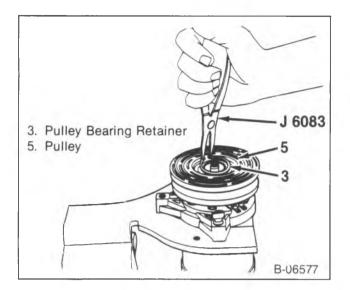


Figure 9—Removing the Pulley Rotor and Bearing Retaining Ring

- 4. Pulley bearing (4) from the pulley (5) using J 9398-A and J 29886 (figure 12).
 - Remove the forcing screw from J 33020 and with the puller tangs still in place in the pulley slots, turn the assembly upside down onto a flat surface (figure 12).
 - When removing the old pulley bearing (5) allow the staking to remain, then file away the old staked metal for proper fit when installing a new bearing (5) in the pulley bore.

Tools Required:

- J 21352-A Compressor Support Block
- J 9481-A Pulley Bearing Installer
- J 33019 Bearing Staking Tool (with staking pin and retaining band)
- J 33017 Pulley and Bearing Assembly Installer J 33023-A Puller Pilot

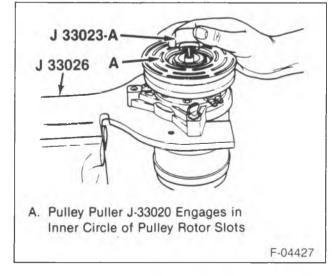


Figure 10—Installing the Puller Pilot and Pulley Rotor Slot Location

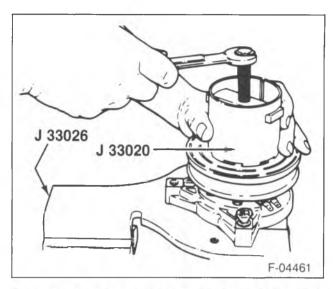


Figure 11-Installing J-33020 in the Pulley Rotor Slots

- J 8433-1 Puller Bar
- J 33026 Compressor Holding Fixture
- J 6083 Snap Ring Pliers
- 1. Pulley (5) on J 21352-A.

NOTICE: Do not support the rotor by resting the pulley rim on a flat surface during bearing installation or the rotor face will be bent.

2. Pulley bearing (4) into the hub using J 29886, J 9481-A and J 21352-A (figure 13).

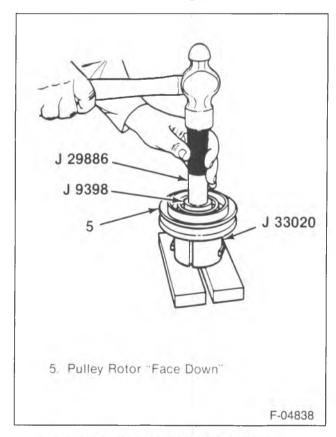


Figure12—Removing the Pulley Bearing

1B5-6 HR-6 AIR CONDITIONING COMPRESSOR

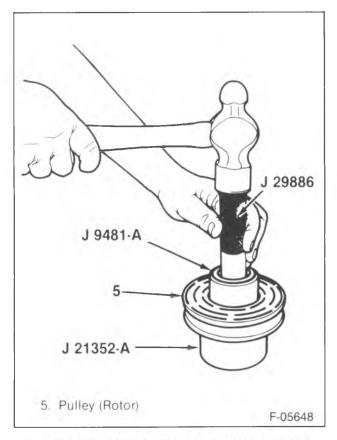


Figure 13-Installing the Pulley Rotor Bearing

- J 33019-1 in the pulley bore (figure 14).
- Seat the pulley and bearing assembly on J 21352-A to support to the hub under the staking pin location.
- Strike the staking pin with a hammer until a metal stake, similar to the original, is formed down to, but not touching the bearing.
 - Position the stake pin after striking.

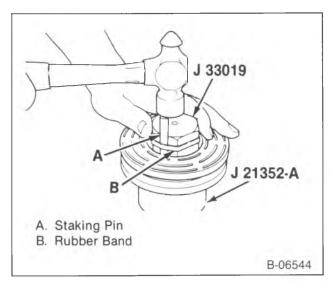


Figure 14—Staking the Pulley Bearing in the Rotor Bore

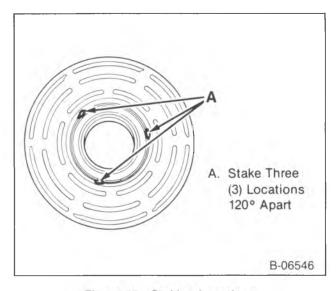


Figure 15—Staking Locations

- The staked metal should not contact the outer race of the bearing to prevent the possibility of bending the outer race.
- Stake 3 places 120 degrees apart (figure 15).
- 3. Pulley (5) on the front head.
 - Position J 33017 and J 33023-A over the inner race of the bearing (figure 16).

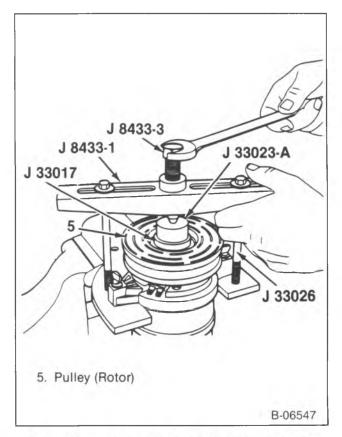


Figure 16-Installing the Pulley Bearing Assembly

HR-6 AIR CONDITIONING COMPRESSOR 1B5-7

- Position J 8433-1 on J 33023-A and assemble the through bolts and washers through the puller bar slots and thread them into J 33026 (figure 16).
 - The thread of the through bolts should engage the full thickness of J 33026.
- Tighten the center screw in J 8433-1 to force the pulley and bearing assembly onto the compressor front head (11) (figure 16).
 - Should J 33017 become misaligned with the inner race of the bearing, back off J 8433-1 and relocate center, then continue installation.
- 4. Pulley bearing retainer (3) using J 6083 (figure 9).
- 5. Clutch plate and hub assembly (2).

CLUTCH COIL AND HOUSING ASSEMBLY REPLACEMENT

- Remove or Disconnect (Figures 4 and 17) Tools Required:
 - J 8433-1 Puller Bar
 - J 08433-3 Puller Screw
 - J 33023-A Puller Pilot
 - 1 22025 All diler Hild
- J 33025 Clutch Coil Puller Legs 1. Clutch plate and hub assembly (2).
- 2. Pulley (5).
 - Mark or scribe the location of the clutch coil (6) to terminal on the compressor front head (11).
- 3. Clutch coil assembly (6).
 - Install J 33023-A on the head (11) of the compressor.
 - Install J 8433-1 with J-33025 (figure 17).
 - Tighten J 8433-1 forcing screw against J 33025-A.

Inspect

- Clutch coil assembly (6). Replace as necessary.
- Install or Connect (Figures 4, 18, 19 and 20) Tools Required:
 - J 8433-1 Puller Bar
 - J 33024 Clutch Coil Installer Adapter.
 - J 33026 Compressor Holding Fixture
 - 1. Compressor assembly on J 33026.
 - 2. Clutch coil assembly (6) onto the front head (11) with the terminals positioned at the "marked" location.
 - J 33024 over the internal opening of the clutch coil assembly (6).
 - J 8433-1 with through bolts, washers and forcing screw over J 33024.
 - Thread through bolts into J 33026 to full fixture thickness (figure 18).
 - Be sure J 8433-1 and the clutch coil assembly (6) stay "in line" during installation.
 - When the clutch coil assembly (6) is seated on the front head (11), use a 3 mm (1/8-inch) diameter drift punch to stake the head (11) at 3 places, 120 degrees apart to assure the clutch coil assembly (6) remains in position (figure 19).

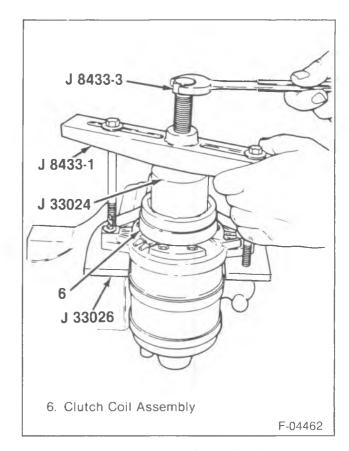


Figure 17—Removing the Clutch Coil Assembly

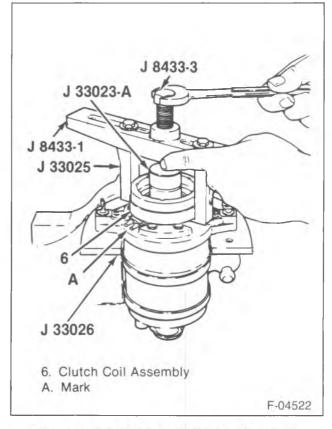


Figure 18-Installing the Clutch Coil Assembly

1B5-8 HR-6 AIR CONDITIONING COMPRESSOR

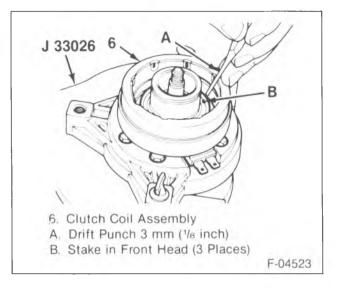


Figure 19—Staking the Clutch Coil Assembly to the Coil Head

- Stake size should be one half the area of the punch tip and 0.28-0.35 mm (0.010-0.015-inch) deep (figure 20).
- 3. Pulley (5).
- 4. Clutch plate and hub assembly (2).

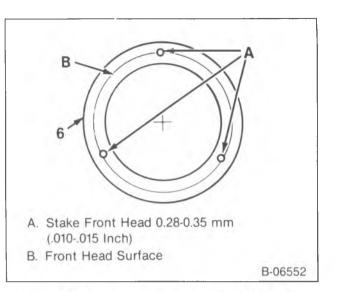


Figure 20—Staking Locations on the Front Head

MAJOR REPAIR TO THE COMPRESSOR

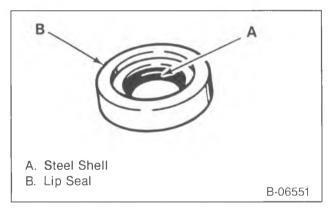


Figure 21—Compressor Shaft Seal

Replacement of the shaft seal assembly or the pressure relief valve will require the discharge of the vehicle's refrigerating system (figure 21). Other than clutch repair procedures, the same holds true for any disassembly of the compressor. To discharge the refrigerant, refer to the vehicle service manual.

After servicing or repairing the compressor, always add the proper amount of new 525 viscosity refrigerant oil. Refer to "Specifications."

Keep the workbench and work area clean when servicing the compressor, and use proper, clean service tools. NOTICE: Any attempt to use makeshift or inadequate service tools or equipment may result in damage and/or improper compressor operation.

All parts used for servicing the compressor internally are protected by a preservative and packaged in a manner which does not require cleaning, washing or flushing. The parts can be used in the internal assembly just as they are removed from the service package.

SHAFT SEAL REPLACEMENT

Remove or Disconnect (Figures 4, 22, 23 and 24)

Tools Required:

- J 5403 Snap Ring Pliers
- J 34614 Shaft Seal Protector
- J 23128-A Seal Remover and Installer
- J 9553-01 O-Ring Seal Remover.
- 1. Clutch plate and hub assembly (2).
 - Install J 34614 over the threaded end of the shaft (20).
- 2. Shaft seal retainer ring using J 5403 (figure 22).
 - Clean the compressor neck area around the shaft (20), the exposed part of the shaft seal (8) and the O-ring seal groove.
- 3. Shaft lip seal using J 23128-A (figure 23).

A. Seal Seat Retainer Ring J 33026 F-04524

Figure 22—Removing or Installing the Shaft Lip Seal Retaining Ring

- Insert J 23128-A into the shaft lip seal, tighten and remove lip seal.
- 4. O-Ring seal using J 9553-01 (figure 24).

Inspect

- Make sure the compressor neck area is clean.
- All parts. Replace as necessary.


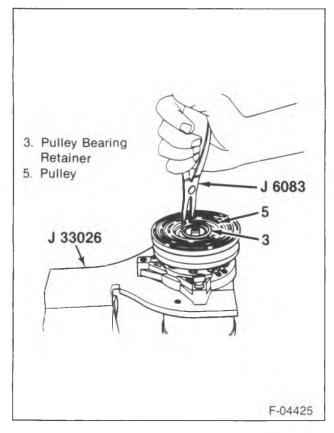


Figure 23—Removing or Installing the Shaft Tip Seal

HR-6 AIR CONDITIONING COMPRESSOR 1B5-9

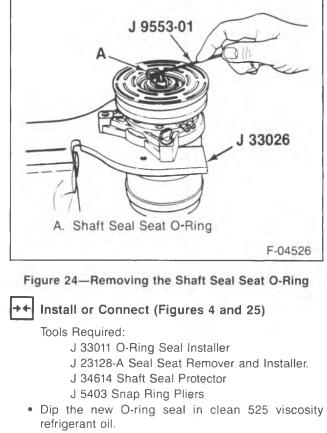

- J 34614 onto the shaft (20).
- 1. O-ring seal using J 33011 (figure 25).
 - Insert J 33011 into the compressor neck until the installer "bottoms."
 - Lower the movable slide of J 33011, releasing the O-ring seal into the lower groove.
 - Rotate J 33011 to seat the O-ring seal and remove J 33011.
- 2. Shaft lip seal using J 23128-A (figure 23).
 - Dip the shaft lip seal in clean 525 viscosity refrigerant oil and install shaft lip seal on J 23128-A.

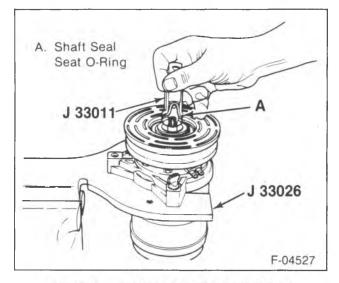


Figure 25—Installing the Seal Seat O-Ring

1B5-10 HR-6 AIR CONDITIONING COMPRESSOR

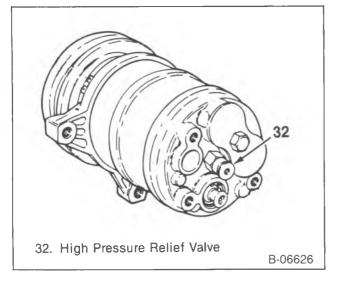


Figure 26—HR-6 Compressor Rear Head Detail

- · Bottom the shaft lip seal into the compressor neck area using J 23128-A.
- Release and remove J 23128-A.
- 3. Shaft seal retainer ring using J 5403 (figure 22).
 - · Install flat side of shaft seal retainer ring against the lip seal.
 - Remove J 34614.

Important

- Leak test the compressor.
- · Refer to "Leak Testing.".

Clean

- Shaft (20) and inside the compressor neck area
- 4. Clutch plate and hub assembly (2).


PRESSURE RELIEF VALVE REPLACEMENT



Remove or Disconnect (Figures 4 and 26)

- Be sure the compressor has no charge.
- 1. Pressure relief valve (32).
- 2. O-ring seal (33).

Install or Connect (Figures 4 and 26)

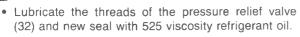

1. Pressure relief valve (32) with new seal.

Ð Tighten

Pressure relief valve (32) to 9 N m (84 in. lbs.).

Important

- · Leak test the compressor.
- · Refer to "Leak Testing."


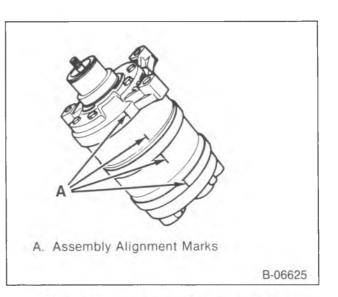


Figure 27—Compressor Alignment Marks

COMPRESSOR DISASSEMBLY —INTERNAL CYLINDER AND SHAFT


Remove or Disconnect (Figures 4, 27, 28, 29 and 30)

- Mark the front head (11) alignment with cylinders (16) (23) and rear head (28) alignment.
- 1. Clutch plate and hub assembly (2).
- 2. Pulley (5).
- 3. Clutch coil assembly (6).
- 4. Shaft seal parts (8).
 - · Note the compressor alignment marks and use them as a reference for compressor assembly (figure 27).
- 5. Through bolts (7) and gaskets (figure 28).
 - · Hand-support the compressor from below.
 - · Remove compressor assembly from J 33026.
- 6. Rear head (28) (figure 29).
 - · Using a wood block, tap around the edge of the rear head (28) to ease removal.
 - · Mount the compressor on J 33026 front head (11) down (figure 30).
- 7. Head gasket (27).

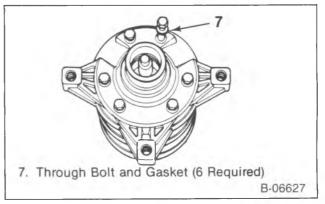



HR-6 AIR CONDITIONING COMPRESSOR 1B5-11

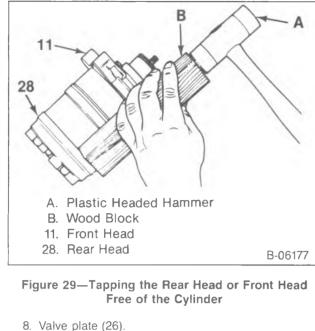

- 9. Suction reed plate (25).
- 10. Cylinder seal (24).
- 11. Cylinder (23).

8 Important

- · Shaded parts shown in figure 3 are not serviceable. A replacement kit (gut pack) is available.
- Cylinders (23) (16), cylinder seal (22), discharge crossover seal (17), piston group, axial plate shaft assembly (20) and bearings replace as a kit.
- 12. Cylinder seal (22)
- 13. Cylinder (16).
- 14. Cylinder seal (15).
- 15. Suction reed plate (14).
- 16. Valve plate (13).
- 17. Head gasket (12)
- 18. Front head (11).



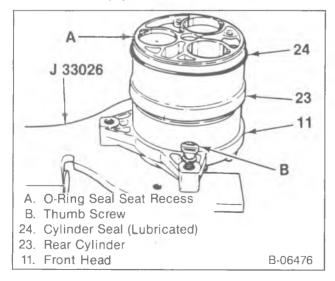


Figure 30-Installing the O-Ring Seals on the **Cylinder Seal Races**



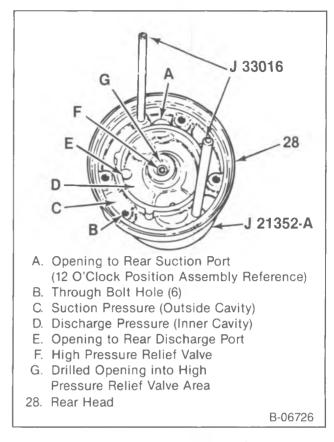

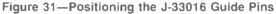

]6 Inspect

All parts and replace as necessary.

COMPRESSOR ASSEMBLY -INTERNAL CYLINDER AND SHAFT

++	Install	or	Connect	(Figures	4,	31	through	39)
----	---------	----	---------	----------	----	----	---------	-----

Tools Required:

- J 21352-A Support Block
- J 33016 Cylinder Alignment Rods
- J 33026 Compressor Holding Fixture
- Use new seals and gaskets.
- Place J 21352-A on the workbench or suitable flat work surface.
- 1. Rear head (28) onto J 21352-A.
 - Install J 33016 guide pins small diameter ends into the through bolt holes (figure 31).
- 2. Head gasket (27).

• Over guide pins into head (28) (figure 32).

Important

 Locate the head gasket (27) to prevent the discharge valve reed retainer on the rear valve plate (26) from hitting the internal segment of the head gasket (27) (figure 32).

1B5-12 HR-6 AIR CONDITIONING COMPRESSOR

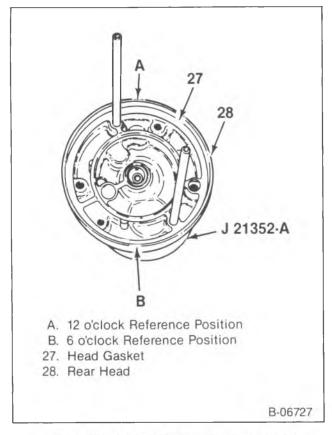


Figure 32—Installing the Rear Head Gasket

- 3. Valve plate (26).
 - Over the guide pins into position (figure 33).
- 4. Suction reed plate (25).
 - Over the guide pins into proper position (figure 34).
 - Be sure all three suction reed tips cover the suction ports in the rear valve plate (26).
- 5. Cylinder seal (24).

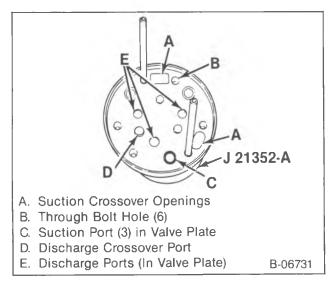


Figure 33—Installing the Rear Valve Plate

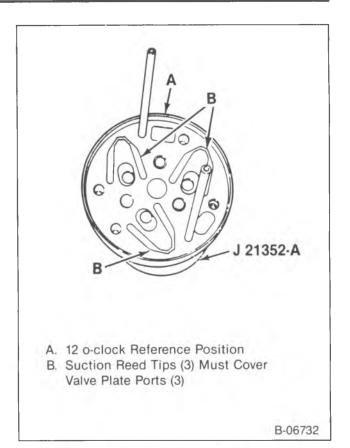


Figure 34-Installing the Reed Plate

- Lubricate a new cylinder seal (24) with clean 525 viscosity refrigerant oil and position the seal on the rear cylinder (23) (figure 30). Roll the cylinder seal into the groove. Cylinder (23) surface must be clean at the rear.
- Apply refrigerant oil to the seal surface of the rear head to easy assembly.
- 6. Cylinder and shaft assembly (gut pack).
 - Shaded parts shown in figure 3 are not serviceable. A replacement kit (gut pack) is available for replacement.
 - Assemble cylinder and shaft assembly over the guide pins onto the rear head (28) (figure 35).
 - Using both hands, press the cylinder and shaft assembly down into the rear head (28).

Important

Center cylinder seal (22) is not serviceable.7. Cylinder seal (15).

- Lubricate a new cylinder to front head seal with clean 525 viscosity refrigerant oil and install in the front seal groove (figure 35).
- 8. Suction reed plate (14).
 - Over J 33016 guide pins (figure 36).
 - Check the alignment.
- 9. Valve plate (13).
 - Over J 33016 guide pins (figure 37).
- 10. Head gasket (12).Over J 33016 guide pins (figure 38).
- 11. Front head (11).

HR-6 AIR CONDITIONING COMPRESSOR 1B5-13

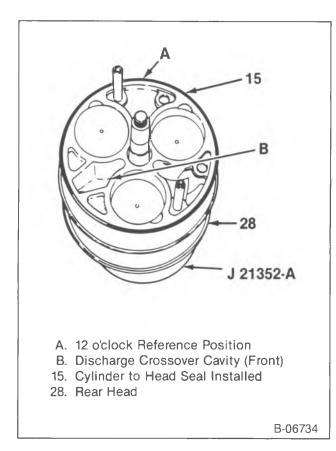


Figure 35—Installing the Front Head

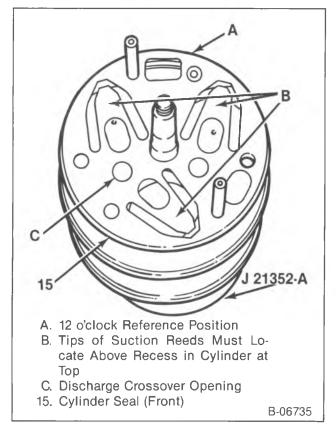


Figure 36—Installing the Front Suction Reed Plate

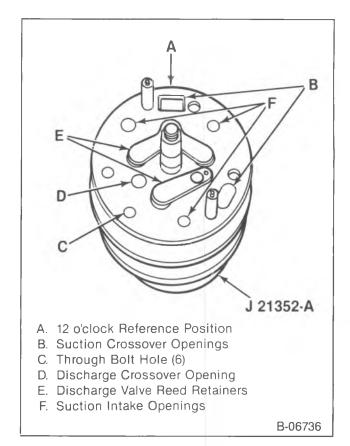


Figure 37—Installing the Front Valve Plate

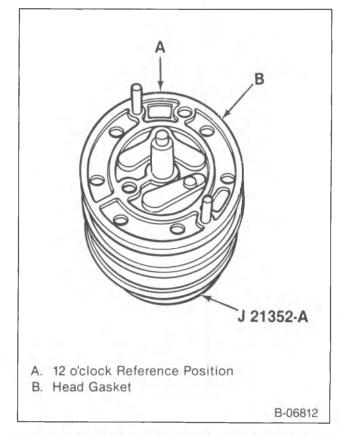


Figure 38-Installing the Seal to the Front Head

1B5-14 HR-6 AIR CONDITIONING COMPRESSOR

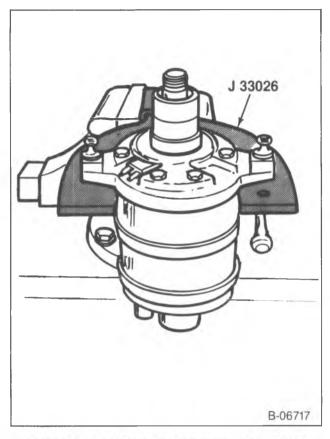


Figure 39-Installing the Compressor to J-33026

• Line up mark on front head (11) with the alignment marks on the compressor cylinders and assemble head over J 33016 guide pins (figure 27).

Important

- Front head (11) is now assembled in the "standard" position and may differ 120 degrees either direction. Assemble front head (11) according to location marked before removal.
- Using both hands, press down on front head (11) for installation over the seal (15) at the front of the cylinder (16).
- 12. Through bolts (7) with new gaskets.
 - Thread four of the through bolts (7) into the rear head (28) before removing J 33016 guide pins. Install two remaining through bolts (7) finger tight.
 - Mount the compressor on J 33026 (figure 39).

री Tighten

- Six through bolts (7) alternately to 9 N m (84 in. lbs.).
- 13. Shaft seal parts (8).

Important

- Add new 525 viscosity refrigerant oil.
- · Refer to vehicle service manual for fill quantity.
- Place shaft nut (1) on the shaft (20) and rotate the compressor shaft (20) several times and remove nut (1).
- · Leak test the compressor.
- Refer to "Leak Testing."
- 14. Clutch coil assembly (6).
- 15. Pulley (5)
- 16. Clutch plate and hub assembly (2).

LEAK TESTING

Tools Required:

- J 9625-A Pressure Test Plate
- J 23500-01 Portable Charging Station
- J 33026 Compressor Holding Fixture
- · Be sure the compressor has no oil internally.
- 1. Install J 9625-A on the rear head of compressor (figure 3).
- 2. Install the center hose of the manifold gage set on J 23500-01 to a refrigerant drum standing in an upright position and open the valve on the drum.
- 3. Install the charging station high and low pressure lines to corresponding fittings on J 9625-A using gage adapters or hoses equipped with valve depressors. Suction port (low side) of the compressor has large internal opening. Discharge port (high side) has a smaller internal opening into the compressor.
- Open the low pressure control, high pressure control and the refrigerant control on the charging station to allow refrigerant vapor to flow into the compressor.

Important

- Check for leaks at pressure relief valve (32), compressor front and rear head seals (15) (24), center cylinder seal (22), through bolt head gaskets and compressor shaft seal.
- After leak check, shut off the low pressure control and the high pressure control on charging station.
- If an external leak is present, perform the necessary correction and recheck to assure the correction.
- If an external leak is present, perform the necessary correction and recheck to assure the correction.
- Loosen the manifold gage hose connections to the gage adapters connected to the low and high sides and allow the vapor pressure to release from the compressor. If valve depressor

HR-6 AIR CONDITIONING COMPRESSOR 1B5-15

type hoses are used, loosen the hose connections at gage manifold to release the vapor pressure from the compressor.

- Disconnect both gage adapters or hoses from J 9625-A.
- Add 0.085 kg (3 oz.) new 525 viscosity refrigerant oil to the compressor assembly. Rotate the complete compressor assembly (not the shaft or drive plate hub) slowly several turns to distribute oil to all cylinder and piston areas.
- Install the shaft nut (1) on the compressor shaft (20) if the pulley assembly and clutch plate and hub assembly are not installed.
- Using a box-end wrench, or a socket and handle, rotate the compressor shaft (20) or clutch plate on the shaft (20) several turns to lubricate the pistons and cylinder walls.
- Connect the charging station high-pressure line, or a high-pressure gage and gage adapter to J 9625-A high-side connector.
- Attach an adapter or depressor-type hose to the suction or low-pressure port of J 9625-A to open the Schrader-type valve. Oil will drain out of the compressor suction port adapter if the compressor is positioned with the suction port downward.
- Attach the compressor to J 33026 fixture and mount the compressor in a vise so that the compressor will be in a horizontal position and the shaft (20) can be turned with a wrench.

- Rotate the compressor shaft (20) or drive plate hub six to eight complete revolutions at a speed of approximately one revolution per second. A slower rotation can result in a lower pump-up pressure and disqualify a good pumping compressor.
- Observe the reading on the high-pressure gage at the completion of the tenth revolution of the compressor shaft (20). The pressure reading for a good pumping compressor should be 690 kPa (100 psi) or above. A pressure reading of less than 620 kPa (90 psi) would indicate one or more suction and/or discharge valves leaking, an internal leak, or an inoperative valve. Disassemble the compressor and repair as necessary. Reassemble and repeat the pump-up test.
- Following the pressure pump-up test, release the air pressure from the high side and remove the gage adapters and J 9625-A test plate.
- Tilt the compressor to place the suction and discharge ports downward to allow the oil to drain from the compressor.
- Allow a 10-minute drain period and then charge the compressor with the proper amount of oil. Pour the new 525 viscosity refrigerant oil into the suction port.
- If further assembly or processing is required, install a shipping plate or test plate J 9625-A to protect the compressor from contamination.

SPECIFICATIONS

HR-6 COMPRESSOR

Type — Harrison HR-6	
Displacement	
Rotation	Clockwise
Clutch Plate Air Gap0.38-0.6	64 mm (0.015-0.025 inch)
Oil Capacity	


CLUTCH COIL

Ohms (at 27°C-80°F)	 3.56-3.89

TORQUE SPECIFICATIONS

Compressor Suction and Discharge Connector Bolt	
Through Bolts	
Shaft Nut.	16 N m (12 Ft. Lbs.)
Pressure Relief Valve	9 N m (84 In. Lbs.)

1B5-16 HR-6 AIR CONDITIONING COMPRESSOR

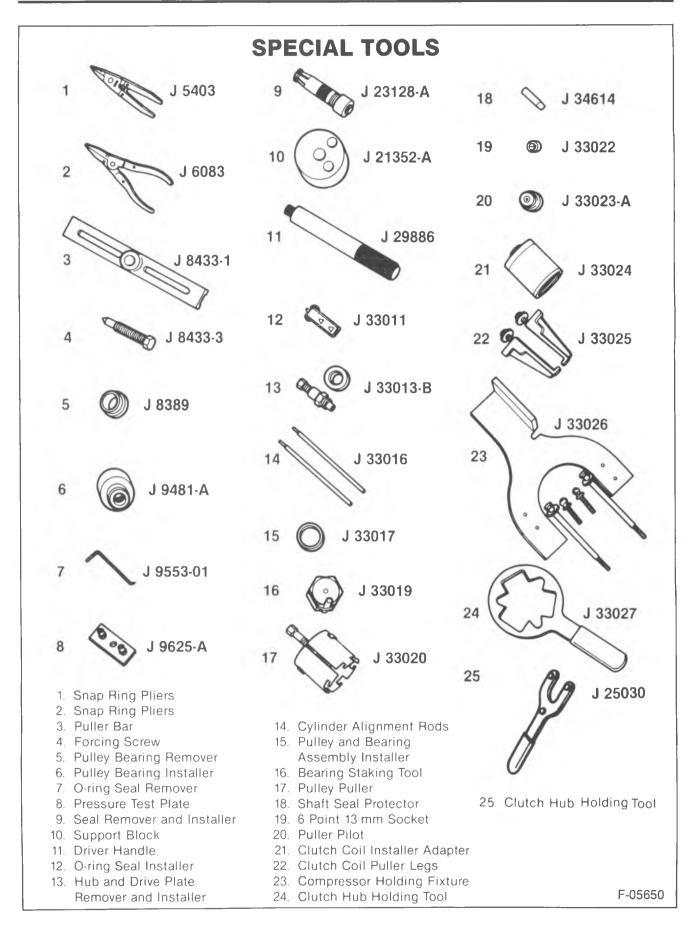

PAGE

SECTION 3B2

MANUAL STEERING GEAR

NOTICE: These fasteners are important attaching parts in that they could affect the performance of vital components and systems, and/or could result in major repair expense. They must be replaced with one of the same part number or with an equivalent part if replacement becomes necessary. Do not use a replacement part of lesser quality or substitute design. Torque values must be used as specified during reassembly to assure proper retention of these parts.

CONTENTS

SUBJECT

Description	3 B 2- 1
Saginaw Model 525	
Saginaw Model 535	
Specifications	3B2-10
Adjustment	
Fastener Torque	
Special Tools	3B2-11

DESCRIPTION

The Saginaw steering gear is the recirculating ball nut and worm type. The worm is located on the lower end of the steering shaft. The ball nut is mounted on the worm and the steel balls act as a rolling thread between the worm and nut to provide a low friction drive between them.

Teeth on the ball nut engage teeth on the pitman shaft sector. The teeth on the ball nut are made so that a tighter fit exists between the ball nut and pitman shaft sector teeth when the front wheels are in the straight ahead position. The sector teeth are slightly tapered so that a proper preload may be obtained by moving the pitman shaft endways by means of a preload adjuster screw which extends through the gear housing side cover. The head of the preload adjuster and a selectively fitted shim fit snugly into a T-slot in the end of the pitman shaft, so that the screw also controls the end play of the shaft.

22	The	model	525	steerin	g	gear	is	used	on	G	and	P	
	mod	el vehi	cles,	(figure	1)	. 1						=	

 The model 535 steering gear is used on the CK, S, T and M model vehicles, (figure 5).

For visual identification the 535 gear has a four bolt side cover and the 525 gear has three bolts. The larger (535) gear has a 28.8 mm (1.137-in.) diameter wormshaft measured on the O.D. of the worm thread and a 31.7 mm (1.25-in.) diameter pitman shaft. The smaller (525) gear has a 26.2 mm (1.034-in.) diameter wormshaft and a 28.5 mm (1.125-in.) diameter pitman shaft.

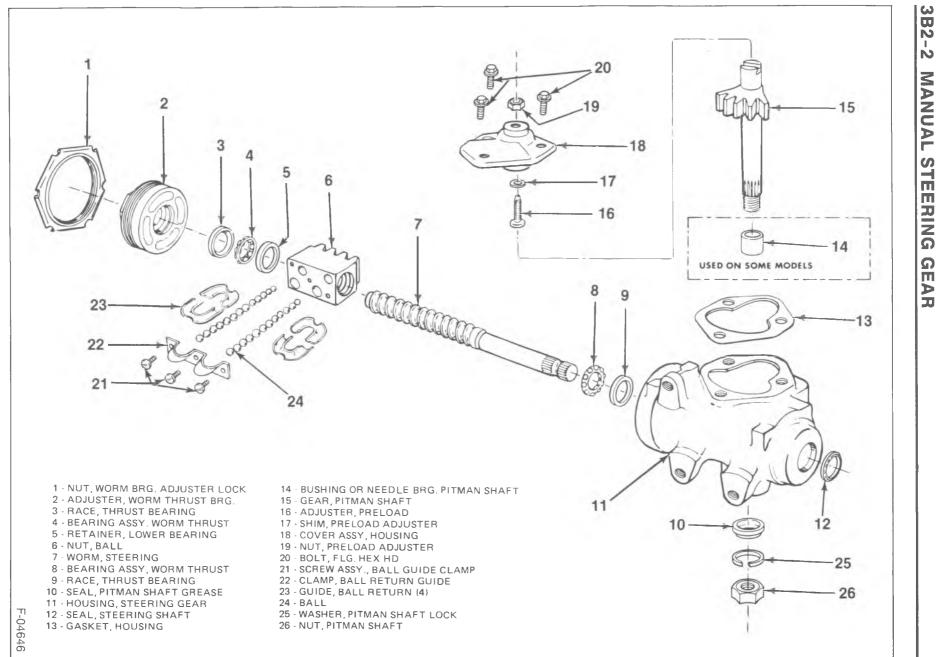


Figure 1—Steering Gear Components — Model 525

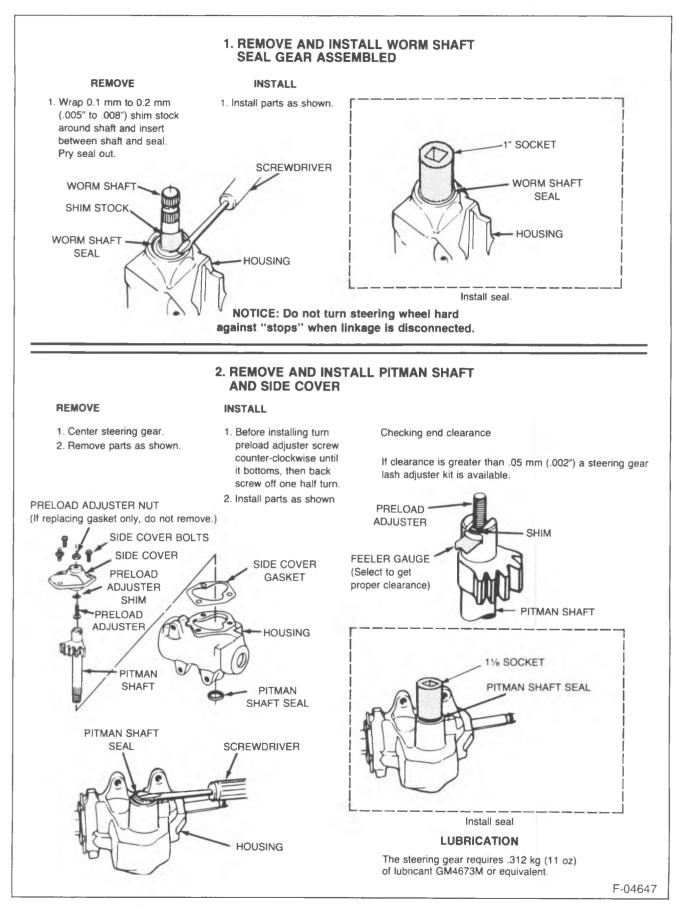


Figure 2—Model 525 — Chart A

3B2-4 MANUAL STEERING GEAR

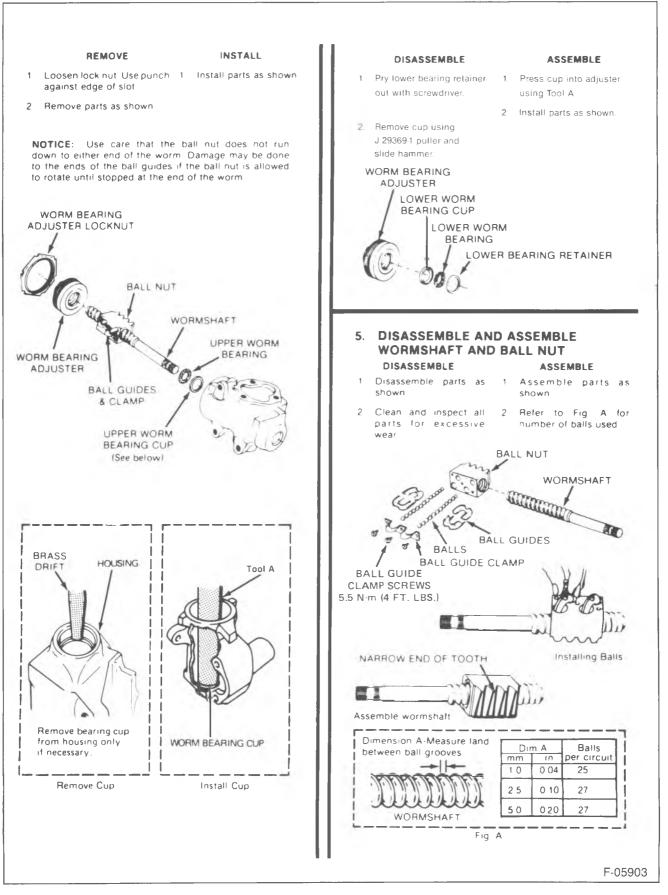


Figure 3-Model 525 - Chart B

MANUAL STEERING GEAR 3B2-5


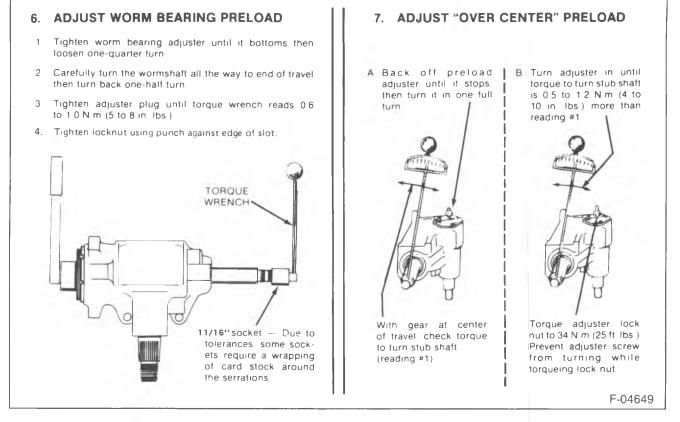


Figure 4—Model 525 — Chart C — Adjustment

3B2-6 MANUAL STEERING GEAR



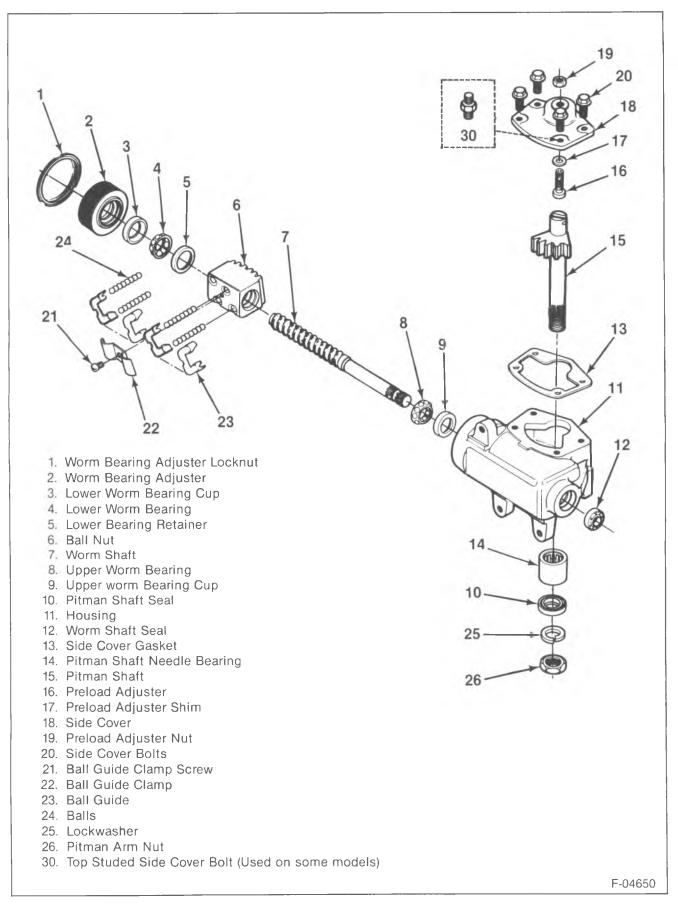

MANUAL STEERING GEAR 3B2-7

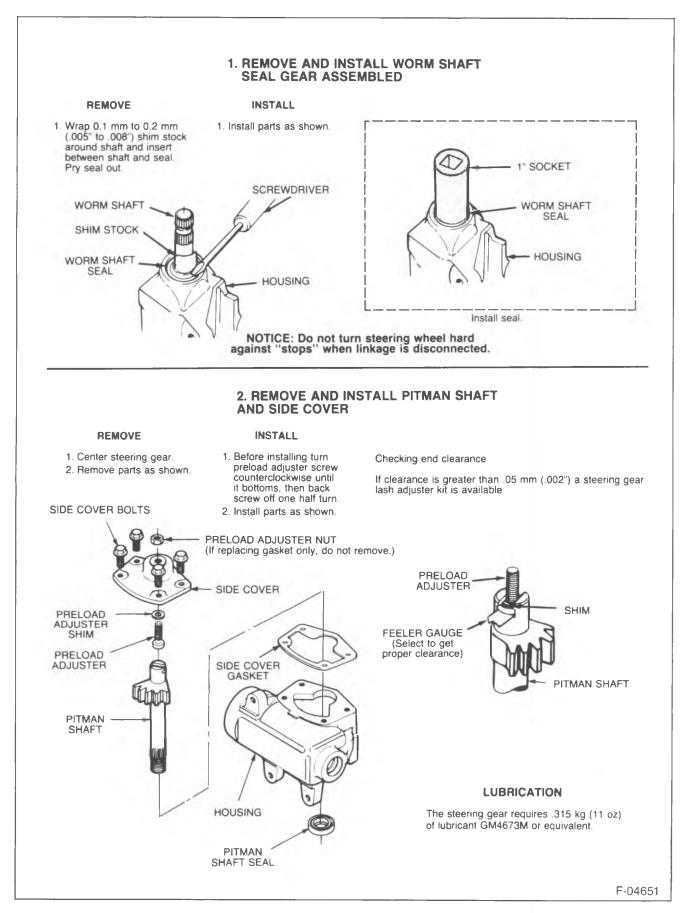


Figure 6-Model 535 - Chart A

3B2-8 MANUAL STEERING GEAR

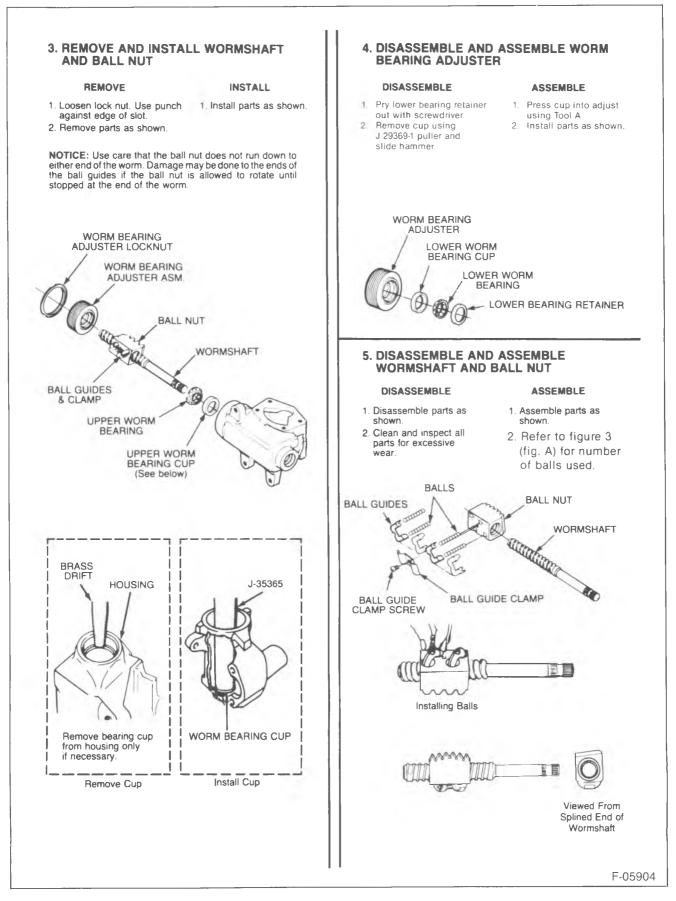


Figure 7-Model 535 - Chart B

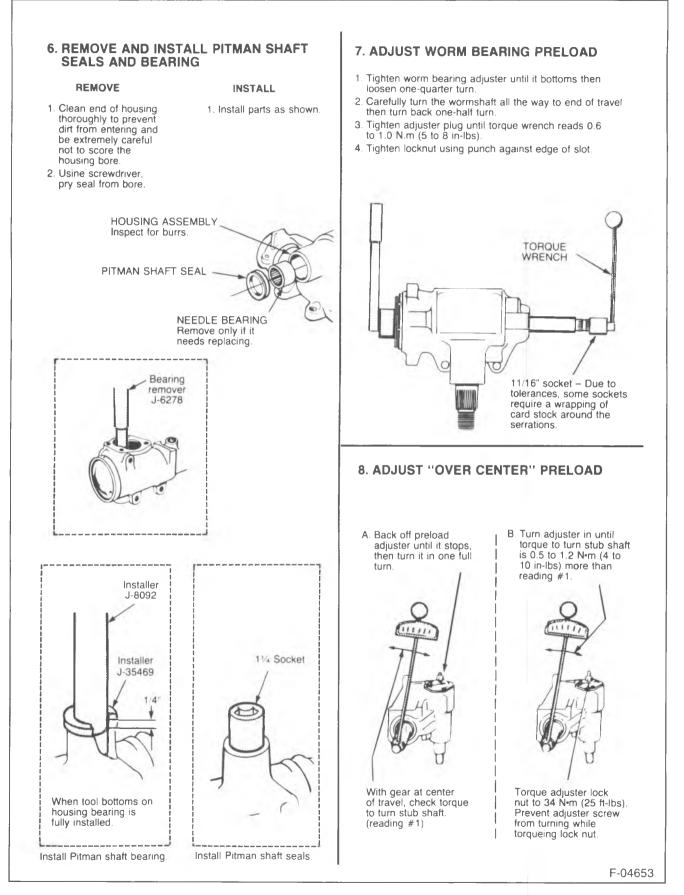


Figure 8-Model 535 - Chart C - Adjustment

3B2-10 MANUAL STEERING GEAR

SPECIFICATIONS

ADJUSTMENT

ADJUSTMENT	TORQUE TO TURN WORM SHAFT
Worm Bearing	0.6-1.0 N m 5-8 In. Lbs.
Over Center Preload	0.5-1.2 N m 4-10 In. Lb.s
	In excess of Worm Bearing Preload
Total Steering Gear Preload	1.8 N m 16 In. Lbs.
	Maximum

FASTENER TORQUE

SAGINAW MODEL 525


MANUAL STEERING GEAR	N·m	Ft. Lbs.
Gear to Frame Bolts	95	70
Pitman Shaft Nut	251	185
Side Cover Bolts	40	30
Pitman Shaft Adjusting Screw Locknut	34	25
Coupling Flange To Gear Pinch Bolt	40	30
Coupling Clamp Nut (Starfire)	70	50
Clamp To Ball Nut Screw	5.5	4


SAGINAW MODEL 535

MANUAL STEERING GEAR	N•m	Ft. Lbs.
Gear to Frame Bolts	95	70
Side Cover Bolts	18	13
Pitman Shaft Adjusting Screw Locknut	30	22
Clamp to Ball Nut Screw	5.5	4

MANUAL STEERING GEAR 3B2-11

SPECIAL TOOLS

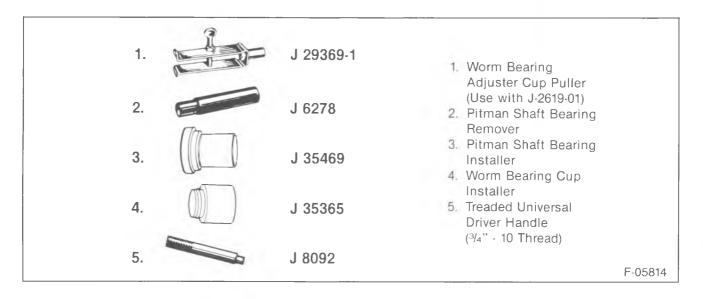

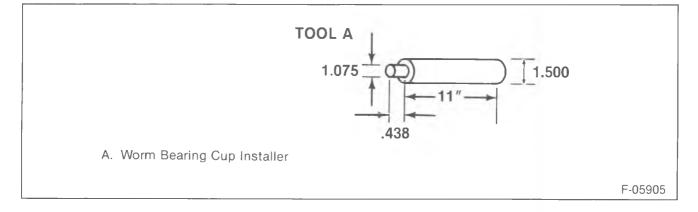

3B2-12 MANUAL STEERING GEAR

SECTION 3B3

POWER STEERING

The following notice applies to one or more steps in the assembly procedure of components in this portion of the manual as indicated at appropriate locations by the terminology "NOTICE: Refer to Notice on page 3B3-1 of this Section."

NOTICE: All steering fasteners are important attaching part in that it could affect the performance of vital components and systems, and/or could result in major repair expense. They must be replaced with one of the same part number or with an equivalent part if replacement becomes necessary. Do not use a replacement part of lesser quality or substitute design. Torque values must be used as specified during reassembly to assure proper retention of this part.

CONTENTS

SUBJECT	PAGE
Description	
Saginaw Integral Power Steering Gear—RV, G, P, ST, M	3B3- 3
Disassembly	3B3- 3
Cleaning and Inspection	3B3- 5
Assembly	3B3- 6
Saginaw Integral Power Steering Gear—CK (GMT 400)	3B3- 9
Saginaw Power Steering Pump—Model TC	3B3-15
Disassembly	3B3-15
Cleaning and Inspection	3B3-15
Assembly	3B3-15
Saginaw Power Steering Pump Model P	3B3-19
Disassembly	3B3-19
Cleaning and Inspection	3B3-19
Assembly	3B3-20
Saginaw Power Steering Pump Model CB	3B3-20
Component Repair	3B3-20
Hydraulic Pump Assembly	3B3-22
Specifications	3B3-24
Special Tools	3B3-25

DESCRIPTION

The hydraulic power steering system consists of a pump, an oil reservoir, a steering gear, a pressure hose, and a return hose.

The steering gear is made by Saginaw Division, General Motors. The steering gear is identified by a large S cast into the side of the housing. A building date is stamped in the cover. The building date is a four digit number. The first three digits are the Julian day of the year. The remaining digit is the last digit of the year.

The power steering pump is made by Saginaw Division, General Motors.

The power steering gear (figure 1) has a recirculating ball system which acts as a rolling thread between the wormshaft and the rack piston. The wormshaft is supported by a thrust bearing preload and two conical thrust races at the lower end, and a bearing assembly in the adjuster plug at the upper end. When the wormshaft is turned right, the rack piston moves up in gear. Turning the wormshaft left moves the rack piston down in gear. The rack piston teeth mesh with the sector, which is part of the pitman shaft. Turning the wormshaft turns the pitman shaft, which turns the wheels through the steering linkage. The control valve in the steering gear directs the power steering fluid to either side of the rack piston. The rack piston converts the hydraulic pressure into a mechanical force. If the steering system becomes damaged and loses hydraulic pressure, the vehicle can be controlled manually.

The hydraulic pump is a vane-type design. There are two types, submerged and nonsubmerged. Submerged pump (P models) have a housing and internal parts that are inside the reservoir and operate submerged in oil. The nonsubmerged pump (TC models with or without reservoir) function the same as the submerged pump except that the reservoir is separate from the housing and internal parts.

There are two bore openings at the rear of the pump housing. The larger opening contains the cam ring, pressure plate, thrust plate, rotor and vane assembly, and end plate. The smaller opening contains the pressure line union, flow control valve, and spring. The flow control orifice is part of the pressure line union. The pressure relief valve inside the flow control valve limits the pump pressure.

3B3-2 POWER STEERING

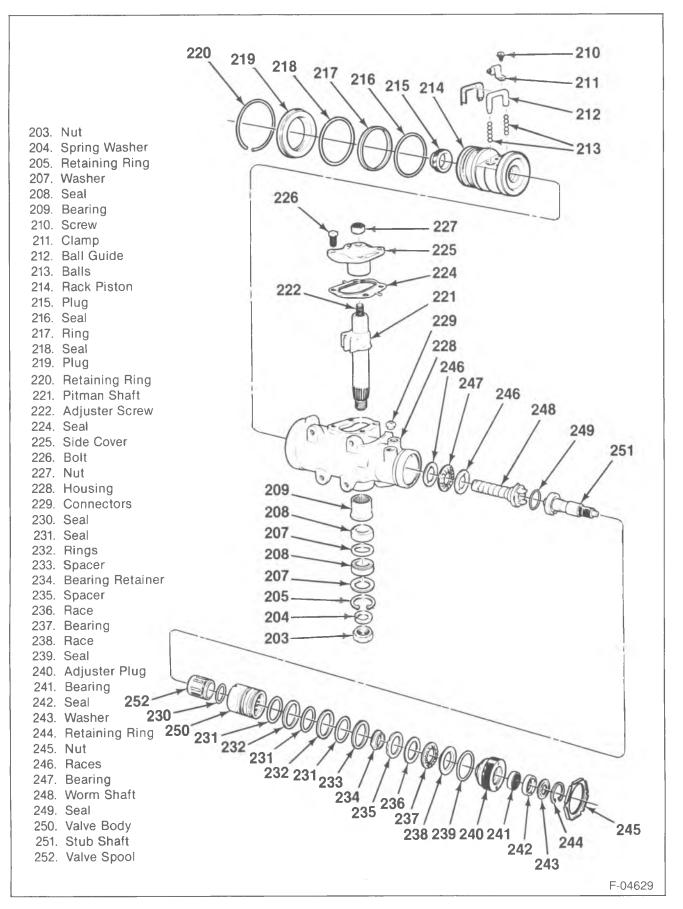


Figure 1—Integral Steering Gear Components — RV, G, P, ST and M Vehicles

SAGINAW INTEGRAL POWER STEERING GEAR-RV, G, P, ST, M

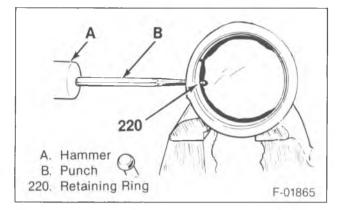


Figure 2—Unseating the Retaining Ring

NOTICE: Repair the steering gear in a clean, dust-free location, using clean tools and equipment. Dirt or grit will damage the machined surfaces and result in leakage or damage to the steering gear assembly.

If broken components or foreign materials are found during disassembly of the gear the hydraulic system should be disassembled, inspected, cleaned and flushed before servicing is complete.

The ball nut and control rings (seals) generally need not be replaced unless cut or damaged. If cut or damaged, inspect all mating parts for burrs, cracks, scratches, or damage. Replace or repair as needed.

In some instances, "power steering fluid" will be specified to lubricate parts upon assembly. In these cases, GM Power Steering Fluid, part no. 1050017 or equivalent should be used. DO NOT use brake fluid, automatic transmission fluid, or other non-approved fluids.

DISASSEMBLY

Remove or Disconnect (Figures 2 through 12)

Tools Required:

- J 4245 Internal Snap Ring Pliers
- J 21552 Ball Retainer Tool
- J 8524-1 Bearing Remover
- J 7624 Spanner Wrench
- J 7079-2 Driver
- J 6278 Pitman Shaft Bearing Puller
- J 21552 Rack Piston Arbor
- 1. Retaining Ring (220) (figure 2).
 - Pry retaining ring out of the housing groove with a screwdriver (figure 3).
- 2. Plug (219). Turn stud shaft (251) to the left only until the plug is forced out of the cylinder.
- 3. Seal (218).
- 4. Plug (215) from the rack piston (214) (figure 4).
- Nut (227), bolt (226), side cover (225) and gasket (224). Turn adjuster screw (222) to the right until the side cover separates from the pitman shaft (221).

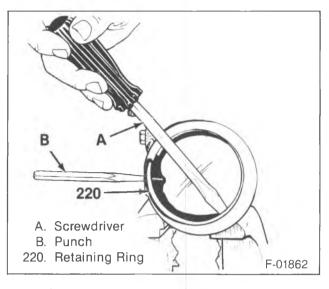


Figure 3—Removing the Retaining Ring

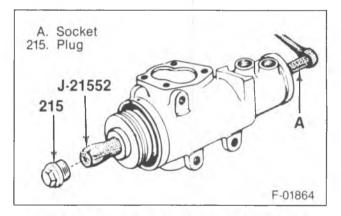


Figure 4—Removing the Plug and Piston Rack

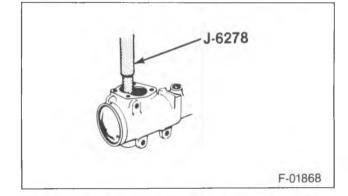


Figure 5-Removing the Pitman Shaft Bearing

3B3-4 POWER STEERING

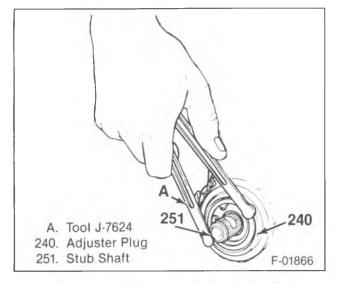


Figure 6—Removing the Adjuster Plug

- 6. Pitman shaft (221). Turn the stub shaft (251) to the left until the pitman shaft teeth (221) and rack piston (214) disengage.
- 7. Retaining ring (205) with J 4245.
- 8. Washers (207) and seals (208) using a screwdriver.
- 9. Bearing (209). If necessary, use tool J 6278 (figure 5).
- 10. Rack piston (214) and balls (213).
 - Insert tool J 21552 into the rack piston bore with the pilot of the tool seated into the end of the worm (248).
 - Hold the tool against the worm and turn the stub shaft to the left. The rack piston (214) will be forced onto the tool.
 - Hold the tool and pull the rack piston toward the handle until it is against the flange on the tool. This will prevent the end circuit balls from falling out.
- 11. Adjuster nut (245).
- 12. Adjuster plug (240) using J 7624 (figure 6).
 - Retaining ring (244) using J 4245.
 - Washer (243), seal (242) and bearing (241).

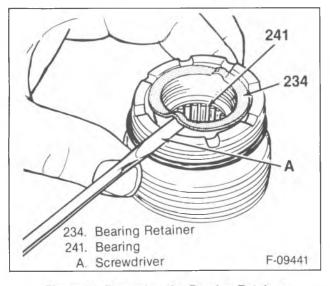


Figure 7—Removing the Bearing Retainer

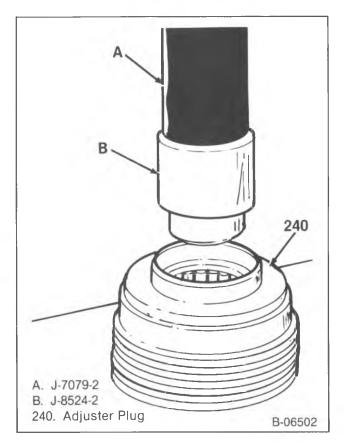


Figure 8—Removing the Needle Bearing

- Bearing retainer (234). Pry the retainer with a screwdriver at the raised area (figure 7).
- Seal (239) and needle bearing (241). Use J 8524-1 and J 7079-2 (figure 8).
- 13. Valve (250) and wormshaft (248) as an assembly, with both races (246) and bearing (247).
 - Wormshaft (248) from valve assembly (figure 9).
 - Races (246) and bearing (247) from the wormshaft (248).
 - Seal (249).
- 14. Stub shaft (251) from valve body (250) (figure 10).
 - Hold the assembly and lightly tap the stub shaft against the bench until the shaft cap is free from the valve body.

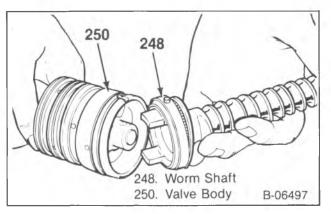


Figure 9—Separating the Wormshaft from the Valve Assembly

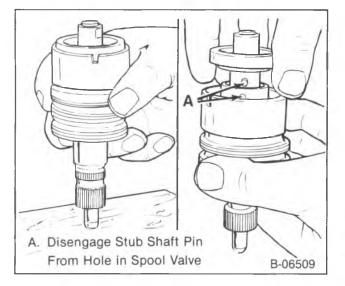
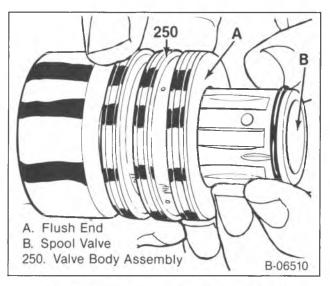
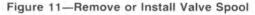


Figure 10—Removing or Installing the Stub Shaft Assembly





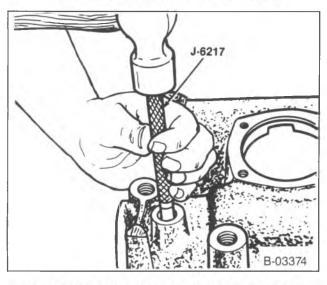


Figure 12—Remove or Install the Connector Seat

- Pull the shaft assembly until the shaft cap clears the valve body by about 6 mm (1/4-inch).
- Valve spool (252) and seals (230) and (231) (figure 11).
- 15. Screws (210), clamp (211) and ball guide (212).

• Balls (213).

? Important

- The following procedure should not be performed with the valve assembly in the gear housing.
- 16. Connectors (229) (figure 12).

CLEANING AND INSPECTION

🎦 Clean

All parts with solvent and blow dry.

Inspect (Figure 1)

- 1. Pitman shaft and side cover.
 - Bearing. Needles should rotate freely using finger pressure. Replace the bearing and side cover (225) if necessary.
 - Bearing surfaces in the side cover (225) for scoring. Replace the side cover assembly if necessary.
 - Sealing and bearing surfaces of the pitman shaft (221) for roughness, nicks, or other damage. Replace the pitman shaft assembly if necessary.
 - Pitman shaft (221) for excessive wear or scoring. Check the sector gear teeth for wear. Replace the pitman shaft assembly if necessary.
 - Adjuster screw (222) threads for wear. The adjuster screw must be free to turn with no end play.
- 2. Rack piston.
 - Worm (248) and rack piston (214) grooves and all balls (213) for scoring. BOTH MUST BE REPLACED as a matched assembly.
 - Seal (216) and ring (217) for wear.
 - Ball return guide halves (212) for cracks and damaged.
 - Bearing (247) and races (246) for scoring and excessive wear.
 - Rack piston (214) teeth and external ground surfaces for scoring or excessive wear. If either condition exists, replace the rack piston (214) and worm (248).
- 3. Adjuster plug.
 - Spacer (235) for wear or cracks.
 - Races (236, 238) for wear or scoring.
 - Adjuster plug (240) threads for wear.
 - Bearing (237) for wear or scoring.
 - Needle bearing (241) for wear, pitting or scoring. Replace if necessary.
- 4. Valve and stub shaft.
 - Seals (231) and rings (232).
 - Shaft pin for wear or cracks. If excessively worn or broken, replace the complete valve and shaft assembly.

3B3-6 POWER STEERING

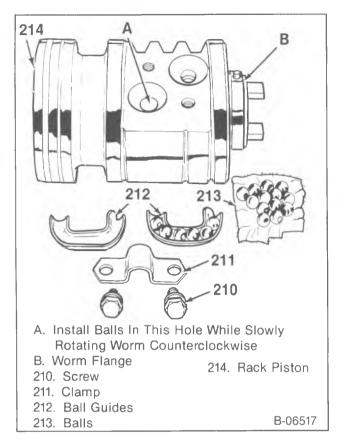


Figure 13—Installing the Balls into the Rack Piston

- Ground surface of the stub shaft (251). If a crocus cloth cannot clean the nicks or burrs, replace the entire valve assembly.
- Outside diameter of the valve spool and inside diameter of the valve body (250). If a crocus cloth cannot clean the nicks or burrs, replace the entire shaft and valve assembly.
- The small notch in the skirt of the valve for wear. If worn replace the complete valve assembly.
- Valve spool inside the valve body (250). The valve spool, when lubricated with steering fluid, must rotate freely without binding. If binding occurs, replace the complete valve and shaft assembly.
- 5. Steering gear hose connectors.
 - Brass inverted flare connectors (229) for looseness.

ASSEMBLY

Install or Connect (Figures 1, 4, and 10 through 15)

Tools Required:

- J 4245 Snap Ring Pliers
- J 6217 Valve Connector
- J 21552 Ball Retainer
- J 22407 Bearing Installer
- J 8092 Bearing Driver
- J 7079 Bearing Remover and Installer
- J 8524-1 Driver

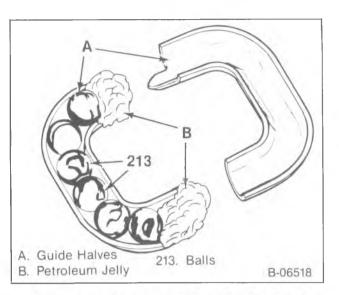


Figure 14-Retaining the Balls in the Ball Guide

J 7624 Bearing Preload Spanner Wrench

- 1. Connectors (229), using J 6217 (figure 12).
- 2. Balls (213), alternately by color, in the rack piston (214) (figure 13). Use J 21552 in the rack piston.
 - Lubricate the 24 balls with power steering fluid.
 - 3. Balls (213), alternating by color, in the ball guide (212) (figure 14).
 - Retain the balls in the guide with petroleum jelly.
- 4. Ball guide (212), clamp (211) and screws (210) to the rack piston (214).
- 5. Stub shaft (251) into the valve body (250) (figure 10).
 Lubricate the stub shaft (251) with power steering fluid.
- Valve spool (252) and seals (230, 231) into the valve body (250).
 - Lubricate the valve spool (252) and seals (230, 231) with power steering fluid before assembling.
- 7. Valve body (250), seal (249), wormshaft (248), bearing races (246) and roller bearing (247).

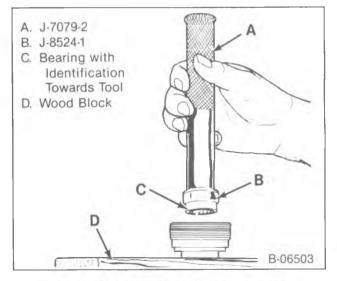


Figure 15-Installing the Needle Bearing

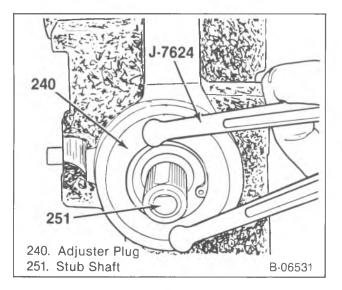


Figure 16—Bottoming the Adjuster Plug

- 8. Seal (239) on the adjuster plug (240).
- 9. Needle bearing (241) in the adjuster plug. Use J 8524-1 and J 7079-2 (figure 15).
- 10. Seal (242), washer (243), and retaining ring (244) in the adjuster plug (240).

Important

9

6

- The retainer projections must not extend beyond the washer (243) when the retainer ring (244) is seated. The washer must be free to rotate.
- 11. Wormshaft, valve assembly into the steering gear housing.
- 12. Adjuster plug (240) into the steering gear housing. Use spanner wrench J 7624.

Adjust (Figures 16 through 23)

- Tools Required:
 - J 7624 Spanner Wrench
 - J 7754-01 Torque Wrench
- 1. Bearing preload:
 - Use tool J 7624. Turn the adjuster plug (240) to

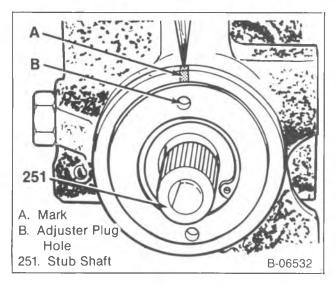


Figure 17—Marking the Housing

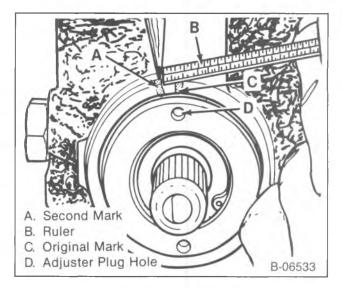


Figure 18—Remarking the Housing

the left until the plug and bearing (237) are firmly bottomed – about 27 N·m (20 ft. lbs.) (figure 16).

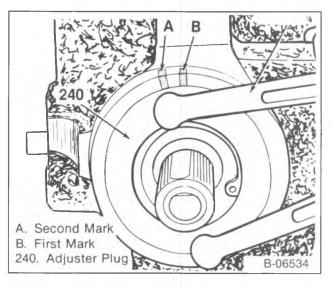


Figure 19—Aligning the Adjuster Hole with the Second Mark

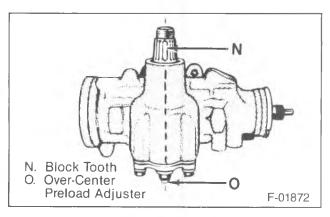


Figure 20—Pitman Shaft "Over-Center" Sector Adjustment

3B3-8 POWER STEERING

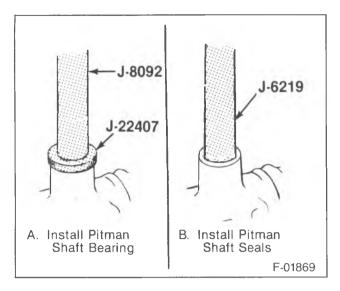


Figure 21—Installing the Pitman Shaft Bearing and Seals

- Mark the housing in line with one of the holes in the adjuster plug (figure 17).
- Measure back (to the left) 13 mm (1/2-inch) and re-mark the housing (figure 18).

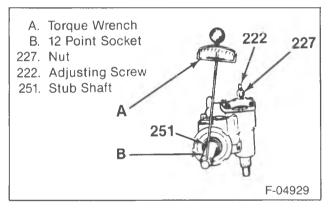


Figure 22—Aligning the Over-Center Preload


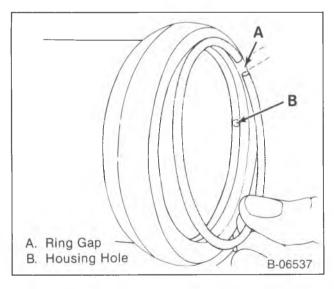


Figure 23—Installing the Retaining Ring

• Rotate the adjuster to the left until the hole in the adjuster is in line with the second mark (figure 19).

NOTICE: Refer to "Notice" on page 3B - 1 of this manual.

- Install the adjuster nut (245) and torque the nut to 108 N·m (80 ft. lbs.). Hold the adjuster plug to maintain alignment of the hole with the mark.
- Check the turning torque of the stub shaft, using J 7754-01 and a 12-point socket. The reading should be taken with the beam of the wrench near vertical while turning the wrench to the left at an even rate (figure 20). If the reading is less than 0.45 N·m (4 in. lbs.) or more than 1.15 N·m (10 in. lbs.), repeat the adjustment procedure.
- Lubricate the stub shaft (251) area outside the dust seal (206) with chassis lubricant or an all purpose grease.
- 2. Rack piston (214) using J 21552 (figure 4).
- 3. Bearing (209) using J 22407 and J 8092.
- 4. Washers (207) and seals (208) using J 6219 (figure 21).
- 5. Retaining ring (205).
- 6. Pitman shaft (221), gasket (224) and side cover (225).
- 7. Bolt (226) and nut (227).

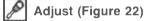

Tool Required:

- J 7754-01 Torque Wrench
- Pitman shaft preload (figure 22).
- 1. Attach tool J 7754-01 and a 12-point socket on the stub shaft splines.
- Center the steering gear by turning the stub shaft (251) from right to left and counting the number of turns. Turn the shaft back halfway to the center position.
- 3. Check the combined ball and bearing preload by turning the torque wrench through the center of travel. Note the highest reading.
- Tighten the adjusting screw (222) until the torque wrench reads 0.6 – 1.2 N·m (6–10 in. lbs.) higher than the reading noted in step "3."
 - The total reading should not exceed 2.25 N m (20 in. lbs.) torque.

NOTICE: Refer to "Notice" on page 3B3 – 1 of this manual.



• Nut (227) to 27 N·m (20 ft. lbs.).

- 5. Re-check the preload after tightening the nut (227).
- 8. Plug (215), seal (216), ring (217), and seal (218).
- 9. Plug (219) and retaining ring (220) (figure 23).

SAGINAW INTEGRAL POWER STEERING GEAR-CK (GMT 400)

NOTICE: Repair the steering gear in a clean, dust-free location, using clean tools and equipmient. Dirt or grit will damage the machined surfaces and result in leakage or damage to the steering gear assembly.

If broken components or foreign materials are found during disassembly of the gear the hydraulic system should be disassembled, inspected, cleaned and flushed before servicing is complete. Service information is shown in figures 24, 25, 26, 27 and 28.

The ball nut and control rings (seals) generally need not be replaced unless cut or damaged. If cut or damaged, inspect all mating parts for burrs, cracks, scratches, or damage. Replace or repair as needed.

In some instances, "power steering fluid" will be specified to lubricate parts upon assembly. In these cases, GM Power Steering Fluid, part no. 1050017 or equivalent should be used. DO NOT use brake fluid, automatic transmission fluid, or other non-approved fluids.

Key No. Part Neme Key No. Key No. Part Name Pert Name 1 - HOUSING, STEERING GEAR 19 - PLUG, ADJUSTER 37 - SCREW ASM, LOCKWASHER & (2) 2 - RACE, THRUST BEARING (WORM) 20 - BEARING, NEEDLE 38 - PLUG, RACK PISTON 3 - BEARING ASM, ROLLER THRUST (WORM) 21 - SEAL, STUB SHAFT 39 - SEAL, "O" RING (RACK PISTON) 4 - RACE, THRUST BEARING (WORM) 22 - SEAL, STUB SHAFT DUST 40 - RING, RACK PISTON 5 - WORM, STEERING 23 - RING, RETAINING 41 - SEAL, "O" RING (HOUSING END PLUG) 6 - SEAL, "O" RING (STUB SHAFT) 24 - NUT, ADJUSTER PLUG LOCK 42 - PLUG, HOUSING END 7 - SHAFT, STUB 25 - BEARING ASM, NEEDLE (PITMAN SHAFT) 43 - RING, RETAINING (HOUSING END PLUG) 8 - SPOOL, VALVE 26 - SEAL. PITMAN SHAFT 44 - GEAR ASM, PITMAN SHAFT 27 — WASHER, SEAL BACK-UP (PITMAN SHAFT) 30 — RING, RETAINING (PITMAN SHAFT SEAL) 45 - SEAL ASM, GASKET 9 - SEAL, "O" RING (SPOOL) 10 - BODY, VALVE 46 - COVER ASM, HOUSING SIDE USED ON SOME MODELS 31 - WASHER, PITMAN SHAFT LOCK 47 - BOLT, HEX. HEAD (SIDE COVER) (4) 11 - RING, VALVE BODY (3) 32 - NUT. PITMAN SHAFT 12 - SEAL, "O" RING (VALVE BODY) (3) 48 - NUT, LASH ADJUSTER 13 - RETAINER, BEARING (ADJUSTER) 33 - NUT, RACK PISTON 49 - SEAL . PITMAN SHAFT DUST 34 - BALL 50 - BOOT, PITMAN SHAFT 14 - SPACER, THRUST BEARING 35 - GUIDE, BALL RETURN (2) 15 - RACE, UPPER THRUST BEARING (SMALL) 51 - BOLT, COUPLING PINCH 16 - BEARING, ROLLER THRUST 36 - CLAMP, BALL RETURN GUIDE 52 - COUPLING, STEERING SHAFT 17 - RACE, UPPER THRUST BEARING (LARGE) 53 - VALVE ASM, CHECK 18 - SEAL, "O" RING (ADJUSTER) 24 22 15 13 10 9 8 6 5 ଗ (26 33 40 USED ON SOME MODELS F-04808

Figure 24—Integral Steering Gear Components — CK (GMT 400)

3B3-10 POWER STEERING

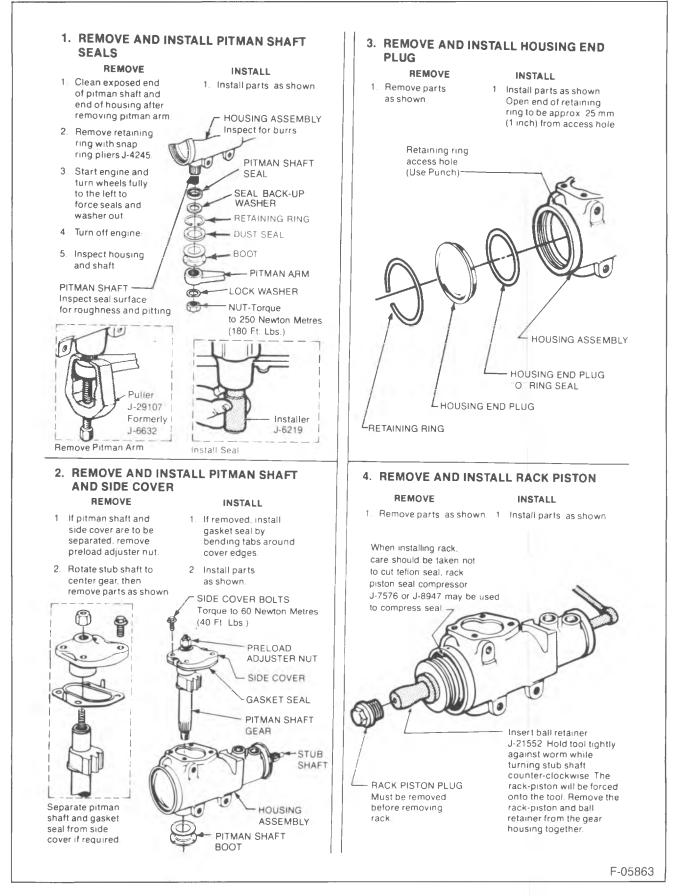


Figure 25—Removing and Installing the Pitman Shaft

3B3-12 POWER STEERING

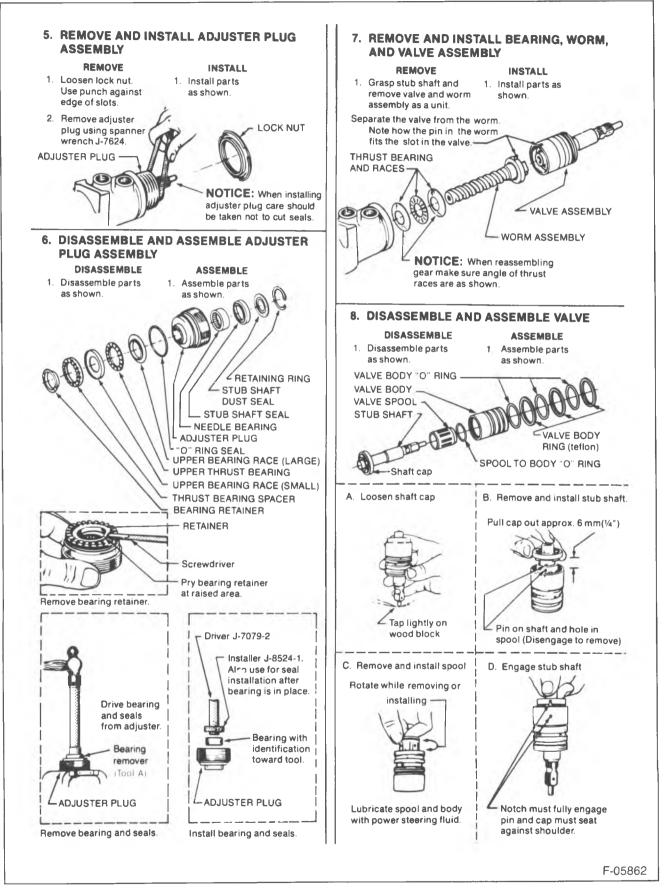


Figure 26—Removing and Installing the Adjuster Plug Assembly

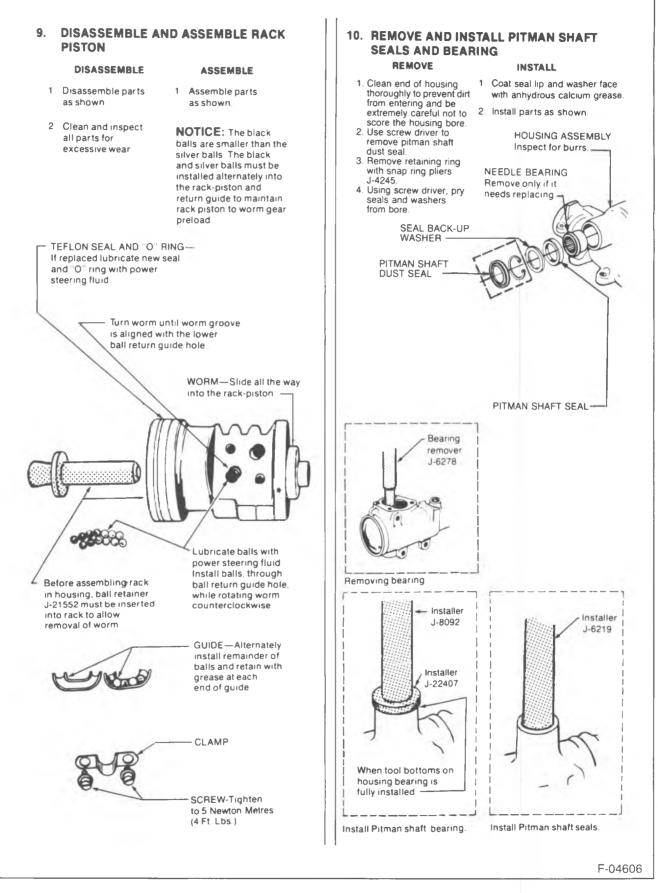


Figure 27—Removing and Installing the Rack Piston and Pitman Shaft Seals and Bearing

3B3-14 POWER STEERING

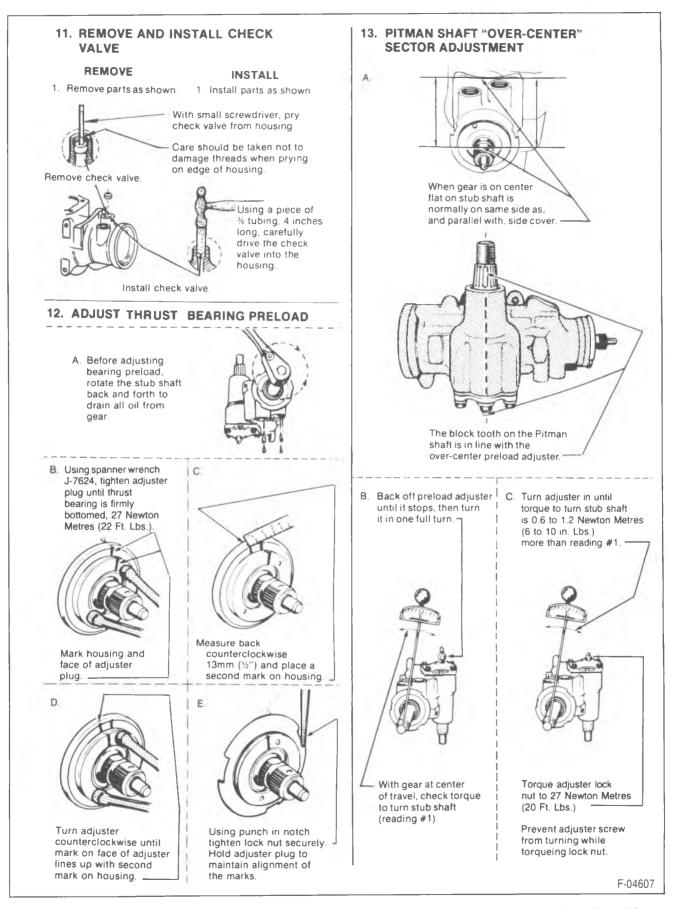


Figure 28—Removing and Installing the Check Valve and Adjusting the Thrust Bearing Preload and Pitman Shaft "Over-Center" Sector

SAGINAW POWER STEERING PUMP-MODEL TC

NOTICE: Repair the pump only in a clean, dustfree location, using clean tools and equipment. Dirt or grit will damage the machined surfaces and result in leakage or damage to the pump.

If broken components or foreign materials are found during disassembly of the pump, the hydraulic system should be disassembled, inspected, cleaned and flushed before servicing is complete.

Before beginning disassembly of the pump, remove the reservoir filler cap (when used) and drain the oil from the reservoir by filler cap (when used). Drain the oil from the reservoir by inverting the pump so oil may drain out the filler hole. After the oil is drained from the reservoir, replace the cap.

DISASSEMBLY

Clean

Exterior of the pump with solvent.

✦✦ Remove or Disconnect (Figures 29 through 40)

- Clamp the front hub of the pump in a soft jawed vise.
- 1. Clips (26), if equipped.
 - Pry the tab and slide the retaining clip off (figure 30).
- 2. Reservoir (24) (figure 31) or return tube (15) (figure 40) depending on model.
- 3. O-ring (25).
- 4. Fitting (23) (figure 32).
- 5. O-ring seal (22).
- 6. Flow control valve (21).
- 7. Flow control spring (20).
- 8. Retaining ring (19) (figure 33).
- Use suitable snap ring pliers.
- 9. Driveshaft (17).
- 10. Bearing (18) (figure 34).
- 11. Driveshaft seal (16).Pry the seal loose with a flat head screwdriver
 - (figure 35).
- 12. Retaining ring (14).
 - Insert a punch into the access hole and pry the ring loose (figure 36).
- 13. Thrust plate (13) (figure 37).
 - Use a 16 mm (⁵/₈-inch) piece of bar stock or suitable brass drift.
- 14. O-ring seal (12).
- 15. Pump ring (11) (figure 38).
- 16. Rotor (10).
- 17. Vanes (9).
- 18. Dowel pins (8).
- 19. Pressure plate (7).
- 20. O-ring (6).
- 21. Pressure plate spring (5).
- 22. O-ring seal (4).
- 23. Dowel pin (3).
- 24. Sleeve (2) (figure 39).

CLEANING AND INSPECTION

Clean

All parts with solvent and blow dry.

Inspect (Figure 39)

- 1. Rotating group components.
 - Vane (9) tips for scoring or wear.
 - Fit of vanes (9) in the rotor (10). The vanes must fit properly in the rotor slots, without sticking or excessive play.
 - Rotor slots for burrs and excessive wear at the thrust faces.
 - Inner surface of the pump ring (11) for scoring or wear.
 - Thrust plate (13) and pressure plate (7) for wear on the plate surfaces.
 - If heavy wear is present, or parts are faulty, replace the entire rotating group.
- 2. Bearing (18). If the bearing is rough or loose, replace it.
 - Seal (16)for leakage, cracking, or swelling. If so replace.
- Driveshaft (17) for excessive burning or scoring.
 Bearing bore for excessive scoring or burning.
- Control valve (15). It must move smoothly in the valve bore.

ASSEMBLY

Install or Connect (Figures 29, 40 through 46)

- 1. Return tube (15) (figure 40) or reservoir (24) (figure 29) depending on model.
- 2. Sleeve (2) (figure 41).
- 3. Dowel pin (3) (figure 42).
- 4. O-ring seal (4).
- 5. Pressure plate spring (5).
- 6. O-ring seal (6) (figure 43).
- Pressure plate (7). Mark top of pressure plate directly over the pin hole in the plate.
 Dowel pin (8).

Important

Q

- Lubricate the O-ring (12), pump ring (11), rotor (10), and vanes (9) with power steering fluid.
- 9. Vane (9). The rounded edge of the vanes face away from the rotor.
- 10. Rotor (10). Make sure the counterbore faces the driveshaft end of the housing (figure 44).
- 11. Pump ring (11). Make sure the identification marks face up (figure 45).
- 12. O-ring seal (12).
- 13. Thrust plate (13).
 - The dimples in the thrust plate should line up with the bolt holes in the housing and that the thrust plate engages the pump ring dowel pins.
- 14. Retaining ring (14).

3B3-16 POWER STEERING

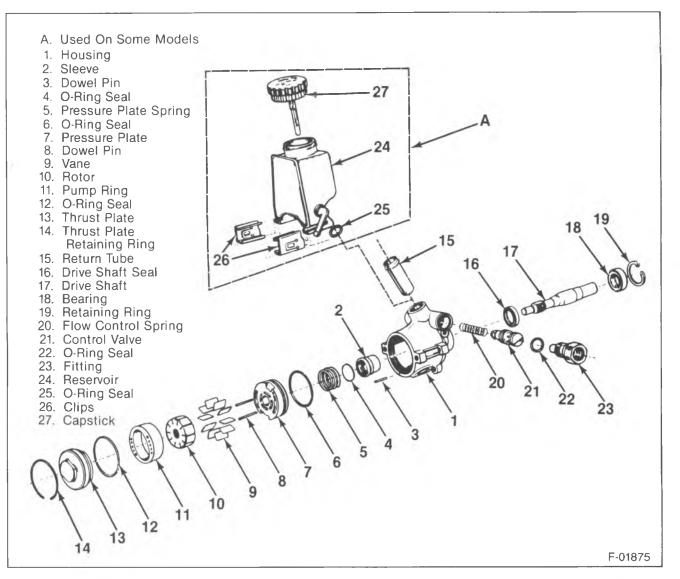


Figure 29—Power Steering Pump Components — Model TC

- Use a press to compress the thrust plate (figure 46).
- Opening of ring (14) centered with bolt hole nearest to access hole.
- 15. Driveshaft seal (16).

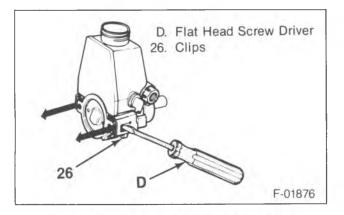


Figure 30—Removing the Reservoir Clips

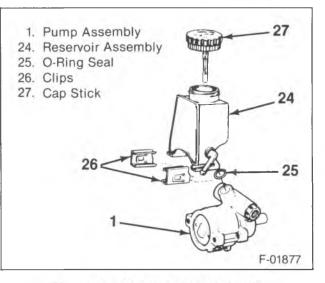


Figure 31-Removing the Reservoir

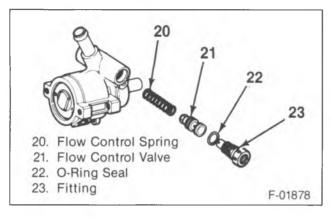


Figure 32—Removing the Fitting, Control Valve, Spring and Seal

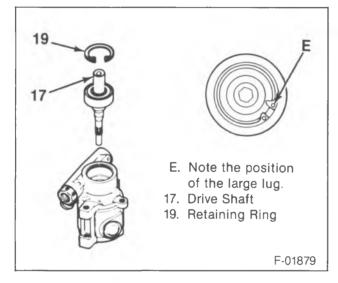


Figure 33—Remove and Install Retaining Ring

- Use a suitable socket to press seal into housing until it bottoms (figure 35).
- 16. Bearing (18) onto the driveshaft (17) (figure 34).

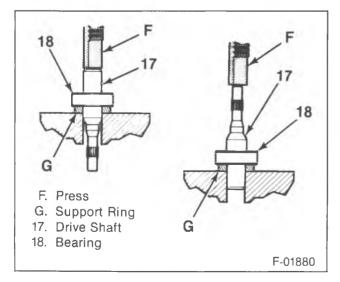


Figure 34—Remove and Install Driveshaft Bearing

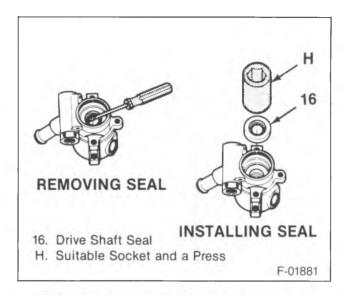


Figure 35-Remove and Install Driveshaft Seal

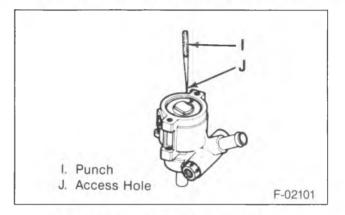


Figure 36—Removing the Retaining Ring

- Slide the assembly into the housing while rotating the driveshaft so that the shaft serrations engage with the rotor.
- 17. Retaining ring (19). Use a suitable pair of snap ring pliers (figure 33).

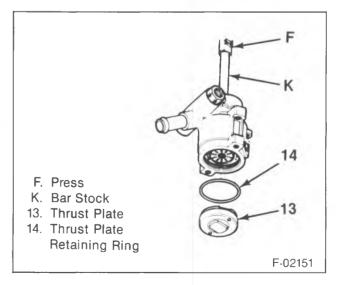


Figure 37—Removing the Thrust Plate

3B3-18 POWER STEERING


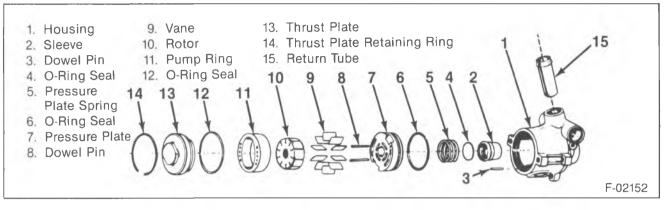


Figure 38—Pump Housing Components



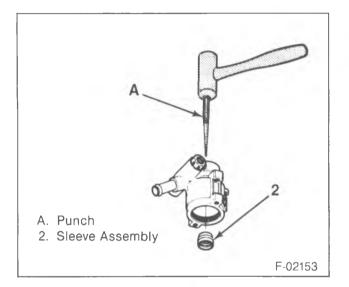

- Make sure the beveled side of ring (19) is properly located.
- 18. Flow control spring (20).
- 19. Flow control valve (21).
- 20. O-ring seal (22).
- 21. O-ring (25).
- 22. Reservoir (24) (figure 31).
- 23. Clips (26) (figure 30).

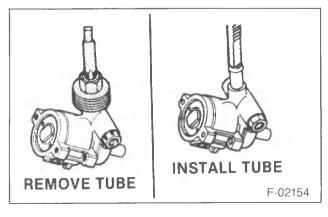


Figure 40—Remove and Install Return Tube

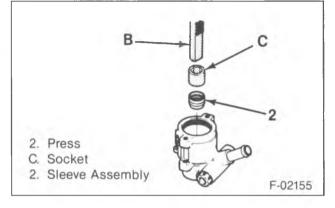


Figure 41—Install Sleeve Assembly

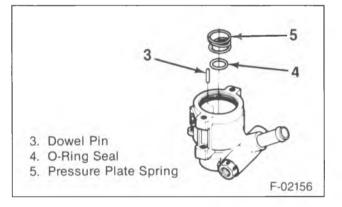


Figure 42—Installation of the Pin, Seal and Pressure Plate Spring

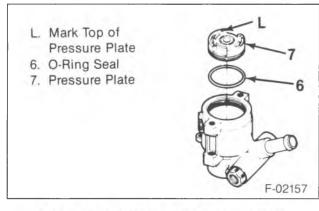


Figure 43—Installing of the Pressure Plate

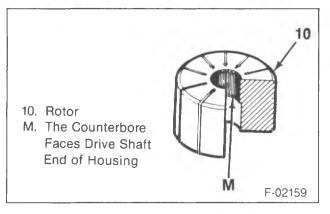
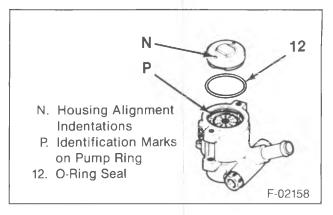


Figure 44—Installing the Rotor





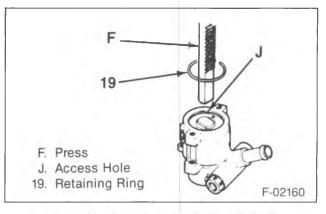


Figure 46—Installing the Retaining Ring

SAGINAW POWER STEERING PUMP-MODEL P

DISASSEMBLY



Remove or Disconnect (Figure 47)

- Clean the exterior of the pump with solvent and crocus cloth.
- 1. Bolt (71) and fitting (73).
- 2. Reservoir (70) and seals (69).
- 3. End plate retaining ring (68) using a screwdriver and punch.
 - End plate (67) and pressure plate spring (66).
- 4. Control valve (58), control valve spring (59) and O-ring (60).
- 5. Pressure plate (65). Tap lightly on the driveshaft with a rubber mallet.
- 6. Pump ring (64) and vanes (63).
 - Shaft retaining ring (62), pump rotor (61) and thrust plate (56).
 - 7. Driveshaft (50).
 - 8. Seal (51) from the housing (53).
 - Dowel pins (55) and O-rings (54).
 - Seal (52).

CLEANING AND INSPECTION



- Cican
- All parts with solvent and blow dry.

Inspect (Figure 47)

- 1. Rotating group components.
 - Vane (63) tips for scoring or wear.
 - Fit of vanes (63) in rotor (61) for sticking or excessive play.
 - Rotor slots for burrs and excessive wear at the thrust faces.
 - Inner surface of the pump ring (64) for scoring or wear.
 - Thrust plate (56) and pressure plate (65) for wear on plate surfaces.
 - If heavy wear is present, or parts are faulty, replace the entire rotating group.
- 2. Seal (51) for leakage, cracking or swelling. If so, replace seal.
- 3. Driveshaft (50) for excessive burning or scoring.

3B3-20 POWER STEERING

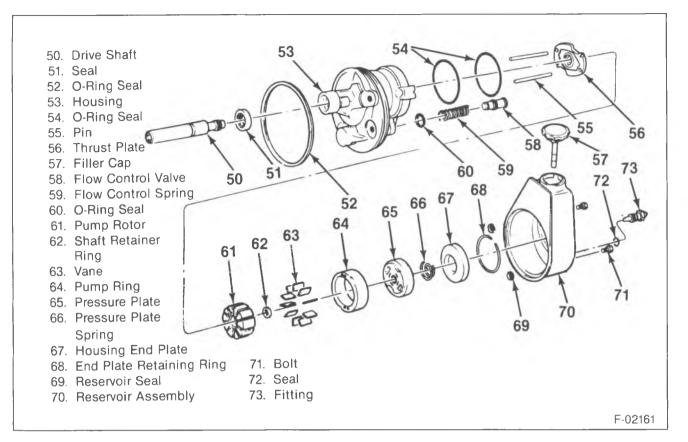


Figure 47—Power Steering Pump — Model P

4. Control valve (58). It must move smoothly in the valve bore.

ASSEMBLY

Install or Connect (Figure 47)

Tool Required:

J-7728 Seal Installer

Important

- Lubricate the O-rings (54), pump ring (64), rotor (61) and vanes (63) with power steering fluid.
- 1. Dowel pins (55) and O-rings (54).
- 2. Seal (51) using J-7728
 - O-ring (52).

3. Driveshaft (50 and thrust plate (56).

- Rotor (61). Make sure the counterbore faces the driveshaft end of the housing.
- Vanes (63), the rounded edge faces away from the rotor.
- Shaft retaining ring (62), pump ring (64) and pressure plate (65).
- 4. O-ring (60), control valve spring (59) and control valve (58).
- 5. Pressure plate spring (66) and end plate (67).
- End plate retaining ring (68).
- 6. Seal (69) and reservoir (70).
- 7 Bolt (71) and fitting (73).

SAGINAW POWER STEERING PUMP-MODEL CB

NOTICE: Repair the pump only in a clean, dustfree location, using clean tools and equipment. Dirt or grit will damage the machined surfaces and result in leakage or damage to the pump.

If broken components or foreign materials are found during disassembly of the pump, the hydraulic system should be disassembled, inspected, cleaned and flushed before servicing is complete.

Before beginning disassembly of the pump, remove the reservoir filler cap (when used) and drain the oil from the reservoir by filler cap (when used). Drain the oil from the reservoir by inverting the pump so oil may drain out the

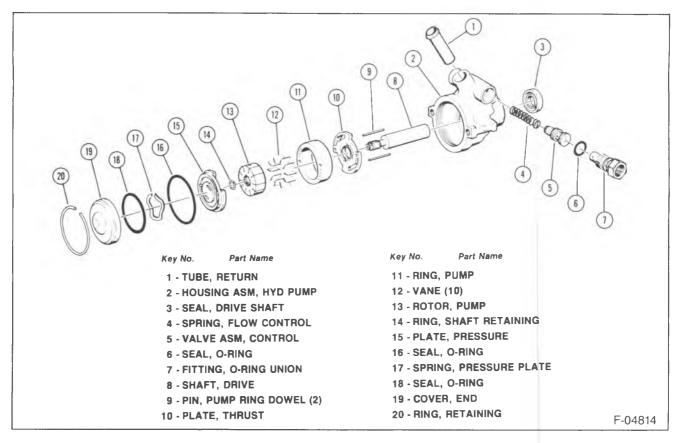


Figure 48—Power Steering Pump — Model CB

filler hole. After the oil is drained from the reservoir, replace the cap.

COMPONENT REPAIR

Tean

• Exterior of the pump with solvent.

CONTROL VALVE

- ++ Remove or Disconnect (Figure 48)
 - 1. Pump from vehicle if necessary for access.
 - 2. Fitting (7) and O-ring (6).
 - 3. Control valve assembly (5).
 - 4. Flow control spring (4).

++ Install or Connect

- 1. Flow control spring (4).
- 2. Control valve assembly (5).
- 3. O-ring (6) on fitting (7).
- Fitting into the hydraulic pump housing assembly (2).

Tighten

• Fitting to 75 N m (55 ft. lbs.).

DRIVE SHAFT SEAL

(Without Disassembly of Pump)

Remove or Disconnect (Figure 49)

Tool Required:

- J 7728 Seal Installation Tool
- 1. Pump from the vehicle if necessary for access.
- Protect the drive shaft (8) with shim stock.
- Use a small chisel to cut the drive shaft seal (3) and discard the seal.



Install or Connect (Figure 50)

- Lubricate the new drive seal (3) with power steering fluid.
- 1. Drive shaft seal (3) into housing (2) with J 7728.

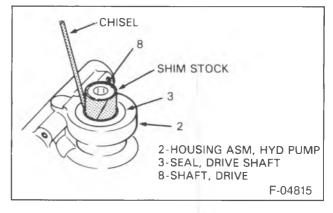


Figure 49—Shaft Seal Removal

3B3-22 POWER STEERING

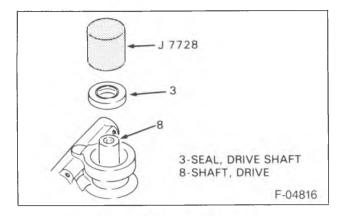


Figure 50—Seal Installation

RETURN TUBE

? Important

• Plug the return tube (1) to prevent chips from entering the pump.

Remove or Disconnect (Figure 51)

- 1. Pump from the vehicle if necessary for access.
- 2. Damaged return tube (1) using, tap, nut, and washers.

Important

• Remove the plug and any chips before installing the return tube.

Install or Connect (Figure 52)

- Coat the end of the new return tube (1) using Locite solvent 75559 and Locite 290 adhesive, or equivalent.
- 1. Press the return tube (1) into the housing (2) until bottomed.

HYDRAULIC PUMP ASSEMBLY

DISASSEMBLE

++

++ Remove or Disconnect (Figures 48 and 53)

- 1. Retaining ring (20) using a punch in the access hole.
- Gently push on the drive shaft (8) to assist in removing end cover (19), O-ring (18), pressure plate

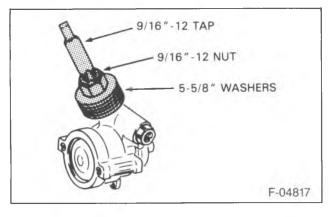


Figure 51—Return Tube Removal

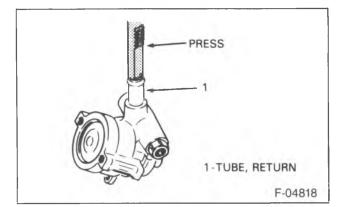


Figure 52—Return Tube Removal

spring (17), pump ring (11), pump vanes (12), and drive shaft sub assembly consisting of:

- Pump rotor (13).
- Thrust plate (10).
- Drive shaft (8)
- Shaft retaining ring (14).
- 2. O-ring (16) from housing (2).
- 3. Dowel pins (9).
- 4. Drive shaft seal (3).
- 5. Pressure plate (5), pressure plate spring (17), and O-ring (18) from the end cover (19).
- 6. Shaft retaining ring (14) from the drive shaft (8).
- 7. Pump rotor (13) and thrust plate (10) from the drive shaft (8).

CLEANING AND INSPECTION

- Clean
 - All parts in power steering fluid.
- Dry parts.

Inspect

- Pump ring (11), vanes (12), thrust plate (10), and drive shaft (8) for scoring, pitting or chatter marks.
- If noted, replace the appropriate parts.

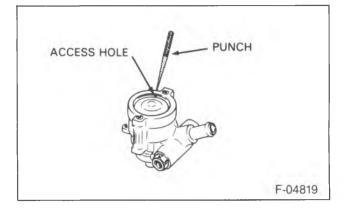


Figure 53—Retaining Ring Removal

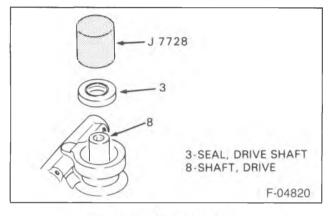


Figure 54—Seal Installation

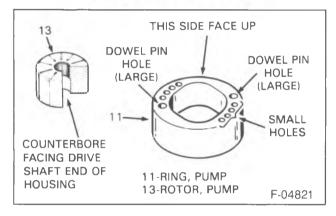


Figure 55—Rotor or Pump Ring Installation

ASSEMBLY

Install or Connect (Figures 48 and 54 through 57)

Tool Required:

J 7728 Seal Installation Tool

- Lubricate the new drive shaft seal (3) with power steering fluid.
- 1. Drive shaft seal (3) into the pump housing (2) with tool J 7728.
- 2. Pump ring dowel pins (9) into the housing (2).
- 3. Thrust plate (10), the pump rotor (13) to the drive shaft (8).
- 4. New shaft retaining ring (14) onto the drive shaft (8).

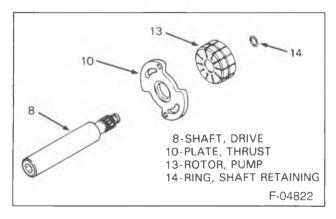


Figure 56—Retaining Ring Installation (Shaft)

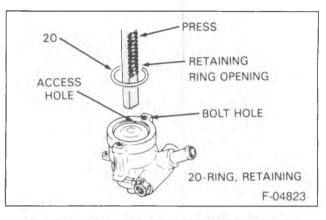


Figure 57—Retaining Ring Installation (Housing)

- 5. Drive shaft sub assembly into the housing (2).
- 6. Vanes (12) into the pump rotor (13).
- 7. Pump ring (11) with holes positioned correctly onto the dowel pins (9) in the housing (2).
- · Lubricate new O-ring (16) with power steering fluid.
- 8. O-ring (16) into the groove in the housing (2).
- 9. Pressure plate (15).
- 10. Pressure plate spring (17).
- Lubricate new O-ring (18) with power steering fluid.
- 11. O-ring (18) into the end cover (19).
- Lubricate the outer edge of the end cover (19) with power steering fluid.
- Press the end cover into the housing (2).
- 12. Retaining ring (20) into the groove in the housing (2) with the ring opening near the access hole in the housing.

3B3-24 POWER STEERING

SPECIFICATIONS

FASTENER TORQUE

Integral Power Steering Gear Pitman Shaft Over Center Preload Pitman Shaft Preload Adjuster Screw Jam Nut Side Cover Bolts Pitman Shaft Nut Pitman Shaft Nut Side Cover Bolts Pitman Shaft Nut Stall Return Guide Screws Side Cover Bolts Sold Cover Bolts Pitman Shaft Nut Steering Gear—CK (GMT 400) Pitman Shaft Nut Side Cover Bolts Sold Nem (40 ft. Ibs.) <



PAGE

PAGE

SECTION 4B

REAR AXLE

CONTENTS

71/2 and 75/8-inch Ring Gear Axles	4B1-1
81/2-inch Ring Gear Axle	4B2-1
91/2-inch Ring Gear Axle	4B3-1
10 ¹ /2-inch Ring Gear Axle	
93/4 and 101/2-inch Ring Gear Axle (Dana)	
12 Inch Ring Gear Axle (Rockwell)	4 B 6-1
Locking Differentials	4 B 7-1

SECTION 4B1

7¹/₂ AND 7⁵/₈-INCH RING GEAR AXLES

CONTENTS

SUBJECT

SUBJECT

Description	4 B 1- 1
Checking the Axle Before Disassembly	4B1- 2
Disassembly of the Rear Axle	4B1- 2
Cleaning	4B1- 2
Inspection	4B1- 4
Assembly of the Rear Axle	
Gear Tooth Pattern Check	4B1-10
Adjustments Affecting Tooth Contact	4B1-10
Specifications	4B1-11
Special Tools	

DESCRIPTION

The corporate $7^{1/2}$ and $7^{5/8}$ -inch ring gear rear axle uses a conventional ring and pinion gear set to transmit the driving force of the engine to the rear wheels. This gear set transfers this driving force at a 90 degree angle from the propeller shaft to the drive shafts.

This axle is semi-floating. The axle shafts are supported at the wheel end of the shaft by a roller bearing that is pressed into the housing. The shafts are retained into the housing by retaining clips within the differential. The pinion gear is supported by two tapered roller bearings. The pinion depth is set by a shim pack located between the gear end of the pinion and the roller bearing that is pressed onto the pinion. The pinion bearing preload is set by crushing a collapsable spacer between the bearings in the axle housing.

The ring gear is bolted onto the differential case with 10 left-hand thread bolts.

The differential case is supported in the axle housing by two tapered roller bearings. The differential and ring gear are located in relationship to the pinion by using selective shims and spacers between the bearing and the axle housing. To move the ring gear, shims are deleted from one side and an equal amount are added to the other side. These shims are also used to preload the bearings which are pressed onto the differential case. Two bearing caps are used to hold the differential into the rear axle housing.

The differential is used to allow the wheels to turn at different rates of speed while the rear axle continues to transmit the driving force. This prevents tire scuffing when going around corners and prevents premature wear on internal axle parts.

The rear axle is sealed with a pinion seal, a seal at each axle shaft end, and by a gasket between the rear cover and the axle housing.

All corporate rear axles are identified by the part number on the right axle tube near the carrier. The carrier cover does not have a drain plug.

CHECKING THE AXLE BEFORE DISASSEMBLY

Inspect

- Remove the axle cover from the rear axle and drain the axle lubricant into a suitable container.
- The ring gear backlash. Refer to "Backlash Adjustment" in this section. This information can be used to determine the cause of the axle problem. It will also help when setting up the shim packs for locating and preloading the differential case.
- 2. The case for metal chips and shavings. Determine where these chips and shavings come from, such as a broken gear or bearing cage.
- Determine the cause of the axle problem before disassembly if possible.

DISASSEMBLY OF THE REAR AXLE

Remove or Disconnect (Figure 1)

Tools Required:

- J 8107-2 Differential Side Bearing Remover Plug
- J 22888 Side Bearing Remover
- J 8614-01 Pinion Flange Remover
- J 25320 Rear Pinion Bearing Remover
- Place the rear axle in a suitable support.
- 1. The differential cover bolts (35) and the differential cover (34).
 - Drain the gear lubricant into a proper container.
- 2. Axle shafts (2). Refer to the proper service manual.
- 3. Outer wheel bearings and seals. Refer to the proper service manual.
- 4. Pinion shaft lock screw (30).
- 5. Pinion shaft (29).
- 6. Differential pinion and side gears (26).
 - Roll the pinion gears out of the case with the pinion thrust washers (27).
 - Remove the side gears and the side gear thrust washers (28). Mark the gears and the differential case as left and right.
- 7. Differential bearing cap bolts (32).
- 8. Differential bearing caps (31).
 - Mark the caps and the housing as left and right.

NOTICE: Be careful when prying the differential case out of the axle housing so as not to damage the cover gasket surface. The differential case must be supported when it is being removed to prevent the case from falling and damaging the case.

- 9. Differential carrier (24).
 - Pry the case from the axle housing at the differential "window" (figure 2).
- 10. Bearing outer races (22), shims (21), and spacers (23).

- Mark the races and the shims as left and right, and place them with the bearing caps.
- 11. Differential side bearings using J 8107-2 and J 22888 (figure 3).
 - The jaws of J 22888 must pull from beneath the bearing cone and not the cage.
- 12. Ring gear bolts (25).
 - Ring gear bolts use left-handed threads.

NOTICE: Do not pry the ring gear from the case. This will damage the ring gear and the differential case.

- 13. Ring gear (20) from the differential.
 - Drive the ring gear off with a brass drift if necessary.




- Drive pinion bearing preload (figure 4).
- The pinion assembly for looseness by moving it back and forth. (Looseness indicates excessive bearing wear).
- 14. Pinion flange nut (11) and washer (12) using J 8614-01 to hold the pinion flange.
- 15. Pinion flange using J 8614-01.
- 16. Pinion (20) from the axle housing.
 - Thread the pinion nut halfway onto the pinion.
 - Replace the differential cover (34) with two bolts (35) to keep the pinion from falling to the floor.
 - Drive the pinion out of the housing with a hammer and a soft drift.
 - Remove the cover (34) and the pinion (20).
- 17. Collapsible spacer (17) from the pinion (figure 5).
- 18. Outer seal (14) and outer pinion bearing (15).
- 19. Inner bearing (18) and shim (19) from the pinion.
 - Press the bearing off the pinion using J 25320 (figure 6).
 - Remove the shim.
- 20. Bearing cups (15) and (18) from the axle housing using a hammer and a punch in the slots provided for this purpose.
 - Work the cups out of the housing evenly, moving the punch back and forth between one side of the cup and the other.

CLEANING

Do not steam clean drive parts having ground and polished surfaces such as gears, bearings, and shafts. These parts should be cleaned in a suitable solvent. All parts should be disassembled before cleaning.

Parts should be thoroughly dried immediately after cleaning. Use soft, clean, lintless rags. Parts may be dried with compressed air. Do not allow the bearings to spin while drying them with compressed air.

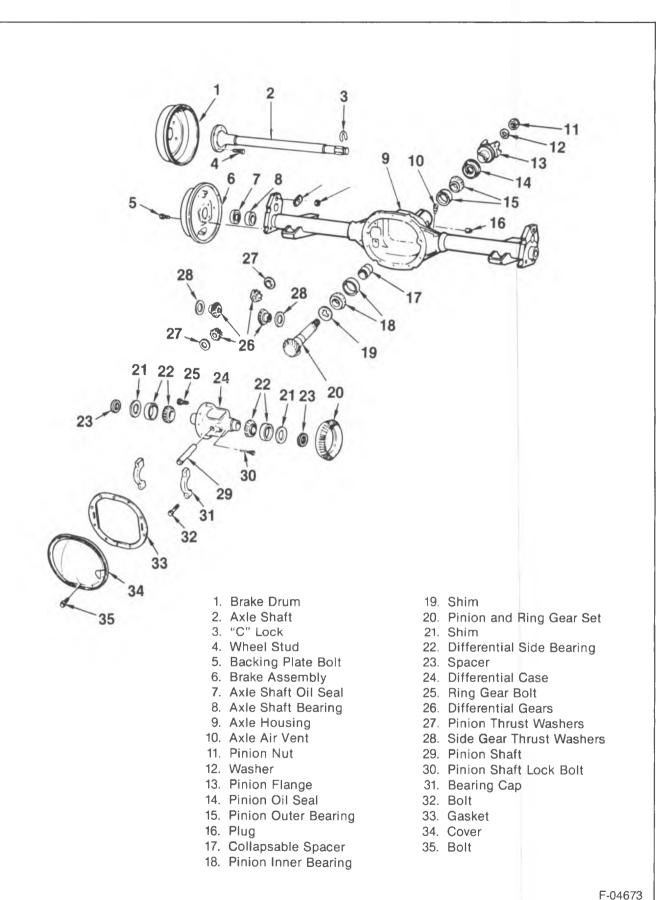

71/2 AND 75/8-INCH RING GEAR AXLES 4B1-3

Figure 1—Rear Axle Components

4B1-4 71/2 AND 75/8-INCH RING GEAR AXLES

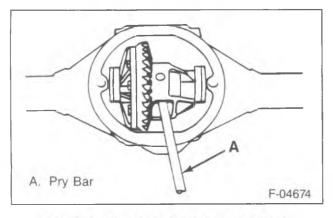


Figure 2—Removing the Differential Case

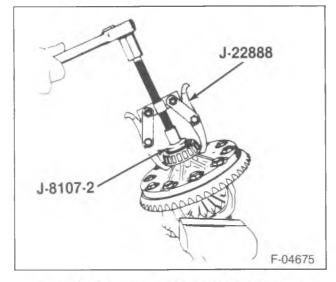


Figure 3—Removing Differential Side Bearings

INSPECTION

It is very important to carefully and thoroughly inspect all drive unit parts before reassembly.

Thorough inspection of the drive parts for wear or stress and subsequent replacement of worn parts will eliminate costly drive component repair after reassembly.

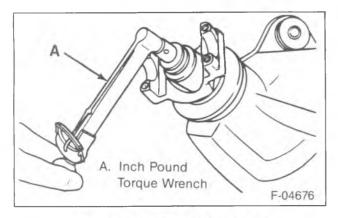


Figure 4—Checking Pinion Preload

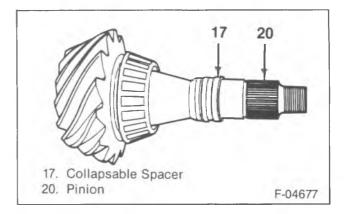


Figure 5—Pinion Collapsable Spacer

AXLE HOUSING

Inspect

- The carrier bore for nicks or burrs that would prevent the outer diameter of the pinion seal from sealing. Remove any burrs that are found.
- The bearing cup bores for nicks or burrs. Remove any burrs that are found.
- The housing for cracks. Replace the housing if any cracks are found.
- The housing for foreign material such as metal chips, dirt, or rust. Refer to "Cleaning" in this section.

DIFFERENTIAL

Inspect

- Pinion gear shaft for unusual wear.
- Pinion gear and side gear teeth for wear, cracks, scoring, and spalling.
- Thrust washers for wear.
- The fit of the differential side gears in the differential case.
- The fit of the side gears on the axle shafts.
- Differential case for cracks and scoring.
- · Replace all worn parts.

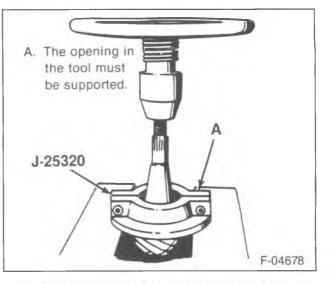


Figure 6-Removing the Pinion Rear Bearing

PINION AND RING GEAR

Inspect

- Pinion and ring gear teeth for cracking, chipping, scoring, or excessive wear.
- Pinion splines for wear.
- Pinion flange splines for wear.
- The fit of the pinion on the pinion flange.
- The sealing surface of the pinion flange for nicks, burrs, or rough tool marks which would cause damage to the seals' inside diameter and result in an oil leak.
- Replace all worn or broken parts.
- Ring and pinion gears are matched sets and are both replaced any time a replacement of either is necessary.

BEARINGS

Inspect

- Bearings visually and by feel.
- The bearings should feel smooth when oiled and rotated while applying as much hand pressure as possible.
- The large end of the bearing rollers for wear. This is where tapered roller bearing wear is most evident.
- Bearing cups for wear, cracks, brinelling and scoring.
- Bearings and cups are only replaced as sets.
- If the rear axle was operated for an extended period of time with very loose bearings, the ring gear and drive pinion will also require replacement.
- Low mileage bearings may have minute scratches and pits on the rollers and the bearing cups from the initial pre-load. Do not replace a bearing for this reason.
- Bearing cups for cracks or chips.

SHIMS

Inspect

• Shims for cracks and chips. Damaged shims should be replaced with an equally sized service shim.

ASSEMBLY OF THE REAR AXLE

Install or Connect (Figures 1, 7 and 8)

Tools Required:

- J 7817 Front Pinion Bearing Cup Installer
- J 7818 Rear Pinion Bearing Cup Installer
- J 8092 Driver Handle
- Pinion bearing cups (15) and (18) using J 7817, J 7818 and J 8092.

PINION DEPTH ADJUSTMENT (Figure 9)

Tools Required:

- J 21777-40 Rear Pilot Washer
- J 21777-42 Front Pilot Washer
- J 21777-43 Stud Assembly --- Bolt
- J 21777-45 Side Bearing Discs
- J 23597-1 Arbor
- J 23597-11 Gage Plate
- J 8001 Dial Indicator

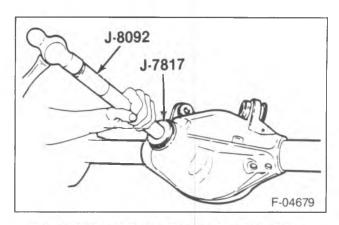


Figure 7—Front Pinion Bearing Cup Installation

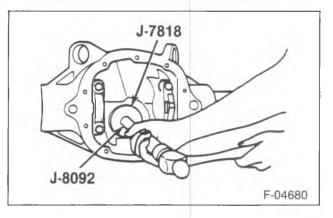


Figure 8—Rear Pinion Bearing Cup Installation

- 1. Clean all the gage parts.
- 2. Lubricate the front and rear pinion bearings with axle lubricant.
- 3. Place the bearings (15) and (18) into the pinion bearing cups.
- 4. Install J 21777-40, J 21777-42, J 21777-43 and J 23597-11 to the pinion bore (figure 9).
- 5. Hold the stud stationary at the flats of the stud.

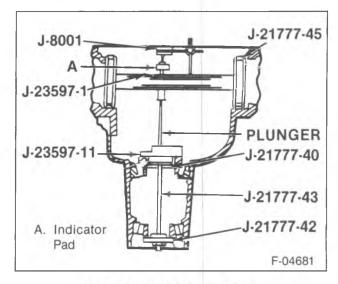


Figure 9—Pinion Depth Tools

4B1-6 71/2 AND 75/8-INCH RING GEAR AXLES

री Tighten

- Stud nut to 2.2 N m (20 in. lbs.).
- 6. Rotate the gage plate and bearings several complete revolutions to seat the bearings.
- 7. Tighten the stud nut until a torque of 1.6 to 2.2 N m (15 to 25 in. lbs.) is obtained to keep the gage plate in rotation.
- 8. Assembly J 21777-45, J 23597-11, and J 8001 to the differential bearing bores as shown in figure 9.
 - The bearing bores must be clean and burr free.
- 9. Install the side bearing caps and tighten the bolts finger tight.
- 10. Rotate the gage plate until the gaging areas are parallel with the disks.
- 11. Position the gage shaft assembly in the carrier so that the dial indicator rod is centered on the gage area of the gage block.
- 12. Set the dial indicator at zero. Push the indicator down on the indicator shaft until the needle rotates approximately 3/4 of a turn to the right. Tighten the dial indicator in this postion.
- Rotate the gage shaft slowly back and forth until the dial indicator reads the greatest deflection (when the indicator needle is centered between moving to the left and to the right).
- 14. At the point of greatest deflection, set the dial indicator to zero. Repeat the rocking action of the gage shaft to verify the zero setting.
- 15. Rotate the gage shaft until the dial indicator rod does not touch the gage block.
- Record the actual number on the dial indicator and not the number which represents how far the needle travels. This is the nominal pinion setting.

EXAMPLE: If the indicator needle moved to the left 1.70 mm (0.067-inch) to a dial reading of 0.84 mm (0.033-inch) as shown in figure 10, record the dial reading of 0.84 mm (0.033-inch) not 1.70 mm (0.067-inch).

The dial indicator should be in the 0.50 to the 1.27 mm (0.020 to 0.050-inch) range.

- 17. Check the pinion face for a pinion adjustment mark. This mark indicates the best running position for the pinion from the nominal setting.
 - If the pinion is stamped with a plus number, add that many thousandths to the nominal setting. If the nominal setting is 0.033-inch and the pinion is marked +2, the correct shim depth would be 0.033-inch + 0.002-inch = 0.035-inch.
 - If the pinion is stamped with a minus number, subtract that many thousandths from the nominal setting. If the nominal setting is 0.033-inch and the pinion is marked -2, the correct shim depth would be 0.033-inch – 0.002-inch = 0.031-inch.
 - If the pinion has no plus or minus marked on the pinion, use the nominal pinion setting to select a shim.
- 18. Remove bearing caps (31) and depth gaging tools.
- 19. Install the correct pinion shim (19) according to this procedure to the pinion.

DIFFERENTIAL CASE ASSEMBLY

- ++ Install or Connect (Figure 1)
 - Tools Required:
 - J 25299 Differential Side Bearing Installer
 - J 8092 Driver Handle
 - J 8107-2 Differential Side Bearing Remover Plug
 - · Lubricate all parts with rear axle lubricant.
 - 1. Side gear thrust washers (28) to the side gears (26).
- 2. Side gears (28) to the differential case (24).
 - Place the side gears in place on the same side as removed.
- 3. Pinion gears (28) to the differential without the thrust washers (27).
 - Place one pinion gear onto the side gears and rotate the gears until the pinion is exactly opposite from the differential opening.
 - Place the second pinion gear onto the side gears so that the pinion gear holes line up.
 - Rotate the pinion gears into place, and veryify that the pinion gears line up with the pinion shaft holes.
- 4. Pinion thrust washers (27).
 - Rotate the pinion gears toward the differential opening just enough to slide in the pinion thrust washers.
- 5. Pinion shaft.
- 6. Pinion shaft screw.
- Check that the mating surfaces of the differential case and the ring gear are clean and burr free.
- 7. Ring gear (20) to the differential case (24) (figure 11).
 - Thread two left-hand threaded studs into the ring gear on opposite sides.
 - Place the ring gear onto the case, and align the studs with the holes in the case.
- 8. New ring gear bolts (25).
 - Tighten the ring gear bolts alternately in stages gradually pulling the ring gear onto the differential case.

री Tighten

• The ring gear bolts in sequence to 120 N·m (90 ft. lbs.).

- 9. Differential side bearings (22) using J 25299, J 8092, and J 8107-2 (figure 12).
 - Place J 8107-2 into the differential on the side opposite of bearing installation to protect the differential case.
 - Drive the bearing onto the case using J 25299 and J 8092.
- 10. Differential case (24) to the axle housing. Refer to "Side Bearing Pre-Load Adjustment" in this section.

SIDE BEARING PRE-LOAD ADJUSTMENT

- The side bearing pre-load adjustment must be made before installing the pinion.
- The case side bearing pre-load is adjusted by changing the thickness of both the left and right shims equally. This will maintain the original backlash.

71/2 AND 75/8-INCH RING GEAR AXLES 4B1-7

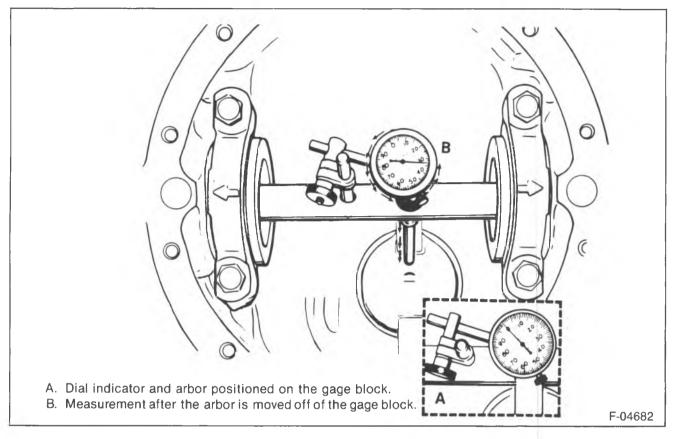


Figure 10—Checking Pinion Depth

- Production shims are cast iron and are not to be reused. Measure the production shims and spacers one at a time, and add the measurements together to obtain the sizes of the left and right shim packs.
- Service spacers are 4.32 to 4.37 mm (0.170 to 0.172-inch) thick.
- Service shims are available from 1.02 mm to 2.54 mm (0.040 to 0.100-inch) in increments of 0.101 mm (0.004-inch).
- Be sure that the side bearing surfaces are clean and free of burrs.

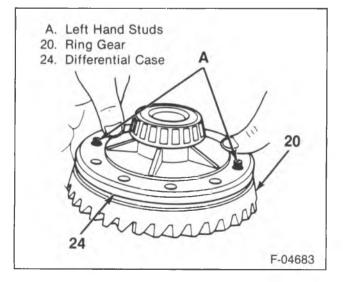


Figure 11—Ring Gear Studs

- 1. Place the case with the bearing cups installed into the axle housing (figure 1).
 - Lubricate the axle bearings with axle lubricant.
- Insert the service spacer between the bearing cup and the axle housing. Place the chamfered edge against the housing.
- 3. Install the left bearing cap and bearing cap bolts. Do not tighten the bolts.
- 4. Select one or two shims totaling the amount needed as shown in figure 13.

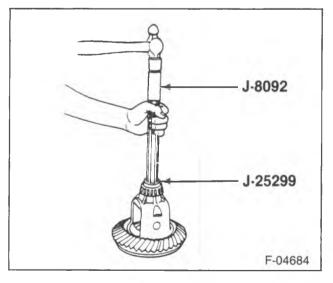


Figure 12—Side Bearing Installation

4B1-8 71/2 AND 75/8-INCH RING GEAR AXLES

Total Thickness of Both Prod. Shims Removed	Total Thickness of Service Shims To Be Used As A Starting Point
10.57 mm (0.420-inch)	1.52 mm (0.060-inch)
10.92 mm (0 430-inch)	1.78 mm (0.070-inch)
11.18 mm (0.440-inch)	2.03 mm (0.080-inch)
11.43 mm (0.450-inch)	2.29 mm (0.090-inch)
11 68 mm (0 460-inch)	2.54 mm (0.100-inch)
11.94 mm (0.470-inch)	2 79 mm (0.110-inch)
12.19 mm (0.480-inch)	3.05 mm (0.120-inch)
12.45 mm (0.490-inch)	3.30 mm (0.130-inch)
12.70 mm (0.500-inch)	3.56 mm (0.140-inch)
12.95 mm (0.510-inch)	3.81 mm (0.150-inch)
13.21 mm (0.520-inch)	4 06 mm (0.160-inch)
13.46 mm (0.530-inch)	4.32 mm (0.170-inch)
13.97 mm (0.550-inch)	4.83 mm (0.190-inch)

Figure 13—Shim Thickness Chart

- 5. Install the shim(s) between the right bearing cup and the service shim.
- The left bearing race and spacer must be against the left side of the housing.
- Determine bearing pre-load by inserting progressively larger feeler gage sizes between the right service spacer and shim.
 - Push the feeler gage downward so that it contacts the shim at the top and bottom, and then contacts the axle housing.
 - Rotate the case while using the feeler gage. This will assure an accurate reading.
 - The weight of the case will cause a light drag. Do not mistake this drag for bearing preload.
 - Start with a thin feeler gage to obtain a feel for when preload begins. It will be necessary to work the case in or out and to the left in order to insert the feeler gage.
 - The point just before additional drag begins is the correct feeler gage thickness. This is the zero setting without pre-load.
- 7. Remove the left bearing cap and shim(s) from the axle housing. Measure the shims using a micrometer. The shim pack needed is the total of the shim(s) and the feeler gage. An additional pre-load of 0.10 mm (0.004-inch) will be added to each side of the differential case after the backlash adjustment is made.
- 8. Differential case, bearing cups, shims and spacers.
- 9. Install the pinion. Refer to "Pinion Installation" in this section.

PINION INSTALLATION

Install or Connect

- Tools Required:
 - J 5590 Rear Pinion Bearing Cone Installer
 - J 23911 Pinion Oil Seal Installer
 - J 8614-01 Pinion Flange Remover
- The bearing cups should have been installed in "Pinion Depth Adjustment," in this section.
- 1. The pinion inner bearing (18) using J 5590 (figure 14).

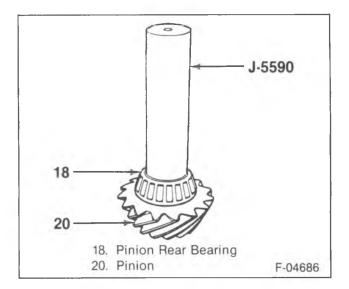


Figure 14—Pinion Inner Bearing Installation

- Drive the bearing until the bearing cone seats on the pinion shims.
- 2 A new collapsible spacer (17).
- Lubricate the pinion bearings with axle lubricant.
- 3. Pinion (20) to the axle housing.
- Outer pinion bearing (15) onto the pinion using J 5590.
 - Hold the pinion forward from inside the case while driving the bearing onto the pinion.
- 5. Pinion oil seal (14) using J 23911.
- The pinion flange (13) to the pinion by tapping it with a rawhide hammer until a few threads show through the pinion flange.
- 7. The pinion washer (12) and a new nut (11) while holding the pinion flange with J 8614-01.

री Tighten

- The nut until the pinion end play is just taken up. Rotate the pinion while tightening the nut to seat the bearings. Once there is no end play in the pinion, the preload torque should be checked.
- Remove J 8614-01. Using an inch-pound torque wrench, check the pinion preload by rotating the pinion with the wrench (figure 15).

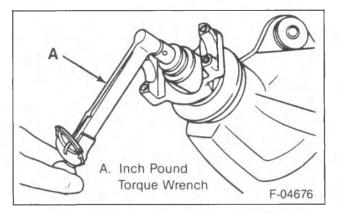


Figure 15—Checking Pinion Preload

71/2 AND 75/8-INCH RING GEAR AXLES 4B1-9

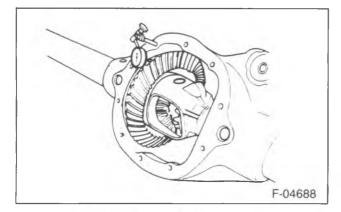


Figure 16—Checking Backlash

Preload should be at or below 2.7 to 3.6 N·m (24 to 32 in. lbs.) on new bearings, or 1.0 to 1.4 N·m (8 to 12 in. lbs.) for used bearings.

- If the preload torque is below the preloads given above, continue torquing the nut in small increments. Check the preload after each tightening. Each tightening increases the bearing preload by several pounds. If the bearing preload is exceeded, the pinion will have to be removed, and a new collapsable spacer installed.
- Once a preload of 2.7 to 3.6 N^{-m} (24 to 32 in. lbs.) has been obtained, rotate the pinion several times to assure that the bearings have seated. Recheck the preload, and adjust if necessary.
- 8. Differential case. Refer to "Backlash Adjustment" in this section.

BACKLASH ADJUSTMENT

- 1. Install the differential case, bearing cups, spacers, and shims as determined from the "Side Bearing Preload Adjustment" earlier in this section.
- 2. Rotate the case several times to seat the bearings.
- 3. Install a dial indicator to the case using a magnetic base.
- 4. Place the indicator stem at the heel end of a tooth (figure 16).
 - Set the dial indicator so that the stem is in line with the gear rotation and perpendicular to the tooth angle.
- 5. Install the differential bearing caps (31) and bolts (32).

री Tighten

The bolts to 75 N·m (55 ft. lbs.).

- 6. Check and record the backlash at three or four points around the ring gear.
 - The pinion must be held stationary when checking backlash.
 - The backlash should be the same at each point within 0.05 mm (0.002-inch). If the backlash varies more than 0.05 mm (0.002-inch), check for burrs, a distorted case flange, or uneven bolting conditions.
- Backlash at the minimum lash point measured should be between 0.13 and 0.23 mm (0.005 and 0.009-inch) for all new gear sets.

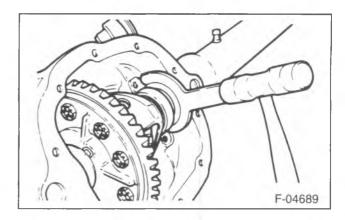


Figure 17—Differential Bearing Preload Shim Installation

- If the backlash is not within specifications, move the ring gear in or out from the pinion by increasing the thickness of one shim, and decreasing the thickness of the other shim by the same amount. This will maintain the correct rear axle side bearing preload.
 - Moving 0.05 mm (0.002-inch) worth of shim from one side of the differential to the other will change the backlash adjustment by 0.03 mm (0.001-inch).
- 9. When the backlash is correctly adjusted, remove the bearing caps and the shim packs.
- Select a shim 0.10 mm (0.004-inch) thicker than the one removed from the left side. Insert this shim between the spacer and the left bearing race (figure 17).
- 11. Install the left bearing cap and bolts.
 - Do not tighten.
- 12. Select a shim 0.10 mm (0.004-inch) thicker than the one removed from the right side. Insert the shim between the spacer and the right bearing race, and drive the shim into place (figure 17).
- 13. Install the right side bearing cap, and bolts.

री Tighten

- All bearing cap bolts to 75 N m (55 ft. lbs.).
- 14. Recheck the backlash and correct as necessary.

FINAL ASSEMBLY

Install or Connect

- 1. Drive axles. Refer to the proper service manual.
- 2. A new cover gasket and the cover (34).

री Tighten

The cover bolts (35) to 27 N^am (20 ft. lbs.).

- 3. Axle housing to the vehicle. Refer to the proper service manual.
- 4. Lubricant to the rear axle.

4B1-10 71/2 AND 75/8-INCH RING GEAR AXLES

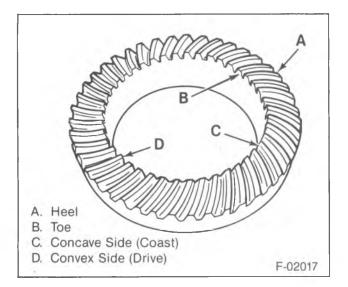


Figure 18—Gear Tooth Nomenclature

GEAR TOOTH PATTERN CHECK

Checking the ring gear to pinion tooth pattern is to be done only after setting up the axle according to the methods in this section. The pattern check is NEVER to be used as an initial check, or instead of checking pinion depth and backlash adjustments. This check is only to be used to verify the correct adjustment of the gear set after setup.

- 1. Wipe all oil out of the carrier, and carefully clean each tooth of the ring gear (figure 18).
- 2. Use gear marking compound 1052351 or equivalent and apply this mixture sparingly to all ring gear teeth, using a medium-stiff brush. When properly used, the area of pinion tooth contact will be visible when hand load is applied.
- 3. Tighten the bearing cap bolts to the specified torque.
- 4. Expand the brake shoes until a torque of 40 to 50 ft. Ibs. is required to turn the pinion.

A test made without loading the gears will not give a satisfactory pattern. Turn the pinion flange with a wrench so that the ring gear rotates one full revolution, then reverse the rotation so that the ring gear rotates one revolution in the opposite direction.

5. Observe the pattern on the ring gear teeth and compare this with figure 19.

ADJUSTMENTS AFFECTING TOOTH CONTACT

Two adjustments can be made which will affect tooth contact pattern: backlash, and the position of the drive pinion in the carrier. The effects of bearing preloads are not readily apparent on hand loaded tooth contact pattern tests; however, these adjustments should be within specifications before proceeding with backlash and drive pinion adjustments.

The position of the drive pinion is adjusted by increasing or decreasing the distance between the pinion head and the centerline of the ring gear. Decreasing the distance will move the pinion closer to the centerline of the ring gear. Increasing the distance will move the pinion farther away from the centerline of the ring gear.

Backlash is adjusted by means of the side bearing adjusting shims which move the entire case and ring gear assembly closer to, or farther from, the drive pinion. (The adjusting shims are also used to set side bearing preload).

If the thickness of the right shim is increased (along with decreasing the left shim thickness), backlash will increase.

The backlash will decrease if the left shim thickness is increased (along with a decrease in right shim thickness).

71/2 AND 75/8-INCH RING GEAR AXLES 4B1-11

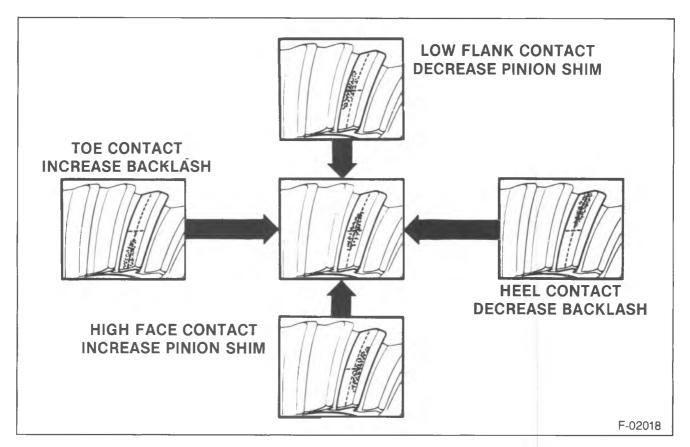



Figure 19—Gear Tooth Pattern

SPECIFICATIONS

7¹/₂ AND 7⁵/₈-INCH RING GEAR AXLE

FASTENER Ring Gear Bolts Bearing Cap Bolts Axle Cover Bolts	N∙m 120 75 27	FT. LBS. 90 55 20
SPACER AND SHIM SIZES Differential Side Bearing Spacer		SIZE 0.170-inch
Differential Side Bearing Shim Kits		0.046-0.050-inch 0.052-0.056-inch 0.058-0.062-inch 0.064-0.070-inch 0.072-0.078-inch 0.080-0.086-inch 0.088-0.094-inch 0.096-0.100-inch
Pinion Bearing Shim Kits		0.030-0.034-inch 0.035-0.039-inch 0.040-0.045-inch
Lubricant		80W-90 GL-5

4B1-12 71/2 AND 75/8-INCH RING GEAR AXLES

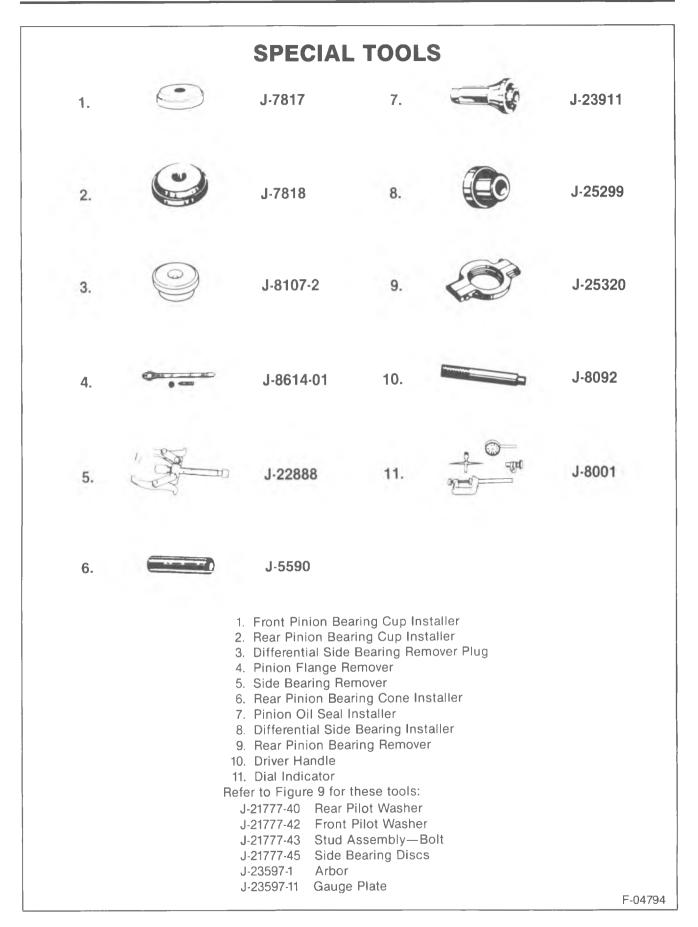

PAGE

SECTION 4B2

8¹/₂-INCH RING GEAR

CONTENTS

Description	4B2- 1
Checking the Axle Before Disassembly	
Disassembly of the Rear Axle	
Cleaning	4B2- 4
Inspection	4B2- 4
Assembly of the Rear Axle	4B2- 5
Gear Tooth Pattern Check	
Adjustments Affecting Tooth Contact	
Specifications	
Special Tools	4 B2-13

DESCRIPTION

The corporate 81/2-inch ring gear rear axle uses a conventional ring gear and pinion gear set to transmit the driving force of the engine to the rear wheels. This gear set transfers this driving force at a 90 degree angle from the propeller shaft to the drive shafts.

SUBJECT

This axle is semi-floating. The axle shafts are supported at the wheel end of the shaft by a roller bearing that is pressed into the housing. The shafts are retained into the housing by retaining clips within the differential. The pinion gear is supported by two tapered roller bearings. The pinion depth is set by a shim pack located between the gear end of the pinion and the roller bearing that is pressed onto the pinion. The pinion bearing preload is set by crushing a collapsable spacer between the bearings in the axle housing.

The ring gear is bolted onto the differential case with left-hand thread bolts.

The differential case is supported in the axle housing by two tapered roller bearings. The differential and ring gear are located in relationship to the pinion by using selective shims between the bearing and the axle housing. To move the ring gear, shims are deleted from one side and an equal amount are added to the other side. These shims are also used to preload the bearings which are pressed onto the differential case. Two bearing caps are used to hold the differential into the rear axle housing.

The differential is used to allow the wheels to turn at different rates of speed while the rear axle continues to transmit the driving force. This prevents tire scuffing when going around corners and prevents premature wear on internal axle parts.

The rear axle is sealed with a pinion seal, a seal at each axle shaft end, and by a gasket between the rear cover and the axle housing.

All corporate rear axles are identified by the part number on the right axle tube near the carrier. The carrier cover does not have a drain plug.

CHECKING THE AXLE BEFORE DISASSEMBLY

Inspect

- Remove the axle cover from the rear axle and drain the axle lubricant into a suitable container.
- The ring gear backlash. Refer to "Backlash Adjustment" in this section. This information can be used to determine the cause of the axle problem. It will also help when setting up the shim packs for locating and preloading the differential case.
- 2. The case for metal chips and shavings. Determine where these chips and shavings come from, such as a broken gear or bearing cage.
- Determine the cause of the axle problem before disassembly if possible.


DISASSEMBLY OF THE REAR AXLE

Remove or Disconnect (Figure 1)

Tools Required:

- J 8107-4 Differential Side Bearing Remover Plug
 - J 22888 Side Bearing Remover
 - J 8614-01 Pinion Flange Remover
- J 8612-B Rear Pinion Bearing Cone Remover
- Place the rear axle in a suitable support.
- 1. The differential cover bolts (14) and the differential cover (12).
 - Drain the gear lubricant into a proper container.
- 2. Axle shafts (33). Refer to the proper service manual.
- 3. Rear axle seal (28) and bearing (27). Refer to the proper service manual.

4B2-2 81/2-INCH RING GEAR

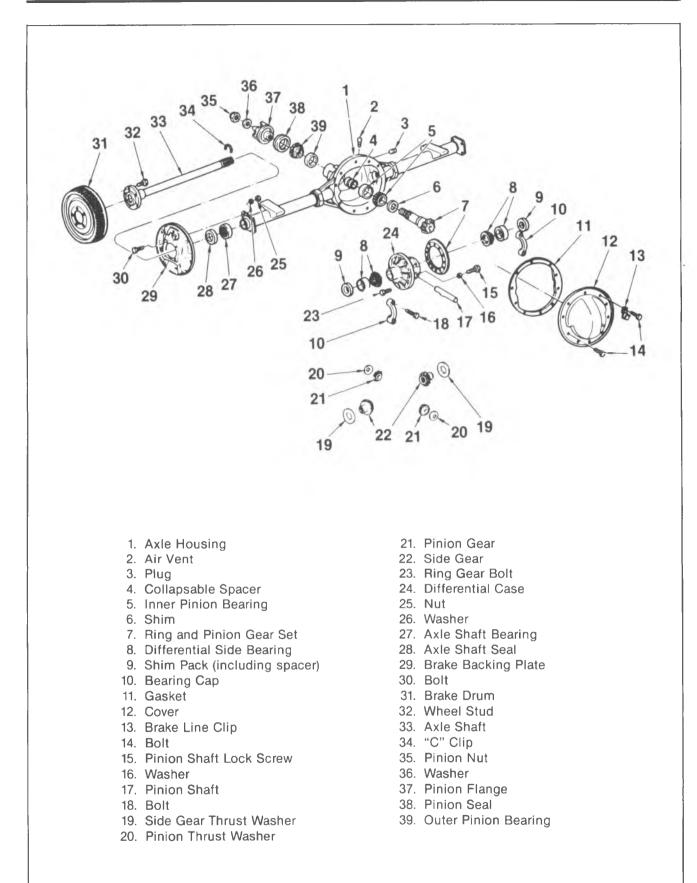

F-04687

8¹/₂-INCH RING GEAR 4B2-3

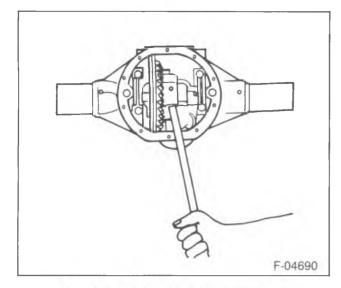


Figure 2—Prying the Differential Case

- Refer to "Checking the Axle Before Disassembly" in this section.
- 4. Pinion shaft lock screw (15).
- 5. Pinion shaft (17).
- 6. Differential pinion (21) and side gears (22).
 - Roll the pinion gears out of the case with the pinion thrust washers (20).
 - Remove the side gears and the side gear thrust washers (19). Mark the gears and the differential case as left and right.
- 7. Differential bearing cap bolts (18).
- 8. Differential bearing caps (10).
 - Mark the caps and the housing as left and right.

NOTICE: Be careful when prying the differential case out of the axle housing so as not to damage the cover gasket surface. The differential case must be supported when it is being removed to prevent the case from falling and damaging the case.

- 9. Differential carrier (24).
 - Pry the case from the axle housing at the differential "window" (figure 2).
- 10. Bearing outer races (8) and shims (9).
 - Mark the races and the shims as left and right, and place them with the bearing caps.
- 11. Differential side bearings (8) using J 8107-4 and J 22888 (figure 3).
 - The jaws of J 22888 must pull from beneath the bearing cone and not the cage. Use the slots provided for the puller.
- 12. Ring gear bolts (23).
 - Ring gear bolts use left-handed threads.

NOTICE: Do not pry the ring gear from the case. This will damage the ring gear and the differential case.

- 13. Ring gear (7) from the differential case.
 - Drive the ring gear off with a brass drift if necessary.

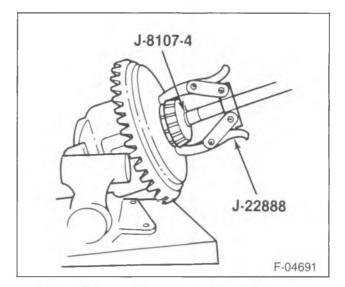


Figure 3—Removing Differential Side Bearing

Inspect

- Drive pinion bearing preload (figure 4).
- For looseness of pinion assembly by moving it back and forth. (This indicates excessive bearing wear).
- 14. Pinion flange nut (35) and washer (36) using J 8614-01 to hold the pinion flange (figure 5).
- 15. Pinion flange using J 8614-01 (figure 6).
- 16. Pinion (7) from the axle housing.
 - Thread the pinion nut halfway onto the pinion.
 - Replace the differential cover (12) with two bolts (14) to keep the pinion from falling to the floor.
 - Drive the pinion out of the housing with a hammer and a soft drift (figure 7).
- 17. Collapsable spacer (4) from the pinion.
- 18. Outer pinion seal (38) and bearing (39).
- 19. Inner bearing (5) and shim (6) from the pinion.
 - Press the bearing off the pinion using J 8612-B (figure 8).
 - Remove the shim.

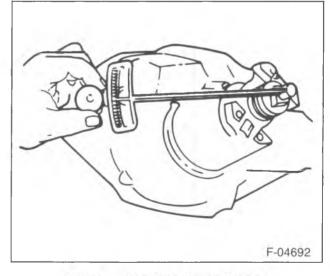


Figure 4—Checking Pinion Preload

4B2-4 81/2-INCH RING GEAR

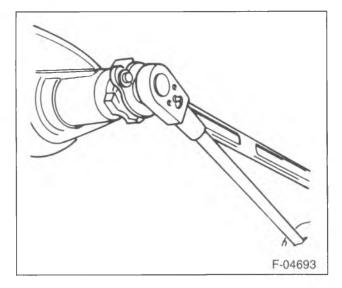


Figure 5—Drive Pinion Nut Removal

- 20. Bearing cups (5) and (39) from the axle housing using a hammer and a punch.
 - Work the cups out of the housing evenly, moving the punch back and forth between one side of the cup and the other. Use the slots provided for this purpose.

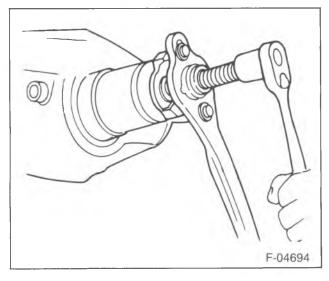
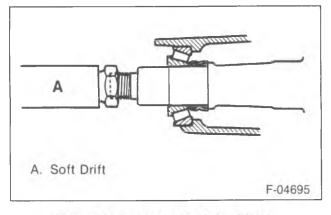


Figure 6—Pinion Flange Removal





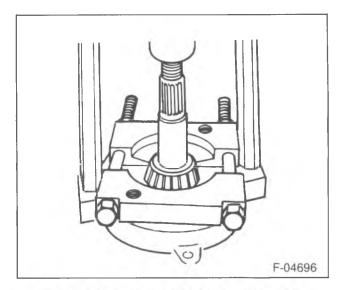


Figure 8—Removing the Pinion Rear Bearing

CLEANING

Do not steam clean drive parts having ground and polished surfaces such as gears, bearings, and shafts. These parts should be cleaned in a suitable solvent. All parts should be disassembled before cleaning.

Parts should be thoroughly dried immediately after cleaning. Use soft, clean, lintless rags. Parts may be dried with compressed air. Do not allow the bearings to spin while drying them with compressed air.

INSPECTION

It is very important to carefully and thoroughly inspect all drive unit parts before reassembly.

Thorough inspection of the drive parts for wear or stress and subsequent replacement of worn parts will eliminate costly drive component repair after reassembly.

AXLE HOUSING

Inspect

- The carrier bore for nicks or burrs that would prevent the outer diameter of the pinion seal from sealing. Remove any burrs that are found.
- The bearing cup bores for nicks or burrs. Remove any burrs that are found.
- The housing for cracks. Replace the housing if any cracks are found.
- The housing for foreign material such as metal chips, dirt, or rust. Refer to "Cleaning" in this section.

DIFFERENTIAL

Inspect

- Pinion gear shaft for unusual wear.
- Pinion gear and side gear teeth for wear, cracks, scoring, and spalling.
- Thrust washers for wear.
- The fit of the differential side gears in the differential case.

- The fit of the side gears on the axle shafts.
- Differential case for cracks and scoring.
- · Replace all worn parts.

PINION AND RING GEAR

Inspect

- Pinion and ring gear teeth for cracking, chipping, scoring, or excessive wear.
- · Pinion splines for wear.
- Pinion flange splines for wear.
- The fit of the pinion on the pinion flange.
- The sealing surface of the pinion flange for nicks, burrs, or rough tool marks which would cause damage to the seals' inside diameter and result in an oil leak.
- · Replace all worn or broken parts.
- Ring and pinion gears are matched sets and are both replaced any time a replacement of either is necessary.

BEARINGS

Inspect

- Bearings visually and by feel.
- The bearings should feel smooth when oiled and rotated while applying as much hand pressure as possible.
- The large end of the bearing rollers for wear. This is where tapered roller bearing wear is most evident.
- Bearing cups for wear, cracks, brinelling and scoring.
- · Bearings and cups are only replaced as sets.
- If the rear axle was operated for an extended period of time with very loose bearings, the ring gear and drive pinion will also require replacement.
- Low mileage bearings may have minute scratches and pits on the rollers and the bearing cups from the initial preload. Do not replace a bearing for this reason.
- · Bearing caps for cracks or chips.

SHIMS

- Inspect
 - Shims for cracks and chips. Damaged shims should be replaced with an equally sized service shim.

ASSEMBLY OF THE REAR AXLE

Install or Connect

Tools Required:

- J 8608 Rear Pinion Bearing Cup Installer
- J 8611-01 Front Pinion Bearing Cup Installer
- J 8092 Driver Handle
- 1. Front pinion bearing cup (39) using J 8611-01 and J 8092 (figure 9).
- 2. Rear pinion bearing cup (5) using J 8608 and J 8092 (figure 10).

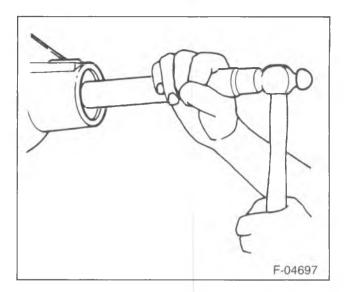


Figure 9—Front Pinion Bearing Cup Installation

PINION DEPTH ADJUSTMENT

- Tools Required:
 - J 8001 Dial Indicator Gage Set
 - J 21777-1 Arbor
 - J 21777-29 Gage Plate
 - J 21777-35 Rear Pilot Washer
 - J 21777-42 Front Pilot Washer
 - J 21777-43 Stud Assembly Bolt J 21777-45 Side Bearing Disc
- 1. Clean all the gage parts.
- Lubricate the front and rear pinion bearings with axle lubricant.
- 3. Place the bearings (39) and (5) into the pinion bearing cups.
- 4. Install J 21777-35, J 21777-42, J 21777-29 and J 21777-43 to the pinion bore (figure 11).
- 5. Hold the stud stationary at the flats of the stud.
 - री Tighten
 - Stud nut to 2.2 N m (20 in. lbs.).
- 6. Rotate the gage plate and bearings several complete revolutions to seat the bearings.

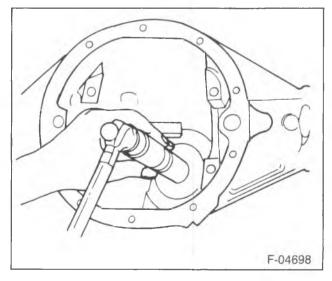


Figure 10—Rear Pinion Bearing Cup Installation

4B2-6 8¹/₂-INCH RING GEAR

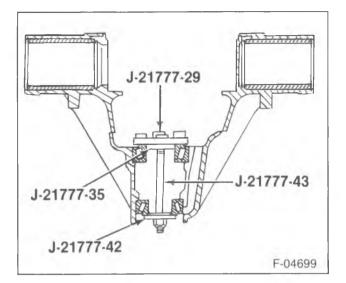


Figure 11—Gage Plate Tools

- Tighten the stud nut until a torque of 1.6 to 2.2 N m (15 to 25 in. lbs.) is obtained to keep the gage plate in rotation.
- 8. Assemble J 21777-45, J 21777-1 Arbor, and J 8001 to the differential bearing bore as shown in figure 12.
 - The bearing bores must be clean and burr free.
- 9. Install the side bearing caps, and tighten the bolts finger tight.
- Rotate the gage plate until the proper gaging area is parallel with the disks.
- 11. Position the gage shaft assembly in the carrier so that the dial indicator rod is centered on the gage area of the gage block.
- 12. Set the dial indicator at zero. Push the indicator down on the indicator shaft until the needle rotates approximately ³/₄ of a turn to the right. Tighten the dial indicator in this postion.
- 13. Rotate the gage shaft slowly back and forth until the dial indicator reads the greatest deflection (when the indicator needle is centered between movement to the left and to the right).

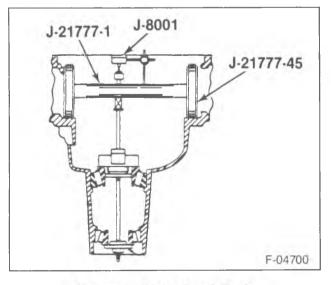


Figure 12—Pinion Depth Tools

- 14. At the point of greatest deflection, set the dial indicator to zero. Repeat the rocking action of the gage shaft to verify the zero setting.
- 15. Rotate the gage shaft until the dial indicator rod does not touch the gage block.
- Record the actual number on the dial indicator and not the number which represents how far the needle travels. This is the nominal pinion setting.
 EXAMPLE: If the indicator needle moved to the left 1.70 mm (0.067-inch) to a dial reading of 0.84 mm (0.033-inch) as shown in figure 13, record the dial reading of 0.84 mm (0.033-inch) not 1.70 mm (0.067-inch).
- Check the pinion face for a pinion adjustment mark. This mark indicates the best running position for the pinion from the nominal setting.
 - If the pinion is stamped with a plus number, add that many thousandths to the nominal setting. If the nominal setting is 0.033-inch and the pinion is marked +2, the correct shim depth would be 0.033-inch + 0.002-inch = 0.035-inch.
 - If the pinion is stamped with a minus number, subtract that many thousandths from the nominal setting. If the nominal setting is 0.033-inch and the pinion is marked -2, the correct shim depth would be 0.033-inch – 0.002-inch = 0.031-inch.
 - If the pinion has no plus or minus marked on the pinion, use the nominal pinion setting to select a shim.
- 18. Remove bearing caps (10) and depth gaging tools.
- 19. Install the correct pinion shim (6) to the pinion according to this procedure.

PINION INSTALLATION

→← Install or Connect

- **Tools Required:**
 - J 8809-01 Rear Pinion Bearing Cone Installer
 - J 22388 Pinion Oil Seal Installer
 - J 8614-01 Pinion Flange Remover
 - J 5590 Rear Pinion Bearing Cone Installer
- The bearing cups should have been installed in "Pinion Depth Adjustment" in this section.
- 1. The pinion inner bearing (5) using J 8609-01.
 - Press the bearing onto the pinion until the bearing cone seats on the pinion shims.
- 2. A new collapsable spacer (4).
- Lubricate the pinion bearings with axle lubricant.
- 3. Pinion (7) to the axle housing.
- 4. Outer pinion bearing (39) onto the pinion using J 5590.
 - Hold the pinion forward from inside the case while driving the bearing onto the pinion.
- 5. Pinion oil seal (38) using J 22388 (figure 14).
- 6. Pinion flange (37) to the pinion by tapping it with a rawhide hammer until a few threads show through the pinion flange.
- 7. Pinion washer (36) and a new nut (35) while holding the pinion flange with J 8614-01 (figure 15).

8¹/₂-INCH RING GEAR 4B2-7

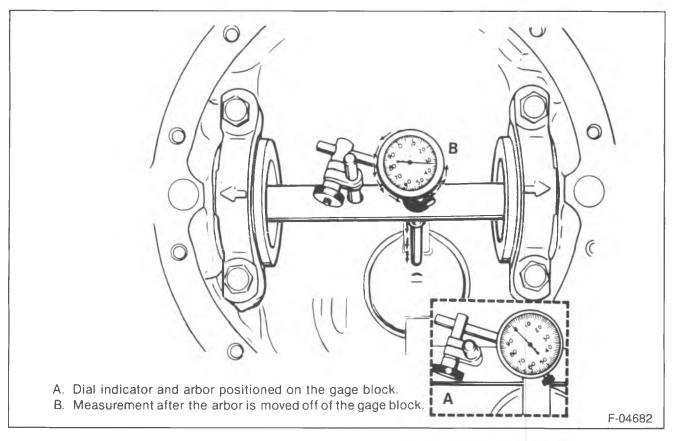


Figure 13—Checking Pinion Depth

री Tighten

- The nut until the pinion end play is just taken up. Rotate the pinion while tightening the nut to seat the bearings. Once there is no end play in the pinion, the preload torque should be rechecked.
- Remove J 8614-01. Using an inch-pound torque wrench, check the pinion preload by rotating the pinion with the wrench. Preload should be at or below 2.3 to 2.8 N·m (20 to 25 in. lbs.) on new bearings, or 1.1 to 1.7 N·m (10 to 15 in. lbs.) for used bearings (figure 16).
- If the preload torque is below the preloads given above, continue torquing the nut in small increments. Check the preload after each

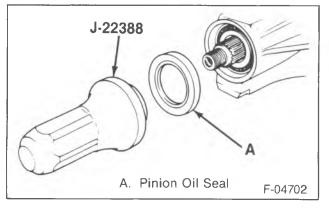


Figure 14—Installing the Pinion Oil Seal

tightening. Each tightening increases the bearing preload by several pounds. If the bearing preload is exceeded, the pinion will have to be removed, and a new collapsible spacer installed.

- Once the preload has been obtained, rotate the pinion several times to assure that the bearings have seated. Recheck the preload, and adjust if necessary.
- 8. Differential case. Refer to "Backlash Adjustment" in this section.

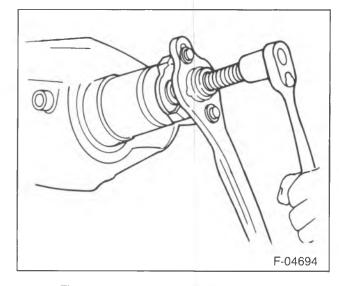


Figure 15—Installing the Pinion Flange

4B2-8 8¹/₂-INCH RING GEAR

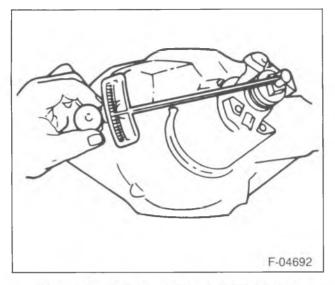


Figure 16—Checking Pinion Bearing Preload

DIFFERENTIAL CASE ASSEMBLY

++ Install or Connect (Figure 1)

Tools Required:

J 8107-4 Differential Side Bearing Remover Plug

J 8092 Driver Handle

- J 22761 Differential Side Bearing Installer
- · Lubricate all parts with rear axle lubricant.
- 1. Side gear thrust washers (19) to the side gears (22).
- 2. Side gears (22) to the differential case (24).
 - Place the side gears in place on the same side as removed.
- 3. Pinion gears (21) to the differential without the thrust washers (20).
 - Place one pinion gear onto the side gears so that the holes in the pinion gears are 180 degrees apart.
 - Rotate the pinion gears into place, and verify that the pinion gears line up with the pinion shaft holes.
- 4. Pinion thrust washers (20).
 - Rotate the pinion gears toward the differential opening just enough to slide in the pinion thrust washers.
 - Check that the mating surfaces of the differential case and the ring gear are clean and burr free.
- 5. Ring gear (7) to the differential case (24).
 - Thread two left-hand threaded studs into the ring gear on opposite sides (figure 17).
 - Place the ring gear onto the case, and align the holes in the case with the studs.
 - Press the ring gear onto the case far enough to start the bolts using J 8107-4 to protect the differential from the press ram (figure 18).
- 6. New ring gear bolts (23).
 - Tighten the ring gear bolts alternately in stages gradually pulling the ring gear onto the differential case.

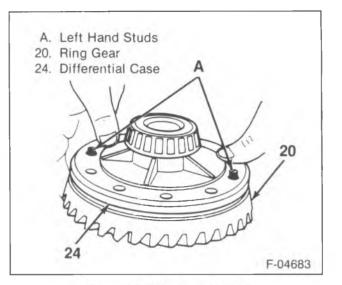


Figure 17—Ring Gear Studs

री Tighten

- The ring gear bolts in sequence to 80 N·m (60 ft. lbs.).
- 7. Differential side bearings (8) using J 22761, J 8107-4 and J 8092 (figure 19).
 - Place J 8107-4 into the differential on the side opposite of bearing installation to protect the differential case.
 - Drive the bearing onto the case using J 22761 and J 8092.
- 8. Differential case (24) to the axle housing. Refer to "Side Bearing Preload Adjustment" in this section.

SIDE BEARING PRE-LOAD ADJUSTMENT

- The differential side bearing preload is adjusted by changing the thickness of both the left and right shims equally. This will maintain the original backlash.
- Production shims are cast iron and are not to be reused.
- Service spacers are 0.170 to 0.172-inch thick.

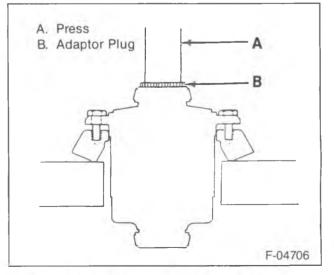


Figure 18—Installing the Ring Gear to the Case

8¹/₂-INCH RING GEAR 4B2-9

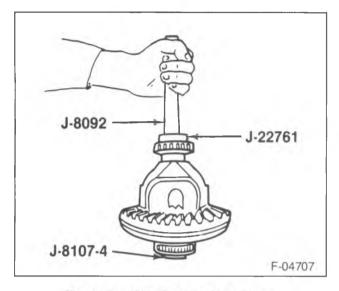


Figure 19—Side Bearing Installation

- Service shims are available from 0.040 to 0.100-inch.
- Be sure that the side bearing surfaces are clean and free of burrs.

Tool Required:

J 22779 Side Bearing Backlash Gage

- 1. Place the differential case and the bearing cups into the axle housing.
 - Lubricate the axle bearings with axle lubricant.
 - Support the case to keep it from falling into the axle housing.
- 2. Install the strap from J 22779 on the left bearing with the cap bolts. Tighten the bolts snugly.
- 3. Push the ring gear towards the pinion.
 - Engage the ring gear with the pinion tightly, to a backlash of 0.000 to 0.001-inch.
- 4. Insert J 22779 between the axle housing and the left bearing cup (figure 20).
- Move the tool back and forth in the bore while turning the adjusting nut to the right until a noticeable drag is produced (figure 21).
 - Tighten the lock bolt on the side of the tool.

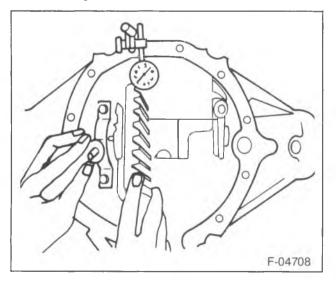


Figure 20—Installing Side Bearing Gaging Tool

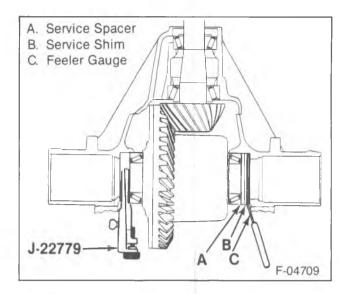


Figure 21—Measuring Side Bearing Shim Requirements

- Leave the tool in place.
- 6. Install a service spacer (9) and a service shim (9) between the right bearing cup and the axle housing.
- 7. Determine bearing preload by inserting progressively larger feeler gage sizes between the carrier and the service shim.
 - Push the feeler gage downward so that it contacts the shim at the top and bottom, and then contacts the axle housing.
 - The point just before additional drag begins is the correct feeler gage thickness. This is the zero setting without preload.
- 8. Remove the strap, J 22779, the service spacer, service shim, feeler gage, and differential case from the axle housing.
- 9. Measure J 22779 in three places using a micrometer. Average the readings (figure 22).
- 10. Add the dimensions of the right side service spacer, service shim, and the feeler gage.

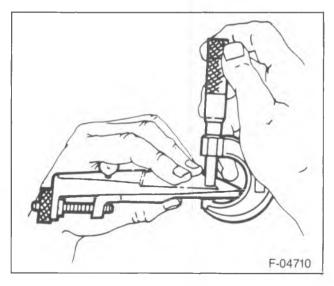


Figure 22—Measuring the Gage Plate Thickness

4B2-10 81/2-INCH RING GEAR

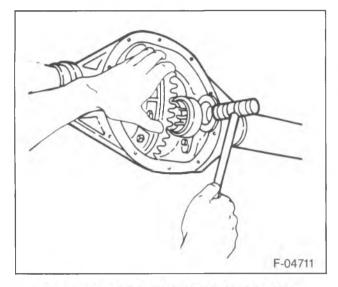


Figure 23—Installing the Final Preload Shim

- 11. For an initial backlash setting, move the ring gear away from the pinion by subtracting 0.010-inch from the ring gear side shim pack and adding 0.010-inch to the shim pack on the opposite side.
- To obtain the proper preload on the side bearings add 0.10 mm (0.004-inch) to the measurement of each shim pack.
- Install the differential. Refer to "Backlash Adjustment" in this section.

BACKLASH ADJUSTMENT

- 1. Install the differential case, bearing cups, spacers, and shims as determined from the "Side Bearing Preload Adjustment" earlier in this section (figure 23).
 - Tap the final shim into position, using a soft faced hammer.
- 2. Rotate the case several times to seat the bearings.
- 3. Install a dial indicator to the case using a magnetic base.
- 4. Place the indicator stem at the heel end of a tooth.
 - Set the dial indicator so that the stem is in line with the gear rotation and perpendicular to the tooth angle (figure 24).
- 5. Install the differential caps (10) and bolts (18).

री Tighten

• The bolts to 80 N m (60 ft. lbs.).

- Check and record the backlash at three or four points around the ring gear.
 - The pinion must be held stationary when checking backlash.
 - The backlash should be the same at each point within 0.05 mm (0.002-inch). If the backlash varies more than 0.05 mm (0.002-inch), check for burrs, a distorted case flange, uneven bolting conditions, or foreign matter between the case and the ring gear.
- 7. Backlash at the minimum lash point measured should be between 0.13 and 0.23 mm (0.005 and 0.009-inch) for all new gear sets.

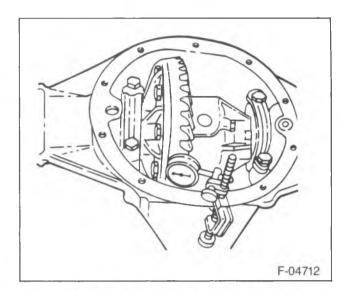


Figure 24—Checking Ring Gear Backlash

- 8. If the backlash is not within specifications, move the ring gear in or out from the pinion by increasing the thickness of one shim, and decreasing the thickness of the other shim by the same amount. This will maintain the correct rear axle side bearing preload.
 - Moving 0.003-inch worth of shim from one side of the differential to the other will change the backlash adjustment by 0.002-inch.
- 9. Recheck the backlash and correct as necessary.

FINAL ASSEMBLY

++ Install or Connect (Figure 1)

- 1. Drive axles. Refer to the proper service manual.
- 2. A new cover gasket and the cover (12).

री Tighten

- The cover bolts (14) to 27 N m (20 ft. lbs.).
- 3. Axle housing to the vehicle. Refer to the proper service manual.
- 4. Lubricant to the rear axle.

GEAR TOOTH PATTERN CHECK

Checking the ring gear to pinion tooth pattern is to be done only after setting up the axle according to the methods in this section. The pattern check is NEVER to be used as an initial check, or instead of checking pinion depth and backlash adjustments. This check is only to be used to verify the correct adjustment of the gear set after setup.

- 1. Wipe all oil out of the carrier, and carefully clean each tooth of the ring gear (figure 25).
- 2. Use gear marking compound 1052351 or equivalent and apply this mixture sparingly to all ring gear teeth, using a medium-stiff brush. When properly used, the area of pinion tooth contact will be visible when hand load is applied.
- 3. Tighten the bearing cap bolts to the specified torque.

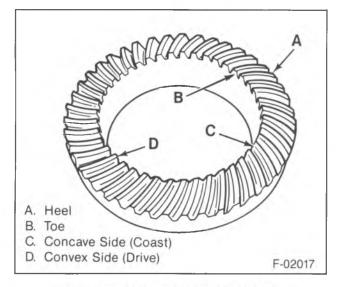


Figure 25—Gear Tooth Nomenclature

4. Expand the brake shoes until a torque of 40 to 50 ft. lbs. is required to turn the pinion.

A test made without loading the gears will not give a satisfactory pattern. Turn the pinion flange with a wrench so that the ring gear rotates one full revolution, then reverse the rotation so that the ring gear rotates one revolution in the opposite direction.

5. Observe the pattern on the ring gear teeth and compare this with figure 26.

ADJUSTMENTS AFFECTING TOOTH CONTACT

Two adjustments can be made which will affect tooth contact pattern: backlash, and the position of the drive pinion in the carrier. The effects of bearing preloads are not readily apparent on hand loaded tooth contact pattern tests; however, these adjustments should be within specifications before proceeding with backlash and drive pinion adjustments.

The position of the drive pinion is adjusted by increasing or decreasing the distance between the pinion head and the centerline of the ring gear. Decreasing the distance will move the pinion closer to the centerline of the ring gear. Increasing the distance will move the pinion farther away from the centerline of the ring gear.

Backlash is adjusted by means of the side bearing adjusting shims which move the entire case and ring gear assembly closer to, or farther from, the drive pinion. (The adjusting shims are also used to set side bearing preload).

If the thickness of the right shim is increased (along with decreasing the left shim thickness), backlash will increase.

The backlash will decrease if the left shim thickness is increased (along with a decrease in right shim thickness).

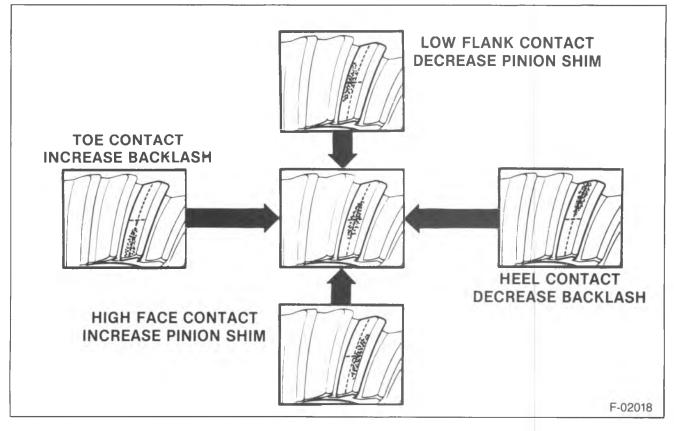


Figure 26—Gear Tooth Pattern

4B2-12 8¹/₂-INCH RING GEAR


SPECIFICATIONS

8¹/₂-INCH RING GEAR AXLE

E/	ASTENER	N·m	FT. LBS.
R	ing Gear Bolts	80	60
В	earing Cap Bolts	80	60
A	xle Cover Bolts	27	20
	PACER AND SHIM SIZES		SIZE
D	ifferential Side Bearing Spacer		0.170-inch
D	ifferential Side Bearing Shim Kits		.0.064-0.070-inch
			0.072-0.078-inch
			0.080-0.086-inch
			0.088-0.094-inch
			0.096-0.100-inch
			0.052-0.056-inch
			0.058-0.063-inch
			0.040-0.044-inch
			0.046-0.050-inch
Р	inion Bearing Shim Kits		.0.020-0.024-inch
			0.025-0.029-inch
			0.030-0.034-inch
			0.035-0.039-inch
L	ubricant		80W-90 GL-5

1.X

81/2-INCH RING GEAR 4B2-13

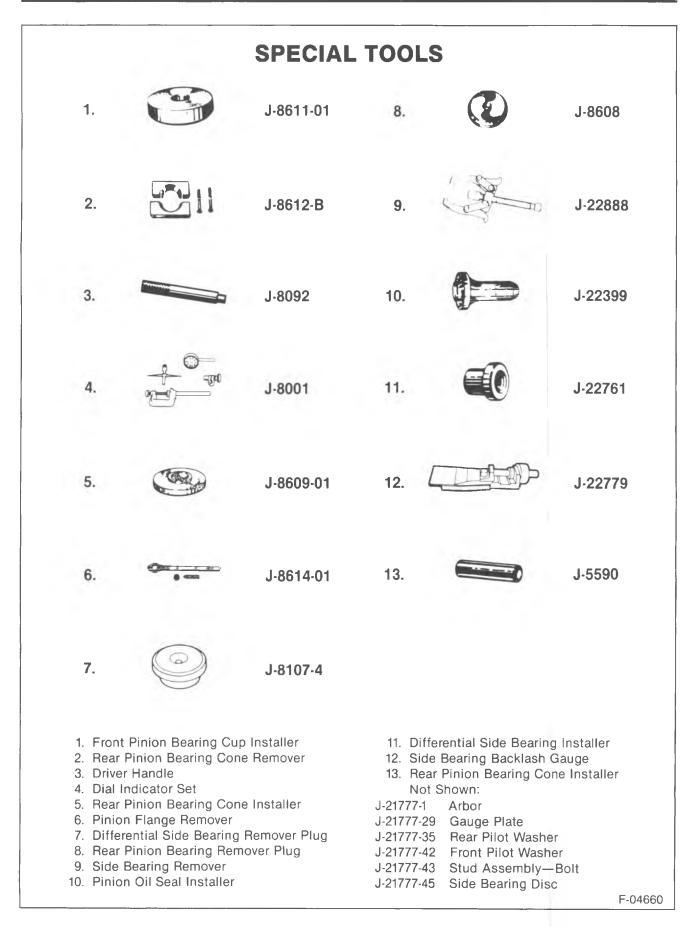

.

4B2-14 8¹/₂-INCH RING GEAR

PAGE

SECTION 4B3

9¹/₂-INCH RING GEAR

CONTENTS

Description	4B3- 1
Checking the Axle Before Disassembly	4 B 3- 1
Disassembly of the Rear Axle	
Cleaning	4 B 3- 4
Inspection	4 B 3- 4
Assembly of the Rear Axle	4B3- 5
Gear Tooth Pattern Check	
Adjustments Affecting Tooth Contact	4B3-10
Specifications	4B3-12
Special Tools	4B3-13

DESCRIPTION

The corporate 91/2-inch ring gear rear axle uses a conventional ring and pinion gear set to transmit the driving force of the engine to the rear wheels. This gear set transfers this driving force at a 90 degree angle from the propeller shaft to the drive shafts.

SUBJECT

This axle is semi-floating. The axle shafts are supported at the wheel end of the shaft by a roller bearing that is pressed into the housing. The shafts are retained into the housing by retaining clips within the differential. The pinion gear is supported by two tapered roller bearings. The pinion depth is set by a shim pack located between the gear end of the pinion and the roller bearing that is pressed onto the pinion. The pinion bearing preload is set by crushing a collapsable spacer between the bearings in the axle housing.

The ring gear is bolted onto the differential case with left-hand thread bolts.

The differential case is supported in the case by two tapered roller bearings. The differential and ring gear are located in relationship to the pinion by using selective shims between the bearing and the axle housing. To move the ring gear, shims are deleted from one side and an equal amount are added to the other side. The differential bearing preload is set by a threaded differential bearing adjusting nut located between the axle housing and the differential bearing cap. Two bearing caps are used to hold the differential into the rear axle housing.

The differential is used to allow the wheels to turn at different rates of speed while the rear axle continues to transmit the driving force. This prevents tire scuffing when going around corners and prevents premature wear on internal axle parts.

The rear axle is sealed with a pinion seal, a seal at each axle shaft end, and by RTV sealant between the rear cover and the axle housing.

All corporate rear axles are identified by the part number on the right axle tube near the carrier. The carrier cover does not have a drain plug.

CHECKING THE AXLE BEFORE DISASSEMBLY

Inspect

- Remove the axle cover from the rear axle and drain the axle lubricant into a suitable container.
- The ring gear backlash. Refer to "Backlash Adjustment" in this section. This information can be used to determine the cause of the axle problem. It will also help when setting up the shim packs for locating and preloading the differential case.
- The case for metal chips and shavings. Determine where these chips and shavings come from, such as a broken gear or bearing cage.
- Determine the cause of the axle problem before disassembly if possible.

DISASSEMBLY OF THE REAR AXLE

Remove or Disconnect (Figure 1)

Tools Required:

J 8107-3 Differential Side Bearing Remover Plug


J 22888 Differential Side Bearing Remover

J 8614-01 Pinion Flange Remover

J 22910-01 Rear Pinion Bearing Cone Remover

- Place the rear axle in a suitable support.
- 1. The differential cover bolts (24) and the differential cover (25).
 - Drain the gear lubricant into a proper container.
- 2. Axle shafts (3). Refer to the proper service manual.
- 3. Outer wheel bearings (5) and seals (14). Refer to the proper service manual.

4B3-2 91/2-INCH RING GEAR

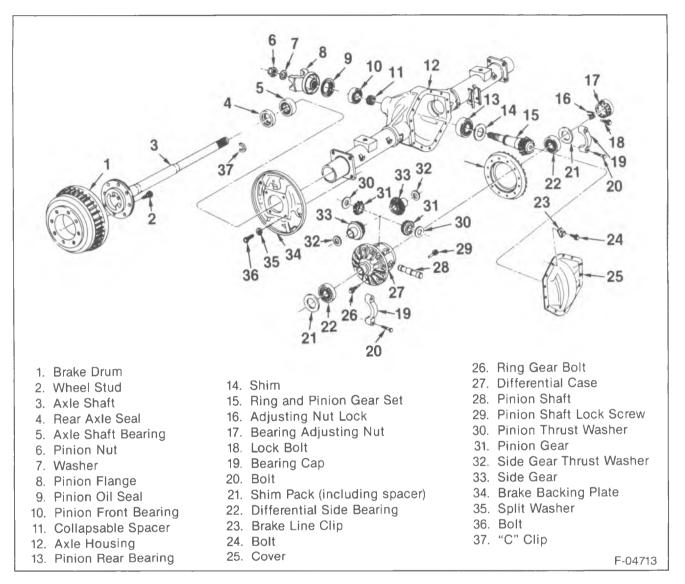



- 4. Pinion shaft lock screw (29).
- 5. Pinion shaft (28).
- 6. Differential pinion (31) and side gears (33).
 - Roll the pinion gears out of the case with the pinion thrust washer (30).
 - Remove the side gears and the side gear thrust washers (32). Mark the gears and the differential case as left and right.
- 7. Adjusting nut lock bolt (18).
- 8. Adjusting nut lock (16).
- · Loosen the adjusting nut (17).
- 9. Differential bearing cap bolts (20).
- 10. Differential bearing caps (19).
 - Mark the caps and the housing as left and right.

NOTICE: Be careful when prying the differential case out of the axle housing so not to damage the cover gasket surface. The differential case must be supported when it is being removed to prevent the case from falling and damaging the case.

- 11. Differential carrier (27).
 - Pry the case from the axle housing at the differential "window" (figure 2).
- 12. Bearing outer races (21), shims (21) and bearing adjusting nut (17).
 - Mark the races and the shims as left and right, and place them with the bearing caps.
- 13. Differential side bearings using J 8107-3 and J 22888 (figure 3).
 - The jaws of J 22888 must pull from beneath the bearing cone and not the cage. Use the slots provided for this purpose.
- 14. Ring gear bolts (26).
 - Ring gear bolts use left-handed threads.

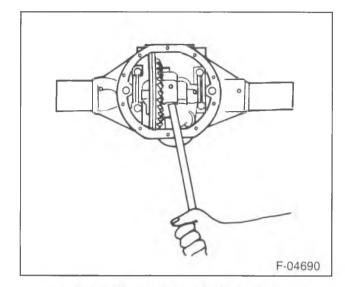


Figure 2-Removing the Differential Case

NOTICE: Do not pry the ring gear from the case. This will damage the ring gear and the differential case.

- 15. Ring gear (15) from the differential.
 - Drive the ring gear off with a brass drift if necessary.

Inspect

- Drive pinion bearing preload (figure 4).
- Pinion assembly for looseness by moving it back and forth. (Looseness indicates excessive bearing wear).
- 16. Pinion flange nut (6) and washer (7) using J 8614-01 to hold the pinion flange (figure 5).
- 17. Pinion flange using J 8614-01 (figure 6).
- 18. Pinion (15) from the axle housing.
 - Thread the pinion nut halfway onto the pinion.
 Replace the differential cover (34) with two bolts (35) to keep the pinion from falling to the floor.

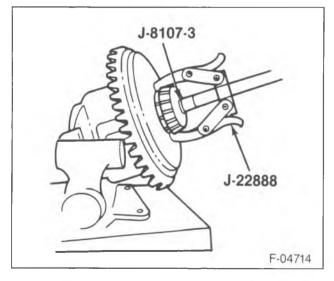


Figure 3—Removing Differential Side Bearings

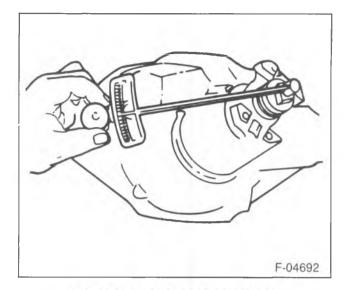


Figure 4—Checking Pinion Preload

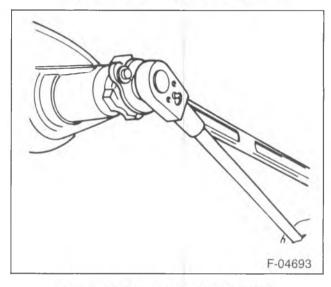


Figure 5—Drive Pinion Nut Removal

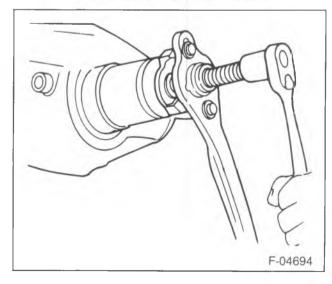


Figure 6—Pinion Flange Removal

4B3-4 91/2-INCH RING GEAR

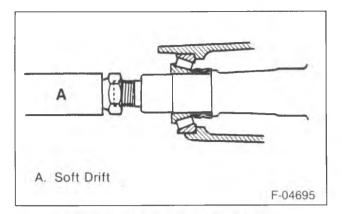


Figure 7—Removing the Drive Pinion

- Drive the pinion out of the housing with a hammer and a soft drift (figure 7).
- Remove the cover (25) and the pinion (15).
- 19. Collapsable spacer (11) from the pinion.
- 20. Outer seal (9) and outer pinion bearing (10).
- 21. Inner bearing (13) and shim (14) from the pinion.
 - Press the bearing off the pinion using J 22912-01 (figure 8).
 - Remove the shim.
- 22. Bearing cups (10) and (13) from the axle housing using a hammer and a punch.
 - Work the cups out of the housing evenly, moving the punch back and forth between one side of the cup and the other.

CLEANING

Do not steam clean drive parts having ground and polished surfaces such as gears, bearings, and shafts. These parts should be cleaned in a suitable solvent. All parts should be disassembled before cleaning.

Parts should be thoroughly dried immediately after cleaning. Use soft, clean, lintless rags. Parts may be dried with compressed air. Do not allow the bearings to spin while drying them with compressed air.

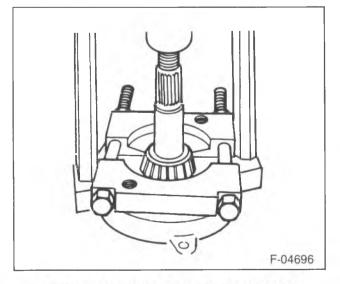


Figure 8—Removing the Pinion Rear Bearing

INSPECTION

It is very important to carefully and thoroughly inspect all drive unit parts before reassembly.

Thorough inspection of the drive parts for wear or stress and subsequent replacement of worn parts will eliminate costly drive component repair after reassembly.

AXLE HOUSING

Inspect

- The carrier bore for nicks or burrs that would prevent the outer diameter of the pinion seal from sealing. Remove any burrs that are found.
- The bearing cup bores for nicks or burrs. Remove any burrs that are found.
- The housing for cracks. Replace the housing if any cracks are found.
- The housing for foreign material such as metal chips, dirt, or rust. Refer to "Cleaning" in this section.

DIFFERENTIAL



- · Pinion gear shaft for unusual wear.
- Pinion gear and side gear teeth for wear, cracks, scoring, and spalling.
- Thrust washers for wear.
- The fit of the differential side gears in the differential case.
- · The fit of the side gears on the axle shafts.
- Differential case for cracks and scoring.
- Replace all worn parts.

PINION AND RING GEAR

Inspect

- Pinion and ring gear teeth for cracking, chipping, scoring, or excessive wear.
- · Pinion splines for wear.
- Pinion flange splines for wear.
- The fit of the pinion on the pinion flange.
- The sealing surface of the pinion flange for nicks, burrs, or rough tool marks which would cause damage to the seals' inside diameter and result in an oil leak.
- · Replace all worn or broken parts.
- Ring and pinion gears are matched sets and are both replaced any time a replacement of either is necessary.

BEARINGS

Inspect

- Bearings visually and by feel.
- The bearings should feel smooth when oiled and rotated while applying as much hand pressure as possible.
- The large end of the bearing rollers for wear. This is where tapered roller bearing wear is most evident.
- Bearing cups for wear, cracks, brinelling and scoring.
- Bearings and cups are only replaced as sets.

91/2-INCH RING GEAR 4B3-5

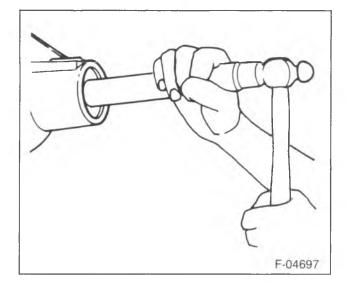


Figure 9—Front Pinion Bearing Cup Installation

- If the rear axle was operated for an extended period of time with very loose bearings, the ring gear and drive pinion will also require replacement.
- Low mileage bearings may have minute scratches and pits on the rollers and the bearing cups from the initial preload. Do not replace a bearing for this reason.
- · Bearing caps for cracks or chips.

SHIMS

Inspect


• Shims for cracks and chips. Damaged shims should be replaced with an equally sized service shim.

ASSEMBLY OF THE REAR AXLE

✦✦ Install or Connect (Figures 9 and 10)

Tools Required:

J 7817 Front Pinion Bearing Cup Installer J 22306 Rear Pinion Bearing Cup Installer

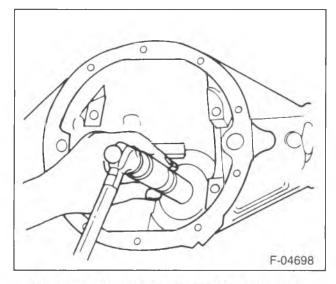



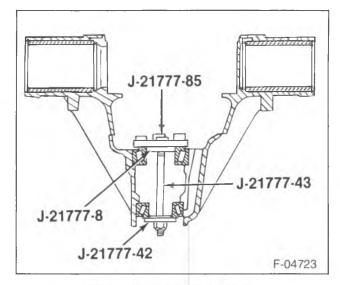


Figure 11—Gage Plate Tools

- J 8092 Driver Handle
- 1. Front pinion bearing cup (10) using J 7817 and J 8092.
- 2. Rear pinion bearing cup (13) using J 22306 and J 8092.

PINION DEPTH ADJUSTMENT

Tools Required:

- J 8001 Dial Indicator Gage Set
- J 21777-1 Arbor
 - J 21777-8 Rear Pilot Washer
 - J 21777-42 Front Pilot Washer
 - J 21777-43 Stud Assembly Bolt
- J 21777-85 Gage Plate
- J 21777-86 Side Bearing Disc
- 1. Clean all the gage parts.
- Lubricate the front and rear pinion bearings with axle lubricant.
- 3. Place the bearings (10) and (13) into the pinion bearing cups.
- 4. Install J 21777-8, J 21777-42, J 21777-85 and J 21777-43 to the pinion bore (figure 11).
- 5. Hold the stud stationary at the flats of the stud.

၃ Tighten

- Stud nut to 2.2 N m (20 in. lbs.).
- 6. Rotate the gage plate and bearings several complete revolutions to seat the bearings.
- Tighten the stud nut until a torque of 1.6 to 2.2 N m (15 to 25 in. lbs.) is obtained to keep the gage plate in rotation.
- 8. Assemble J 21777-86, J 21777-1 Arbor, and J 8001 to the differential bearing bore as shown in figure 12.
 - The bearing bores must be clean and burr free.
- 9. Install the side bearing caps, and tighten the bolts finger tight.
- 10. Rotate the gage plate until the proper gaging area is parallel with the disks.
- Position the gage shaft assembly in the carrier so that the dial indicator rod is centered on the gaging area of the gage block.

4B3-6 91/2-INCH RING GEAR

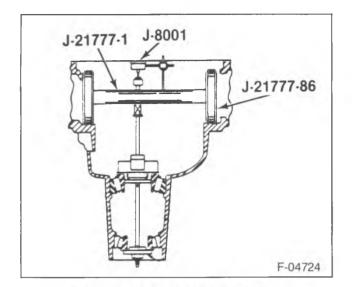


Figure 12—Pinion Depth Tools

- 12. Set the dial indicator at zero. Push the indicator down on the indicator shaft until the needle rotates approximately ³/₄ of a turn to the right. Tighten the dial indicator in this postion (figure 13).
- 13. Rotate the gage shaft slowly back and forth until the dial indicator reads the greatest deflection (when the indicator needle is centered between movement to the left and to the right).
- 14. At the point of greatest deflection, set the dial indicator to zero. Repeat the rocking action of the gage shaft to verify the zero setting.

- 15. Rotate the gage shaft until the dial indicator rod does not touch the gage block.
- 16. Record the actual number on the dial indicator and not the number which represents how far the needle travels. This is the nominal pinion setting.
 EXAMPLE: If the indicator needle moved to the left 1.70 mm (0.067-inch) to a dial reading of 0.84 mm (0.033-inch) as shown in figure 13, record the dial reading of 0.84 mm (0.033-inch) not 1.70 mm
- (0.067-inch).17. Check the pinion face for a pinion adjustment mark. This mark indicates the best running position for the pinion from the nominal setting.
 - If the pinion is stamped with a plus number, add that many thousandths to the nominal setting. If the nominal setting is 0.033-inch and the pinion is marked +2, the correct shim depth would be 0.033-inch + 0.002-inch = 0.035-inch.
 - If the pinion is stamped with a minus number, subtract that many thousandths from the nominal setting. If the nominal setting is 0.033-inch and the pinion is marked -2, the correct shim depth would be 0.033-inch – 0.002-inch = 0.031-inch.
 - If the pinion has no plus or minus marked on the pinion, use the nominal pinion setting to select a shim.
- 18. Remove bearing caps (10) and depth gaging tools.
- 19. Install the correct pinion shim (6) to the pinion according to this procedure.

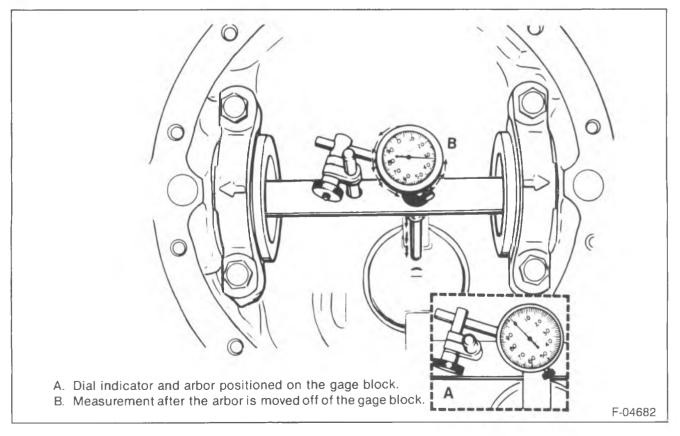


Figure 13—Checking Pinion Depth

91/2-INCH RING GEAR 4B3-7

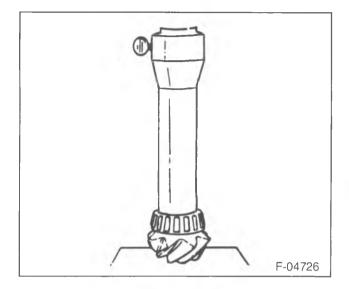


Figure 14—Installing the Pinion Inner Bearing

PINION INSTALLATION

Install or Connect

Tools Required:

- J 22388 Pinion Oil Seal Installer
- J 22804-1 Pinion Oil Seal Spacer
- J 5590 Rear Pinion Bearing Cone Installer
- The bearing cups should have been installed in "Pinion Depth Adjustment" in this section.
- 1. The pinion inner bearing (13) to the pinion.
 - Press the bearing onto the pinion until the bearing cone seats on the pinion shim(s) (figure 14).
- 2. A new collapsable spacer (11).
- Lubricate the pinion bearings with axle lubricant.
- 3. Pinion (15) to the axle housing.
- 4. Outer pinion bearing (10) onto the pinion using J 5590.
 - Hold the pinion forward from inside the case while driving the bearing onto the pinion.
- 5. Pinion oil seal (9) using J 22388 and J 22804-01 (figure 15).
- 6. The pinion flange (8) to the pinion by tapping it with a rawhide hammer until a few threads show through the pinion flange.
- 7. The pinion washer (7) and a new nut (6) while holding the pinion flange with J 8614-01 (figure 16).

री Tighten

- The nut until the pinion end play is just taken up. Rotate the pinion while tightening the nut to seat the bearings. Once there is no end play in the pinion, the preload torque should be rechecked.
- Remove J 8614-01. Using an inch-pound torque wrench, check the pinion preload by rotating the pinion with the wrench. Preload should be at or below 2.3 to 2.8 N m (20 to 25 in. lbs.) on new bearings, or 1.1 to 1.7 N m (10 to 15 in. lbs.) for used bearings (figure 17).
- If the preload torque is below the preloads given above, continue torquing the nut in small increments. Check the preload after each

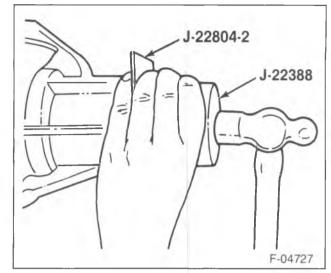


Figure 15—Installing the Pinion Oil Seal

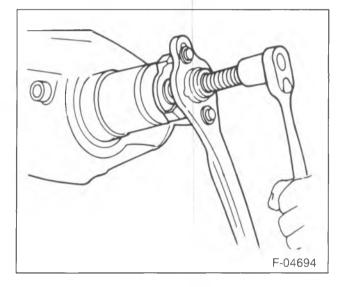


Figure 16—Installing the Pinion Flange

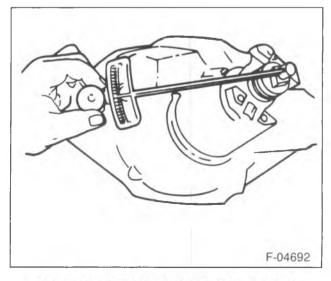


Figure 17—Checking Pinion Bearing Preload

4B3-8 91/2-INCH RING GEAR

tightening. Each tightening increases the bearing preload by several pounds. If the bearing preload is exceeded, the pinion will have to be removed, and a new collapsible spacer installed.

- Once the preload has been obtained, rotate the pinion several times to assure that the bearings have seated. Recheck the preload, and adjust if necessary.
- 8. Differential case. Refer to "Backlash Adjustment" in this section.

DIFFERENTIAL CASE ASSEMBLY

Install or Connect (Figure 1)

- Tools Required:
 - J 8107-3 Differential Side Bearing Removal Plug
 - J 8092 Driver Handle
 - J 29710 Differential Side Bearing Installer
- · Lubricate all parts with rear axle lubricant.
- 1. Side gear thrust washers (32) to the side gears (33).
- 2. Side gears (33) to the differential case (27).
 - Place the side gears in place on the same side as removed.
- 3. Pinion gears (31) to the differential without the thrust washers (30).
 - Place the pinion gears onto the side gears so that the holes in the pinion gears are 180 degrees apart.
 - Rotate the pinion gears into place, and verify that the pinion gears line up with the pinion shaft holes.
- 4. Pinion thrust washers (30).
 - Rotate the pinion gears toward the differential opening just enough to slide in the pinion thrust washers.
 - Check that the mating surfaces of the differential case and the ring gear are clean and burr free.
- 5. Ring gear (15) to the differential case (27).
 - Thread two left-hand threaded studs into the ring gear on opposite sides.
 - Place the ring gear onto the case, and align the holes in the case with the studs (figure 18).
 - Press the ring gear onto the case far enough to start the bolts using J 8107-3 to protect the differential from the press ram (figure 19).
- 6. New ring gear bolts (26).
 - Tighten the ring gear bolts alternately in stages gradually pulling the ring gear onto the differential case.



- The ring gear bolts in sequence to 145 N-m (105 ft. lbs.).
- 7. Differential side bearings (22) using J 29710, J 8107-3 and J 8092 (figure 20).
 - Place J 8107-3 into the differential on the side opposite of bearing installation to protect the differential case.
 - Drive the bearing onto the case using J 29710 and J 8092.

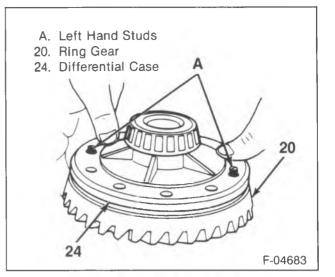


Figure 18-Ring Gear Studs

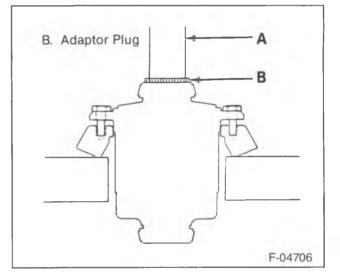


Figure 19-Installing the Ring Gear to the Case

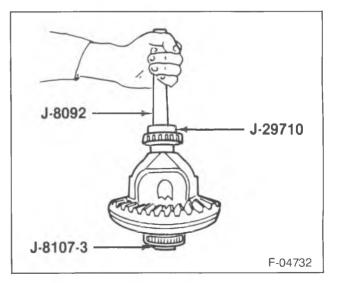


Figure 20—Side Bearing Installation

91/2-INCH RING GEAR 4B3-9

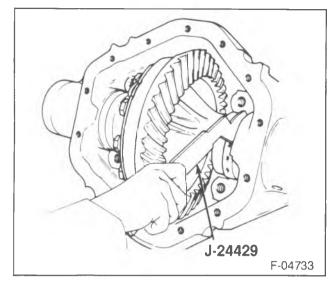


Figure 21—Adjusting the Nut

8. Differential case (27) to the axle housing. Refer to "Side Bearing Preload Adjustment" in this section.

SIDE BEARING PRELOAD ADJUSTMENT

- The differential side bearing preload is adjusted by an adjusting nut in the differential bearing bore. The bore and the bearing cap provide the mating threads for the bearing nut.
- The differential must be initially preloaded in order to determine the backlash of the gear set. After the backlash has been set, the final bearing preload is set.

Install or Connect

Tool Required:

- J 24429 Side Bearing Backlash Spanner Wrench
- 1. The bearing cups (22) to the differential bearings in their original locations.
- 2. Differential assembly to the axle housing.
- 3. Bearing shims (21).
- Push the case away from the pinion towards the axle housing.
- 4. Adjusting nut (17).
- Tighten the adjusting nut using J 24429.
- Turn the pinion to seat the bearings.
- Back off the adjusting nut.
- 5. Bearing caps (19) and bolts (20) in their original positions.
 - Assemble the caps loosely.
- Turn the adjusting nut until the nut contacts the shim. Then tighten the nut three additional slots (figure 21).

री Tighten

• The bearing cap bolts to 80 N m (60 ft. lbs.).

6. Adjusting nut lock (16) and lock bolt (18).

 Measure the ring gear to pinion backlash. Refer to "Backlash Adjustment" in this section.

र्भे Tighten

 The lock bolt to 30 N m (22 ft. lbs.) after setting the backlash.

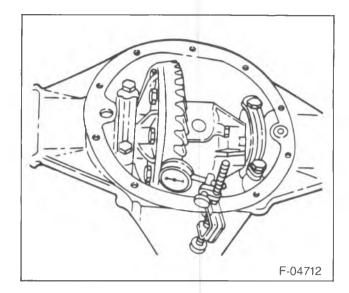


Figure 22—Checking Ring Gear Backlash

BACKLASH ADJUSTMENT

- 1. Install a dial indicator to the case using a magnetic base.
- 2. Place the indicator stem at the heel end of a tooth.
 - Set the dial indicator so that the stem is in line with the gear rotation and perpendicular to the tooth angle.
- 3. Check and record the backlash at three or four points around the ring gear (figure 22).
 - The pinion must be held stationary when checking backlash.
 - The backlash should be the same at each point within 0.05 mm (0.002-inch). If the backlash varies more than 0.05 mm (0.002-inch), check for burrs, a distorted case flange, uneven bolting conditions, or foreign matter between the case and the ring gear.
- Backlash at the minimum lash point measured should be between 0.125-0.200 mm <u>+</u> 0.050 mm (0.005-0.008-inch <u>+</u> 0.002-inch).
- 5. If the reading is too high, increase the shim pack between the differential flange side of the case and the axle housing (opposite the adjusting nut side).
- If the reading is too low, decrease the shim pack between the differential flange side of the case and the axle housing (opposite the adjusting nut side).
- 7. Adjust the side bearing preload. Refer to "Side Bearing Preload Adjustment" earlier in this section.

FINAL ASSEMBLY

++ Install or Connect (Figure 1)

- 1. Drive axles. Refer to the proper service manual.
- 2. RTV to the axle housing cover.
- 3. Cover (25) and bolts (24) to the axle housing.

री Tighten

- The cover bolts (24) to 27 N m (20 ft. lbs.).
- Axle housing to the vehicle. Refer to the proper service manual.
- 5. Lubricant to the rear axle.

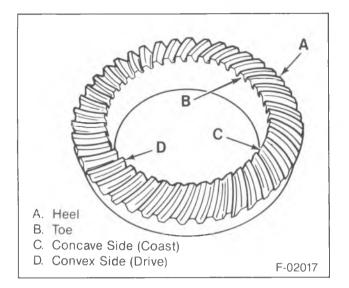


Figure 23—Gear Tooth Nomenclature

GEAR TOOTH PATTERN CHECK

Checking the ring gear to pinion tooth pattern is to be done only after setting up the axle according to the methods in this section. The pattern check is NEVER to be used as an initial check, or instead of checking pinion depth and backlash adjustments. This check is only to be used to verify the correct adjustment of the gear set after setup.

- 1. Wipe all oil out of the carrier, and carefully clean each tooth of the ring gear (figure 23).
- 2. Use gear marking compound 1052351 or equivalent and apply this mixture sparingly to all ring gear teeth, using a medium-stiff brush. When properly used, the area of pinion tooth contact will be visible when hand load is applied.
- 3. Tighten the bearing cap bolts to the specified torque.
- 4. Expand the brake shoes until a torque of 40 to 50 ft. Ibs. is required to turn the pinion.
 - A test made without loading the gears will not give a satisfactory pattern. Turn the pinion flange with a wrench so that the ring gear rotates one full revolution, then reverse the rotation so that the ring gear rotates one revolution in the opposite direction.
- 5. Observe the pattern on the ring gear teeth and compare this with figure 24.

ADJUSTMENTS AFFECTING TOOTH CONTACT

Two adjustments can be made which will affect tooth contact pattern: backlash, and the position of the drive pinion in the carrier. The effects of bearing preloads are not readily apparent on hand loaded tooth contact pattern tests; however, these adjustments should be within specifications before proceeding with backlash and drive pinion adjustments.

The position of the drive pinion is adjusted by increasing or decreasing the distance between the pinion head and the centerline of the ring gear. Decreasing the distance will move the pinion closer to the centerline of the ring gear. Increasing the distance will move the pinion farther away from the centerline of the ring gear.

Backlash is adjusted by means of the side bearing adjusting shims which move the entire case and ring gear assembly closer to, or farther from, the drive pinion. (The adjusting shims are also used to set side bearing preload).

If the thickness of the right shim is increased (along with decreasing the left shim thickness), backlash will increase.

The backlash will decrease if the left shim thickness is increased (along with a decrease in right shim thickness).

9¹/₂-INCH RING GEAR 4B3-11

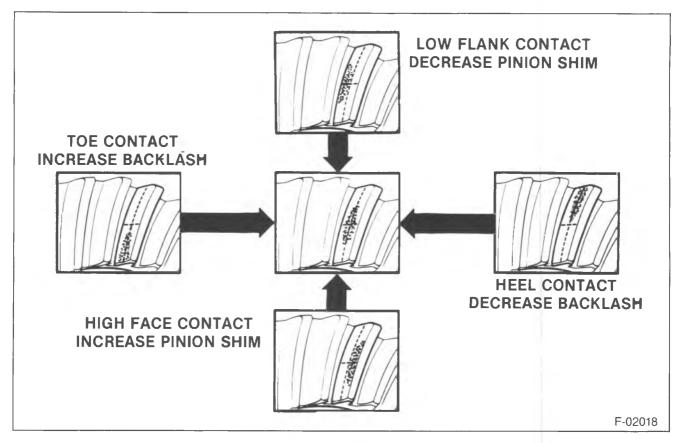


Figure 24—Gear Tooth Pattern


4B3-12 9¹/₂-INCH RING GEAR

SPECIFICATIONS

9¹/₂-INCH RING GEAR AXLE

FASTENER	N-m	FT. LBS.
Ring Gear Bolts	145	105
Bearing Cap Bolts		60
Axle Cover Bolts		20
Adjusting Nut Lock Bolt		22
SPACER AND SHIM SIZES		SIZE
Differential Side Bearing Spacer		
		0.040-0.044-inch
Differential Side Bearing Shim Kits		9 mm (0.220-inch)
	5.6	4 mm (0.222-inch)
	5.6	9 mm (0.224-inch)
	5.7	4 mm (0.226-inch)
	5.7	9 mm (0.228-inch)
	5.8	4 mm (0.230-inch)
		9 mm (0.232-inch)
		4 mm (0.234-inch)
		9 mm (0.236-inch)
		5 mm (0.238-inch)
		0 mm (0.240-inch)
		5 mm (0.242-inch)
		0 mm (0.244-inch)
		5 mm (0.246-inch)
		0 mm (0.248-inch)
		5 mm (0.250-inch)
		0 mm (0.252-inch)
		5 mm (0.254-inch) 0 mm (0.256-inch)
		5 mm (0.258-inch)
	0.0	5 mm (0.256-mcn)
Pinion Bearing Shim Kit	0.5080-0.5842 mm	(0.020-0.023-inch)
		(0.024-0.028-inch)
		(0.029-0.033-inch)
	0.8636-0.9398 mm	(0.034-0.037-inch)
Lubricant		80W-90 GL-5

91/2-INCH RING GEAR 4B3-13

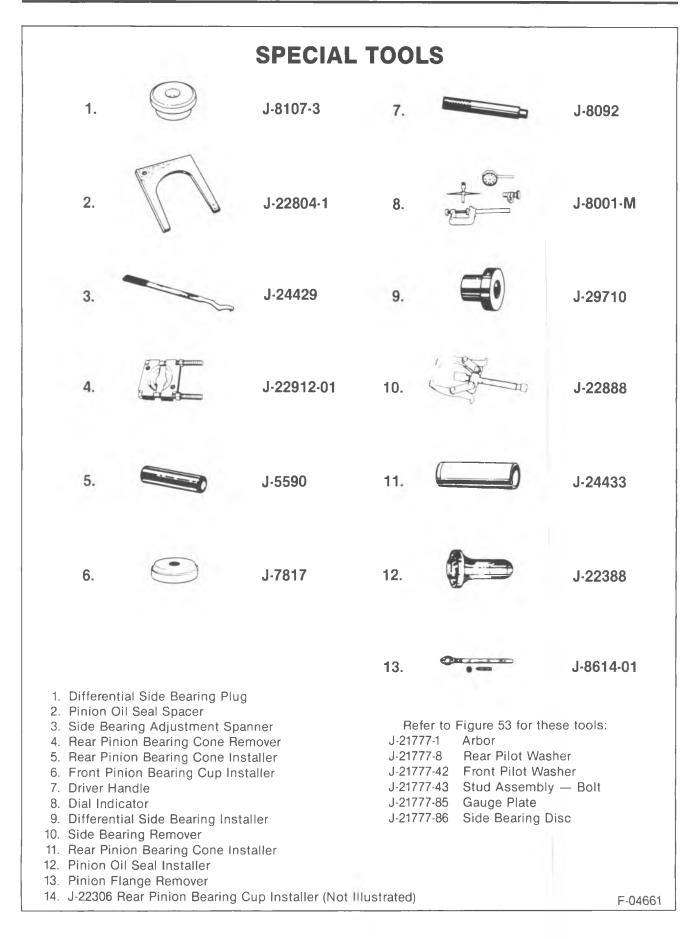

4B3-14 9¹/₂-INCH RING GEAR

PAGE

SECTION 4B4 10¹/2-INCH RING GEAR

CONTENTS

SUBJECT

DESCRIPTION

The corporate 10¹/₂-inch ring gear rear axle uses a conventional ring and pinion gear set to transmit the driving force of the engine to the rear wheels. This gear set transfers this driving force at a 90 degree angle from the propeller shaft to the drive shafts.

This axle is full-floating. The axle shaft is supported at the wheel ends by the wheel hubs. The bolts that attach the shaft to the hub, support the axle at the hub. The splined end of the shaft is supported by the differential.

The pinion gear is supported in a pinion cage by three bearings: a pinion front bearing, a pinion rear bearing, and pilot bearing. The pinion cage is separate from the axle housing. Selective shims are used between the pinion cage and the axle housing to set the pinion depth. The pinion bearing preload is set by crushing a collapsible spacer between the front and rear bearings in the pinion cage.

The ring gear is bolted onto the differential case with left-hand thread bolts.

The differential case is supported in the case by two tapered roller bearings. The differential and ring gear are located in relationship to the pinion by using two different bearing adjusting nuts. These allow the differential to be moved from side to side by adjusting the nuts in or out. The differential side bearing preload is accomplished by tightening the differential bearing adjusting nuts after the ring gear backlash has been set. Two bearing caps are used to hold the differential into the rear axle housing as well as to supply half of the threads for the bearing adjusting nuts. The differential is used to allow the wheels to turn at different rates of speed while the rear axle continues to transmit the driving force. This prevents tire scuffing when going around corners and prevents premature wear on internal axle parts.

The rear axle is sealed with a pinion seal, a gasket at each axle shaft end, and by a gasket between the rear cover and the axle housing.

All corporate rear axles are identified by the part number on the right axle tube near the carrier. The carrier cover does not have a drain plug.

CHECKING THE AXLE BEFORE DISASSEMBLY

Inspect

Remove the axle cover from the rear axle and drain the axle lubricant into a suitable container.

- Ring gear backlash. Refer to "Backlash Adjustment" in this section. This information can be used to determine the cause of the axle problem. It will also help when setting up the shim packs for locating and preloading the differential case.
- 2. Case for metal chips and shavings. Determine where these chips and shavings come from; such as a broken gear or bearing cage.

Determine the cause of the axle problem before disassembly if possible.

4B4-2 10¹/₂-INCH RING GEAR

DISASSEMBLY OF THE REAR AXLE



Remove or Disconnect (Figure 1)

- Tools Required:
 - J 8107 Side Bearing Remover Plug
 - J 22888 Differential Side Bearing Remover
 - J 8614-07 Pinion Flange Remover
 - J 22912-01 Rear Pinion Cone Remover
- · Place the rear axle in a suitable support.
- 1. Differential cover bolts (25) and the differential cover (24).
 - Drain the gear lubricant into a proper container.
- 2. Axle shafts (47). Refer to the proper service manual.
- 3. Adjusting nut lock bolts (22).
- 4. Adjusting nut lock (21).
- Loosen the adjusting nuts (19).
- 5. Differential bearing cap bolts (28) and washers (27).
- 6. Differential bearing caps (20).
 - Mark the caps and the housing as left and right.
- 7. Adjusting nuts (19) and bearing cups (18).
 - Mark the nuts and cups as left and right.
- 8. Differential carrier (34).
- 9. Differential side bearings using J 23759-A and J 8107 (figure 2).
 - The jaws of J 22888 must pull from beneath the bearing cone and not the cage.
- · Scribe a mark across the differential case.
- 10. Ring gear bolts (36) and washers (35).

NOTICE: Do not pry the ring gear from the case. This will damage the ring gear and the differential case.

- 11. Ring gear (14) from the differential.
 - Drive the ring gear off with a brass drift if necessary.
- 12. Case halves.
- 13. Differential side gears (29) and thrust washers (30).
 - Mark the gears and the case halves as left and right.
- 14. Differential pinion spider (33).
- 15. Differential pinion gears (32) and thrust washers (31) from the spider (33).

🔎 Inspect

- Drive pinion bearing preload (figure 3).
- For looseness of the pinion assembly by moving it back and forth. (Looseness indicates excessive bearing wear).
- 16. Pinion assembly cage bolts (7) and washers (8) (figure 4).
- 17. Pinion assembly cage (10).
 - Tap on the pilot end of the pinion with a hammer and a brass drift if necessary.
- 18. Pinion cage shims (11).
 - Keep the shims together for measurement later in the procedure.
 - Place the pinion cage in a soft-jawed vice.

- 19. Pinion flange nut (1) and washer (2) using J 8614-01 to hold the flange (figure 5).
- 20. Pinion flange using J 8614-01 (figure 6).
- 21. Pinion (14) from the pinion cage (10).
 - Place the cage into an arbor press as shown in figure 7 and press the pinion from the cage. Do not let the pinion fall to the floor.
- 22. Collapsible spacer (12) from the pinion.
- 23. Inner bearing (13) from the pinion (14).
 - Press the bearing from the pinion using J 22912-01 (figure 8).
- 24. Pinion seal (5) from the pinion cage.
 - Drive the seal from the cage with a hammer and punch.
- 25. Front bearing (6) from the cage.
- 26. Bearing cups from the pinion cage.
- 27. Pilot bearing (15) from the axle housing using a hammer and brass drift (figure 9).

CLEANING

Do not steam clean drive parts having ground and polished surfaces such as gears, bearings, and shafts. These parts should be cleaned in a suitable solvent. All parts should be disassembled before cleaning.

Parts should be thoroughly dried immediately after cleaning. Use soft, clean, lintless rags. Parts may be dried with compressed air. Do not allow the bearings to spin while drying them with compressed air.

INSPECTION

It is very important to carefully and thoroughly inspect all drive unit parts before reassembly.

Thorough inspection of the drive parts for wear or stress and subsequent replacement of worn parts will eliminate costly drive component repair after reassembly.

AXLE HOUSING

Inspect

- The carrier bore for nicks or burrs that would prevent the outer diameter of the pinion seal from sealing. Remove any burrs that are found.
- The bearing cup bores for nicks or burrs. Remove any burrs that are found.
- The housing for cracks. Replace the housing if any cracks are found.
- The housing for foreign material such as metal chips, dirt, or rust. Refer to "Cleaning" in this section.

DIFFERENTIAL

Inspect

- Pinion gear shaft for unusual wear.
- Pinion gear and side gear teeth for wear, cracks, scoring, and spalling.
- Thrust washers for wear.
- The fit of the differential side gears in the differential case.
- The fit of the side gears on the axle shafts.
- Differential case for cracks and scoring.
- Replace all worn parts.

10¹/₂-INCH RING GEAR 4B4-3

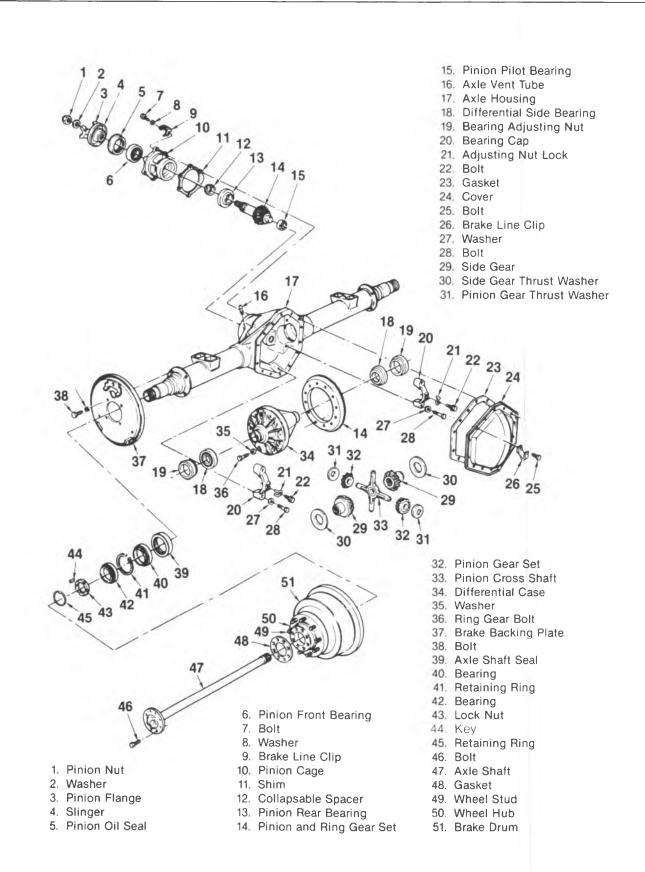


Figure 1—Rear Axle Components

F-05900

4B4-4 101/2-INCH RING GEAR

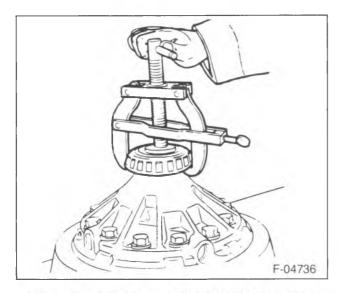


Figure 2—Removing the Differential Side Bearings

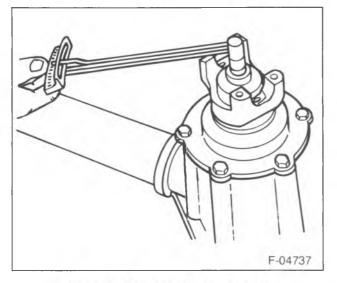


Figure 3—Checking Pinion Preload

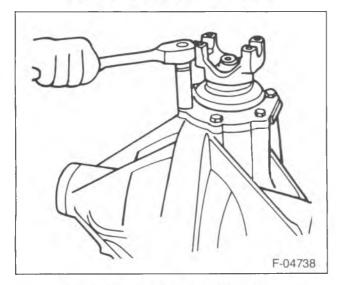


Figure 4—Removing the Pinion Cage

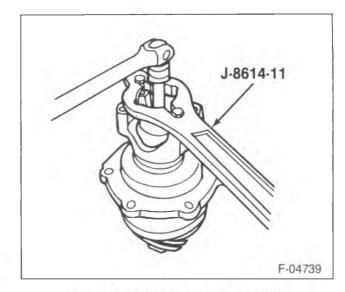


Figure 5-Drive Pinion Nut Removal

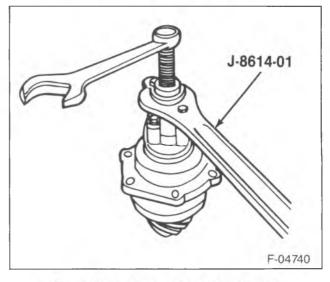


Figure 6—Removing the Pinion Flange

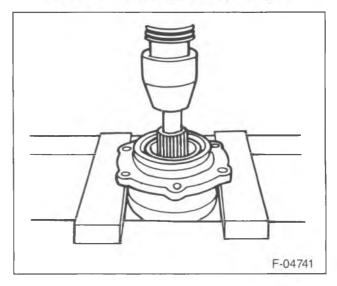


Figure 7—Pressing the Drive Pinion from the Cage

10¹/₂-INCH RING GEAR 4B4-5

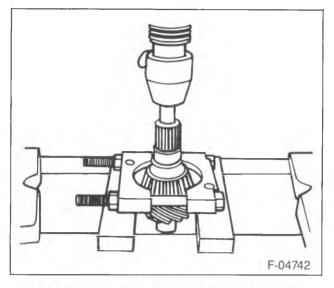


Figure 8—Removing the Pinion Inner Bearing

PINION AND RING GEAR

Inspect

- Pinion and ring gear teeth for cracking, chipping, scoring, or excessive wear.
- · Pinion splines for wear.
- · Pinion flange splines for wear.
- The fit of the pinion on the pinion flange.
- The sealing surface of the pinion flange for nicks, burrs, or rough tool marks which would cause damage to the seals' inside diameter and result in an oil leak.
- · Replace all worn or broken parts.
- Ring and pinion gears are matched sets and are both replaced any time a replacement of either is necessary.

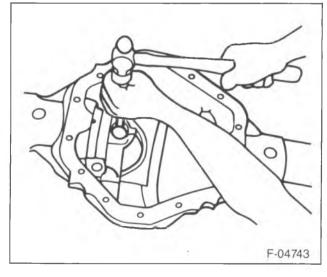


Figure 9—Removing the Pilot Bearing

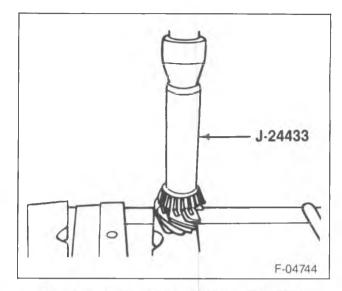


Figure 10-Installing the Inner Pinion Bearing

BEARINGS

Inspect

- Bearings visually and by feel.
- The bearings should feel smooth when oiled and rotated while applying as much hand pressure as possible.
- The large end of the bearing rollers for wear. This is where tapered roller bearing wear is most evident.
- Bearing cups for wear, cracks, brinelling and scoring.
- Bearings and cups are only replaced as sets.
- If the rear axle was operated for an extended period of time with very loose bearings, the ring gear and drive pinion will also require replacement.
- Low mileage bearings may have minute scratches and pits on the rollers and the bearing cups from the initial preload. Do not replace a bearing for this reason.
- Bearing caps for cracks or chips.

SHIMS

Inspect

• Shims for cracks and chips. Damaged shims should be replaced with an equally sized service shim.

ASSEMBLY OF THE REAR AXLE

PINION ASSEMBLY

++ Install or Connect (Figure 1)

Tools Required:

- J 24433 Rear Pinion Bearing Cone Installer
- J 8092 Driver Handle
- J 8608 Outer Pinion Bearing Cup Installer
- J 8614-01 Pinion Flange Holder
- · Lubricate all parts with axle lubricant.
- 1. Pinion rear bearing (13) onto the pinion.
 - Press the bearing onto the pinion using J 24433 (figure 10).

4B4-6 10¹/₂-INCH RING GEAR

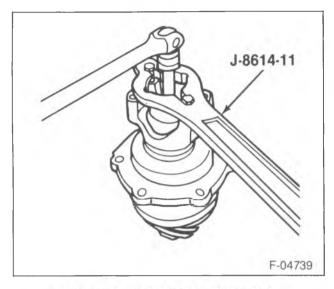


Figure 11—Installing the Pinion Nut

- 2. Outer pinion bearing cup (6) using J 8608 and J 8092.
- 3. Inner pinion bearing cup (13) using J 24432 and J 8092.
- 4. A new collapsible spacer (12) to the pinion.
- 5. Pinion (14) into the pinion gage (10).
- 6. Pinion outer bearing (6) onto the pinion.
 - Press the bearing onto the pinion.
- 7. Pinion oil seal (5) using J 24434 and J 8092.
- 8. Pinion flange oil deflector (4) and pinion flange (3) to the pinion splines.
- 9. Washer (2) and a new pinion nut (1).
- Place the pinion cage assembly into the vice.
- 10. Flange holder J 8614-01 to the pinion flange.

Tighten (Figure 11)

- The nut until the pinion end play is just taken up. Rotate the pinion while tightening in order to seat the bearings. Once there is no end play in the pinion, the preload torque should be checked.
- Remove J 8614-01. Using an inch-pound torque wrench, check the pinion preload by rotating the pinion with the wrench. Preload should be at or below 2.8 to 4.0 N·m (25 to 35 in. lbs.) for new bearings, or 0.56 to 1.7 N·m (5-15 in. lbs.) for used bearings (figure 12).
- If the preload torque is below the preloads given above, continue torquing the nut in small increments. Check the preload after each tightening. Each tightening increases the bearing preload by several pounds. If the bearing preload is exceeded, the pinion will have to be removed, and a new collapsible spacer installed.
- Once the preload has been obtained, rotate the pinion several times to assure that the bearings have seated. Recheck the preload, and adjust if necessary.
- 11. Pinion cage (10) to the axle housing. Refer to "Pinion Installation" in this section.

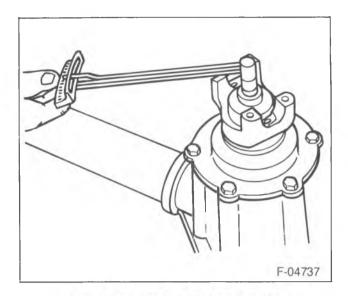


Figure 12—Checking Pinion Preload

PINION INSTALLATION

++ Install or Connect

Tools Required:

- J 34943 Pinion Pilot Bearing Installer J 8092 Driver Handle
- 1. Pinion pilot bearing (15) using J 34943 and J 8092 (figure 13).
 - Bolt the guide plate to the axle housing.
 - Place the bearing (15) onto the guide.
 - Drive the bearing into the housing. The part number of the bearing must face the pinion flange.
- Measure the pinion bearing shims (11). If a new pinion and ring gear set is installed, the pinion bearing shim pack must be adjusted.
- Examine the heads of the new and old drive pinions. Compare these codes, and adjust the pinion bearing shim pack accordingly. The chart in figure 14, shows the proper adjustment to be made to the shim pack.
- Pinion service shims are available in sizes from 0.006 to 0.024-inch.
- If the original pinion is being used, the original pinion shims should also be used.
- 2. Pinion bearing shims (11) to the pinion cage.
- The shims, housing, and cage must be clean.
 The pinion cage (10) to the axle housing (figure 15).
 - $C_{\text{age holts}}(7)$
- 4. Cage bolts (7).



• The bolts to 88 N m (65 ft. lbs.).

DIFFERENTIAL CASE ASSEMBLY

Install or Connect (Figure 1)

- Tools Required:
 - J 24429 Side Bearing Adjustment Spanner
 - J 8092 Driver Handle
 - J 8107 Side Bearing Puller Plug
- Lubricate all parts with rear axle lubricant.
- 1. Differential pinion gears (32) and thrust washers (31) to the spider (33).

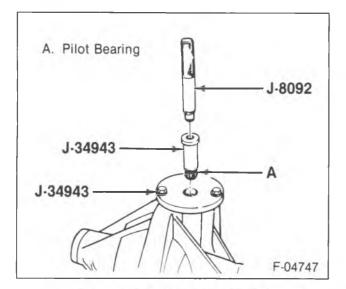


Figure 13—Installing the Pilot Bearing

	CODE NUMBER ON ORIGINAL PINION						
		+ 2	+ 1	0	-1	-2	
Code Number On Service Pinion	+2	_	Add .001	Add .002	Add .003	Add .004	
	+1	Subt. .001	-	Add .001	Add .002	Add .003	
	0	Subt. .002	Subt. .001	_	Add .001	Add .002	
	-1	Subt. .003	Subt. .002	Subt. .001	_	Add .001	
	-2	Subt. .004	Subt. .003	Subt. .002	Subt. .001.	-	
F-04748							

Figure 14—Pinion Depth Codes

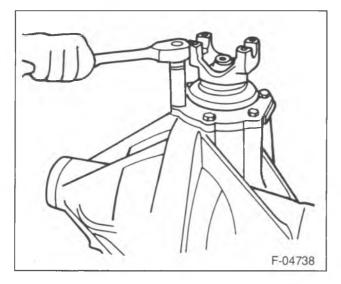


Figure 15—Installing the Pinion Cage

10¹/₂-INCH RING GEAR 4B4-7

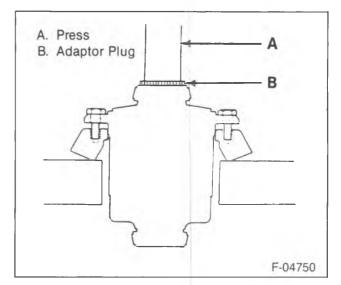


Figure 16—Ring Gear to Case Installation

- 2. Differential side gears (29) and thrust washers (30) to the differential case halves in their original locations.
- 3. Differential spider (33) to the differential.
- 4. The case halves.
 - Align the scribe marks on the case halves.
- Check that the mating surfaces of the differential case and the ring gear are clean and burr free.
- 5. Ring gear (14) to the differential (figure 16).
 - Thread two left-hand threaded studs into the ring gear on opposite sides.
 - Place the ring gear onto the case, and align the holes in the case with the studs.
 - Press the ring gear onto the case far enough to start the bolts using J 8107 to protect the differential from the press ram.
- 6. New ring gear bolts (36).
 - Tighten the ring gear bolts alternately in stages gradually pulling the ring gear onto the differential case.

4B4-8 10¹/₂-INCH RING GEAR

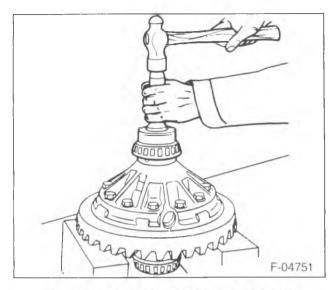


Figure 17—Installing Differential Bearings

री Tighten

- The ring gear bolts in sequence to 163 N m (120 ft. lbs.).
- 7. Differential side bearings (18) using J 24429 and J 8092 (figure 17).
 - Place J 8107 into the differential on the side opposite of bearing installation to protect the differential case.
 - Drive the bearing onto the case using J 24429 and J 8092.
- 8. Differential case (34) to the axle housing. Refer to "Side Bearing Preload Adjustment" in this section.

SIDE BEARING PRELOAD ADJUSTMENT

- The differential side bearing preload is adjusted by two adjusting nuts in the differential bearing bore. The bore and the bearing cap provide the mating threads for the bearing nut.
- The differential must be initially preloaded in order to determine the backlash of the gear set. After the backlash has been set, the final bearing preload is set.

Install or Connect (Figure 18)

Tool Required:

- J 24429 Side Bearing Backlash Spanner Wrench
- 1. The bearing cups (20) to the differential bearings in their original locations.
- 2. Differential assembly to the axle housing.
- 3. Adjusting nuts (19).
- 4. Bearing caps (20) and bolts (28) in their original positions.
 - · Assembly the caps loosely.
- Loosen the right side adjusting nut, and tighten the left side nut using J 24429 until the ring gear contacts the drive pinion. Do not force the gears into contact. This is the zero lash point.
- Back off the left adjusting nut approximately two slots to obtain the initial backlash adjustment.
- 5. Adjusting nut lock (21) and lock bolt (22) to the left nut.

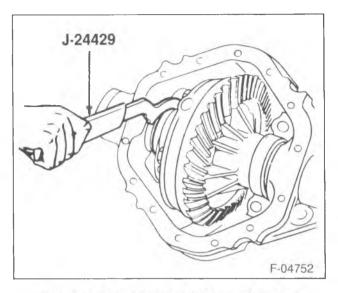


Figure 18-Adjusting the Differential Preload

- Do not tighten.
- Tighten the right adjusting nut firmly to force the case into solid contact with the left adjusting nut. Rotate the pinion several times to seat the bearings.
- Loosen the right adjusting nut until it is free from its bearing.
- Tighten the right adjusting nut until it just contacts the bearing. Additionally tighten the nut two slots for used bearings, or three slots if new bearings are installed.
- 6. Adjusting nut lock (21) and lock bolt (22) to the left nut.
 - Do not tighten.

री Tighten

- The bearing cap bolts (28) to 183 N m (135 ft. lbs.).
- Measure the ring gear to pinion backlash. Refer to "Backlash Adjustment" in this section.

BACKLASH ADJUSTMENT

- 1. Install a dial indicator to the case using a magnetic base (figure 19).
- 2. Place the indicator stem at the heel end of a tooth.
 - Set the dial indicator so that the stem is in line with the gear rotation and perpendicular to the tooth angle.
- 3. Check and record the backlash at three or four points around the ring gear.
 - The pinion must be held stationary when checking backlash.
 - The backlash should be the same at each point within 0.05 mm (0.002-inch). If the backlash varies more than 0.05 (0.002-inch), check for burrs, a distorted case flange, uneven bolting conditions, or foreign matter between the case and the ring gear.
- 4. The backlash at the minimum lash point measured should be between 0.125-0.200 mm (0.005-0.008-inch). The maximum acceptable reading is 0.076-0.203 mm (0.003-0.008-inch).

10¹/₂-INCH RING GEAR 4B4-9

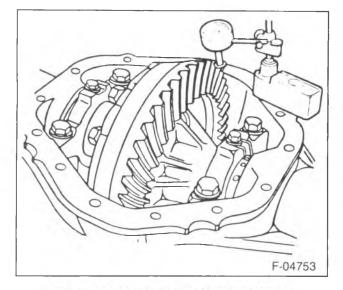


Figure 19—Measuring Gear Set Backlash

- 5. If the reading is too high, remove the adjusting nut locks, and loosen the right nut one slot, and tighten the left nut one slot (figure 18).
- 6. If the reading is too low, remove the adjusting nut locks, and loosen the left nut one slot, and tighten the right nut one slot.
- The side bearing preload will remain set, as long as the adjusting nut is tightened an equal amount to the nut which was loosened.

FINAL ASSEMBLY

Install or Connect (Figure 1)

- 1. Drive axles. Refer to the proper service manual.
- 2. Cover gasket (23) and cover (24) to the housing.
- 3. Cover bolts (25).

री Tighten

- The cover bolts (25) to 27 N m (20 ft. lbs.).
- 4. Axle housing to the vehicle. Refer to the proper service manual.
- 5. Lubricant to the rear axle.

GEAR TOOTH PATTERN CHECK

Checking the ring ger to pinion tooth pattern is to be done only after setting up the axle according to the methods in this section. The pattern check is NEVER to be used as an initial check, or instead of checking pinion depth and backlash adjustments. This check is only to be used to verify the correct adjustment of the gear set after setup.

- 1. Wipe all oil out of the carrier, and carefully clean each tooth of the ring gear (figure 20).
- Use gear marking compond 1052351 or equivalent and apply this mixture sparingly to all ring gear teeth, using a medium-stiff brush. When properly used, the area of pinion tooth contact will be visible when hand load is applied.
- Tighten the bearing cap bolts to the specified torque.

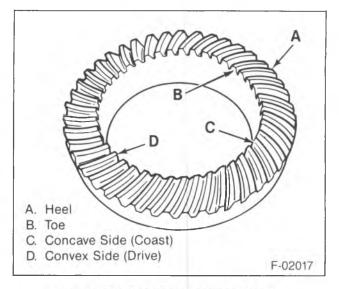


Figure 20—Gear Tooth Nomenclature

- 4. Expand the brake shoes until a torque of 40 to 50 ft. lbs. is required to turn the pinion. A test made without loading the gears will not give a satisfactory pattern. Turn the pinion flange with a wrench so that the ring gear rotates one full revolution, then reverse the rotation so that the ring gear rotates one revolution in the opposite direction.
- 5. Observe the pattern on the ring gear teeth and compare this with figure 21.

ADJUSTMENTS AFFECTING TOOTH CONTACT

Two adjustments can be made which will affect tooth contact pattern: backlash, and the position of the drive pinion in the carrier. The effects of bearing preloads are not readily apparent on hand loaded tooth contact pattern tests; however, these adjustments should be within specifications before preceeding with backlash and drive pinion adjustments.

The position of the drive pinion is adjusted by increasing or decreasing the distance between the pinion head and the centerline of the ring gear. The shim is used in the rear axle to compensate for manufacturing tolerances. Decreasing the distance will move the pinion closer to the centerline of the ring gear. Increasing the distance will move the pinion farther away from the centerline of the ring gear.

Backlash is adjusted by means of the side bearing adjusting shims and/or adjusting nuts, which move the entire case and ring gear assembly closer to, or farther from, the drive pinion. (The adjusting shims are also used to set side bearing preload.)

If the thickness of the right shim is increased (along with decreasing the left shim thickness), backlash will increase.

The backlash will decrease if the left shim thickness is increased (along with a decrease in right shim thickness).

4B4-10 10¹/₂-INCH RING GEAR

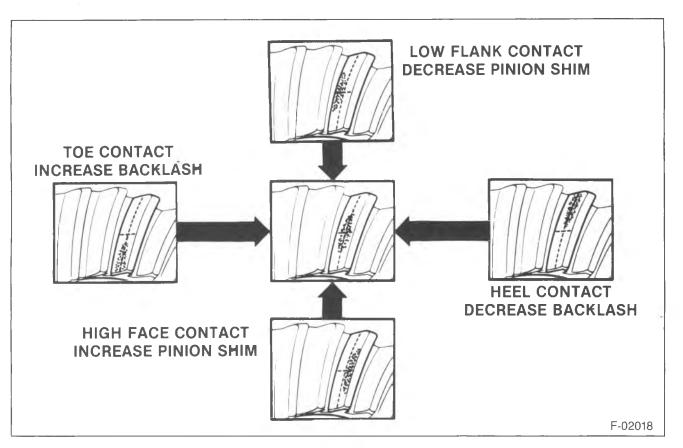


Figure 21—Gear Tooth Pattern

10¹/₂-INCH RING GEAR 4B4-11

SPECIFICATIONS

10¹/2-INCH RING GEAR AXLE (CORPORATE)

FASTENER Ring Gear Bolts. Bearing Cap Bolts. Axle Cover Bolts. Adjusting Nut Lock Bolts	N m 163 183 27 30	FT. LBS. 120 135 20 22
SPACER AND SHIM SIZES Pinion Bearing Shims.		0.007-inch 0.008-inch 0.010-inch 0.011-inch 0.012-inch 0.013-inch 0.014-inch 0.015-inch 0.016-inch 0.017-inch 0.018-inch 0.019-inch 0.020-inch 0.022-inch 0.022-inch 0.023-inch
Lugingant		

4B4-12 10¹/₂-INCH RING GEAR



Special Tools

SECTION 4B5

DANA REAR AXLES

CONTENTS

SUBJECT Checking the Axle Before Disassembly......4B5-15

9³/₄-INCH RING GEAR

DESCRIPTION

The Dana 93/4-inch ring gear rear axle uses a conventional ring and pinion gear set to transmit the driving force of the engine to the rear wheels. This gear set transfers this driving force at a 90 degree angle from the propeller shaft to the drive shafts.

This axle is full-floating. The axle shaft is supported at the wheel ends by the wheel hubs. The bolts that attach the shaft to the hub, support the axle at the hub. The splined end of the shaft is supported by the differential.

The pinion gear is supported by two tapered roller bearings. The pinion depth is set by a shim pack between the inner pinion bearing cup and the rear axle housing. The pinion bearing preload is set by a shim pack at the front of the axle housing between the bearing cone and the pinion gear.

The ring gear is bolted onto the differential case with right-hand thread bolts.

The differential case is supported in the case by two tapered roller bearings. The differential and ring gear are located in relationship to the pinion by using selective shims between the bearings and the differential case. To move the ring gear, shims are deleted from one side and an equal amount are added to the other side. Differential side bearing preload is set by the axle housing. (The axle housing is spread to remove the differential from the housing). When the spreader is removed, the housing sets the bearing preload.

Two bearing caps are used to hold the differential into the rear axle housing.

The differential is used to allow the wheels to turn at different rates of speed while the rear axle continues to transmit the driving force. This prevents tire scuffing when going around corners and prevents premature wear on internal axle parts.

The rear axle is sealed with a pinion seal, a hub seal, and RTV between the differential cover and the rear axle housing.

All Dana axles are identified by the part number on the right axle tube next to the manufacturing date which is next to the carrier. The model number is cast on the ear of the carrier. The carrier cover does not have a drain plug.

CHECK THE AXLE BEFORE DISASSEMBLY

10 Inspect

- Remove the axle cover from the rear axle and drain the axle lubricant into a suitable container.
- 1. The ring gear backlash. Refer to "Backlash Adjustment" in this section. This information can be used to determine the cause of the axle problem. It will also help when setting up the shim packs for locating and preloading the differential case.
- 2. The case for metal chips and shavings. Determine where these chips and shavings come from, such as a broken gear or bearing cage.

PAGE

4B5-2 DANA REAR AXLES

 Determine the cause of the axle problem before disassembly if possible.

DISASSEMBLY OF THE REAR AXLE

Remove or Disconnect (Figure 1)

Tools Required:

- J 24385-01 Differential Housing Spreader
- J 29721 Differential Side Bearing Remover
- J 29721-70 Side Bearing Adapters
- J 8107-3 Side Bearing Puller Plug
- J 8614-01 Pinion Flange Holder
- Place the rear axle in a suitable support.
- 1. The differential cover bolts (17) and the differential cover (14) (figure 2).
 - Drain the gear lubricant into a proper container.
- 2. Axle shafts (38). Refer to the proper service manual.
- 3. Bearing cap bolts (19) (figure 3).
- 4. Bearing caps (18).
 - The mating letters are stamped on the caps and the axle housing. The caps are to be reassembled exactly as removed.
- Assemble J 24385-01 to the differential housing as shown in figure 4.
- Assemble the dial indicator as shown in figure 4. Preset the gage at least 0.020-inch, and then rotate the gage housing to zero the dial.

NOTICE: Do not spread the differential carrier more than 0.38 mm (0.015-inch). Over-spreading the carrier can damage or distort the carrier.

- Spread the carrier while examining the dial indicator. Do not spread the carrier more than 0.38 mm (0.015-inch).
- 5. Differential case (22) from the carrier (1) using two pry bars (figure 5).
- 6. The spreader J 24385-01 from the carrier (1).
- 7. Bearing cups (20).
 - Mark the cups as left and right, and place them with the proper bearing caps.
- 8. Differential side bearings (20) using J 29721, J 29721-70, and J 8107-3 (figure 6).
 - Mark the bearings as left and right, and place them with the proper bearing caps and cups.
- 9. Differential shims (21).
 - Mark the shims as left or right.
- 10. Ring gear bolts (23).
- Place shop towels over the vice jaws. Put the differential case in the vice (figure 7).

NOTICE: Do not pry the ring gear from the case, this will damage the ring gear and the differential case.

- 11. Ring gear (2) from the differential case using a rawhide hammer.
 - Ring gear (2) from the vise.
- · Put the differential case in the vise.

- 12. Lock pin (29) from the differential using a hammer and a punch (figure 8).
- Pinion shaft (28) using a hammer and a brass drift (figure 9).
- 14. Differential pinion gears (24) and thrust washers (26).
 - Rotate the side gears until the pinion gears are in the opening of the differential (figure 10).
- 15. Differential side gears (25) and thrust washers (27).
 - Mark the gears and washers as left and right.
- Replace the carrier cover (14) using two bolts (17) to keep the pinion from falling to the floor.



- Drive pinion bearing preload (figure 11).
- For looseness of the pinion assembly by moving it back and forth. (Looseness indicates excessive bearing wear).
- 16. Pinion nut (12) and washer (11) using J 8614-01 to hold the pinion (figure 12).
- 17. Pinion flange (10) using J 8614-01 (figure 13).
- 18. Pinion (2) from the carrier using a rawhide hammer to tap the pinion (figure 14).
- 19. Carrier cover (14) and the pinion (2).
- 20. Pinion preload shims (6).

· Keep the shims together on the bench.

- 21. Pinion seal (9).
- 22. Pinion outer bearing (7) and oil slinger (8).
- 23. Bearing cups (3) and (7) from the axle housing using a hammer and a punch (figure 15).

• Work the cups out of the housing evenly, moving the punch back and forth between one side of the cup and the other.

- 24. Pinion adjusting shims (4) and baffle (5).
 - Keep the shims together on the bench.
- 25. Pinion inner bearing (3) using J 29721 and J 29721-70 (figure 16).

CLEANING


Do not steam clean drive parts having ground and polished surfaces such as gears, bearings, and shafts. These parts should be cleaned in a suitable solvent. All parts should be disassembled before cleaning.

Parts should be thoroughly dried immediately after cleaning. Use soft, clean, lintless rags. Parts may be dried with compressed air. Do not allow the bearings to spin while drying them with compressed air.

INSPECTION

It is very important to carefully and thoroughly inspect all drive unit parts before reassembly.

Thorough inspection of the drive parts for wear or stress and subsequent replacement of worn parts will eliminate costly drive component repair after reassembly.

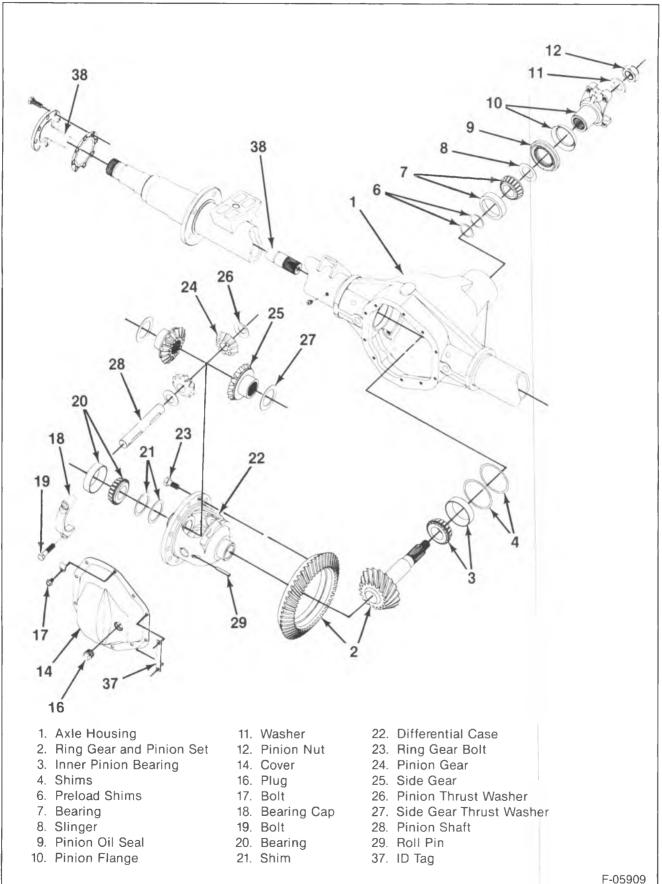



4B5-4 DANA REAR AXLES

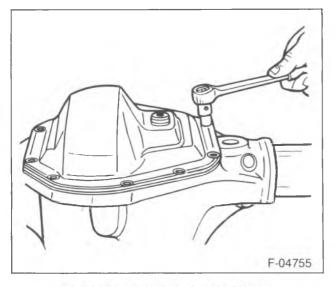


Figure 2-Removing the Axle Cover

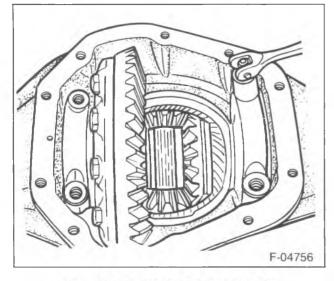


Figure 3—Removing the Bearing Cap

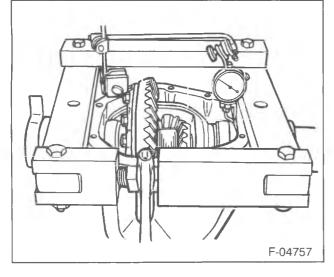


Figure 4—Spreading the Differential Case

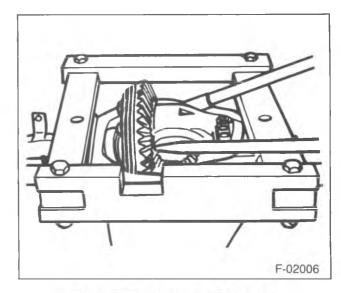


Figure 5-Removing the Differential

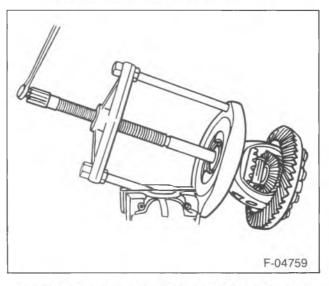


Figure 6-Removing the Differential Side Bearings

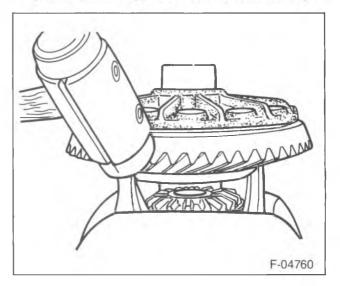


Figure 7—Removing the Ring Gear

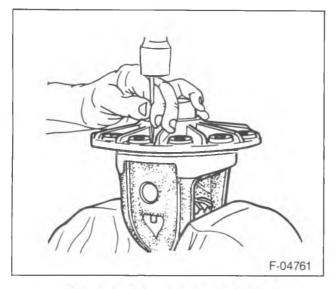


Figure 8-Removing the Lock Pin

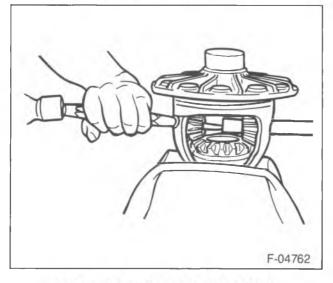


Figure 9—Removing the Pinion Shaft

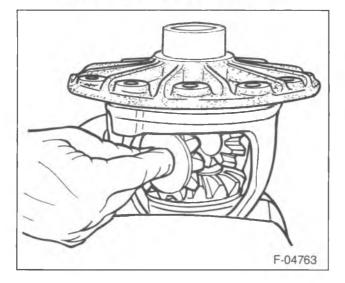


Figure 10—Removing the Pinion Gears

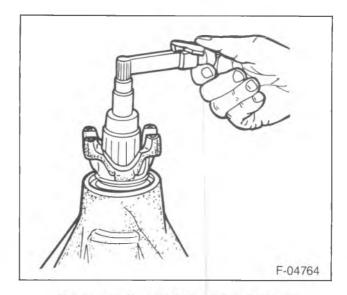


Figure 11-Checking the Pinion Preload

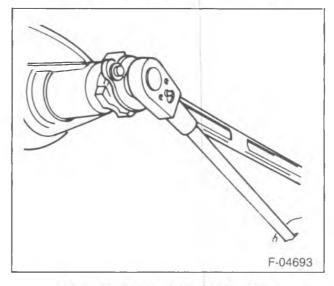


Figure 12—Drive Pinion Nut Removal

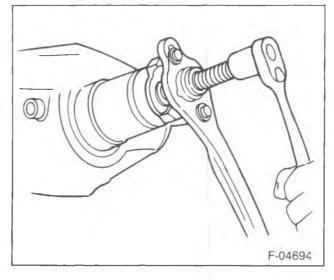


Figure 13—Pinion Flange Removal

4B5-6 DANA REAR AXLES

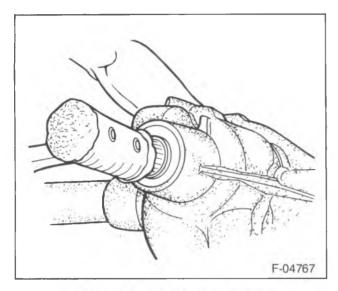


Figure 14—Removing the Pinion

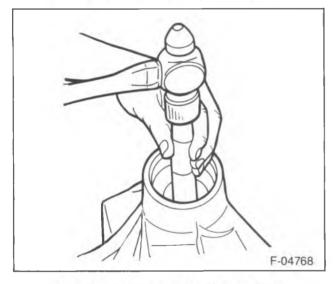


Figure 15—Removing the Bearing Cups

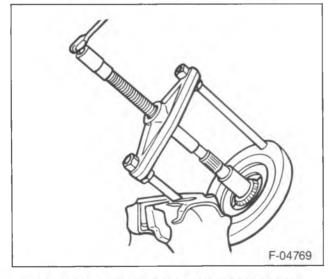


Figure 16-Removing the Pinion Inner Bearing

AXLE HOUSING

Inspect

- The carrier bore for nicks or burrs that would prevent the outer diameter of the pinion seal from sealing. Remove any burrs that are found.
- The bearing cup bores for nicks or burrs. Remove any burrs that are found.
- The housing for cracks. Replace the housing if any cracks are found.
- The housing for foreign material such as metal chips, dirt, or rust. Refer to "Cleaning" in this section.

DIFFERENTIAL

Inspect

- Pinion gear shaft for unusual wear.
- Pinion gear and side gear teeth for wear, cracks, scoring, and spalling.
- Thrust washers for wear.
- The fit of the differential side gears in the differential case.
- · The fit of the side gears on the axle shafts.
- Differential case for cracks and scoring.
- · Replace all worn parts.

PINION AND RING GEAR

Inspect

- Pinion and ring gear teeth for cracking, chipping, scoring, or excessive wear.
- · Pinion splines for wear.
- Pinion flange splines for wear.
- The fit of the pinion on the pinion flange.
- The sealing surface of the pinion flange for nicks, burrs, or rough tool marks which would cause damage to the seals' inside diameter and result in an oil leak.
- Replace all worn or broken parts.
- Ring and pinion gears are matched sets and are both replaced any time a replacement of either is necessary.

BEARINGS

Inspect

- Bearings visually and by feel.
- The bearings should feel smooth when oiled and rotated while applying as much hand pressure as possible.
- The large end of the bearing rollers for wear. This is where tapered roller bearing wear is most evident.
- Bearing cups for wear, cracks, brinelling and scoring.
- Bearings and cups are only replaced as sets.
- If the rear axle was operated for an extended period of time with very loose bearings, the ring gear and drive pinion will also require replacement.
- Low mileage bearings may have minute scratches and pits on the rollers and the bearing cups from the initial preload. Do not replace a bearing for this reason.
- Bearing caps for cracks or chips.

F-04763

Figure 17-Installing the Pinion Gears

SHIMS



• Shims for cracks and chips. Damaged shims should be replaced with an equally sized service shim.

ASSEMBLY OF THE REAR AXLE

PINION ASSEMBLY

DIFFERENTIAL CASE ASSEMBLY

→+ Install or Connect (Figure 1)

- Lubricate all parts with rear axle lubricant.
- 1. New side gear thrust washers (27) to the side gears (25).
- 2. Side gears (25) to the differential case.
 - Place the side gears in place on the same side as removed (figure 17).
- 3. Pinion gears (24) to the differential without the thrust washers (26).
 - Place the pinion gears onto the side gears so that the holes in the pinion gears are 180 degrees apart.
 - Rotate the pinion gears into place, and verify that the pinion gears line up with the pinion shaft holes.
- 4. New pinion thrust washers (26).
 - Rotate the pinion gears toward the differential opening just enough to slide in the pinion thrust washers.
- 5. Pinion shaft (28)
 - Align the lock pin holes in the case and the shaft.
- 6. Lock pin (29) (figure 18).
 - Peen metal from the case over the lock pin.
- Check that the mating surfaces of the differential case and the ring gear are clean and burr free.
- 7. Ring gear (20 to the differential case (22).
 - Thread two studs into the ring gear on opposite sides.

DANA REAR AXLES 4B5-7

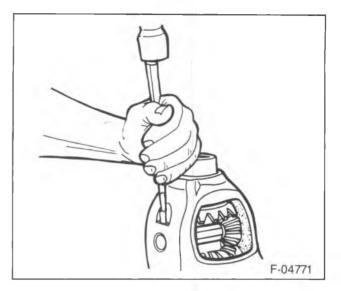


Figure 18—Installing the Lock Pin

- Press the ring gear onto the case, and align the holes in the case with the studs.
- 8. New ring gear bolts (23) (figure 19).
 - Tighten the ring gear bolts alternately in stages gradually pulling the ring gear onto the differential case.

री Tighten

- The new ring gear bolts in sequence to 150 N·m (110 ft. lbs.). Refer to "Specifications" for bolt information.
- 9. Master differential bearings D-117 (Miller Tools) to the differential (figure 20).
- Refer to "Determining Total Shim Pack Size" in this section.

DETERMINING TOTAL DIFFERENTIAL SHIM PACK SIZE

1. Assemble the differential case (22) to the axle housing. The pinion must not be installed.

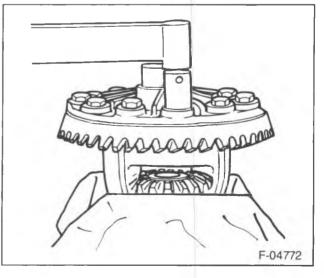


Figure 19—Installing the Ring Gear Bolts

4B5-8 DANA REAR AXLES

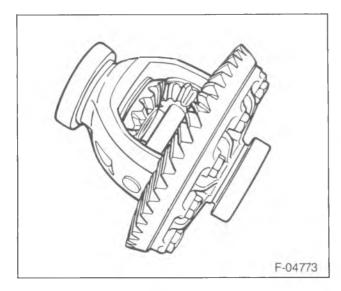


Figure 20—Differential with the Master Bearings

- 2. Mount a dial indicator having a minimum travel of 0.200-inch with a magnetic base on the ring gear bolt side of the housing (figure 21).
- 3. Force the differential assembly as far as possible in the direction towards the indicator.
- 4. Preload the dial indicator one half of its travel. Place the tip of the indicator on a flat surface on the differential, just next to a ring gear bolt. Mark this location with a piece of chalk.
- 5. Zero the dial indicator.
- 6. Force the differential assembly in the opposite direction as far as it will go. Repeat this step until the same reading is obtained. Record the number of thousandths that the dial indicator traveled, not the reading on the dial. This will be the measurement of the shim pack without the bearing preload (which will be added later).
- 7. Remove the dial indicator from the axle.
- 8. Remove the differential case from the axle housing.
- Do not remove the master bearings from the differential.

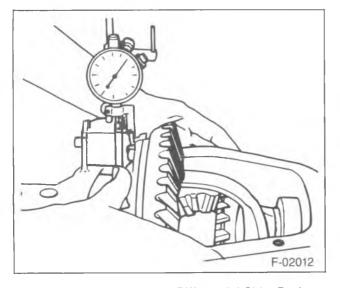


Figure 21—Determining Differential Shim Pack

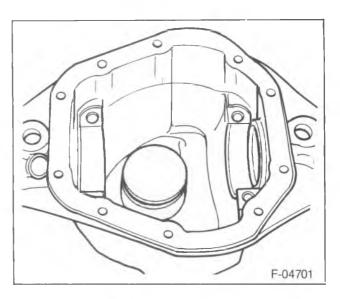


Figure 22—Master Pinion Block

PINION DEPTH ADJUSTMENT

Tools Required:

- D-120 Master Pinion Block (Miller)
- D-116-1 Pinion Height Block (Miller)
- D-116-2 Master Discs (Miller)
- D-115-3 Arbor (Miller)
- D-115 Scooter Gage (Miller)
- 1. Clean the carrier bores and all the tools. The pinion bore must be free of nicks and dirt.
- 2. Install D-120 to the pinion bore (figure 22).
- 3. Place D-116-2 onto D-115-3.
- 4. Install the arbor and discs into the axle housing (figure 23).
- 5. Install D-116-1 onto D-120 and against the arbor (figure 24).
- 6. Place D-115 onto the height block (figure 25).
 - Place the gage on the lower step of the height block. Push the gage down on the height block. While applying pressure, set the dial indicator at zero.
- 7. Slide the gage over the arbor (figure 26).

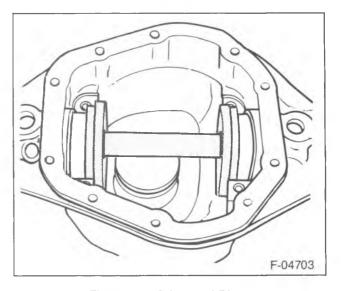


Figure 23—Arbor and Discs

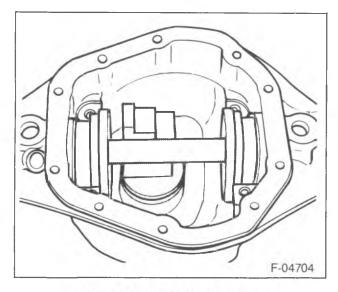


Figure 24—Pinion Height Block

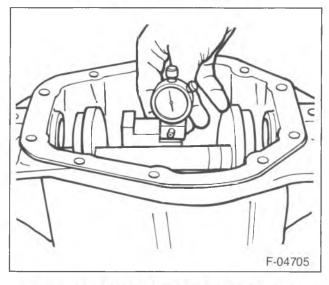


Figure 25—Scooter Gage on the Height Block

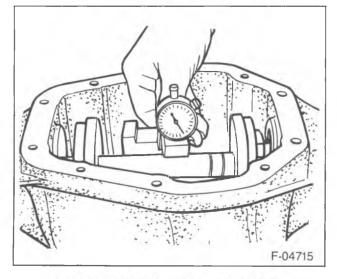


Figure 26—Scooter Gage on the Arbor

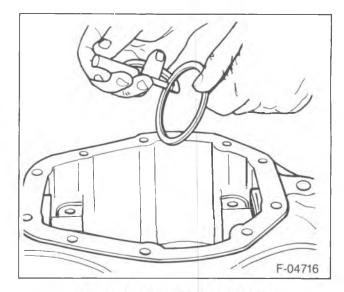


Figure 27—Measuring the Shims

- 8. Record the reading at the point of greatest deflection (when the dial indicator needle is centered between movement to the left and to the right).
 - This reading indicates the amount of shims needed for a nominal pinion setting. The pinion marking may change the pinion depth by adding or deleting shims from the nominal pinion setting.
- A positive (+) pinion marking indicates that the distance between the ring gear centerline and the pinion head must increase by the number of thousandths marked on the pinion. This means that the shim pack will decrease by the same number of thousandths.
- A negative (-) pinion marking indicates that the distance between the ring gear centerline and the pinion head must decrease by the number of thousandths marked on the pinion. This means that the shim pack will increase by the same number of thousandths.
- A pinion etched zero (0) will use the nominal setting as determined in this procedure.
- 9. Measure each shim separately with a micrometer and add them together to obtain the total shim pack thickness. If a baffle (5) or slinger is used, these must also be measured and included in the shim pack (figure 27).

PINION INSTALLATION

++ Install or Connect

Tools Required:

J 7818 Front Pinion Bearing Cup Installer

J 5590 Rear Pinion Bearing Cone Installer

- D-111 Cup Installer (Miller)
- C-4171 Handle (Miller)
- J 8092 Handle
- J 8614-01 Pinion Flange Remover
- 1. Place the required amount of shims (and baffle if used) in the inner bearing bore.

4B5-10 DANA REAR AXLES

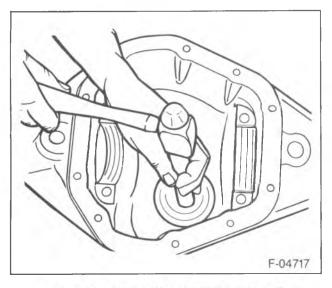


Figure 28—Installing the Pinion Inner Cup

- 2. Drive the inner bearing cup into the axle assembly using D-111 and C-4171. The cup must be seated on the shims (figure 28).
- 3. Drive the outer bearing cup into the axle assembly using J 7818 and J 8092 (figure 29).
- Inner bearing cone (and slinger if used) on pinion. Drive the bearing onto the pinion shaft using J 5590 (figure 30).
- 5. Pinion into the axle housing.
- 6. Outer pinion bearing (7) (and slinger if used).
- Do not assemble the preload shims or pinion oil seal at this time.
- 7. Pinion flange (10).
- 8. Washer (11) and pinion nut (12).

री Tighten

The nut (12) while holding the pinion with J 8614-01. Tighten the nut until it requires a torque of 1.13 N·m (10 in. lbs.) to rotate the pinion (figure 31). Rotate the pinion several times to seat the bearings and assure a more accurate reading pinion depth setting.

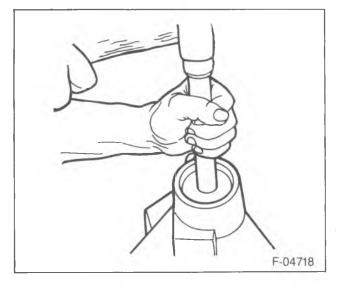


Figure 29—Installing the Pinion Front Cup

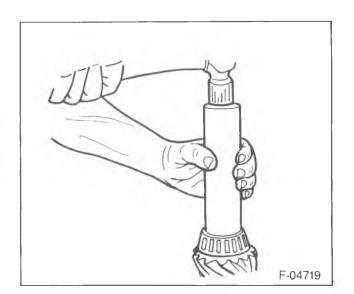


Figure 30—Installing the Inner Bearing

- 9. Pinion depth checking tools D-116-1, D-116-2, D-115-3, and D-115 to the top of the pinion.
 - Place the discs and arbor into the differential bearing bore.
 - Place the pinion height block on top of the pinion.
 - Set the dial indicator at zero (0) and slide the scooter gage across the arbor (figure 32).
 - The indicator will turn to the right or to the left at the point of greatest deflection, depending on the pinion marking.
 - The needle will move to the left if the pinion is marked (+).
 - The needle will move to the right if the pinion is marked (-).
 - If the indicator reading is within 0.05 mm (0.002-inch) of the pinion marking, the pinion is correctly set. If the pinion depth does not meet specifications, change the shim pack by the amount the indicator needle is from the pinion marking.

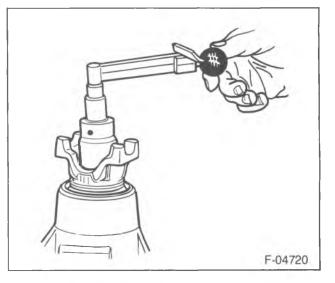


Figure 31—Checking the Pinion Preload

<image><image>

Figure 32-Checking the Pinion Depth Setting

- Remove the pinion nut (12), washer (11), pinion flange (10), slinger (8) and bearing cone (7).
- 10. Preload shims (6).
 - Install the shims that were removed, or measure the old shims and replace them with new shims if necessary.
- 11. Outer bearing (7) and slinger (8).
- Apply a light coat of axle lubricant to the pinion seal lip.
- Outer pinion oil seal (9) using D-163 (National) sealer installer (figure 33).
- 13. Pinion flange (10).
- 14. Washer (11) and a new pinion nut (12).

치 Tighten (Figures 34 and 35)

- The nut (12) while holding the pinion with J 8614-01. Tighten the nut until it requires a torque of 2.26-4.53 N m (20-40 in. Ibs.) to rotate the pinion.
- Remove shims to increase the preload.
- Add shims to decrease the preload.

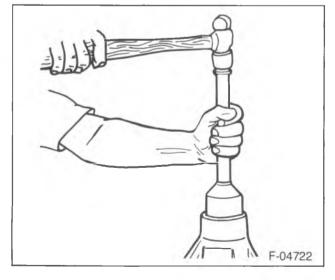


Figure 33—Installing the Pinion Seal

DANA REAR AXLES 4B5-11

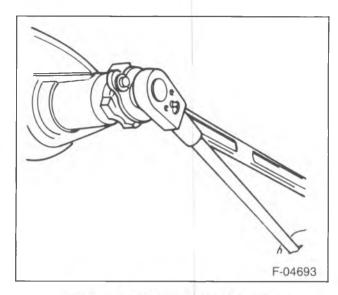


Figure 34—Tightening the Pinion Nut

ASSEMBLING THE DIFFERENTIAL TO THE AXLE HOUSING

Tools Required:

- J 23690 Differential Side Bearing Installer
- J 8092 Driver Handle
- J 24385-01 Differential Carrier Spreader
- 1. Assemble the differential case (22) with master bearings installed to the axle housing. The pinion must be installed.
- 2. Mount a dial indicator having a minimum travel of 0.200-inch with a magnetic base on the ring gear bolt side of the housing (figure 36).
- 3. Place the indicator tip on the chalk mark made earlier.
- 4. Force the ring gear into mesh with the pinion. Rock the ring gear to allow the teeth of the gears to mesh.
- 5. While the force is still applied to the differential case, set the dial indicator to zero.
- 6. Force the differential case away from the pinion gear to obtain an indicator reading. Repeat this action until a consistant reading is obtained. This will be the size of the left shim pack.

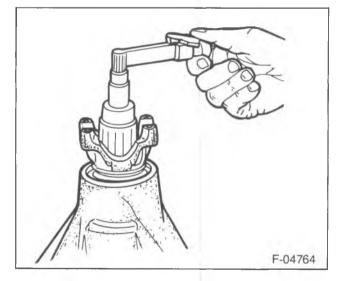


Figure 35—Checking Pinion Preload

4B5-12 DANA REAR AXLES

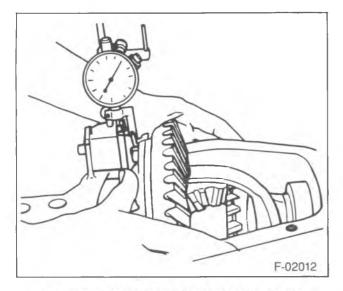


Figure 36—Measuring Differential Movement

- 7. Remove the indicator and the differential case from the carrier.
- 8. Remove the master bearings from the differential case.
- 9. Using the total shim pack size determined earlier, (Refer to "Determining Total Differential Shim Pack Size" in this section) subtract the reading found in step 6 from the total reading. The reading found in step 6 will be the shim size on the ring gear side. The remaining portion of the shim pack will be used on the side opposite the ring gear. Add an additional 0.38 mm (0.015-inch) of shims to the side opposite the ring gear to preload the bearings.
- 10. Place the proper shims on the differential side bearing hub (ring gear side) and drive the differential bearing onto the hub using J 23690 and J 8092 (figure 37).
- Place the proper shims on the differential side bearing hub (opposite the ring gear) and drive the differential bearing onto the hub using J 23690 and J 8092.



Figure 37—Installing the Differential Bearings

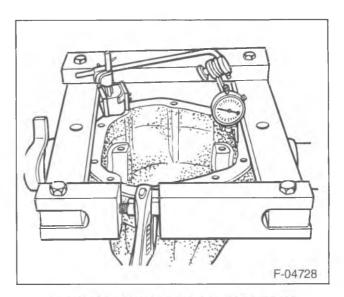


Figure 38—Mounting the Carrier Spreader

- 12. Assemble J 24385-01 to the axle housing as shown in figure 38.
- Assemble the dial indicator as shown in figure 38. Preset the gage at least 0.020-inch, and then rotate the indicator housing to zero the dial.

NOTICE: Do not spread the differential carrier more than 0.38 mm (0.015-inch)., Over-spreading the carrier can damage or distort the carrier.

- 14. Spread the carrier while examining the dial indicator.
- 15. Remove the dial indicator.
- 16. Place the bearing cups (20) onto the bearings.
- 17. Install the differential assembly into the carrier.Use a rawhide hammer to seat the differential assembly in the axle housing (figure 39).
- 18. Remove the spreader.
- 19. Install the bearing caps (18) in their original positions.
- 20. Install the bearing cap bolts (19).

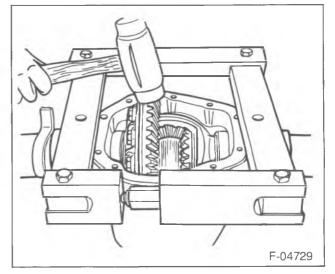


Figure 39—Installing the Differential Case

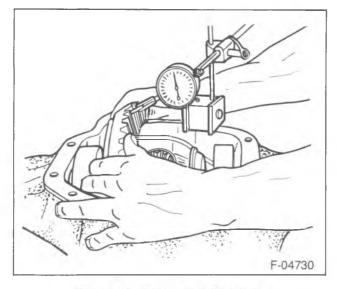


Figure 40—Measuring Backlash

Ð Tighten

The bearing cap bolts (19) to 115 N m (85 ft. lbs.).

CHECKING BACKLASH

- 1. Mount a dial indicator with a magnetic base to the axle housing as shown in figure 40.
- 2. Place the indicator tip at the heel end of the tooth.
- 3. Check the backlash at three equally spaced points. The backlash should be 0.13-0.23 mm (0.005-0.009-inch). The measurement must not vary more than 0.05 mm (0.002-inch) between the points checked.
- 4. High backlash is corrected by moving the ring gear closer to the pinion.
- 5. Low backlash is corrected by moving the ring gear away from the pinion.

10¹/₂-INCH RING GEAR

DESCRIPTION

The Dana 101/2-inch ring gear rear axle uses a conventional ring and pinion gear set to transmit the driving force of the engine to the rear wheels. The gear set transfers this driving force at a 90 degree angle from the propeller shaft to the drive shafts.

This axle is full-floating. The axle shaft is supported at the wheel ends by the wheel hubs. The bolts that attach the shaft to the hub, support the axle at the hub. The splined end of the shaft is supported by the differential.

The pinion gear is supported by two tapered roller bearings. The pinion depth is set by a shim pack between the inner pinion bearing cup and the rear axle housing. The pinion bearing preload is set by a shim pack at the front of the axle housing between the yoke and the pinion gear.

The ring gear is bolted onto the differential case with right-hand thread bolts.


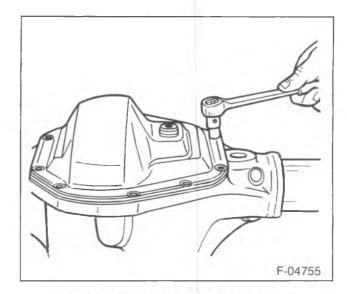


Figure 41—Installing the Axle Cover

6. To adjust the backlash, the differential case must be removed from the housing, then the differential bearings removed, and the proper number of shims moved from one side to the other.

FINAL ASSEMBLY

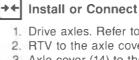

- 1. Drive axles. Refer to the proper service manual.
- 2. RTV to the axle cover.
- 3. Axle cover (14) to the housing (figure 41).

2 Tighten

The cover bolts (17) to 47 N m (35 ft. lbs.).

- 4. Axle housing to the vehicle. Refer to the proper service manual.
- 5. Lubricant to the rear axle (after the RTV has cured).

The differential case is supported in the case by two tapered roller bearings. The differential and ring gear are located in relationship to the pinion by using selective shims between the bearings and the differential case. To move the ring gear, shims are deleted from one side and an equal amount are added to the other side. Differential side bearing preload is set by the differential shim packs.

Two bearing caps are used to hold the differential into the rear axle housing.

The differential is used to allow the wheels to turn at different rates of speed while the rear axle continues to transmit the driving force. This prevents tire scuffing when going around corners and prevents premature wear on internal axle parts.

The rear axle is sealed with a pinion seal, a hub seal. and a gasket between the differential cover and the rear axle housing.

Two models of the Dana 101/2-inch are covered here: the B or U Model, and the Heavy Duty Model.

4B5-14 DANA REAR AXLES

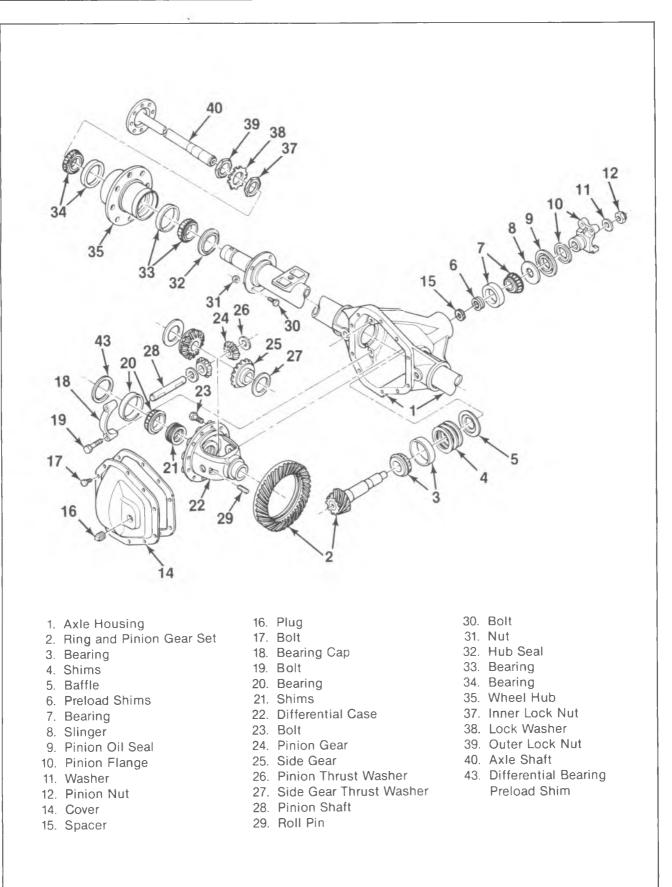


Figure 42—Rear Axle Components

F-05910

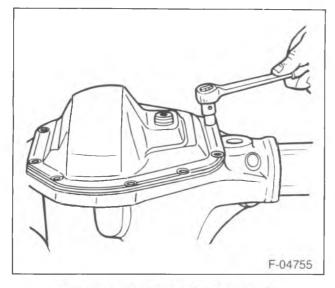


Figure 43—Removing the Axle Cover

All Dana axles are identified by the part number on the right axle tube next to the carrier. The model number is cast on the carrier. The carrier cover does not have a drain plug. There is a fill plug on the cover.

CHECK THE AXLE BEFORE DISASSEMBLY

Inspect

- Remove the axle cover from the rear axle and drain the axle lubricant into a suitable container.
- The ring gear backlash. Refer to "Backlash Adjustment" in this section. This information can be used to determine the cause of the axle problem. It will also help when setting up the shim packs for locating and preloading the differential case.
- 2. The case for metal chips and shavings. Determine where these chips and shavings come from, such as a broken gear or bearing case.
- Determine the cause of the axle problem before disassembly if possible.

DISASSEMBLY OF THE REAR AXLE

Remove or Disconnect (Figure 42)

Tools Required:

- J 24385-01 Differential Housing Spreader
- J 29721 Differential Side Bearing Remover
- J 29721-70 Side Bearing Adapters
- J 8107-3 Side Bearing Puller Plug
- D-166 Differential Case Holding Fixture
- J 8614-01 Pinion Flange Holder
- · Place the axle in a suitable support.
- 1. The differential cover bolts (17) and the differential cover (14) (figure 43).
 - Drain the gear lubricant into a proper container.
- 2. Axle shafts (40). Refer to the proper service manual.

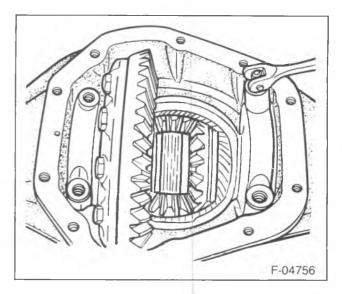


Figure 44—Removing the Bearing Cap

- 3. Bearing cap bolts (19) (figure 44).
- 4. Bearing caps (18).
 - The mating letters are stamped on the caps and the axle housing. The caps are to be reassembled exactly as removed.
- Assemble J 24385-01 to the differential housing as shown in figure 45.
- Assemble the dial indicator as shown in figure 45. Preset the gage at least 0.020-inch, and then rotate the gage housing to zero the dial.

NOTICE: Do not spread the differential carrier more than 0.38 mm (0.015-inch). Over-spreading the carrier can damage or distort the carrier.

- Spread the carrier while examining the dial indicator. Do not spread the carrier more than 0.38 mm (0.015-inch).
- 5. Differential case (22) from the carrier (1) using two pry bars (figure 46).
- 6. The spreader J 24385-01 from the carrier (1).

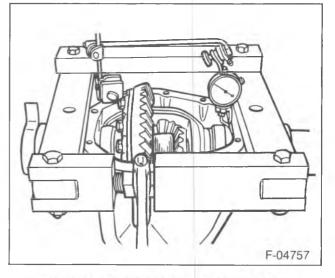


Figure 45—Spreading the Differential Case

4B5-16 DANA REAR AXLES

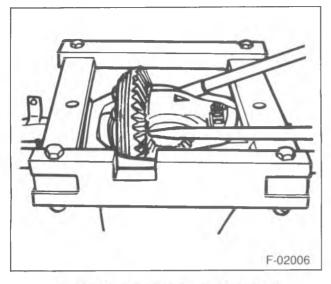


Figure 46-Removing the Differential

- 7. Bearing cups (20).
 - Mark the cups as left and right, and place them with the proper bearing caps.
- 8. Differential side bearings (20) using J 29721, J 29721-70, and J 8107-3 (figure 47).
 - Mark the bearings as left and right, and place them with the proper bearing caps and cups.
- 9. Differential shims (21).
- Mark the shims as left or right.
- 10. Ring gear bolts (23).
- Place shop towels over the vise jaws. Put the differential case in the vise (figure 48).

NOTICE: Do not pry the ring gear from the case, this will damage the ring gear and the differential case.

- 11. Ring gear (2) from the differential case using a rawhide hammer.
 - Ring gear (2) from the vise.
- Put the differential case on D-166 (Miller tool) and put the holding fixture into the vise.

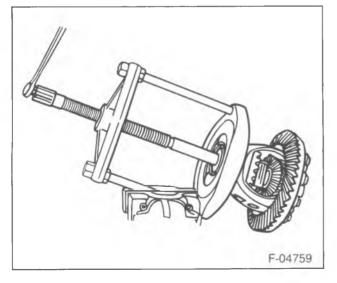


Figure 47—Removing the Differential Side Bearings

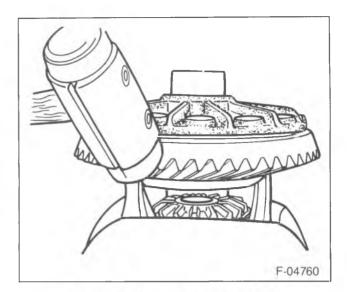


Figure 48-Removing the Ring Gear

- 12. Lock pin (29) from the differential using a hammer and a punch (figure 49).
 - Turn the differential over on D-166.
- 13. Pinion shaft (28) using a hammer and a brass drift (figure 50).
- 14. Differential pinion gears (24) and thrust washers (26).
 - Rotate the side gears until the pinion gears are in the opening of the differential (figure 51).
- 15. Differential side gears (25) and thrust washers (27).
 Mark the gears and washers as left and right.
- Replace the carrier cover (14) using two bolts (17) to keep the pinion from falling to the floor.



- Drive pinion bearing preload (figure 52).
- Pinion assembly for looseness by moving it back and forth. (Looseness indicates excessive bearing wear).
- 16. Pinion nut (12) and washer (11) using J 8614-01 to hold the pinion (figure 53).

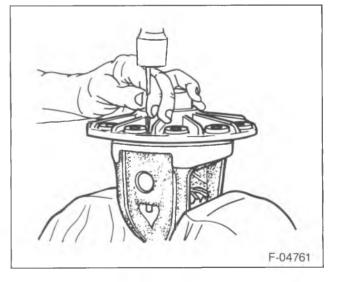


Figure 49—Removing the Lock Pin

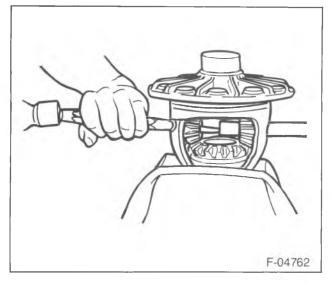


Figure 50—Removing the Pinion Shaft

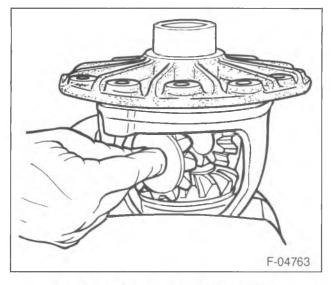


Figure 51—Removing the Pinion Gears

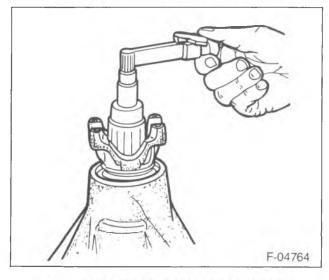


Figure 52—Checking the Pinion Preload

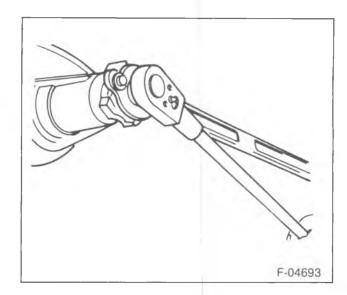


Figure 53—Drive Pinion Nut Removal

- 17. Pinion flange (10) using J 8614-01 (figure 54).
- 18. Pinion (2) from the carrier using a rawhide hammer to tap the pinion (figure 55).
- 19. Carrier cover (14) and the pinion (2).
- 20. Pinion preload shims (6).
 - Keep the shims toether on the bench.
- 21. Pinion seal (9).
- 22. Pinion outer bearing (7) and oil slinger (8).
- 23. Bearing cups (3) and (7) from the axle housing using a hammer and a punch (figure 56).
 - Work the cups out of the housing evenly, moving the punch back and forth between one side of the cup and the other.
- 24. Pinion adjusting shims (4) and baffle (5).
 - Keep the shims together on the bench.
- 25. Pinion inner bearing (3) using J 29721 and J 29721-70 (figure 57).

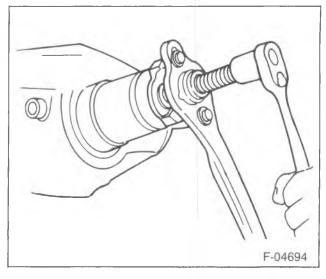


Figure 54—Pinion Flange Removal

4B5-18 DANA REAR AXLES

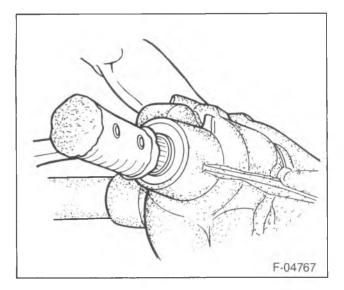


Figure 55—Removing the Pinion

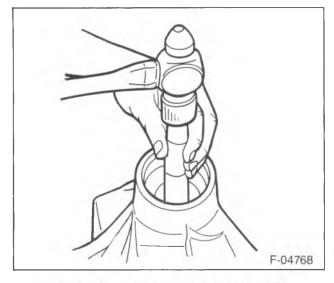


Figure 56—Removing the Bearing Cups

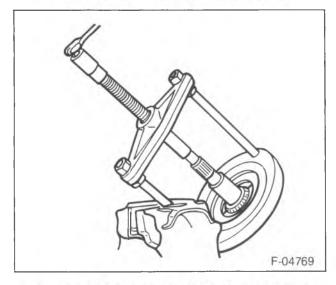


Figure 57—Removing the Pinion Inner Bearing

CLEANING

Do not steam clean drive parts having ground and polished surfaces such as gears, bearings, and shafts. These parts should be cleaned in a suitable solvent. All parts should be disassembled before cleaning.

Parts should be thoroughly dried immediately after cleaning. Use soft, clean, lintless rags. Parts may be dried with compressed air. Do not allow the bearings to spin while drying them with compressed air.

INSPECTION

It is very important to carefully and thoroughly inspect all drive unit parts before reassembly.

Thorough inspection of the drive parts for wear or stress and subsequent replacement of worn parts will eliminate costly drive component repair after reassembly.

AXLE HOUSING

Inspect

- The carrier bore for nicks or burrs that would prevent the outer diameter of the pinion seal from sealing. Remove any burrs that are found.
- The bearing cup bores for nicks or burrs. Remove any burrs that are found.
- The housing for cracks. Replace the housing if any cracks are found.
- The housing for foreign material such as metal chips, dirt, or rust. Refer to "Cleaning" in this section.

DIFFERENTIAL

Inspect

- · Pinion gear shaft for unusual wear.
- Pinion gear and side gear teeth for wear, cracks, scoring, and spalling.
- Thrust washers for wear.
- The fit of the differential side gears in the differential case.
- The fit of the side gears on the axle shafts.
- Differential case for cracks and scoring.
- Replace all worn parts.

PINION AND RING GEAR

Inspect

- Pinion and ring gear teeth for cracking, chipping, scoring, or excessive wear.
- Pinion splines for wear.
- Pinion flange splines for wear.
- The fit of the pinion on the pinion flange.
- The sealing surface of the pinion flange for nicks, burrs, or rough tool marks which would cause damage to the seals' inside diameter and result in an oil leak.
- Replace all worn or broken parts.
- Ring and pinion gears are matched sets and are both replaced any time a replacement of either is necessary.

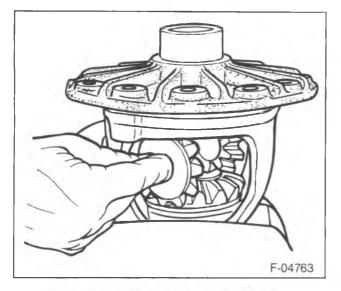


Figure 58—Installing the Pinion Gears

BEARINGS

- Inspect
 - · Bearings visually and by feel.
 - The bearings should feel smooth when oiled and rotated while applying as much hand pressure as possible.
 - The large end of the bearing rollers for wear. This is where tapered roller bearing wear is most evident.
 - Bearing cups for wear, cracks, brinelling and scoring.
 - · Bearings and cups are only replaced as sets.
 - If the rear axle was operated for an extended period of time with very loose bearings, the ring gear and drive pinion will also require replacement.
 - Low mileage bearings may have minute scratches and pits on the rollers and the bearing cups from the initial preload. Do not replace a bearing for this reason.
 - Bearing caps for cracks or chips.

SHIMS

Inspect

Shims for cracks and chips. Damaged shims should be replaced with an equally sized service shim.

ASSEMBLY OF THE REAR AXLE

DIFFERENTIAL CASE ASSEMBLY

→← Install or Connect (Figure 42)

Tools Required:

- D-136 Master Differential Bearings (Miller) H.D. D-117 Master Differential Bearings (Miller)
- Lubricate all parts with rear axle lubricant.
- 1. New side gear thrust washers (27) to the side gears (25).
- 2. Side gears (25) to the differential case.
 - Place the side gears in place on the same side as removed (figure 58).

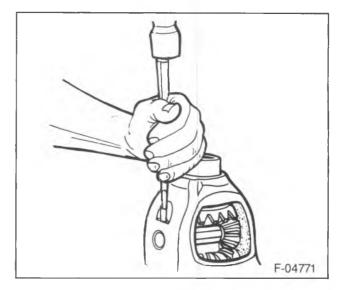


Figure 59—Installing the Lock Pin

- 3. Pinion gears (24) to the differential without the thrust washers (26).
 - Place the pinion gears onto the side gears so that the holes in the pinion gears are 180 degrees apart.
 - Rotate the pinion gears into place, and verify that the pinion gears line up with the pinion shaft holes.
- 4. New pinion thrust washers (26).
 - Rotate the pinion gears toward the differential opening just enough to slide in the pinion thrust washers.
- 5. Pinion shaft (28).
 - Align the lock pin holes in the case and the shaft.
- 6. Lock pin (29) (figure 59).
 - Peen metal from the case over the lock pin.
- Check that the mating surfaces of the differential case and the ring gear are clean and burr free.
- 7. Ring gear (2) to the differential case (22).
 - Thread two studs into the ring gear on opposite sides.
 - Press the ring gear onto the case, and align the holes in the case with the studs.
- 8. New ring gear bolts (23) (figure 60).
 - Tighten the ring gear bolts alternately in stages gradually pulling the ring gear onto the differential case.



- The new ring gear bolts in sequence to 149 N·m (110 ft. lbs.). Refer to "Specifications" for bolt information.
- 9. Master differential bearings D-117 (Miller Tools) to the differential (figure 61). D-136 (Miller) for H.D. Axles.
- Refer to "Determining Total Shim Pack Size" in this section.

4B5-20 DANA REAR AXLES

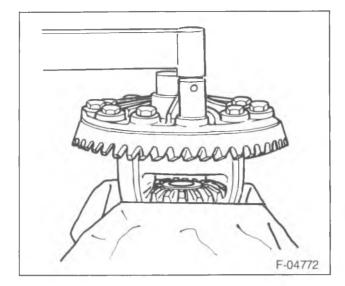


Figure 60—Installing the Ring Gear Bolts

DETERMINING TOTAL DIFFERENTIAL SHIM PACK SIZE --- B OR U MODEL

- 1. Assemble the differential case (22) to the axle housing. The pinion must not be installed.
- 2. Mount a dial indicator having a minimum travel of 0.200-inch with a magnetic base on the ring gear bolt side of the housing (figure 62).
- 3. Force the differential assembly as far as possible in the direction towards the indicator.
- 4. Preload the dial indicator one half of its travel. Place the tip of the indicator on a flat surface on the differential, just next to a ring gear bolt. Mark this location with a piece of chalk.
- 5. Zero the dial indicator, while still forcing the differential towards the dial indicator.
- 6. Force the differential assembly in the opposite direction as far as it will go. Repeat this step until the same reading is obtained. Record the number of thousandths that the dial indicator traveled, not the reading on the dial. This will be the measurement of the shim pack without the bearing preload (which will be added later).

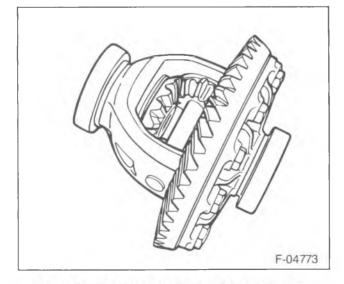


Figure 61—Differential with the Master Bearings

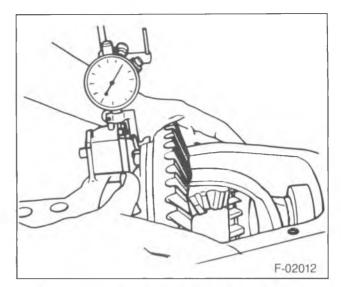


Figure 62-Determining Differential Shim Pack

- 7. Remove the dial indicator from the axle.
- 8. Remove the differential case from the axle housing.
 Do not remove the master bearings from the differential.

DETERMINING TOTAL DIFFERENTIAL SHIM PACK SIZE — HEAVY DUTY MODEL

- 1. Assemble the differential case (22) to the axle housing. The pinion must not be installed.
- 2. Mount a dial indicator having a minimum travel of 0.200-inch with a magnetic base on the ring gear bolt side of the housing (figure 62).
- 3. Install the outboard spacer between the master bearing and the axle housing on the ring gear side.
- 4. Force the differential assembly as far as possible in the direction towards the indicator.
- 5. Preload the dial indicator one half of its travel. Place the tip of the indicator on a flat surface of the differential, just next to a ring gear bolt. Mark this location with a piece of chalk.
- 6. Zero the dial indicator, while still forcing the differential towards the indicator.
- 7. Force the differential assembly in the opposite direction as far as it will go. Repeat this step until the same reading is obtained. Record the number of thousandths that the dial indicator traveled, not the reading on the dial. This reading plus the spacer measurement will be the thickness of the spacer and shims required.
- 8. Remove the dial indicator from the axle.
- 9. Remove the differential case from the axle housing.
- 10. Remove the spacer (43) from the housing.
- Do not remove the master bearings from the differential.

PINION DEPTH ADJUSTMENT

Tools Required:

D-120 Master Pinion Block (Miller) (60 and 70U)

D-137 Master Pinion Block (70B and 70 H.D.)

- D-116-1 Pinion Height Block (Miller)
- D-116-2 Master Discs (Miller)
- D-115-3 Arbor (Miller)

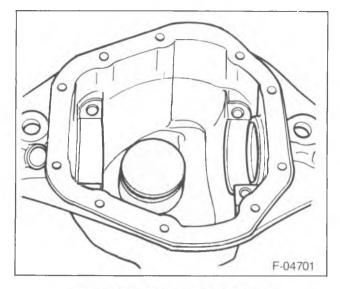


Figure 63—Master Pinion Block

D-115 Scooter Gage (Miller)

- 1. Clean the carrier bores and all the tools. The pinion bore must be free of nicks and dirt.
- 2. Install D-120 or D-137 to the pinion bore (figure 63).
- 3. Place D-116-2 onto D-115-3 (figure 64).
- 4. Install the arbor and discs into the axle housing.
- 5. Install D-116-1 onto D-120 and against the arbor (figure 65).
- 6. Place D-115 onto the height block (figure 66).
 - Place the gage on the upper step of the height block. Push the gage down on the height block. While applying pressure, set the dial indicator at zero.
- 7. Slide the gage over the arbor (figure 67).
- 8. Record the reading at the point of greatest deflection (when the dial indicator needle is centered between movement to the left and to the right).

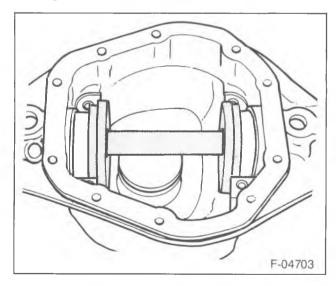


Figure 64—Arbor and Discs

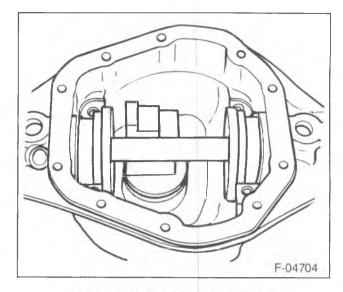


Figure 65—Pinion Height Block

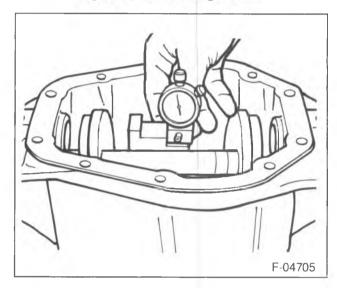


Figure 66—Scooter Gage on the Height Block

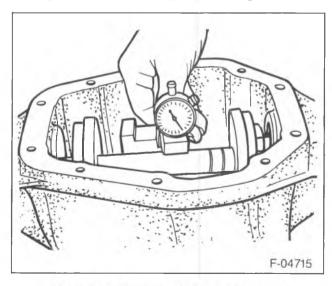


Figure 67—Scooter Gage on the Arbor

4B5-22 DANA REAR AXLES

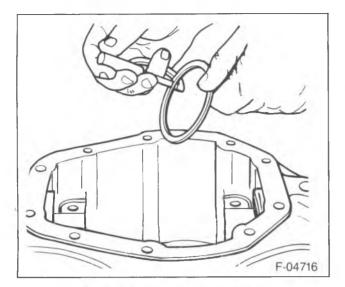


Figure 68—Measuring the Shims

- This reading indicates the amount of shims needed for a nominal pinion setting. The pinion marking may change the pinion depth by adding or deleting shims from the nominal pinion setting.
- A positive (+) pinion marking indicates that the distance between the ring gear centerline and the pinion head must increase by the number of thousandths marked on the pinion. This means that the shim pack will decrease by the same number of thousandths.
- A negative (-) pinion marking indicates that the distance between the ring gear centerline and the pinion head must decrease by the number of thousandths marked on the pinion. This means that the shim pack will increase by the same number of thousandths.
- A pinion etched zero (0) will use the nominal setting as determined in this procedure.
- Measure each shim separately with a micrometer and add them together to obtain the total shim pack thickness. If a baffle (5) or slinger is used, these must also be measured and included in the shim pack (figure 68).

PINION INSTALLATION

→+ Install or Connect

Tools Required:

- J 7818 Front Pinion Bearing Cup Installer J 5590 Rear Pinion Bearing Cone Installer C-4204 Cup Installer (Miller) C-4171 Handle (Miller) J 8092 Handle J 8614-01 Pinion Flange Remover D-116-1 Pinion Height Block D-116-2 Arbor Discs D-115-3 Arbor D-115-2 Scooter Gage Block 1. Place the required amount of shims (and baffle if
- Place the required amount of shims (and battle if used) in the inner bearing bore.

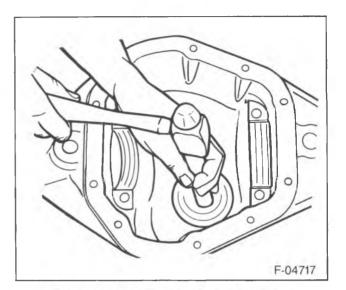


Figure 69—Installing the Pinion Inner Cup

- Drive the inner bearing cup into the axle assembly using C-4204 and C-4171. The cup must be seated on the shims (figure 69).
- 3. Drive the outer bearing cup into the axle assembly using J 7818 and J 8092 (figure 70).
- Inner bearing cone (and slinger if used) on pinion. Drive the bearing onto the pinion shaft using J 5590 (figure 71).
 - If installing a new bearing, be certain that it is the same width as the old bearing.
- 5. Pinion into the axle housing.
- 6. Outer pinion bearing (7) (and slinger if used).
- Do not assemble the preload shims or pinion oil seal at this time.
- 7. Pinion flange (10).
- 8. Washer (11) and pinion nut (12).



 The nut (12) while holding the pinion with J 8614-01. Tighten the nut until it requires a torque of 1.13 N·m (10 in. lbs.) to rotate the

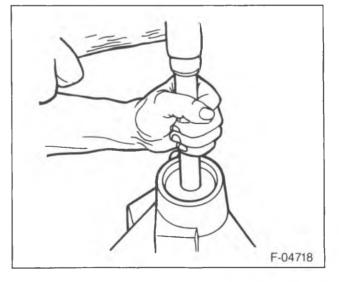


Figure 70—Installing the Pinion Front Cup

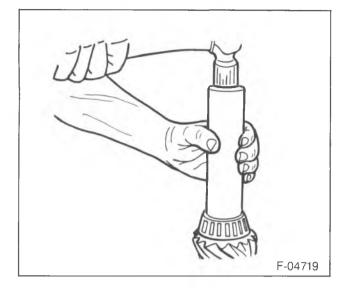


Figure 71—Installing the Inner Bearing

pinion (figure 72). Rotate the pinion several times to seat the bearings and assure a more accurate reading pinion depth setting.

- 9. Pinion depth checking tools D-116-1, D-116-2, D-115-3, and D-115 to the top of the pinion.
 - Place the discs and arbor into the differential bearing bore.
 - Place the pinion height block on top of the pinion.
 - Set the dial indicator at zero (0) and slide the scooter gage across the arbor (figure 73).
 - The indicator will turn to the right or to the left at the point of greatest deflection, depending on the pinion marking.
 - The needle will move to the left if the pinion is marked (+).
 - The needle will move to the right if the pinion is marked (-).
 - If the indicator reading is within 0.05 mm (0.002-inch) of the pinion marking, the pinion is correctly set. If the pinion depth does not meet

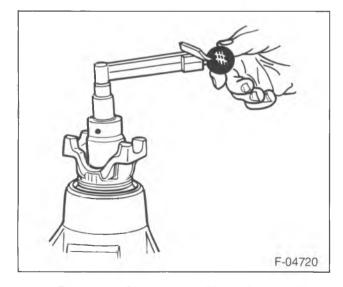


Figure 72—Checking the Pinion Preload

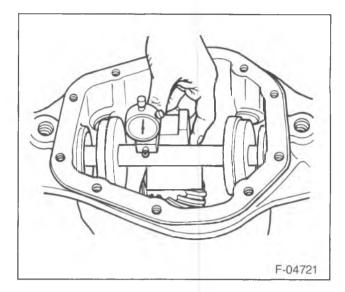


Figure 73—Checking the Pinion Depth Setting

specifications, change the shim pack by the amount the indicator needle is from the pinion marking.

- Remove the pinion nut (12), washer (11), pinion flange (10), slinger (8) and bearing cone (7).
- 10. Preload shims (6).
 - Install the shims that were removed, or measure the old shims and replace them with new shims if necessary.
- 11. Outer bearing (7) and slinger (8).
- Apply a light coat of axle lubricant to the pinion seal lip.
- 12. Outer pinion oil seal (9) using D-163 (National) sealer installer (figure 74).
- 13. Pinion flange (10).
- 14. Washer (11) and a new pinion nut (12).

• The nut (12) while holding the pinion with J 8614-01. Tighten the nut until it requires a torque of 2.26-4.53 N m (20-40 in. lbs.) to rotate the pinion.

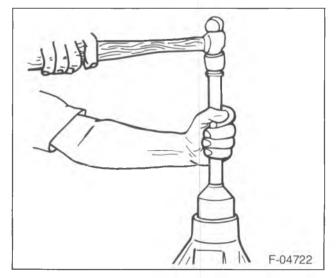


Figure 74—Installing the Pinion Seal

4B5-24 DANA REAR AXLES

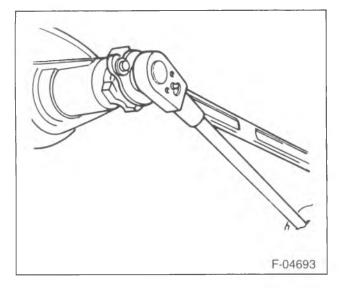


Figure 75—Tightening the Pinion Nut

- Remove shims to increase the preload.
- Add shims to decrease the preload.

ASSEMBLING THE DIFFERENTIAL TO THE AXLE HOUSING — B OR U MODEL

Tools Required:

- J 23690 Differential Side Bearing Installer J 8092 Driver Handle
- J 24385-01 Differential Carrier Spreader
- 1. Assemble the differential case (22) with master bearings installed to the axle housing. The pinion must be installed.
- 2. Mount a dial indicator having a minimum travel of 0.200-inch with a magnetic base on the ring gear bolt side of the housing (figure 77).
- 3. Place the indicator tip on the chalk mark made earlier.
- 4. Force the ring gear into mesh with the pinion. Rock the ring gear to allow the teeth of the gears to mesh.
- 5. With the force still applied to the differential case, set the dial indicator to zero.

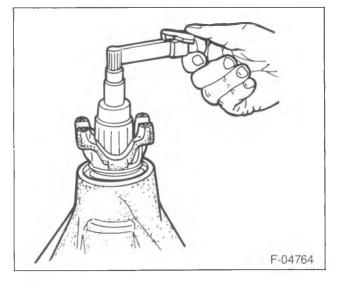


Figure 76—Checking Pinion Preload

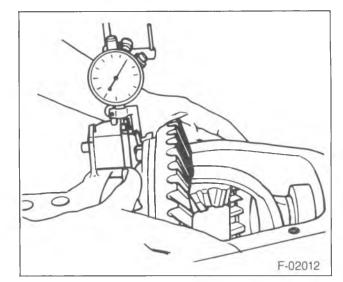


Figure 77—Measuring Differential Movement

- 6. Force the differential case away from the pinion gear to obtain an indicator reading. Repeat this action until a consistant reading is obtained.
- 7. Remove the indicator and the differential case from the carrier.
- 8. Remove the master bearings from the differential case.
- 9. Using the total shim pack size determined earlier, (Refer to "Determining Total Differential Shim Pack Size" in this section) subtract the reading found in step 6 from the total reading. The reading found in step 6 will be the shim size on the ring gear side. The remaining portion of the shim pack will be used on the side opposite the ring gear. Add an additional 0.38 mm (0.015-inch) of shims to the side opposite the ring gear to preload the bearings.
- 10. Place the proper shims on the differential side bearing hub (ring gear side) and drive the differential bearing onto the hub using J 23690 and J 8092 (figure 78).



Figure 78—Installing the Differential Bearings

• If installing a new bearing, be certain that it is the same width as the old bearing.

DANA REAR AXLES 4B5-25

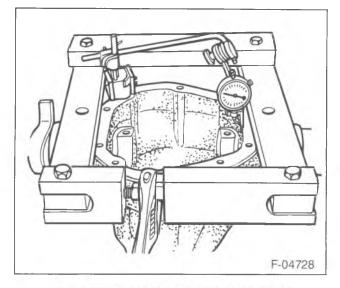


Figure 79—Mounting the Carrier Spreader

- Place the proper shims on the differential side bearing hub (opposite the ring gear) and drive the differential bearing onto the hub using J 23690 and J 8092.
 - If installing a new bearing, be certain that it is the same width as the old bearing.
- 12. Assemble J 24385-01 to the axle housing as shown in figure 79.
- Assemble the dial indicator as shown in figure 79. Preset the gage at least 0.020-inch, and then rotate the indicator housing to zero the dial.

NOTICE: Do not spread the differential carrier more than 0.38 mm (0.015-inch). Over-spreading the carrier can damage or distort the carrier.

- 14. Spread the carrier while examining the dial indicator.
- 15. Remove the dial indicator.
- 16. Place the bearing cups (20) onto the bearings.
- 17. Install the differential assembly into the carrier.
 - Use a rawhide hammer to seat the differential assembly in the axle housing (figure 80).
- 18. Remove the spreader.
- 19. Install the bearing caps (18) in their original positions.
- 20. Install the bearing cap bolts (19).

၃ Tighten

The bearing cap bolts (19) to 115 N m (85 ft. lbs.).

ASSEMBLING THE DIFFERENTIAL TO THE AXLE HOUSING — HEAVY DUTY MODELS

Tools Required:

- J 23690 Differential Side Bearing Installer
- J 8092 Driver Handle
- J 24385-01 Differential Carrier Spreader
- C-4205 Preload Shim Installer
- C-4171 Universal Handle

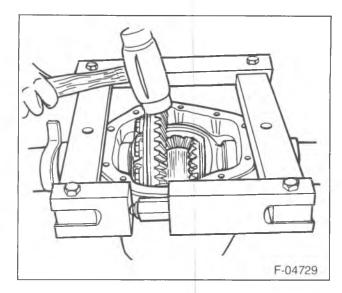


Figure 80—Installing the Differential Case

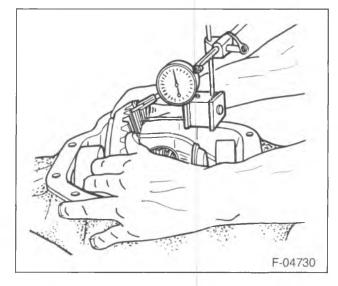


Figure 81—Measuring Backlash

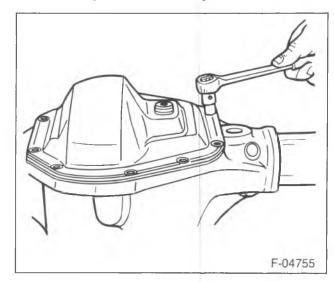


Figure 82—Installing the Axle Cover

4B5-26 DANA REAR AXLES

- Assemble the differential case (22) with master bearings installed to the axle housing. The pinion must be installed.
- 2. Install the spacer (used before) between the master bearing and the axle housing.
- 3. Mount a dial indicator having a minimum travel of 0.200-inch with a magnetic base on the ring gear bolt side of the housing (figure 77).
- 4. Place the indicator tip on the chalk mark made earlier.
- 5. Force the ring gear into mesh with the pinion. Rock the ring gear to allow the teeth of the gears to mesh.
- 6. With the force still applied to the differential case, set the dial indicator to zero.
- 7. Force the differential case away from the pinion gear to obtain an indicator reading. Repeat this action until a consistent reading is obtained.
- 8. Remove the indicator and the differential case from the carrier.
- 9. Remove the master bearings from the differential case.
- 10. Using the total shim pack size determined earlier, (refer to "Determining Total Differential Shim Pack Size" in this section) subtract the reading found in step 7 from the total reading. The reading found in step 7 will be the shim size on the ring gear side. The remaining portion of the shim pack will be used on the side opposite the ring gear. Add an additional 0.015-inch worth of shim for differential bearing preload and backlash.
- Place the proper shims on the differential side bearing hub (ring gear side) and drive the differential bearing onto the hub using J 23690 and J 8092 (figure 78).
 - If installing a new bearing, be certain that it is the same width as the old bearing.
 - Determine the proper size of the shim pack by subtracting the spacer size from the remaining amount of shims necessary (determined in step 10).
 - Place the proper shims on the differential side bearing hub (ring gear side) and drive the differential bearing onto the hub using J 23690 and J 8092.
 - If installing a new bearing, be certain that it is the same width as the old bearing.
- 14. Assemble J 24385-01 to the axle housing as shown in figure 79.
- 15. Assemble the dial indicator as shown in figure 161. Preset the gage at least 0.020-inch, and then rotate the indicator housing to zero the dial.

NOTICE: Do not spread the differential carrier more than 0.38 mm (0.015-inch). Over-spreading the carrier can damage or distort the carrier.

- 16. Spread the carrier while examining the dial indicator.
- 17. Remove the dial indicator.
- 18. Place the bearing cups (20) onto the bearings.
- 19. Install the differential assembly into the carrier (figure 80).

- 20. Drive the outboard spacers (43) into the proper sides using C-4205 and C-4171.
- 21. Remove the spreader.
- 22. Install the bearing caps (18) in their original positions.
- 23. Install the bearing cap bolts (19)

री Tighten

• The bearing cap bolts (19) to 115 N-m (85 ft. lbs.).

CHECKING BACKLASH

- 1. Mount a dial indicator with a magnetic base to the axle housing as shown in figure 81.
- 2. Place the indicator tip at the heel end of the tooth.
- 3. Check the backlash at three equally spaced points. The backlash should be 0.13-0.23 mm (0.005-0.009-inch). The measurement must not vary more than 0.05 mm (0.002-inch) between the points checked.
- High backlash is corrected by moving the ring gear closer to the pinion.
- 5. Low backlash is corrected by moving the ring gear away from the pinion.
- 6. To adjust the backlash, the differential case must be removed from the housing, then the differential bearings removed, and the proper number of shims moved from one side to the other.

FINAL ASSEMBLY

++ Install or Connect

- 1. Drive axles. Refer to the proper service manual.
- 2. RTV to the axle cover.
- 3. Axle cover (14) to the housing (figure 82).



- The cover bolts (17) to 47 N m (35 ft. lbs.).
- Axle housing to the vehicle. Refer to the proper service manual.
- 5. Lubricant to the rear axle after the RTV has cured.

DANA REAR AXLES 4B5-27


SPECIFICATIONS

9³/₄-INCH RING GEAR AXLE


FASTENER Ring Gear Bolts Bearing Cap Bolts Axle Cover Bolts	N∙m 150 115 47	FT. LBS. 110 85 35
Differential Bearing Adjusting Shim		SIZE 0.003-inch 0.005-inch 0.010-inch 0.030-inch
Outer Pinion Bearing Shim		0.003-inch 0.005-inch 0.010-inch 0.030-inch
Inner Pinion Bearing Shim		0.003-inch 0.005-inch 0.010-inch
Lubricant		80W-90 GL-5
10 ¹ /2-INCH RING GEAR AXLE		
FASTENER Ring Gear Bolts. Bearing Cap Bolts. Axle Cover Bolts Lubricant	N∙m 142 115 47	FT. LBS. 105 85 35 80W-90 GL-5
SHIM SIZES Differential Bearing Adjusting Shim		SIZE

	0.005-inch 0.010-inch 0.030-inch
Outer Pinion Bearing Shim	
Inner Pinion Bearing Shim	0.003-inch 0.005-inch 0.010-inch
Inner Pinion Bearing Cup and Cone	
— B and H.D. Models — U Model	1.4375-inch wide
— U Model	1.1875-inch wide
Differential Bearing Cup and Cone	
B and U Models	1.0000-inch wide
— H.D. Model	1.1875-inch wide

4B5-28 DANA REAR AXLES

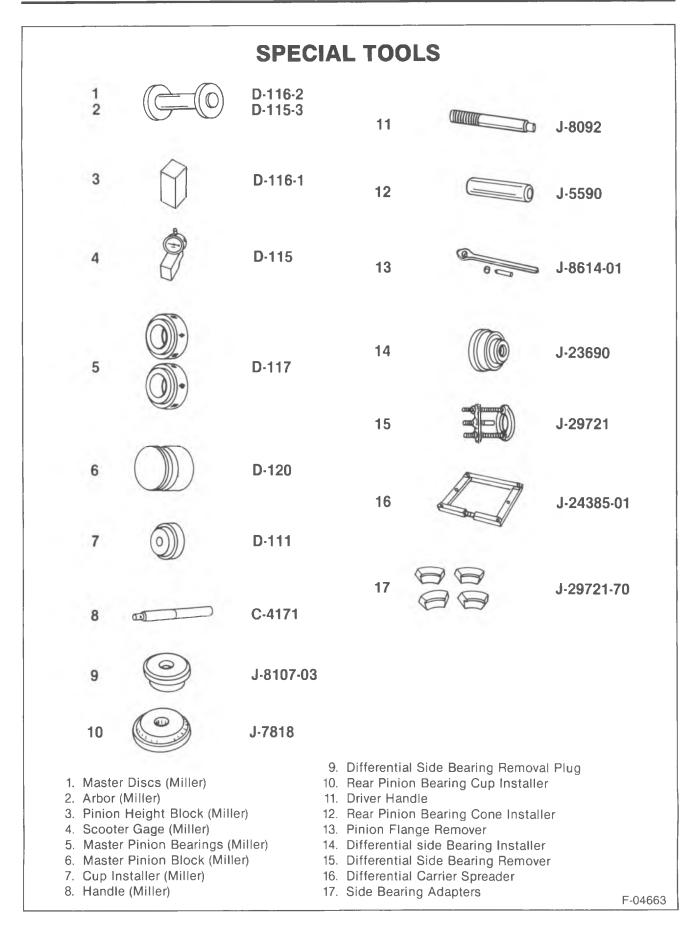

DANA REAR AXLES 4B5-29

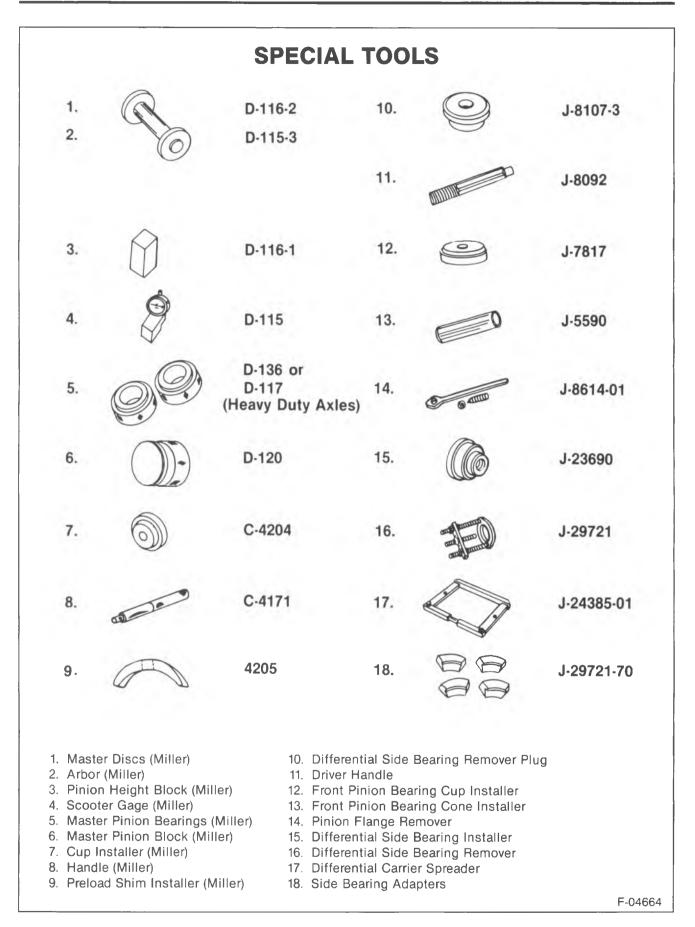

4B5-30 DANA REAR AXLES

SECTION 4B6

12-INCH RING GEAR (ROCKWELL)

CONTENTS

SUBJECT

PAGE

Description	
Disassembly of the Rear Axle4B	6- 1
Cleaning	6-5
Inspection	6- 5
Assembly of the Rear Axle	6-6
Specifications	6-10
Special Tools	6-11

DESCRIPTION

The Rockwell 12-inch ring gear rear axle uses a conventional ring and pinion gear set to transmit the driving force of the engine to the rear wheels. this gear set transfers this driving force at a 90 degree angle from the propeller shaft to the drive shafts.

This axle is full-floating. The axle shaft is supported at the wheel ends by the wheel hubs. The rear axle shaft is held into the rear axle by an axle cap bolted to the hub. The splined end of the shaft is supported by the differential.

This axle uses a differential carrier, separate from the axle housing. This differential carrier holds the entire drive gear set, the differential bearings and adjusting nuts, and the differential bearing caps. The pinion cage is bolted to the differential cage.

The pinion gear is supported in a pinion cage by three bearings: a pinion front bearing, a pinion inner bearing, and a pinion rear or pilot bearing. The pinion cage is separate from the axle housing. Selective shims are used between the pinion cage and the axle housing to set the pinion depth.

The ring gear is bolted onto the differential case with right-hand thread bolts.

The differential case is supported in the case by two tapered roller bearings. The differential and ring gear are located in relationship to the pinion by using two differential bearing adjusting nuts. These allow the differential to be moved from side to side by adjusting the nuts in or out. The differential side bearing preload is accomplished by tightening the differential bearing adjusting nuts after the ring gear backlash has been set. Two bearing caps are used to hold the differential into the differential carrier as well as to supply half of the threads for the bearing adjusting nuts. The differential is used to allow the wheels to turn at different rates of speed while the rear axle continues to transmit the driving force. This prevents tire scuffing when going around corners and prevents premature wear on internal axle parts.

The rear axle is sealed with a pinion seal, a gasket at each axle shaft end, and by a gasket between the rear axle housing and the differential carrier.

The Rockwell axle is identified by the model number on the carrier. This axle has a separate carrier, an overhung pinion, and incorporates disk brakes.

DISASSEMBLY OF THE REAR AXLE

****** Remove or Disconnect (Figures 1 and 2)

Tools Required:

- J 22912 Split Type Puller Plate
- J 7804-01 Pinion Flange Puller
- J 22912 Rear Pinion Bearing Remover
- J 3453 Pinion Flange Holding Bar
- Drain the axle lubricant from the housing.
- 1. Axle shafts. Refer to the proper service manual.
- 2. Carrier to housing bolts (47) and washers (45).
 - Loosen but do not remove the two upper bolts to keep the carrier from falling.
- 3. Carrier (46) from the axle housing.
 - Using a roller jack, support the carrier, and remove it from the axle housing.
 - Use a rawhide hammer to break the carrier loose from the housing.
 - Remove the two upper bolts (47).
- Place the carrier in a suitable holding fixture (figure 3).

4B6-2 12-INCH RING GEAR (ROCKWELL)

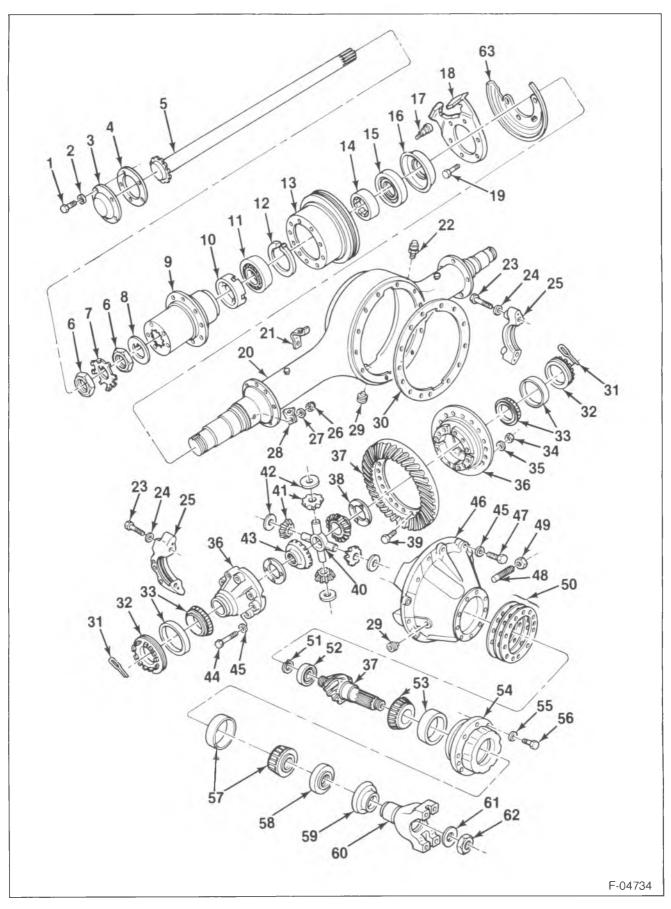


Figure 1—Rear Axle Components

12-INCH RING GEAR (ROCKWELL) 4B6-3

43. Side Gears 44. Bolt 45. Washer 46. Carrier 47. Bolt

1.	Bolt	22.	Axle Vent
2.	Washer	23.	Bolt
3.	Hub Cap	24.	Washer
4.	Gasket	25.	Bearing Cap
5.	Axle Shaft	26.	Nut
6.	Adjusting Nut	27.	Washer
7.	Lock Ring	28.	Bracket
8.	Thrust Washer	29.	Plug
9.	Wheel Hub	30.	Gasket
10.	Thrust Spacer	31.	Pin
11.	Bearing	32.	Adjusting Nut
12.	Retaining Ring	33.	Bearing
13.	Rotor	34.	Nut
14.	Bearing	35.	Washer
15.	Hub Oil Seal	36.	Differential Case
16.	Deflector	37.	Pinion and Ring
17.	Bolt	38.	Side Gear Thrus
18.	Brake Caliper Bracket	39.	Ring Gear Bolt
19.	Bolt	40.	Pinion Spider

48. Thrust Block Screw 49. Nut 50. Pinion Depth Shims 51. Retaining Ring 52. Bearing 53. Bearing 54. Pinion Cage 55. Washer 56. Bolt se 57. Bearing g Gear Set 58. Pinion Oil Seal st Washer 59. Deflector 60. Pinion Flange 61. Washer 62. Nut 63. Backing Plate 42. Pinion Thrust Washers

Figure 2—Rear Axle Components

41. Pinion Gears

- Loosen the jam nut (49) and back off the thrust block adjusting screw (48) (figure 4).
- Center punch one differential carrier leg and bearing cap to identify the cap for reassembly (figure 5).
- 4. Bearing cap bolts (23).
- 5. Bearing caps (25) (figure 6).

20. Axle Housing

21. Bracket

- 6. Adjusting nuts (32).
- 7. Differential and gear assembly (36) from the carrier (figure 7).
- Scribe a mark across the differential case halves.
- F-04745

Figure 3—Carrier in the Repair Stand

- 8. Differential case bolts (44).
- 9. The top case half (36) (figure 8).
- 10. Side gears (43) and thrust washers (38) (figure 9).

F-04734

- 11. Pinion gears (41) and thrust washers (42).
- 12. Differential pinion spider (40).
- 13. Ring gear nuts (34), washers (35), and bolts (39).
- 14. Ring gear (37) from the differential case.
- 15. Differential side bearings (33) using J 22912 and an arbor press (figure 10).
 - Mark the bearings as left and right.

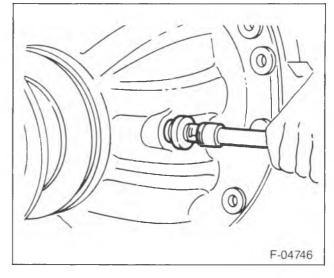


Figure 4—Thrust Adjusting Screw

4B6-4 12-INCH RING GEAR (ROCKWELL)

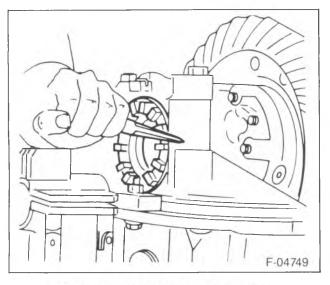


Figure 5—Punching the Carrier Leg

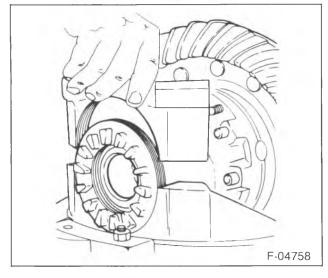


Figure 6-Removing the Bearing Cap

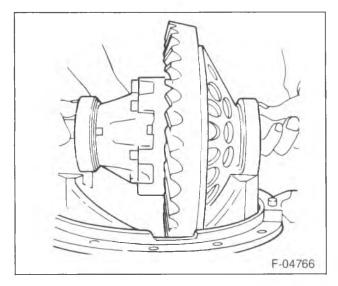


Figure 7—Removing the Differential

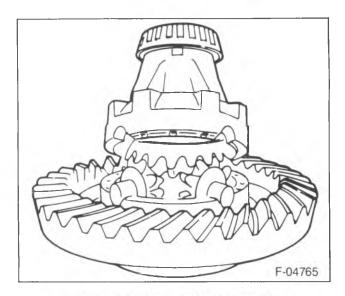


Figure 8-Differential Case Halves

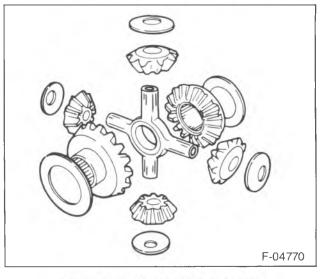


Figure 9—Differential Components

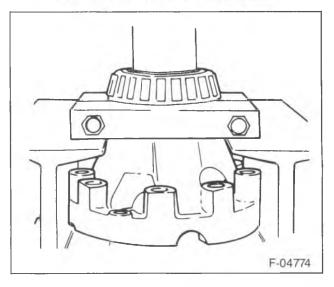


Figure 10—Removing the Differential Side Bearing

12-INCH RING GEAR (ROCKWELL) 4B6-5

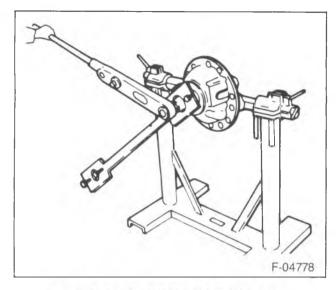


Figure 11-Removing the Pinion Nut

- 16. Pinion shaft nut (62) and washer (61) using J 3453 to hold the pinion yoke (figure 11).
- 17. Pinion yoke (60) using J 7804-01 (figure 12).
- Pinion cage (54) from the carrier by using bolts in the puller holes of the cage. Thread the bolts in, to push the cage away from the carrier (figure 13).
- 19. Shim pack (50) from the cage.
 - Wire the shims together.
- 20. Pinion gear (37) from the cage by pressing it out in an arbor press.
- 21. Pinion oil seal (58) from the pinion cage.
- 22. Outer bearing (57) from the cage.
- 23. Inner bearing (53) from the pinion using J 22912 and an arbor press (figure 14).
- 24. Pilot bearing retaining ring (51).
- 25. Pilot bearing (52) from the pinion gear (37) using J 22912.

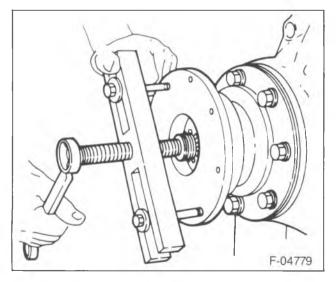


Figure 12—Removing the Pinion Flange

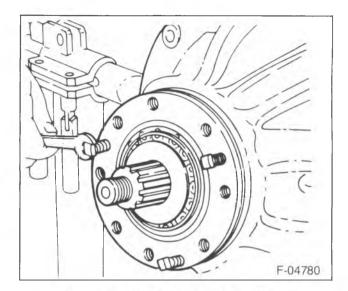


Figure 13—Removing the Pinion Cage

CLEANING

Do not steam clean drive parts having ground and polished surfaces such as gears, bearings, and shafts. These parts should be cleaned in a suitable solvent. All parts should be disassembled before cleaning.

Parts should be thoroughly dried immediately after cleaning. Use soft, clean, lintless rags. Parts may be dried with comressed air. Do not allow the bearings to spin while drying them with compressed air.

INSPECTION

It is very important to carefully and thoroughly inspect all drive unit parts before reassembly.

Through inspection of the drive parts for wear or stress ans subsequent replacement of worn parts will eliminate costly drive component repair after reassembly.

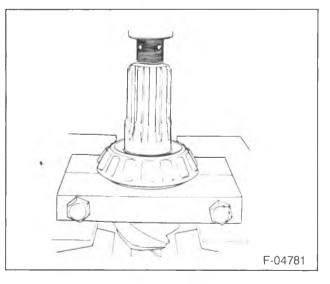


Figure 14—Removing the Pinion Inner Bearing

4B6-6 12-INCH RING GEAR (ROCKWELL)

AXLE HOUSING



- The carrier bore for nicks or burrs that would prevent the outer diameter of the pinion seal from sealing. Remove any burrs that are found.
- The bearing cup bores for nicks or burrs. Remove any burrs that are found.
- The housing for cracks. Replace the housing if any cracks are found.
- The housing for foreign material such as metal chips, dirt, or rust. Refer to "Cleaning" in this section.

DIFFERENTIAL

Inspect

- · Pinion gear shaft for unusual wear.
- Pinion gear and side gear teeth for wear, cracks, scorring, and spalling.
- Thrust washers for wear.
- The fit of the differential side gears in the differential case.
- The fit of the side gears on the axle shafts.
- Differential case for cracks and scorring.
- Replace all worn parts.

PINION AND RING GEAR

Inspect

- Pinion and ring gear teeth for cracking, chipping, scarring, or excessive wear.
- Pinion splines for wear.
- Pinion flange splines for wear.
- The fit of the pinion on the pinion flange.
- The sealing surface of the pinion flange for nicks, burrs, or rough tool marks which would cause damage to the seals' inside diameter and result in an oil leak.
- Pinion cages for cracks, imperfections, corrosion, pits and grooves.
- Replace all worn or broken parts.
- Ring and pinion gears are matched sets and are both replaced any time a replacement of either is necessary.

BEARINGS

1 Inspect

- Bearings visually and by feel. The bearings should feel smooth when oiled and rotated while applying as much hand pressure as possible.
- The large end of the bearing rollers for wear. This is where tapered roller bearing wear is most evident.
- Bearing cups for wear, cracks, brinelling and scorring.
- Bearings and cups are only replaced as sets.
- If the rear axle was operated for an extended period of time with very loose bearings, the ring gear and drive pinion will also require replacement.
- Low mileage bearings may have minutes scratches and pits on the rollers and the bearing cups from the initial preload. Do not replace a bearing for this reason.

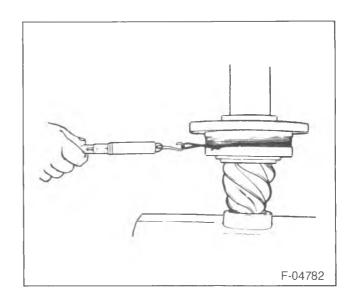


Figure 15—Measuring the Preload Torque

· Bearing caps for cracks or chips.

SHIMS

Inspect

Shims for cracks and chips. Damaged shims should be replaced with an equally sized service shim.

ASSEMBLY OF THE REAR AXLE

PINION ASSEMBLY



Tools Required:

- J 23723 Bearing Installer
- J 3453 Flange Holding Bar
- J 3154-04 Seal Installer
- Lubricate all parts with axle lubricant.
- 1. Pinion rear bearing (57) onto the pinion.
 - Press the bearing onto the pinion using J 23723.
- 2. Pinion pilot bearing (52) onto the pinion.
 - Press the bearing onto the pinion.
- 3. Bearing lock ring (51).
 - The ring must seat in the pinion ring land.
- 4. Pinion (37) into the cage (54).
- 5 Spacer over the pinion shaft.
- 6. Pinion front bearing (57).
 - Press the bearing onto the pinion using J 23723.
- Rotate the cage several times to initially seat the bearings.
- Place the pinion assembly in a press, and apply a load of 11 tons.
- Wrap a soft wire around the cage and pull on the line with a pound scale. Measure the rotating torque, not the starting torque (figure 15).
- The rotating torque should be 5 to 15 in. lbs. To determine the inch pounds:
 - Determine the diameter of the pinion cage in inches.

12-INCH RING GEAR (ROCKWELL) 4B6-7

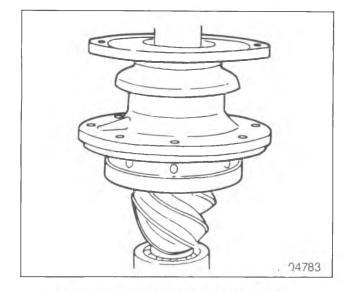


Figure 16—Installing the Pinion Flange

- Divide the diameter by 2 to find the radius in inches.
- Multiply the radius by the number of pounds on the scale.
- Use a thinner spacer to increase bearing preload. and a thicker spacer to decrease bearing preload.
- 7 Pinion flange (60) to the pinion (figure 16).
 - Press the flange onto the pinion.
- 8. Pinion washer (61) and nut (62) using J 3453 to hold the pinion (figure 17).

री Tighten

- Nut (62) to 325 N·m (240 ft. lbs.).
- Remove J 3453, and recheck the rotation torque at the pinion nut. The torque should be 5 to 15 in. lbs. Adjust the preload if necessary.
- Remove the pinion nut (62), washer (61), and flange (60) (figure 18).
- 9. Pinion oil seal (58) using J 3154-04 (figure 19).
- 10. Pinion flange deflector (59).
- 11. Pinion flange (60) to the pinion (figure 16).Press the flange onto the pinion.

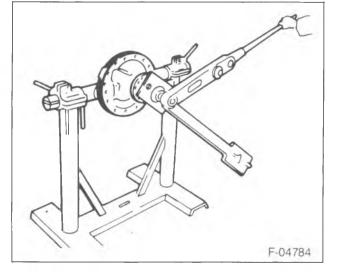


Figure 17—Installing the Pinion Nut

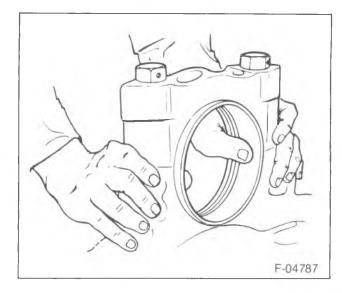


Figure 18—Removing the Pinion Nut

12. Pinion washer (61) and a new nut (62) using J 3453 to hold the pinion (figure 17).

R	Tighten	
1.1		

• Nut (62) to 325 N m (240 ft. lbs.).

PINION INSTALLATION

++ Install or Connect

- Measure the pinion bearing shims (50). If a new pinion and ring gear set is installed, the pinion bearing shim pack must be adjusted.
- Examine the heads of the new and old drive pinions. Compare these codes, and adjust the pinion bearing shim pack accordingly. The chart in figure 20, shows the proper adjustment to be made to the shim pack.
- If the original pinion is being used, the original pinion shims should also be used.
- 1. Pinion bearing shims (50) to the pinion cage.
- The shims, housing, and cage must be clean. 2. The pinion cage (54) to the axle housing.

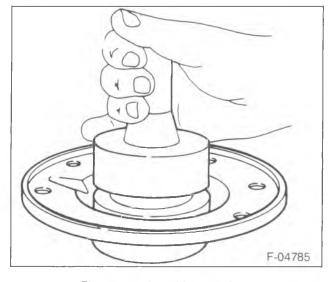


Figure 19—Installing the Seal

4B6-8 12-INCH RING GEAR (ROCKWELL)

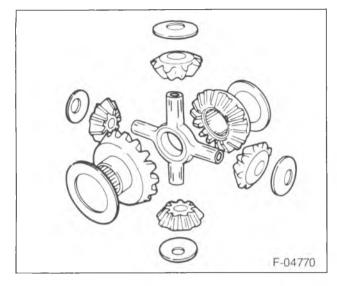


Figure 20—Differential Components

3. Cage bolts (56).



• Bolts to 48 N m (35 ft. lbs.).

DIFFERENTIAL CASE ASSEMBLY

Install or Connect

- Lubricate all parts with rear axle lubricant.
- 1. Differential pinion gears (41) and thrust washers (42) to the spider (40) (figure 21).
- Differential side gears (43) and thrust washers (38) to the differential case halves in their original locations.
- 3. Differential spider (40) to the differential.
- 4. The case halves (figure 22).
 - Align the scribe marks on the case halves.
- 5. Case bolts (44).

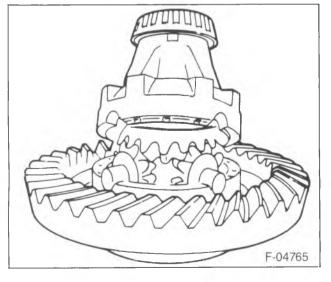


Figure 22—Installing the Case Halves

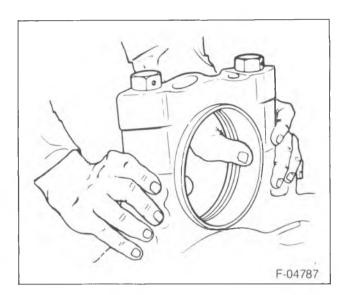


Figure 23—Checking the Bearing Cup Fit



- Bolts (44) to 61 N m (45 ft. lbs).
- Check that the mating surfaces of the differential case and the ring gear are clean and burr free.
- The ring gear must be heated before assembly to the differential case. Heat the ring gear in water to 160° — 180° F for 10 minutes before assembly.
- 6. Ring gear (37) to the differential.
 - Thread two studs into the ring gear on opposite sides.
 - Place the ring gear onto the case, and align the holes in the c ase with the studs.
- 7. New ring gear bolts (44).
 - Tighten the ring gear bolts alternately in stages gradually pulling the ring gear onto the differential case.



- The ring gear bolts in sequence to 136 N m (100 ft. lbs.).
- 8. Differential side bearings (33).

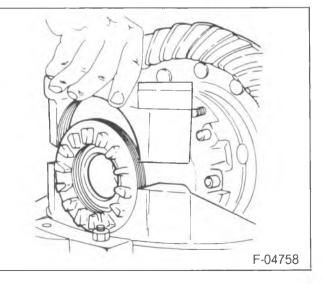


Figure 24—Installing the Bearing Cup

12-INCH RING GEAR (ROCKWELL) 4B6-9

• Press the bearings on using a suitable tool.

DIFFERENTIAL INSTALLATION

++ Install or Connect

- 1. Bearing cups (33) to the carrier (36)
- 2. Adjusting nuts (32).
- 3. Bearing caps (25).
- 4. Cap bolts (23).

၃ Tighten

- Bolts to 176 N m (130 ft. lbs.).
- The bearing cups must have a hand fit in the bearing bores: If the fit is too tight, rework the bore with emery cloth, until a hand fit is obtained (figure 23).

++

Remove or Disconnect

- 1. Cap bolts (23).
- 2. Bearing caps (25)
- 3. Adjusting nuts (32)
- 4. Bearing cups (33).

→← Install or Connect

- Lubricate all parts with axle lubricant.
- 1. Bearing cups (33) onto the bearings.
- 2. Differential assembly (36) to the carrier.
- 3. Bearing adjusting nuts (32).
 - Turn the nuts hand-tight against the bearing cups.
- 4. Bearing caps (25) (figure 24).
 - Tap lightly into position.
- 5. Cap bolts (23)

된 Tighten

• Bolts to 176 N m (130 ft. lbs.).

CHECKING RING GEAR RUN OUT

U Measure

- 1. Ring gear run out.
 - Mount a dial indicator to the carrier. The dial indicator stem should rest on the back face of the ring gear.
 - Loosen the adjusting nut opposite the ring gear enough to notice end play on the indicator.
 - Tighten the same adjusting nut just enough to have 0.000-inch end play on the indicator.
 - Rotate the gear, and check for run out. If the run out exceeds 0.008-inch, remove the differential, and determine the cause.

BACKLASH ADJUSTMENT

- The differential side bearing preload is adjusted by two adjusting nuts in the differential bearing bore. The bore and the bearing cap provide the mating threads for the bearing nut.
- The differential must be initially preloaded in order to determine the backlash of the gear set. After the backlash has been set, the final bearing preload is set.

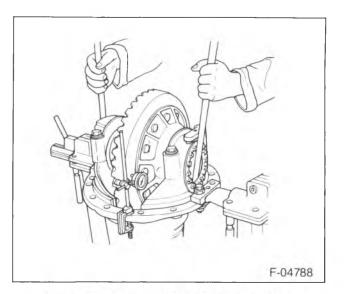


Figure 25—Adjusting Side Bearing Preload

Adjust 🛛

- . The bearing preload by tightening the adjusting nuts (32) one notch each from 0.000 end play. Refer to "Checking Ring Gear Run Out" (figure 25).
- Mount a dial indicator to the carrier (46). Place the stem of the indicator onto the toe end of a tooth (figure 26).
- 2. Backlash by moving the ring gear toward or away from the pinion.
 - If setting up the original ring and pinion gear set, use the backlash reading obtained earlier.
 - Set the backlash to 0.005 0.015-inch for new gear sets.
 - If the backlash is too high, move the ring gear toward the pinion.
 - If the backlash is too low, move the ring gear away from the pinion.

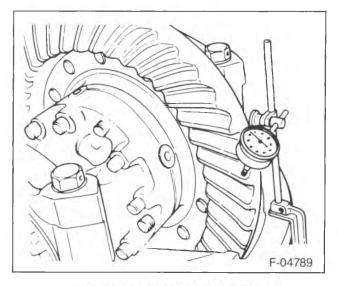


Figure 26—Checking Backlash

(23).

4B6-10 12-INCH RING GEAR (ROCKWELL)

FINAL ASSEMBLY

→+ Install or Connect

- 1. Carrier (46) to the axle housing. Refer to the proper service manual.
- 2. Drive axles. Refer to the proper service manual.
- 3. The axle housing to the v ehicle. Refer to the proper service manual.
- 4. Lubricant to the rear axle.


SPECIFICATIONS

12-INCH RING GEAR AXLE (ROCKWELL)

FASTENER Piston Nut Pinion Cage Bolts Case Half Bolts Ring Gear Bolts Bearing Cap Bolts	N∙m 325 48 61 136 176	FT. LBS. 240 35 45 100 130
SHIM SIZES Drive Pinion Bearing Retainer Shim		SIZE 0.003-inch 0.005-inch
Outer Pinion Bearing Shim		0.003-inch 0.005-inch 0.010-inch 0.030-inch
Inner Pinion Bearing Shim		0.003-inch 0.005-inch 0.010-inch
Drive Pinion Bearing Spacer		0.172-inch 0.173-inch 0.174-inch 0.175-inch 0.176-inch 0.177-inch 0.183-inch 0.189-inch 0.195-inch 0.201-inch
Lubricant		.80W-90 GL-5

12-INCH RING GEAR (ROCKWELL) 4B6-11

SPECIAL TOOLS

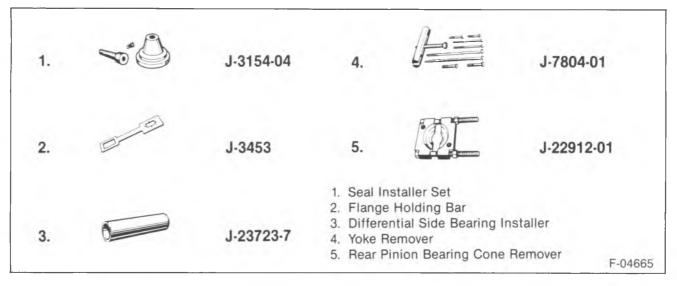

Special Tools

4B6-12 12-INCH RING GEAR (ROCKWELL)

PAGE

SECTION 4B7

LOCKING DIFFERENTIAL

CONTENTS

SUBJECT

Locking Differentials	1
7 ¹ / ₂ , 7 ⁵ / ₈ , 8 ¹ / ₂ and 9 ¹ / ₂ -Inch Ring Gear	1
10 ¹ /2-Inch Ring Gear	
Specifications	
Special Tools	0

LOCKING DIFFERENTIALS

71/2, 75/8, 81/2 AND 91/2-INCH **RING GEAR**

DISASSEMBLY OF THE DIFFERENTIAL

++ Remove or Disconnect (Figure 1)

Tools Required:

J 26252 Governor Remover


- 1. Governor bushing (4) using J 26252 (figure 2).
- 2. The C-clips that hold the latching bracket in place on the bracket shaft.
 - Move the bracket down the shaft.
- 3. Latching bracket bushing (5) using J 26252.
- 4. Latching bracket (11), shaft, and spring from the case.
- 5. Governor assembly (11) from the case.
- 6. Stop pin (2). (91/2-inch only.)
- 7. Lockscrew (3).
- 8. Pinion shaft (18).
- 9. Differential pinion gears (7) and pinion thrust washers (6).
 - · Roll the gears out of the case by rotating one of the side gears
- 10. Thrust block (17).
- 11. Right side gear (10).
- 12. Right disc pack (9) and side thrust washer.
- 13. Left side gear (21), cam plate (16), and disc pack (12) as an assembly (cam unit).
- 14. Side gear thrust washer (13).

CAM UNIT DISASSEMBLY - 71/2 AND 81/2-INCH

++ Remove or Disconnect (Figures 1 and 3)

- 1. Snap ring (22)
- 2. Clutch plates.
- 3. Guide clips (20)
- 4. Wave spring.
- 5. Cam plate (16)
- 6. Cam side gear (21).

CAM UNIT DISASSEMBLY - 91/2-INCH

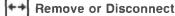

Tools Required:

- J 22912-01 Bearing Remover
- · Measure and record the overall length of the gear assembly from the front of the gear to the back of the thrust sleeve (14) including the side gear washer (13)
- 1. Guide clips (20).
- 2. Thrust sleeve (14) using J 22910-01.
 - Press the sleeve from the side gear (figure 4).
- Lock plates.
- 4. Wave spring
- 5. Cam plate (16).
- 6. Cam side gear (21).

CLEANING AND INSPECTION



All parts with solvent.

Inspect


- Pinion gear and side gear teeth for wear, cracks, scorring, and spalling
- Thrust washer for wear.
- The fit of the side gears on the axle shafts
- · Differential case for cracks and scorring.
- Thrust sleeve for excessive wear. Do not replace the thrust sleeve unless necessary. Inspect the side gear bore for scorring. If scorring is present, replace the entire differential.
- Replace parts as necessary.

Clean

])

All parts for excessive wear and breakage.

4B7-2 LOCKING DIFFERENTIALS

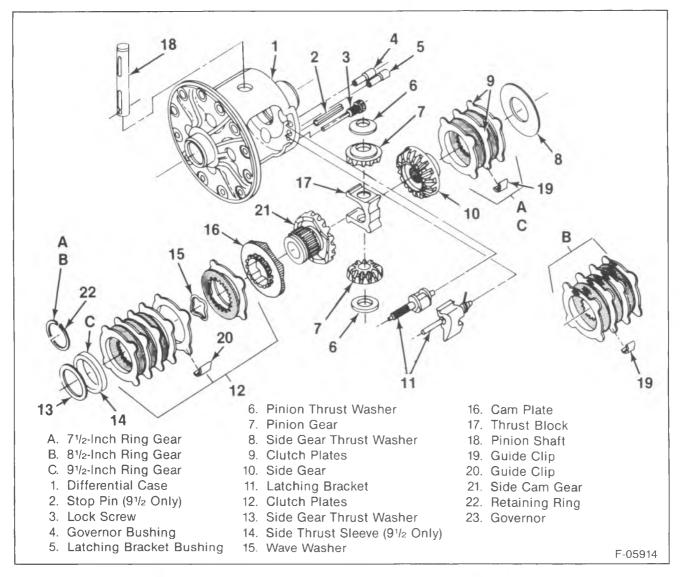



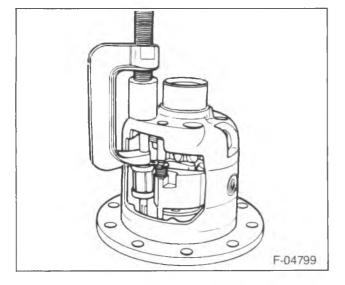


Figure 2—Removing the Governor Bushings

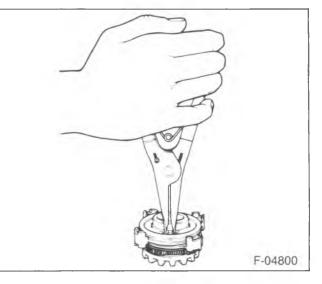


Figure 3—Removing the Retaining Ring

LOCKING DIFFERENTIALS 4B7-3

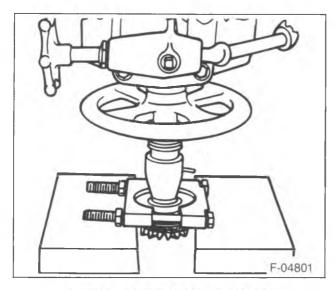


Figure 4—Removing the Thrust Ring

CAM UNIT ASSEMBLY - 71/2 AND 8 1/2-INCH

→+ Install or Connect

- 1. Cam plate (16) to the cam side gear (21).
- 2. Wave spring.
- 3. Clutch plates (7¹/₂ 7⁵/₈ 8 plates. 8¹/₂ 10 plates.
 Alternate the plates as shown in figure 2.
- 4. Snap ring.
- 5. Guide clips (20) to the plates.
 - Use grease in the clips to hold them in place on the plates.

CAM UNIT ASEMBLY - 91/2-INCH

→+ Install or Connect

- 1. Cam plate (16) to the cam side gear (21).
- 2. Wave spring.
- 3. Clutch plates.
 - Alternate the plates as shown in figure 1.
- 4. Thrust sleeve (14).
 - Press the thrust sleeve flush with the side gear disc splines.
- 5. Guide clips (20) to the plates.
 - Use grease in the clips to hold them in place on the plates.
- If the side gear or thrust sleeve has been replaced, measure and record the overall length of the gear assembly from the front of the gear to the back of the thrust sleeve (14) including the side gear washer (13).
- Compare this reading with the reading obtained earlier in this section.
- If the new reading is more than 0.003-inch higher or lower than the original, select a thrust washer that will return the reading closest to the original reading.

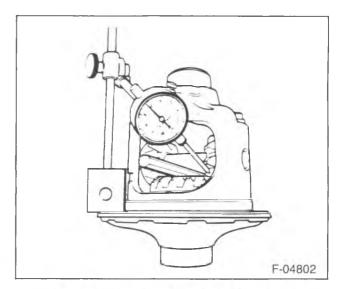


Figure 5—Checking Cam Gear Backlash

ADJUSTMENT OF THE DIFFERENTIAL

- If it is necessary to replace the cam gear, the right side gear, or the thrust block, the entire differential must be adjusted. The differential is adjusted by using selective thickness thrust washers behind each side gear, and a selective thickness thrust block between the side gears.
- It is important to build up the differential properly, as the proper clearances between parts is necessary for the proper operation of the units.
- There are three adjustments to be made:
 - (1) Left side gear backlash.
 - (2) Right side gear backlash.
 - (3) Thrust block clearance.

Left Side Gear Backlash Adjustment

- 1. Install the cam unit and thrust washer (13) to the flange end of the case.
- 2. Place the pinion gears (7) and thrust washers into the differential.
 - Align them with the pinion shaft hole.
- 3. Press down the side gear, and install the pinion shaft (18) and lock screw (3).
 - If the side gear cannot be pressed down far enough to install the pinion shaft replace the thrust washer with a thinner washer.
- 4. Rotate the pinion gear closest to the lock screw so that one of the teeth is pointing downward (perpindicular to the ring gear flange).
- 5. Insert a large tapered tool such as a screwdriver firmly between the side gear and the pinion shaft.
- Mount a dial indicator to the ring gear flange, and place the stem of the indicator on one of the teeth on the pinion gear closest to the lock screw (figure 5).
- 7. Pull the pinion gear firmly into its seat, and rotate the gear back and forth while reading the dial indicator. Record the reading.
- 8. Repeat steps 4 7 on the opposite pinion gear.
- 9. The backlash should be between 0.254 and 0.457 mm (0.010 and 0.018-inch).
- 10. If the backlash is too high, use a thicker thrust washer.

4B7-4 LOCKING DIFFERENTIALS

11. If the backlash is too low, use a thinner thrust washer.

Right Side Gear Backlash Adjustment

- 1. Assemble the clutch plates.
 - Alternate the plates as shown in figure 1.
- 2. Assemble the guide clips (19) to the plates.
 - · Use grease in the clips to hold them in place on the plates.
- 3. Install the thrust washer (8), clutch plate assembly (9), and right side gear to the differential.
- 4. Place the pinion gears (7) and thrust washers (6) into the differential.
 - · Align them with the pinion shaft hole.
- 5. Press down the side gear, and install the pinion shaft (18) and lock screw (3).
 - · If the side gear cannot be pressed down far enough to install the pinion shaft, replace the thrust washer with a thinner washer.
- 6. Rotate the pinion gear closest to the lock screw so that one of the teeth is pointing downward (perpindicular to the ring gear flange).
- 7. Insert a large tapered tool such as a screwdriver firmly between the side gear and the pinion shaft.
- 8. Mount a dial indicator to the ring gear flange, and place the stem of the indicator on one of the teeth on the pinion gear closest to the lock screw (figure 5).
- 9. Pull the pinion gear firmly into its seat, and rotate the gear back and forth while reading the dial indicator. Record the reading.
- 10. Repeat steps 6 through 9 on the opposite pinion gear.
- 11. The backlash should be between 0.051 and 0.243 mm (0.002 - 0.010-inch).
- 12. If the backlash is too high, use a thicker thrust washer.
- 13. If the backlash is too low, use a thinner thrust washer.

Thrust Block Clearance Adjustment

→+| Install or Connect

- 1. Left thrust washer (13) to the differential.
- 2. Cam unit to the differential.
- 3. Right thrust washer (8) to the differential.
- 4. Clutch plates with guide clips to the differential. · Assemble alternatively as shown in figure 1.
- 5. Right side gear (10) to the differential.
- 6. Pinion shaft (18) and lock screw (3). Insert a large tapered tool such as a screwdriver firmly between each side gear and the pinion shaft.
- 7. A 1 to 2-inch telescoping gage between the side gear faces, not the gear teeth.
 - Measure the side gear spread (figure 6).

🖲 Measure

- Remove the telescoping gage.
- 1. Measure the telescoping gage with a micrometer.
- 2. Measure the original thrust block at the outer corner with a micrometer (figure 7).
- If the thrust block thickness is not 0.000 to 0.006-inch less than the side gear spread, adjust the clearance by:

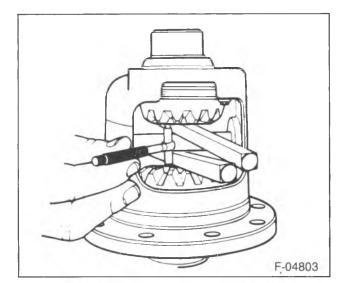


Figure 6—Measuring Side Gear Spread

- Selecting a new thrust block the correct size to obtain 0.000 to 0.006-inch clearance.
- Reshiming the right and/or left clutch disk pack. The backlash must remain 0.002 -0.010-inch.

ASSEMBLY OF THE DIFFERENTIAL

Install or Connect (Figure 1)

- 1. Left thrust washer (13).
- 2. Cam unit. Refer to "Cam Unit Assembly" in this section.
- 3. Right thrust washer (8).
- 4. Right clutch plates with guide clips (19).
- Assembly alternatively as shown in figure 1. 5. Right side gear (10).
- 6. Thrust block (17), thrust washer (6), and pinion gear (7).
- Place the pinion gears into the differential 180 degrees apart.
- · Rotate the gears and thrust block into position.

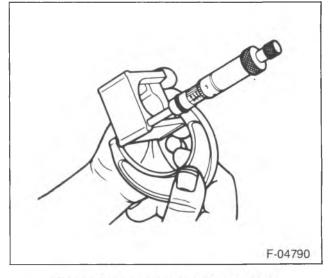


Figure 7—Measuring the Thrust Block

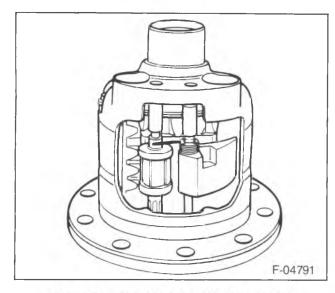


Figure 8—Governor and Latching Bracket

- The open side of the thrust block must face toward the small window opening.
- 7. Pinion shaft (18).
- 8. A new lockscrew (3). Install finger tight.
 - Tighten to specifications after its in the vehicle.
- 9. Governor assembly (23) and latching bracket (11).
 - The straight end of the latching bracket spring must be over and outside the governor assembly shaft (figure 8).
- 10. Stop pin (2) (91/2-inch)
- Press the pin flush with the case.
- 11. Governor bushing (4).
 - Use the bushing with a straight hole, not a tapered hole.
 - Press the bushing in far enough to give 0.004 to 0.020-inch shaft end play.
- 12. Latching bracket bushing (5).
 - · Press in far enough to eliminate all end play.

10¹/2-INCH RING GEAR

DISASSEMBLY OF THE DIFFERENTIAL

++ Remove or Disconnect (Figure 9)

Tools Required:

- J 22912-01
- The ring gear and differential side bearings. Refer to "Dissasembly of the Rear Axle" under the "10¹/₂-Inch Ring Gear" heading.
- 2. Case screws (32).
 - Set the unit on the right side case half.
- 3. Case halves (figure 10).
 - Pry the halves apart at the yoke hole location. Hold the side gear in the left side case half.
- 4. Governor assembly (48).
- 5. Latching bracket assembly (43).
- 6. Left side gear (46).
- 7. Left side clutch pack and guide clips (47).
- 8. Left thrust washer (45).
- 9. Reaction blocks (41), pinion yoke (42), pinion gears (39), and pinion thrust washers (38).

LOCKING DIFFERENTIALS 4B7-5

- 10. Right cam unit from the differential.
- 11. Right thrust washer (36).
 - Measure and record the overall length of the gear assembly from the front of the gear to the back of the thrust sleeve (35) including the side gear washer (36).
- 12. Thrust sleeve (35) using J 22912-01.
 - Press the sleeve from the side gear (figure 11).
- 13. Clutch plates.
- 14. Guide clips (34).
- 15. Wave spring.
- 16. Cam plate (33).
- 17. Cam side gear (40)

CLEANING AND INSPECTION

Clean

All parts with solvent.

Inspect


- All parts for excessive wear and breakage.
- Pinion gear and side gear teeth for wear, cracks, scorring, and spalling.
- Thrust washers for wear.
- . The fit of the side gears on the axle shafts.
- · Differential case for cracks and scorring.
- Thrust sleeve for excessive wear. Do not replace the thrust sleeve unless necessary. Inspect the side gear bore for scorring. If scorring is present, replace the entire differential.
- If any damage to the differntial case is found, the entire differential must be replaced.
- · Replace parts as necessary.

CAM UNIT ASSEMBLY

Install or Connect (Figure 9)

- 1. Cam plate (33) to the cam side gear (40).
- 2. Wave spring.
- 3. Clutch plates.
 - Alternate the plates, and position the wave spring as shown in figure 12.
- 4. Thrust sleeve (35).
 - Press the thrust sleeve flush with the side gear disc spline.
- 5. Guide clips (34) to the plates.
 - Use grease in the clips to hold them in place on the plates.
- If the side gear or thrust sleeve has been replaced, measure and record the overall length of the gear to the back of the thrust sleeve (35) including the side gear thrust washer (36).
- Compare this reading with the reading obtained earlier in this section.
- If the new reading is more than 0.003-inch higher or lower than the original, select a thrust washer that will return the reading closest to the original reading.

4B7-6 LOCKING DIFFERENTIALS

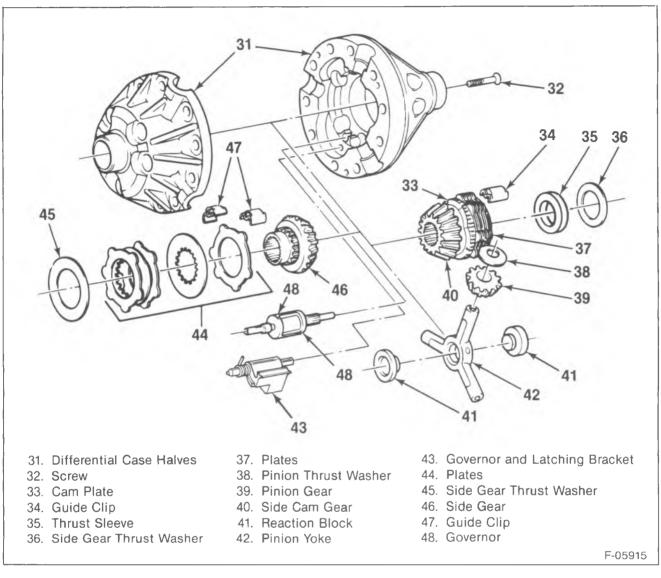



ADJUSTMENT OF THE DIFFERENTIAL

 If it is necessary to replace the cam gear, the right hand side gear, or the reaction blocks, the entire differential must be adjusted. The differential is adjusted by using selective thickness thrust washers behind each side gear, and selective thickness reaction blocks between the side gears.

 It is important to build up the differential properly. The proper clearance between parts is necessary for the proper operation of the unit.

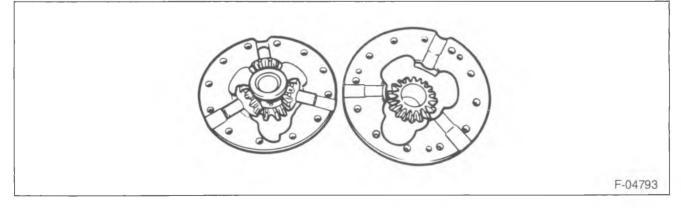


Figure 10—Differential Case Halves

F-04801

Figure 11—Removing the Thrust Sleeve

- There are three adjustments to be made:
 - (1) Left side gear backlash.
 - (2) Right side gear backlash.
 - (3) Thrust block clearance.

Right Side Gear Blacklash Adjustment

- 1. Install the cam unit and thrust washer (36) to the right case half.
- 2. Clamp the cam unit in place using a set of washers, nut, and a bolt long enough to hold the cam unit in place (figure 13).
- 3. Place the pinion gears and thrust washers on the pinion yoke.
- 4. Install the yoke firmly to the differential case half (figure 14).
- Loosen the nut, and index one pinion gear tooth to point downward (perpindicular to the case half face). Tighten the nut.
- 6. Mount a dial indicator on the case half face using a magnetic base (figure 15).
- 7. Place the stem of the dial indicator on the pinion gear tooth.

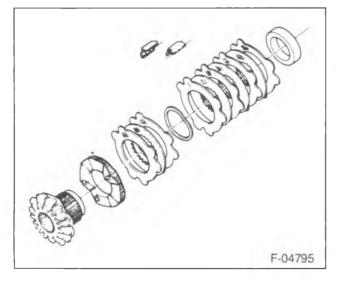


Figure 12—Cam Unit Components

LOCKING DIFFERENTIALS 4B7-7

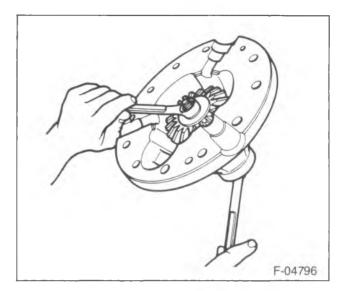


Figure 13—Clamping the Cam Unit In Place

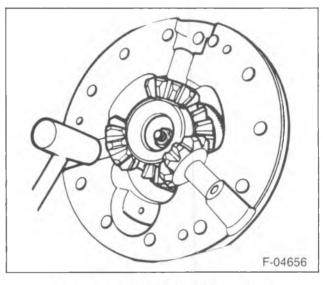


Figure 14-Installing the Pinion Yoke

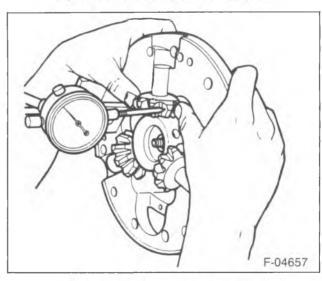


Figure 15—Measuring Backlash

4B7-8 LOCKING DIFFERENTIALS

- 8. Pull the pinion gear firmly into its seat, and rotate the gear back and forth while reading the dial indicator. Record the reading.
- Do not unseat the pinion yoke. This will make the backlash reading inaccurate.
- 9. Repeat steps 5 8 on the other 2 pinions. Record the readings.
- 10. The backlash should be between 0.254 and 0.457 mm (0.010 and 0.018-inch).
- 11. If the backlash is too high, use a thicker thrust washer.
- 12. If the backlash is too low, use a thinner thrust washer.

Left Side Gear Backlash Adjustment

- 1. Assemble the clutch plates.
 - Alternate the plates as shown in figure 12.
- 2. Assemble the guide clips (47) to the plates.
 - Use grease in the clips to hold them in place on the plates.
- 3. Install the thrust washer (45), clutch plate assembly (44), and left side gear to the differential.
- 4. Clamp the side gear in place using a set of washers, a nut, and a bolt long enough to hold the side gear in place (figure 13).
- 5. Place the pinion gears and thrust washers on the pinion yoke.
- 6. Install the yoke firmly to the differential case half.
- Loosen the nut, and index one pinion gear tooth to point downward (perpindicular to the case half face). Tighten the nut.
- Mount a dial indicator on the case half face using a magnetic base (figure 15).
- 9. Place the stem of the dial indicator on the pinion gear tooth.
- 10. Pull the pinion gear firmly into its seat, and rotate the gear back and forth while reading the dial indicator. Record the reading.
- Do not unseat the pinion yoke. This will make the backlash reading inaccurate.
- 11. Repeat steps 7 10 on the other 2 pinions. Record the readings.
- 12. The backlash should be between 0.051 and 0.254 mm (0.002 and 0.010-inch).
- 13. If the backlash is too high, use a thicker thrust washer.
- 14. If the backlash is too low, use at thinner washer.

Reaction Block Clearance Adjustment

→+ Install or Connect

- Left thrust washer, plates and side gear. Bolt them into position. Refer to "Left Side Gear Backlash Adjustment".
- Right thrust washer and cam assembly. Bolt them into position. Refer to "Right Side Gear Backlash Adjustment".
- Measure the distance from the side gear face to the case half face (figure 16).
- The thickness of the straight edge must be subtracted from the reading.
- Add the measurement of both sides together. This is the side gear spread.

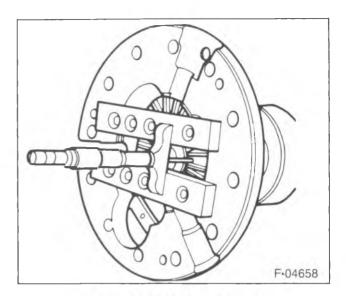


Figure 16—Side Gear Spread

- Measure the thickness of the original reaction blocks together (figure 17).
- If the reaction block thickness is not 0.000 to 0.006-inch less than the side gear spread, adjust the clearance by:
 - Selecting new reaction blocks of the correct thickness to obtain 0.000 to 0.006-inch clearance.
 - Reshiming the left and/or right clutch disk pack. The backlash must remain 0.002 -.010-inch.

ASSEMBLY OF THE DIFFERENTIAL

→+ Install or Connect (Figure 9)

- 1. Right thrust washer.
- 2. Right cam unit. Refer to "Cam Unit Assembly".
- 3. Reaction blocks (41), pinion yoke (42), pinion gears (39), and pinion thrust washers (38).
- 4. Left thrust washer (45).
 - Assemble the plates as shown in figure 9 and 12.

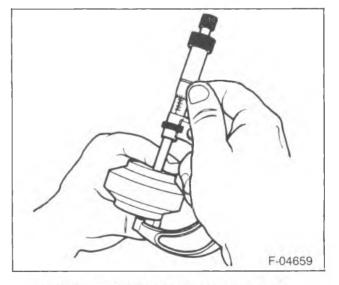


Figure 17—Measuring the Reaction Block

LOCKING DIFFERENTIALS 4B7-9

5. Left side gear (46)

Lubricant

- 6. Latching bracket assembly (43).
- 7. Governor assembly (48).
 - The straight end of the latching bracket spring must be over and outside the governor assembly shaft.
- 8. Case halves (31) together.
- Hold the side gear in the left side case half.
- 9. Case screws (32).
- 10. The ring gear and differential side bearings. Refer to "Assembly of the Rear Axle" under the "101/2-Inch Ring Gear" heading.

SPECIFICATIONS

FASTENER	N·m	FT. LBS.
Differential Lockscrew		
7 ¹ /2, 7 ⁵ /8, and 8 ¹ /2-inch	36	27
91/2-inch	50	37

THRUST BLOCK SIZES

Color Code	7 ¹ /2-, 7 ⁵ /8-Inch	81/2-Inch	9 ¹ /2-Inch
	1.260-inch	1.322-inch	1.598-inch
White	1.264-inch	1.326-inch	1.602-inch
Brown	1.268-inch	1.330-inch	1.606-inch
Yellow	1.272-inch	1.334-inch	1.610-inch
Orange	1.276-inch	1.338-inch	1.614-inch
Pink	1.280-inch	1.342-inch	1.618-inch
Green	1.284-inch	1.346-inch	1.622-inch
Blue	1.288-inch	1.350-inch	1.626-inch
Black	(<u> </u>		1.630-inch

REACTION BLOCK SIZES - 101/2-INCH

0.675-inch 0.672-inch 0.669-inch 0.666-inch

RIGHT HAND SIDE GEAR THRUST WASHER

7 ¹ / ₂ , 7 ⁵ / ₈ , 8 ¹ / ₂ and 9 ¹ / ₂ Inch Axles	10 ¹ /2 Inch Axles
0.10-inch	0.027-inch
0.15-inch	0.032-inch
0.20-inch	0.037-inch
0.25-inch	0.040-inch
0.30-inch	0.042-inch
0.35-inch	0.044-inch
0.40-inch	0.048-inch
0.45-inch	


LEFT HAND SIDE GEAR THRUST WASHER

7 ¹ /2-, 7 ⁵ /8-Inch	81/2-Inch	9 ¹ /2-Inch	101/2-Inch
0.022-inch	0.022-inch	0.022-inch	0.022-inch
0.027-inch	0.027-inch	0.027-inch	0.027-inch
0.032-inch	0.032-inch	0.032-inch	0.032-inch
0.036-inch	0.036-inch	0.036-inch	0.036-inch
0.040-inch	0.040-inch	0.040-inch	0.040-inch
_		0.042-inch	0.042-inch
0.044-inch	0.044-inch	0.044-inch	0.044-inch
0.048-inch	0.048-inch	0.048-inch	0.048-inch
0.052-inch	0.052-inch	0.052-inch	0.052-inch

(Do not use limited slip additive.)

4B7-10 LOCKING DIFFERENTIALS

SPECIAL TOOLS

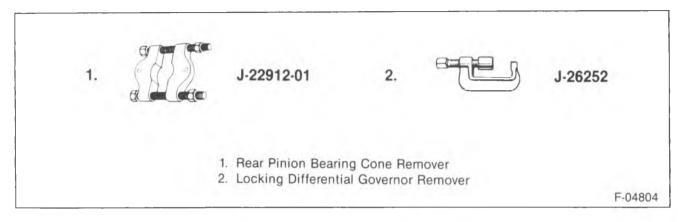

Special Tools

PAGE

PAGE

SECTION 4C

FRONT AXLE

CONTENTS

SUBJECT

 81/2-Inch Ring Gear Front Axle
 .4C1-1

 93/4-Inch Ring Gear Front Axle
 .4C2-1

 T Truck Front Axle
 .4C3-1

 K Truck Front Axle
 .4C4-1

SECTION 4C1

8¹/₂-INCH RING GEAR

CONTENTS

SUBJECT

Description	
Disassembly of Axle	
Inspection	
Disassembly	4C1- 2
Cleaning and Inspection	
Cleaning	
Inspection	
Assembly of Axle	
Pinion Bearing Cup Installation	4C1- 6
Pinion Depth Adjustment	
Pinion Installation	
Differential Case Assembly	
Side Bearing Preload Adjustment	
Backlash Adjustment.	4C1-10
Gear Tooth Contact Pattern Check	
Final Assembly	
Specifications	
Special Tools	

DESCRIPTION

DESCRIPTION

The GM 8^{1/2}-inch ring gear front axle uses a coventional ring gear and pinion gear set to transmit the driving force of the engine to the wheels. This gear set transfers this driving force at a 90 degree angle from the propeller shaft to the drive shafts.

This axle is full-floating. The shafts are retained in the housing by retaining clips in the hubs.

The pinion gear is supported by two tapered roller bearings. The pinion depth is set by a shim pack located bwtween the gear end of the pinion and the roller bearing that is pressed onto the pinion. The pinion bearing preload is set by crushing a collapsible spacer between the bearings in the axle housing.

The ring gear is bolted onto the differential case with left-hand thread bolts.

The differential case is supported in the axle housing by two tapered roller bearings. The differential and ring gear are located in relationship to the pinion by using selective shims between the bearing and the axle housing. To move the ring gear, shims are deleted from one side and an equal amount area added to the other side. These shims are also used to preload the bearings,

4C1-2 8¹/₂-INCH RING GEAR

which are pressed onto the differential case. Two bearing caps are used to hold the differential into the front axle housing

The differential is used to allow the wheels to turn at different rates of speed while the front axle continues to transmit the driving force. This prevents tire scuffing when going around corners and prevents premature wear on internal axle parts.

DIASSEMBLY OF AXLE

INSPECTION

Perform the following checks before disassembling the axle.

- 1. Remove the axle cover from the axle and drain the axle lubricant into a suitable container.
- 2. Check the ring gear backlash. Refer to "Backlash Adjustment." This information can be used to determine the cause of the axle problem. It will also help when setting up the shim packs for locating and preloading the differential case.
- 3. Inspect the case for metal chips. Determine where the metal chips come from, such as a broken gear or bearing cage.
- 4. Determine the cause of the axle problem before disassembly if possible.

DISASSEMBLY

Remove or Disconnect (Figure 1)

Tools Required:

- J 8107-4 Differential Side Bearing Remover Plug
- J 22888 Differential Side Bearing Remover
- J 8614-01 Pinion Flange Remover
- J 8612-B Rear Pinion Bearing Cone Remover
- Place the axle in a suitable support.
- 1. Differential cover bolts (14) and differential cover (12)
- Drain the gear lubricant into a proper container.
- 2. Axle shafts (33). Refer to the proper Light Duty Truck Service Manual.
- 3. Pinion shaft lock screw (15).
- 4. Pinion shaft (17).
- 5. Differential pinion (21) and side gears (22).
 - · Roll the pinion gears out of the case with the pinion thrust washers (20).
 - · Remove the side gears and the side gear thrust washers (19). Mark the gears and the differential case as left and right.
- 6. Differential bearing cap bolts (18)
- 7. Differential bearing caps (10)
 - · Mark the caps and the housing as left and right.

The front axle is sealed with a pinion seal, a seal at each axle shaft, and by a gasket between the front cover and the axle housing.

All GM front axles are identified by the part number on the right axle tube near the carrier. The carrier cover does not have a drain plug.

NOTICE: Be careful when prying the differential case out of the axle housing so as not to damage the cover gasket surface. The differential case must be supported when it is being removed to prevent the case from falling and damaging the case.

- 8. Differential carrier (24)
 - · Pry the case from the axle housing at the differential "window" (figure 2).
- 9. Bearing outer races (8) and shims (9).
 - · Mark the races and the shims as left and right, and place them with the bearing caps
- 10. Differential side bearings (8) using J 8107-4 and J 22888 (figure 3).
 - The jaws of J 22888 must pull from beneath the bearing cone and not the cage.
- 11. Ring gear bolts (23).
 - · Ring gear bolts use left-hand threads.

NOTICE: Do not pry the ring gear from the case. This will damage the ring gear and the differential case.

- 12. Ring gear (7) from the differential case.
 - Drive the ring gear off with a brass drift.

Inspect

- Drive pinion bearing preload (figure 4).
- · For looseness of pinion assembly by moving it back and forth. (This indicates excessive bearing wear.)
- 13. Pinion flange nut (35) and washer (36) using J 8614-01 to hold the pinion flange (figure 5).
- 14. Pinion flange using J 8614-01 (figure 6)
- 15. Pinion (7) from the axle housing
 - Thread the pinion nut halfway onto the pinion.
 - Replace the differential cover (12) with two bolts (14) to keep the pinion from falling to the floor.
 - · Drive the pinion out of the housing with a hammer and a soft drift (figure 7).
- 16. Collapsible spacer (4) from the pinion.
- 17. Outer pinion seal (38) and bearing (39).
- 18. Inner bearing (5) and shim (6) from the pinion.
 - · Press the bearing off the pinion using J 8612-B (figure 8).
 - · Remove the shim.
- 19. Bearing cups (5) and (39) from the axle housing using a hammer and a punch.

81/2-INCH RING GEAR 4C1-3

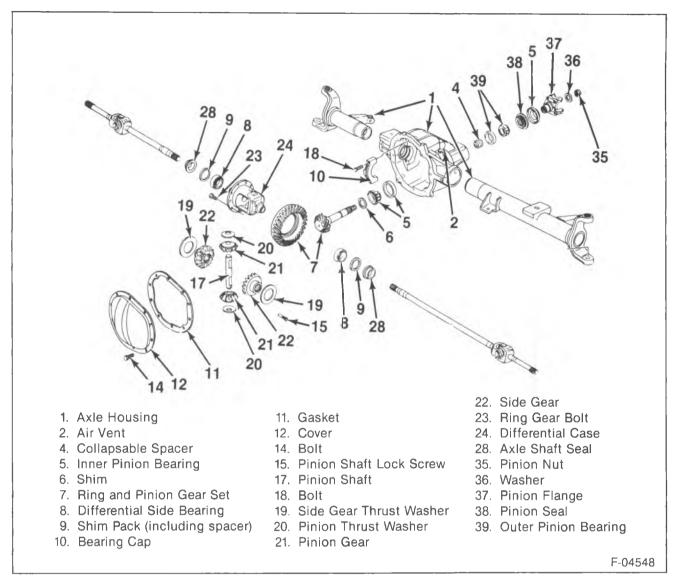


Figure 1—Front Axle Components

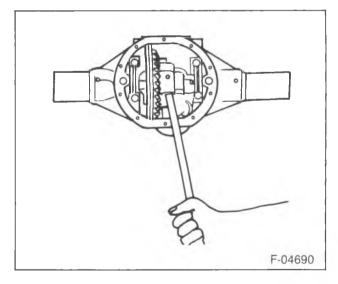


Figure 2—Prying the Differential Case from the Axle Housing

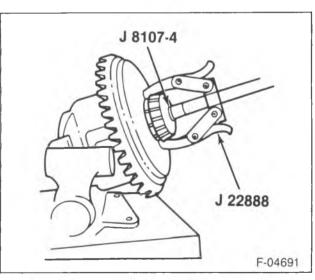


Figure 3—Differential Side Bearing Removal

4C1-4 81/2-INCH RING GEAR

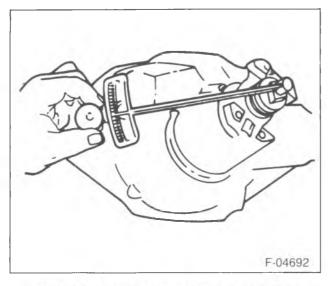


Figure 4—Checking Pinion Bearing Preload

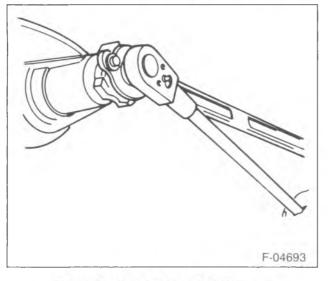


Figure 5-Pinion Flange Nut Removal

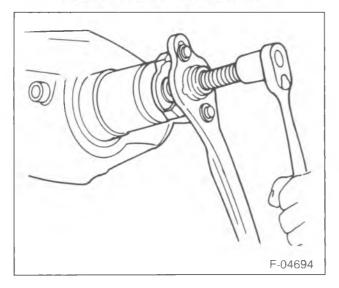


Figure 6—Pinion Flange Removal

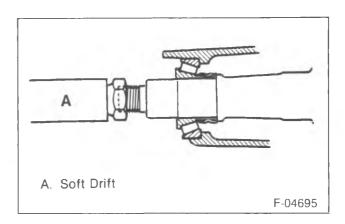


Figure 7—Removing the Drive Pinion

• Work the cups out of the housing evenly, moving the punch back and forth between one side of the cup and the other.

20. Axle seals.

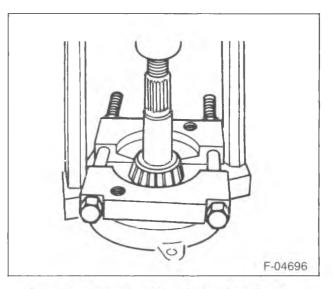


Figure 8-Removing Drive Pinion Rear Bearing

81/2-INCH RING GEAR 4C1-5

CLEANING AND INSPECTION

CLEANING

- Do not steam clean drive parts having ground and polished surfaces such as gears, bearings, and shafts. These parts should be cleaned in a suitable solvent. All parts should be disassembled before cleaning.
- Parts should be thoroughly dried immediately after cleaning. Use soft, clean, lintless rags. Parts may be dried with compressed air. Do not allow the bearings to spin while drying them with compressed air.

INSPECTION

It is very important to carefully and thoroughly inspect all drive unit parts before assembly.

Through inspection of the drive parts for wear or stress and subsequent replacement of worn parts will eliminate costly drive component repair after reassembly

AXLE HOUSING

Inspect

- Carrier bore for nicks or burrs that would prevent the outer diameter of the pinion seal from sealing. Remove any burrs that are found.
- Bearing cup surfaces for nicks or burrs. Remove any burrs that are found.
- Housing for cracks. Replace the housing if any cracks are found.
- Housing for foreign material such as metal chips, dirt, or rust. Refer to "Cleaning" in this section.

DIFFERENTIAL

Inspect

- Pinion gear shaft for unusual wear.
- Pinion gear and side gear teeth for wear, cracks, scoring, and spalling.
- Thrust washers for wear.
- Fit of the differential side gears in the differential case.
- Fit of the side gears on the axle shafts.
- Differential case for cracks and scorring.
- Replace all worn parts.

PINION AND RING GEAR

Inspect

- Pinion and ring gear teeth for cracking, chipping, scorring, or excessive wear.
- Pinion splines for wear.
- Pinion flange splines for wear.
- Fit of the pinion on the pinion flange.
- Sealing surface of the pinion flange for nicks. burrs. or rough tool marks which would cause damage to the seals' inside diameter and result in an oil leak.
- Replace all worn or broken parts.
- Ring and pinion gears are matched sets and are both replaced any time a replacement of either is necessary.

BEARINGS



- Bearings visually and by feel. The bearings should feel smooth when oiled and rotated while applying as much hand pressure as possible.
- The large end of the bearing rollers for wear. This is where tapered roller bearing wear is most evident.
- Bearing cups for wear, cracks, brinelling and scorring.
- Bearings and cups are only replaced as sets.
- If the front axle was operated for an extended period of time with very loose bearings, the ring gear and drive pinion will also require replacement.
- Low mileage bearings may have minute scratches and pits on the rollers and the bearing cups from the initial preload. Do not replace a bearing for this reason.
- Bearing caps for cracks or chips.

SHIMS

Inspect

 Shims for cracks and chips. Damaged shims should be replaced with an equally sized service shim.

4C1-6 8¹/₂-INCH RING GEAR

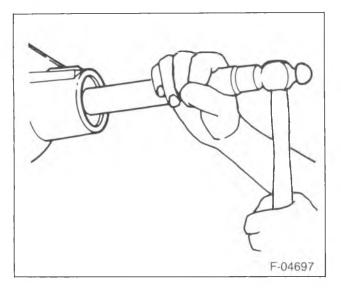


Figure 9—Front Pinion Bearing Cup Installation

Important

0

• Lubricate all seal lips, gears, and bearing surfaces with axle lubricant prior to assembly.

PINION BEARING CUP INSTALLATION

Install or Connect

Tools Required:

- J 8608 Rear Pinion Bearing Cup Installer
- J 8611-01 Front Pinion Bearing Cup Installer
- J 8092 Driver Handle
- 1. Front pinion bearing cup using J 8611-01 and J 8092 (figure 9).
- 2. Rear pinion bearing cup using J 8608 and J 8092 (figure 10).

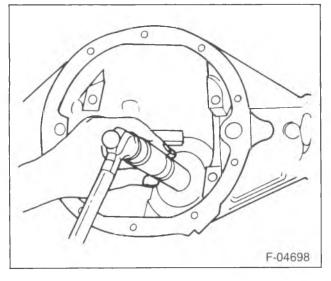


Figure 10-Rear Pinion Bearing Cup Installation

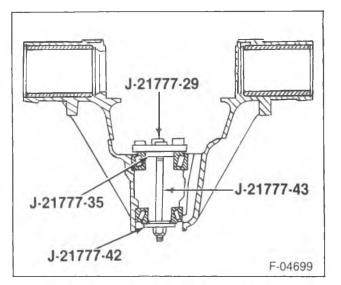


Figure 11-Gage Plate Components

PINION DEPTH ADJUSTMENT

Tools Required:

- J 8001 Dial Indicator Set
- J 21777-1 Arbor
- J 21777-29 Plate
- J 21777-35 Rear Pilot Washer
- J 21777-42 Front Pilot Washer
- J 21777-43 Stud Assembly Bolt
- J 21777-45 Side Bearing Disc
- 1. Clean all the gage parts.
- Lubricate the front and rear pinion bearings with axle lubricant.
- 3. Place the bearings (5) and (39) into the pinion bearing cups.
- 4. Install J 21777-35, J 21777-42, J 21777-29, and J 21777-43 to the pinion bore (figure 11).
- 5. Hold the stud stationary at the flats of the stud. Tighten the stud nut to 2.2 N m (20 in. lbs.).
- 6. Rotate the gage plate and bearings several complete revolutions to seat the bearings.
- Tighten the stud nut until a torque of 1.6 to 2.8 N·m (15 to 25 in lbs.) is obtained to keep the gage plate in rotation.
- 8. Assemble J 21777-45, J 21777-1 Arbor, and J 8001 to the differential bearing bore as shown in figure 12.
 - The bearing bores must be clean and burr free.
- 9. Install the side bearing caps, and tighten the bolts finger tight.
- Rotate the gage plate until the proper gaging area is parallel with the disks.
- Position the gage shaft assembly in the carrier so that the dial indicator rod is centered on the gaging area of the gage block.
- Set the dial indicator at zero. Push the indicator down on the indicator shaft until the needle rotates ³/₄ of a turn to the right. Tighten the dial indicator in this position.

ASSEMBLY OF AXLE

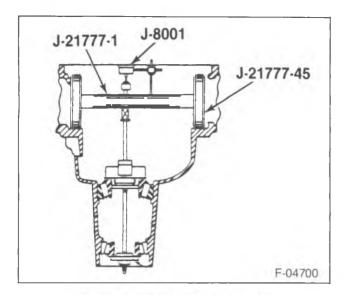


Figure 12—Pinion Gaging Tools

- Rotate the gage shaft slowly back and forth until the dial indicator reads the greatest deflection (when the indicator needle is centered between movement to the left and to the right).
- 14. At the point of greatest deflection, set the dial indicator to zero. Repeat the rocking action of the gage shaft to verify the zero setting.
- 15. Rotate the gage shaft until the dial indicator rod does not touch the gage block.
- 16. Record the actual number on the dial indicator and not the number which represents how far the needle travels. This is the nominal pinion setting.

Example: If the indicator needle moved to the left 1.70 mm (0.067-inch) to a dial reading of 0.84 mm (0.033-inch) as shown in figure 13, record the dial reading of 0.84 mm (0.033-inch) not 1.70 mm (0.067-inch).

- 17. Check the pinion face for a pinion adjustment mark. This mark indicates the best running position for the pinion from the nominal setting.
 - If the pinion is stamped with a plus number, add that many thousandths to the nominal setting. If the nominal setting is 0.033-inch and the pinion is marked +2, the correct shim depth would be 0.033-inch + 0.002-inch = 0.035-inch.
 - If the pinion is stamped with a minus number, subtract that many thousandths from the nominal setting. If the nominal setting is 0.033-inch and the pinion is marked -2, the correct shim depth would be 0.033-inch -0.002-inch = 0.031-inch.
 - If the pinion has no plus or minus marked on the pinion, use the nominal pinion setting to select a shim.
- 18. Remove bearing caps and depth gaging tools.
- 19. Install the correct pinion shim to the pinion according to this procedure.

8¹/₂-INCH RING GEAR 4C1-7

PINION INSTALLATION

Install or Connect

- Tools Required:
 - J 8609-01 Rear Pinion Bearing Cone Installer
 - J 22388 Pinion Oil Seal Installer
 - J 8614-01 Pinion Flange Remover
 - J 5590 Rear Pinion Bearing Cone Installer
- The bearing cups should have been installed in "Pinion Depth Adjustment" in this section.
- 1. The pinion inner bearing (5) using J 8609-01.
 - Press the bearing onto the pinion until the bearing cone seats on the pinion shims.
- 2. A new collapsable spacer (4).
- Lubricate the pinion bearings with axle lubricant.
- 3. Pinion (7) to the axle housing.
- 4. Outer pinion bearing (39) onto the pinion using J 5590.
 - Hold the pinion forward from inside the case while driving the bearing onto the pinion.
- 5. Pinion oil seal (38) using J 22388 (figure 14).
- 6. The pinion flange (37) to the pinion by tapping it with a rawhide hammer until a few threads show through the pinion flange.
- 7. The pinion washer (36) and a new nut (35) while holding the pinion flange with J 8614-01 (figure 15).

된 Tighten

- The nut until the pinion end-play is just taken up. Rotate the pinion while tightening the nut to seat the bearings. Once there is no end-play in the pinion, the preload torque should be checked.
- Remove J 8614-01. Using an inch-pound torque wrench, check the pinion preload by rotating the pinion with the wrench. Preload should be 2.2 to 2.8 N m (20 to 25 in. lbs.) on new bearings, or 1.1 to 1.6 N m (10 to 15 in. lbs.) for used bearings (figure 16).
- If the preload torque is below the preloads given above, continue torquing the nut in small increments. Check the preload after each tightening. Each tightening increases the bearing preload by several pounds. If the bearing preload is exceeded, the pinion will have to be removed, and a new collapsible spacer installed.
- Once the preload has been obtained, rotate the pinion several times to make sure that the bearings have seated. Recheck the preload, and adjust if necessary.
- 8. Differential case. Refer to "Backlash Adjustment" in this section.

DIFFERENTIAL CASE ASSEMBLY

++ In

Install or Connect (Figure 1)

Tools Required: J 8107-4 Differential Side Bearing Remover Plug J 8092 Driver Handle

4C1-8 8¹/₂-INCH RING GEAR

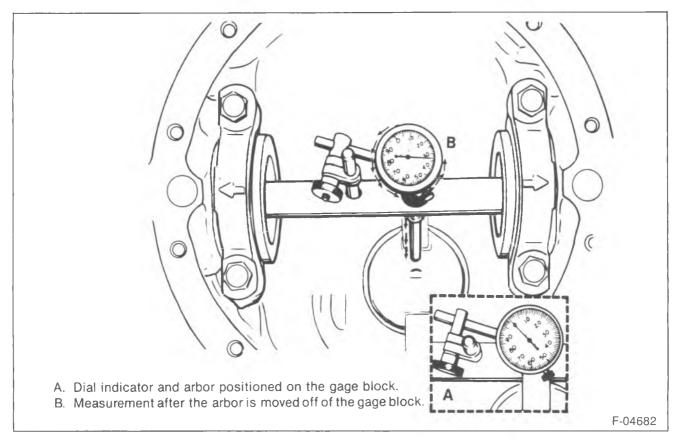


Figure 13—Checking Pinion Depth

J 22761 Differential Side Bearing Installer

- Lubricate all parts with rear axle lubricant.
- 1. Axle seals.
- 2. Side gear thrust washers (19) to the side gears (22).
- 3. Side gears (22) to the differential case (24).
 - Place the side gears in place on the same side as removed.
- 4. Pinion gears (21) to the differential without the thrust washers (20).
 - Place the pinion gears onto the side gears so that the holes in the pinion gears are 180 degrees apart.
 - Rotate the pinion gears into place, and verify that the pinion gears line up with the pinion shaft holes.
- 5. Pinion thrust washers (20).

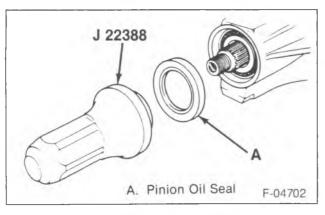


Figure 14—Installing the Pinion Oil Seal

- Rotate the pinion gears toward the differential opening just enough to slide in the pinion thrust washers.
- Check that the mating surfaces of the differential case and the ring gear are clean and burr free.
- 6. Ring gear (7) to the differential case (24).
 - Thread two left-hand threaded studs into the ring gear on cpposite sides (figure 17).
 - Place the ring gear onto the case, and align the holes in the case with the studs.

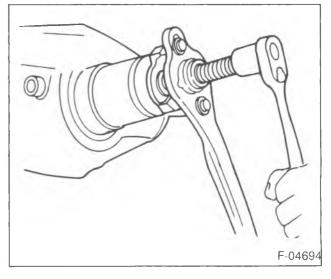


Figure 15—Installing the Pinion Flange

8¹/₂-INCH RING GEAR 4C1-9

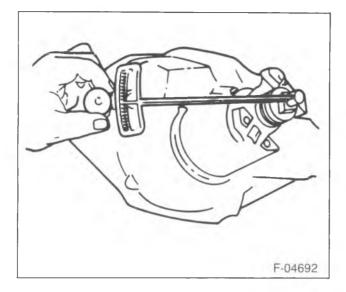


Figure 16—Checking Pinion Bearing Preload

- Press the ring gear onto the case far enough to start the bolts using J 8107-4 to protect the differential from the press ram (figure 18).
- 7. New ring gear bolts (23).
 - Tighten the ring gear bolts alternately in stages gradually pulling the ring gear onto the differential case.

री Tighten

- The ring gear bolts in sequence to 80 N·m (60 ft. lbs.).
- 8. Differential side bearings (8) using J 22761, J 8107-4 and J 8092 (figure 19).
 - Place J 8107-4 into the differential on the side opposite of the bearing installation to protect the differential case.
 - Drive the bearing onto the case using J 22761 and J 8092.
- 9. Differential case (24) to the axle housing. Refer to "Side Bearing Preload Adjustment" in this section.

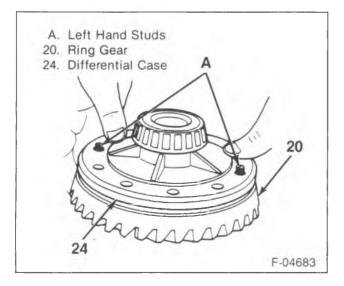


Figure 17—Ring Gear Studs

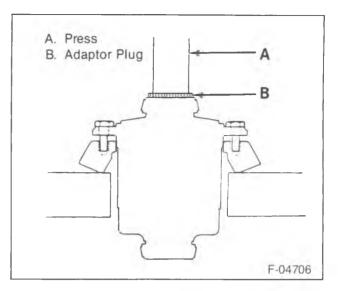


Figure 18—Installing the Ring Gear

SIDE BEARING PRELOAD ADJUSTMENT

Tool Required:

- J 22779 Side Bearing Backlash Gage
- The differential side bearing preload is adjusted by changing the thickness of both the left and right shims equally. This will maintain the original backlash.
- Production shims are cast iron and are not to be reused.
- Service spacers are available from 4.32 to 4.37 mm (0.170 to 0.172-inch) thick.
- Service shims are available in kits from 0.040 to 0.070-inch.
- Be sure that the side bearing surfaces are clean and free of burrs.
- 1. Place the differential case and the bearing cups into the axle housing.
 - Lubricate the axle bearings with axle lubricant.

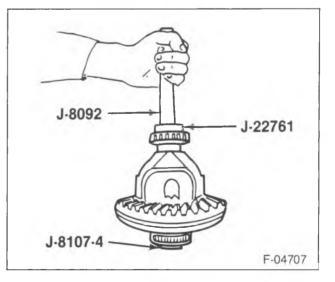


Figure 19—Differential Bearing Installation

4C1-10 8¹/₂-INCH RING GEAR

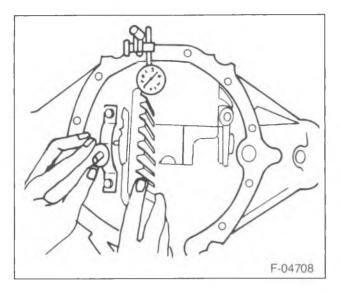


Figure 20—Installing Side Bearing Gaging Tools

- Support the case to keep it from falling into the axle housing.
- 2. Install the strap from J 22779 on the left bearing with the cap bolts. Tighten the bolts snuggly.
- 3. Push the ring gear towards the pinion.
 - Engage the ring gear with the pinion tightly to obtain a backlash of .000 mm to 0.0254 mm (0.000 to 0.001-inch).
- 4. Insert J 22779 between the axle housing and the left bearing cup (figure 20).
- 5. Move the tool back and forth in the bore while turning the adjusting nut to the right until a noticable drag is produced (figure 21).
 - Tighten the lock bolts on the side of the tool.
 - Leave the tool in place.
- Install a service spacer (9) and a service shim (9) between the right bearing cup and the axle housing.
- Determine bearing preload by inserting progresively larger feeler gage sizes between the carrier and the service shim.

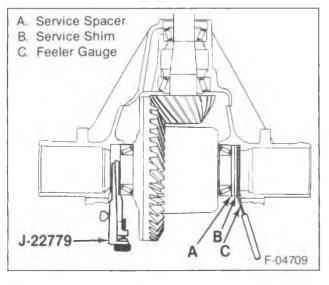


Figure 21—Measuring Side Bearing Shim Requirements

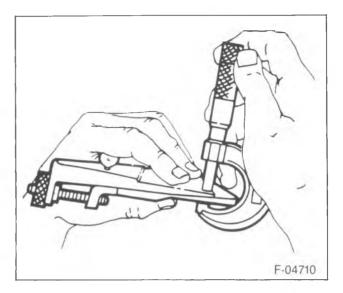


Figure 22—Measuring the Gage Plate Thickness

- Push the feeler gage downward so that it contacts the shim at the top and bottom, and then contacts the axle housing.
- The point just before additional drag begins is the correct feeler gage thickness. This is the zero setting without preload.
- 8. Remove the strap, J 22779, the service spacer, service shim, feeler gage, and differential case from the axle housing.
- 9. Measure J 22779 in three places using a micrometer. Average the readings (figure 22).
- 10. Add the dimensions of the service spacer, service shim, and the feeler gage.
- 11. For an initial backlash setting, move the ring gear away from the pinion by subtracting 0.010-inch from the ring gear side shim pack and adding 0.010-inch to the shim pack on the opposite side.
- 12. To obtain the proper preload on the side bearings add 0.10 mm (0.004-inch) to the measurement of each shim pack.
- 13. Install the differential. Refer to "Backlash Adjustment" in this section.

BACKLASH ADJUSTMENT

- 1. Install the differential case, bearing cups, spacers, and shims as determined from the "Side Bearing Preload Adjustment" earlier in this section (figure 23).
 - Tap the final shim into position, using a soft faced hammer.
- 2. Rotate the case several times to seat the bearings.
- 3. Install a dial indicator to the case using a magnetic base.
- 4. Place the indicator stem at the heel end of a tooth.
 - Set the dial indicator so that the stem is in line with the gear rotation and at a right angle to the tooth angle (figure 24).
- 5. Install the differential caps (10) and bolts (18).

8¹/2-INCH RING GEAR 4C1-11

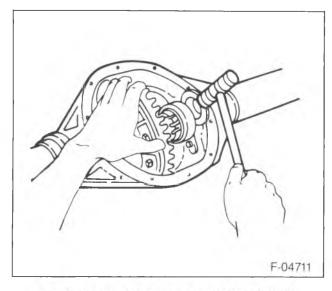


Figure 23—Installing the Final Preload Shim

Tighten

- The bolts to 80 N⁺m (60 ft. lbs.)
- 6. Check and record the backlash at three or four points around the ring gear.
 - The pinion must be held stationary when checking backlash.
 - The backlash should be the same at each point within 0.05 mm (0.002-inch). If the backlash varies more than 0.05 mm (0.002-inch), check for burrs, a distorted case flange, uneven bolting conditions, or foreign matter between the case and the ring gear.
- 7. The backlash at the minimum lash point measured should be between 0.13 and 0.23 mm (0.005 and 0.009) for all new gear sets, 0.08 and 0.28 mm (0.003 and 0.011-inch) for used gear sets.
- 8. If the backlash is not within specifications, move the ring gear in or out from the pinion by increasing the thickness of one shim, and decreasing the

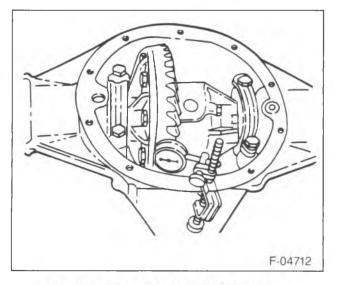


Figure 24—Checking Ring Gear Backlash

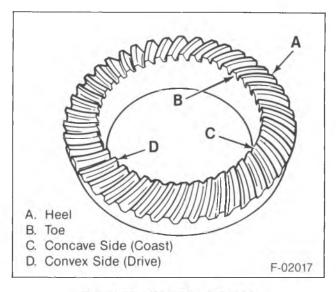


Figure 25-Gear Tooth Terms

thickness of the other shim by the same amount. This will maintain the correct front axle side bearing preload.

- Moving 0.003-inch worth of shims from one side of the differential to the other will change the backlash adjustment by approximately 0.002-inch.
- 9. Recheck the backlash and correct as necessary.

GEAR TOOTH CONTACT PATTERN CHECK

Before final assembly of the differential, a gear tooth contact pattern check should be performed.

It should be noted that a gear tooth contact pattern check is NOT a substitute for adjusting pinion depth and backlash as previously outlined. It is a final check to veryify the correct running position of the ring gear and the drive pinion. Gear sets which are not positioned properly may be noisy, or have a short life, or both. With a pattern check, the best contact between the ring gear and the drive pinion for low noise level and long life can be assured.

GEAR TOOTH TERMS

The side of the ring gear tooth which curves outward, or is convex, is referred to as the "drive" side. The concave side is the "coast" side. The end of the tooth nearest center of ring gear is referred to as the "toe" end. The end of the tooth farthest away from the center is the "heel" end. The toe end of tooth is smaller than the heel end, (figure 25).

TEST

- 1. Wipe oil out of carrier and carefully clean each tooth of the ring gear.
- Use gear marking compound and apply this mixture sparingly to all ring gear teeth using a medium stiff brush. When properly used, the area of pinion tooth contact will be visible when hand load is applied.
- 3. Tighten the bearing cap bolts to specifications.

4C1-12 8¹/₂-INCH RING GEAR

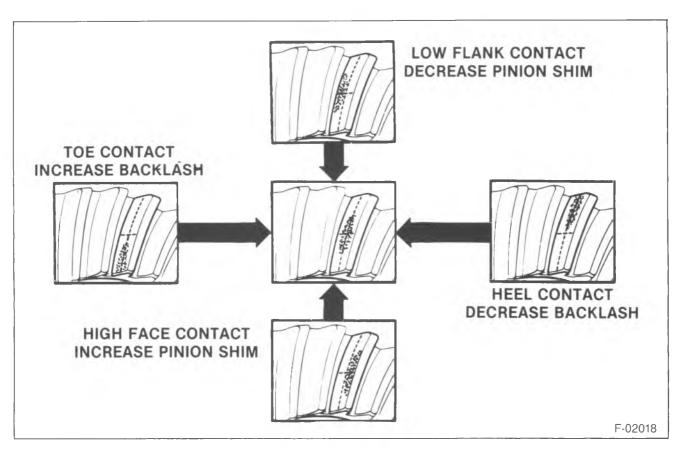


Figure 26—Gear Tooth Contact Pattern

4. Apply a load until a torque of 54-70 N m (40-50 ft. lbs.) is required to turn the pinion.

A test made without loading the gears will not give a satisfactory pattern. Turn the companion flange with a wrench so that the ring gear rotates one full revolution then reverse the rotation so that the ring gear rotates one revolution in the opposite direction. Excessive turning of the ring gear is not recommended

5. Observe the pattern on the ring gear teeth and compare with figure 26.

ADJUSTMENTS AFFECTING TOOTH CONTACT

Two adjustments can be made which will affect the tooth contact pattern. These are backlash and the position of the drive pinion (pinion depth) in the carrier. The effects of bearing preloads are not easily seen on hand loaded teeth pattern tests: however, these adjustments should be within specifications before proceeding with the backlash and the drive pinion adjustments.

It may be necessary to adjust both pinion depth and the backlash to obtain the correct pattern.

The position of the drive pinion is adjusted by increasing or decreasing the shim thickness between the pinion head and the inner race of the rear bearing. The shim is used in the differential to compensate for manufacturing tolerances. Increasing the shim thickness will move the pinion closer to the centerline of the ring gear. Decreasing the shim thickness will move the pinion farther away from the centerline of the ring gear.

Backlash is adjusted by means of the side bearing adjusting shims which moves the entire case and ring gear assembly closer to, or farther from the drive pinion. (The adjusting shims are also used to set side bearing preload). To incraese backlash, increase the right shim and decrease the left shim an equal amount. To decrease backlash decrease the right shim and increase the left shim an equal amount.

It is important that the contact pattern be centrally located up and down on the face of the ring gear teeth.

FINAL ASSEMBLY

→+ Install or Connect (Figure 1)

- 1. Drive axles. Refer to the proper Light Duty Truck Service Manual.
- 2. New cover gasket and the cover (12).



Cover bolts (14) to 27 N m (20 ft. lbs.).

SPECIFICATIONS 81/2 INCH RING GEAR FRONT AXLE

TORQUE SPECIFICATIONS

Fastener	N·m	Ft. Lbs.
Ring Gear Bolts	80	60
Bearing Cap Bolts	80	60
Axle Cover Bolts	27	20


AVAILABLE SHIM AND SPACER SIZES

Differential Side Bearing Spacer	.0.170-inch-0.172-inch
Differential Side Bearing Kits.	0.064 - 0.070-inch
	0.040 - 0.044-inch
	0.046 - 0.050-inch
	0.052 - 0.056-inch
	0.058 - 0.063-inch
	0.072 - 0.078-inch
	0.080 - 0.086-inch
	0.088 - 0.094-inch
	0.096 - 0.100-inch
Pinion Bearing Shim Kits.	0.020 - 0.0 2 4-inch
	0.025 - 0.029-inch
	0.030 - 0.034-inch
	0.035 - 0.039-inch

PINION PRELOAD AND BACKLASH

Pinion Preload (New Bearings).	
(Used Bearings)	
Backlash (New Gears)	
Backlash (Used Gears)	

4C1-14 81/2-INCH RING GEAR

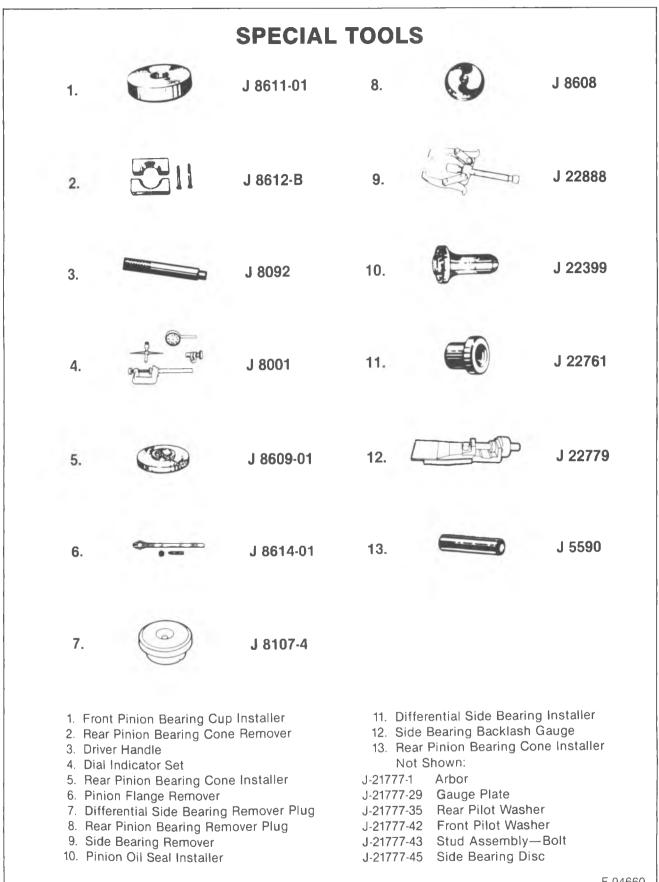

F-04660

PAGE

SECTION 4C2

9³/₄-INCH RING GEAR FRONT AXLE

CONTENTS

Determining Total Differential Shim Pack Size4C2- 9

DESCRIPTION

The Dana 9³/₄-inch ring gear front axle uses a conventional ring and pinion gear set to transmit the driving force of the engine to the front wheels. This gear set transfers this driving force at a 90 degree angle from the propeller shaft to the drive shafts.

SUBJECT

The pinion gear is supported by two tapered roller bearings. The pinion depth is set by a shim pack between the inner pinion bearing cup and the front axle housing. The pinion bearing preload is set by a shim pack at the front of the axle housing between the yoke and the pinion gear.

The ring gear is bolted onto the differential case with left-hand thread bolts.

The differential case is supported in the case by two tapered roller bearings. The differential and ring gear are located in relationship to the pinion by using selective shims between the bearings and the differential case. To move the ring gear, shims are deleted from one side and an equal amount are added to the other side. Differential side bearing preload is set by the axle housing. (The axle housing is spread to remove the differential from the housing.) When the spreader is removed, the housing sets the bearing preload.

Two bearing caps are used to hold the differential into the front axle housing.

The differential is used to allow the wheels to turn at different rates of speed while the front axle continues to transmit the driving force. This prevents tire scuffing when going around corners and prevents premature wear on internal axle parts.

The front axle is sealed with a pinion seal, an axle seal, and RTV sealer between the differential cover and front axle housing.

All Dana axles are identified by the part number located on the right axle tube next to the manufacturing date which is next to the carrier. The carrier cover does not have a drain plug. Oil is drained by removing the cover.

4C2-2 9³/₄-INCH RING GEAR FRONT AXLE

DISASSEMBLY OF AXLE

INSPECTION

Perform the following checks before disassembling the axle.

- 1. Remove the axle cover from the axle and drain the axle lubricant into a suitable container.
- Check the ring gear backlash. Refer to "Backlash Adjustment." This information can be used to determine the cause of the axle problem. It will also help when setting up the shim packs for locating and preloading the differential case.
- Inspect the case for metal chips. Determine where the metal chips come from, such as a broken gear or bearing cage.
- 4. Determine the cause of the axle problem before disassembly if possible.

DISASSEMBLY

Remove or Disconnect (Figure 1)

Tools Required:

- J 24385-01 Differential Housing Spreader
- J 29721 Differential Side Bearing Remover
- J 29721-70 Side Bearing Adapters
- J 8107-3 Side Bearing Puller Plug
- J 8614-10 Pinion Flange Holder
- Place the axle in a suitable support.
- 1. The differential cover bolts (17) and the differential cover (14) (figure 2).
- · Drain the gear lubricant into a proper container.
- 2. Axle shafts (38). Refer to the proper Light Duty Truck Service Manual.
- 3. Bearing cap bolts (19) (figure 3).
- 4. Bearing caps (18).
 - The mating letters are stamped on the caps and the axle housing. The caps are to be reassembled exactly as removed.
- Assemble J 24385-01 to the differential housing as shown in figure 4.
- Assemble the dial indicator as shown in figure 4. Preset the gage at least 0.50 mm (0.020-inch), and then rotate the gage housing to zero the dial.

NOTICE: Do not spread the differential carrier more than 0.38 mm (0.015-inch). Over-spreading the carrier can damage or distort the carrier.

- Spread the carrier while examining the dial indicator. Do not spread the carrier more than 0.38 mm (0.015-inch).
- 5. Differential case (22) from the carrier (1) using two pry bars (figure 5).
- 6. The spreader J 24385-01 from the carrier (1).
- 7. Bearing cups (20).
 - Mark the cups as left and right, and place them with the proper bearing caps.
- 8. Differential side bearings (20) using J 29721, and J 29721-70 and J 8107-3 (figure 6).

- Mark the bearings as left and right, and place them with the proper bearing caps and cups.
- 9. Differential shims (21).Mark the shims as left or right.
- 10. Ring gear bolts (23), and discard.
- Place shop towels over the vise jaws. Put the differential case in the vise (figure 7).


NOTICE: Do not pry the ring gear from the case; this will damage the ring gear and the differential case.

- 11. Ring gear (2) from the differential case using a rawhide hammer.
 - Ring gear (2) from the vise.
- Put the differential case in the vise.
- 12. Lock pin (29) from two differential using a hammer and a punch (figure 8).
- Pinion shaft (28) using a hammer and a brass drift (figure 9).
- 14. Differential pinion gears (24) and thrust washers (26).
 - Rotate the side gears until the pinion gears are in the opening of the differential (figure 10).
- 15. Differential side gears (25) and thrust washers (27).
 Mark the gears and washers as left and right.
- Replace the carrier cover (14) using two bolts (17) to keep the pinion from falling to the floor.

Inspect

- Drive pinion bearing preload (figure 11).
- Pinion assembly for looseness by moving it back and forth. (Looseness indicates excessive bearing wear.)
- 16. Pinion nut (12) and washer (11) using J 8614-01 to hold the pinion (figure 12).
- 17. Pinion flange (10) using J 8614-01 (figure 13).
- 18. Pinion (2) from the carrier using a rawhide hammer to tap the pinion (figure 14).
- 19. Carrier cover (14) and the pinion (2).
- 20. Pinion preload shims (6).
 - Keep the shims together on the bench.
- 21. Pinion seal (9).
- 22. Pinion outer bearing (7) and oil slinger (8).
- 23. Bearing cups (3) and (7) from the axle housing using a hammer or a punch (figure 15).
 - Work the cups out of the housing evenly, moving the punch back and forth between one side of the cup and the other.
- 24. Pinion adjusting shims (4) and baffle (5).Keep the shims together on the bench.
- 25. Pinion inner bearing (3) using J 29721 and J 29721-70 (figure 16).
- 26. Axle shaft seals.

9³/₄-INCH RING GEAR FRONT AXLE 4C2-3

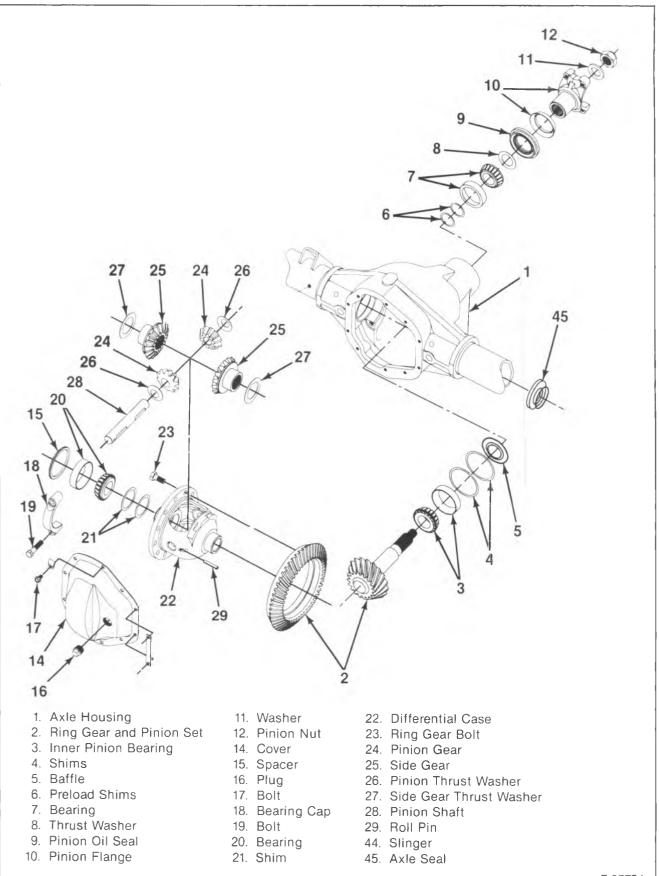



F-05784

4C2-4 9³/₄-INCH RING GEAR FRONT AXLE

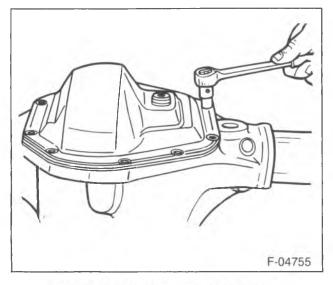


Figure 2—Removing the Axle Cover

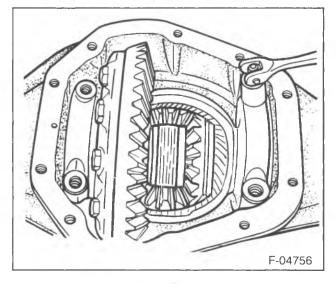


Figure 3—Removing the Bearing Cap

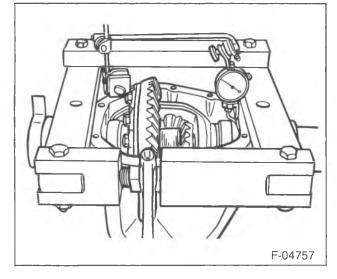


Figure 4—Spreading the Differential Case

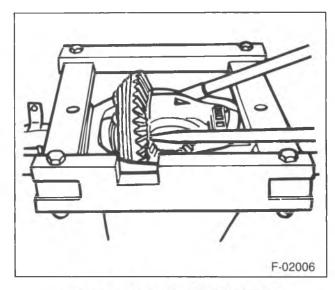


Figure 5—Removing the Differential

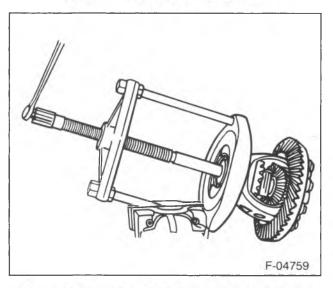


Figure 6—Removing the Differential Side Bearings

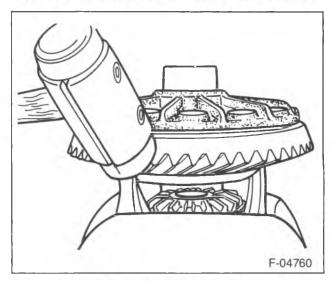


Figure 7—Removing the Ring Gear

9³/₄-INCH RING GEAR FRONT AXLE 4C2-5

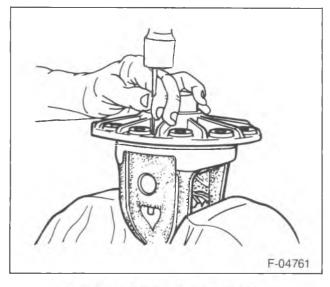


Figure 8-Removing the Lock Pin

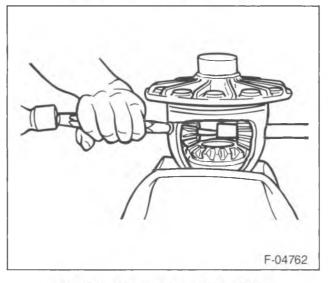


Figure 9-Removing the Pinion Shaft

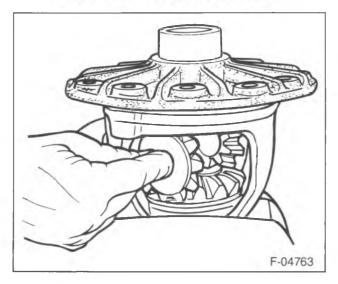


Figure 10—Removing the Pinion Gears

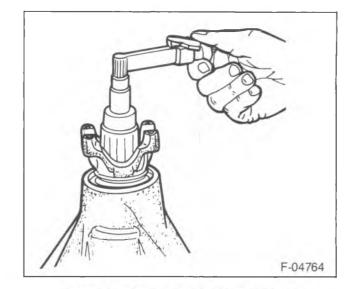


Figure 11—Checking the Pinion Preload

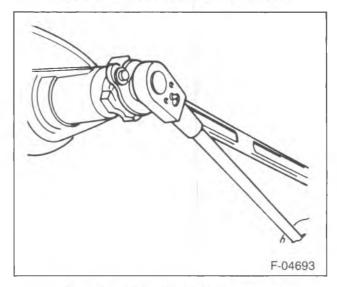


Figure 12-Drive Pinion Nut Removal

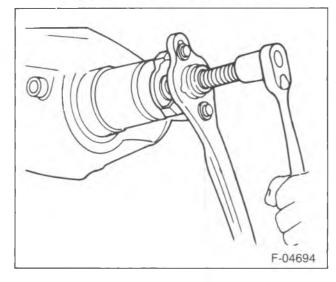


Figure 13—Pinion Flange Removal

4C2-6 9³/₄-INCH RING GEAR FRONT AXLE

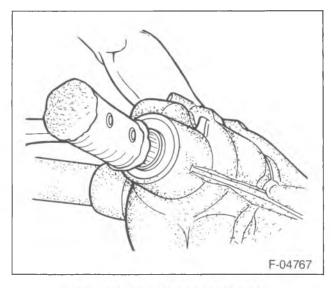


Figure 14-Removing the Pinion

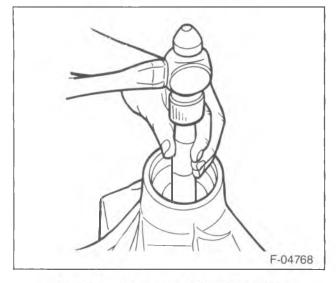


Figure 15—Removing the Bearing Cups

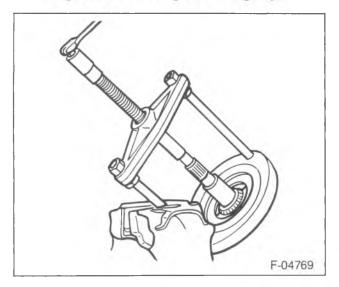


Figure 16—Removing the Pinion Inner Bearing

93/4-INCH RING GEAR FRONT AXLE 4C2-7

CLEANING AND INSPECTION

CLEANING

Do not steam clean drive parts having ground and polished surfaces such as gears, bearings, and shafts. These parts should be cleaned in a suitable solvent. All parts should be disassembled before cleaning.

Parts should be thoroughly dried immediately after cleaning. Use soft, clean, lintless rags. Parts may be dried with compressed air. Do not allow the bearings to spin while drying them with compressed air.

It is very important to carefully and thoroughly inspect all drive unit parts before reassembly. Thorough inspection of the drive parts for wear or stress and subsequent replacement of worn parts will eliminate costly drive component repair after reassembly.

INSPECTION

AXLE HOUSING



- The carrier bore for nicks or burrs that would prevent the outer diameter of the pinion seal from sealing. Remove any burrs that are found.
- The bearing cup surfaces for nicks or burrs. Remove any burrs that are found.
- The housing for cracks. Replace the housing if any cracks are found.
- The housing for foreign material such as metal chips, dirt, or rust. Clean as necessary, as outlined previously.

DIFFERENTIAL

Inspect

- Pinion gear shaft for unusual wear.
- Pinion gear and side gear teeth for wear, cracks, scorring, and spalling.
- Thrust washers for wear.
- The fit of the differential side gears in the differential case.
- The fit of the side gears on the axle shafts.
- Differential case for cracks and scorring.
- Replace all worn parts.

PINION AND RING GEAR

Inspect

- Pinion and ring gear teeth for cracking, chipping, scoring, or excessive wear.
- Pinion splines for wear.
- Pinion flange splines for wear.
- The fit of the pinion on the pinion flange.
- The sealing surface of the pinion flange for nicks, burrs, or rough tool marks which would cause damage to the seals' inside diameter and result in an oil leak.
- Replace all worn or broken parts.
- Ring and pinion gears are matched sets and are both replaced any time a replacement of either is necessary.

BEARINGS

Inspect

- Bearings visually and by feel. The bearings should feel smooth when oiled and rotated while applying as much hand pressure as possible.
- The large end of the bearing rollers for wear. This is where tapered roller bearing wear is most evident.
- Bearing cups for wear, cracks, brinelling and scorring.
- If the rear axle was operated for an extended period of time with very loose bearings, the ring gear and drive pinion will also require replacement.
- Low mileage bearings may have minute scratches and pits on the rollers and the bearing cups from the initial preload. Do not replace a bearing for this reason.
- Bearing caps for cracks or chips.
- Bearings and cups are only replaced as sets.

SHIMS

Inspect

 Shims for cracks and chips. Worn or damaged shims should be replaced with an equally sized servise shim.

4C2-8 93/4-INCH RING GEAR FRONT AXLE

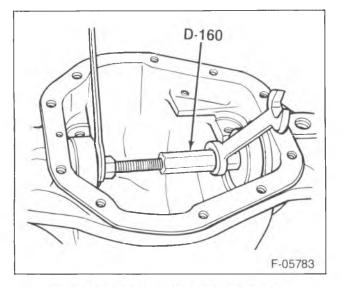


Figure 17—Installing the Axle Shaft Seals

? Important

->←

 Lubricate all seal lips, bearings, gears, and bearing surfaces with axle lubricant prior to assembly.

DIFFERENTIAL CASE ASSEMBLY

Install or Connect (Figure 1)

Tool Required:

- D-160, Axle Shaft Seal Installer (Miller)
- Lubricate all parts with front axle lubricant.
- 1. Axle shaft seals, using D-160 (figure 17).
- New side gear thrust washer (27) to the side gears (25).
- 3. Side gears (25) to the differential case.
 - Place the side gears in place on the same side as removed (figure 18).

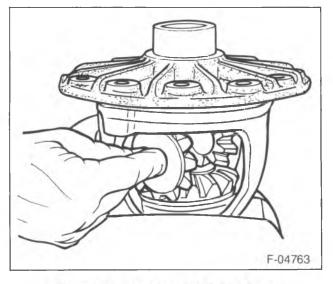


Figure 18—Installing the Pinion Gears

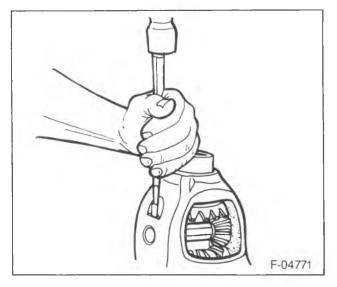


Figure 19-Installing the Lock Pin

- 4. Pinion gears (24) to the differential without the thrust washers (26).
 - Place the pinion gears onto the side gears so that the holes in the pinion gears are 180 degrees apart.
 - Rotate the pinion gears into place, and verify that the pinion gears line up with the pinion shaft holes.
- 5. New pinion thrust washers (26).
 - Rotate the pinion gears toward the differential opening just enough to slide in the pinion thrust washers.
- 6. Pinion shaft (28).
 - Align the lock pin holes in the case and the shaft.
- 7. Lock pin (29) (figure 19).
 - Peen metal from the case over the lock pin.
- Check that the mating surfaces of the differential case and the ring gear are clean and burr free.
- 8. Ring gear (2) to the differential case (22).
 - Thread two studs into the ring gear on opposite sides.
 - Press the ring gear onto the case, and align the holes in the case with the studs.
- 9. New ring gear bolts (23) (figure 20).

Important

- Always use new bolts at assembly.
- Always use the correct service bolts. Do not attempt to use a substitute bolt.
- Tighten the ring gear bolts alternately in stages gradually pulling the ring gear onto the differential case.

री Tighten

- The ring gear bolts in sequence to 142-156 N·m (105 - 115 ft. lbs.).
- 10. Master differential bearings D-117 to the differential (figure 21).

ASSEMBLY OF AXLE

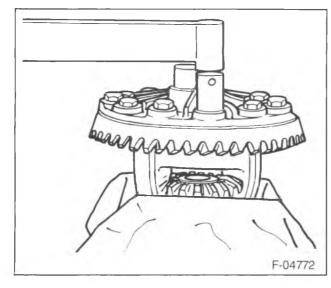


Figure 20—Installing the Ring Gear Bolts

• Refer to "Determining Total Shim Pack Size" in this section.

DETERMINING TOTAL DIFFERENTIAL SHIM PACK SIZE

- 1. Assemble the differential case (22) to the axle housing. The pinion must not be installed.
- Mount a dial indicator having a minimum travel of 5 mm (0.200-inch) with a magnetic base on the ring gear bolt side of the housing (figure 22).
- 3. Force the differential assembly as far as possible in the direction towards the indicator.
- 4. Preload the dial indicator one half of its travel. Place the tip of the indicator on a flat surface of the differential, just next to a ring gear bolt. Mark this location with a piece of chalk.
- 5. Zero the dial indicator.

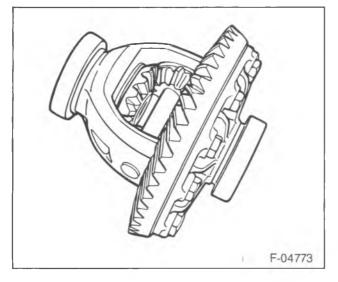


Figure 21—Differential with Master Bearings

9³/₄-INCH RING GEAR FRONT AXLE 4C2-9

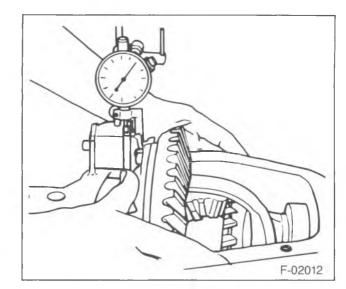


Figure 22—Determining Differential Shim Pack

- 6. Force the differential assembly in the opposite direction as far as it will go. Repeat this step until the same reading is obtained. Record the number of thousandths that the dial indicator traveled, not the reading on the dial. This will be the measurement of the shimpack without the bearing preload (which will be added later).
- 7. Remove the dial indicator from the axle.
- 8. Remove the differential case from the axle housing.
- Do not remove the master bearings from the differential.

PINION DEPTH ADJUSTMENT

Tools Required:

- D-120 Master Pinion Block (Miller)
- D-116-1 Pinon Height Block (Miller)
- D-116-2 Master Discs (Miller)
- D-115-3 Arbor (Miller)
- D-115 Scooter Gage (Miller)
- 1. Clean the carrier bores and all the tools. The pinion bore must be free of nicks and dirt.
- 2. Install D-120 to the pinion bore (figure 23).
- 3. Place D-116-2 onto D-115-3.
- 4. Install the arbor and discs into the axle housing (figure 24).
- 5. Install D-116-1 onto D-120 and against the arbor (figure 25).
- 6. Place D-115 onto the height block (figure 26).
 - Place the gage on the lower step of the height block. Push the gage down on the height block. While applying pressure, set the dial indicator at zero.
- 7. Slide the gage over the arbor (figure 27).
- 8. Record the reading at the point of greatest defelection (when the dial indicator needle is centered between movement to the left and to the right).

4C2-10 9³/₄-INCH RING GEAR FRONT AXLE

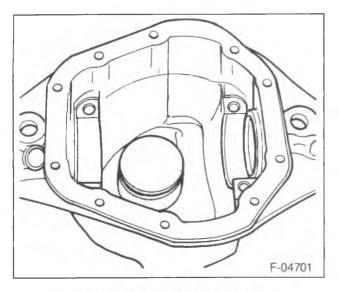


Figure 23—Master Pinion Block

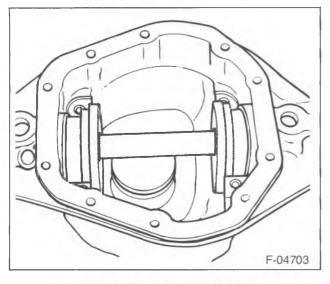


Figure 24—Arbor and Discs

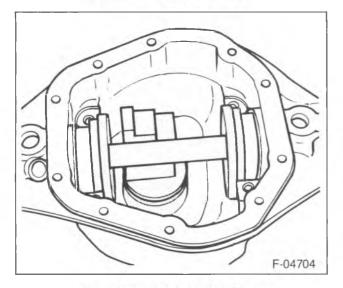


Figure 25—Pinion Height Block

F-04705

Figure 26—Scooter Gage on the Height Block

- This reading indicates the amount of shims needed for a nominal pinion setting. The pinion marking may change the pinion depth by adding or deleting shims from the nominal pinion setting.
- A positive (+) pinion marking indicates that the distance between the ring gear centerline and the pinion head must increase by the number of thousandths marked on the pinion. This means that the shim pack will decrease by the same number of thousandths.
- A negative (-) pinion marking indicates that the distance between the ring gear centerline and the pinion head must decrease by the number of thousandths marked on the pinion. This means that the shim pack will increase by the same number of thousandths.
- A pinion etched zero (0) will use the nominal setting as determined in this procedure.

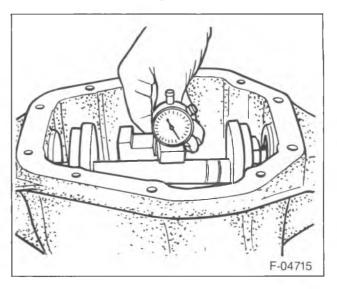


Figure 27—Scooter Gage on the Arbor

93/4-INCH RING GEAR FRONT AXLE 4C2-11

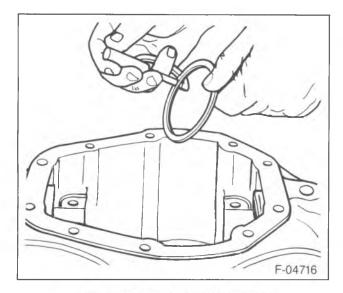


Figure 28—Measuring the Shims

9. Measure each shim separately with a micrometer and add them together to obtain the total shim pack thickness. If a baffle (5) or slinger is used, these must also be measured and included in the shim pack (figure 28).

PINION INSTALLATION

✦✦ Install or Connect

Tools Required:

- J 7818 Front Pinion Bearing Cup Installer J 5590 Rear Pinion Bearing Cone Installer D-111 Rear Cup Installer (Miller) C-4171 Handle (Miller) J 8092 Handle J 8614-01 Pinion Flange Remover D-116-1 Pinion Height Block (Miller) D-116-2 Master Disc (Miller) D-115-3 Master Disc (Miller) D-115 Scooter Gage (Miller) D-163 Seal Installer (Miller)
- used) in the inner bearing bore. 2. Drive the inner bearing cup into the axle assembly
- using D-111 and C-4171. The cup must be seated on the shims (figure 29).
- 3. Drive the outer bearing cup into the axle assembly using J 7818 and J 8092 (figure 30).
- Inner bearing cone (and slinger if used) on the pinion. Drive the bearing onto the pinion shaft using J 5590 (figure 31).
- 5. Pinion into the axle housing.
- 6. Outer pinion bearing (7) and thrust washer (8).
- Do not assemble the preload shims or pinion oil seal at this time.
- 7. Pinion flange (10).
- 8. Washer (11) and pinion nut (12).



• The nut (12) while holding the pinion with J 8614-01. Tighten the nut until it requires a

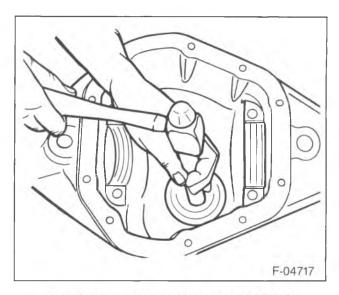


Figure 29—Installing the Pinion Inner Cup

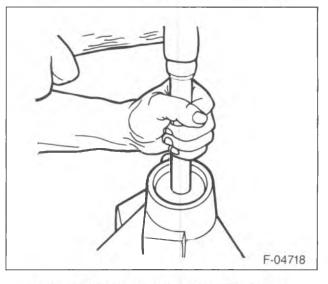


Figure 30—Installing the Pinion Front Cup

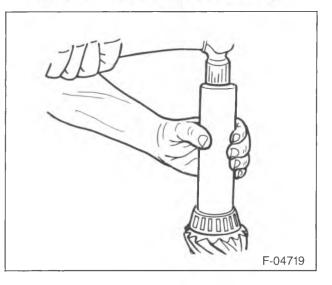


Figure 31—Installing the Inner Bearing

4C2-12 9³/₄-INCH RING GEAR FRONT AXLE

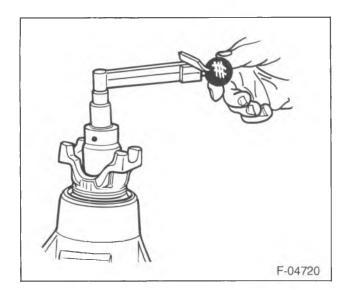


Figure 32—Checking the Pinion Preload

torque of 1.13 N·m (10 in. lbs.) to rotate the pinion (figure 32). Rotate the pinion several times to seat the bearings and assure a more accurate reading pinion depth setting.

- 9. The pinion depth checking tools D-116-1, D-116-2, D-115-3, and D-115 to the top of the pinion.
 - Place the discs and arbor into the differential bearing bore.
 - Place the pinion height block on top of the pinion.
 - Set the dial indicator at zero and slide the scooter gage across the arbor (figure 33).
 - The indicator will turn to the right or to the left at the point of greatest deflection, depending on the pinion marking.
 - The needle will move to the left if the pinion is marked (+).
 - The needle will move to the right if the pinion is marked (-).
 - If the indicator reading is within 0.05 mm (0.002-inch) of the pinion marking, the pinion is correctly set. If the pinion depth does not meet

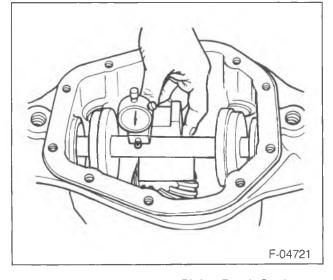


Figure 33—Checking the Pinion Depth Setting

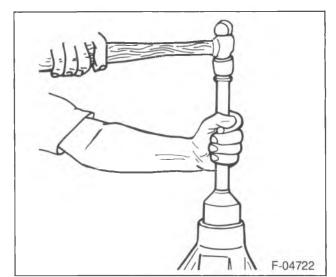


Figure 34—Installing the Pinion Seal

specifications, change the shim pack by the amount the indicator needle is from the pinion marking.

- Remove the pinion nut (12), washer (11), pinion flange (10), slinger (8) and bearing cone (7).
- 10. Preload shims (6).
 - Install the shims that were removed, or measure the old shims and replace them with new shims if necessary.
- 11. Outer bearing (7) and slinger (8).
- Apply a light coat of axle lubricant to the pinion seal lip.
- 12. Outer pinion oil seal (9) using D-163 (figure 34).
- 13. Pinion flange (10).
- 14. Washer (11) and a new pinion nut (12).

Tighten (Figure 35 and 36)

- The nut (12) while holding the pinion with J 8614-01. Tighten the nut until it requires a torque of 2.26 4.53 N m (20 40 in. lbs.) to rotate the pinion.
- · Remove shims to decrease the preload.

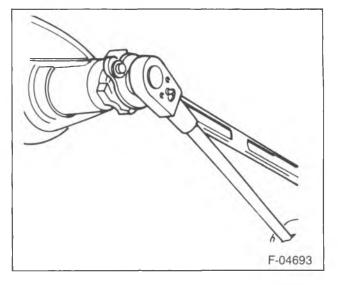


Figure 35—Tightening the Pinion Nut

93/4-INCH RING GEAR FRONT AXLE 4C2-13

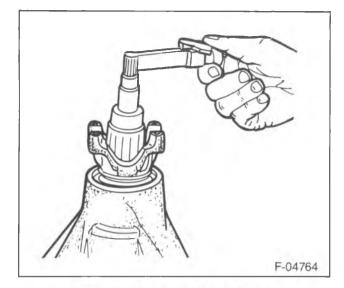


Figure 36—Checking Pinion Preload

· Add shims to increase the preload.

ASSEMBLING THE DIFFERENTIAL TO THE AXLE HOUSING

Tools Required:

- J 23690 Differential Side Bearing Installer
- J 8092 Driver Handle
- J 24385-01 Differential Carrier Spreader
- 1. Assemble the differential case (22) with master bearings installed to the axle housing. The pinion must be installed.
- Mount a dial indicator having a minimum travel of 5 mm (0.200-inch) with a magnetic base on the ring gear bolt side of the housing (figure 37).
- 3. Place the indicator tip on the chalk mark made earlier.
- Force the ring gear into mesh with the pinion. Rock the ring gear to allow the teeth of the gears to mesh.

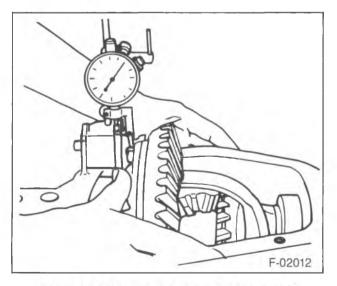


Figure 37—Measuring Differential Movement



Figure 38-Installing the Differential Bearings

- 5. With the force still applied to the differential case, set the dial indicator to zero.
- 6. Force the differential case away from the pinion gear to obtain an indicator reading. Repeat this action until a consistent reading is obtained. This will be the size of the left shim pack.
- 7. Remove the indicator and the differential case from the carrier.
- 8. Remove the master bearings from the differential case.
- 9. Using the total shim pack size determined earlier, (Refer to "Determining Total Differential Shim Pack Size" in this section) subtract the reading found in step 6 from the total reading. The reading found in step 6 will be the shim size on the ring gear side. The remaining portion of the shim pack will be used on the side opposite the ring gear. Add an additional 0.38 mm (0.015-inch) of shims to the side opposite the ring gear to preload the bearings.
- Place the proper shims on the differential side bearing hub (ring gear side) and drive the differential bearing onto the hub using J 23690 and J 8092 (figure 38).
- 11. Place the proper shims on the differential side bearing hub (opposite the ring gear) and drive the differential bearing onto the hub using J 23690 and J 8092 (figure 38).
- 12. Assemble J 24385-01 to the axle housing as shown in figure 39.
- Assemble the dial indicator as shown in figure 39. Preset the gage at least 5 mm (0.020-inch), and then rotate the indicator housing to zero the dial.

NOTICE: Do not spread the differential carrier more than 0.38 mm (0.015-inch). Over-spreading the carrier can damage or distort the carrier.

- 14. Spread the carrier while examining the dial indicator.
- 15. Remove the dial indicator.
- 16. Place the bearing cups (20) onto the bearings.
- 17. Install the differential assembly into the carrier.

4C2-14 9³/₄-INCH RING GEAR FRONT AXLE

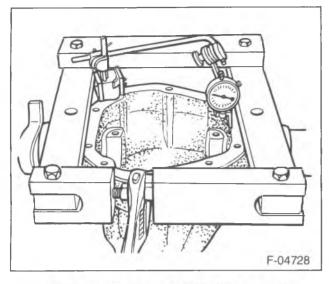


Figure 39—Mounting the Carrier Spreader

- Use a rawhide hammer to seat the differential assembly in the axle housing (figure 40).
- 18. Remove the spreader.
- 19. Install the bearing caps (18) in their original positions.
- 20. Install the bearing cap bolts (19).

된 Tighten

Bearing cap bolts (19) to 115 N m (85 ft. lbs.).

CHECKING BACKLASH

- 1. Mount a dial indicator with a magnetic base to the axle housing as shown in figure 41.
- 2. Place the indicator tip at the heel end of the tooth.
- 3. Check the backlash at three equally spaced points. The backlash should be 0.13 - 0.23 mm (0.005 - 0.009-inch). The measurement must not vary more than 0.05 mm (0.002-inch) between the points checked.

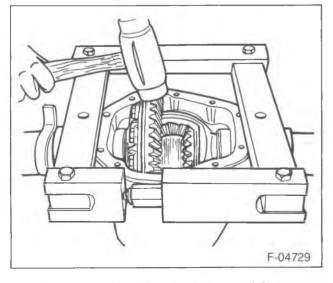


Figure 40—Installing the Differential Case

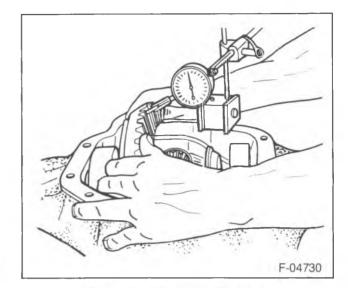


Figure 41—Measuring Backlash

- 4. High backlash is corrected by moving the ring gear closer to the pinion.
- 5. Low backlash is corrected by moving the ring gear away from the pinion.
- 6. To adjust the backlash, the differential case must be removed from the housing, then the differential bearings removed, and the proper number of shims moved from one side to the other.

FINAL ASSEMBLY

← Install or Connect (Figure 1)

- 1. Drive axles, as outlined in the proper Light Duty Truck Service Manual.
- 2. Axle cover (14) to the housing.
 - Make sure the sealing surfaces on the cover and housing are clean and free of grease and oil.
 - Apply a bead of RTV sealer (GM part no. 1052366 or equivalent) to the cover, inboard of the bolt holes. Install the cover while the sealer is still wet.
- 3. Cover bolts (17).

र्री Tighten

• Bolts to 47 N m (35 ft. lbs.).

9³/₄-INCH RING GEAR FRONT AXLE 4C2-15

SPECIFICATIONS

TORQUE SPECIFICATIONS

Fastener	N∙m	Ft. Lbs.
Ring Gear Bolts		110
Bearing Cap Bolts		85
Axle Cover Bolts		35


AVAILABLE SHIM SIZES

Differential Bearing Adjusting Shim	0.003-inch 0.005-inch 0.010-inch 0.030-inch
Outer Pinion Bearing Shim	0.005-inch 0.010-inch 0.030-inch
Inner Pinion Bearing Shim	.0.003-inch 0.005-inch 0.010-inch

PINION PRELOAD AND BACKLASH

Pinion Preload	2.26-4.53 N·m (20-40 in. lbs.)
Backlash	0.13-0.23 mm (0.005-0.009-in.)

4C2-16 9³/₄-INCH RING GEAR FRONT AXLE

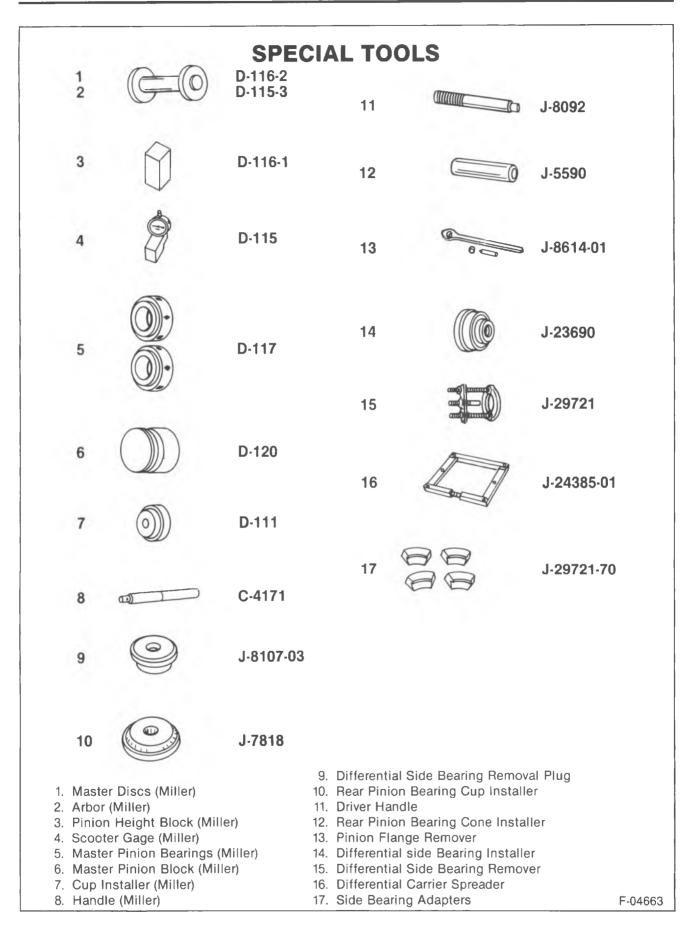

SECTION 4C3 T TRUCK FRONT AXLE

CONTENTS

SUBJECT

8 8 Differential Assembly Installation4C3- 9

DESCRIPTION

The axle used on T model vehicles has a center disconnect feature which allows shifting into and out of four wheel drive when the vehicle is in motion under most conditions.

The axle uses a conventional ring gear and pinion gear set to transmit the driving force of the engine to the wheels. This gear set transfers this driving force at a 90 degree angle from the propeller shaft to the drive shafts.

The pinion gear is supported by two tapered roller bearing. The pinion depth is set by a shim pack located between the gear end of the pinion and the roller bearing that is pressed onto the pinion. The pinion bearing preload is set by crushing a collapsible spacer between the pinion bearings in the axle housing. The ring gear is bolted onto the differential case with left-hand thread bolts.

The differential case is supported in the axle housing by two tapered roller bearings. The differnetial and ring gear are located in relationship to the pinion by using threaded adjusters.

The differential is used to allow the wheels to turn at different rates of speed while the front axle continues to transmit the driving force. This prevents tire scuffing when going around corners and prevents premature wear on internal axle parts.

The axle identification number is located on a tag attached to the right axle tube.

PAGE

4C3-2 T TRUCK FRONT AXLE

DISASSEMBLY OF AXLE

INSPECTION

Perform the following checks before disassembling the axle.

- 1. Remove the fill plug from the axle and drain the axle lubricant into a suitable container.
- Check the ring gear backlash. Refer to "Backlash Adjustment." This information can be used to determine the cause of the axle problem. It will also help when setting up the shim packs for locating and preloading the differential case.
- 3. Inspect the case and oil for metal chips. Determine where the metal chips come from, such as a broken gear or bearing cage.
- Determine the cause of the axle problem before disassembly if possible.

DISASSEMBLY

Disassemble (Figue 1 through 15)

Tools Required:

- J 8614-01 Pinion Flange Remover
- J 21551 Bearing Remover
- J 22912-01 Pinion Bearing Cone Remover
- J 29307 Slide Hammer
- J 33791 Bushing Remover
- J 33792 Side Bearing Adjuster Wrench
- J 33837 Pinion Bearing Cup Remover Kit
- J 34011 Output Shaft Pilot Bearing Remover
- 1. Bolts (6), shift cable housing (11), and spring (14).
- 2. Tube (5) and thrust washer (7).
- 3. Spring (16) and shift shaft and fork (17).
- 4. Shaft (1) with deflector (2).
- Clamp the axle tube (5) in a vise. Clamp ONLY on the mounting flange.
- Strike the inside of the shaft flange with a brass hammer to dislodge the shaft.
- 5. Carrier connector (9) with retaining ring (8).
- Right seal (3) and bearing (4), using J 29369-2 and J 29307 (figure 3).
- 7. Seal (15) from the tube (5). Pry out with a screwdriver.
- 8. Thrust washer (20).
- 9. Sleeve (22) and output shaft (23).
- 10. Differential pilot bearing (21) from the output shaft, using J 34011 (figure 4).
- 11. Washer (24).
- 12. Shaft (59), and deflector (2).
 - Pry with a screwdriver between the shaft flange and carrier head while striking the flange with a soft face hammer (figure 5).
- 13. Bolts (58) and cover (57).
- 14. Left seal (3).
- 15. Bolts (28).
- 16. Separate the carrier case (29).
 - Insert a screwdriver into the slots provided and pry to separate the case (figure 6).
- 17. Differential case (35).
- 18. Bolts (18) and lock tabs (19) from the side bearing adjuster sleeves (32) (figure 7).

- 19. Bearing cups (33) and sleeves (32) from the case.
 Turn the sleeves (32) using J 33792 until the cups are pushed out of the case (figure 8).
- 20. Bearings (30) from the sleeves (32). Use J 21551 (figure 9).
- 21. Pinion flange nut (46) and washer (45) using J 8614-01 (figure 10).
 - Mount the left carrier case half in J 33837-1 (figure 11).
- 22. Flange (44) and deflector (43) using J 33837-1 and J 33837-3 (figure 11).
- 23. Pinion (37), with spacer (40), pinion bearing (39) and shim (38).
- 24. Spacer (40) from the pinion.
- 25. Bearing (39) from the pinion. Use J 22912-01 and a press (figure 12).
- 26. Shim (38).
- 27. Bearing and cup (41) and seal (42), using J 33837-1, J 33837-3, and J 33837-6.
 - Insert J 33837-6 into the pinion bore.
 - Thread the forcing screw (J 33837-3) into J 33837-6.
 - Turn the forcing screw to pull the parts from the case.
- Inner bearing cup by pushing it out using J 33837-1, J 33837-3, and J 33837-6 (figure 13).
- 29. Bolt (36) and shaft (52) from the differential case (35).
- Differential pinion gears (56) and thrust washers (55).
- 31. Side gears (54) and thrust washers (53).
 - Mark the side gears and case so they can be installed in their original location.
- 32. Bolts (34).
- 33. Ring gear (37).
 - Do not pry between the ring gear and the case. Drive the gear off with a brass drift and hammer.
- 34. Side bearings (33), using J 22912-01 (31) (figure 14).
- 35. Bushings (48). Use J 33791 (figure 15).

T TRUCK FRONT AXLE 4C3-3

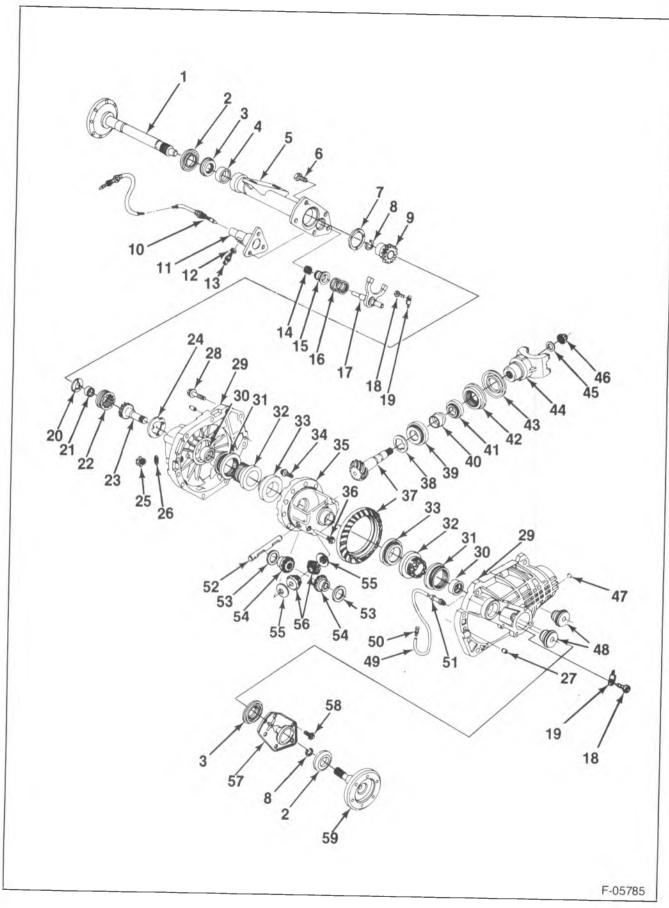
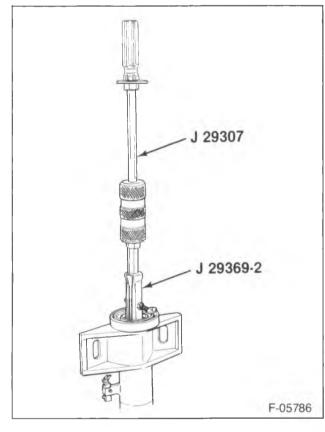



Figure 1—Axle Components

4C3-4 T TRUCK FRONT AXLE

1.	Shaft	16.	Spring	31.	Insert	46.	Nut
2.	Deflector	17.	Shift Shaft and Fork	32.	Sleeve	47.	Plug
3.	Seal	18.	Bolt	33.	Side Bearing	48.	Bushing
4.	Bearing	19.	Lock Tab	34.	Bolt	49.	Vent Hose
5.	Tube	20.	Thrust Washer	35.	Differential Case	50.	Vent
6.	Bolt	21.	Differential Pilot Bearing	36.	Bolt .	51.	Fitting
7.	Thrust Washer	22.	Sleeve	37.	Ring and Pinion Gears	52.	Shaft
8.	Retaining Ring	23.	Output Shaft	38.	Shim	53.	Thrust Washer
9.	Carrier Connector	24.	Washer	39.	Bearing	54.	Side Gear
10.	Shift Cable	25.	Plug	40.	Spacer	55.	Thrust Washer
11.	Shift Cable Housing	26.	Washer	41.	Bearing	56.	Differential Pinion
12.	Gasket	27.	Pin	42.	Seal		Gear
13.	Indicator Switch	28.	Bolt	43.	Deflector	57.	Cover
14.	Spring	29.	Carrier Case	44.	Flange	58.	Bolt
15.	Seal	30.	Bearing	45.	Washer	59.	Shaft F-01388

Figure 2—Axle Components



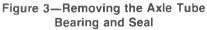

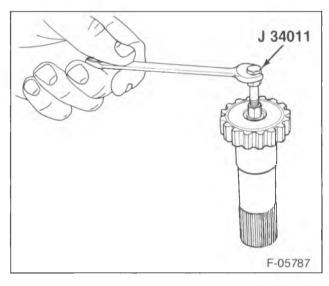


Figure 4—Removing the Output Shaft Pilot bearing

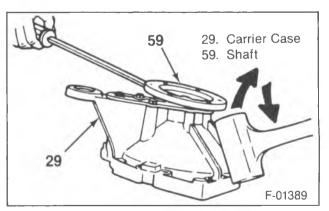


Figure 5-Removing the Axle Shaft

T TRUCK FRONT AXLE 4C3-5

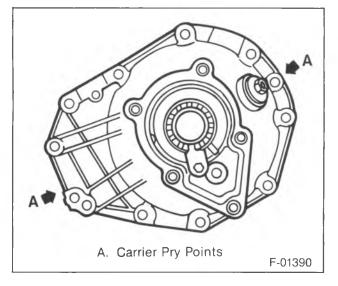


Figure 6—Separating the Carrier Case Halves

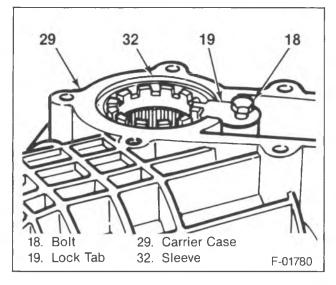


Figure 7—Removing the Lock Tabs

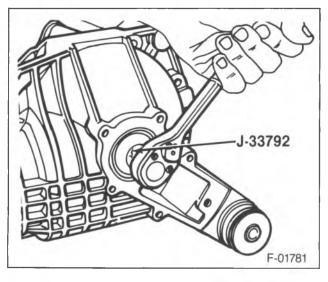


Figure 8—Removing the Side Bearing Cup

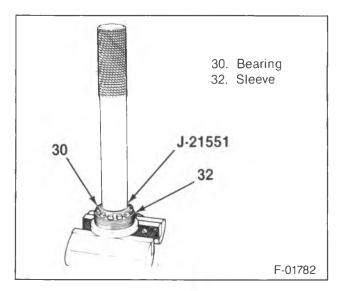


Figure 9—Remove the Sleeve Bearing

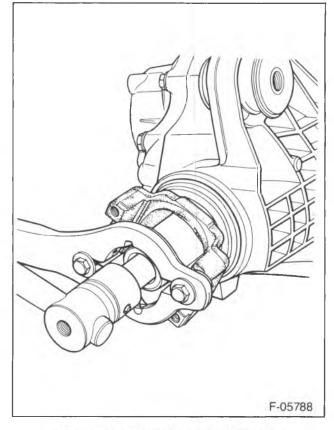


Figure 10-Removing the Pinion Nut

4C3-6 T TRUCK FRONT AXLE

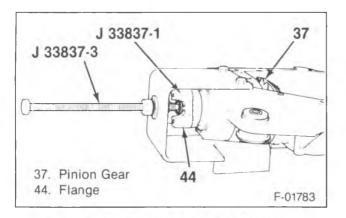


Figure 11-Remove the Pinion Flange

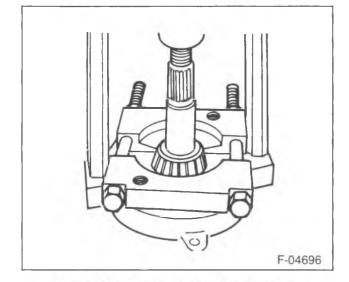


Figure 12-Removing the Pinion Bearing

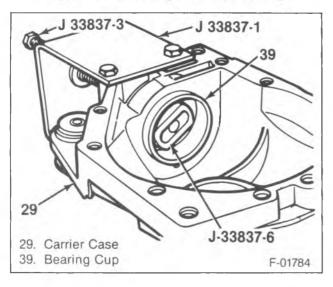


Figure 13—Removing the Inner Pinion Bearing Cup

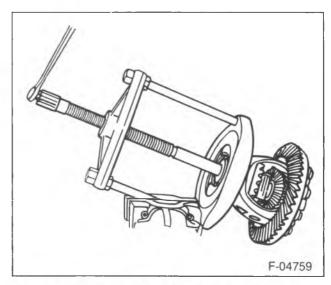


Figure 14-Removing the Differential Side Bearings

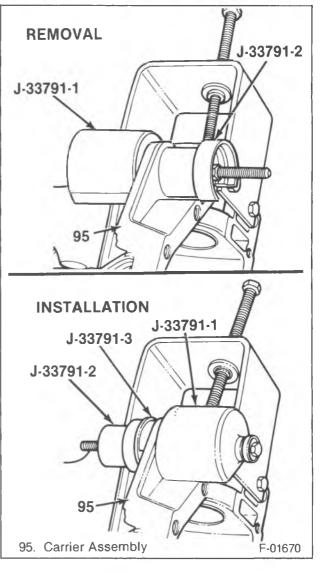


Figure 15—Replacing the Case Bushings

T TRUCK FRONT AXLE 4C3-7

CLEANING AND INSPECTION

CLEANING

Do not steam clean drive parts having ground and polished surfaces such as gears, bearings, and shafts. These parts should be cleaned in a suitable solvent. All parts should be disassembled before cleaning.

Parts should be thoroughly dried immediately after cleaning. Use soft, clean, lintless rags. Parts may be dried with compressed air. Do not allow the bearings to spin while drying them with compressed air.

INSPECTION

It is very important to carefully and thoroughly inspect all drive unit parts before assembly.

Thorough inspection of the drive parts for wear or stress and subsequent replacement of worn parts will eliminate costly drive component repair after reassembly.

AXLE HOUSING

Inspect

- Carrier bore for nicks or burrs that would prevent the outer diameter of the pinion seal from sealing. Remove any burrs that are found.
- Bearing cup surfaces for nicks or burrs. Remove any burrs that are found.
- Housing for cracks. Replace the housing if any cracks are found.
- Housing for foreign material such as metal chips, dirt, or rust. Refer to "Cleaning" in this section.

DIFFERENTIAL

Inspect

- · Pinion gear shaft for unusual wear.
- Pinion gear and side gear teeth for wear, cracks, scorring, spalling.
- Thrust washers for wear.
- The fit of the differential side gears in the differential case.
- Fit of the side gear on the axle shafts.
- Differential case for cracks and scorring.
- Replace all worn parts.

PINION AND RING GEAR

Inspect

- Pinion and ring gear teeth for cracking, chipping, scorring, or excessive wear.
- Pinion splines for wear.
- Pinion flanges splines for wear.
- Fit of the pinion on the pinion flange.
- Sealing surface of the pinion flange for nicks, burrs, or rough tool marks which would cause damage to the seals' inside diameter and result in an oil leak.
- Replace all worn or broken parts.
- Ring and pinion gears are matched sets and are both replaced any time a replacement of either is necessary.

BEARINGS

Inspect

- Bearings visually and by feel. The bearings should feel smooth when oiled and rotated while applying as much hand pressure as possible.
- The large end of the bearing rollers for wear. This is where tapered roller bearing wear is most evident.
- Bearing cups for wear, cracks, brinelling and scoring.
- · Bearings and cups are only replaced as sets.
- If the front axle was operated for an extended period of time with very loose bearings, the ring gear and drive pinion will also require replacement.
- Low mileage bearings may have minute scratches and pits on the rollers and the bearing cups from the initial preload. Do not replace a bearing for this reason.
- · Bearing caps for cracks or chips.

THRUST WASHERS, SHIMS AND ADJUSTER SLEEVES



- Shims and thrust washers for cracks and chips. Damaged shims should be replaced with an equally sized service shim.
- Adjuster sleeves for damaged threads. Replace if required.

SHIFT MECHANISM

Inspect (Figures 1 and 2)

- Carrier connector (9) for damaged splines and teeth. Replace as required.
- Shift fork (17) for wear, scoring, and damage to thrust surfaces. Replace if needed.
- Sleeve (22) and inner output shaft (23) for damaged splines and teeth. Replace if necessary.
- Spring (16) for breakage.

4C3-8 T TRUCK FRONT AXLE

ASSEMBLY OF AXLE

💡 Imp

Important

• Lubricant all the seal lips, bearings, gears, and bearing surfaces with axle lubricant prior to assembly.

DIFFERENTIAL CASE ASSEMBLY

▶ Install or Connect (Figures 1, 2 and 16)

Tool Required:

- J 33790 Side Bearing Installer
- 1. Thrust washers (53) and side gears (54) into the differential case (35).
 - If the same gears and washers are being used, install them on the same side as they were removed from.
- 2. Pinion gears (56).
 - Position one pinion gear (56) between the side gears and rotate the gears until the pinion gear is directly opposite the opening in the case.
 - Place the other pinion gear (56) between the side gears, making sure the hole in both pinion gears line up.
- 3. Thrust washers (55).
- Rotate the pinion gears toward the opening just enough to permit the sliding in of the thrust washers.
- 4. Shaft (52) and bolt (36).
- 5. Ring gear (37) onto the differential case (35).
- 6. Bolts (34).

9

Important

Always install new bolts. Never reuse the old bolts.

ର Tighten

- Bolts (34) alternating in progressive steps to 80 N⁺m (60 ft. lbs.).
- 7. Side bearings (33), using J 33790 (figure 16).

PINION BEARING CUP INSTALLATION

Install or Connect (Figures 1, 2, 17 and 18)

Tool Required:

J 33837 Pinion Bearing Remover and Installer

- 1. Bearing cup (41) into the case using J 33837-1, J 33837-3, and J 33837-4 (figure 17).
- 2. Bearing cup (39) into the case using J 33837-1, J 33837-3, and J 33837-4 (figure 18).

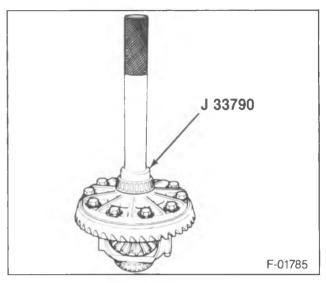


Figure 16—Installing the Differential Side Bearings

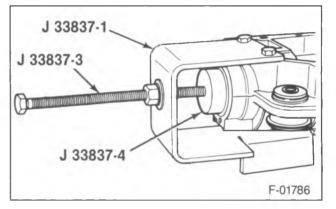


Figure 17—Installing the Outer Pinion Bearing Cup

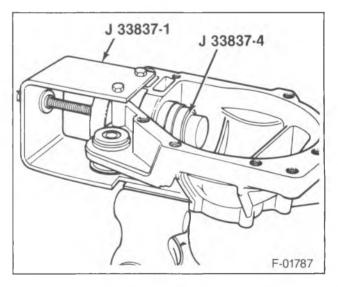


Figure 18—Installing the Inner Pinion Bearing Cup

T TRUCK FRONT AXLE 4C3-9

PINION DEPTH ADJUSTMENT

Tools Required:

- J 33838 Pinion Depth Setting Gage
- J 29763 Dial Indicator
- 1. Refer to figure 1.
- 2. Pinion depth is adjusted by selecting a shim (38) of the proper thickness.
- 3. Lubricate the inner and outer pinion bearings liberally with axle lubricant.
- 4. Hold the pinion bearings in position and install J 33838 and J 29763 (figure 19). Set the dial indicator at ZERO, then position it in J 33838. Push the dial indicator downward until the needle rotates approximately three turns to the right.
- 5. Tighten the dial indicator in this position.
- 6. Set the button of J 33838 on the differential bearing bore (figure 19).
- Rotate the tool slowly back and forth unit the dial indicator reads the lowest point of the bore. Set the dial indicator to ZERO. Repeat the rocking action of the tool to verify the ZERO setting.
- 8. After the ZERO setting is obtained and verified, move the tool button out of the differential side bearing bore (figure 19). Record the dial indicator reading.
- 9. The dial indicator reading is equal to the required shim size. Example: If the dial indicator reads 0.84 mm in step 8, a 0.84 mm shim is required. Available shim sizes are listed in "Specifications."
- 10. Remove the tools and bearing cones.

PINION INSTALLATION

Install or Connect (Figure 1, 2, 10, 20 and 21)

Tools Required:

- J 33785 Bearing Installer
- J 8614-01 Pinion Flange Remover
- J 33792 Seal Installer
- 1. Shim (38) to the pinion gear (37).
 - The shim must be of the proper size, as selected previously.
- 2. Bearing (39) onto the pinion gear (37) using J 33785 (figure 20).
- 3. New spacer (40) onto the pinion gear (37).
- 4. Bearing (41) into the case.
- 5. Seal (42) into the case using J 33782 (figure 21).
- 6. Pinion gear, with bearing and spacer, to the case.
- 7 Deflector (43), flange (44), washer (45) and nut (46).
 - Apply PST sealant (GM part number 1052080 or equivalent) to the pinion gear threads and on both sides of the washer.
 - Tighten nut (46) until no end play is detectable while holding the flange (44) with J 8614-01 (figue 10).
 - No further tightening should be attempted until bearing preload has been checked.

븪| Measure

 Pinion bearing preload. Use an inch pourd torque wrench (figure 22). The correct preload is 1.7-2.8 N·m (15-25 in. lbs.).

- 1. Rotate the pinion with the torque wrench and observe the reading.
- 2. If the preload torque is below specifications, continue torquing the pinion nut in small increments. Check the preload after each tightening. Each tightening increases the bearing preload by several inch pounds. If the bearing preload is exceeded, the pinion will have to be removed, and a new collapsible spacer installed.
- 3. Once the preload has been obtained rotate the pinion several times to make sure that the bearings have seated. Recheck the preload, and adjust if necessary.

DIFFERENTIAL ASSEMBLY INSTALLATION

++ Install or Connect (Figures 1, 2, 23, 24 and 25)

Tools Required:

- J 33788 Bearing Installer
- J 23423-A Bearing Cup Installer
- J 33792 Side Bearing Adjuster Wrench
- 1. Bearings (30) into the sleeves (32) using J 33788 (figure 23).
- 2. Sleeves (32) into the carrier case (29). Thread in all the way.
- 3. Side bearing cups (33) into the carrier case (29) using J 23423-A.
- 4. Differential assembly to the carrier case.
 - Place the differential case assembly (35) into the carrier case half which contains the pinion gear.
 - Turn the left sleeve (32) in toward the differential case using J 33792 until backlash is felt between the ring and pinion gear.
- 5. Carrier case halves (29). Do not use any sealer at this time.
 - If the carrier halves do not make complete contact, back out the right hand adjusting sleeve (32). Use J 33792 (figure 24).
- 6. Four bolts (28) (figure 25).

၃ Tighten

Bolts (28) to 50N N-m (37 ft. lbs.).

ADJUSTING BACKLASH

Tools Required:

- J 33792 Side Bearing Adjuster Wrench
- J 34047 Dial Indicator Adapter
- J 25025-1 Dial Indicator Stand
- J 8001-1 Dial Indicator Clamp
- 1. Refer to figures 1 and 2.
- Tiguten the right sleeve (32) to 140 N·m (100 ft. lbs.). Use J 33792 (figure 24).
- Tighten the left sleeve (32) to 140 N m (100 ft. lbs.). Use J 33792 (figure 24).
- Mark the location of the adjusting sleeves in relation to the carrier halves (figure 26), so the notches in the adjusting sleeves can be counted when turned.
- 5. Turn the right adjusting sleeve OUT two notches using J 33792.

4C3-10 T TRUCK FRONT AXLE

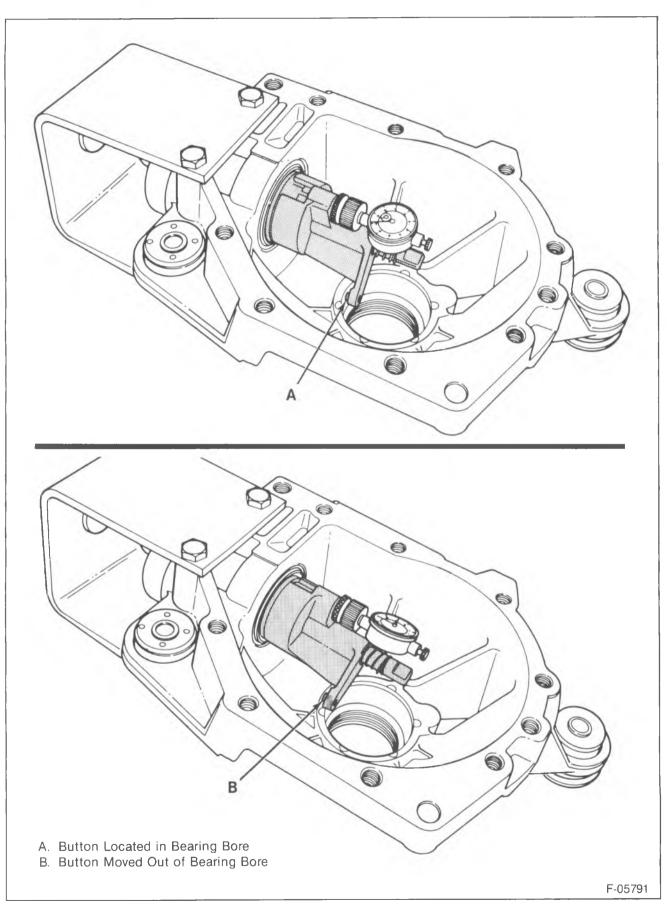


Figure 19—Measuring Pinion Depth

T TRUCK FRONT AXLE 4C3-11

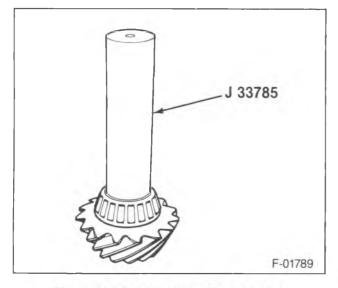


Figure 20-Installing the Pinion Bearing

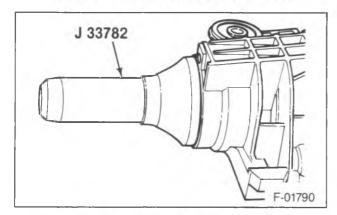


Figure 21-Installing the Pinion Seal

- 6. Turn the left adjusting sleeve IN one notch using J 33792.
- 7. Rotate the pinion several times to seat the bearings.
- 8. Install J 34047, J 25025-1 and J 8001-1 (figure 27).
- 9. Place the indicator stem at the heel end of a tooth.

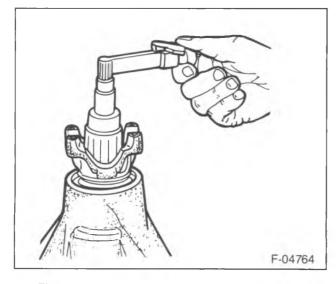


Figure 22—Measuring Pinion Bearing Preload

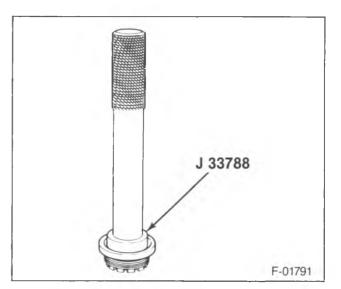


Figure 23—Installing the Sleeve Bearing

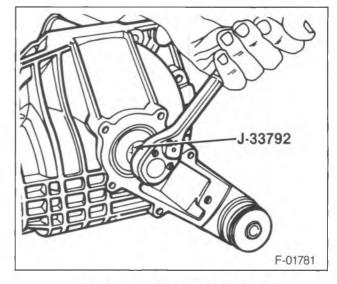


Figure 24—Adjusting the Sleeve

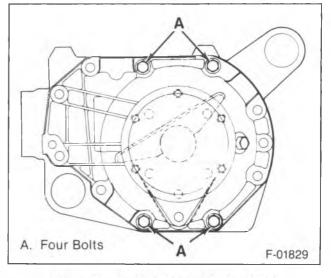


Figure 25—Carrier Case Bolts Installed

4C3-12 T TRUCK FRONT AXLE

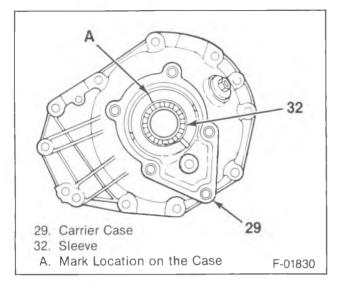


Figure 26—Marking Sleeve Location

- 10. Check and record the backlash at three or four points around the ring gear.
 - The pinion must be held stationary when checking backlash.
 - The backlash should be the same at each point within 0.05 mm (0.002-inch). If the backlash varies more than 0.05 mm (0.002-inch), check for burrs, a distorted case flange, uneven bolting conditions, or foreign matter between the case and the ring gear.
 - Gear backlash should be between 0.08-0.25 mm (0.003-0.010-inch) with a preferred specificaton of 0.13-0.18 mm (0.005-0.007-inch).
 - If the backlash is incorrect, adjust the sleeves as necessary. Always maintain the "one notch" preload on the side bearings. EXAMPLE: If it is necessary to turn the RIGHT sleeve IN one notch, the LEFT sleeve must be turned OUT one notch.

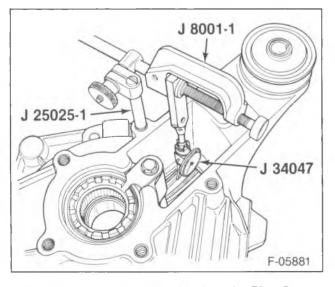


Figure 27—Measuring Backlash at the Ring Gear

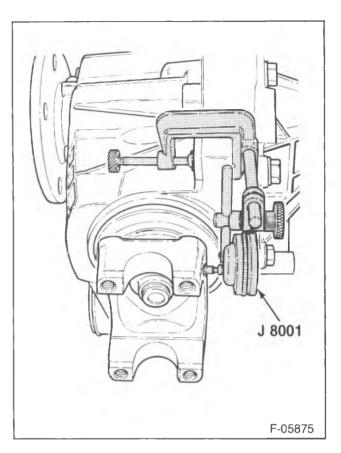


Figure 28—Measuring Backlash at the Pinion Flange

- To increase backlash, turn the left sleeve in, and turn the right sleeve out an identical amount. To decrease backlash, turn the right sleeve in and turn the left sleeve out an identical amount.
- 10. When the backlash is correct, mark the position of the sleeves so they can be kept in the same location.

MEASURING BACKLASH (ALTERNATE METHOD)

- 1. Use this method if the tools specified previously are not available.
- 2. If the specified tools are not available, it is possible to read backlash at the pinion flange as follows:
- 3. Install a dial indicator so the button contacts the outer edge of the pinion flange. The plunger must be at a right angle to the pinion flange (figure 28).
- Move the pinion flange through its free play while holding the differential carrier. Record the dial indicator reading.
- 5. DIVIDE THE DIAL INDICATOR READING BY 2 to obtain the actual backlash when using this method. Example: A dial indicator reading of 0.16 mm means that there is actually 0.08 mm backlash.
- 6. Follw the steps for adjusting backlash outlined previously.

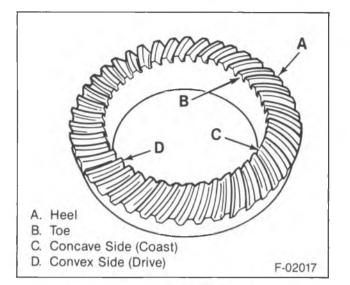


Figure 29-Gear Tooth Terms

GEAR TOOTH CONTACT PATTERN CHECK

Before final assembly of the differential, a gear tooth contact pattern check should be performed.

It should be noted that a gear tooth contact pattern check is NOT a substitute for adjusting pinion depth and backlash as previously outlined. It is a method to verify the correct running position of the ring gear and the drive pinion. Gear sets which are not positioned properly may be noisy, or have a short life, or both. With a pattern check, the best contact between the ring gear and the drive pinion for low noise level and long life can be assured.

GEAR TOOTH NOMENCLATURE

The side of the ring gear tooth which curves outward, or is convex, is referred to as the "drive" side. The concave side is the "coast" side. The end of the tooth nearest the center of ring gear is referred to as the "toe" end. The end of the tooth farthest away from the center is the "heel" end. The toe end of the tooth is smaller than the heel end, (figure 29).

TEST

- 1. Wipe oil out of carrier and carefully clean each tooth of the ring gear.
- Use gear marking compound and apply this mixture sparingly to all ring gear teeth using a medium stiff brush. When properly used, the area of pinion tooth contact will be visible when hand load is applied.
- Apply a load until a torque of 54-70 N·m (40-50 ft. lbs.) is required to turn the pinion. A test make without loading the gears will not give a satisfactory pattern. Turn the companion flange with a wrench so that the ring gear rotates one full revolution then reverse the rotation so that the ring gear rotates one revolution in the opposite direction. Excessive turning of the ring gear is not recommended.
- 4. Observe the pattern on the ring gear teeth and compare with figure 30.

T TRUCK FRONT AXLE 4C3-13

ADJUSTMENTS AFFECTING TOOTH CONTACT

Two adjustments can be made which will affect the tooth contact pattern. These are backlash and the position of the drive pinion (pinion depth) in the carrier. The effects of bearing preloads are not easily seen on hand loaded teeth pattern tests. These adjustments should be within specifications before proceeding with the backlash and the drive pinion adjustments.

It may be necessary to adjust both pinion depth and the backlash to obtain the correct pattern.

The position of the drive pinion is adjusted by increasing or decreasing the shim thickness between the pinion head and the inner race of the rear bearing. The shim is used in the differential to compensate for manufacturing tolerences. Increasing the shim thickness will move the pinion closer to the center line of the ring gear.

Backlash is adjusted by means of the side bearing adjusting sleeves which move the entire case and ring gear assembly closer to, or farther from the drive pinion. (The adjusting sleeves are also used to set side bearing preload.) To increase backlash, turn the left sleeve in and turn the right sleeve out an identical amount. To decrease backlash, turn the right sleeve in and turn the left sleeve out an identical amount.

It is important that the contact pattern be centrally located up and down on the face of the ring gear teeth.

FINAL ASSEMBLY

Remove or Disconnect (Figures 1, 2 and 25)

1. Four case bolts (figure 25).

2. Right carrier case half.



 Sealing surfaces on the carrier case halves. Remove all oil and grease. Use a chlorinated solvent, such as carburetor cleaner.

Install or Connect (Figure 1, 2 and 31 through 34)

Tools Required:

- J 33844 Bearing Installer
- J 33893 Axle Seal Installer
- J 33799 Shift Housing Seal Installer
- J 33842 Differential Pilot Bearing Installer
- J 33791 Case Bushing Installer
- Apply a bead of sealer (GM part number 1052357 [Loctite 514] or equivalent) to one carrier case surface.
- 1. Right carrier case (29).
- 2. Bolts (28).

၃ Tighten

Bolts to 47 N-m (35 ft. lbs.).

- Make sure the sleeves (32) are in the proper position, as marked previously.
- 3. Bolts (18) and locks (19).

4C3-14 T TRUCK FRONT AXLE

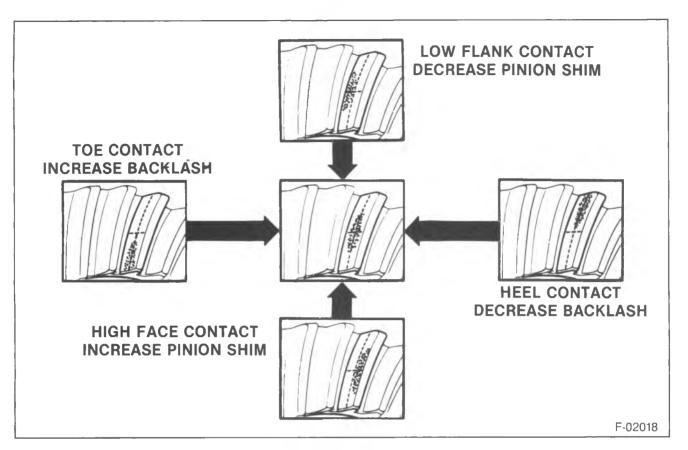


Figure 30—Gear Tooth Contact Pattern

入 Tighten

- Bolts to 8.0 N·m (70 in. lbs.).
- 4. Left seal (3) to the cover (57). Fully support the seal bore area of the cover while installing the seal.

Clean

- All oil and grease from the cover and carrier sealing surfaces. Use carburetor cleaner or equivalent.
- Apply sealer (GM part no 1052357 [Loctite 514] or equivalent) to the cover.
- 5. Cover (57) and bolts (58).

र्श्ति Tighten

- Bolts to 25 N·m (18 ft. lbs.).
- 6. Shaft (59) with deflector (2). Tap into place
- 7. Bearing (4). Use J 33844.
- 8. Seal (3). Use J 33893 (figure 31).
- 9. Seal (15). Use J 33799 (fiuge 32).
- 10. Differential pilot bearing (21). Use J 33842 (figure 33).
- 11. Washer (24) to the output shaft (23).
- 12. Output shaft to the carrier assembly.
- 13. Sleeve (22).
- 14. Thrust washer (20). Use grease to hold it in place.
- 15. Spring (16) and shift shaft and fork (17).
- Thrust washer (7). Use grease to hold it in place. Align the notch and tab (figure 34).
- 17. Shaft (1) to the tube (5).
- 18. Carrier connector (9) with retainer (8). Tap into place.

- Remove all oil and grease from the tube and carrier gasket surfaces. Use carburetor cleaner or equivalent.
- Apply sealer (GM part not 1052357 [Loctite 514] or equivalent) to the carrier.
- 19. Tube assembly (5) to the carrier.
- 20. Two upper bolts (6). Leave finger tight.
- 21. Shift cable housing (11) and remaining bolts (6).

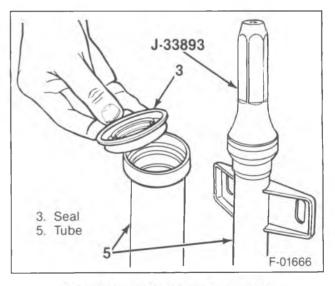


Figure 31-Installing the Shaft Seal

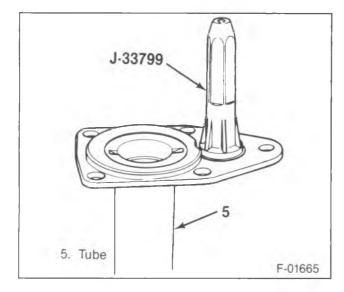


Figure 32—Installing the Shift Housing Seal

[玌] Tighten

Bolts to 47 N·m (35 ft. lbs.).
22. Bushings (48). Use J 33791 (figure 15).

Inspect (Figure 35)

Tool Required:

1)

- J 33798 Engagement Tool
- Operation of the shift mechanism. Insert J 33798 into the shift fork. Turn the axle shaft while engaging and disengaging the shift mechanism with the tool. The mechanism should operate smoothly. If not, remove the tube and check for damaged or improperly installed parts.

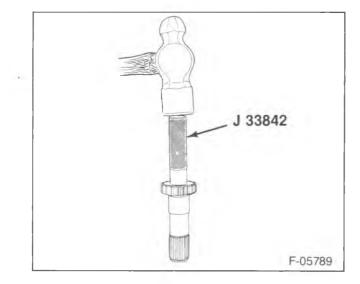


Figure 33—Installing the Differential Pilot Bearing

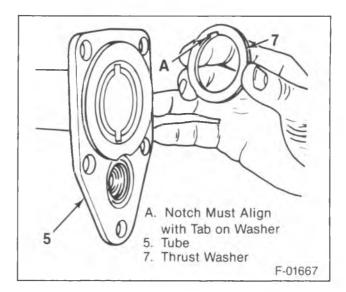


Figure 34—Installing the Thrust Washer

4C3-16 T TRUCK FRONT AXLE

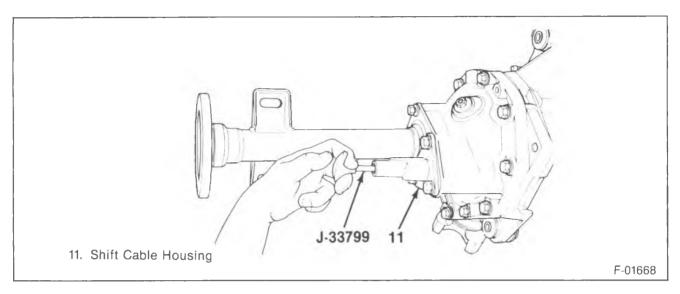


Figure 35—Checking the Shift Mechanism

SPECIFICATIONS

TORQUE SPECIFICATIONS


Fastener	N⁺m	Ft. Lbs.	In. Lbs.
Cable Housing and Tube Attaching Bolts	25	18	
Left Hand Output Shaft Cover Bolts	25	18	
Carrier Case Bolts	47	35	
Adjusting Sleeve Lock Bolts	8.0	_	71
Differential Ring Gear Bolts.	80	60	_

AVAILABLE SHIM SIZES

Pinion Shim Kits	3-0.64 mm
0.6	6-0.79 mm
0.8	31-0.94 mm


PINION PRELOAD AND BACKLASH

Pinion Preload	
Backlash	
(preferred)	

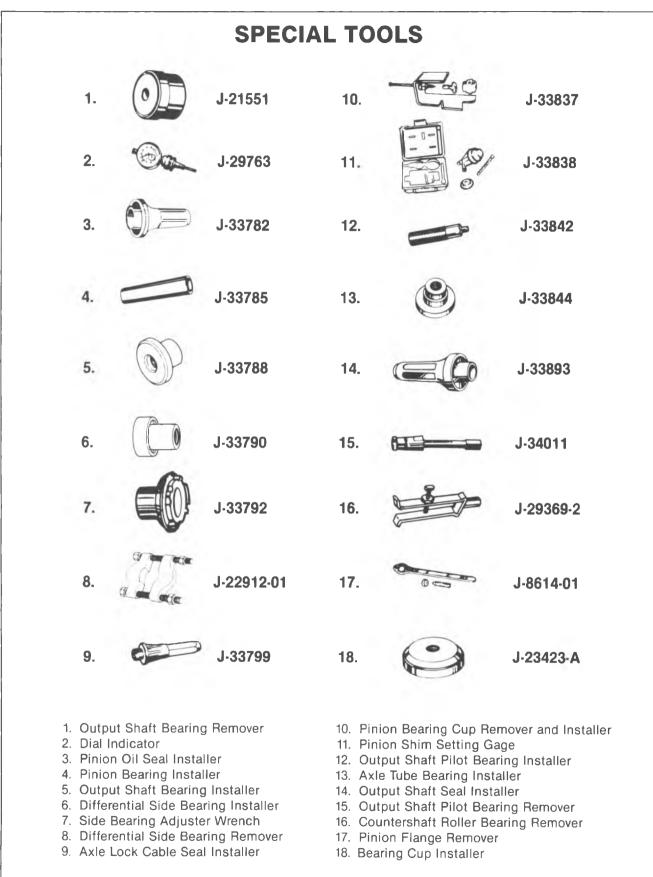

F-01831

4C3-18 T TRUCK FRONT AXLE

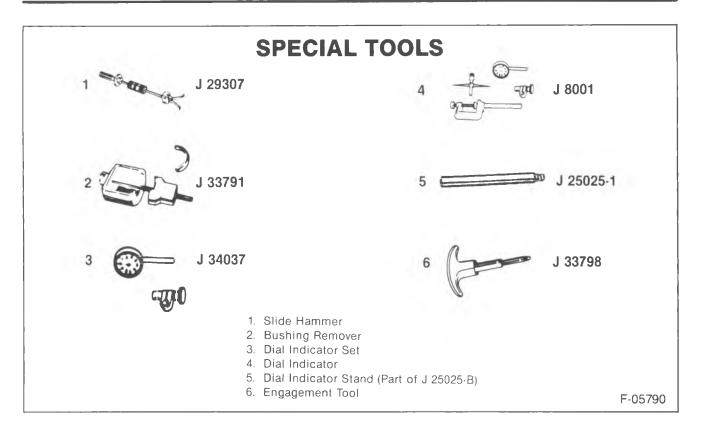

4C4-1

SECTION 4C4 K TRUCK FRONT AXLE CONTENTS

SUBJECT PAGE Specifications4C4-20

DESCRIPTION

The axle used on K model vehicles has a center disconnect feature which allows shifting into and out of four wheel drive when the vehicle is in motion under most conditions. The axle is shifted by a thermal actuator solenoid.

The axle uses a conventional ring gear and pinion gear set to transmit the driving force of the engines to the wheels. This gear set transfers this driving force at a 90 degree angle from the propeller shaft to the drive shafts.

The pinion gear is supported by two tapered roller bearings. The pinion depth is set by a shim located between the gear end of the pinion and the roller bearing that is pressed onto the pinion. The pinion bearing preload is set by crushing a collapsible spacer between the pinion bearings in the axle housing.

The ring gear is bolted onto the differential case with left-hand thread bolts.

The differential case is supported in the axle housing by two tapered roller bearings. The differential and ring gear are located in relationship to the pinion by using threaded adjusters.

The differential is used to allow the wheels to turn at different rates of speed while the front axle continues to transmit the driving force. This prevents tire scuffing when going around corners and prevents premature wear on internal axle parts.

The axle identification number is located on a tag attached to the right axle tube.

The axle is produced with $8^{1/4}$ -inch and $9^{1/4}$ -inch ring gears. The $8^{1/4}$ -inch ring gear is used on K15-25 models; the $9^{1/4}$ -inch ring gear is used on K35 models.

DISASSEMBLY OF AXLE

INSPECTION

Perform the following checks before disassembling the axle.

- 1. Remove the drain plug from the axle and drain the axle lubricant into a suitable container.
- Check the ring gear backlash. Refer to "Adjusting Backlash." This information can be used to determine the cause of the axle problem. It will also help when setting up the shim packs for locating and preloading the differential case.
- Inspect the case for metal chips. Determine where the metal chips come from, such as a broken gear or bearing cage.
- Determine the cause of the axle problem before disassembly if possible.

DISASSEMBLY

Remove or Disconnect (Figures 1 through 19)

Tools Required:

J 29369-1 Bearing Remover (K15-25 Models) J 29369-2 Bearing Remover (K35 Models)

4C4-2 K TRUCK FRONT AXLE

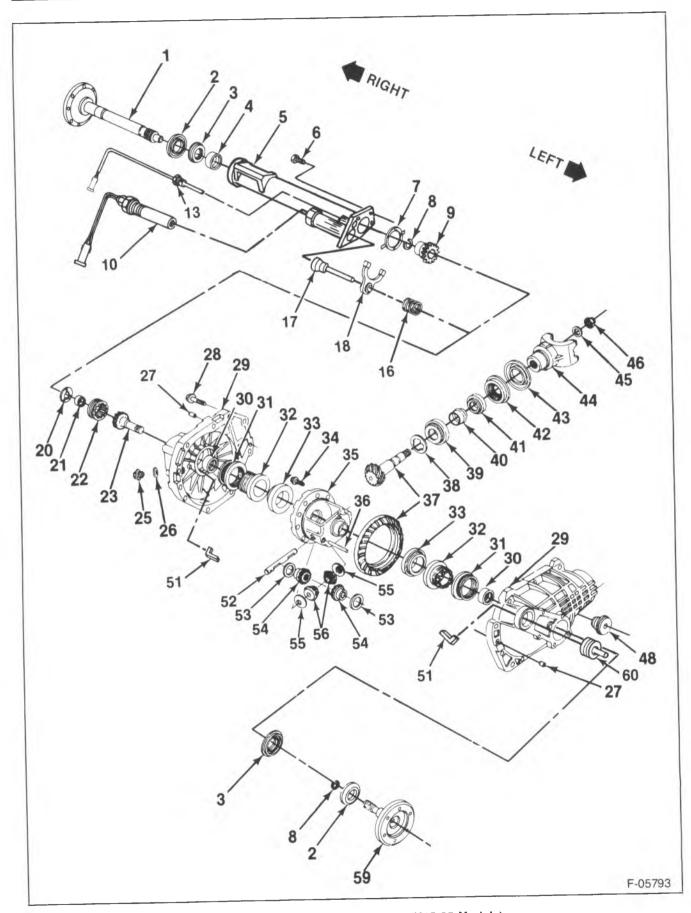


Figure 1—Front Axle Components (K15-25 Models)

1.	Shaft	38	Shim
2.	Deflector		Bearing
	Seal		Spacer
	Bearing		Bearing
	Tube		Seal
6.	Bolt	43.	Deflector
	Thrust Washer	44.	Flange
	Retaining Ring		Washer
	Carrier Connector	46.	Nut
10.	Solenoid	48.	Bushing
13.	Indicator Switch	51.	Lock
16.	Spring	52.	Shaft
17.	Shift Shaft	53.	Thrust Washer
20.	Shim	54.	Side Gear
21.	Differential Pilot	55.	Thrust Washer
	Bearing	56.	Differential Pinion
22.	Sleeve		Gear
23.	Output Shaft	58.	Bolt
25.	Plug	5 9 .	Shaft
26.	Washer	60.	Vent Plug
27.	Pin		
	Bolt		
	Carrier Case		
	Bearing		
	Insert		
	Sleeve		
	Side Bearing		
	Bolt		
25	Differential Case		

- 35. Differential Case
- 36. Pin
- 37. Ring and Pinion Gears

F-05794

Figure 2—Front Axle Components (K15-25 Models)

- J 29307 Slide Hammer
- J 34011 Pilot Bearing Remover
- J 36599 Adjusting Sleeve Wrench
- J 36615 Adjuster Plug Wrench (K35 Models)
- J 8614-01 Pinion Remover

J 36598 Holding Fixture and Pinion Service Tool

J 8612-B Pinion Bearing Remover (K15-25 Models)

J 36606 Pinion Bearing Remover (K35 Models)

J 22888-D Side Bearing Puller

J 8107-2 Side Bearing Puller Pilot (K15-25 Models)

J 36597 Side Bearing Puller Pilot (K35 Models)

J 36616 Bushing Replacer

- 1. Solenoid (10).
- 2. Indicator Switch (13).
- 3. Bolts (6).
- 4. Tube (5) with shaft (1).

K TRUCK FRONT AXLE 4C4-3

- 5. Sleeve (22), shift fork (18) and shaft (17) and spring (16).
- 6. Shim (20).
- 7. Carrier connector (9) with retainer ring (8) (K15-25 models).
 - Clamp the tube (5) in a vise. Clamp only on the mounting flange.
 - Strike the inside of the shaft (1) flange with a brass hammer to dislodge the carrier connector.
- 8. Snap ring (12) and washer (11) and thrust washer (7) (K35 models) (figure 5).
- 9. Shaft (1) with deflector (2).
- Seal (3) and bearing (4). Use J 29369-1 (K15-25 models) or J 29369-2 (K35 models) with J 29307 (figure 6).
- 11. Output shaft (23).
- 12. Differential pilot bearing (21). Use J 34011 (figure 7).
- 13. Shaft (59) with deflector (2). Pry on the shaft flange on one side while tapping with a soft faced hammer on the other side (figure 8).
- 14. Seal (3). Pry out with a screwdriver.
- 15. Bearings (30). Use the tools listed in step 10.
- 16. Bolts (28).
- 17. Right side carrier half (29). Tap on the cast lugs provided.
- 18. Differential assembly.
- Pry up on the locks (51) (right side only on K35).
- 19. Bolt (64) and lock (63) (K35 models).
- 20. Sleeve(s) (32) and side bearing (33) cups (right side only on K35).
 - Turn the sleeve(s) to push the bearing cup(s) out of the bore(s). Use J 36599 (figure 9).
- 21. Adjuster plug (61) with side bearing cup (33) and O-ring (62) (K35 models). Use J 36615 (figure 10).
- 22. Nut (46). Use J 8614-01 to hold the pinion flange (figure 11).
- 23. Washer (45).
- 24. Flange (44) with deflector (43). Use J 8614-01 (figure 12).
- Mount the left carrier case in J 36598. Be sure to use the adapter plate (J 36598-6) for K15-25 models.
- 25. Pinion (37) with shim (38), bearing cone (39), and spacer (40). Use J 36598 (figure 13).
- 26. Spacer (40) from the pinion.
- 27. Pinion bearing (39). Use J 8612-B (K15-25 models) or J 36606 (K35 models) and a press (figure 14).
- 28. Shim (38).
- 29. Seal (42), and bearing cup and cone (41). Use J 36598 (figure 15).
- 30. Bearing cup (39). Use J 36598 (figure 16).
- Side bearings (33). Use J 22888-D and J 8107-2 (K15-25 models) or J 36597 (K35 models) (figure 17).
 Ring gear bolts (34).
 - Ring gear bolts have left-handed threads.

NOTICE: Do not pry the ring gear from the case. This will damage the ring gear and the differential case.

- 33. Ring gear (37) from the differential case.Drive the ring gear off with a brass drift.
- 34. Roll pin (36) (K15-25 models). Drive out with a drift and hammer (figure 18).

4C4-4 K TRUCK FRONT AXLE

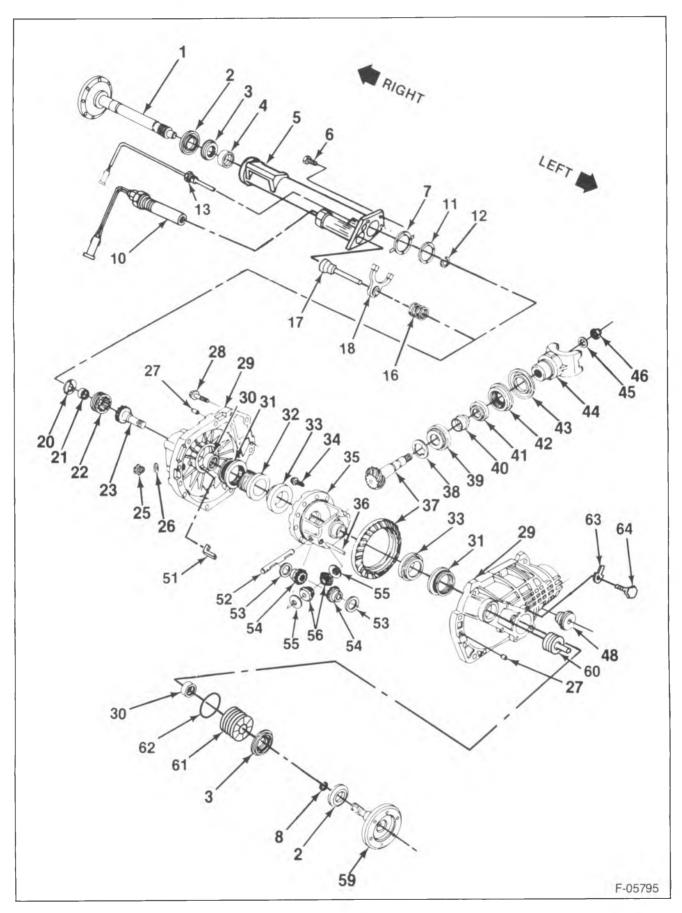


Figure 3—Front Axle Components (K35 Models)

	1.	Shaft	38.	Shim
	2.	Deflector		Bearing
		Seal		Spacer
i		Bearing		Bearing
		Tube		Seal
	6.	Bolt		Deflector
	7.	Thrust Washer		Flange
		Solenoid		Washer
		Washer		Nut
		Snap Ring		Bushing
		Indicator Switch		Lock
1	16.	Spring	52.	Shaft
I		Shift Shaft	53.	Thrust Washer
I	18.	Fork	54.	Side Gear
	20.	Shim	55.	Thrust Washer
	21.	Differential Pilot	56.	Differential Pinion
		Bearing		Gear
l	22.	Sleeve	58.	Bolt
ĺ	23.	Output Shaft	59.	Shaft
l	24.	Bolt		Vent Plug
	25.	Plug	61.	Adjuster Plug
l	26.	Washer	62.	O-Ring
l	27.	Pin	63.	Lock
ļ	28.	Bolt	64.	Bolt
		Carrier Case		
		Bearing		
	31.	Insert		
l	32.	Sleeve		
		Side Bearing		
		Bolt		
		Differential Case		
	37.	Ring and Pinion		
		Gears		
Ľ				E 05706

F-05796

Figure 4—Front Axle Components (K35 Models)

- 35. Bolt (24) (K35 models).
- 36. Shaft (52).
- 37. Differential pinion gears (56) and side gears (54).
 - Roll the pinion gears out of the case with the pinion thrust washers (55).
 - Remove the side gears and the side gear thrust washers (53). Mark the gears and the differential case as left and right.
- 38. Vent plug (60). Use a 6-point deep socket.
- 39. Bushings (48). Use J 36616 (figure 19).

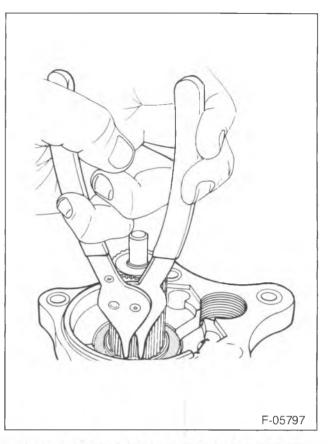


Figure 5—Removing the Snap Ring (K35 Models)

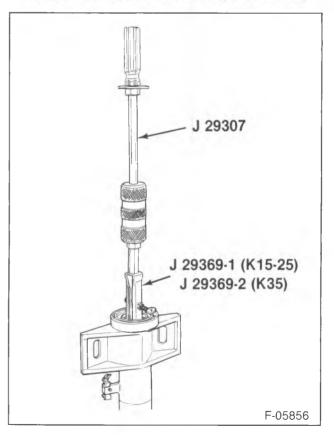


Figure 6—Removing the Axle Bearing

4C4-6 K TRUCK FRONT AXLE

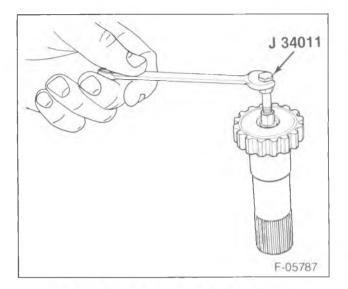


Figure 7-Removing the Pilot Bearing

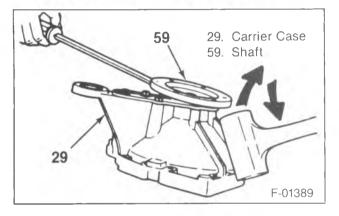


Figure 8—Removing the Left Shaft

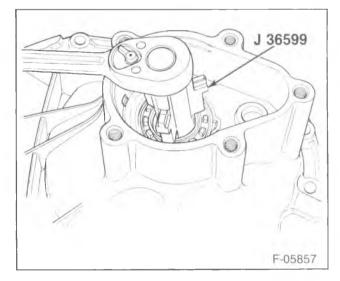


Figure 9—Turning the Adjuster Sleeve

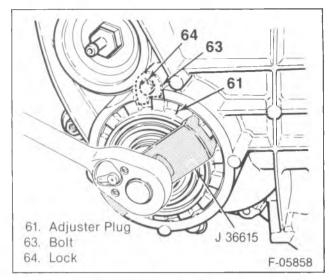


Figure 10—Turning the Adjuster Plug (K35 Models)

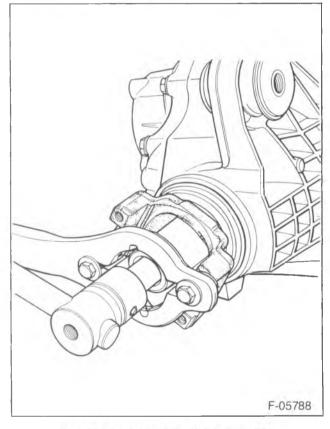


Figure 11-Removing the Pinion Nut

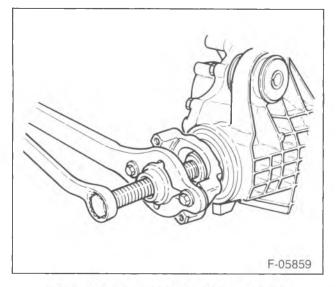


Figure 12-Removing the Pinion Flange

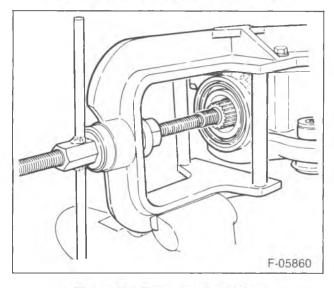


Figure 13-Removing the Pinion

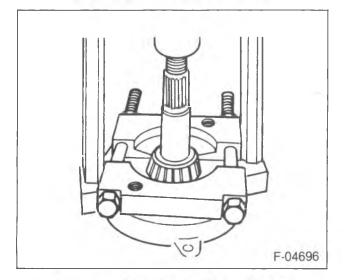


Figure 14-Removing the Pinion Bearing

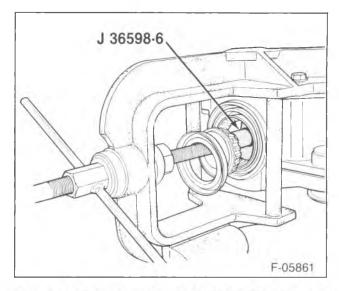


Figure 15—Removing the Outer Pinion Bearing and Seal

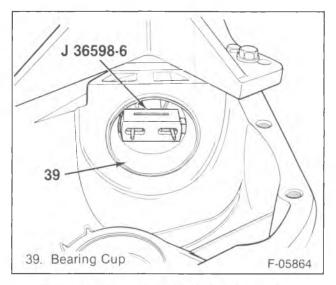


Figure 16-Removing the Inner Bearing Cup

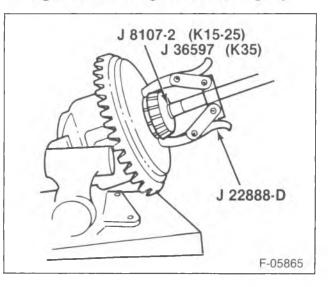


Figure 17—Removing the Side Bearings

4C4-8 K TRUCK FRONT AXLE

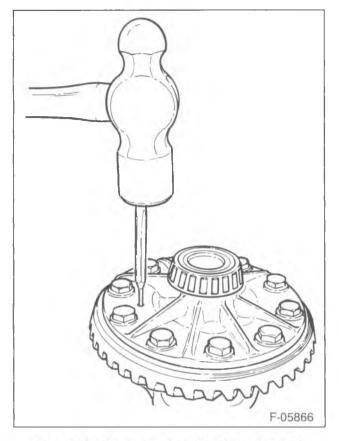


Figure 18-Removing the Pin (K15-25 Models)

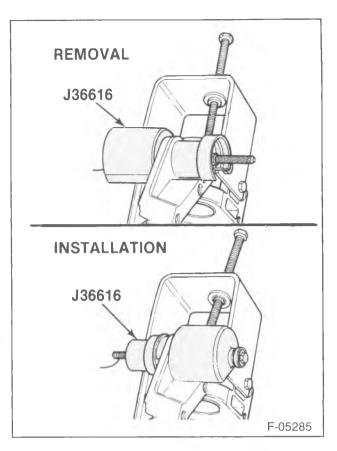


Figure 19—Replacing the Carrier Bushings

CLEANING AND INSPECTION

CLEANING

- Do not steam clean drive parts having ground and polished surfaces such as gears, bearings, and shafts. These parts should be cleaned in a suitable solvent. All parts should be disassembled before cleaning.
- Parts should be thoroughly dried immediately after cleaning. Use soft, clean, lintless rags. Parts may be dried with compressed air. Do not allow the bearings to spin while drying them with compressed air.

INSPECTION

It is very important to carefully and thoroughly inspect all drive unit parts before assembly.

Through inspection of the parts for wear or stress and replacement of worn parts will help prevent costly drive component repair after reassembly.

AXLE HOUSING

Inspect

• Carrier bore for nicks or burrs that would prevent the outer diameter of the pinion seal from sealing. Remove any burrs that are found.

- Bearing cup surfaces for nicks or burrs. Remove any burrs that are found.
- Housing for cracks. Replace the housing if any cracks are found.
- Housing for foreign material such as metal chips, dirt, or rust. Refer to "Cleaning".

DIFFERENTIAL

Inspect

- Pinion gear shaft for unusual wear.
- Pinion gear and side gear teeth for wear, cracks, scoring, and spalling.
- Thrust washers for wear.
- Fit of the differential side gears in the differential case.
- Fit of the side gears on the axle shafts.
- Differential case for cracks and scorring.

PINION AND RING GEAR

Inspect

- Pinion and ring gear teeth for cracking, chipping, scorring, or excessive wear.
- Pinion splines for wear.
- Pinion flange splines for wear.
- Fit of the pinion on the pinion flange.

- Sealing surface of the pinion flange for nicks, burrs, or rough tool marks which would cause damage to the seals' inside diameter and result in an oil leak.
- Replace all worn or broken parts.
- Ring and pinion gears are matched sets and are both replaced any time a replacement of either is necessary.

BEARINGS

Inspect

- Bearings visually and by feel. The bearings should feel smooth when oiled and rotated while applying as much hand pressure as possible.
- The large end of the bearing rollers for wear. This is where tapered roller bearing wear is most evident.
- Bearing cups for wear, cracks, brinelling and scorring.
- Bearings and cups are only replaced as sets.
- If the axle was operated for an extended period of time with very loose bearings, the ring gear and drive pinion will also require replacement.
- Low mileage bearings may have minute scratches and pits on the rollers and the bearing cups from the initial preload. Do not replace a bearing for this reason.
- Bearing caps for cracks or chips.

SHIMS, THRUST WASHERS AND ADJUSTER SLEEVES



- Shims and thrust washers for cracks and chips.
 Damaged shims should be replaced with an equally sized service shim.
- Adjuster sleeves for damaged threads. Replace if required.

SHIFT MECHANISM

Inspect (Figures 1 through 4)

- Carrier connector (9) (if used) for damaged splines and teeth. Replace as required.
- Shift fork (17) for wear, scoring, and damage to thrust surfaces. Replace if needed.
- Sleeve (22) and inner output shaft (23) for damaged splines and teeth. Replace if necessary.
- Spring (16) for breakage.
- Solenoid (13) and indicator switch (13) for damage and frayed wiring.

SOLENOID CHECK

- Apply 12 volt battery voltage to the solenoid terminals. The plunger should extend within several seconds.
- Disconnect the solenoid from the power source. The plunger should retract within several seconds.
- If the solenoid does not operate as specified, it should be replaced.

ASSEMBLY OF AXLE

Important

 Apply axle lubricant to all bearings, seal lips, gears, thrust washers, and bearing surfaces at assembly.

PINION BEARING CUP INSTALLATION

Install or Connect (Figures 1 through 4, 20, and 21)

Tool Required:

- J 36598 Holding Fixture and Pinion Service Tool
- Mount the left carrier case in J 36598. Use the J 36598-6 adapter plate for K15-25 models. Tighten the attaching bolts securely.
- Outer bearing cup (40). Use the forcing screw and J 36598-3 (K15-25) or J 36598-4 (K35) (figure 20).
- 2. Inner bearing cup (39).
 - Remove J 36598-3 or J 36598-4 from the forcing screw.
 - · Place pilot J 36598-15 in the pinion seal bore.
 - Extend the forcing screw through the pinion bore.
 - Install J 36598-3 (K15-25 models) or J 36598-4 (K35 models) on the forcing screw (figure 21).

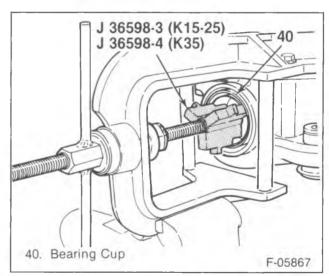


Figure 20—Installing the Outer Pinion Bearing Cup

- Rotate the forcing screw until the installer is snug against the bearing cup. Rotate the tool several times to make sure the bearing cup is not cocked in the bore.
- Pull the bearing cup into place with the forcing screw (figure 21).

4C4-10 K TRUCK FRONT AXLE

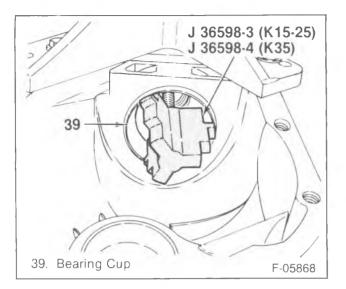


Figure 21—Installing the Inner Pinion Bearing Cup

PINION DEPTH ADJUSTMENT

Tools Required:

- J 36601 Pinion Depth Setting Gage
- J 29763 Dial Indicator
- 1. Refer to figures 1 through 4 and 22.
- 2. Pinion depth is adjusted by selecting a shim (38) of the proper thickness.
- 3. Lubricate the pinion bearings liberally with axle lubricant.
- Assemble J 29763 to the proper gaging arm (J 36601-4 for K15-25 models, J 36601-3 for K35 models).
- 5. Install the pinion bearings and hold them in place.
- 6. Insert the threaded rod of J 36601 through the pinion bearings.
- 7. Install the proper pilot, washer, and nut.
- 8. Tighten the nut while holding the threaded rod with a wrench to adjust bearing preload. Adjust the nut to obtain a preload of 1.0-1.6 N m (10-15 in. lbs.). Measure using an inch pound torque wrench. Rotate the shaft several times to make sure the bearings have seated, then measure again.
- 9. Push the dial indicator downward until the needle rotates about three turns.
- 10. Tighten the dial indicator in this position.
- 11. Set the button of J 36601 on the differential bearing bore (figure 22).
- Rotate the tool slowly back and forth until the dial indicator reads the lowest point of the bore. Set the dial indicator to ZERO. Repeat the rocking action of the tool to verify the ZERO setting.
- 13. After the ZERO setting is obtained and verified, grasp the gaging arm by the flats and move the tool button out of the differential side bearing bore (figure 22). Record the dial indicator reading.
- 14. The dial indicator reading is equal to the required shim size. Example: If the dial indicator reads 0.508 mm in step 8, a 0.508 shim is required. Available shim sizes are listed in "Specifications."
- 15. Remove the tool and bearing cones.

PINION INSTALLATION

Install or Connect (Figures 1 through 4 and 11, 23 and 24)

Tools Required:

- J 35512 Bearing Installer (K15-25 Models)
- J 36614 Bearing Installer (K35 Models)
- J 8614-01 Pinion Flange Remover
- J 36333 Seal Installer
- 1. Shim (38) to the pinion gear (37).
 - The shim must be of the proper size, as selected previously.
- Bearing (39) onto the pinion gear using J 35512 (K15-25 models) or J 36614 (K35 models) (figure 23).
- 3. New spacer (40) onto the pinion gear.
- 4. Bearing (41) into the case.
- 5. Seal (42) into the case using J 36366 (figure 24).
- 6. Pinion gear, with bearing and spacer, to the case.
- 7. Deflector (43), flange (44), washer (45) and nut (46).
 - Apply PST Sealant (GM part no. 1052080 or equivalent) to the pinion gear threads and on both sides of the washer.
 - Tighten nut (46) until no end play is detectable while holding the flange (44) with J 8614-01 (figure 11).
 - No further tightening should be attempted until the bearing preload has been checked.

All Measure (Figure 25)

- Pinion bearing preload. Use an inch pound torque wrench (figure 25). The correct preload is 1.7-2.8 N·m (15-25 in. lbs.).
 - 1. Rotate the pinion with the torque wrench and observe the reading.
 - 2. If the preload torque is below specifications, continue torquing the pinion nut in small increments. Check the preload after each tightening. Each tightening increases the bearing preload by several inch pounds. If the bearing preload is exceeded, the pinion will have to be removed, and a new collapsible spacer installed.
 - 3. Once the preload has been obtained, rotate the pinion several times to make sure that the bearings have seated. Recheck the preload, and adjust if necessary.

DIFFERENTIAL CASE ASSEMBLY



Tools Required:

J 22761 Side Bearing Installer (K15-25 Models)

- J 29710 Side Bearing Installer (K35 Models)
- J 8092 Driver Handle
- 1. Thrust washers (53) and side gears (54) into the differential case (35).
 - If the same gears and washers are being used, install them on the same side as they were removed from.

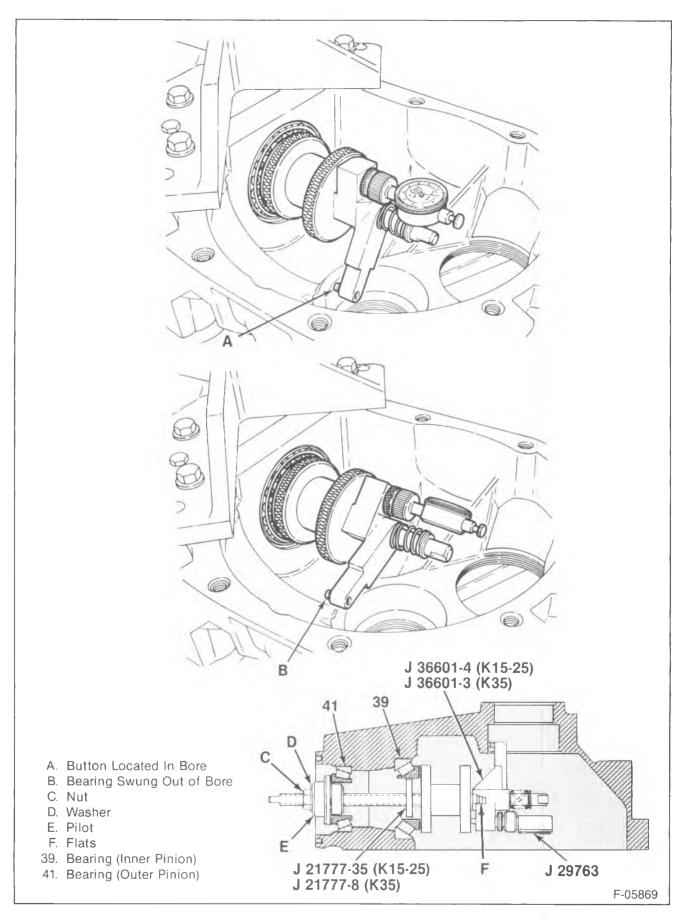


Figure 22—Measuring Pinion Depth

4C4-12 K TRUCK FRONT AXLE

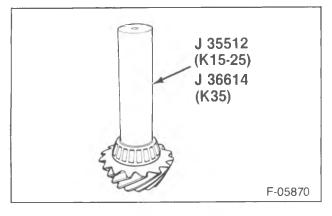


Figure 23—Installing the Pinion Bearing

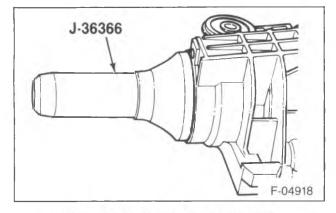


Figure 24-Installing the Pinion Seal

- 2. Pinion gears (56).
 - Position one pinion gear (56) between the side gears and rotate the gears until the pinion gear is directly opposite the opening in the case.
 - Place the other pinion gear (56) between the side gears, making sure the hole in both pinion gears line up.
- 3. Thrust washers (55).

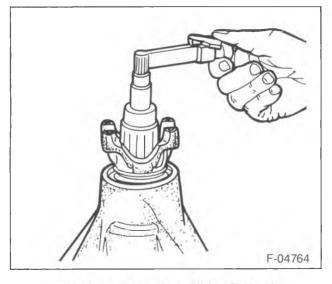


Figure 25—Measuring Pinion Preload

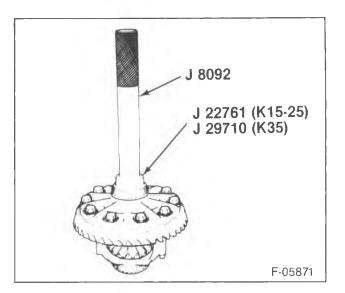


Figure 26—Installing the Differential Side Bearing

- Rotate the pinion gears toward the opening just enough to permit the sliding in of the thrust washers.
- Shaft (52) and pin (36) (K15-25 models) or bolt (24) (K35 models).
- 5. Ring gear (37) onto the differential case (35).
- 6. Bolts (34). The bolts have left hand threads.

? Important

- Always install new bolts. Never reuse the old bolts.
- ၃ Tighten
 - Bolts (34) alternating in progressive steps to 120 N·m (88 ft. lbs.).
- 7. Side bearings (33), using J 22761 (K15-25 models) or J 29710 (K35 models) and J 8092 (figure 26).

DIFFERENTIAL ASSEMBLY INSTALLATION

Install or Connect (Figures 1 through 4 and 27 through 30)

Tools Required:

- J 36612 Bearing Installer (K15-25 Models)
- J 36613 Bearing Installer (K35 Models)
- J 8092 Driver Handle
- J 36599 Sleeve Adjusting Wrench
- J 36615 Adjuster Plug Wrench (K35 Models)
- J 36603 Side Bearing Cup Installer
- Bearings (30) to the sleeves (32) and/or adjuster plug (61) (K35 models). Use J 8092 and J 36612 (K15-25 models) or J 36613 (K35 models) (figure 27).
- 2. New O-ring (62) to the adjuster plug (61) (K35 models).
- 3. Sleeves (32) and/or adjuster plug (61) to the carrier case (29).
 - K15-25 models: Use J 36599 (figure 28).
 - K35 models: Use J 36599 for the right sleeve (figure 28). Use J 36615 for the adjuster plug (figure 29).

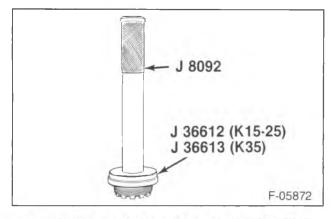


Figure 27—Installing the Adjuster Sleeve Bearing

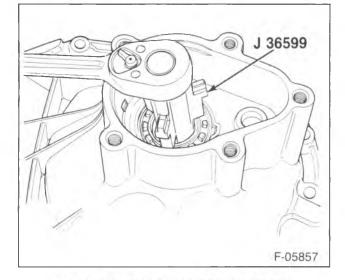


Figure 28—Turning the Adjuster Sleeve

- 4. Side bearing cups (33). Use J 36603 with J 8092 (figure 30).
- 5. Differential assembly to the carrier case half.
 - Place the differential assembly into the carrier case half which contains the pinion gear.

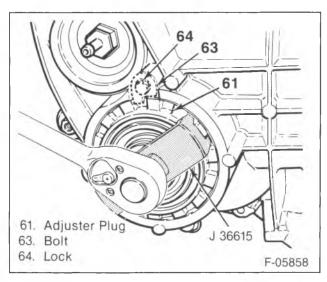


Figure 29—Turning the Adjuster Plug (K35 Models)

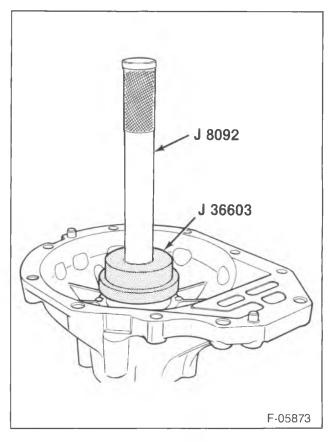


Figure 30—Installing the Side Bearing Cups

- Turn the left sleeve (32) (K15-25 models) or adjuster plug (61) (K35 models) in until backlash is felt between the ring and pinion.
 - K15-25 models: Use J 36599 (figure 28).
 - K35 models: Use J 36615 (figure 29).
- Remove the carrier case from J 36598.
- 6. Carrier case halves. Do not use sealer at this time.
 If the carrier halves do not make complete contact, back out the right sleeve (32). Use J 36599 (figure 28).
- 7. Bolts (28). Tighten to 47 N m (35 ft. lbs.).

ADJUSTING BACKLASH

Tools Required:

- J 34047 Dial Indicator Set
- J 8001 Dial Indicator Set
- J 34047-3 Dial Indicator Adapter
- 1. Refer to figures 1 through 4.
- Tighten the right sleeve (32) to 140 N·m (100 ft. lbs.). Use J 36599 (figure 28).
- Tighten the left sleeve (32) (K15-25 models) or adjuster plug (61) (K35 models) to 140 N·m (100 ft. lbs.).
 - Use J 36599 (K15-25 models) (figure 28).
 - Use J 36615 (K35 models) (figure 29).
- 4. Mark the location of the adjusting sleeves in relation to the carrier halves, so the notches in the adjusting sleeves can be counted when turned.
- 5. Turn the right sleeve OUT two notches.
- 6. Turn the left sleeve (K15-25 models) or adjuster plug (K35 models) IN one notch.

4C4-14 K TRUCK FRONT AXLE

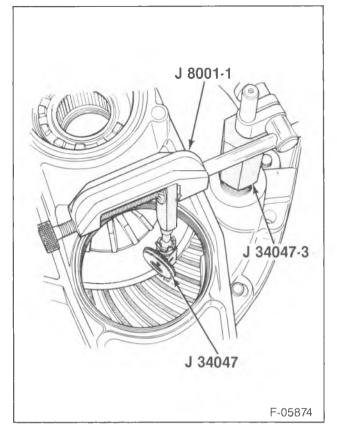


Figure 31—Measuring Backlash at the Ring Gear

- 7. Rotate the pinion several times to seat the bearings.
- 8. Install J 34047-3 into the filler plug hole. Install J 34047-1 and J 8001-1 as shown in figure 31.
- 9. Place the indicator stem at the heel end of a tooth.
- 10. Check and record the backlash at three or four points around the ring gear.
 - The pinion must be held stationary when checking backlash.
 - The backlash should be the same at each point within 0.05 mm (0.002-inch). If the backlash varies more than 0.05 mm (0.002-inch), check for burrs, a distorted case flange, uneven bolting conditions, or foreign matter between the case and the ring gear.
 - Gear backlash should be between 0.08-0.25 mm (0.003-0.010 inch) with a preferred specification of 0.13-0.18 mm (0.005-0.007-inch).
 - If the backlash is incorrect, adjust the sleeves as necessary. Always maintain the "one notch" preload on the side bearings. Example: If it is necessary to turn the RIGHT sleeve IN one notch, the LEFT sleeve must be turned OUT one notch.
 - To increase backlash, turn the left sleeve in, and turn the right sleeve out an indentical amount. To decrease backlash, turn the right sleeve in and turn the left sleeve out an identical amount.
 - Changing the sleeves one notch will change backlash about 0.08 mm (0.003-inch).

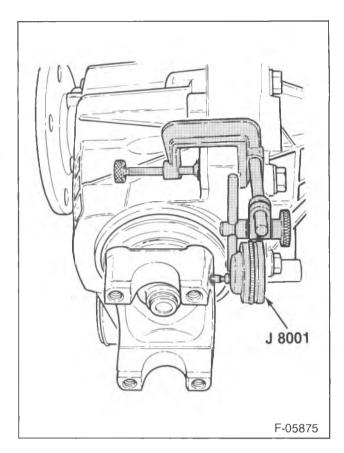


Figure 32—Measuring Backlash at the Pinion Flange

MEASURING BACKLASH (ALTERNATE METHOD)

- 1. Use this method if the tools specified previously are not available.
- 2. If the specified tools are not available, it is possible to read backlash at the pinion flange, as follows:
- Install a dial indicator so the button contacts the outer edge of the pinion flange. The plunger must be at a right angle to the pinion flange (figure 32).
- Move the pinion flange through its free play while holding the differential carrier. Record the dial indicator reading.
- 5. DIVIDE THE DIAL INDICATOR READING BY 2 to obtain the actual backlash when using this method. Example: A dial indicator reading of 0.16 mm means that there is actually 0.08 mm backlash.
- 6. Follow the steps for adjusting backlash outlined previously.

GEAR TOOTH CONTACT PATTERN CHECK

Before final assembly of the differential, a gear tooth contact pattern check should be performed.

It should be noted that a gear tooth contact pattern check is NOT a substitute for adjusting pinion depth and backlash as previously outlined. It is a final check to verify the correct running position of the ring gear and the drive pinion. Gear sets which are not positioned properly may be noisy, or have a short life, or both. With a pattern

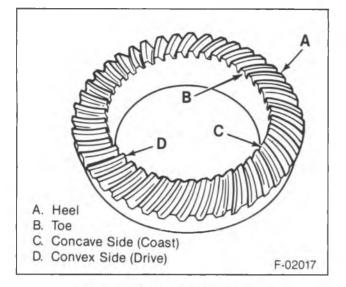


Figure 33—Gear Tooth Terms

check, the best contact between the ring gear and the drive pinion for low noise level and long life can be assured.

GEAR TOOTH TERMS

The side of the ring gear tooth which curves outward, or is convex, is referred to as the "drive" side. The concave side is the "coast" side. The end of the tooth nearest center of ring gear is referred to as the "toe" end. The end of the tooth farthest away from the center is the "heel" end. The toe end of the tooth is smaller than the heel end (figure 33).

TEST

- 1. Wipe oil out of carrier and carefully clean each tooth of the ring gear.
- 2. Apply gear marking compound sparingly to all ring gear teeth using a medium stiff brush. When properly used, the area of pinion tooth contact will be visible when hand load is applied.
- 3. Apply a load until a torque of 54-70 N·m (40-50 ft. lbs.) is required to turn the pinion.

A test made without loading the gears will not give a satisfactory pattern. Turn the companion flange with a wrench so that the ring gear rotates one full revolution then reverse the rotation so that the ring gear rotates one revolution in the opposite direction. Excessive turning of the ring gear is not recommended.

4. Observe the pattern on the ring gear teeth and compare with figure 34.

ADJUSTMENTS AFFECTING TOOTH CONTACT

Two adjustments can be made which will affect the tooth contact pattern. These are backlash and the position of the drive pinion (pinion depth) in the carrier. The effects of bearing preloads are not easily seen on hand loaded teeth pattern tests. These adjustments should be within specifications before proceeding wiht the backlash and the drive pinion adjustments.

It may be necessary to adjust both pinion depth and the backlash to obtain the correct pattern.

The position of the drive pinion is adjusted by increasing or decreasing the shim thickness between the pinion head and the inner race of the rear bearing. The shim is used in the differential to compensate for manufacturing tolerances. Increasing the shim thickness will move the pinion closer to the centerline of the ring gear. Decreasing the shim thickness will move the pinion farther away from the centerline of the ring gear.

Backlash is adjusted by means of the side bearing adjusting sleeves which move the entire case and ring gear assembly closer to, or farther from the drive pinion. (The adjusting sleeves are also used to set side bearing preload). To increase backlash turn the left sleeve in and turn the right sleeve out an identical amount. To decrease backlash, turn the right sleeve in and turn the left sleeve out an identical amount.

It is important that the contact pattern be centrally located up and down on the face of the ring gear teeth.

CARRIER CASE ASSEMBLY

Install or Connect (Figures 1 through 4)

- Bend the lock (51) over the sleeves (32). (Right side only on K35 models).
- Bolt (64) and lock (63) (K35 models).

Remove or Disconnect (Figures 1 through 4)

- 1. Bolts (28).
- 2. Right carrier case half.

🛄 Clean

Carrier case and axle tube sealing surfaces.
 Remove all grease and oil. Use carburetor cleaner or equivalent.

★ Install or Connect (Figures 1 through 4, 19, and 35).

Tools Required:

- J 36600 Output Shaft Seal Installer (K15-25)
- J 22833 Output-Shaft Seal Installer (K35).
- J 33842 Pilot Bearing Installer
- J 36616 Bushing Replacer Set
- Apply a bead of sealer (GM part no. 1052942 [Loctite 518] or equivalent) to one carrier case half sealing surface.
- 1. Right carrier case half (29).
- 2. Bolts (28).

I Tighten

- Bolts (28) to 47 N m (35 ft. lbs.).
- 3. Left seal (3). Use J 36600 (K15-25 models) or J 22833 (K35 models). Drive into place with a soft faced hammer.
- 4. Shaft (59) with deflector (2). Drive in place with a brass hammer.
- 5. Bearing (21) to the output shaft (23). Use J 33842 (figure 35).
- 6. Output shaft (23) to the carrier.
- 7. Vent plug (60). Use a small amount of sealer (GM part no. 1052942 [Loctite 518] or equivalent) on the threads.
- 8. Bushings (48). Use J 36616 (figure 19).

4C4-16 K TRUCK FRONT AXLE

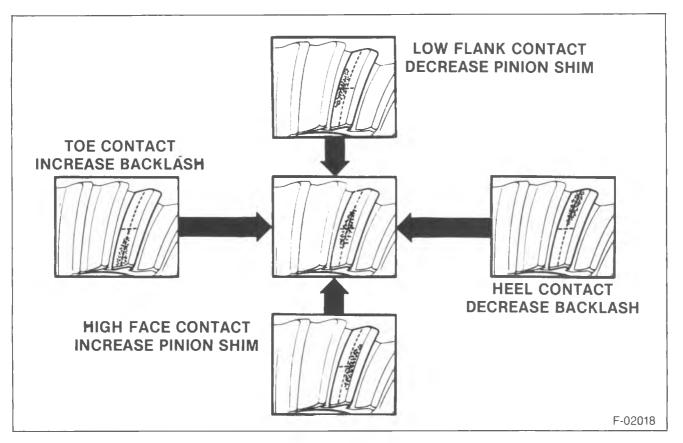


Figure 34—Gear Tooth Contact Pattern

AXLE TUBE ASSEMBLY

ASSEMBLY

→← Install or Connect (Figures 1 through 4 and 36)

Tools Required:

- J 36609 Bearing Installer
- J 36600 Seal Installer (K15-25 Models)
- J 22833 Seal Installer (K35 Models)

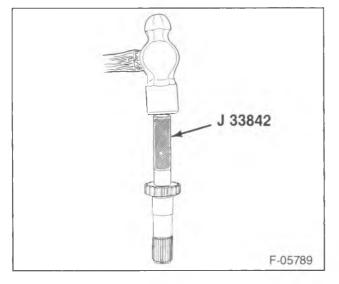


Figure 35—Installing the Pilot Bearing

- 1. Bearing (4). Use J 36609. Drive into place with a hammer.
- Seal (3). Use J 36600 (K15-25 models) or J 22833 (K35 models) (figure 36).
- 3. Shaft (1) with deflector (2) to the axle tube.
- 4. Washer (7). Align the tabs with the slots in the tube.
- 5. Gear (9) with retaining ring (8) (K15-25 models). Drive gear into place with a plastic hammer.
- Washer (11) and new snap ring (12) (K35 models). Make sure the snap ring seats properly in the groove.

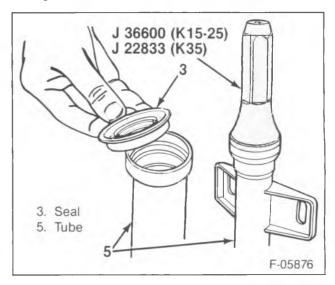


Figure 36—Installing the Axle Tube Seal

OUTPUT SHAFT SHIM SELECTION

- Refer to figures 1 through 4.
- It is necessary to select the proper size output shaft shim (20) if any of the following components were replaced:
 - Shaft (1).
 - Tube (5).
 - Output shaft (23).
 - Carrier case (29).
 - Ring and pinion gears (37).
 - Differential case (35).
 - Bearings (33).
 - Carrier connector (9) (K15-25 models).

Preferred Method:

Tool Required:

J 34672 Depth Gage (or equivalent)

- 1. Refer to figures 37 and 38.
- Push on the inner end of the shaft (1), and move the shaft outboard as far as it will go. The shaft must be in this position when measuring dimension "A".
- 3. Measure dimension "A". Use J 34672 or equivalent (figure 38).
 - K15-25: Tube flange machined surface to inner surface of connector (9).
 - K35: Tube flange machined surface to inner surface of axle shaft shoulder.
- 4. Measure dimension "B."
 - Carrier machined surface to outer surface of output shaft (23).
- 5. Subtract dimension "A" from dimension "B."
- 6. The correct shim size will be one size smaller than the figure obtained in step 5. Examples:
 - If the figure obtained in step 5 was 3.53 mm, use a 3.30 mm shim.
 - If the figure obtained in step 5 was 3.30 mm, use a 2.70 mm shim (K15-25 models) or 2.80 mm shim (K35 models).
- 7. Shims are available in the following sizes:
 - K15-25 models: 1.27 mm 1.78 mm, 2.29 mm, 2.70 mm, 3.30 mm, 3.81 mm.
 - K35 models: 1.80 mm, 2.30 mm, 2.80 mm, 3.30 mm, 3.80 mm, 4.30 mm, 4.80 mm.

Alternate Method

Use ONLY if proper tools for calculating the shim size are not available.

Install or Connect (Figures 1 through 4)

- 1. Original shim (20) to the shaft (1). Use grease to hold it in place.
- 2. Assembled axle tube and shaft to the carrier. Use no sealer at this time.
- 3. Bolts (6). Tighten to 40 N m (30 ft. lbs.).

Measure (Figure 39)

Tool Required:

- J 8001 Dial Indicator (or equivalent)
- Shaft (1) end play.
 - Install a dial indicator (J 8001 or equivalent) on the axle tube end. The plunger of the indicator must be at a right angle to the axle flange (figure 39).

- 2. Move the shaft (1) back and forth and read the end play. Correct end play is 0.03-0.51 mm (0.001-0.020-inch).
- 3. If end play is incorrect, install a thicker or thinner shim as needed to bring end play into the specified range.

Remove or Disconnect (Figures 1 through 4)

1. Bolts (6).

2. Axle tube assembly.

FINAL ASSEMBLY

Clean (Figures 1 through 4)

 Sealing surfaces of the tube (5) and carrier assembly. Remove all oil and grease. Use carburetor cleaner or equivalent.

Install or Connect (Figures 1 through 4)

- Shim (20), as selected previously, to the output shaft (23). Use grease to hold it in place.
- 2. Shift fork (18), shaft (17), sleeve (22), and spring (16) to the carrier case.
- Apply a bead of sealer (GM part no. 1052942 [Loctite 518] or equivalent) to the tube (5) sealing surface.
- 3. Assembled tube (5) to the carrier assembly.
- 4. Bolts (6).

री Tighten

Bolts (6) to 40 N·m (30 ft. lbs.).

Inspect (Figure 40)

- Shift mechanism operation. Insert a drift into the actuator hole in the axle tube. Rotate the axle flange while moving the shift fork with the drift. The shift mechanism should work smoothly, without bind.
- Solenoid (10). Apply sealer (GM part no. 1052942 [Loctite 518] or equivalent) to the threads. Tighten to 22 N·m (16 ft. lbs.).
- Switch (13). Apply sealer (GM part no. 1052942 [Loctite 518] or equivalent) to the threads. Tighten to 5.0 N·m (45 in. lbs.).
- 7. Axle lubricant, as specified in the proper Truck Service Manual.
- Drain and fill plugs (25) with sealing washers (26). Tighten to 33 N°m (24 ft. lbs.).

4C4-18 K TRUCK FRONT AXLE

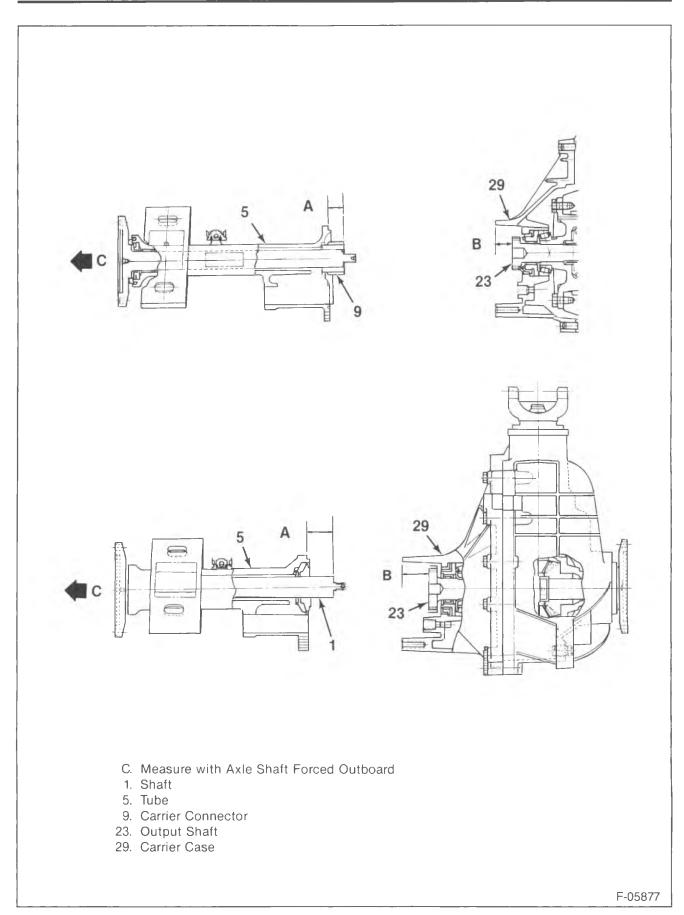


Figure 37—Measuring to Calculate Shim Size

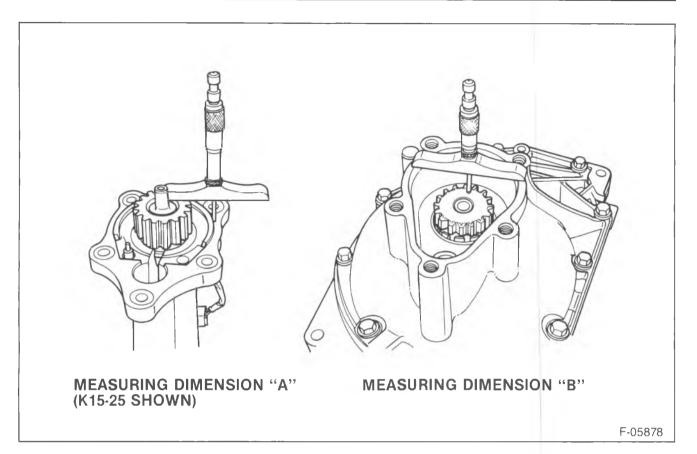


Figure 38—Measuring to Calculate Shim Size

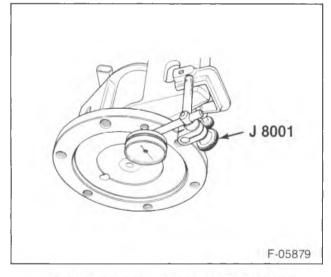


Figure 39-Measuring Axle Shaft End Play

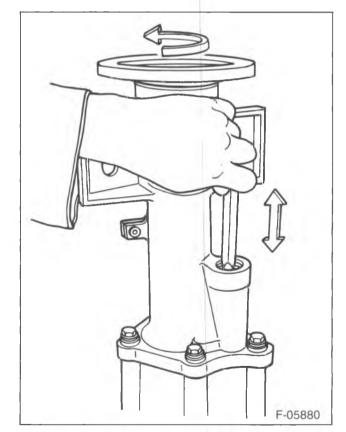


Figure 40—Checking the Shift Mechanism

4C4-20 K TRUCK FRONT AXLE

SPECIFICATIONS

TORQUE SPECIFICATIONS


FASTENER	N±m	Ft. Lbs.	In. Lbs.
Ring Gear Bolts	120	88	
Carrier Case Bolts	47	35	_
Axle Tube Bolts	40	30	
Actuator	22	16	
Front Axle Switch	5.0		45
Drain and Fill Plugs	33	24	—

AVAILABLE SHIM SIZES

Pinion Shaft Shims	
(K15-25 Models)0.020-0.024-inch	
0.025-0.029-inch	
0.030-0.034-inch	I
0.035-0.039-inch	I
(K35 Models)	I
0.6096-0.7112 mm	
0.7366-0.8382 mm	í -
0.8386-0.9398 mm	í -
Output Shaft Shims	
K15-25 Models	í -
K35 Models	

PINION PRELOAD AND BACKLASH

Pinion Preload	2.8 N m (15-25 in. lbs.)
Backlash	25 mm (0.003-0.010-in.)
(Preferred)	18 mm (0.005-0.007-in.)

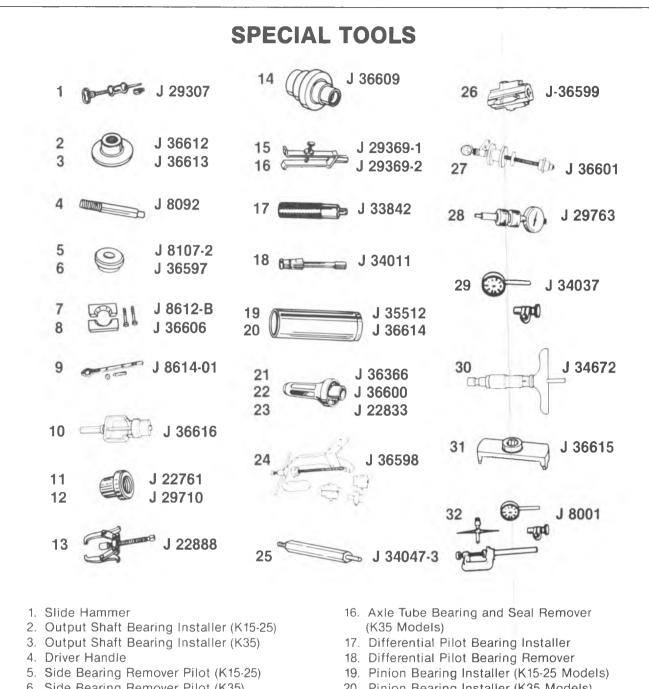

- 6. Side Bearing Remover Pilot (K35)
- 7. Pinion Bearing Remover (K15-25 Models)
- 8. Pinion Bearing Remover (K35 Models)
- 9. Pinion Flange Remover
- 10. Case Bushing Replacer
- 11. Differential Side Bearing Installer (K15-25 Models)
- 12. Differential Side Bearing Installer (K35 Models)
- 13. Differential Side Bearing Installer
- 14. Axle Tube Bearing Installer
- 15. Axle Tube Bearing and Seal Remover (K15-25 Models)

- 20. Pinion Bearing Installer (K35 Models)
- 21. Pinion Seal Installer
- 22. Axle Seal Installer (K15-25 Models)
- 23. Axle Seal Installer (K35 Models)
- 24. Holding Fixture and Pinion Service Tool
- 25. Dial Indicator Adapter
- 26. Side Bearing Adjuster Wrench
- 27. Pinion Setting Gage
- 29. Dial Indicator
- 30. Depth Gage
- 31. Side Bearing Adjuster Wrench
- 32. Dial Indicator Set

F-05792

4C4-22 K TRUCK FRONT AXLE

-

SECTION 5

BRAKES

The following notice applies to one or more steps in the assembly procedure of components in this portion of the manual as indicated at appropriate locations by the terminology NOTICE: See 'Notice' on page 5-1 of this section.

NOTICE: This fastener is an important attaching part in that it could affect the performance of vital components and systems, and/or could result in major repair expense, it must be replaced with one of the same part number or with an equivalent part if replacement becomes necessary. Do not use a replacement part of lesser quality or substitute design. Torque values must be used as specified during reassembly to assure proper retention of this part.

CONTENTS

SUBJECT

++

PAGE

draulic Booster	
3endix Hydro-Boost	1
ster Cylinders	4
Composite Master Cylinder	4
Cast Iron Master Cylinder	4
Bendix Master Cylinder	6
cuum Boosters	9
gle Diaphragm Vacuum Booster	9
ndem Diaphragm Vacuum Booster	11
ecifications	4
ecial Tools	5

HYDRAULIC BOOSTER

BENDIX HYRDO-BOOST

Remove or Disconnect (Figure 1)

Bendix Hydro Boost Model has identifying information stamped into the housing near the inlet line.

CAUTION: The accumulator contains compressed gas. Always use proper tools and follow recommended procedures or personal injury may result. Do not apply heat to accumulator. Do not attempt to repair an inoperative accumulator, always replace with a new accumulator. Dispose of an inoperative accumulator by drilling a ¹/16-inch diameter hole through the end of the accumulator can opposite the "O" ring.

Tools Required:

J 26889 Accumulator Compressor

- Place J 26889 over the end of the accumulator and install a nut onto the stud (figure 2).
- Depress the accumulator with a C-clamp.
- · Insert a punch into the hole on the housing.
- 1. Retainer (1)
 - Release the C-clamp.
 - Remove J 26889.
- 2. Accumulator (2) and O-ring (3).
- 3. Retainer (4).
- 4. Plug (5), O-ring (6) and spring (7) (figure 3).

- 5. Retainer (26).
- 6. Output pushrod (28), baffle (27), piston return spring (25) and retainer (24).
- Saw off the eyelet of the pedal rod (20).
- 7. Boot (19).
- 8. Nut (18) and bracket (17).
- 9. Bolts (9).
 - Separate the cover (16) from the housing (8).
- 10. Seals (14 and 15).
- 11. Piston assembly (22) and seal (23).
- 12. Spool valve (13).
- 13. Accumulator valve (11) (figure 4).
 - Make a wire hook to aid in the removal.
- 14. Return line fitting (12) and seal (10).

💾 Clean

All the parts with power steering fluid.

Inspect

- Spool valve and spool valve bore for corrosion, nicks and scoring. If found, replace the complete booster.
 Discoloration of the spool or bore is not harmful and is no cause for replacement.
- Housing and cover sealing surface for corrosion, or nicks.
- Tube seat in the housing for burrs, nicks or corrosion. Replace if needed (figures 5 and 6).

5-1

5-2 BRAKES

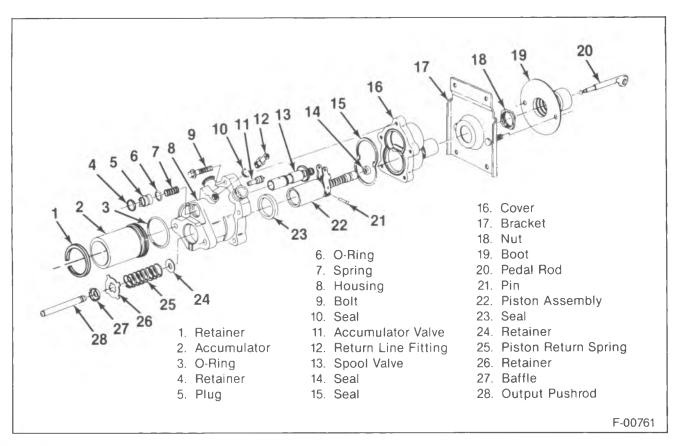


Figure 1—Hydro-Boost Components

Install or Connect (Figure 1)

Tools Required:

- J 26889 Accumulator Compressor
- J 24551-A Seal Protector
- J 25083 Seal Protector

NOTICE: For steps 8 and 9 see "Notice" on page 5-1 of this section.

• Lubricate all the seals and metal friction points with power steering fluid.

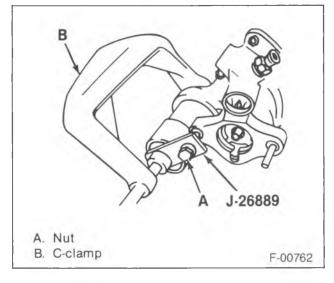


Figure 2—Removing the Accumulator

- 1. Seal (10) and return line fitting (12).
- 2. Accumulator valve (11).
- 3. Spool valve (13).
- 4. Seal (23) and piston assembly (22) by using J 24551-A or J 25083 (figure 7).
 - Lubricate the tool with clean power steering fluid.
- 5. Seal (14) onto the piston assembly (22).
- 6. Seal (15) onto the housing (8).
- 7. Cover (16).
- 8. Bolts (9).

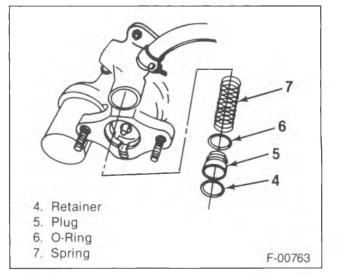


Figure 3—Removing the Plug and Spring

BRAKES 5-3

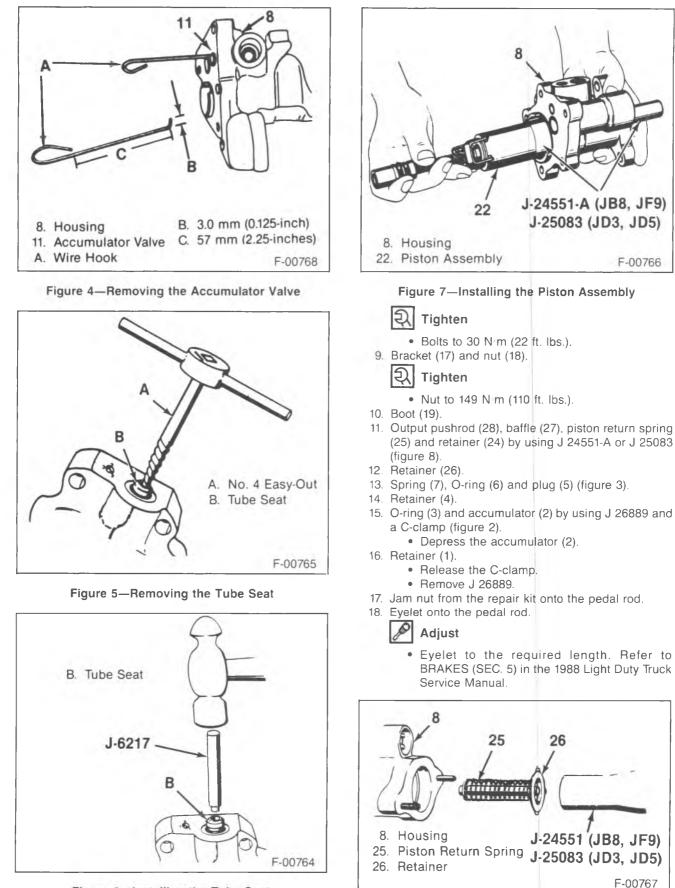


Figure 6-Installing the Tube Seat

Figure 8—Installing the Output Rod Retainer

5-4 BRAKES

MASTER CYLINDERS

COMPOSITE MASTER CYLINDER

The Delco-Moraine Composite Master Cylinder has identifying information stamped into the front outlet tube. The first and second digits are the build code. The third digit indicates the year it was built (a 5 means 1985 or a 6 means 1987). The last digits indicate the day it was built (271 means it was the 271st day of the production year).

NOTICE: Do not hone the master cylinder bore. When the brake master cylinder is overhauled, it is recommended that the cylinder body be replaced rather than "cleaned up" by honing the bore. The master cylinder has a hard, highly polished "bearingized" surface, which is produced by diamond boring followed by ball or roller burnishing under heavy pressure. Honing will destroy this surface which will cause rapid wear of rubber cups.

NOTICE: Do not use kerosene, gasoline, or any other unapproved solvents for cleaning or flushing master cylinder and components. The use of these as solvents or any other with a trace of mineral oil will damage rubber parts.

+ → Remove or Disconnect (Figures 9 and 10)

- 1. Cover (1).
- 2. Diaphragm (2).
- · Drain all the brake fluid from the reservoir.
- 3. Reservoir (3) and grommets (4) (figure 11).
 - · Clamp the mounting flange of the cylinder in a vise and pry the reservoir off with a bar.
- 4. Snap ring (11).
- 5. Primary piston assembly (12).

CAUTION: In the following step if air pressure is used to remove the secondary piston, place the open end of the cylinder bore approximately 25 mm (1-inch) from a padded workbench or other surface to catch the piston when it comes out of the bore. Apply low air pressure very carefully to ease the piston out of the bore. Never point the open end of the bore at anyone when applying air pressure. The piston may come out of the bore with considerable force and cause personal injury.

- 6. Secondary piston (9).
 - · With the rear port plugged apply a small amount of air pressure to the front port.
- 7. Seals (8 and 10).
- 8. Spring retainer (7) and spring (6).

Clean

- All the metal parts in denatured alcohol.
- All the rubber parts in clean brake fluid.
- Stained or discolored cylinder bore with crocus cloth.

Inspect

- Diaphragm for cuts, cracks, or a swollen condition.
- Cylinder bore for scoring or corrosion. If corrosion is present, replace the cylinder. Do not attempt to hone the bore.
- Reservoir for cracks.

++ Install or Connect (Figures 9 and 10)

- Lubricate the grommets, seals, and cylinder bore with clean brake fluid.
- 1. Spring (6) and spring retainer (7).
- 2. Seals (8 and 10) onto the secondary piston (9).
- 3. Secondary piston (9).
- 4. Primary piston assembly (12).
- 5. Snap ring (11).
 - · The primary piston must be compressed when installing the snap ring.
- 6. Grommets (4).
- 7. Reservoir (3) (figures 12 and 13).
 - · Press on the body while using a rocking motion.
- 8. Diaphragm (2) into the cover (1).
- 9. Cover (1).

CAST IRON MASTER CYLINDER

The Delco-Moraine Cast Iron Master Cylinder has identifying information stamped into the front outlet tube. The first and second digits are the build code. The third digit indicates the year it was built (a 5 means 1985 or a 7 means 1987). The last digits indicate the day it was built (271 means it was the 271st day of the production year).

NOTICE: Do not hone the master cylinder bore. When the brake master cylinder is overhauled, it is recommended that the cylinder body be replaced rather than "cleaned up" by honing the bore. The master cylinder has a hard, highly polished "bearingized" surface, which is produced by diamond boring followed by ball or roller burnishing under heavy pressure. Honing will destroy this surface which will cause rapid wear of rubber cups.

NOTICE: Do not use kerosene, gasoline, or any other unapproved solvents for cleaning or flushing master cylinder and components. The use of these as solvents or any other with a trace of mineral oil, will damage rubber parts.



+> Remove or Disconnect (Figure 14)

- 1. Cover (22).
- 2. Diaphragm (23).
- Drain all the brake fluid from the reservoir.
- 3. Snap ring (31).
- 4. Primary piston assembly (30) (figure 15).

BRAKES 5-5

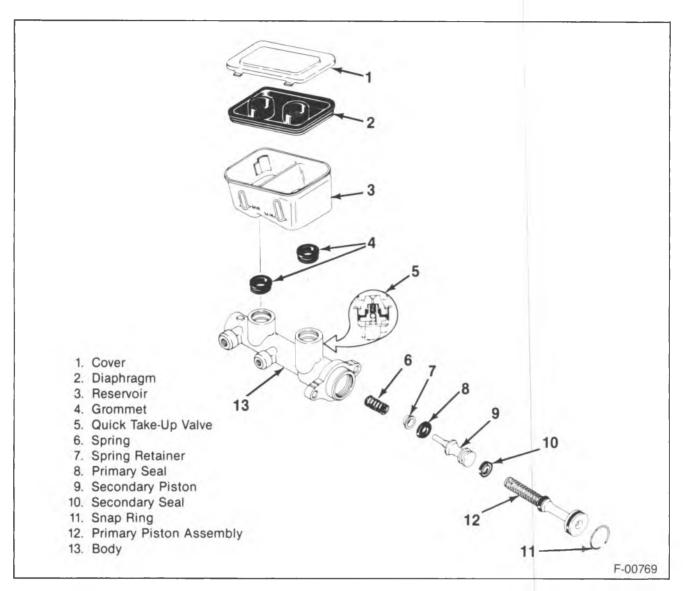


Figure 9—Composite Master Cylinder Components

CAUTION: In the following step if air pressure is used to remove the secondary piston, place the open end of the cylinder bore approximately 25 mm (1-inch) from a padded workbench or other surface to catch the piston when it comes out of the bore. Apply low air pressure very carefully to ease the piston out of the bore. Never point the open end of the bore at anyone when applying air pressure. The piston may come out of the bore with considerable force and cause personal injury.

- 5. Secondary piston (28).
 - With the rear port plugged apply a small amount of air pressure to the front port.
- 6. Secondary seals (29) from the secondary piston (28) (figure 16).
- 7. Spring retainer (26) and primary seal (27).
- 8. Spring (25).
- 9. Tube seats (if necessary) (figure 17).
 - Thread a self-tapping screw into the tube seat and remove with locking jaw pliers.

Clean

- All the metal parts in denatured alcohol.
- All the rubber parts in clean brake fluid.
- Stained or discolored cylinder bore with crocus cloth.

Inspect

- Diaphragm for cuts, cracks, or a swollen condition.
- Cylinder bore for scoring or corrosion. If corrosion is present, replace the cylinder. Do not attempt to hone the bore.

Install or Connect (Figure 14)

- Lubricate all the seals and cylinder bore with clean brake fluid.
- 1. Spring (25).
- 2. Primary seal (27) and spring retainer (26) onto the secondary piston (28) (figure 16).
- 3. Secondary seals (29) onto the secondary piston (28).
- 4. Secondary piston (28).

5-6 BRAKES

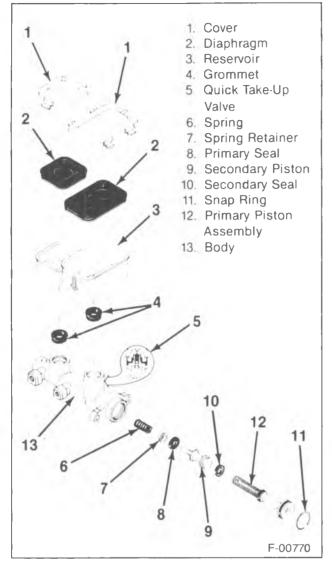


Figure 10—Composite Master Cylinder Components

- 5. Primary piston assembly (30).
- 6. Snap ring (31).
 - The primary piston must be compressed to install the snap ring.
- 7. Diaphragm (23) into the cover (22).
- 8. Cover (22).

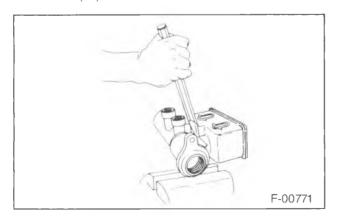


Figure 11—Removing the Reservoir

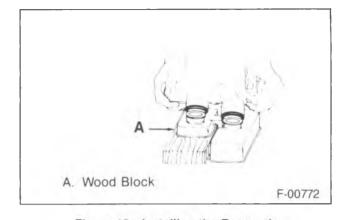


Figure 12-Installing the Reservoir

- 9. Tube seats (if removed).
 - Seat the tube seats with a spare brake tube nut (figure 18).

BENDIX MASTER CYLINDER

The Bendix Master Cylinder has identifying information stamped into the front surface of the body. The first digit indicates the plant where it was built. The second digit indicates the year it was built (a 5 means 1985 or a 6 means 1986). The last digits indicate the day it was built (271 means the 271st day of the production year).

NOTICE: Do not hone the master cylinder bore. When the brake master cylinder is overhauled, it is recommended that the cylinder body be replaced rather than "cleaned up" by honing the bore. The master cylinder has a hard, highly polished "bearingized" surface, which is produced by diamond boring followed by ball or roller burnishing under heavy pressure. Honing will destroy this surface which will cause rapid wear of rubber cups.

NOTICE: Do not use kerosene, gasoline, or any other unapproved solvents for cleaning or flushing master cylinder and components. The use of these as solvents or any other with a trace of mineral oil will damage rubber parts.

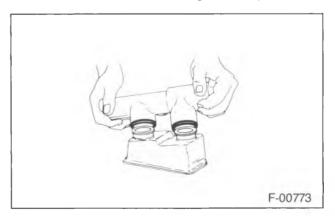


Figure 13—Installing the Reservoir

BRAKES 5-7

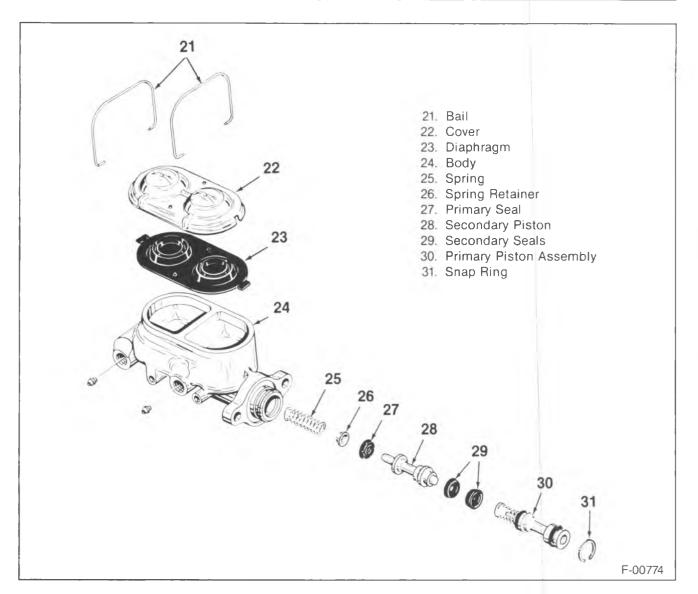


Figure 14—Cast Iron Master Cylinder Components

Remove or Disconnect (Figure 19)

- 1. Cover (41).
- 2. Diaphragm (42).
- Drain all the brake fluid from the reservoir.
- 3. Bolts (54) and reservoir (44).
- 4. O-ring (55) and compensating valve seals (45).
- 5. Valve poppets (46) and springs (47).
 - Depress the primary piston with a smooth rounded end tool.
- 6. Snap ring (52).
- 7. Primary piston assembly (51) and piston return spring (50).

CAUTION: In the following step if air pressure is used to remove the secondary piston, place the open end of the cylinder bore approximately 25 mm (1-inch) from a padded workbench or other surface to catch the piston when it comes out of the bore. Apply low air pressure very carefully to ease the piston out of the bore. Never point the open end of the bore at anyone when applying air pressure. The piston may come out of the bore with considerable force and cause personal injury.

- 8. Secondary piston assembly (49).
 - With the front port plugged, apply a small amount of air pressure to the front compensating valve port.

9. Secondary spring (48).



- All the metal parts in denatured alcohol.
- All the rubber parts in clean brake fluid.

5-8 BRAKES

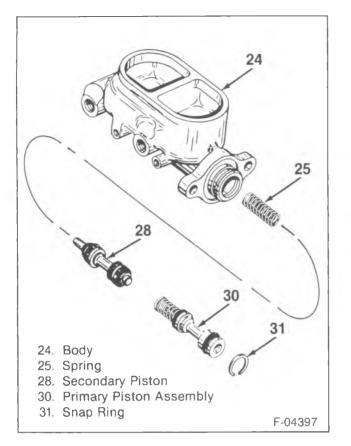


Figure 15-Cast Iron Master Cylinder Components

 A stained or discolored cylinder bore with crocus cloth.

10 Inspect

- Diaphragm for cuts, cracks, or a swollen condition.
- Cylinder bore for scoring or corrosion. If corrosion is present, replace the cylinder. Do not attempt to hone the bore.



Install or Connect (Figure 19)

- · Lubricate all the seals and cylinder bore with clean brake fluid.
- 1. Secondary spring (48)
- 2. Secondary piston assembly (49).
- 3. Piston return spring (50)

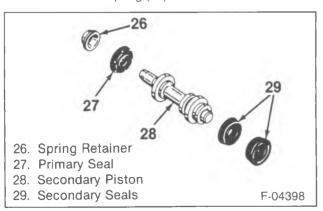


Figure 16—Secondary Piston Assembly

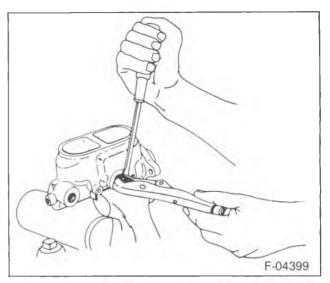


Figure 17-Removing Tube Seats

- 4. Primary piston assembly (51) and snap ring (52).
 - The primary piston must be depressed to install the snap ring.
- 5. O-ring (55) and springs (47).
- 6. Valve poppets (46) and compensating valve seals (45).
 - Depress and hold the primary piston assembly with a smooth rounded end tool.
- 7. Reservoir (44).

NOTICE: See "Notice" on page 5-1 of this section.

- 8. Bolts (54).
 - 乳 Tighten
- Bolts to 18 N-m (13 ft. lbs.).
- 9. Diaphragm (42) into the cover (41).
- 10. Cover (41).

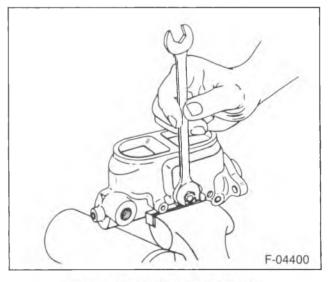


Figure 18—Installing Tube Seats

BRAKES 5-9

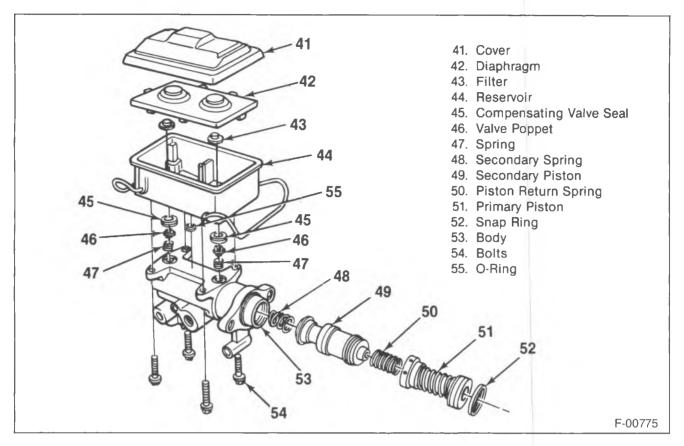


Figure 19—Bendix Master Cylinder Components

VACUUM BOOSTERS

Delco-Moraine Vacuum Boosters have a build date on a small paper label glued onto the front housing. The first digit indicates the year it was built (a 5 means 1985 or a 6

means 1986). The last digits indicate the day it was built (271 means the 271st day of production year).

SINGLE DIAPHRAGM VACUUM BOOSTER



Remove or Disconnect (Figure 20)

Tool Required:

J 23456 Power Brake Booster Disassembly and Reassembly Fixture

- 1. Boot (1) and silencer (2).
- 2. Vacuum check valve (3) and grommet (4).
- 3. Front housing seal (5).
- Scribe a mark across the front and rear housings to aid in assembly.
- Use J 23456 to apply force in a counter clockwise direction to unlock the housings (figure 21).
- 4. Return spring (9) and power piston group.
- 5. Power piston bearing (6) from the rear housing (7).
- 6. Reaction body retainer (25).
- 7. Piston rod (10) and reaction retainer (11).
- 8. Filter (12) using an awl or similar tool.
- 9. Power piston and pushrod assembly (16).

- Grasp the outside edge of the diaphragm support (15) and diaphragm (14). Hold the pushrod (19) down against a hard surface.
- Use a slight force or impact to dislodge the diaphragm retainer (13).
- 10. Diaphragm (14) from the diaphragm support (15).



- All parts for corrosion, nicks, cracks, cuts, scoring, distortion or excessive wear. Replace parts as necessary.
- Use crocus cloth to polish away minor corrosion of the housings or diaphragm support.



- All parts in clean denatured alcohol.
 - Do not immerse the power piston and pushrod assembly in alcohol.
- Dry with unlubricated compressed air.

5-10 BRAKES

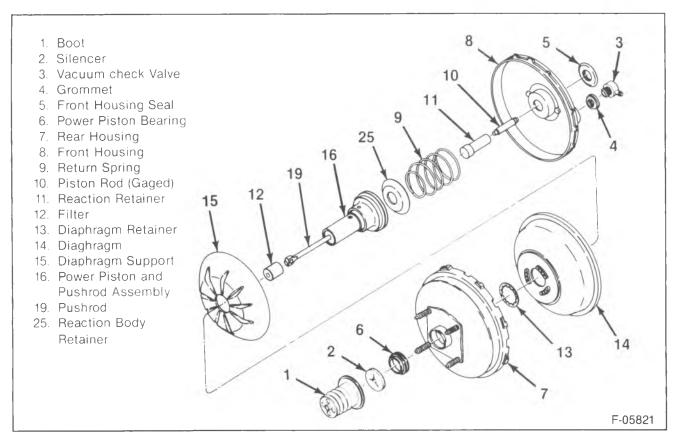


Figure 20—Single Diaphragm Vacuum Booster Components

Install or Connect (Figure 20)

Tools Required:

- J 23456 Power Brake Booster Disassembly and Reassembly Tool
- J 28458 Power Piston Seal Protector
- J 22647 Pushrod Height Gage
- 1. Diaphragm (14) into the diaphragm support (15).
 - Lubricate the inside diameter of the diaphragm lip with a thin layer of silicone grease.
- 2. Diaphragm and diaphragm support onto the power piston and pushrod assembly.
- 3. New diaphragm retainer (13) (figure 22).
 - Seat the retainer using J 28458.
- 4. Filter (12), reaction retainer (11) and piston rod (10).
- 5. Reaction body retainer (25).

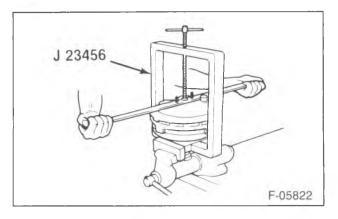


Figure 21—Unlocking and Locking Booster

- 6. Power piston bearing (6) into the rear housing.
 - Lubricate the inside and outside of the bearing with silicone grease.
- 7. Power piston group into the rear housing (7).
- 8. Return spring (9).
- 9. Front housing to the rear housing.
 - Align the marks made during disassembly.
 - Use J 23456 to apply force in a clockwise direction to lock the front and rear housings.
 - Stake the housing at two tabs 180 degrees apart (figure 23).
 - Do not stake a tab that has previously been staked.
 - Assembly can be aided by connecting a vacuum source to the booster.
- 10. Grommet (4) and vacuum check valve (3).

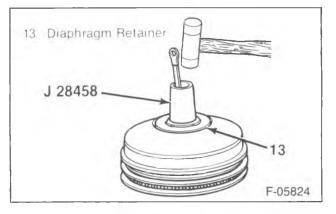


Figure 22—Installing the Diaphragm Retainer

BRAKES 5-11

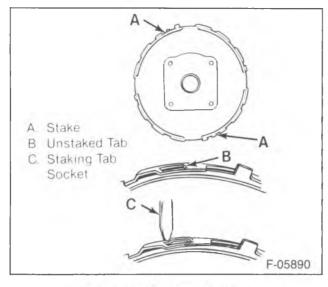


Figure 23-Staking the Tabs

 Lubricate the inside and outside diameters of the grommet and front housing seal with a thin layer of silicone.

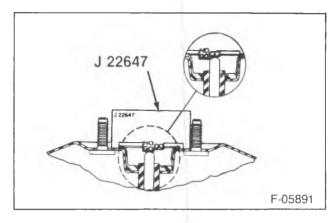


Figure 24—Gaging the Piston Rod

- 11. Front housing seal (5).
- 12. Silencer (2) and boot (1).
 - Gage the piston rod using J 22647 (figure 24). If not within limits, obtain a service adjustable piston rod.

TANDEM DIAPHRAGM VACUUM BOOSTER

Remove or Disconnect (Figure 25)

Tool Required:

J 23456 Power Brake Booster Disassembly and Reassembly Fixture

- 1. Boot (1) and silencer (2)
- 2. Vacuum check valve (3) and grommet (4).
- 3. Front housing seal (7).
- Scribe a mark on the front and rear housings to aid in assembly.
- Unlock the front and rear housings using J 23456 (figure 21).
- Return spring (11) and power piston group (38) (figure 26).
- 5. Primary piston bearing (8) from the rear housing (9).
- 6. Piston rod (12), reaction retainer (13) and power head silencer (14).
- Power piston assembly (41) along with the pushrod (32) (figure 27).
 - Grasp the assembly at the outside edge of the housing divider (19) and diaphragms (16 and 20).
 - Hold with the pushrod (32) down against a hard surface.
 - Use a slight force or impact to dislodge the diaphragm retainer (15).
- 8. Primary diaphragm (16) and primary support plate (17) from the housing divider (19).
- 9. Primary diaphragm (16) from the primary support plate (17).
- 10. Secondary diaphragm (20) and secondary support plate (21) from the housing divider (19).
- Secondary piston bearing (18) from the housing divider (19).

- 12. Secondary diaphragm (20) from the secondary support plate (21).
- 13. Reaction body retainer (24).
- 14. Reaction body (25).
- 15. Reaction disc (22) and reaction piston (23) from the reaction body (25).
- 16. Air valve spring (26) and reaction bumper (27) from the end of the air valve pushrod (32).
- 17. Retaining ring (28) from the air valve pushrod assembly (32).
- Air valve pushrod assembly (32) by inserting a screwdriver through the pushrod eyelet and pulling it straight out.
 - Considerable force will be required.
- 19. Filter (29), retainer (30) and O-ring (31) from the air valve pushrod assembly (32).

Inspect

- All parts for corrosion, nicks, cracks, cuts, scoring, distortion or excessive wear. Replace parts as necessary.
- Use crocus cloth to polish away minor corrosion of the housings or diaphragm support.

Clean

- · All parts in clean denatured alcohol.
 - Do not immerse the power piston and pushrod assembly in alcohol.
- Dry with unlubricated compressed air.

Install or Connect (Figure 25)

Tools Required:

J 23456 Power Brake Booster Disassembly and Reassembly Fixture

5-12 BRAKES

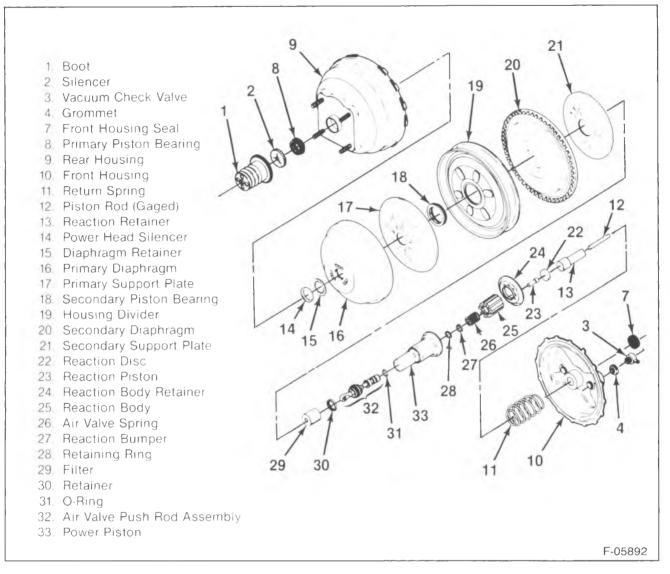


Figure 25—Tandem Vacuum Booster Components

J 28458 Power Piston Seal Protector J 22647 Pushrod Height Gage

- 1. Lubricated O-ring (31) onto the air valve pushrod assembly (32).
- Air valve pushrod assembly (32) into the power piston (41).
- 3. Retainer (30) and seat.
- Filter (29) over the pushrod eyelet and into the power piston (41) (figure 27).
- 5. Retaining ring (28) onto the air valve pushrod assembly (32).
- 6. Reaction bumper (27) and air valve spring (26).
- 7. Reaction piston (23) and reaction disc (22) into the reaction body (25).
- 8. Reaction body (25).
- 9. Reaction body retainer (24).
- Lubricate the inside diameter of the secondary diaphragm (20) lip, inside diameter of the primary diaphragm (16) lip and the secondary piston bearing (18) with a thin layer of silicone grease.
- 10. Secondary diaphragm (20) into the secondary support plate (21).

- 11. Secondary diaphragm (20) and support plate (21) over the power piston assembly (41) and pushrod (32) (figure 28).
 - Use J 28458 as a guide to protect the power piston.
- 12. Secondary piston bearing (18) into the housing divider (19) with the flat surface of the bearing on the same side as the six raised lugs on the divider.
- Secondary piston bearing (18) and housing divider (19) over the power piston assembly (41) and pushrod (32). Use J 28458 as a guide (figure 29).
- 14. Primary diaphragm (16) into the primary support plate (17).
- Fold the primary diaphragm (16) up, away from the primary support plate (17).
- 15. Primary diaphragm (16) and support plate (17) over the power piston assembly (41) and pushrod (32).
- Fold the primary diaphragm (16) back into position and pull the outside edge of the diaphragm over the formed flange of the housing divider (19).

BRAKES 5-13

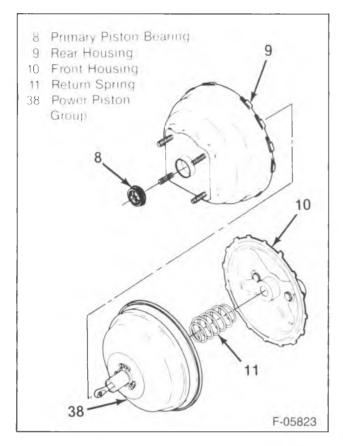


Figure 26—Booster Inner Components

- Check that the beads on the secondary diaphragm (20) are seated evenly around the complete circumference.
- 16. New diaphragm retainer (15) and seat using J 28458.
- 17. Silencer (14), reaction retainer (13) and piston rod (12).
- Lubricate the inside and outside diameters of primary piston bearing (8) with silicone grease.
- 18. Primary piston bearing (8) into the rear housing (9).
- 19. Power piston group (38) into the rear housing (9).
- 20. Return spring (11).
 - Align the scribe marks on housings (9 and 10).
 - Lock the front and rear housings using J 23456 (figure 21).
 - Stake the housing after locking. Stake two tabs 180 degrees apart (figure 23).
 - Do not stake a tab that has been previously staked.
 - Assembly can be aided by connecting a vacuum source to the booster.
 - Lubricate the inside and outside diameters of the grommet (4) and front housing seal (7) with a thin layer of silicone grease.
- 21. Grommet (4) and vacuum check valve (3).
- 22. Front housing seal (7).
- 23. Silencer (2) and boot (1).
 - Gage the piston rod (figure 24).

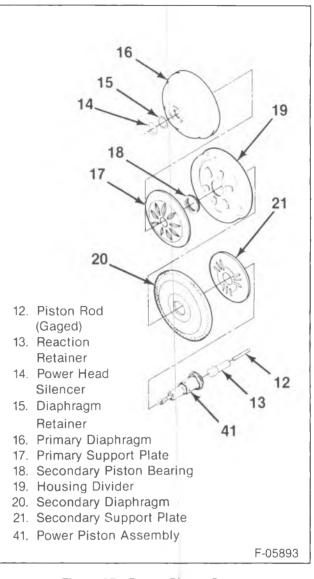


Figure 27—Power Piston Group

• Use J 22647. If not within limits, obtain a service adjustable piston rod.

5-14 BRAKES

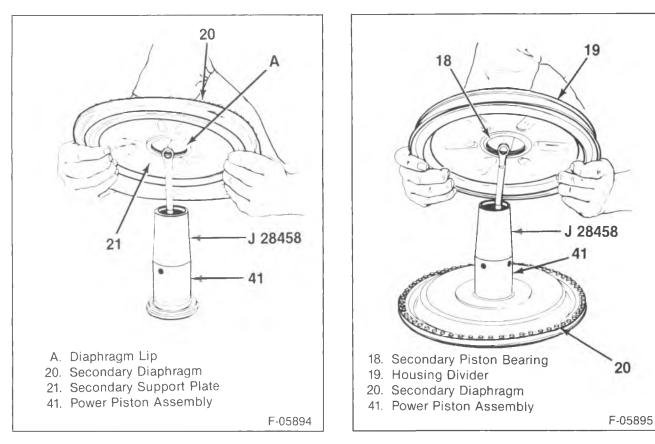


Figure 28—Assembling the Secondary Diaphragm and Support


Figure 29—Assembling the Housing Divider

SPECIFICATIONS

	N·m	Ft. Lbs.
Hydro-Boost Housing to Cover Bolts	30	22
Hyde Roost Nut	149	110

BRAKES 5-15

SPECIAL TOOLS

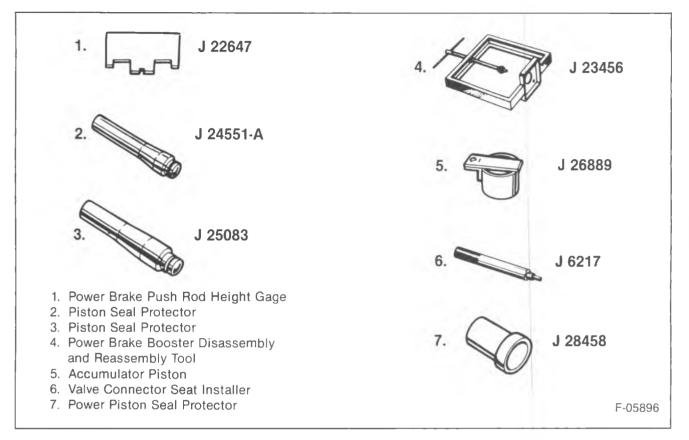

5-16 BRAKES

SECTION 6

ENGINE

CONTENTS

SUBJECT

General Engine Mechanical. .6A- 1 2.5 Liter L4 .6A1- 1 2.8 Liter V6 .6A2- 1 4.3 Liter V6 .6A3- 1 4.8 Liter L6 .6A4- 1 V8 Engine .6A5- 1 6.2 Liter Diesel .6A5- 1 Model IMEF Carburetor .6C1- 1 Model M4MEF Carburetor .6C2- 1 Engine Electrical .6D- 1

SECTION 6A

GENERAL ENGINE MECHANICAL

CONTENTS

SUBJECT

General Information	6A-	1
Statement on Cleanliness and Care	6A-	1
Use of RTV Sealer and Anaerobic Gasket Eliminator	6A-	2
Replacing Engine Gaskets	6A-	2
Cylinder Bores, Pistons, Rings, and Connecting Rods		
Measuring Cylinder Bore Taper and Out-of-Round (All Models)	6A-	2
Cylinder Bore Reconditioning (2.5 L Engines)		
Cylinder Bore Reconditioning (2.8 L Engines)		
Cylinder Bore Reconditioning (All Except 2.5 L and 2.8 L Engines)		
Boring	6A-	4
Honing		
Piston and Connecting Rod Assemblies	6A-	5
Piston Selection (2.5 L and 2.8 L Engines)	6A-	8
Piston Selection (All Except 2.5 L and 2.8 L Engines)	6A-	8
Camshaft Bearings		
Camshaft Bearing Replacement (2.5 L and 6.2 L Engines)		
Camshaft Bearing Replacement (All Except 2.5 L and 6.2 L Engines)	6A-	12
Hydraulic Lifters		
Inspection Before Disassembly	6A-	13
Hydraulic Lifter Overhaul.		
Valve Lifter Leak-Down Rate Test (Flat Type Lifters Only)	6A-	15
Cylinder Head	6A-*	16
Disassembly	6A-	16
Cleaning and Inspection	6A-*	16
Repair	6A-*	17
Assembly	6A-*	18
Measuring Main Bearing Clearance		
Measuring Connecting Rod Bearing Clearance	6A-;	20
Special Tools		22

PAGE

PAGE

6A-2 GENERAL ENGINE MECHANICAL

GENERAL INFORMATION

STATEMENT ON CLEANLINESS AND CARE

- An engine is a combination of many machined, honed, polished and lapped surfaces with very fine tolerances.
- Whenever valve train components, cylinder head, cylinder, crankshaft, or connecting rod components are removed for service, they should be retained in order. At the time of installation, they should be installed in the same locations and with the same mating surfaces as when removed.
- Any time air cleaner, carburetor, or TBI unit is removed, the intake opening must be covered. If a diesel engine is being serviced, the recommended cover (J 29664-2) should be used. This will protect against the entrance of foreign material which could follow the intake passage into the cylinder and cause extensive damage when the engine is started.
- When any internal engine parts are serviced, care and cleanliness are important. A liberal coating of engine oil should be applied to friction areas during assembly to protect and lubricate the surfaces on initial operation. Throughout this section, it should be understood that proper cleaning and protection of machined surfaces and friction areas is part of the repair procedure. This is considered standard shop practice even if not specifically stated.
- On diesel engines, whenever the fuel injection pump or lines are removed or disconnected, care must be taken to prevent the entry of dirt into the pump, lines, and injectors. The entry of even small amounts of dirt or other foreign material into the fuel injection system may cause serious damage.

USE OF RTV SEALER AND ANAEROBIC GASKET ELIMINATOR

Two types of sealer are commonly used in engines covered by this manual. These are RTV sealer and anaerobic "gasket eliminator" sealer.

It is important that these sealers be applied properly and in the proper place to prevent oil leaks. THE TWO TYPES OF SEALER ARE NOT INTERCHANGEABLE. Use the sealer recommended in the procedure.

- RTV (room temperature vulcanizing) sealer is used where a non-rigid part is assembled to a rigid part. Common examples are oil pans and rocker arm covers.
- Anaerobic gasket eliminator hardens in the absence of air. This sealer is used where two rigid parts (such as castings) are assembled together. When two rigid parts are disassembled and no sealer or gasket is readily noticeable, the parts were probably assembled using gasket eliminator.

USING RTV SEALER

- 1. Do not use RTV when extreme temperatures are expected, such as exhaust manifold, head gasket or where gasket eliminator is specified.
- 2. When separating components sealed with RTV, use a rubber mallet and "bump" the part sideways to shear the RTV sealer. "Bumping" should be done at bends or reinforced areas to prevent distortion of parts. RTV is weaker in shear (lateral) strength than in tensile (vertical) strength.

Attempting to pry or pull components apart may result in damage to the part.

- Surfaces to be resealed must be clean and dry. Remove all traces of oil and RTV. Clean with a chlorinated solvent such as carburetor spray cleaner. Do not use petroleum cleaners such as mineral spirits; they leave a film onto which RTV will not stick.
- 4. Apply RTV to one of the clean surfaces. Use a bead size as specified in the procedure. Run the bead to the inside of any bolt holes. Do not allow the sealer in any blind threaded holes, as it may prevent the bolt from seating properly or cause damage when the bolt is tightened.
- Assemble while RTV is still wet (within 3 minutes). Do not wait for RTV to skin over.
- 6. Torque bolts to specifications. Do not over-torque.

USING ANAEROBIC GASKET ELIMINATOR

- 1. Clean surfaces to be resealed with a chlorinated solvent to remove all oil, grease and old material.
- 2. Apply a continous bead of gasket eliminator to one flange.
- 3. Spread bead evenly with your finger to get a uniform coating on the complete flange.
- 4. Assemble parts in the normal manner and torque immediately to specifications.

Important

• Anaerobic sealed joints that are partially torqued and allowed to cure more than five minutes may result in incorrect shimming of the joint.

REPLACING ENGINE GASKETS

CAUTION: Composite type gaskets are used in some areas of the engine assembly. These gaskets have a thin metal core. Use caution when removing or handling composite gaskets to help avoid personal injury.

CYLINDER BORES, PISTONS, RINGS, AND CONNECTING RODS

MEASURING CYLINDER BORE TAPER AND OUT-OF-ROUND (ALL MODELS)

Tool Required:

J 8087 Cylinder Bore Gage (or equivalent)

- If one or more cylinder bores are rough, scored or worn beyond limits, it will be necessary to smooth or true up such bores to fit new pistons.
- No attempt should be made to cut down oversize pistons to fit cylinder bores as this will destroy the surface treatment and affect the weight. The smallest possible oversize service pistons should be used and the cylinder bores should be honed to size for proper clearances.
- 1. Refer to "Specifications" in the proper section for tolerances.
- Set the gage so that the thrust pin must be forced in about 7 mm (¹/₄-inch) to enter the gage in the cylinder bore.
- 3. Center the gage in the cylinder and turn the dial to "0."
- 4. Carefully work the gage up and down the cylinder to determine taper and turn it to different points around the cylinder wall to determine the out-of-round condition (figure 1). Measure the bore both parallel to and at right angles to the engine centerline. Measure at the top, middle and bottom of the bore and note the readings.
- 5. Recondition the cylinder bore as necessary, as outlined later.

CYLINDER BORE RECONDITIONING (2.5 L ENGINES)

- 1. Measure the cylinder bore for out of round and taper as outlined previously.
- Refer to figure 2. Measure dimension "A" at 13 mm (1/2-inch) below the head gasket surface. Measure dimension "B" at 100 mm (4-inches) below the head gasket surface.

Cylinder bores can be measured by setting the cylinder gage dial at zero in the cylinder at the point of desired measurement. Lock the dial indicator at zero before removing from the cylinder, and measure across the gage contact points with outside micrometer, with the gage at the same zero setting when removed from the cylinder (figure 3).

3. If dimension "A" is larger than dimension "B" by 0.13 mm (0.005-inch), the cylinder should be bored for oversized piston and rings.

If relatively few bores require correction, it will not be necessary to rebore all cylinders to the same oversize in order to maintain engine balance. All oversize service pistons are held to the same weights as standard size pistons.

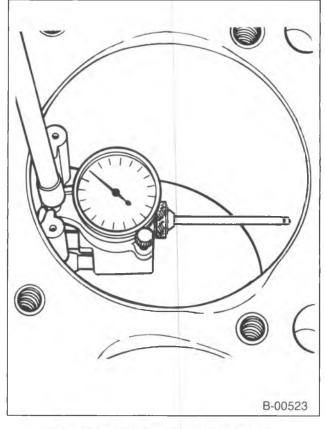


Figure 1—Checking the Cylinder Bore

- Fine vertical scratches made by ring ends will not, by themselves, cause excessive oil consumption; therefore, honing to remove them is unnecessary.
- 5. If the bore is glazed but otherwise serviceable, break the glaze lightly with a hone and replace the piston rings. Refer to "Honing." Make sure the honing stones are clean, sharp and straight. Move the hone slowly up and down to produce a 45 degree cross-hatch pattern. Clean the bore thoroughly with soap and water. Dry and rub in clean engine oil, then remeasure.

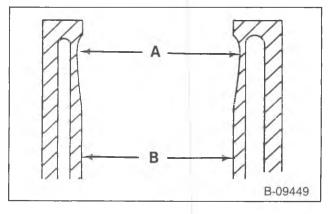


Figure 2—Typical Wear Pattern

6A-4 GENERAL ENGINE MECHANICAL

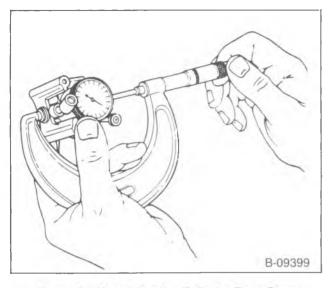


Figure 3-Measuring the Cylinder Bore Gage

6. If honing is not required, the cylinder bores should be cleaned with a hot water and detergent wash. Apply clean engine oil to the bore after cleaning.

CYLINDER BORE RECONDITIONING (2.8 L ENGINES)

- 1. Measure the cylinder bore for out of round and taper as outlined previously.
- Refer to figure 2. Measure for wear at the top of the bore (point "A"), and at the bottom (point "B").

Cylinder bores can be measured by setting the cylinder gage dial at zero in the cylinder at the point of desired measurement. Lock the dial indicator at zero before removing from the cylinder, and measure across the gage contact points with outside micrometer, with the gage at the same zero setting when removed from the cylinder (figure 3).

3. If wear at the top of the cylinder does not exceed 0.10 mm (0.004-inch) out-of-round, honing is recommended for truing the bore. If wear or out-of-round exceeds these limits, the bore should be trued up with a boring bar of the fly cutter type, then finish honed.

If relatively few bores require correction, it will not be necessary to rebore all cylinders to the same oversize in order to maintain engine balance. All oversize service pistons are held to the same weights as standard size pistons.

- Fine vertical scratches made by ring ends will not, by themselves, cause excessive oil consumption; therefore, honing to remove them is unnecessary.
- 5. If the bore is glazed but otherwise serviceable, break the glaze lightly with a hone and replace the piston rings. Refer to "Honing." Make sure the honing stones are clean, sharp and straight. Move the hone slowly up and down to produce a 20 to 32 degree cross-hatch pattern. Clean the bore thoroughly with soap and water. Dry and rub in clean engine oil, then re-measure.

6. If honing is not required, the cylinder bores should be cleaned with a hot water and detergent wash. Apply clean engine oil to the bore after cleaning.

CYLINDER BORE RECONDITIONING (ALL EXCEPT 2.5 L AND 2.8 L ENGINES)

- 1. Measure the cylinder bore for out of round and taper as outlined previously.
- 2. Refer to figure 2. Measure for wear at the top of the bore (point "A") and at the bottom (point "B").

Cylinder bores can be measured by setting the cylinder gage dial at zero in the cylinder at the point of desired measurement. Lock the dial indicator at zero before removing from the cylinder, and measure across the gage contact points with outside micrometer, with the gage at the same zero setting when removed from the cylinder (figure 3).

- 3. If the cylinders are found to exceed the specified out-of-round or taper, honing or boring will be necessary. Any cylinders that were found to have less than 0.13 mm (0.005-inch) wear or taper may not entirely clean up when fitted to a high limit piston. If it is desired to entirely clean up the bore in these cases, it will be necessary to rebore for an oversize piston. If more than 0.13 mm (0.005-inch) taper or wear, they should be bored and honed to the smallest oversize that will permit complete resurfacing of all cylinders.
- Fine vertical scratches made by ring ends will not, by themselves, cause excessive oil consumption; therefore, honing to remove them is unnecessary.
- 5. If the bore is glazed but otherwise serviceable, break the glaze lightly with a hone and replace the piston rings.

Make sure the honing stones are clean, sharp and straight. Move the hone slowly up and down to produce a 45 to 65 degree cross-hatch pattern. Clean the bore thoroughly with soap and water. Dry and rub in clean engine oil, then re-measure.

6. If honing is not required, the cylinder bores should be cleaned with a hot water and detergent wash. Apply clean engine oil to the bore after cleaning.

BORING

- Before the honing or reboring operation is started, measure all new pistons with the micrometer contacting at points exactly 90 degrees from the piston pin centerline. Some pistons must be measured at a specified distance from the piston crown. Refer to the proper section for additional instructions. Then select the smallest piston for the first fitting. The slight variation usually found between pistons in a set may provide for correction in case the first piston is fitted too free.
- Before using any type of boring bar, the top of the cylinder block should be filed to remove any dirt or burrs. This is very important. If not checked, the

boring bar may be tilted which would result in the rebored cylinder wall not being at right angles to the crankshaft.

- 3. The instructions furnished by the manufacturer of the equipment being used should be carefully followed.
- 4. When reboring cylinders, all crankshaft bearing caps must be in place and tightened to the proper torque to avoid distortion of bores in the final assembly. Always be sure the crankshaft is out of the way of the boring cutter when boring each cylinder. Crankshaft bearings and other internal parts must be covered or taped to protect them during the boring or honing operation.
- 5. When taking the final cut with a boring bar, leave 0.03 mm (0.001-inch) on the diameter for finish honing to give the required position to the cylinder clearance specifications. (The honing or boring operation must be done carefully so that the specified clearance between pistons, rings, and cylinder bores is maintained.)

Important

• Refer to the proper section for additional information.

HONING

- When the cylinders are to be honed, follow the hone manufacturer's recommendations for the use of the hone and cleaning and lubrication during honing. Use only clean, sharp stones of the proper grade for the amount of material to be removed. Dull, dirty stones cut unevenly and generate excessive heat. When using coarse or medium grade stones use care to leave sufficient metal so that all stone marks may be removed with the fine stones used for finishing to provide proper clearance.
- Occasionally during the honing operation, the cylinder bore should be thoroughly cleaned and the piston selected for the individual cylinder check for correct fit.
- 3. When honing to eliminate taper in the cylinder, full strokes of the hone in the cylinder should be made in addition to checking measurement at the top, middle and bottom of the bore repeatedly.

NOTICE: Handle the pistons with care and do not attempt to force them through the cylinder until the cylinder has been honed to the correct size as the piston can be distorted through careless handling.

- 4. When finish honing a cylinder bore to fit a piston, the hone should be moved up and down at a sufficient speed to obtain very fine uniform surface finish marks in a cross-hatch pattern of the specified angle.
 - 2.5 L: 45 degrees
 - 2.8 L: 20 to 32 degrees
 - All others: 45 to 65 degrees
- 5. The finish marks should be clean but not sharp, free from imbedded particles and torn or folded metal.

- 6. By measuring the piston to be installed at the sizing point specified in the proper section, and adding the average of the clearance specification, the finish hone cylinder measurement can be determined. It is important that both the block and piston be measured at normal room temperature.
- 7. It is of the greatest importance that refinished cylinder bores are trued up to have the less than the specified out-of-round or taper. Each bore must be final honed to remove all stone or cutter marks and provide a smooth surface.
- 8. Refer to "Specifications" in the proper section for piston to bore clearance tolerances.
- 9. After final honing and before the piston is checked for fit, clean the bores with hot water and detergent. Scrub with a stiff bristle brush and rinse thoroughly with hot water. It is essential that a good cleaning operation be performed. If any of the abrasive material is allowed to remain in the cylinder bores, it will wear the new rings and cylinder bores in addition to the bearings lubricated by the contaminated oil. After washing, the dry bore should then be brushed clean with a power-driven fiber brush.
- 10. Permanently mark the piston for the cylinder to which it has been fitted.
- 11. Apply clean engine oil to each bore to prevent rusting.

PISTON AND CONNECTING ROD ASSEMBLIES

DISASSEMBLY (ALL EXCEPT 6.2 L ENGINES)

Remove or Disconnect (Figures 4, 5 and 6)

Tools Required

J 25220 Ring Expander (or equivalent) J 24086 Piston Pin Remover and Installer

- 1. Piston rings. Use J 25220 (or equivalent) (figure 5). In most cases the rings should be discarded and replaced with new ones at assembly.
- Connecting rod bearing inserts. If the inserts are to be reused, place them in a rack so they may be reinstalled in their original connecting rod and cap.
- 3. Piston pin (figure 6).
 - Place the piston/connecting rod on support fixture J 24086-20. Make sure the connecting rod is fully supported. Use J 24086-900 and J 24086-280 for 2.8 L pistons.
 - Place remover J 24086-8 (J 24086-88A for 2.8 L pistons) on the support fixture.
 - · Press out the piston pin.

DISASSEMBLY (6.2 L ENGINES)

Disassemble (Figures 5 and 7)

Tool Required:

J 25220 Ring Expander (or equivalent) 1. Piston rings. Use J 25220 (figure 5).

6A-6 GENERAL ENGINE MECHANICAL

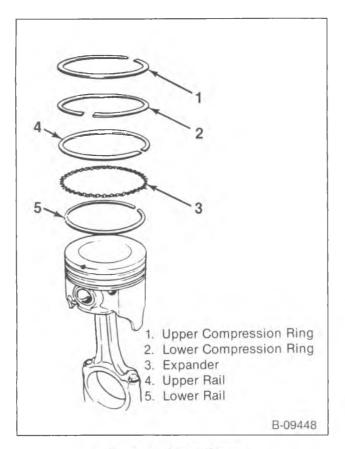


Figure 4—Piston Rings

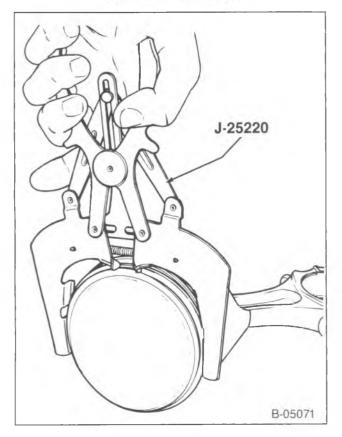


Figure 5—Removing the Piston Rings

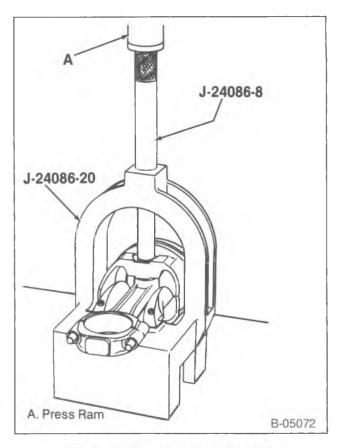


Figure 6-Removing the Piston Pin

- 2. Connecting rod bearing inserts. If the inserts are to be reused, place them in a rack so they can be installed in their original connecting rod and cap.
- 3. Snap rings. Use snap ring pliers.
- 4. Piston pin. Slide the pin from the piston.
- 5. Piston from the connecting rod.

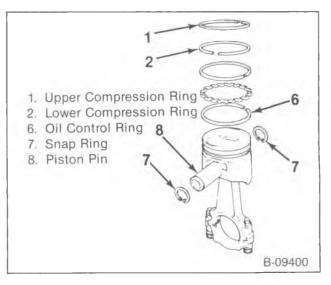


Figure 7—Piston and Components — 6.2 L

B-04981

Figure 8—Measuring Piston Pin Diameter

CLEANING AND INSPECTION

- Clean
- Piston
 - Remove all varnish and carbon deposits. DO NOT USE A WIRE BRUSH.
 - Remove the carbon from the ring grooves. Use a ring groove cleaning tool.
 - Oil control ring groove holes.

16 Inspect

Piston pin bore in the piston and connecting rod. Check for scuffing, burrs, etc.

- Piston for scratches, wear, etc.
- Connecting rod for cranks, nicks, etc. If a suitable jig is available, check the connecting rod for a bent or twisted condition.
- Piston.
 - Ring land for cracking, wear, etc.
 - Ring grooves for burrs, nicks, etc.
 - Skirts and pin bosses for cracking.
 - Skirts for scuffing.
- Connecting rod bearing inserts for scratches or deep pitting.

MEASURING PISTON PIN TO PISTON CLEARANCE (ALL EXCEPT 6.2 L)




All Measure (Figures 8 and 9)

- 1. Piston pin diameter (figure 8). Check against "Specifications."
- 2. Piston pin to piston clearance.
 - · Measure the piston pin hole diameter (figure 9)
 - · Subtract the piston pin diameter from the piston pin hole diameter to obtain the clearance.
 - · Replace the piston and piston pin if the clearance exceeds specifications. The piston and piston pin are a matched set and are not available separately.

MEASURING PISTON PIN TO PISTON PIN BUSHING CLEARANCE (6.2 L ENGINES)

E C Clean

· Piston pin and bushing. The parts must be free of oil and dirt.

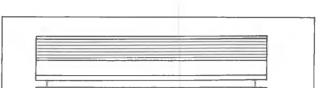

GENERAL ENGINE MECHANICAL 6A-7

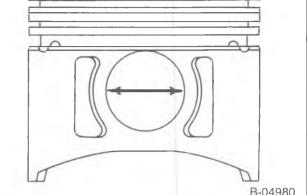


Figure 9—Piston Pin Hole Diameter

1 Measure (Figures 8 and 10)

- Piston pin diameter (figure 8). Check against "Specifications."
- 2. Piston pin bushing ID. Use an inside micrometer (figure 10).
- 3. Piston pin to bushing clearance. Subtract the piston pin diameter from the piston pin bushing ID. Compare with "Specifications." If the clearance is excessive, try a new piston pin. If the clearance is

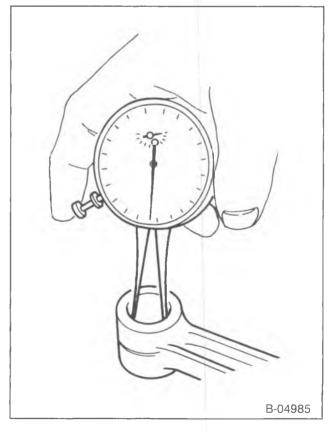


Figure 10—Measuring Piston Pin Bushing Inside Diameter

6A-8 GENERAL ENGINE MECHANICAL

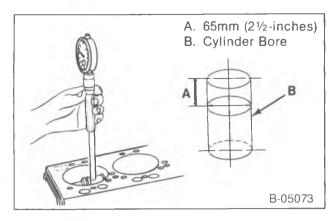


Figure 11—Measuring Cylinder Bore Diameter

excessive with a new piston pin, the connecting rod must be replaced. Replacement bushings are not available.

PISTON SELECTION (2.5 L AND 2.8 L ENGINES)

Refer to the proper section.

PISTON SELECTION (ALL EXCEPT 2.5 L AND 2.8 L ENGINES)

1. Check the used piston to cylinder bore clearance.

- Measure (Figures 11 and 12)
 - Cylinder bore diameter. Use a telescoping bore gage, located 65 mm (2 ¹/₂-inches) below the top of the cylinder bore (figure 11).
 - Piston diameter. Measure the piston skirt at a right angle to the piston pin, at the centerline of the piston pin (figure 12).
 - Subtract the piston diameter from the cylinder bore diameter to determine piston to bore clearance.

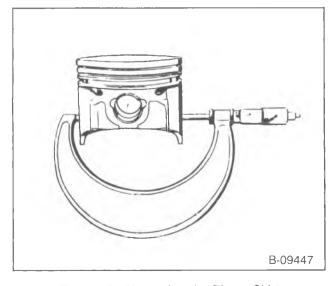


Figure 12-Measuring the Piston Skirt

- Refer to "Specifications" in the proper section. Determine if the piston clearance is in the acceptable range.
- 2. If the used piston is not acceptable, determine if a new piston can fit the cylinder bore.
- 3. If a new piston does not bring the clearance within tolerances, the cylinder bore must be reconditioned.
- 4. Mark the piston to identify the cylinder for which it was fitted.

ASSEMBLY

Assembling the Piston and Connecting Rod (All except 6.2 L Engines)



Tool Required:

J 24086 Piston Pin Remover and Installer Set

- 1. Piston and connecting rod.
 - The piston and connecting rod must be installed in the proper position.
 - 2.5 L Engines: The raised notch side of the connecting rod must be opposite the notch in the piston crown.
 - 2.8 L Engines: The bevel on the connecting rod should face the outside of the engine.
 - 4.8 L Engines: The flat side of the piston crown depression and the connecting rod bearing tang slot must be on the same side.
 - All Others: The valve cutouts in the piston crown must be opposite the connecting rod bearing tangs.
 - Lubricate the piston pin holes in the piston and connecting rod with engine oil.
 - Install the pin guide (item E, figure 13) to hold the piston and connecting rod together. Be sure to use the proper pin guide. Refer to the instructions supplied with the tool.
- 2. Piston pin.
 - Insert the piston pin into the piston pin hole.
 - Place the assembly on the support fixture (figure 13).
 - Adjust the piston pin installer (J 24086-9) to the correct length, using the letter-number scale on the installer adjuster (figure 13). This is necessary to insure that the piston pin is pressed into the piston to the correct depth. Refer to the instructions supplied with the tool for the proper setting.
 - · Lock the adjuster in place with the lock ring.

NOTICE: After the installer hub bottoms on the support assembly, do not exceed 35 000 kPa (5,000 psi) pressure, as this could cause damage to the tool.

 Place the adjuster in the support fixture. Press the piston pin into place (until the adjustable installer bottoms in the support fixture).

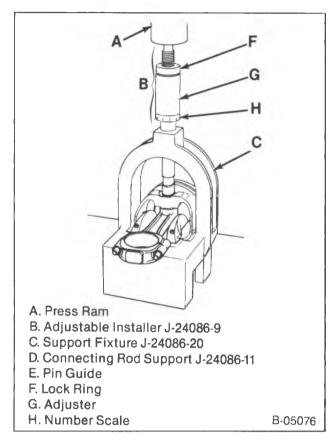


Figure 13—Installing the Piston Pin

 Remove the piston and connecting rod assembly from the tool and check the piston for freedom of movement on the piston pin.

Assembling the Piston and Connecting Rod (6.2 L Engines)



Tool Required

J 29134-A Piston Pin Clip Installer 1. Piston to the connecting rod.

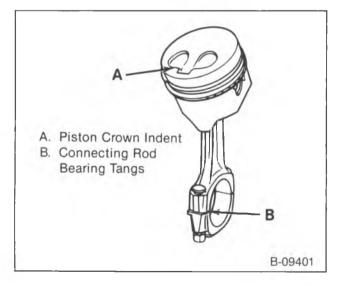


Figure 14—Aligning the Piston and Connecting Rod

- The piston must be installed with the piston crown indent on the same side as the connecting rod bearing tang slots (figure 14).
- 2. Piston pin. Apply engine oil to the pin and push into place.
- 3. Snap rings. Use J 29134-A (figure 15).



• Snap rings for proper assembly. Rotate the snap rings to make sure that they are seated in their grooves.

Installing the Piston Rings (All Except 6.2 L)

Measure (Figures 4 and 16)

- Ring end gap as follows:
 - 1. Select rings comparable in size to the piston being used.
 - Slip the compressing ring in the cylinder bore: then press the ring down into the cylinder bore about 7 mm (1/4-inch) above ring travel. Be sure the ring is square with the cylinder wall.
 - 3. Measure the space or gap between the ends of the ring with a feeler gage (figure 16).
 - 4. Refer to "Specifications" in the proper section for correct gap.
 - If the gap between the ends of the ring is not as specified, remove the ring and try another for fit.

6A-10 GENERAL ENGINE MECHANICAL

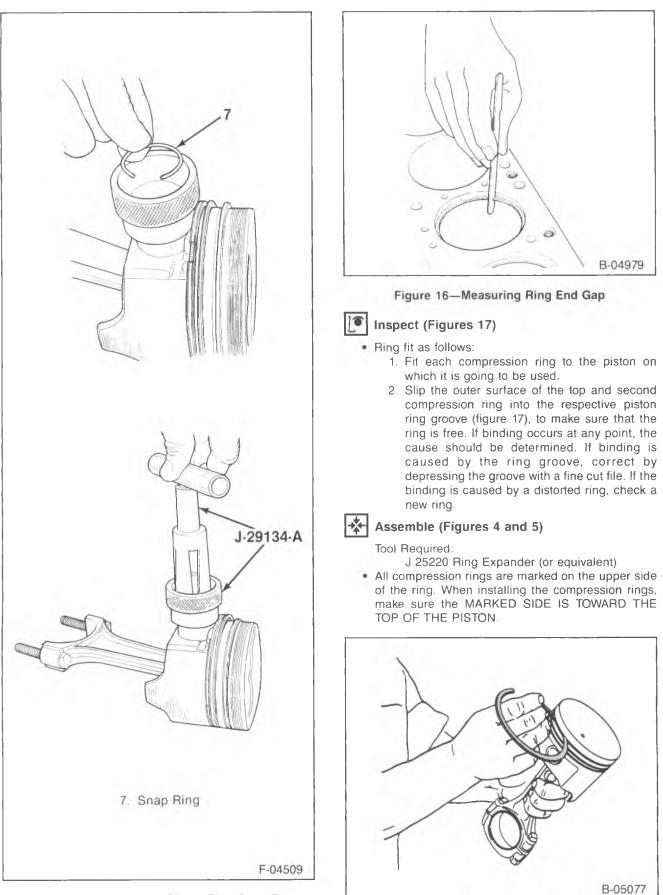


Figure 15—Installing the Piston Ring Snap Ring (6.2 L Engines)

Figure 17—Checking Ring Fit

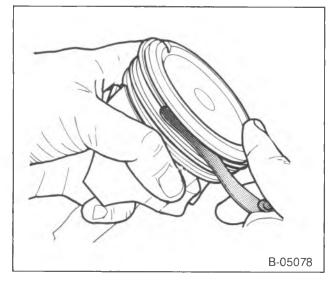


Figure 18—Measuring Ring Clearance

- The oil control rings are three piece types, consisting of two rails and an expander.
- 1. Expander.
- 2. Lower rail.
- 3. Upper rail.
- 4. Upper compression ring. Use J 25220 (figure 5).
- 5. Lower compression ring. Use J 25220 (figure 5). Flex all rings to make sure the rings are free. If binding occurs at any point the cause should be determined. If binding is caused by the ring groove, correct by dressing the groove with a fine cut file. If binding is caused by a distorted ring, check a new ring.



Measure (Figure 18)

• Ring clearance. Use a feeler gage as shown in figure 18. Compare with "Specifications" in the proper section.

Installing the Piston Rings

(6.2 L Engines)

 All compression rings are marked on the upper side of the ring. When installing the compression rings, make sure the MARKED SIDE IS TOWARD THE TOP OF THE PISTON.

- The top compression ring is a keystone type.
- The oil ring is a two-piece type, consisting of an expander and a scraper ring.



Measure (Figures 7 and 16)

- Ring end gap as follows:
 - Select rings comparable in size to the piston being used.
 - Slip the compression ring in the cylinder bore; then press the ring down into the cylinder bore about 7 mm (1/4-inch) above ring travel. Be sure the ring is square with the cylinder wall.
 - 3. Measure the space or gap between the ends of the ring with a feeler gage (figure 16).
 - 4. Refer to "Specifications" in the proper section.
 - 5. If the gap between the ends of the ring is not as specified, remove the ring and try another for fit.



Inspect (Figure 17)

Ring fit as follows:

- 1. Fit each compression ring to the piston on which it is going to be used.
- 2. Slip the outer surface of the top and second compression ring into the respective piston ring groove (figure 17), to make sure that the ring is free. If binding occurs at any point, the cause should be determined. If binding is caused by the ring groove, correct by dressing the groove with a fine cut file. If the binding is caused by a distorted ring, check a new ring.

- Assemble


1

• Piston rings. Refer to the instructions furnished with the parts package.

Measure (Figure 18)

• Ring clearance. Use a feeler gage as shown in figure 18. Compare with "Specifications" in the proper section.

6A-12 GENERAL ENGINE MECHANICAL

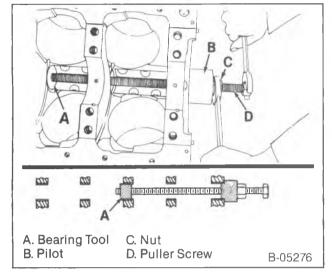

CAMSHAFT BEARINGS

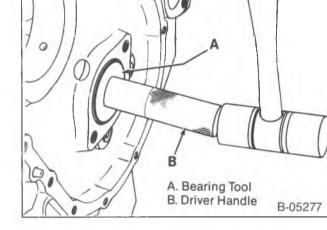


Figure 20—Removing or Installing the Outer Camshaft Bearings

- Assemble the bearing tool and driver handle.
- Drive the outer camshaft bearings out of the block.

🖫 Clean

Camshaft bearing bores in the block.

Assemble (Figures 19, 20, and 21)

Tool Required

J 6098-01 Camshaft Bearing Remover and Installer

- The outer camshaft bearings must be installed first. These bearings serve as guides for the pilot, and help center the inner bearings during the installation process.
- Be sure to fit the correct cam bearing into the bore.
 The cam bearing bores vary in size.
- A. Checking oil hole alignment with brass rod. Make rod as shown using ³/₃₂" rod about 762 mm (30") long.

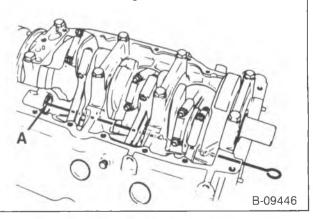


Figure 21—Checking Camshaft Bearing Oil Hole Alignment (Typical)

Figure 19—Removing or Installing the Inner Camshaft Bearings

CAMSHAFT BEARING REPLACEMENT (2.5 L AND 6.2 L ENGINES)

Refer to the proper section.

CAMSHAFT BEARING REPLACEMENT (ALL EXCEPT 2.5 L AND 6.2 L ENGINES)

Inspect

 Camshaft bearings for scratches, pits, or loose fit in their bores. Replace the camshaft bearings if necessary.

Disassemble (Figures 19 and 20)

Tool Required

J 6098-01 Camshaft Bearing Remover and Installer

- 1. Rear camshaft plug or cap.
- 2. Inner camshaft bearings. Use J 6098-01 (figure 19).
 - Insert the pilot into the front camshaft bearing bore.
 - Slide the puller screw, with the nut and washer, through the pilot.
 - Insert the bearing tool into the inner camshaft bearing bore, with the shoulder of the tool against the bearing.
 - Hold the puller screw with a wrench. Turn the nut with a second wrench to pull the camshaft bearing from its bore.
 - Repeat this procedure to remove the remaining inner camshaft bearings. Note that the rear inner bearing must be removed with the pilot fitted into the rear camshaft bearing.
- 3. Outer camshaft bearing. Use J 6098-01 (figure 20).

1. Outer camshaft bearings. Drive the bearings into place using J 6098-01 (figure 20).



Important

- Make sure the camshaft bearing hole (or holes) align with the oil hole (or holes) in the block. On some engines, the oil holes may be difficult to see. If so, use a piece of 2 mm ³/₃₂-inch) rod as shown in figure 21 to check alignment.
- 2. Inner camshaft bearing. Use tool J 6098-01 (figure 19).
 - Assemble the tool with the pilot engaged in the front bearing and the pilot flange against the front face of the block.
 - Slide the puller screw, with nut and washer, through the pilot.
 - Place the new bearing on the bearing tool. Hold the bearing tool and bearing against the bearing bore. Align the bearing oil hole with the oil hole in the block.
 - Thread the puller screw into the bearing tool enough to hold the tool and bearing in place.

- Holding the puller screw with a wrench, turn the nut with a second wrench to pull the camshaft bearing into place.
- Remove the puller screw, pilot, and bearing tool.

Important

- Make sure the camshaft bearing hole (or holes) align with the oil hole (or holes) in the block. If it is difficult to see the alignment, use a piece of brass rod as described in step 1.
- 3. Camshaft rear plug or cap.
 - All engines except 2.8 L engines:
 - Coat a new camshaft plug with sealer (Loctite #592 or equivalent).
 - Install the plug flush to 0.80 mm (1/32-inch) deep.
 - 2.8 L engines:
 - Clean all RTV from the cap and block.
 - Apply a 3 mm (1/8-inch) bead of RTV sealant (GM part no. 1052366 or equivalent) to the machined groove on the block.
 - Install the cap while the RTV is still wet.
 - Install the retaining bolts and tighten.

HYDRAULIC LIFTERS

Two types of hydraulic lifters are used in engines covered by this manual – flat type and roller type. Service procedures are similar for both types.

Hydraulic lifters are serviced only as an assembly. No internal parts are available. Service is limited to a disassembly, cleaning and test operation. It is understood that most technicians discard any suspicious valve lifters. This information is offered for those who may wish to overhaul and test valve lifters.

Important

 Whenever the camshaft needs to be replaced, a new set of hydraulic lifters must also be installed (except 2.5 L engines).

INSPECTION BEFORE DISASSEMBLY



0

Inspect (Figures 22, 23, and 24)

- Lifter body (221) for scuffing and scoring. If the lifter body wall is worn or damaged, the mating hydraulic lifter bore in the cylinder block should also be checked.
- Check the fit of each valve lifter in its mating bore in the block. If the clearance is excessive, try a new lifter.
- Push rod seat. If worn, inspect the pushrod. Replace the pushrod, if worn.

- Lifter foot (flat type lifters). The lifter foot must be smooth and slightly convex. If worn, pitted, or damaged the mating camshaft lobe should also be checked.
- Roller (roller type lifters) for:
 - Freedom of movement. Free-up or replace the lifter.
 - Flat spots. Replace the lifter, if worn.
 - Pitting, replace the lifter if pitted.
 - Missing or broken needle bearings.

HYDRAULIC LIFTER OVERHAUL




Disassemble (Figures 21 through 26)

1. Retainer (figure 25).

- Push the pushrod seat (228) down, using a pushrod.
- Pry out the retainer with a screwdriver.
- 2. Pushrod seat (228).
- 3. Metering valve (227).
- 4. Plunger (226) and plunger spring (222).
 - If the plunger is stuck, turn the lifter body upside down and tap it on a flat surface.
- 5. Check ball retainer (223), check ball spring (224), and check ball (225). Pry the check ball retainer from the plunger, using a small screwdriver (figure 26).

6A-14 GENERAL ENGINE MECHANICAL

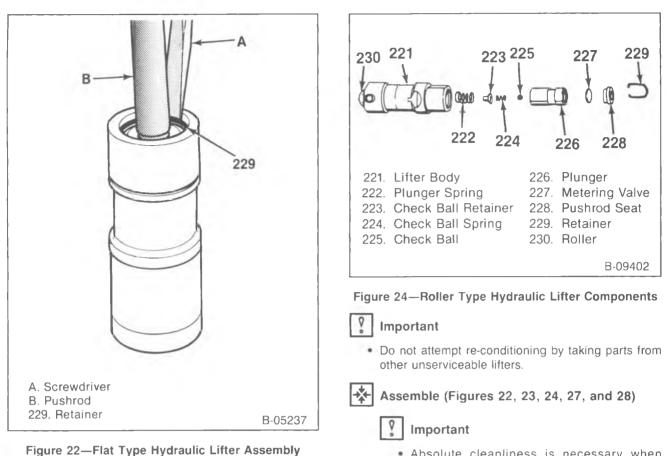

 Absolute cleanliness is necessary when assembling the hydraulic lifters. Use only

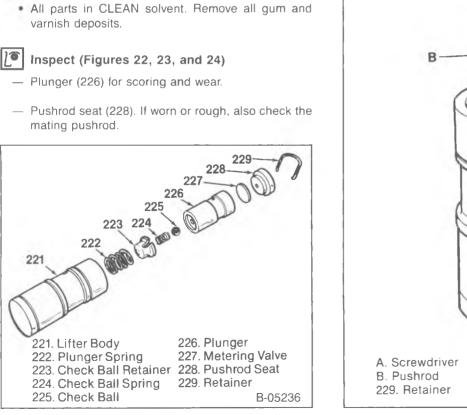


Figure 23—Flat Type Hydraulic Lifter Components

Clean

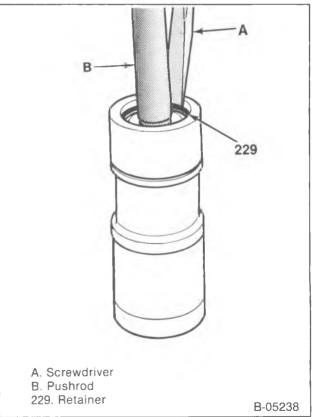


Figure 25—Removing the Retainer (Typical)

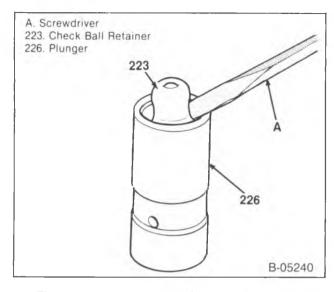


Figure 26—Removing the Check Ball Retainer (Typical)

clean, lint-free shop rags. Work with clean hands, on a clean work surface.

- 1. Check ball (225) to the small hole in the bottom of the plunger (226).
- 2. Check ball spring (225) to the check ball retainer (223).
- 3. Check ball retainer (223) with check ball spring (224) to the plunger (226). Make sure the spring rests on the ball. Carefully press the retainer into position in the plunger with the blade of a small screwdriver (figure 27). Make sure it seats tightly against the plunger.
- 4. Plunger spring (222) to the check ball retainer (223).
- 5. Lifter body (221) to the plunger (226).
 - Slide the lifter body over the plunger, being careful to line up the oil feed holes in the lifter body and plunger.
 - · Invert the assembly (open end up).
 - Fill the assembly with SAE 10 oil.

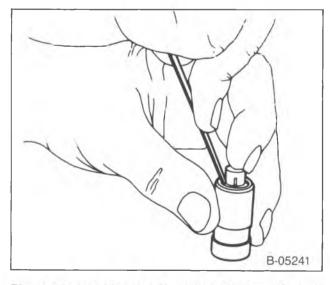


Figure 27—Installing the Check Ball Retainer (Typical)

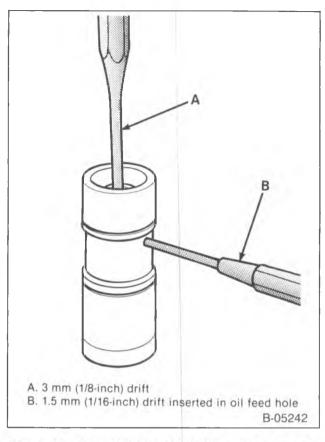


Figure 28—Assembling the Hydraulic Lifter (Typical)

- Insert the end of a 3 mm (1/8-inch) drift into the plunger and press down solidly. Do not attempt to force or pump the plunger. At this point, oil holes in the lifter body and plunger assembly will be aligned.
- Insert a 1.5 mm (¹/₁₆-inch) drift through both oil holes to hold the plunger down against the plunger spring tension (figure 28).
- Remove the 3 mm (1/8-inch) drift. Refill the assembly with SAE 10 oil.
- 6. Metering valve (227) and pushrod seat (228).
- 7. Retainer.
 - Push down on the pushrod seat (228), using a pushrod. Remove the 1.5 mm (¹/₁₆-inch) drift.
 - The lifter is completely assembled, and ready to be installed or tested.

VALVE LIFTER LEAK-DOWN RATE TEST (FLAT TYPE LIFTERS ONLY)

Tool Required:

J 5790 Hydraulic Lifter Leakdown Tester

Tool J 5790 (figure 29) is available for very accurately checking the leakdown rate of the overhauled valve lifters. This tool applies a measured load to the valve lifter, and measures the amount of valve lifter travel under load. Instructions for use are furnished with the tool, along with a supply of special test oil.

1. Fill tester cup to approximately one inch from top with the special fluid which is available from tester manufacturer.

6A-16 GENERAL ENGINE MECHANICAL

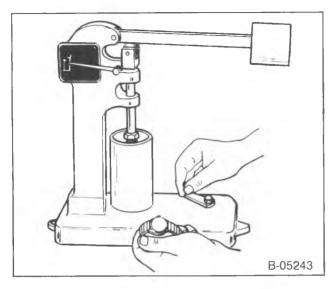


Figure 29—Testing the Hydraulic Lifter — Flat Type Only

2. Swing the weight arm out of the way, raise the arm, and position the lifter into the boss in the center of the tester cup.

- Adjust the ram (with the weight arm clear of the ram) so that the point is positioned on the set line (marked "S"). Tighten the jam nut to maintain the setting.
- Operate the lifter through full travel of the plunger by pumping the weight arm to fill the lifter with test fluid and force out air.



- Lifter must be completely submerged at all times.
- Continue pumping for several strokes after definite resistance is felt.
- 5. Raise the weight arm to allow the plunger spring to expand fully; lower the arm onto the ram and commence turning the crank slowly (1 revolution every 2 seconds).
- 6. Time indicator travel from the lower line (first line above the set line) to the line marked 0.094 or $3/_{32}$ -inch, while rotating the cup with crank. The lifter is satisfactory if the rate is between 12 and 90 seconds.

CYLINDER HEAD

DISASSEMBLY

Disassemble

Valves and components. Refer to the proper section.

CLEANING AND INSPECTION

Clean (Figures 30 and 31)

Tools Required.

- J 8089 Wire Brush
- J 8101 Valve Guide Cleaning Tool
- Carbon from the combustion chambers. Use J 8089 (figure 30).
- Valve guides. Use J 8101 (figure 31).
- Valve stems and heads on a wire wheel.
- Carbon and old gasket from the cylinder head gasket surface.

Inspect

- Cylinder head for cracks in the exhaust ports, combustion chambers, or external cracks to the coolant chamber. Gasket surfaces should be free of damage.
- Valves for burning, pitting, or warpage. Grind or replace as needed. Refer to "Valve Grinding." Check the valve stems for scoring or excessive wear. Stems must not be bent.

- Rocker arm studs (if used) for wear, damage or improper fit.
- Valve seats for pitting or other damage. Grind or reface as needed.
- Rotators (if used). The rotators should rotate smoothly, without bind.



Measure (Figures 32, 33, and 34)

Tools Required:

J 8001 Dial Indicator (or equivalent) J 8056 Valve Spring Tester

- Valve stem to guide bore clearance.
 - Excessive valve stem to guide bore clearance will cause excessive oil consumption and may cause valve breakage. Insufficient clearance will result in noisy and sticky functioning of the valve and disturb engines smoothness.
 - Clamp a Dial Indicator J 8001 (or equivalent) on one side of the cylinder head rocker arm cover gasket rail (figure 32).
 - Locate the indicator so that movement of the valve stem from side to side (crosswise to the head) will cause a direct movement of the indicator stem. The indicator stem must contact the side of the valve-stem just above the valve guide bore.
 - Drop the valve head about 1.6 mm (1/16-inch) off the valve seat.

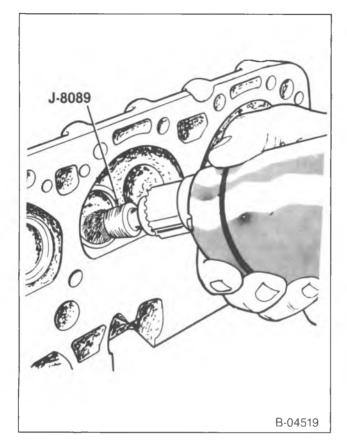


Figure 30—Cleaning the Combustion Chambers (Typical)

- Move the stem of the valve from side to side using light pressure to obtain a clearance reading. If clearance exceeds specifications, it will be necessary to ream valve guide bores for oversize valves as outlined later in this manual.
- Valve spring tension. Use J 8056 or equivalent (figure 33).
 - Compress the springs, with dampers removed, to the specified height and check against the specifications chart. Springs should be replaced if not within 44 N (10 lbs.) of the specified load.
- Valve spring length (figure 34). Replace the spring if the length is not as specified.

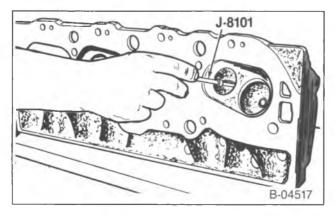


Figure 31—Cleaning the Valve Guides (Typical)

GENERAL ENGINE MECHANICAL 6A-17

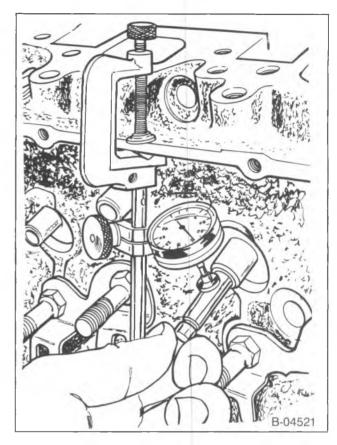


Figure 32—Measuring Stem to Bore Clearance (Typical)

REPAIR

VALVE GRINDING

Valves that are pitted must be refaced to the proper angle. Valve stems which show excessive wear, or valves that are warped excessively must be replaced. When a valve head which is warped excessively is refaced, a knife edge will be ground on part or all of the valve head due to the amount of metal that must be removed to completely

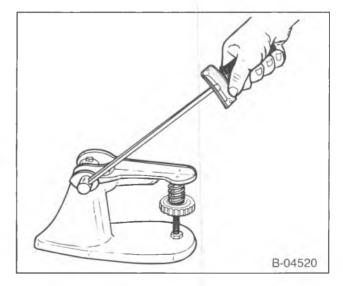


Figure 33—Measuring Valve Spring Tension

6A-18 GENERAL ENGINE MECHANICAL

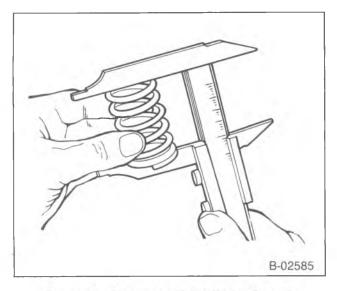


Figure 34—Measuring Valve Spring Length

reface. Knife edges lead to breakage, burning or preignition due to heat localizing on this knife edge. If the edge of the valve head is less than 0.80 mm (1/32-inch) after grinding (figure 35), replace the valve.

Several different types of equipment are available for refacing valves. The recommendation of the manufacturer of the equipment being used should be carefully followed to attain proper results.

Refer to "Specifications" in the proper section for valve face angle specifications.

VALVE SEAT GRINDING

Reconditioning the valve seats is very important, because the seating of the valves must be perfect for the engine to deliver the power and performance built into it.

Another inportant factor is the cooling of the valve head. Good contact between each valve and its seat will insure that heat will be properly carried away.

Several different types of equipment are available for reseating valve seats. The recommendations of the manufacturer of the equipment being used should be carefully followed to attain proper results.

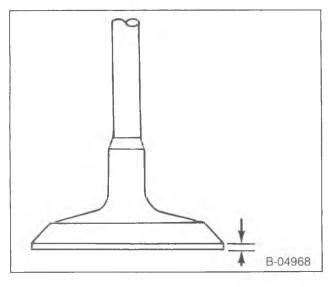


Figure 35—Valve Head Measurement

Regardless of what type of equipment is used, however, it is essential that valve guide bores be free from carbon or dirt to ensure proper centering of the pilot in the guide. Refer to 'Specifications' in the proper section for valve seat angle specifications.

NOTICE: Valve seats on 2.5 L and 6.2 L engines are induction hardened. Excessive removal of stock may result in damage to the valve seats.

4.8 L, small block, and 7.4 L engines are equipped with hardened, non-replaceable valve seat inserts.

REAMING VALVE GUIDES

The valve guides used in engines covered by this manual are simply holes bores into the cylinder head. The valve guides are therefore not replaceable.

If the valve stem to bore clearance as measured previously in this manual is excessive, the valve guides should be reamed and a valve with an oversize stem installed.

Available oversize valves are as follows. Nominal dimensions are given.

- 2.5 L:
 - Intake: 0.08 mm (0.003-inch), 0.13 mm (0.005-inch).
 - Exhaust: 0.08 mm (0.003-inch).
- --- 2.8 L, 4.8 L, 5.0 L, 5.7 L, 7.4 L:
 - Intake and exhaust: 0.08 mm (0.003-inch),
 0.38 mm (0.015-inch), 0.76 mm (0.030-inch).
- 4.3 L:
 - Intake: 0.08 mm (0.003-inch), 0.38 mm (0.015-inch), 0.76 mm (0.030-inch).
 - Exhaust: 0.08 mm (0.003-inch), 0.38 mm (0.015-inch).
- 6.2 L:
 - Intake and exhaust: 0.08 mm (0.003-inch), 0.38 mm (0.015-inch).

Select a reamer which will provide a straight, clean bore through the guide's entire length (figure 36).

Reamer availability is as follows. Sizes given are nominal.

- All engines except 6.2 L and 7.4 L:
 - J 5830-1: 0.08 mm (0.003-inch) oversize.
 - J 6621: 0.13 mm (0.005-inch) oversize.
 - J 5830-2: 0.38 mm (0.015-inch) oversize.
 - J 5830-3: 0.76 mm (0.030-inch) oversize.
 - These reamers (except J 6621) also available in Reamer Set J 5830-02.
- 6.2 L and 7.4 L engines:
 - J 7049-1: 0.08 mm (0.003-inch) oversize.
 - J 7049-2: 0.38 mm (0.015-inch) oversize.
 - J 7049-3: 0.76 mm (0.030-inch) oversize.
 - These reamers also available in Reamer Set J 7049.

ASSEMBLY

Assemble

Valves and components. Refer to the proper section.

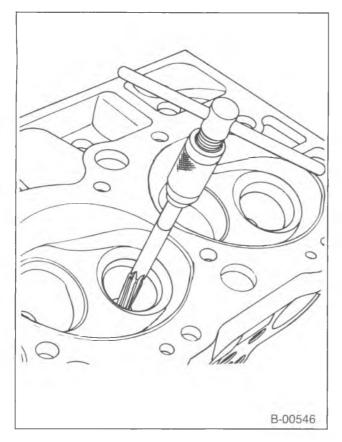


Figure 36—Reaming the Valve Guides (Typical)

MEASURING MAIN BEARING CLEARANCE

Main bearings are of the precision insert type and do not use shims for adjustment. If clearances are found to be excessive, new upper and lower inserts will be required.

The simplest, most accurate way to measure main bearing clearance is with the use of gaging plastic. This wax-like material compresses evenly between the bearing and journal surfaces without damaging them. Proceed as follows:

Clean

All oil from the crankshaft journal and main bearing inserts.



Install or Connect (Figure 37)

- Refer to the proper section for additional information.
- 1) Main bearing inserts and crankshaft, as outlined in the proper section.
- 2. Gaging plastic.
 - Begin with the rear main bearing.
 - Wipe the oil from the crankshaft journal and the lower main bearing insert.

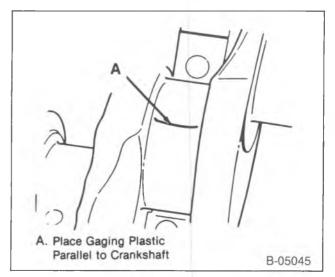


Figure 37—Placing the Gaging Plastic on the Bearing Journal

• Place a piece of gaging plastic the full width of the lower bearing insert (parallel to the crank-shaft) on the journal (figure 37). Do not rotate

6A-20 GENERAL ENGINE MECHANICAL

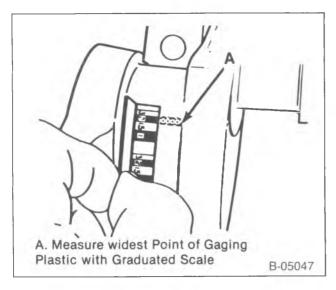


Figure 38—Measuring the Gaging Plastic

the crankshaft while the gaging plastic is between the bearing and journal.

- 3. Main bearing cap and bolts.
 - री Tighten

Bolts to "Specifications."

+> Remove or Disconnect

 Main bearing cap.
 DO NOT REMOVE THE GAGING PLASTIC FROM THE JOURNAL OR LOWER MAIN BEARING IN-SERT.

Measure (Figure 38)

- Gaging plastic as follows:
- The flattened gaging plastic will be found adhering to either the lower bearing insert or journal.

- 2. On the edge of the gaging plastic envelope there is a graduated scale. Without removing the gaging plastic, measure its compressed width (at the widest point) with the graduations on the gaging plastic envelope (figure 38).
- 3. If the flattened gaging plastic tapers toward the middle or ends, there is a difference in clearance indicating taper, low spot or other irregularity of the bearing or journal. Be sure to measure the journal with a micrometer if the flattened gaging plastic indicates more than 0.001-inch (0.0005-inch on 2.5 L engines) difference.
- 4. Normally main bearing journals wear evenly and are not out-of-round. However, if a bearing is being fitted to an out-of-round journal, be sure to fit to the maximum diameter of the journal. If the bearing is fitted to the minimum diameter and the journal is excessively out-of-round, interference between the bearing and the journal will result in rapid bearing failure.
- 5. If the bearing clearance is within specifications, the bearing is satisfactory. If the clearance is not within specifications, replace the bearing. Always replace both upper and lower inserts as a unit.
- 6. A standard or undersize bearing may produce the proper clearance. Refer to the proper section for bearing availability. If not, it will be necessary to regrind the crankshaft journal for use with the next undersize bearing. Do not grind rolled fillet crankshafts, such as used on 2.5 L, 2.8 L, and 6.2 L engines. After selecting the new bearing, recheck the clearance.
- 7. Remove the flattened gaging plastc.
- 8. Perform the preceding steps on the remaining main bearings.

MEASURING CONNECTING ROD BEARING CLEARANCE

Connecting rod bearings are of the precision insert type and do not use shims for adjustment. DO NOT FILE RODS OR ROD CAPS. If clearances are found to be excessive, a new bearing (both upper and lower halves) will be required.

The simplest, most accurate way to measure connecting rod bearing clerarance is with the use of gaging plastic. This wax-like material compresses evenly between the bearing and journal surfaces with damaging them. Proceed as follows.

🗳 Clean

 All oil from the crankshaft journal and the connecting rod bearing inserts.

- →+ Install or Connect (Figure 39)
 - Refer to the proper section for additional information on connecting rod bearing sizing.
 - 1. Connecting rod with the upper connecting rod bearing insert to the crankshaft journal.
 - A piece of gaging plastic the length of the bearing (parallel to the crankshaft) on the journal (figure 39). The plastic gage should be positioned in the middle of the upper and lower bearing insert. (Bearings are eccentric and false readings could occur if placed elsewhere.)



 If a bearing is being fitted to an out-of-round crankpin, be sure to fit the maximum diameter of the crankpin. If the bearing is fitted to the minimum diameter and the crankpin is exces-

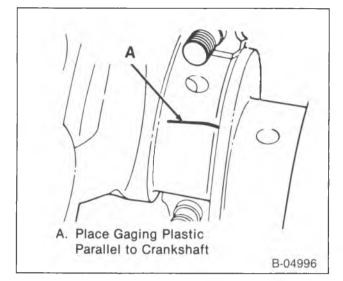


Figure 39—Placing the Gaging Plastic on the Connecting Rod Journal

sively out-of-round, interference between the bearing and the crankpin will result in rapid bearing failure.


- Connecting rod cap with the lower connecting rod bearing insert. DO NOT TURN THE CRANKSHAFT WITH THE GAGING PLASTIC INSTALLED.
- 4. Connecting rod cap nuts.

၃ Tighten

• Nuts to "Specifications." Refer to the proper section.

Important

• The gaging plastic will be found sticking either to the journal or lower connecting rod bearing insert. Do not remove it at this time.

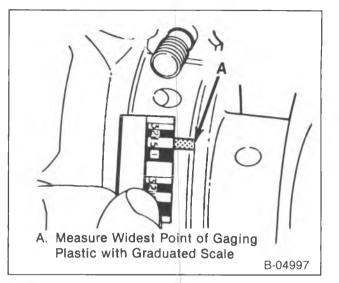




Measure (Figure 40)

- Gaging plastic at its widest point, using the scale at the gaging plastic envelope (figure 40).
- If the clearance exceeds specifictions, select a new, correct size, connecting rod bearing and remeasure the clearance.
- A standard or undersize bearing may produce the proper clearance. Refer to the proper section for bearing availability.
- Do not attempt to use shims or file the bearing to obtain the needed clearance.
- If clearance cannot be brought to within specifications, recondition or replace the crankshaft. (Do not recondition a rolled fillet crankshaft, such as used on 2.5 L, 2.8 L, and 6.2 L engines.)

Remove or Disconnect

Gaging plastic.

6A-22 GENERAL ENGINE MECHANICAL

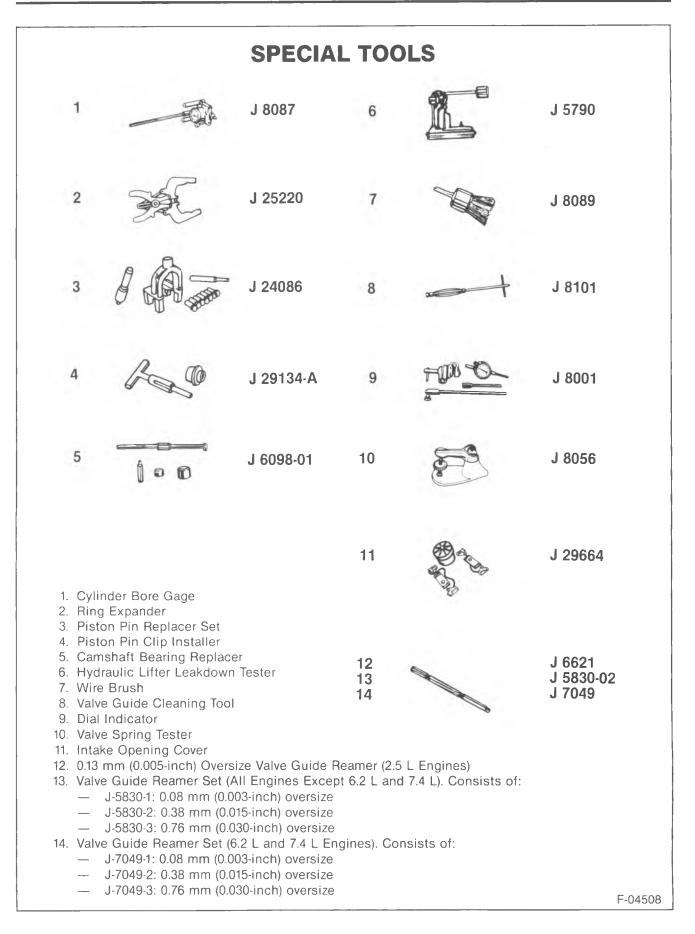

6A1-1

SECTION 6A1

2.5 LITER L4 ENGINE

CONTENTS

SUBJECT

PAGE

Description	6A	1- 2
Engine Lubrication	6A	1- 2
Disassembly of the Engine	6A	1- 4
Tools and Shop Equipment	6A	1- 4
Accessory Removal	6A	1- 4
Cleaning	6A	1- 4
Parts Identification.	6A	1- 4
Draining the Engine		1- 4
Intake Manifold Removal	6A	1- 6
Exhaust Manifold Removal		1- 6
Thermostat Housing Removal		1- 6
Water Pump Removal		
Valve Train Component Removal		
Cylinder Head Removal		
Crankshaft Pulley Hub Removal		
Oil Pan Removal		
Oil Pump Driveshaft Removal.		
Oil Pump Removal		
Front Cover Removal.		
Piston and Connecting Rod Removal		
Flywheel Removal		
Crankshaft Removal.		
Crankshaft Rear Oil Seal Removal (Without Removing Crankshaft)		
Main Bearing Removal (Without Removing the Crankshaft)		
Camshaft Removal.		
Cleaning, Inspection, and Repair.		
Block		
Cylinder Bores		
Piston and Connecting Rod Assemblies		
Piston Selection		
Intake and Exhaust Manifold		
Camshaft		
Camshaft Bearings		
Front Cover.		
Water Pump		
Oil Pan and Rocker Arm Covers		
Oil Pump Valve Train Components		
Cylinder Head.		
Thermostat and Housing.		
Crankshaft and Bearings		
Assembly of Engine		
Prior to Assembly		
Crankshaft and Main Bearing Installation		
Crankshaft Rear Oil Seal and Retainer Installation		
Main Bearing Installation (Without Removing the Crankshaft)		
Camshaft Installation		
Front Cover Installation		
Crankshaft Pulley Hub Installation	6A	1-25
Piston and Connecting Rod Installation		
Oil Pump Installation	64	1-26

6A1-2 2.5 LITER L4 ENGINE

CONTENTS (CONT.)

SUBJECT

Assembly of Engine Cont.	
Oil Pan Installation	
Oil Pump Driveshaft Installation	6A1-27
Cylinder Head Installation	6A1-27
Valve Train Component Installation	6A1-29
Water Pump Installation	6A1-29
Thermostat Housing Installation	6A1-30
Intake Manifold Installation	
Exhaust Manifold Installation	
Flywheel Installation	6A1-30
Engine Accessory Installation	6A1-30
Engine Set-Up and Testing	6A1-30
Specifications	6A1-33
Special Tools	6A1-36

DESCRIPTION

The GM 2.5 L engine is an inline four cylinder, overhead valve, with cast iron block and head.

The crankshaft is supported by five main bearings, with crankshaft thrust taken at the number five (rear) bearing.

The camshaft is supported by three bearings and is gear driven.

The valve train consists of roller type hydraulic lifters, pushrods, and ball pivot type rocker arms. The valve guides are integral in the cylinder head.

The connecting rods have precision insert type crankpin bearings. The piston pins are a press fit in the connecting rods.

The pistons are cast aluminum alloy. The piston pins are a floating fit in the pistions.

For engine identification information, refer to GENERAL INFORMATION (SEC. 0A).

ENGINE LUBRICATION

The oil pump is gear driven from the camshaft (figure 1). Oil is drawn from the oil pan through a pickup screen and tube. A bypass valve in the pickup screen insures

adequate oil flow if the screen becomes restricted. The gear type oil pump has a pressure regulator valve which controls lubrication system pressure by bypassing excess oil back to the oil pan sump.

Pressurized oil from the oil pump flows to the full flow filter. A bypass valve allows oil to bypass the filter if it becomes clogged or restricted. Oil then flows into an oil passage which runs along the right side of the block and intersects the lifter bosses. Oil from this passage is then routed to the crankshaft main bearings and camshaft bearings through smaller drilled passages. Oil is supplied to the connecting rod bearings by holes drilled in the crankshaft. Oil is supplied to the rocker arms through holes in the hydraulic lifters which feed oil up the pushrods to the rocker arms. The oil is metered by discs under the pushrod seat.

Many internal engine parts have no direct oil feed and are supplied by either gravity or splash from other direct feed components. Timing gears are lubricated by oil which is supplied through a passage from the front of the camshaft to a calibrated nozzle above the crankshaft gear.

PAGE

2.5 LITER L4 ENGINE 6A1-3

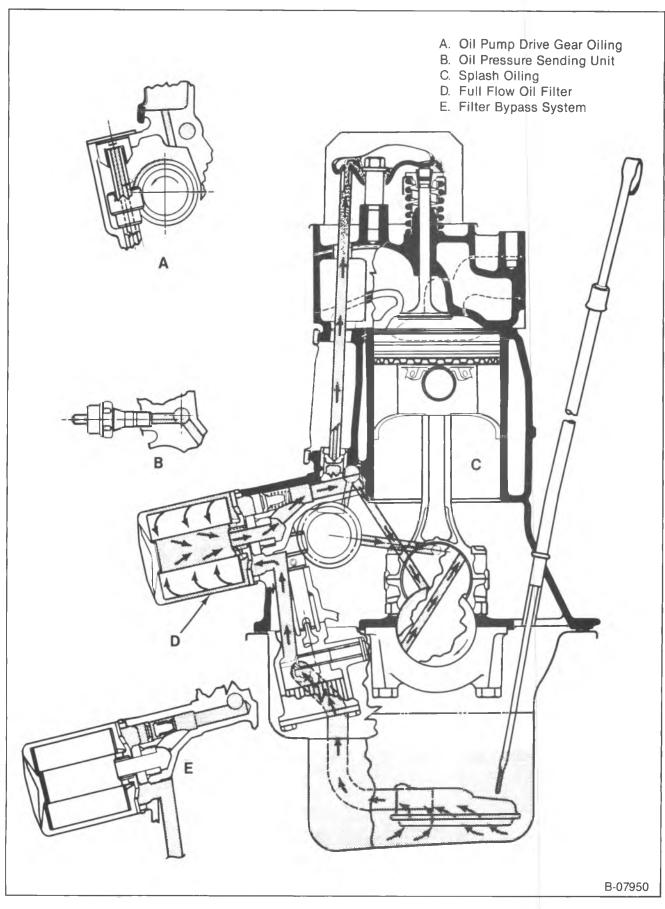


Figure 1—Engine Lubrication Diagram

A1-4 2.5 LITER L4 ENGINE

DISASSEMBLY OF THE ENGINE

1. Outer Engine Heat Stove 2 Bolt

5. Exhaust Manifold 6. Inner Engine Heat Stove

- 17. Cylinder Head Gasket 18. Intake Valve
- 19. Exhaust Valve
- 20. Plug
- 21. Gasket
- 22. Coolant Temperature Sensor 39. Plug
- 7. Exhaust Manifold Gasket 24. Cylinder Head
 - 25. Cylinder Head Bolt
 - 26. Spark Plug
 - 27. Cylinder Head Bolt
 - 28. Valve Spring Cap
- 11. Gasket 12. Thermostat
- 13. Thermostat Housing

10. Coolant Fitting

14. Bolt

3. Stud

4. Stud

8. Stud 9. Bolt

- 15. Hose Clamp
- 16. Hose

- 29. Valve Stem Oil Seal 30. Valve Keys
- 31. Rocker Arm Ball Bolt
- 32. Rocker Arm Ball
- 33. Valve Rocker Arm

- 34. Valve Stem Oil Shield
- 35. Valve Spring
- 36. Intake Valve Stem Seal
- 37 Washer
- 38. Intake Manifold Bolt
- 41. Plug
- 42. Intake Manifold Stud
- 43. Intake Manifold
- 44. Intake Manifold Gasket
- 45. Push Rod Guide
- 46. Cylinder Head Bolt
- 47. Push Rod
- 48. Rocker Arm Cover

F-01980

Figure 2-Cylinder Head, Manifolds, and Components

TOOLS AND SHOP EQUIPMENT

A clean, well lit work area should be available. Other necessary aids include: a suitable parts cleaning tank, compressed air supply, trays to keep parts and fasteners organized, and an adequate set of hand tools.

An approved engine repair stand will aid the work and help prevent personal injury or damage to engine compartments.

Special tool are illustrated throughout this section, and are listed at its end. These tools (or their equivalents) are specially designed to quickly and safely accomplish the operations for which they are intended. The use of these tools will also minimize possible damage to engine components.

Some precision measuring tools are required for inspection of certain critical components. Torque wrenches will be necessary for correct assembly of various parts.

ACCESSORY REMOVAL

This manual assumes that the engine accessories have been removed. These accessories may include one or more of the following:

Hydraulic Pump	Cooling Fan
Generator	TBI Unit
Distributor	

It is beyond the scope of this section to detail the many different accessory installations. Refer to the proper Truck Service Manual for this information.

Diagrams of emission and vacuum hose routings, wiring harness routings, accessory drive belt layout, etc., should be made before removing accessories.

CLEANING

Remove the engine accessories before cleaning to provide better access to engine exterior surfaces. After removing the TBI unit, distributor, fuel pump, oil filter, etc., cover the openings with tape to prevent the entry of water, solvent, and dirt.

Methods used to clean the engine will depend on the aids which are available. Steam cleaning, pressure washing, or solvent cleaning are some acceptable methods. Allow the engine to dry before beginning the work.

It is important that the engine be as clean as possible to prevent dirt from entering critical areas during disassembly.

PARTS IDENTIFICATION

Refer to figure 2 through 5.

DRAINING THE ENGINE

Remove or Disconnect (Figure 5)

- Oil drain plug (73). Allow the oil to drain.
- Oil filter.



1. Oil drain plug (73)

Tighten

• Oil pan drain plug to 34 N m (25 ft. lbs.).

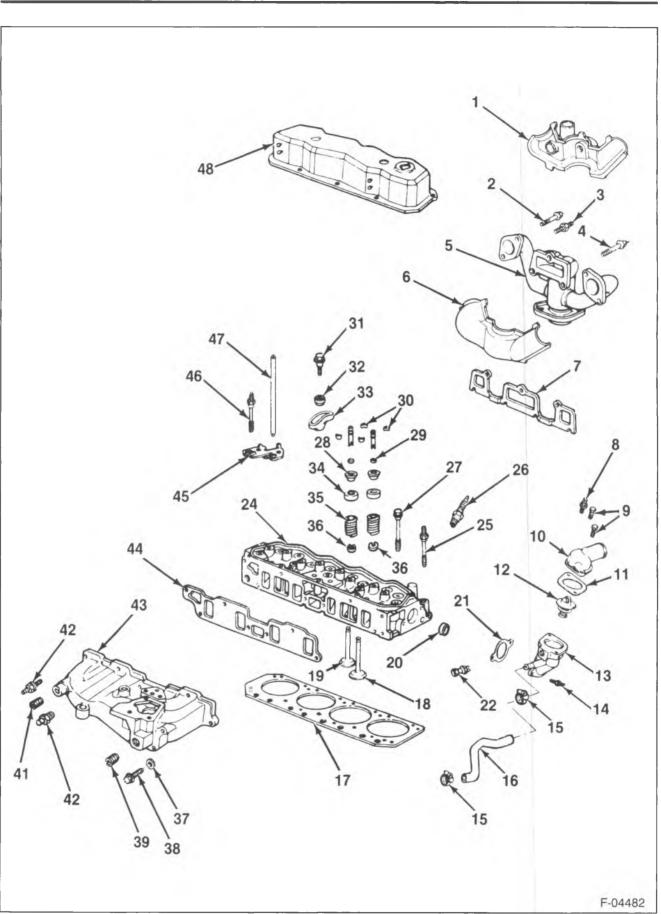


Figure 3—Cylinder Head, Manifolds, and Components

2.5 LITER L4 ENGINE 6A1-5

6A1-6 2.5 LITER L4 ENGINE

- 50 Push Rod Cover
- 51. Piston and Pin 52. Piston Rings
- 53. Connecting Rod
- 54. Connecting Rod Bolt
- 55. Connecting Rod Bearings 82. Oil Pump Cover
- 56. Connecting Rod Nut
- 57. Oil Level Indicator
- 58. Oil Level Indicator Tube
- 59. Seal
- 60. Guide Retainer Stud
- 61. Plug
- 62. Plug 63. Pin
- 64. Block Drain Bolt
- 65. Timing Indicator Stud
- 66. Bolt
- 67. Flywheel
- 68. Spacer
- 69. Clutch Pilot Bearing
- 70. Crankshaft Insert
- 71. Crankshaft Rear Oil Seal
- 72. Crankshaft Rear Bearing 73. Oil Pan Drain Screw
- 74. Gasket
- 75. Bolt
- 76. Oil Pan

- 77. Oil Pump
- 78. Nut
- 79. Pin
- 80. Spring
- 81. Bolt
- 83. Oil Pump Cover Gasket
- 84. Bolt
- 85. Oil Pressure Regulator Valve
- 86. Crankshaft Bearings
- 87. Crankshaft Gear
- 88. Crankshaft
- 89. Kev
- 90. Timing Indicator
- 91. Oil Pump Shaft Lower Bearing
- 92. Plug
- 93. Timing Gear Oil Nozzle
- 94. Bolt
- 95. Crankshaft Pulley
- 96. Bolt
- 97. Crankshaft and Power Steering 122. Valve Lifter Guide Pullev
- 98. Bolt
- 99. Washer
- 100. Crankshaft Pulley Hub 101. Front Cover Seal

- 102. Front Cover
- 103. Screw
- 104. Camshaft Gear
- 105. Camshaft Thrust Bearing
- 106. Camshaft Gear Spacing Ring
- 107. Key
- 108. Camshaft
- 109. Camshaft Bearing
- 110. Bolt
- 111. Coolant Pump
- 112. Gasket
- 113. Oil Pump Shaft Upper Bearing
- 114. Oil Pump Drive Shaft Gear
- 115. Oil Pump Drive Shaft
- 116. Connecting Rod Cap
- 117. Bolt
- 118. Oil Pump Drive Shaft Cover Plate
- 119. Block
- 120. Cylinder Head Dowel Pin
- 121. Hydraulic Roller Lifter
- 123. Lifter Guide Retainer
- 124. Main Bearing Cap
- 125. Bolt
- 126. Rear Main Bearing Cap

F-01982

Figure 4—Block and Components

INTAKE MANIFOLD REMOVAL

++ Remove or Disconnect (Figure 6)

- 1. Vacuum lines and electrical connectors, as needed.
- 2. Intake manifold bolts and washers.
- 3. Intake manifold.
- 4. Gasket.

EXHAUST MANIFOLD REMOVAL

- Remove or Disconnect (Figure 7)
- 1. Thermac heat stove pipe at the exhaust manifold.
- 2. Oxygen sensor wire. Remove the oxygen sensor only if the exhaust manifold is to be replaced.
- 3. Exhaust manifold bolts and washers.
- 4. Exhaust manifold and gasket.

THERMOSTAT HOUSING REMOVAL

- - ★→ Remove or Disconnect (Figure 5)
 - 1. Thermostat bypass hose.
 - 2. Thermostat housing bolts.
 - 3. Thermostat housing and gasket.

WATER PUMP REMOVAL



3. Bolts.

5. Gasket.

4. Water pump

1. Fan and fan clutch.

2. Water pump pulley.



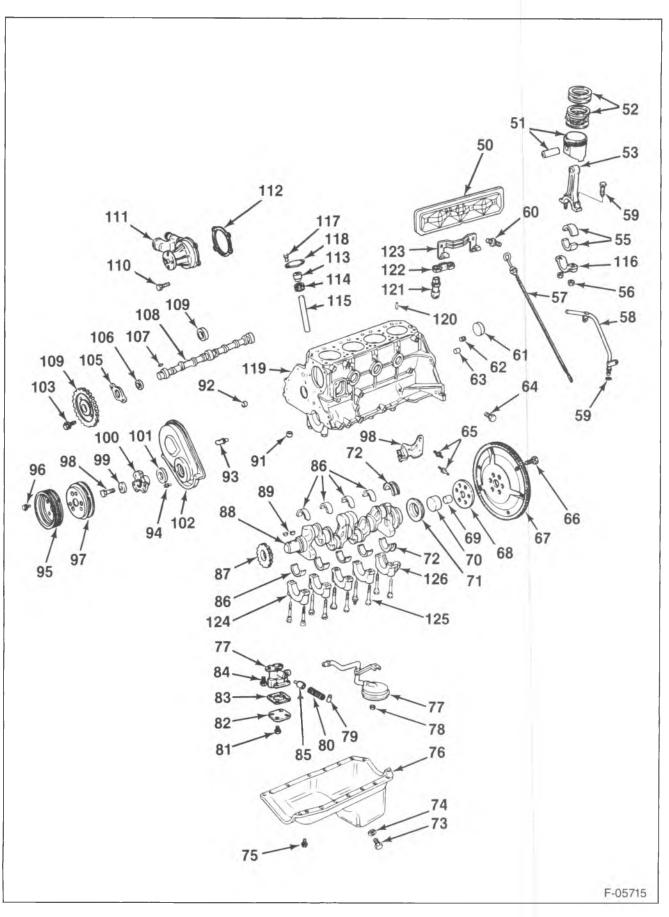
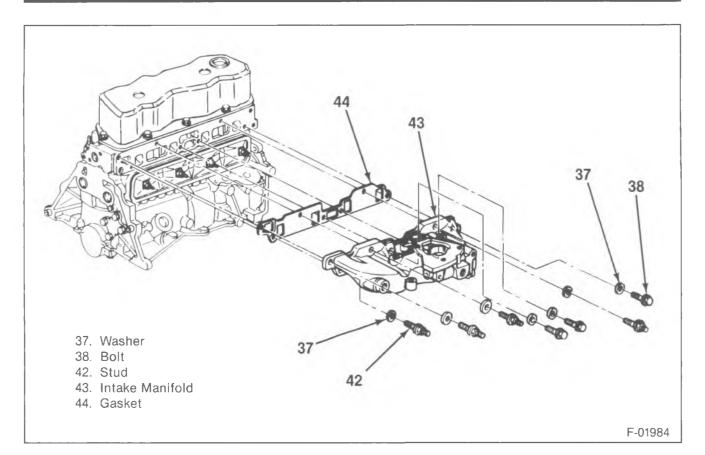


Figure 5—Block and Components

6A1-8 2.5 LITER L4 ENGINE





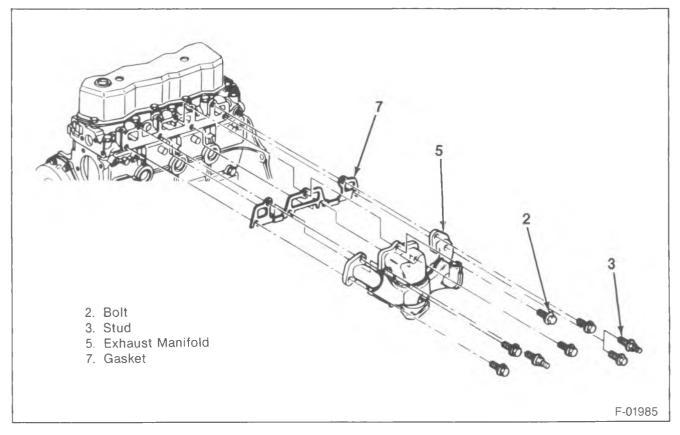


Figure 7—Exhaust Manifold Components

110. Bolt 111. Coolant Pump 112. Gasket F-01987

Figure 8—Water Pump

VALVE TRAIN COMPONENT REMOVAL

Tools Required:

J 34144-A Rocker Arm Cover Remover J 3049 Valve Lifter Remover (Plier Type)

Remove or Disconnect (Figures 2, 3, 9, 10, 11, and 12)

1. Rocker arm cover bolts.

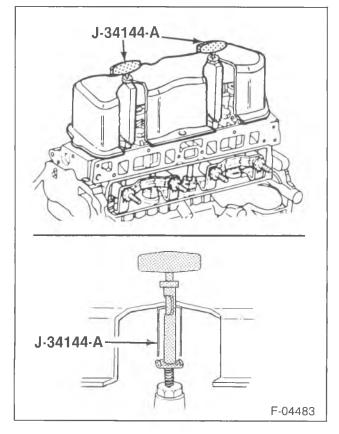


Figure 9—Removing the Rocker Arm Cover

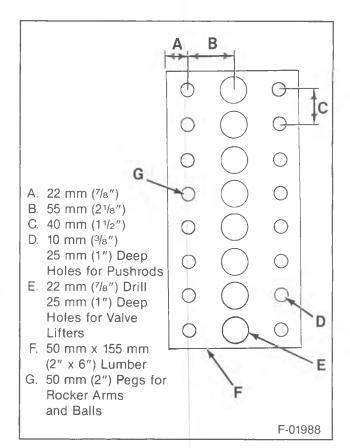


Figure 10—Valve Train Component Rack

- 2. Rocker arm cover. Use J 34144-A (figure 9).
- 3. Bolts (31), balls (32), rocker arms (33), pushrods (47) and pushrod guides (45).
 - Every effort should be made to insure that these mating parts are installed in their original locations during assembly. A simple valve train component organizer rack can be made from a piece of wood, as shown in figure 10.
- 4. Pushrod cover nuts, studs, and the cover (50).
 - Unscrew the four nuts from the cover attaching studs, reverse two of the nuts so the washers face outward and screw them back onto the inner two studs. Assemble the two remaining nuts to the same two inner studs with washers facing inward. Using a small wrench on the inner nut, on each stud, jam the two nuts tightly together. Again, using the small wrench on the inner nut, unscrew the studs until the cover breaks loose.
 - After breaking the cover loose, remove the jammed nuts from each stud. Remove the cover from the studs.
- 5. Retainers (123).
- 6. Hydraulic lifter guides (122).
- 7. Hydraulic lifters.
 - Remove the valve lifters one at a time and place them in the organizer rack. The valve lifters must be installed in the same bore from which they were removed.
 - A stuck valve lifter can be removed using J 3049.

2.5 LITER L4 ENGINE 6A1-9

6A1-10 2.5 LITER L4 ENGINE

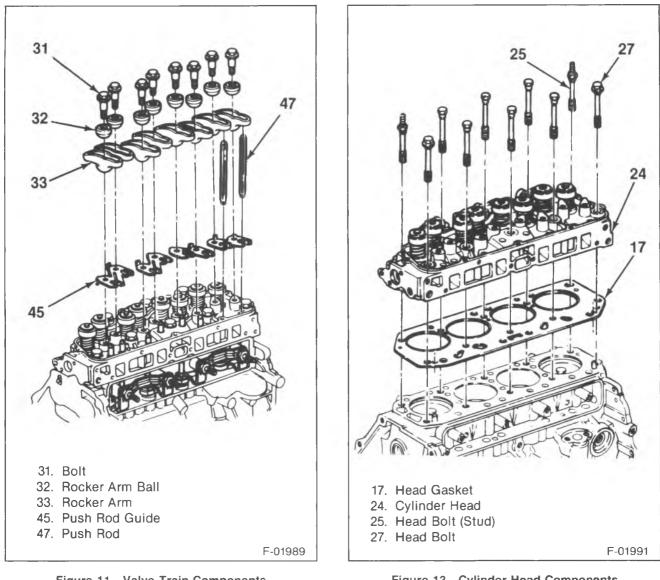


Figure 11-Valve Train Components

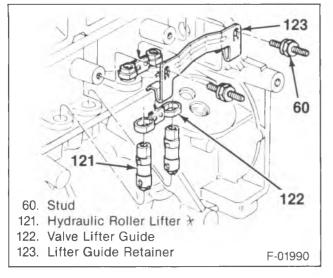




Figure 13—Cylinder Head Components

CYLINDER HEAD REMOVAL

****** Remove or Disconnect (Figure 13)

- 1. Bolts (25 and 27).
- 2. Cylinder head (24). Use care when handling the cylinder head to prevent damage to the gasket surfaces.
- 3. Gasket (17).

CRANKSHAFT PULLEY HUB REMOVAL

- Remove or Disconnect (Figure 5 and 14)
- 1. Bolt (98) and washer (99).
- 2. Pulleys (96 and 97) and hub (100).

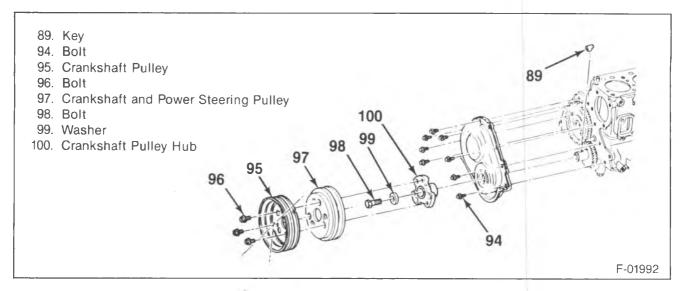


Figure 14—Timing Gear Cover and Components

OIL PAN REMOVAL



- Remove or Disconnect (Figure 5)
- 1. Bolts (75).
- 2. Oil pan (76).
 - If the rocker arm cover adheres to the block, try to shear the sealant from the block by bumping the end of the oil pan with a rubber mallet. If the cover will not come loose, carefully pry until loose. DO NOT DISTORT THE SEALING FLANGE.

OIL PUMP DRIVESHAFT REMOVAL

←→ Remove or Disconnect (Figures 5 and 15)

- 1. Bolts (117).
- 2. Plate (118).
- 3. Bearing (113).
- 4. Shaft and gear assembly (115 and 114).

OIL PUMP REMOVAL

Remove or Disconnect (Figure 5)

- 1. Bolts (84) and nut (78) at oil screen bracket.
- 2. Oil pump (77).

FRONT COVER REMOVAL

++ Remove or Disconnect (Figures 5 and 14)

- 1. Timing gear cover bolts (94).
- 2. Timing gear cover (102).
 - If the timing gear cover adheres to the cylinder head, carefully pry it loose. DO NOT DISTORT THE SEALING FLANGE.

PISTON AND CONNECTING ROD REMOVAL

Remove or Disconnect (Figures 5, 16 and 17)

1. Ridge (or deposits) at the top of the cylinder as follows:

• Turn the crankshaft until one piston is at the bottom of its stroke. Place a soft cloth on top of the piston.

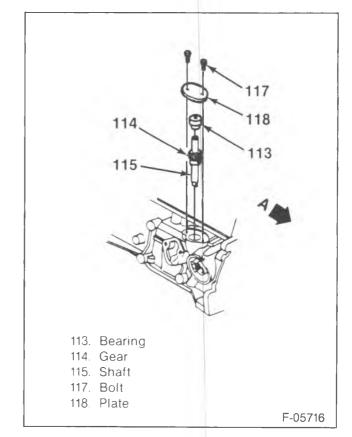


Figure 15-Oil Pump Drive Shaft

6A1-12 2.5 LITER L4 ENGINE

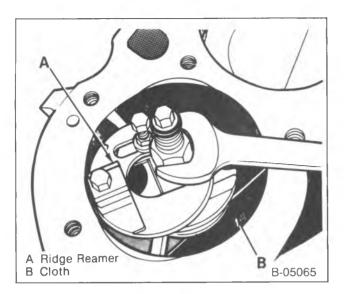


Figure 16—Removing the Cylinder Ridge

- Using the manufacturer's directions, install a ridge reamer into the top of the cylinder. Perform the cutting operation.
- After the ridge and/or deposits are removed, remove the ridge reamer. Turn the crankshaft until the piston is at the top of its stroke. Remove the cloth and the cuttings.
- · Repeat this procedure for each piston.
- 2. Connecting rod caps (116) as follows: Take note of the arrangement of the connecting rod (53)

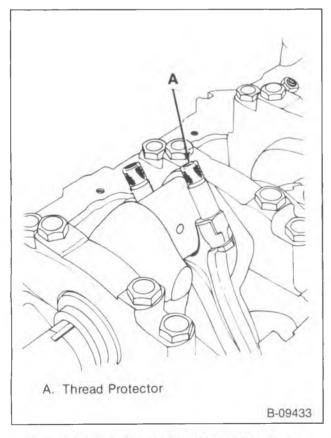


Figure 17—Connecting Rod Thread Protectors

markings, to insure proper reassembly. Use a silver pencil to mark the parts if necessary.

- To avoid mismatching the connecting rods and connecting rod caps, remove only one connecting rod cap at a time. Place the piston at the bottom of its stroke.
- Remove the nuts (56).
- · Remove the connecting rod cap.
- Install two sections of 10 mm (3/8-inch) rubber hose over the connecting rod studs. This will prevent the connecting rod studs from scratching the bore or crankshaft journal during the removal process.
- 3. Connecting rod (53) and piston (51) from the block.
 - Push the connecting rod and piston from the block being careful not to let the connecting rod contact the cylinder bore.
 - Loosely assemble the connecting rod cap (116) onto the connecting rod.
 - Take note of, or mark the connecting rod and piston assembly and the cylinder bore to assure that each assembly is returned to its original bore.
 - Repeat this procedure on the remaining connecting rod assemblies.

FLYWHEEL REMOVAL

Remove or Disconnect (Figure 5)

- 1. Flywheel bolts (66).
- 2. Flywheel (67).
- 3. Spacer (68).

CRANKSHAFT REMOVAL

The main bearings and rear oil seal can be replaced without removing the crankshaft, as outlined later in this section.

++ Remove or Disconnect (Figures 5, 18 and 19)

- Check the main bearing caps (124 and 126) location markings. The main bearing caps are numbered 1 through 5 from the front to the rear of the engine. The caps must be returned to their original locations during engine assembly.
- 1. Crankshaft timing gear (87).
- 2. Bolts (125).
- 3. Main bearing caps (124 and 126).
- Crankshaft (88). Lift the crankshaft straight up, taking care to avoid damage to the crankshaft journals and thrust flange surfaces.
- 5. Seal (71).
- 6. Main bearing inserts (figure 19).
 - If the main bearing inserts are to be reused, mark them to insure they are installed in their original positions before removal.

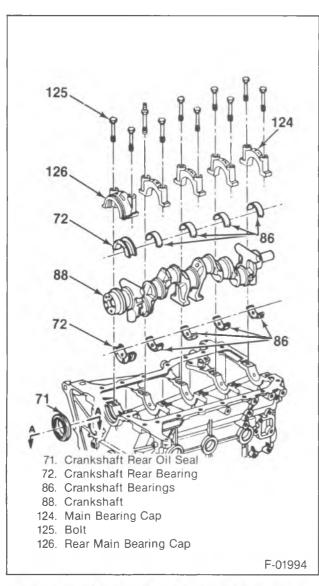
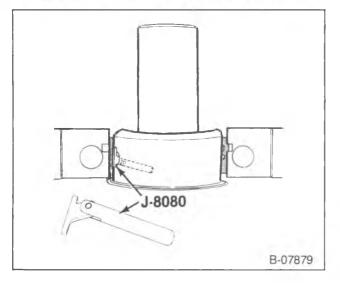


Figure 18-Crankshaft and Bearing Components





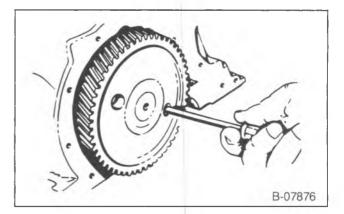


Figure 20—Removing the Camshaft Thrust Plate Bolts

CRANKSHAFT REAR OIL SEAL REMOVAL (WITHOUT REMOVING CRANKSHAFT)

Remove or Disconnect (Figure 5)

NOTICE: Care must be taken not to damage the crankshaft outside diameter surface with the pry tool.

- 1. Rear crankshaft oil seal.
 - Pry the seal out with a screwdriver. Take care not to scratch the crankshaft.

MAIN BEARING REMOVAL (WITHOUT REMOVING THE CRANKSHAFT)

Remove or Disconnect

Tool Required:

J 8080 Main Bearing Remover/Installer

- 1. Main bearing caps (124 and 126).
 - Check the main bearing caps for location markings. Mark the caps if necessary. The caps must be returned to their original locations during assembly.
- 2. Lower main bearing inserts (86) from the main bearing caps.
- 3. Upper main bearing inserts (86).
 - Insert J 8080 into the crankshaft oil hole.
 - Rotate the crankshaft to "turn" the bearing out of the block.

CAMSHAFT REMOVAL



Remove or Disconnect (Figures 5, 20 and 21)

- Turn the camshaft (108) until the bolts (103) are visible through the holes in the camshaft gear (104).
 1. Bolts (103).
- 2. Camshaft (108). Pull the camshaft out of the block. Support the camshaft carefully when removing to prevent damage to the camshaft bearings.

6A1-14 2.5 LITER L4 ENGINE

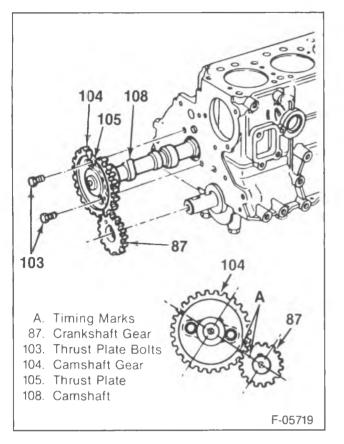


Figure 21—Camshaft and Timing Gears

CLEANING, INSPECTION, AND REPAIR

A solvent tank, large enough to hold the larger engine parts, will be needed along with various bristle brushes and a gasket scraper. A source of compressed air will be helpful in the cleaning operations.

Precision measuring tools will be required for the inspection procedure. These include: micrometers, cylinder bore gage, feeler gages, dial indicator set, etc. The inspection work, performed with the proper method and tools, is most important. The rebuilt engine cannot be expected to perform properly if parts worn beyond acceptable limits are reused.

BLOCK



- Clean (Figure 5)
 Block (119) in solvent.
- 2. Block gasket surfaces.
- 3. Cylinder bores.
- 4. Oil galleries and passages.
- 5. Scale deposits from the coolant passages.

Inspect

- 1. All expansion plugs for looseness or leakage.
- 2. Valve lifter bores for deep scratches and varnish deposits.
- 3. Block for cracks, especially in the following areas:
 - · Cylinder walls.
 - · Coolant jackets.
 - Main bearing webs.
 - Engine mount bosses.
- 4. Main bearing bores and main bearing caps (124 and 126).
 - All main bearing bores should be round and have a uniform inside diameter at all of the bearing supports.
 - The area where the main bearing inserts (86 and 72) contact the main bearing bore should be smooth.



Measure (Figure 22)

 Head gasket surface distortion. Use a straight edge and a feeler gage to check for flatness of the milled surface at the top of the cylinder block. The surface

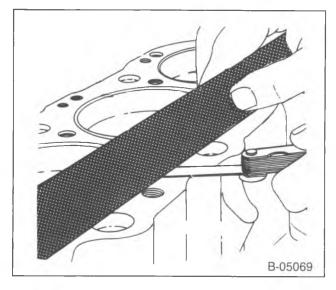


Figure 22—Checking the Block Gasket Surface

must be flat within 0.10 mm (0.004-inch) to assure that the gasket will provide a tight seal between the cylinder head and the block.

CYLINDER BORES

For information regarding cylinder bore measuring and reconditioning, refer to GENERAL ENGINE MECHANICAL (SEC. 6A).

PISTON AND CONNECTING ROD ASSEMBLIES

For information regarding disassembly, cleaning and inspection and assembly of piston and connecting rod assemblies, refer to GENERAL ENGINE MECHANICAL (SEC. 6A).

For piston selection information, refer to "Piston Selection" in this section.

PISTON SELECTION

In order to select the proper piston for each bore, it is necessary to measure the outside diameter of the piston and the inside diameter of the bore. Once the diameters have been measured, the difference between the bore diameter and the piston diameter will be the piston to bore clearance.

1. Check the used piston to cylinder bore clearance.

All Measure (Figures 23 and 24)

- Cylinder bore diameter using a telescoping bore gage. Measure the bore parallel to the crankshaft at the gaging point which is 57.15 mm (2.25-inch) from the top of the cylinder bore. By measuring at this point, the smallest bore diameter will be obtained.
- Piston diameter with a micrometer. Measure the piston skirt at a right angle to the piston pin, at the centerline of the piston pin, which is

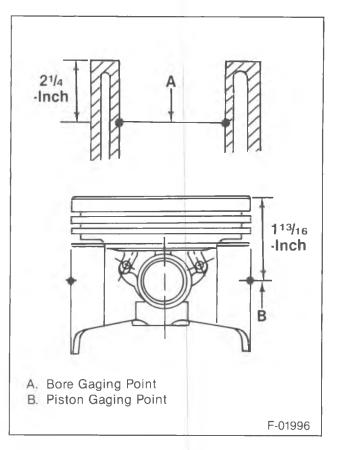


Figure 23—Measuring the Piston Diameter

46.037 mm (1 ^{13/}16-inch) from the piston crown. By measuring at this point, the largest piston diameter will be obtained.

- Subtract the piston diameter from the cylinder bore diameter to determine the piston to bore clearance.
- Refer to "Specifications" at the end of this section to determine if the piston clearance is in the acceptable range.
- 2. If the used piston is not acceptable, determine if a new piston can fit the cylinder bore.
- 3. If a new piston does not bring the clearance within tolerances, the cylinder bore must be reconditioned.
- Mark the piston to identify the cylinder for which it was fitted.

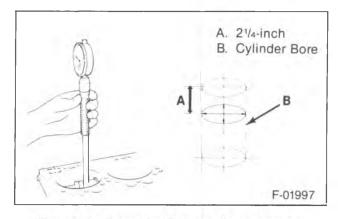


Figure 24—Measuring Cylinder Bore Diameter

6A1-16 2.5 LITER L4 ENGINE

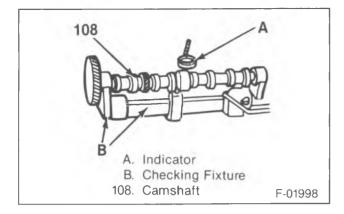


Figure 25—Measuring Camshaft Journal Runout

INTAKE AND EXHAUST MANIFOLDS

Clean

Old pieces of gasket from the gasket surfaces.

Inspect

- Manifolds for cracks, broken flanges, etc.
- Gasket surfaces for heavy scratches.

CAMSHAFT

Inspect (Figure 5)

- Camshaft lobes and journals for scratches, pitting, scoring, and wear.
- Timing gear for damaged or missing teeth.

Measure (Figures 25 through 27)

Tool Required:

J 7872 Dial Indicator (or equivalent)

 Camshaft runout. Mount the camshaft between centers or in V-blocks. Using tool J 7872 (or equivalent), check the intermediate camshaft

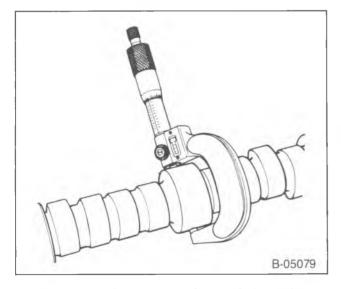


Figure 26—Checking the Camshaft Journals

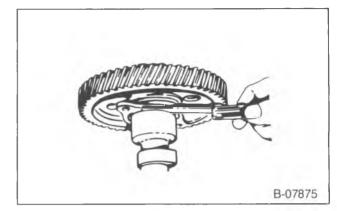


Figure 27—Measuring Camshaft Thrust Plate Clearance (Camshaft End Play)

journals. If runout exceeds 0.020-inch, the camshaft is excessively bent and should be replaced, along with the camshaft bearings.

- Camshaft journal out of round. Use a micrometer. If the journals are more than 0.001-inch out of round, replace the camshaft.
- Camshaft journal diameter. Use a micrometer. The proper diameter is 1.869-inch.
- Thrust plate (105) to camshaft (108) clearance. This clearance governs camshaft end play. Use a feeler gage. The proper clearance is 0.0015-inch to 0.0050-inch. If the clearance is less than 0.0015-inch replace the spacer ring (106). If the clearance is more than 0.0050-inch, replace the thrust plate (105).



Disassemble (Figure 28)

- 1. Gear (104) from the camshaft.
 - Place the camshaft gear in a press. Support the camshaft gear. DO NOT support the thrust plate.

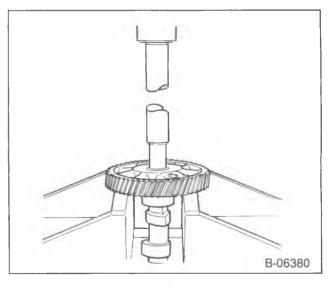


Figure 28—Removing the Camshaft Gear

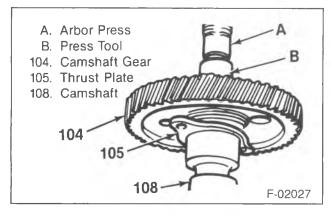


Figure 29—Installing the Camshaft Gear

NOTICE: The thrust plate must be positioned so that the woodruff key (107) does not damage it during the removal operation.

- Press the camshaft (108) out of the camshaft gear.
- 2. Thrust plate (105).
- 3. Spacer (106).

🔆 Assemble (Figure 29)

- Support the camshaft on the back of the front journal in an arbor press using press plate adapters.
- Lubricate the thrust plate with engine oil.
- 1. Woodruff key (107).
- 2. Spacer (106).
- 3. Thrust plate (105).
- 4. Camshaft gear (104).
 - Make sure that the timing mark is to the outside.
 - Press the camshaft gear onto the camshaft until it bottoms on the spacer (106).
 - · Remove the camshaft from the press.

Measure (Figure 27)

 Camshaft to thrust plate clearance using a feeler gage. The correct clearnce is 0.0015-inch to 0.0050-inch.

CAMSHAFT BEARINGS

Remove or Disconnect (Figure 30)

Tool Required:

- J 33049 Universal Camshaft Bearing
- Remover and Installer
- 1. Expansion plug.
 - Drive out the plug from inside the block at the rear camshaft bearing.
- 2. Front and rear bearings (109) using J 33049.
 - Drive the bearings towards the center of the block.
- 3. Center bearing using J 33049.
 - Drive the bearing towards the rear of the engine.

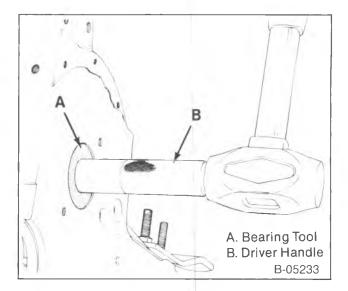


Figure 30—Removing or Installing Camshaft Bearings

→+ Install or Connect (Figure 30)

Tool Required:

- J 33049 Universal Camshaft Bearing Remover and Installer
- 1. Center bearing using J 33049.
 - Install the bearing from the front of the engine.
 - Make sure that the oil holes in the bearing are
 - aligned with the oil holes in the block.
- 2. Rear bearing (109) and expansion plug.
 - Drive the bearing in from the rear of the engine.
 - Make sure that the oil holes in the bearing are aligned with the oil holes in the block.
 - Drive the expansion plug into the block from the rear of the engine
- 3. Front bearing (109).
 - Drive the bearing into the block, and approximately 3.18 mm (1/8-inch) past the front surface of the block. This uncovers the timing gear oil nozzle hole.

FRONT COVER

Clean

Old RTV sealant from the sealing flange.

Inspect



- Front cover for cracks, large dents, etc.
- Sealing flange for straightness.

Disassemble (Figure 5)

Seal (101). Pry the seal out with a screwdriver.

Assemble (Figure 31)

Tool Required: J 34995 Crankshaft Front Cover

- Oil Seal Installer • New seal (101) using tool J 34995.
 - Support the inside of the front cover around the seal bore area.
- •

6A1-18 2.5 LITER L4 ENGINE

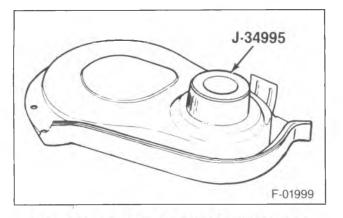


Figure 31—Installing the Front Crankshaft Seal

- Press the seal into place. The open end of the seal faces inside the front cover.
- Lubricate the seal lips with grease.

WATER PUMP

🐨 Clean

Old gasket from the gasket surface.

Important

• Do not immerse the pump in solvent. The solvent may enter the pump's permanently lubricated bearings, dissolve the bearings' lubricant supply, and cause premature bearing failure.

Inspect

- Water pump shaft for roughness and end play. If the shaft does not turn smoothly, or if there is excessive end play, replace the water pump.
- Water pump body at the drain hole. If there is evidence of coolant leakage, the water pump shaft seal is leaking, and the water pump should be replaced.

OIL PAN AND ROCKER ARM COVER

🖤 Clean

- Parts in solvent. Remove all sludge and varnish.
- Old RTV sealant from the sealing flange.

Inspect

- Gasket flanges for bending or damage.
- · Oil pan for rock damage or cracks.
- · Drain plug threads for stripping.

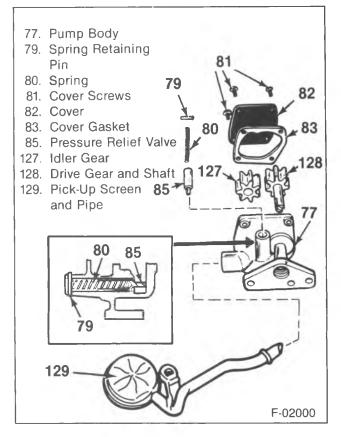


Figure 32—Oil Pump Components

OIL PUMP

Disassemble (Figure 32)

- 1. Cover screws (81).
- 2. Cover (82).
- 3. Gasket (83).
- Mark the gear teeth so the pump gears can be installed with the same gear teeth indexed.
- 4. Drive gear and shaft (128).
- 5. Idler gear (127).
- 6. Spring retaining pin (79).
- 7. Spring (80)
- 8. Pressure relief valve (85).
- 9. Pickup screen and pipe (129).
 - Do not remove the pickup screen and pipe unless replacement is required.
 - The pickup pipe is a press fit in the pump body.
 - Do not try to remove the screen from the pipe. The pickup screen and pipe is serviced as an assembly only.

Clean

 All parts in clean solvent and blow dry with compressed air.



- Pump body (77) and cover (82) for cracks or other damage.
- Gears (127 and 128) for wear.

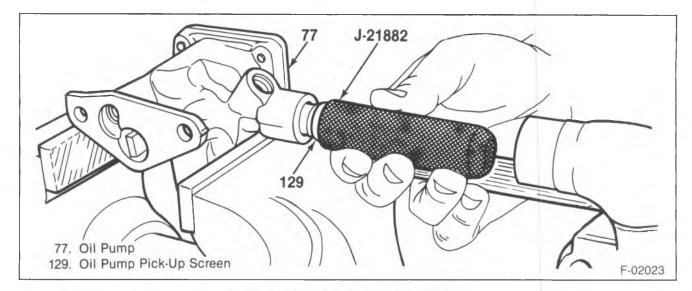


Figure 33-Installing the Oil Suction Pipe

- Drive gear and shaft (128) for looseness in the pump body (77).
- Inside of the cover (82) for wear that would permit oil to leak past the ends of the gears.
- The pump gears and body are not serviced separately.
- Pressure relief valve (85) for fit. The regulator valve should slide freely in its bore without sticking or binding



Assemble (Figures 32 and 33)

Tool Required:

- J 21882 Oil Suction Pipe Installer
- 1. Pressure relief valve (85).
- 2. Spring (80).
- 3. Spring retaining pin (79).
- 4. Drive gear and shaft (128).
- 5. Idler gear (127) in the pump body (77) with the smooth side of the gear toward the pump cover opening. Index the marks made during disassembly.
- 6. Gasket (83).
- 7. Cover (82) and screws (81).

Ð Tighten

- Screws to 14 N·m (10 ft. lbs.).
- Turn the driveshaft by hand to check for smooth operation.

NOTICE: Be careful of twisting, shearing or collapsing the pipe while installing in the pump.

- 8. Pick-up screen and pipe (129) (if removed).
 - If the pickup screen and pipe assembly was removed, it should be replaced with a new part. Loss of press fit condition could result in an air leak and loss of oil pressure.
 - · Mount the oil pump in a soft-jawed vise.
 - · Apply sealer to the end of the pipe.
 - Tap the pickup screen and pipe into place, using tool J 21882 and a hammer.
 - . The pump screen must be parallel with the bottom of the oil pan when installed.

VALVE TRAIN COMPONENTS

PUSHRODS, PUSHROD GUIDES. **ROCKER ARMS AND BALLS**

Clean

- Parts in solvent. Blow dry with compressed air.
- Make sure the oil passages in the pushrods are clear.

Inspect (Figures 3 and 10)

- Rocker arms (33) and balls (32) at their mating surfaces. These surfaces should be smooth and free from scoring or other damage.
- Rocker arm (33) areas which contact the valve stems, and the sockets which contact the pushrods (47). These areas should be smooth and free of damage and wear.
- Pushrods (47) for bending. Roll the pushrod on a flat surface to determine if it is bent. Replace if necessary.
- Ends of the pushrods (47) for scoring or roughness.

VALVE LIFTERS

For information regarding valve lifters refer to GENERAL ENGINE MECHANICAL (SEC. 6A) of this manual.

CYLINDER HEAD

Information regarding cylinder head disasembly and assembly is covered under this procedure. For information regarding cleaning and inspection, and measuring of the cylinder head as well as valve measuring and grinding and valve guide reconditioning, refer to GENERAL ENGINE MECHANICAL (SEC. 6A) in this manual.

6A1-20 2.5 LITER L4 ENGINE

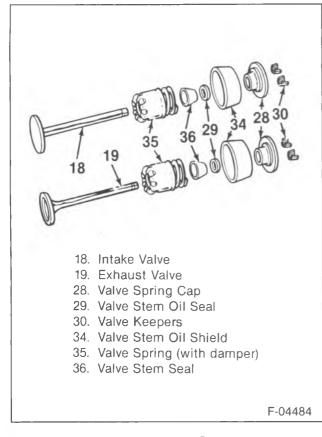


Figure 34—Valves and Components



Disassemble (Figures 34 and 35)

Tool Required:

- J 8062 Valve Spring Compressor
- 1. Valve keepers (30).
 - Compress the valve spring using J 8062.
 - · Remove the valve keepers.
 - Remove the tool.
- 2. Cap (28).
- 3. Valve spring (35) and shield (34).
- 4. Valve stem oil seals (29).
- Valves (18 and 19). Place them in a rack so they can be returned to their original position at assembly.
- 6. Valve stem seal (36).

For information on cylinder head measuring and reconditioning, refer to GENERAL ENGINE MECHANICAL (SEC. 6A) in this manual.

Assemble (Figures 34, 35 and 36)

Tools Required:

- J 8062 Valve Spring Compressor
- J 22330 Valve Stem Seal Checker
- and Tester
- 1. New valve stem seals (36).
 - Lubricate the seal in order to aid in assembly.
- 2. Valves (18 and 19).
 - Lubricate the valve stems with engine oil.
 - Insert the valves into the proper ports.
- 3. Valve spring (35) and shield (34).
- 4. Cap (28).
- 5. Valve keepers (30).

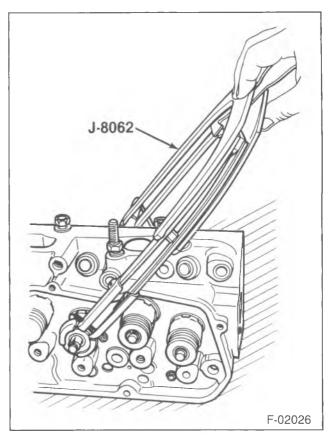


Figure 35—Compressing the Valve Springs

- Compress the valve springs using J 8062. Compress the spring enough so the lower valve stem groove can be clearly seen.
- Push a new valve stem oil seal (29) onto the valve stem. The seal is to be installed on the lower groove of the stem. Make sure the seal is flat and not twisted.
- Apply grease to the area of the upper valve stem groove. Assemble the two valve keepers, using the grease to hold the keepers in place.

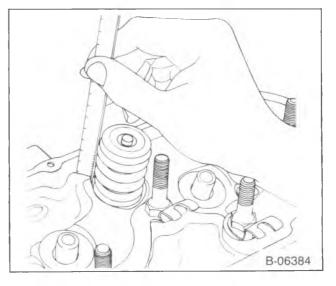


Figure 36—Measuring Valve Spring Installed Height

Make sure that the keepers seat properly in the groove.

- Repeat the preceding steps on the remaining valves.
- Check each valve seal using J 22330. Wet the suction cup portion of the tool lightly with engine oil. Place the suction cup over the valve stem cover and push the tool down to create a vacuum. If the vacuum remains at the tool, the seal is properly installed. If a vacuum cannot be obtained, or if the seal will not hold a vacuum, it may have been damaged or improperly installed.

1 Measure

- Valve spring installed height.
 - Use a narrow, thin scale. A cutaway scale may be helpful.
 - Measure from the valve shim or spring seat to the top of the valve cap.
 - If this measurement exceeds the figure given in "Specifications," install valve spring seat shims of sufficient thickness (between the spring and cylinder head) to give the desired measurement. Never shim the spring to give an installed height under the specified figure.

THERMOSTAT AND HOUSING

The thermostat is located in a housing bolted to the front of the cylinder head.

A thermostat consists of a restriction valve controlled by a thermostatic element. The restriction valve cranks or just starts to open at a predetermined temperature and continues to open as the engine coolant temperature increases. To assure proper cooling and engine warm-up it is important that the correct thermostat be used. Refer to the proper Truck Service Manual for the correct thermostat application.

Disassemble (Figure 3)

- 1. Bolts (8 and 9).
- 2. Water outlet (10).
- 3. Thermostat (12).
- 4. Gasket (11).

Inspect (Figure 3)

 Water outlet (10) and housing (13) for cracks or damage.

Assemble (Figure 3)

- 1. Thermostat (12).
- 2. Gasket (11).
- 3. Water outlet (10).
- 4. Bolts (8 and 9).



Bolts (8 and 9) to 23 N m (17 ft. lbs.).

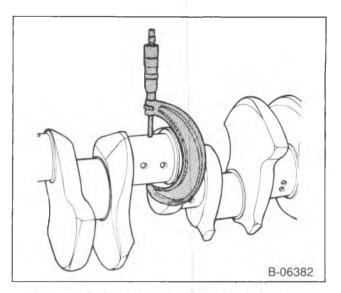


Figure 37—Measuring the Crankshaft Journals

CRANKSHAFT AND BEARINGS

Clean (Figure 5)

- Crankshaft (88) with solvent.
 - Do not scratch the bearing journals.
 - -- Blow all sludge from the oil passages with compressed air.
- Main bearing inserts. Wipe free of oil with a soft cloth.

Inspect (Figure 5)

- Crankshaft (88) for cracks. Use the magnaflux method, if available.
- Crankpins, main bearing journals and thrust surfaces for scoring, nicks, or damage caused by lack of lubrication.
- Main bearing inserts (86 and 72) for scoring or other damage.

In general, the lower inserts (except the #1 bearing) show a greater wear and the most distress from fatigue. If, upon inspection, the lower insert is suitable for use, it can be assumed that the upper insert is also satisfactory. If the lower insert shows evidence of wear or damage, both upper and lower inserts must be replaced.

- Crankshaft gear (87) for chipped or damaged teeth.

4 Measure (Figures 37 and 38)

 Main bearing and connecting rod journal diameters. Compare with "Specifications" at the end of this section.

Because the 2.5 L engine crankshaft is of the rolled fillet type, the crankshaft cannot be reground. If the measurements do not meet the specifications, replace the crankshaft.

- Main bearing and connecting rod journals for taper and out of round. If the journals are tapered or out of round more than 0.0005-inch, replace the crankshaft.
- Crankshaft runout.

6A1-22 2.5 LITER L4 ENGINE

- Mount the crankshaft in V-blocks or between centers.
- Use a dial indicator as shown.
- If the main bearing journals are misaligned, the crankshaft is bent and must be replaced along with the main bearings.

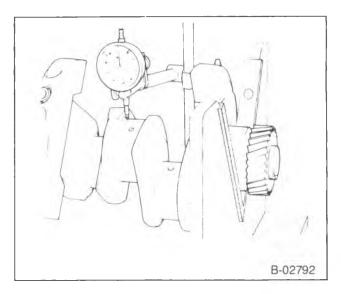


Figure 38—Checking Crankshaft Runout

ASSEMBLY OF ENGINE

PRIOR TO ASSEMBLY

The importance of cleanliness during the assembly procedure cannot be overstressed. Dirt will cause premature wear of the rebuilt engine.

Lubricate all moving parts lightly with engine oil or engine assembly lubricant (unless specified otherwise) during assembly. This will provide initial lubrication when the engine is started.

CRANKSHAFT AND MAIN BEARING INSTALLATION

Service bearing inserts are available in standard size and 0.001-inch undersize.



Install or Connect (Figures 5 and 39)

1. Upper main bearing inserts (86 and 72) to the block.

- If any previously used or undersized bearings are used, make absolutely certain that they are fitted to the proper journal.
- 2. Crankshaft (88). Take care not to damage the thrust areas.
- 3. Lower bearing inserts (86 and 72) to the bearing caps.

4 Measure

- Main bearing clearance. Refer to GENERAL ENGINE MECHANICAL (SEC. 6A) in this manual.
- 3. Engine oil to the lower main bearing inserts.

- 4. Main bearing caps (except the rear cap) with the selected lower main bering inserts (86 and 72). Be sure to put the main bearing cap in their original positions, with the arrows facing the front of the engine.
- 5. Bolts (125). Make sure the special bolt, which retains the oil pump pickup tube and screen is installed in the proper position. (#4 main bearing cap, camshaft side hole.)

री Tighten

Main bearing cap bolts to 95 N m (70 ft. lbs.).

- 6. Rear main bearing cap to the block.
- 7. Rear main bearing cap bolts. Tighten the bolts temporarily to 14 NFm (10 ft. lbs.).



- · Crankshaft end play, as follows:
- Tap the end of the crankshaft first rearward then forward with a lead hammer. This will line up the rear main bearing and crankshaft thrust surfaces.
- Tighten the rear main bearing cap bolts to 95 N·m (70 ft. lbs.).
- With the crankshaft forced forward, measure at the front end of the rear main bearing with a feeler gage. The proper clearance is 0.09 – 0.20 mm (0.0035 – 0.0085-inch).

Inspect

 Crankshaft for binding. Try turning the crankshaft to check for binding. If the crankshaft does not turn freely, loosen the main bearing cap bolts, one pair at a time, until the tight bearing is located. Burrs on the

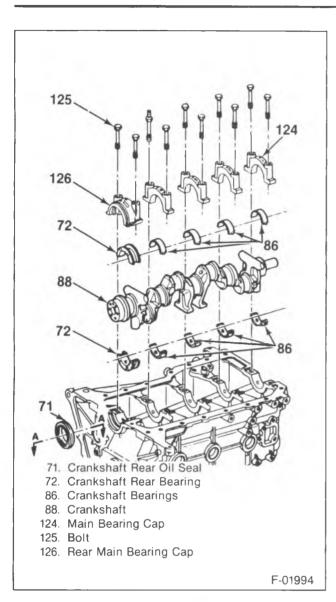
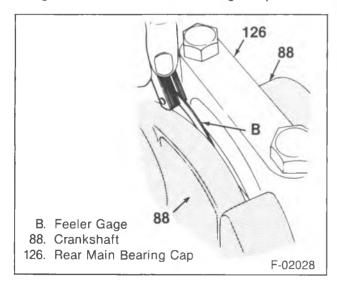


Figure 39—Crankshaft and Bearing Components





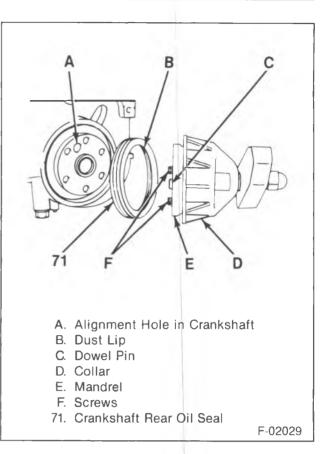


Figure 41—Installing the Rear Crankshaft Oil Seal

bearing cap, foreign matter between the insert and the block or the bearing cap, or a faulty insert could cause a lack of clearance at the bearing.

CRANKSHAFT REAR OIL SEAL INSTALLATION

Install or Connect (Figures 5 and 41)

Tool Required:

- J 34924-A Seal Installer
- Crankshaft rear oil seal using J 34924.
 - 1. Lubricate the seal inside diameter with engine oil.
 - 2. Slide the seal over the mandrel of the tool, until the dust lip (back of seal), mates squarely against the collar.
 - 3. Lubricate the seal outside diameter with engine oil.
 - 4. Position the tool with the seal in place against the crankshaft. Align the dowel with the alignment hole in the crankshaft. Tighten the screws firmly.
 - 5. Turn the T-handle of the tool until the collar seats firmly against the crankcase. This will insure that the seal is seated properly.
 - 6. Loosen the T-handle fully. Loosen the screws and remove the tool.

6A1-24 2.5 LITER L4 ENGINE

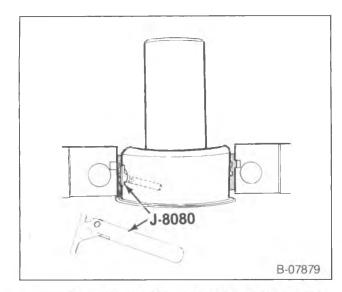


Figure 42—Installing the Upper Main Bearing Insert

MAIN BEARING INSTALLATION (WITHOUT REMOVING THE CRANKSHAFT)

Install or Connect (Figures 5 and 42)

Tool Required:

J 8080 Main Bearing Remover/Installer 1. Upper main bearing inserts.

- Insert tool J 8080 into a crankshaft main bearing hole.
- · Apply engine oil to the proper sized inserts.
- Insert the plain end of the insert (without the bearing tang) of the insert between the crankshaft and the notched side of the block.
- Rotate the crankshaft to "roll" the insert into the block.
- Remove the tool.
- 2. Lower main bearing inserts to the main bearing caps.
 - · Make sure the inserts are of the proper size.
 - Apply engine oil to the inserts.

1 Measure

 Main bearing clearance and crankshaft end play. Refer to "Crankshaft and Main Bearing Installation" in this section.

CAMSHAFT INSTALLATION

→← Install or Connect (Figure 3, 43, and 44)

- Coat the camshaft lobes with Engine Oil Supplement (GM part number 1051396) or equivalent. Coat the bearing journals with engine oil.
- 1. Camshaft (108) into the block (119). Take care not to damage the camshaft bearings (109).

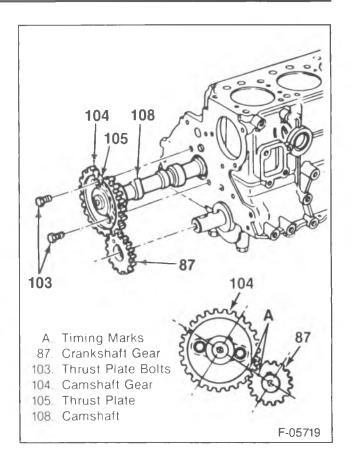


Figure 43—Camshaft and Timing Gears

Important
 Align the timing marks.

2. Screws (103).

- হি Tighten
 - Screws (103) to 9.0 N m (80 in. lbs.).

FRONT COVER

✦✦ Install or Connect (Figures 5, 45 and 46)

Tool Required: J 34995 Crankshaft Front Cover Oil Seal Installer

- 1. Tool J 34995 into the front cover seal.
- Apply a 10 mm (³/₈-inch) wide by 5 mm (³/₁₆-inch) thick bead of RTV sealer to the oil pan at the timing gear cover sealing surface.
- Apply a 6 mm (1/4-inch) by 3 mm (1/8-inch) thick bead of RTV to the timing gear cover at the block sealing surface. Refer to figure 45.

NOTICE: The correct tool must be used to align the timing gear cover so that the front crankshaft seal is properly centered around the crankshaft. The seal must be centered to prevent damage during hub installation.

2. Timing gear cover, with J 34995 in place, to the block.



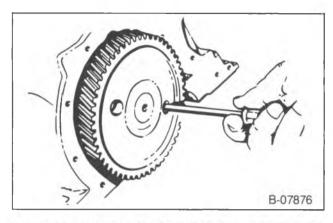


Figure 44—Installing the Camshaft Thrust Plate Bolts

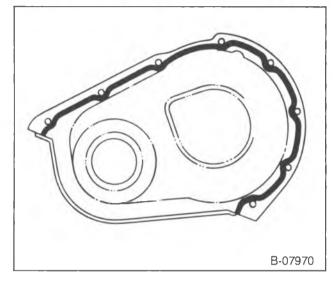


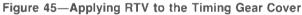

3. Bolts (94).

ス Tighten

- Bolts to 10.0 N m (90 in. lbs.).
- · Remove J 34995 from the timing gear cover.

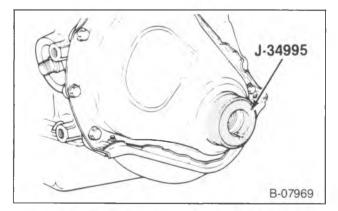



2.5 LITER L4 ENGINE 6A1-25

CRANKSHAFT PULLEY HUB INSTALLATION

Install or Connect (Figures 5 and 47)

- 1. Crankshaft pulley and hub. Slide the hub on the crankshaft until it bottoms against the crankshaft gear.
- 2. Bolt (98) and washer (99).

된 Tighten

• Hub retaining bolt to 220 N·m (160 ft. lbs.).

PISTON AND CONNECTING ROD INSTALLATION

← Install or Connect (Figures 5, 48 and 49)

Tool Required:

J 8037 Piston Ring Compressor

- Make sure the cylinder walls are clean. Lubricate the cylinder wall lightly with engine oil.
- Make sure the piston is installed in the matching cylinder. Refer to "Piston and Connecting Rod Assemblies" in this section.
- 1. Connecting rod bearing inserts (55).
 - Be certain that the inserts are the proper size.
 - Install the bearing inserts in the connecting rod and connecting rod cap.
 - Lubricate the bearings with engine oil.
- 2. Piston and connecting rod to the proper bore.
 - With the connecting rod cap removed. Install two sections of 10 mm (3/a-inch) rubber hose over the connecting rod studs.
 - Locate the piston ring end gaps as shown in figure 48. Lubricate the piston and rings with engine oil.
 - Without disturbing the ring end gap location, install J 8037 over the piston.
 - The piston must be installed so that the notch in the piston faces the front of the engine.
 - Place the piston in its matching bore. Using light blows with a hammer handle, tap the piston down into its bore. At the same time, guide the connecting rod into position on the crankpin. Hold the ring compressor against the block until all the rings have entered the cylinder bore.

CONNECTING ROD BEARING SELECTION

Service bearings are available in standard size and 0.001-inch undersize for use with new and used standard sized crankshafts. The 2.5 L engine is designed with a rolled fillet on the crankshaft journal to increase crankshaft strength. Do not grind a crankshaft with a rolled fillet. Undersize bearings other than 0.001-inch undersize are not available.



• Connecting rod bearing clearance. Refer to GENERAL ENGINE MECHANICAL (SEC. 6A).

6A1-26 2.5 LITER L4 ENGINE

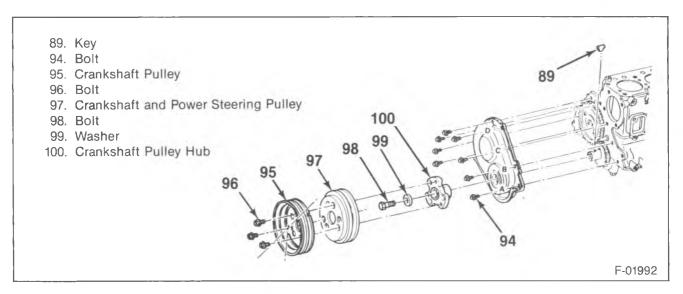


Figure 47—Timing Gear Cover and Components

FINAL ASSEMBLY

Install or Connect (Figure 5)

- Apply engine oil to the connecting rod bearing inserts (55) and crankshaft journal.
- 1. Connecting rod cap (116) with the lower connecting rod bearing insert (55).
- 2. Nuts (56).

হ্ম Tighten

• Nuts (56) to 44 N m (32 ft. lbs.).

4 Measure (Figure 50)

 Connecting rod side clearance. Use a feeler gage between the connecting rod and the crankshaft. The correct clearance is 0.15-0.60 mm (0.006-0.022-inch).

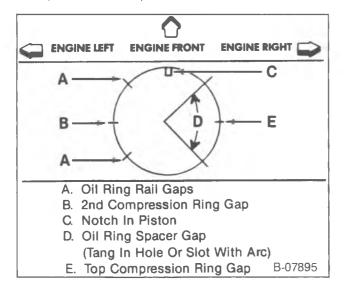


Figure 48—Piston Ring Gap Location

OIL PUMP INSTALLATION

Install or Connect (Figure 5)

1. Oil pump.

- Align the oil pump shaft with the tang on the oil pump driveshaft.
- Position the oil pump over the oil pump driveshaft lower bushing. No gasket is used. The oil pump should slide easily into place.

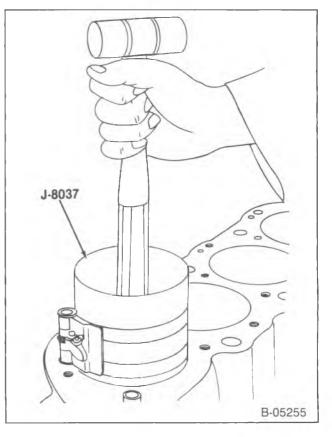


Figure 49—Installing the Piston

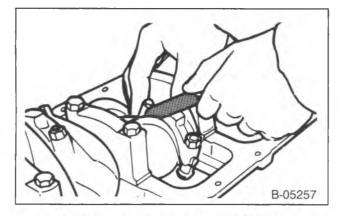


Figure 50—Measuring Connecting Rod Side Clearance

2. Oil pump bolts (84) and nut (78).

री Tighten

- Bolts (84) to 30 N·m (22 ft. lbs.).
- Nut (78) to 50 N·m (38 ft. lbs.).

OIL PAN INSTALLATION

→+ Install or Connect (Figures 5 and 51)

- Apply RTV sealant to the oil pan flange and block. Refer to figure 51.
- 1. Oil pan (76).
- 2. Bolts (75).

र्ची Tighten

• Oil pan bolts to 10.0 N·m (90 in. lbs.).

2.5 LITER L4 ENGINE 6A1-27

OIL PUMP DRIVESHAFT INSTALLATION

++ Install or Connect (Figures 5 and 52)

- 1. Shaft and gear assembly (115 and 114). Turn the shaft until it indexes the oil pump shaft pilot properly in the oil pump body.
- 2. Bearing (113).
- 3. Plate (118). Apply RTV to the plate as shown in figure 52.
- 4. Bolts (117).
 - [氏] Tighten
 - Bolts to 14 N m (120 in. lbs.).

CYLINDER HEAD INSTALLATION

Install or Connect (Figures 3 and 53)

- Make sure the block and cylinder head sealing surfaces are clean.
- 1. Head gasket to the block. Install over the dowel pins.
- 2. Cylinder head. Carefully guide the head into place over the dowel pins. This may require an assistant.
- 3. Cylinder head bolts. Refer to figure 53.

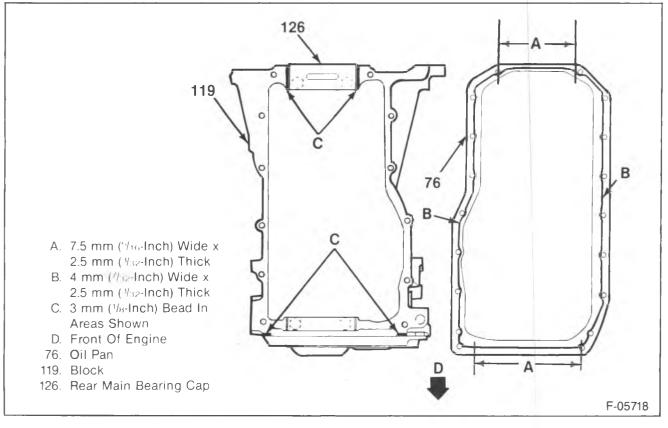


Figure 51—Applying RTV to the Oil Pan and Block

6A1-28 2.5 LITER L4 ENGINE

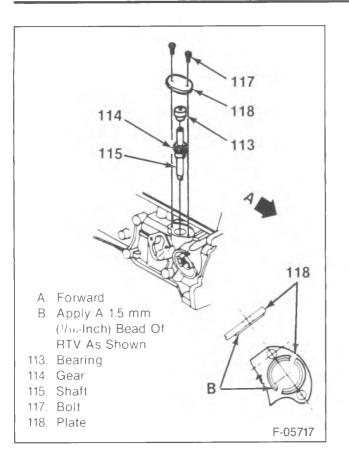


Figure 52—Oil Pump Drive Shaft

- Cylinder head bolts should be washed in solvent and dry at the time of installation. All residual oil should be wiped from the cylinder head mating surfaces.
- Coat the threads of bolt 9 with sealing compound (Part Number 1052080 or equivalent).
- Apply a light coat of engine oil to the threads and underside of the bolt heads of bolts 1 through 8.

री Tighten

- 1. All head bolts to 25 N m (18 ft. lbs.) in the specified sequence (refer to figure 53).
- All head bolts except number 9 to 35 N·m (26 ft. lbs.). Number 9 bolt should be tightened to 25 N·m (18 ft. lbs.). Tighten the bolts in the specified sequence.
- Draw a line across the head of each bolt with a marking crayon to mark the position of each bolt.
- 3. All head bolts, 90 degrees (1/4 turn). Tighten the bolts in the specified sequence.

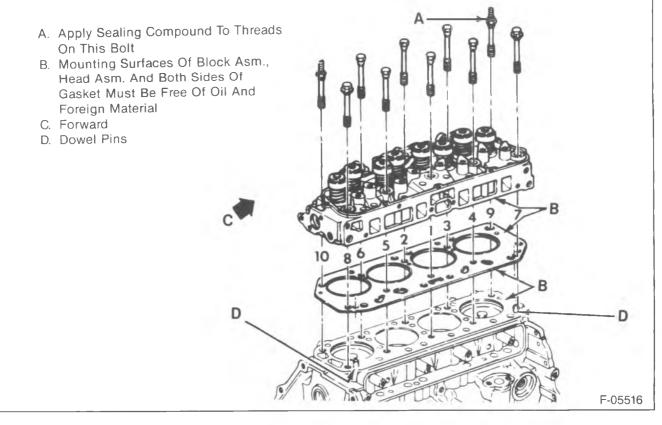
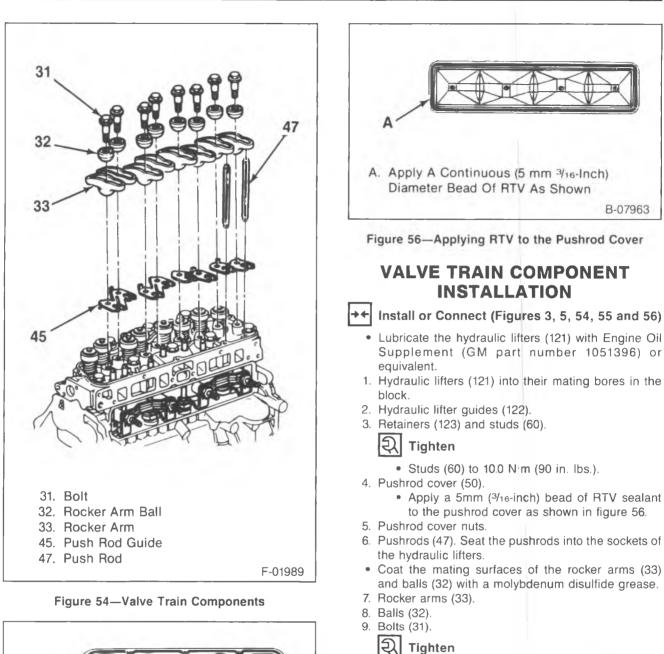


Figure 53—Cylinder Head Installation



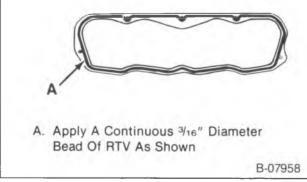


Figure 55—Applying Sealant to the Rocker Arm Cover

_

WATER PUMP INSTALLATION

• Bolts to 30 N m (22 ft. lbs.). DO NOT

Apply a 5 mm (³/₁₆-inch) bead of RTV sealant to the rocker arm cover, inboard of the bolt holes.
10. Rocker arm cover to the cylinder head. Install the cover while the RTV is still wet (within 10 minutes).

2.5 LITER L4 ENGINE 6A1-29

→← Install or Connect (Figure 57 and 58)

Bolts to 5.0 N m (48 in, lbs.).

OVERTIGHTEN.

11. Rocker arm cover bolts.

Q Tighten

- 1. Gasket.
- 2. Water pump.
- 3. Bolts.
- 4. Water pump pulley.

6A1-30 2.5 LITER L4 ENGINE

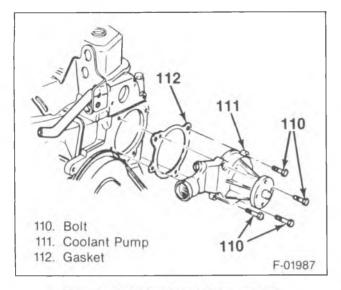


Figure 57—Water Pump Components

5. Fan and fan clutch.

THERMOSTAT HOUSING INSTALLATION

→← Install or Connect (Figure 58)

- 1. Thermostat housing and new gasket.
- 2. Thermostat housing bolts.
- 3. Thermostat bypass hose.

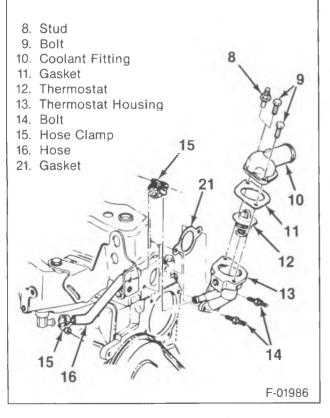


Figure 58—Thermostat Housing Components

INTAKE MANIFOLD INSTALLATION

- ← Install or Connect (Figure 59)
- 1. Gasket.
- Apply sealant to the bolts indicated in figure 59.
- 2. Intake manifold.
- 3. Intake manifold bolts and washers.
 - री Tighten

Intake manifold bolts to 34 N m (25 ft. lbs.).

4. Vacuum lines and electrical connectors, as needed.

EXHAUST MANIFOLD INSTALLATION

Install or Connect (Figure 60)

- 1. Exhaust manifold and a new gasket.
- 2. Exhaust manifold bolts and washers.



- Exhaust manifold bolts. Use the tightening sequence and the specifications shown in figure 60.
- 3. Oxygen sensor wire.
- 4. Thermac heat stove pipe.

FLYWHEEL INSTALLATION

- →+ Install or Connect (Figure 5)
 - 1. Spacer (68).
 - 2. Flywheel (67).
 - 3. Bolts (66).
 - J Tighten
 - Flywheel bolts (66).
 - Automatic transmissions: 75 N·m (55 ft. Ibs.).
 - Manual transmissions: 90 N·m (65 ft. lbs.).

ENGINE ACCESSORY INSTALLATION

Install the engine accessories (distributor, TBI unit oil filter, generator, etc.) as directed in the proper Truck Service Manual. Connect all vacuum hoses and electrical equipment the same way as removed.

ENGINE SETUP AND TESTING

1. After overhaul, the engine should be tested before installing it in the vehicle. If a suitable test stand is not available, the following procedure can be used after the engine is installed in the vehicle.

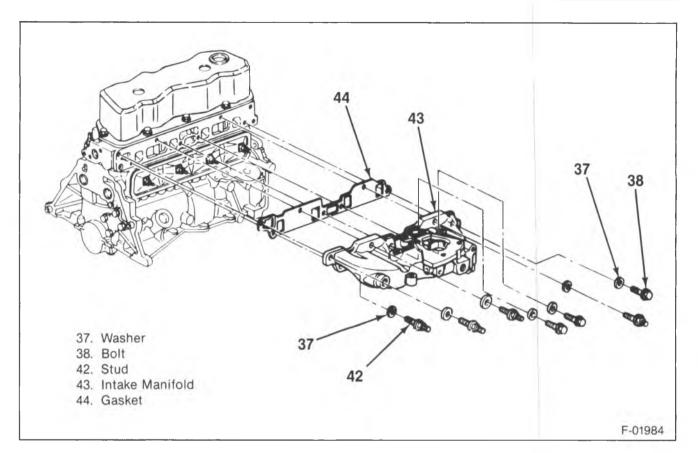


Figure 59—Intake Manifold Installation

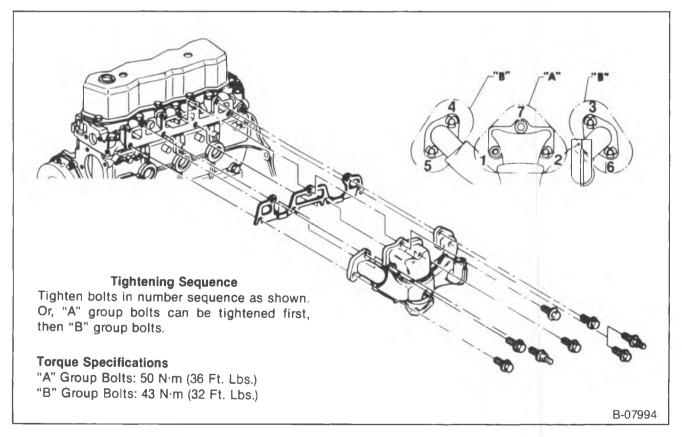


Figure 60—Exhaust Manifold Installation

6A1-32 2.5 LITER L4 ENGINE

- 2. Fill the crankcase with the proper quantity and grade of oil. Refer to the proper Truck Service Manual or Owner's and Driver's Manual for this information. Fill the cooling system with the proper coolant.
- 3. With the ignition "OFF" or disconnected, crank the engine several times. Listen for any unusual noises or evidence that any parts are binding.
- 4. Start the engine and listen for unusual noises. Run the engine at about 1000 rpm until the engine is at operating temperature.
- 5. Listen for improperly adjusted valves or sticking lifters, or other unusual noises.
- 6. Check for oil and coolant leaks while the engine is running.
- 7. Using the proper Truck Service Manual or Emission Control Label for specifications, adjust the ignition timing and idle rpm.

SPECIFICATIONS

ENGINE SPECIFICATIONS

All Specifications are in INCHES unless otherwise noted.

GEI	NERAL DATA:				
Туре	Э		L-4		
Disp	lacement		2.5L		
RPC)		LN8		
Bore	Э		4.00		
Stro	ke		3.00		
Соп	npression Ratio		8.3:1		
Firir	ng Order		1-3-4-2		
Oil I	Pressure		36–41 psi @ 2000 RPM		
CYL	INDER BORE:				
Diameter			4.000		
Ou	t Of Round		0.001 (Maximum)		
Тар	er-Thrust Side		0.005 (Maximum)		
PIS	TON:				
Clea	arance		0.0014-0.0022		
PIS	TON RING:				
C O M	Groove	Тор	0.002-0.003		
P R	Clearance	Second	0.001-0.003		
E S I O N	Gap	Тор	0.010-0.020		
		Second	0.010-0.020		
0	Groove Clearance		0.015-0.0.55		
L	Gap		0.020-0.060		
PIS'	TON PIN:				
Diar	neter		0.938–0.942		
Clea	rance in Piston		0.0002-0.0004		
Fit In Rod			Press		
OIL					
Gea	r Lash		0.009-0.015		
Gea	r Pocket Depth		0.995-0.998		
Gea	r Pocket Diamete	r	1.503–1.506		
Gea	r Length		0.999–1.002		
Gea	r Diameter		1.496–1.500		
Gea	r Side Clearance		0.004 (Maximum)		
	Clearance		0.002-0.005		

F-04485

6A1-34 2.5 LITER L4 ENGINE

SPECIFICATIONS

ENGINE SPECIFICATIONS (CONT.)

All specifications are in INCHES unless otherwise noted.


CRANKSHAF	T:				
	Diameter		2.300		
Main Taper			0.0005		
Journal	Out of Round	t l	0.0005		
Main. Bearing	Clearance		0.0005-0.0022		
Crankshaft Er	nd Play		0.0035–0.0085		
	Diameter		2.000		
Crankpin	Taper		0.0005		
	Out of Round	d	0.0005		
Rod Bearing (Clearance		0.0005-0.0026		
Rod Side Clea	arance		0.006-0.002		
CAMSHAFT:					
Lobe Lift (Intake and Exhaust)			0.398		
End Play			0.015–0.0050		
Journal Diam	eter		1.869		
Journal Clear	ance		0.0007-0.0027		
VALVE SYST	EM:		- ·		
Lifter Type			Hydraulic		
Lifter Leak —	Down Rate		12-90 Seconds with 50 lb. load		
Lifter Body Di	ameter		0.8420-0.8427		
Lifter Bore Dia	ameter		0.8435–0.8445		
Lifter Clearan	ce in Bore		0.0025		
Plunger Trave			0.125		
Pushrod Leng	jth		8.299		
Valve Lash			NOT ADJUSTABLE		
Rocker Arm F	Ratio		1.75:1		
Face Angle (I	ntake & Exhaus	t)	45°		
Seat Angle (Ir	ntake & Exhaust)	46°		
Seat Runout	Seat Runout (Intake & Exhaust)		0.002		
Seat Width	Intake		0.035-0.075		
	Exhaust		0.058-0.097		
Stem Clearan	Intake		0.0010-0.0025		
		Exhaust	0.0013-0.0030		
Stem Diamete		Intake	0.3133–0.3138		
		Exhaust	0.3128–0.3135		
	Free Length		1.78		
Valve	Pressure	Closed	71-78 lbs. @ 1.440		
Spring	N @ mm	Open	158-170 lbs. @ 1.040		
	Installed Height		1.440		

F-04486

SPECIFICATIONS (CONT.)

TORQUE SPECIFICATIONS

Item	N⁺m	Ft. Lbs.	In. Lbs.
Main Bearing Cap Bolts	95	70	
Connecting Rod Nuts	44	32	
Oil Pan Bolts (All).	10.0		90
Oil Pump to Block Bolts	30	22	_
Oil Pickup Tube Nut	50	38	
Oil Pump Cover Bolts	14.0	_	120
Pushrod Cover Nuts.	10.0		90
Crankshaft Pulley to Hub Bolts	34	25	_
Crankshaft Pulley Hub to Crankshaft Bolt	220	160	
Flywheel Bolts (Automatic)	75	55	
Flywheel Bolts (Manual)	90	65	
Intake Manifold Bolts	34	25	_
Exhaust Manifold Bolts (Front and Rear Exhaust Tubes)	43	32	—
(Center Exhaust Tube)	50	36	
Distributor Clamp Bolt	17	13	
Water Outlet Housing Bolts	27	20	
Thermostat Housing Bolts	27	20	—
Water Pump	34	25	
Timing Gear Cover Bolts	10.0		90
Rocker Arm Bolts	30	22	_
Cylinder Head Bolts - See Text			
Camshaft Thrust Plate Bolts	10.0		90
Rocker Arm Cover Bolts	5.0	—	48
Hydraulic Lifter Retainer Stud	10.0	_	90

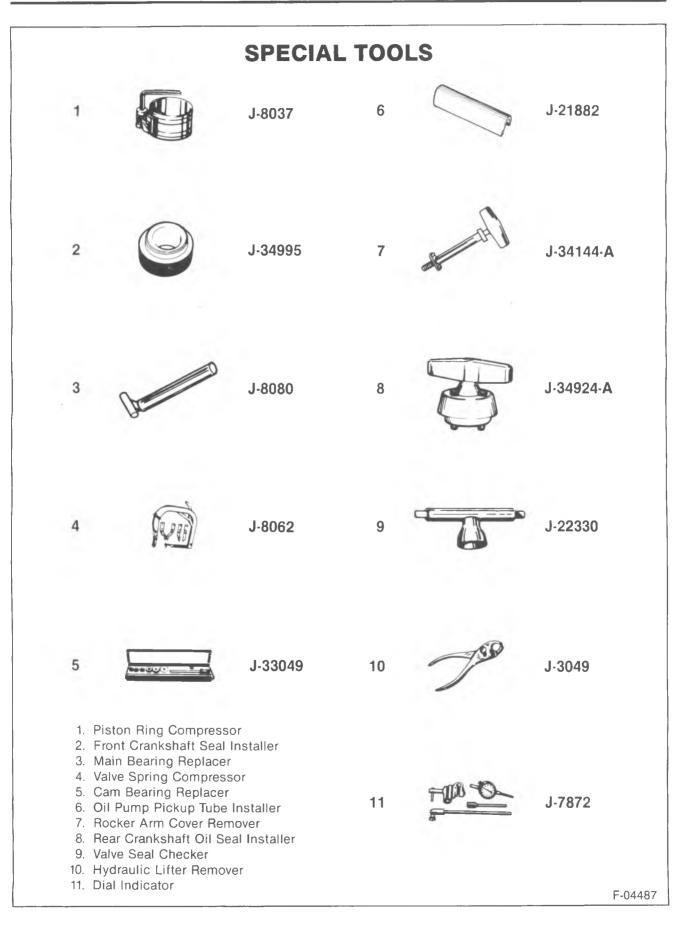

PAGE

SECTION 6A2

2.8 LITER V-6

CONTENTS

SUBJECT

Description	
Engine Lubrication	
Disassembly	
Tools and Shop Equipment	
Accessory Removal	
Cleaning	
Draining the Engine	
Air Injection Tube Removal	 .6A2- 7
EGR Valve Removal	
Exhaust Manifold Removal	
Rocker Arm Cover Removal	
Intake Manifold Removal	
Valve Train Component Removal	
Cylinder Head Removal	
Torsional Damper Removal	
Front Cover and Water Pump Removal	 .6A2- 9
Oil Pan Removal.	 .6A2- 9
Oil Pump Removal	 .6A2- 9
Timing Chain and Camshaft Sprocket Removal	
Camshaft Removal	 .6A2-10
Piston and Connecting Rod Removal	 .6A2-10
Flywheel Removal	 .6A2-11
Crankshaft Removal	
Main Bearing Removal (Without Removing Crankshaft)	 .6A2-11
Cleaning, Inspection, and Repair	
Block	
Piston and Connecting Rod Assemblies	
Intake and Exhaust Manifolds	
Camshaft	
Camshaft Bearings	
Timing Chain and Sprockets	
Front Cover.	
Water Pump	
Oil Pan and Rocker Arm Covers	
Oil Pump	
Valve Train Components	
Hydraulic Lifters.	
Cylinder Head.	
Thermostat and Water Outlet	
Crankshaft and Bearings	
Assembly of Engine	
Prior to Assembly	 .6A2-19
Crankshaft and Main Bearing Installation	
Rear Crankshaft Oil Seal Installation	
Camshaft, Timing Chain and Sprocket Installation	
Front Cover and Water Pump Installation	 .6A2-21

6A2-2 2.8 LITER V-6

CONTENTS (CONTINUED)

SUBJECT

Assembly of Engine (Continued)	
Torsional Damper Installation	6A2-21
Piston and Connecting Rod Installation	6A2-22
Oil Pump Installation	
Oil Pan Installation.	
Cylinder Head Installation	
Valve Train Component Installation	
Valve Adjustment	
Intake Manifold Installation	6A2-25
Rocker Arm Cover Installation	
Exhaust Manifold Installation	6A2-26
EGR Valve Installation	6A2-26
Air Injection Tube Installation.	
Flywheel Installation	
Engine Accessory Installation	
Engine Set-Up and Testing	6A2-27
Specifications	
Special Tools	

DESCRIPTION

GM 2.8L engines are 60-degree V6 type, overhead valve, water cooled, with cast iron block and heads.

The crankshaft is supported by four precision insert main bearings, with crankshaft thrust taken at the number three bearing.

The camshaft is supported by four plain type bearings and is chain driven. Motion from the camshaft is transmitted to the valves by hydraulic lifters, pushrods, and ball type rocker arms. The valve guides are integral in the cylinder head.

The connecting rods are forged steel, with precision insert type crankpin bearings. The piston pins are a press fit in the connecting rods.

The pistons are cast aluminum alloy. The piston pins are a floating fit in the piston.

For Engine Identification, refer to GENERAL INFORMA-TION (SEC. 0A) in this manual.

ENGINE LUBRICATION

Lubrication schematics are shown in figures 1 through 4. The gear type oil pump is driven from the distributor shaft, which is gear driven from the camshaft. Oil is drawn into the oil pump through a pickup screen and pipe.

Pressurized oil is routed to the oil filter. In case of excessive oil pressure, a bypass valve is provided. From the filter, oil is routed to the main oil gallery which supplies the left bank valve lifters with oil. From the left gallery, oil is directed to the camshaft bearings and the right oil gallery.

Oil flows from the hydraulic lifters through the hollow pushrods to the rocker arms. Oil from the overhead drains back to the crankcase through oil drain holes.

The timing chain is drip fed from the front camshaft bearing. The pistons and piston pins are lubricated by oil splash.

PAGE

2.8 LITER V-6 6A2-3

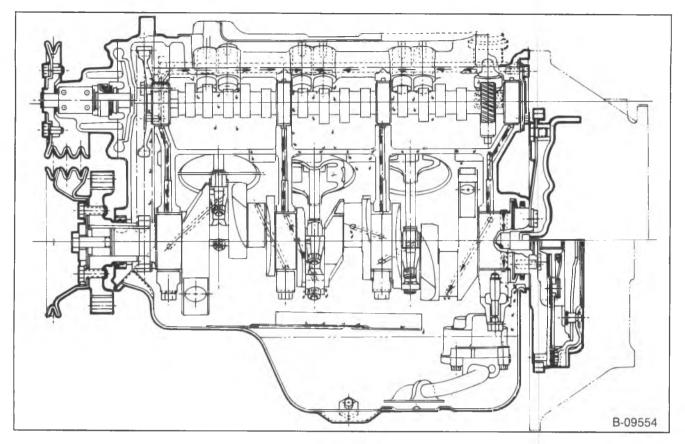


Figure 1—Engine Lubrication Diagram

6A2-4 2.8 LITER V-6


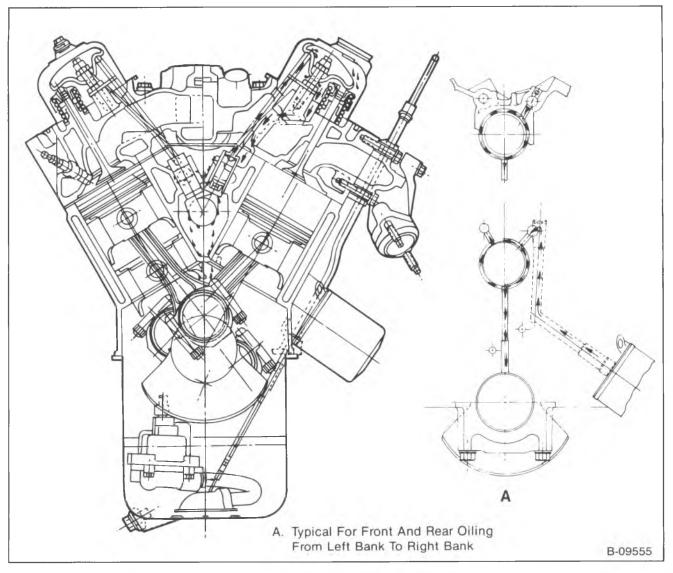


Figure 2—Engine Lubrication Diagram

2.8 LITER V-6 6A2-5



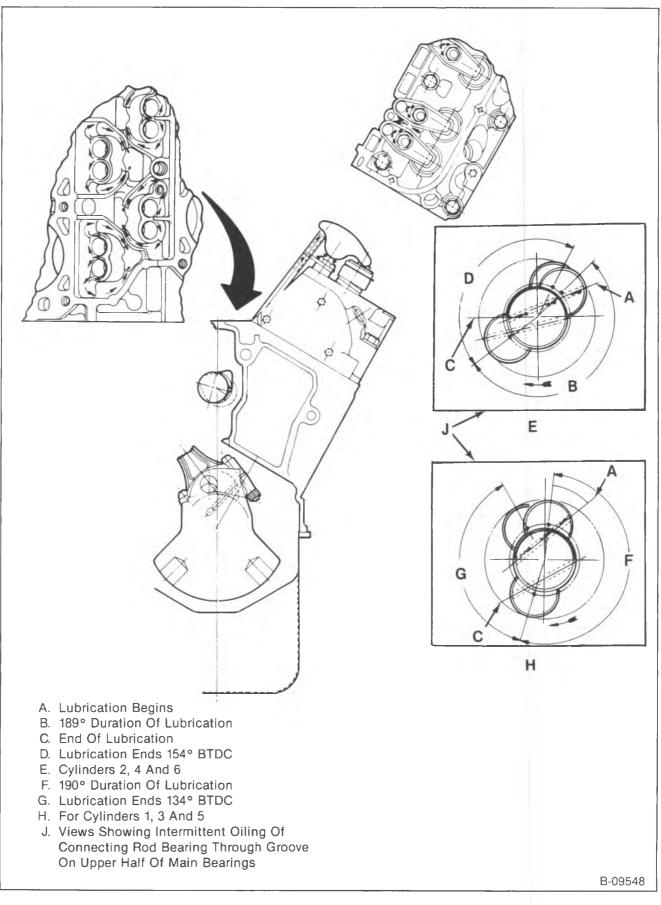

6A2-6 2.8 LITER V-6

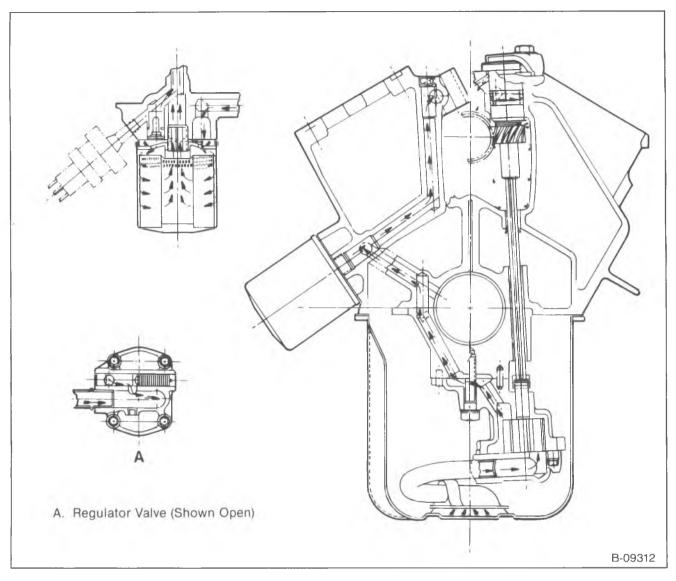


Figure 4—Engine Lubrication Diagram

DISASSEMBLY

TOOLS AND SHOP EQUIPMENT

A clean, well lit work area should be available. Other necessary equipment includes: A suitable parts cleaning tank, compressed air supply, trays to keep parts and fasteners organized, and an adequate set of hand tools.

An approved engine repair stand will aid the work and help prevent personal injury or damage to engine components.

Special tools are illustrated throughout this section, and are listed at its end. These tools (or their equivalents) are specially designed to quickly and safely accomplish the operations for which they are intended. The use of these tools will also minimize possible damage to engine components.

Some precision measuring tools are required for inspection of certain critical components. Torque wrenches will be necessary for correct assembly of various parts.

ACCESSORY REMOVAL

This manual assumes that the engine accessories have been removed. These accessories may include one or more of the following:

Hydraulic Pump AIR Pump Generator Air Conditioning Compressor Cooling Fan Distributor TBI Unit

It is beyond the scope of this section to detail the many different accessory installations. Refer to the proper Truck Service Manual for this information.

Diagrams of emission and vacuum hose routings, wiring harness routing, accessory drive belt layout, etc., should be made before removing accessories.

2.8 LITER V-6 6A2-7

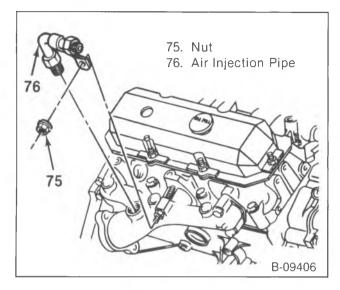


Figure 5—Air Injection Tube

CLEANING

Remove the engine accessories before cleaning, to provide better access to engine exterior surfaces. After removing the TBI unit, distributor, etc., cover the openings with tape to prevent the entry of water, solvent, and dirt.

Methods used to clean the engine will depend on the aids which are available. Steam cleaning, pressure washing, or solvent cleaning are some acceptable methods. Allow the engine to dry before beginning the work.

It is important that the engine be as clean as possible to prevent dirt from entering critical areas during disassembly.

DRAINING THE ENGINE

+> Remove or Disconnect

- 1. Oil pan plug and allow the oil pan to drain.
- 2. Oil filter.
- 3. Block drains and allow the coolant to drain.

→← Install or Connect

- 1. Oil pan drain plug and washer.
- 2. Block drain plugs.

Tighten

Block drain plug to 12 N m (9 ft. lbs.).

AIR INJECTION TUBE REMOVAL

Remove or Disconnect (Figure 5)

- 1. Nut (75).
- 2. Air injection tube from the manifold.

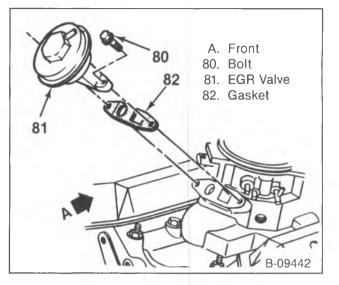


Figure 6—EGR Valve

EGR VALVE REMOVAL

++ Remove or Disconnect (Figure 6)

- 1. Bolts (80).
- 2. EGR valve (81).
- 3. Gasket (82).

EXHAUST MANIFOLD REMOVAL

++ Remove or Disconnect (Figure 7)

- 1. Oil dipstick tube.
- 2. Bolts or studs.
- 3. Exhaust manifold.

ROCKER ARM COVER REMOVAL



Remove or Disconnect (Figure 8)

- 1. Rocker arm cover nuts (1) and reinforcements (2).
- 2. Rocker arm cover and gasket.
 - If the cover sticks to the head, bump the end of the cover. If the cover still does not come loose, carefully pry until loose. DO NOT DISTORT THE SEALING FLANGE.

INTAKE MANIFOLD REMOVAL



1. Intake manifold bolts.

Remove or Disconnect

- 2. Intake manifold.
 - · Pull the intake manifold up.
 - Do not attempt to loosen the manifold by prying under the gasket surface with any tool.
- 3. Gaskets.

6A2-8 2.8 LITER V-6

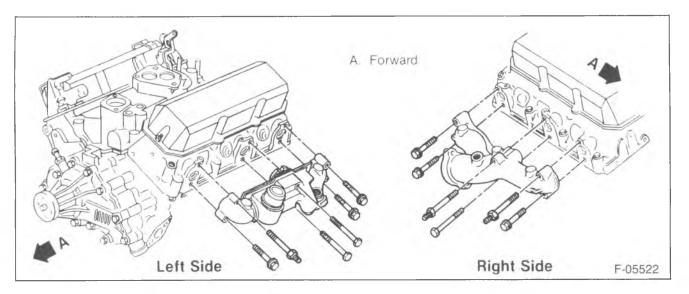


Figure 7—Exhaust Manifold Installation

VALVE TRAIN COMPONENT REMOVAL

Remove or Disconnect (Figure 9)

Tools Required:

J 3049, Hydraulic Lifter Remover (Plier Type) or

J 9290-1, Hydraulic Lifter Remover (Slide Hammer Type)

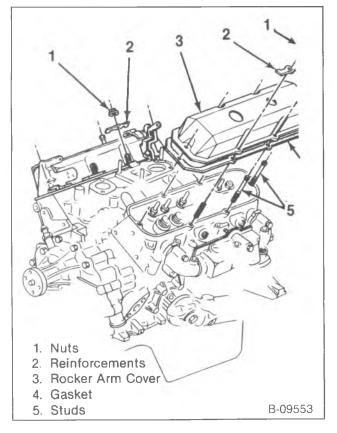


Figure 8—Rocker Arm Cover Installation

- Nuts (6), balls (8), rocker arms (7), and pushrods (9).
 Every effort should be made to insure that these mating parts are installed in their original locations during assembly. A simple valve train organizer can be made from a piece of wood.
- 2. Lifters (10).
 - Remove the lifters one at a time and place them in an organizer rack. The lifters must be installed into the same bore from which they were removed.
 - A stuck lifter can be removed using J 3049 (figure 10) or J 9290-01 (figure 11).

CYLINDER HEAD REMOVAL

Remove or Disconnect

- 1. Bolts.
- 2. Cylinder heads.
 - Use care when handling the cylinder heads to prevent damage to rocker arm studs or gasket sealing surface.
- 3. Gaskets.

TORSIONAL DAMPER REMOVAL

NOTICE: The inertial weight section of the torsional damper is assembled to the hub with a rubber sleeve. The removal and installation procedures must be followed (with proper tools) or movement of the inertia weight section of the hub will destroy the tuning of the torsional damper and the engine timing reference.

The torsional damper has three timing notches on the inertia ring. The number one cylinder timing reference mark will be identified by a dab of white paint. If a new damper assembly is installed, mark the new assembly in

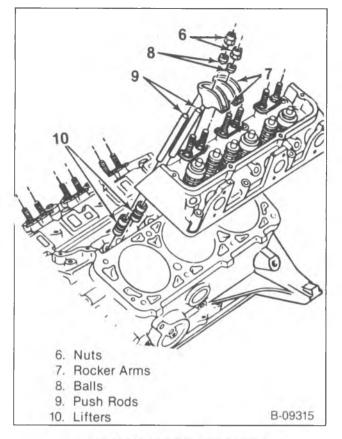


Figure 9-Valve Train Components

the same place for future reference. Number one cylinder reference is the first clockwise mark from the keyway when viewing the engine from the front.

Remove or Disconnect

Tool Required:

J 23523-E or J 24420-B, Puller

- 1. Torsional damper retaining bolt.
- 2. Drive pulley from the damper.
- 3. Damper using J 23523-E or J 24420-B.



Figure 10—Removing the Hydraulic Lifter with J 3049

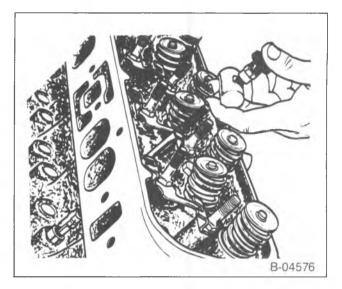


Figure 11—Removing the Hydraulic Lifter (Typical)

FRONT COVER AND WATER PUMP REMOVAL

Remove or Disconnect

- 1. Water pump.
- 2. Front cover bolts.
- 3. Front cover.
- 4. Gasket.

OIL PAN REMOVAL



Remove or Disconnect

- 1. Bolts and studs from the oil pan.
- 2. Oil pan.

OIL PUMP REMOVAL


- ★→ Remove or Disconnect (Figure 12)
 - 1. Bolt (40).
 - 2. Pump (41).
 - 3. Shaft (42).

TIMING CHAIN AND CAMSHAFT SPROCKET REMOVAL

***** Remove or Disconnect

- 1. Chain damper.
- 2. Sprocket to camshaft bolts.
- 3. Camshaft sprocket and chain.
 - If the sprocket does not come off easily, a light blow on the lower edge of the sprocket (with a plastic mallet only) should dislodge the sprocket.

6A2-10 2.8 LITER V-6

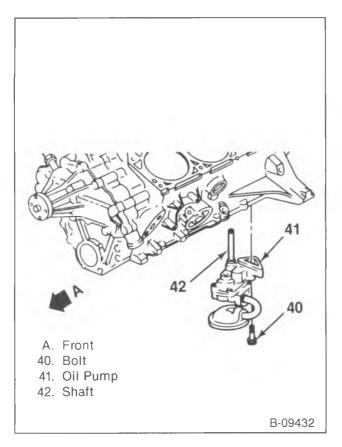

<image><image>

Figure 12-Oil Pump Installation

CAMSHAFT REMOVAL

Remove or Disconnect (Figure 13)

Camshaft by pulling lightly and turning.

Important

 All camshaft bearing journals are the same diameter and care must be exercised in removing the camshaft to avoid bearing damage.

PISTON AND CONNECTING ROD REMOVAL

Remove or Disconnect

**

- 1. Ridge or deposits from the upper end of the cylinder bores.
 - Turn the crankshaft until the piston is at BDC.
 - · Place a cloth on top of the piston.
 - Perform the cutting operation with a ridge reamer (figure 14).
 - Turn the crankshaft until the piston is at TDC.
 - Remove the cloth and cuttings.
- Use a silver pencil or quick drying paint to mark the cylinder number on all pistons, connecting rods, and caps. Starting at the front of the crankcase, the cylinders in the right bank are numbered 1-3-5 and the left bank is numbered 2-4-6.
- 2. Connecting rod cap and bearing.

Figure 13—Replacing the Camshaft (Typical)

- 3. Connecting rod and piston (figure 15).
 - Install guide hose over the threads of the rod studs to prevent damage to the bearing journal and rod studs.
- 4. Connecting rod bearing

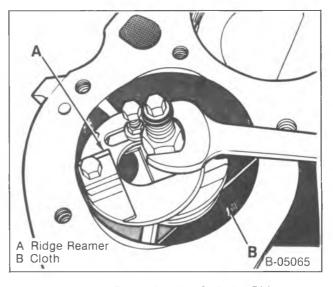


Figure 14—Removing the Cylinder Ridge

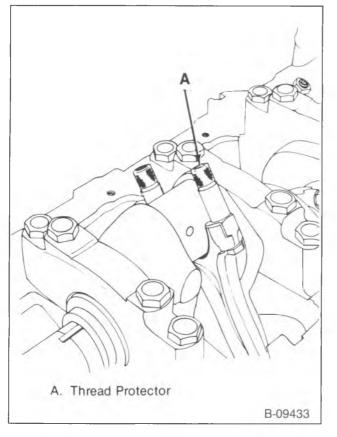


Figure 15—Replacing the Piston and Connecting Rod (Typical)

FLYWHEEL REMOVAL

++ Remove or Disconnect

- 1. Bolts.
- 2. Retainer (automatic transmisison only).
- 3. Flywheel.

CRANKSHAFT REMOVAL

++ Remove or Disconnect (Figure 16)

- · Check the main bearing clearance before removing the crankshaft. Refer to "Crankshaft and Main Bearing Installation" later in this section.
- The main bearings and rear oil seal can be replaced without removing the crankshaft as outlined later in this section.
- 1. Bolts (85).
- 2. Main bearing caps (86).
- 3. Crankshaft from the cylinder block.
 - · Lift the crankshaft straight up, taking care to avoid damage to the crankshaft journals and thrust flange surfaces.

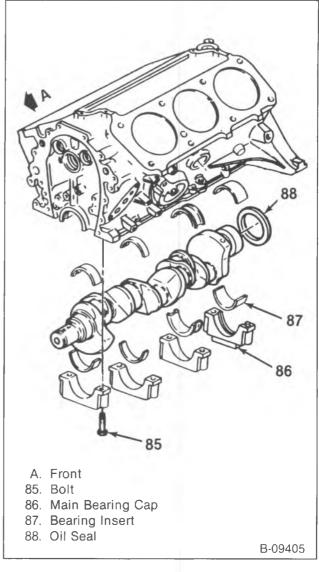


Figure 16-Crankshaft Installation

MAIN BEARING REMOVAL (WITHOUT REMOVING **CRANKSHAFT**)

Remove or Disconnect

Tool Required:

- J 8080, Main Bearing Remover/Installer
- 1. Main bearing caps.
 - · Check the main bearing caps for location markings. Mark the caps if necessary. The caps must be returned to their original locations during assembly.
- 2. Lower main bearing inserts from the main bearing caps.
- 3. Upper main bearing inserts.
 - Insert J 8080 into the crankshaft oil hole (figure 17).
 - · Rotate the crankshaft to turn the bearing insert out of the block.

6A2-12 2.8 LITER V-6

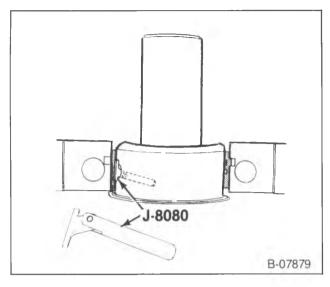


Figure 17—Removing or Installing the Main Bearing Insert

CLEANING, INSPECTION, AND REPAIR

A solvent tank, large enough to hold the larger engine parts, will be needed along with various bristle brushes and a gasket scraper. A source of compressed air will be helpful in the cleaning operations.

Precision measuring tools will be required for the inspection procedure. These include: micrometers, cylinder bore gage, feeler gages, dial indicator set, etc. The inspection work, performed with the proper method and tools, is most important. The rebuilt engine cannot be expected to perform properly if parts worn beyond acceptable limits are reused.

BLOCK

Clean

- 1. Block in solvent.
- 2. Block gasket surfaces.
- 3. Cylinder bores.
- 4. Oil galleries and passages.
 - Remove the oil gallery plugs.
- 5. Scale deposits from the coolant passages.

Inspect

- 1. All expansion plugs for lack of fit or leakage.
- Valve lifter bores for deep scratches and varnish deposits.
- 3. Block for cracks.
 - Cylinder walls.
 - Coolant jackets.
 - Main bearing webs.
 - Engine mount bosses.
- 4. Main bearing bores and main bearing caps.
 - All main bearing bores should be rounded and uniform in ID at all bearing supports.

- The area where the main bearing inserts contact the main bearing bore should be smooth.
- If a main bearing cap is damaged and requires replacement, replace it.
- 5. Deck surface for flatness. Use a straightedge and feeler gage. Minor irregularities may be carefully machined. If more than 0.25 mm (0.010-inch) must be removed, replace the block.
- 6. Oil pan rail and timing cover attaching area for nicks. Minor irregularities may be cleaned up with a flat file.
- 7. Transmission case mating surface.

? Important

• If the transmission case mounting surface is not flat, a broken flexplate may result.

CYLINDER BORES



Cylinder bores for scoring or other damage.

🖳 Measure

• Cylinder bore taper and out-of-round. Refer to GENERAL ENGINE MECHANICAL (SEC. 6A).

Cylinder Bore Reconditioning

Refer to GENERAL ENGINE MECHANICAL (SEC. 6A).

PISTON AND CONNECTING ROD ASSEMBLIES

Refer to GENERAL ENGINE MECHANICAL (SEC. 6A) and perform the following:



Components as required.

🚰 Clean

Components as outlined.

Inspect

Components as outlined.

4 Measure

- Piston pin diameter and clearance.
- · Piston to bore clearance, and fit the pistons.
 - 1. Remove rings from the pistons to be fitted.
 - It is not necessary to remove the connecting rods from the pistons.
 - If an excessive amount of varnish or carbon appears as a ridge at the top of the cylinder, remove it by scraping or sanding.
 - 2. Wipe the bores and pistons clean. Select a piston and rod assembly for the bore to be fitted and position it down into the bore with the top of the piston down. The piston should slide freely through the bore by its own weight when the piston skirt is 12 to 25 mm from the top of the block. Use care to make sure the piston is not damaged when it slides through the bore. If the piston does not slide through the bore, it is too tight and another piston should be selected. Mark the proper piston and bore for assembly.
 - 3. After a piston has been selected which will slide freely through the bore, determine if it is too loose.
 - Place a feeler gage (0.060 mm for used pistons, 0.050 mm for new pistons) at least 150 mm long and not over 12 mm wide into the bore with the selected piston. Hold the feeler gage to the top of the bore.
 - Position the selected piston into the bore (top down) until the skirt is 12 to 25 mm from the top of the block. The feeler gage must be 90 degrees from the piston pin. If the piston hangs on the feeler gage and does not fall free, the piston is correctly fitted to the bore. If the piston slides freely through the bore, it is too small and a larger piston is required. Mark the proper piston and bore for assembly.
 - 4. When checking more than one bore, it is possible that a piston that does not fit one bore will fit another.

- Assemble

Components as outlined.

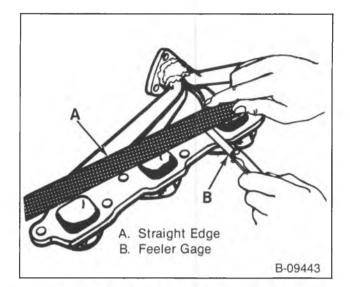


Figure 18—Checking Manifold Flange Alignment

? Important

• Each connecting rod and bearing cap should be marked, beginning at the front of the engine. Cylinders 2, 4 and 6 are at the left bank and, 1, 3 and 5 are the right bank. The numbers on the connecting rod and bearing cap must be on the same side when installed in the cylinder bore. If a connecting rod is ever transposed from block or cylinder to another, new connecting rod bearings should be fitted and the connecting rod should be numbered to correspond with the new cylinder number.

🖳 Measure

· Ring end gap and ring clearance.

Inspect

Ring fit.

INTAKE AND EXHAUST MANIFOLDS

Clean

- Old pieces of gasket from the gasket surfaces.
- Excessive carbon build-up in the exhaust passages of the intake manifold.
- Scale and deposits from the coolant passages of the intake manifold.
- EGR passage of excessive carbon deposits.

Inspect (Figure 18)

- Manifolds for cracks, broken flanges, and gasket surface damage.
- Alignment of manifold flanges. Use a straight edge and feeler gage. If the flanges are out of alignment by more than 0.1 mm (0.005-inch), the manifold is warped and should be replaced.

6A2-14 2.8 LITER V-6

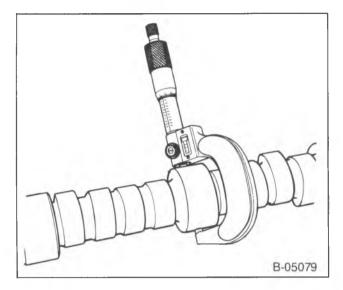


Figure 19—Checking the Camshaft Journals

CAMSHAFT

Important

 Whenever the camshaft needs to be replaced, a new set of lifters must also be installed.

Inspect

 Camshaft lobes and journals for scratches, pitting, scoring, and wear.

Measure

1

 Camshaft journal diameter (figure 19). The proper diameter is listed in "Specifications."

CAMSHAFT BEARINGS

Refer to GENERAL ENGINE MECHANICAL (SEC. 6A) for replacement procedures.

TIMING CHAIN AND SPROCKETS

Inspect

- Sprockets for chipped teeth and wear.
- Timing chain for damage.
- It should be noted that excessively worn sprockets will rapidly wear a new chain. Likewise, an excessively worn chain will rapidly wear a new set of sprockets.
- Timing chain for wear.
 - If the chain can be pulled out more than 9.5 mm (³/₈-inch), from the damper, replace the chain.

CRANKSHAFT SPROCKET REPLACEMENT

++ Remove or Disconnect (Figure 20)

Tool Required:

- J 5825-A Crankshaft Sprocket Puller
- 1. Crankshaft sprocket using J 5825-A.
- 2. Key (if necessary).

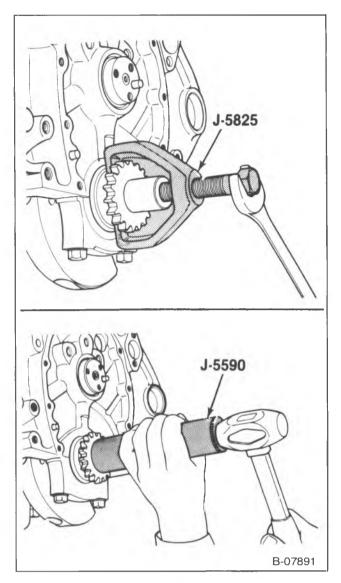


Figure 20—Replacing the Crankshaft Sprocket



Install or Connect (Figure 20)

Tool Required:

J 5590, Crankshaft Sprocket Installer

- 1. Key (if removed).
- 2. Crankshaft sprocket using J 5590.

FRONT COVER

Clean

• Old gasket from the gasket surfaces.

Inspect

- Timing tab marker for damage.
- · Front cover for damage, dents, or cracks.



- Remove or Disconnect
- Oil seal from the front cover.
 - Pry the seal out with a large screw driver.

Install or Connect

Tool Required:

- J 35468, Seal Installer
- New seal so that the open end of the seal is toward the inside of the cover.
 - Drive the seal into position with J 35468.
 - Support the cover at the seal area.
- Lubricate the seal with engine oil before installing the torsional damper.

WATER PUMP

📳 Clean

Old gasket from the gasket surface.

Important

 Do not immerse the pump in solvent. The solvent may enter the pump's permanently lubricated bearings, dissolve the bearings' lubricant supply, and cause premature bearing failure.

Inspect

- Water pump shaft for roughness and end play. If the shaft does not turn smoothly, or if there is excessive end play, replace the water pump.
- Water pump body at the drain hole. If there is evidence of coolant leakage, the water pump shaft seal is leaking and the water pump should be replaced.

OIL PAN AND ROCKER ARM COVERS

Clean

- Parts in solvent. Remove all sludge and varnish.
- Old gaskets from the gasket surfaces.

Inspect

- Gasket flanges for bending or damage.
- Rubber grommets and parts on the rocker arm cover for deterioration.
- Oil pan for rock damage or cracks.
- Oil pan baffle for lack of fit.
- Drain plug threads for stripping.

OIL PUMP

Remove or Disconnect (Figure 21)

- 1. Pump cover attaching bolts (186) and the pump cover (182).
- Mark the gear teeth so the pump gears can be installed with the same gear teeth indexed.
- 2. Idler gear (188), drive gear (181) and shaft (103) from the pump body.
- 3. Pressure relief valve retaining pin (185).
- 4. Pressure relief valve spring (184).
- 5. Pressure relief valve (183).

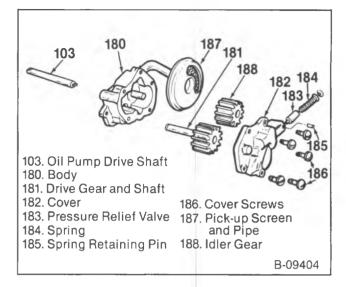


Figure 21—Oil Pump Components (Typical)

- 6. Pick-up screen and pipe (187).
 - Do not remove the pick-up screen and pipe unless replacement is required.
 - The pick-up pipe is a press fit in the pump body (180).
 - Do not try to remove the screen from the pipe. The pick-up screen and pipe is serviced as an assembly only.

Clean

• All parts in clean solvent and blow dry with compressed air.

Inspect (Figure 21)

- Pump body (180) and cover (182) for cracks or other damage.
- Gears (181 and 188) for wear.
- Drive gear and shaft (181) for lack of fit in the pump body (180).
- Inside of the cover (182) for wear that would permit oil to leak past the ends of the gears. The pump gears, cover, and body are not serviced separately. If the parts are damaged or oil pump assembly.
- Pick-up screen and pipe (187) for damage to the screen, pipe or relief grommet.
- Pressure relief valve (183) for fit. The regulator valve should slide freely in its bore without sticking or binding.

++ Install or Connect (Figure 21)

Tool Required:

J 21882, Pick-Up Tube and Screen Installer

- 1. Pressure regulator valve.
- 2. Spring.
- 3. Spring retaining pin.
- 4. Drive gear and shaft.
- 5. Idler gear.
 - Index the marks made during disassembly.
- Cover and screws.

6A2-16 2.8 LITER V-6

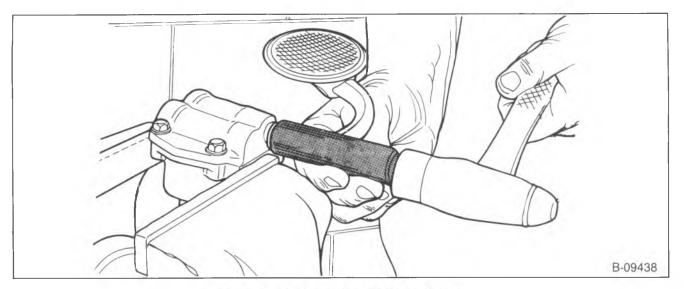


Figure 22—Installing the Oil Pump Screen

री Tighten

- Screws to 9.0 N m (80 in. lbs.).
- Turn the drive shaft by hand to check for smooth operation.

NOTICE: Be careful of twisting, shearing or collapsing the pipe while installing in the pump.

- 7. Pick-up screen and pipe (if removed) (figure 22).
 - If the pick-up screen and pipe assembly was removed, it should be replaced with a new part. Loss of press fit condition could result in an air leak and loss of oil pressure.
 - · Mount the oil pump in a soft jawed vise.
 - · Apply sealer to the end of the pipe.
 - Tap the pick-up screen and pipe into place, using J 21882 and a hammer.
 - The pump screen must be parallel with the bottom of the oil pan when installed.
- 8. Oil pump drive shaft (103) and connector (104).

VALVE TRAIN COMPONENTS

PUSHRODS, ROCKER ARMS, BALLS, AND NUTS

📱 Clean

- Parts in solvent. Blow dry with compressed air.
- Make sure the oil passages in the pushrods are clear.

Inspect

- Rocker arms and balls at their mating surfaces. These surfaces should be smooth and free from scoring or other damage.
- Rocker arm areas which contact the valve stems and the sockets which contact the pushrods. These areas should be smooth and free of damage and wear.
- Rocker arm nuts.

- Pushrods for bending. Roll the pushrod on a flat surface to determine if it is bent. Replace if necessary.
- Pushrod ends for scoring or roughness.

HYDRAULIC LIFTERS

Refer to GENERAL ENGINE MECHANICAL (SEC. 6A).

CYLINDER HEAD

DISASSEMBLY

←→ Remove or Disconnect (Figures 23 and 24)

Tool Required:

- J 8062, Valve Spring Compressor
- 1. Valve keepers (22).
 - Compress the springs with J 8062 (figure 24).
 - Remove the keepers.
 - Remove J 8062.
- 2. Caps (23), oil shedder (24), and springs.
- 3. O-ring seals (26) and seals (25) (if used).
- 4. Valves (20 and 21).
 - Place the valves in a rack so they can be returned to their original position at assembly.

CLEANING AND INSPECTION OF COMPONENTS

Refer to GENERAL ENGINE MECHANICAL (SEC. 6A) and perform the following.



Components as outlined.



Components as outlined.



- Valve stem clearance.
- · Valve spring tension and free length.
- Other information outlined includes:
- Valve and seat grinding.

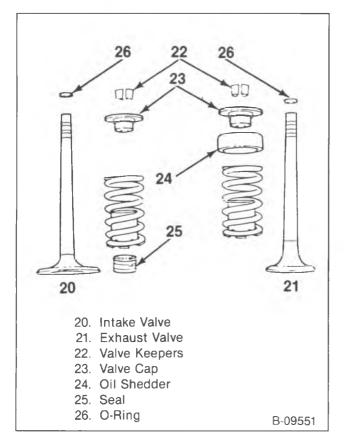


Figure 23—Valves and Components

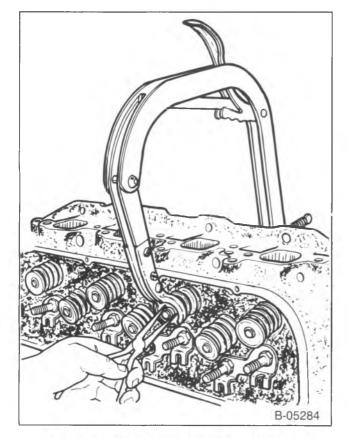


Figure 24—Compressing the Valve Springs

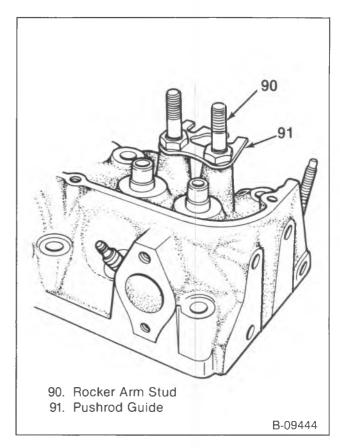


Figure 25—Rocker Arm Studs

· Valve guide reaming.

ROCKER ARM STUD AND PUSHROD GUIDE REPLACEMENT

The rocker arm studs are threaded in place.

- ++ Remove or Disconnect (Figure 25)
 - Rocker arm studs (90) using a deep socket.
 Pushrod guide (91).
- ++ Install or Connect
 - 1. Pushrod guide (91).
 - Rocker arm studs (90) using a deep socket.
 - री Tighten
 - Rocker arm studs to 65 N+m (48 ft. lbs.).

ASSEMBLY

++ Install or Connect (Figures 23 and 24)

- Tool Required:
 - J 8062, Valve Spring Compressor
- 1. Valves (20 and 21).
 - Lubricate the valve stems with engine oil.
 - Insert the valves into the proper seats.
- 2. Seals (25) (intake only).
 - Install the seals over the valve stems and seat them against the head.
- 3. Springs.
- 4. Oil shedder (24).
- 5. Caps (23).
- 6. O-ring seals (26) and valve keepers (22).

6A2-18 2.8 LITER V-6

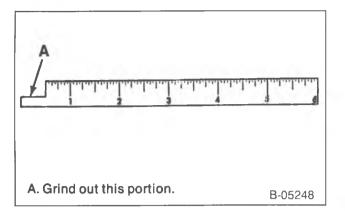


Figure 26—Scale for Checking Valve Spring Installed Height

- Compress the valve spring using J 8062 (figure 24). Compress the spring enough so the lower valve stem groove can be seen clearly.
- Push a new O-ring seal (26) onto the valve stem. The seal is to be installed on the stem's lower groove. Make sure the seal is flat and not twisted.
- Apply a small amount of grease to the area of the upper valve stem groove. Assemble the two valve keepers using the grease to hold the keys in place. Make sure the keepers seat properly in the groove.
- Release the compressor tool. Make sure the valve keepers stay in place.
- Repeat the preceding steps on the remaining valves.

빛 Measure

- Valve spring installed height of each valve spring as follows.
 - 1. Use a narrow thin scale. A cutaway scale (figure 26) may be helpful.
 - Measure from the top of the spring damper "feet" to the bottom of the oil shedder on the exhaust valve or to the bottom of the valve cap on the intake valve.
 - 3. If this measurement exceeds the figure given in "Specifications," install valve spring seat shims approximately 0.75 mm (0.03-inch) thickness (between the spring and cylinder head). NEVER shim the spring so as to give an installed height under the specified figure.

THERMOSTAT AND WATER OUTLET



1. Bolts.

- 2. Water outlet.
- 3. Gasket.
- 4. Thermostat.

Inspect

Water outlet for cracks.

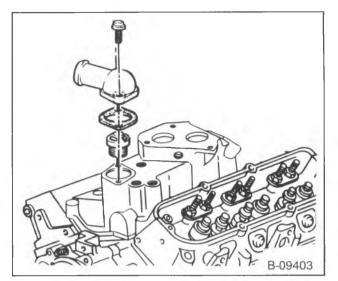


Figure 27—Thermostat and Water Outlet

→ Install or Connect (Figure 27)

- 1. Thermostat.
- 2. New gasket.
- 3. Water outlet.
- 4. Bolts.



• Bolts for 21 N m (15 ft. lbs.).

CRANKSHAFT AND BEARINGS

CLEANING AND INSPECTION



- Crankshaft with solvent.
 - Do not scratch the bearing journals.
 - Blow all sludge from the oil passages with compressed air.
- Main bearing inserts. Wipe free of oil with a soft cloth.

Inspect

- Crankshaft for cracks. Use the magnaflux method, if available.
- Crankpins, main bearing journals and thrust surfaces for scoring, nicks, or damage caused by lack of lubrication.
- Main bearing inserts for scoring or other damage.

In general, the lower inserts (except the #1 bearing) show greater wear and the most distress from fatigue. If the lower insert shows evidence of wear or damage, both the upper and lower inserts must be replaced.

1 Measure

- Main bearing and connecting rod journal diameters (figure 28). Compare with "Specifications." Replace the crankshaft if necessary.
- Main bearing and connecting rod journals for taper and out-of-round (figure 28). If the journals are tapered or out-of-round more than 0.005 mm, replace the crankshaft.

- · Crankshaft run-out.
 - Mount the crankshaft in V-blocks or between centers.
 - Use a dial indicator.
 - If the main journals are misaligned more than 0.025 mm, the crankshaft is bent and must be replaced, along with the main bearing.

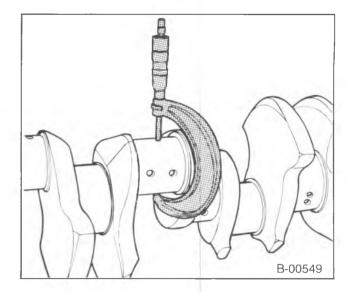


Figure 28—Measuring the Crankshaft Journals

ASSEMBLY OF ENGINE

PRIOR TO ASSEMBLY

The importance of cleanliness during the assembly procedure cannot be overstressed. Dirt will cause premature wear of the rebuilt engine.

Lubricate all moving parts lightly with engine oil or engine assembly lubricant (unless specified otherwise) during assembly. This will provide initial lubrication when the engine is started.

CRANKSHAFT AND MAIN BEARING INSTALLATION

Main bearings are of the precision insert type and do not use shims for adjustment. If clearances are excessive, a new bearing plus both upper and lower inserts will be required. Service main bearings are available in standard size, 0.016, and 0.032 mm undersize. Service rod bearings are available in standard size and 0.026 mm undersize.

Selective fitting of both rod and main bearing inserts is necessary in production to obtain close tolerances. For this reason you may find one half of a standard insert with one half of a 0.032 mm undersize insert which will decrease the clearance 0.016 mm from using a full standard bearing.

++ Install or Connect

1. Upper main bearing inserts to the block.

Important

- If any undersized bearings are used, make sure they are fitted to the proper journals.
- 2. Crankshaft.
- 3. Lower main bearing inserts to the main bearing caps.

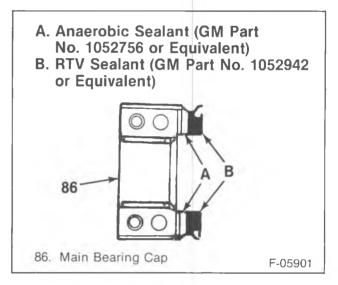


Figure 29—Applying Sealer to Rear Main Bearing Cap

🖳 Measure

- Main bearing clearance. Refer to GENERAL ENGINE MECHANICAL (SEC. 6A).
- Apply engine oil to the main bearing inserts.
- 4. New O-ring (if used) into the rear main bearing cap.
- 5. Thin coat of anaerobic sealant (GM Part No. 1052756 or equivalent) to the rear main bearing cap (figure 29).
 - Do not allow sealer on the crankshaft or the seal.
- A small amount of RTV sealant (GM Part No. 1052942 or equivalent) to the rear 4 mm of the rear bearing cap sealing surface (figure 29).
 - Do not allow sealer on the crankshaft or the seal.

6A2-20 2.8 LITER V-6

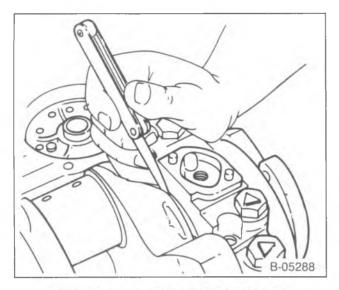


Figure 30—Measuring Crankshaft End Play

- 7. Main bearing caps with arrows pointing toward the front of the engine.
- 8. Main bearing cap bolts.

री Tighten

- All main bearing caps EXCEPT NUMBER THREE CAP to 95 N m (70 ft. lbs.).
- Number three main bearing cap to 15 N·m (11 ft. lbs.). Then tap the end of the crankshaft rearward and then **forward** with a lead hammer to line up the rear main bearing and crankshaft thrust surfaces.
- All main bearing caps to 95 N m (70 ft. lbs.).

Measure (Figure 30)

- Crankshaft end play.
 - 1. Tap the end the crankshaft first rearward then forward with a lead hammer. This will line up the rear main bearing and crankshaft thrust surfaces.
 - 2. With the crankshaft forced forward, measure at the front end of the number three main bearing with a feeler gage (figure 30). The proper clearance is 0.06 to 0.21 mm.

Inspect

• Crankshaft for binding. Try turning the crankshaft to check for binding. If the crankshaft does not turn freely. loosen the main bearing cap bolts, one pair at a time, until the tight bearing is located. Burrs on the bearing cap, foreign matter between the insert and the block or the bearing cap, or a faulty insert could cause a lack of clearance at the bearing.

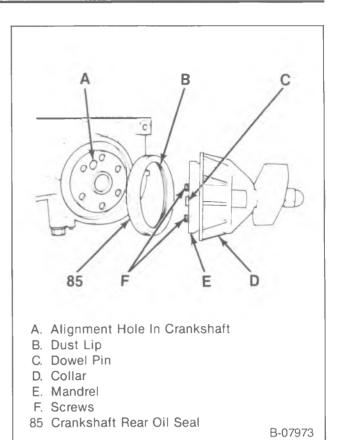


Figure 31—Installing the Crankshaft Oil Seal

REAR CRANKSHAFT OIL SEAL INSTALLATION

Install or Connect

Tool Required:

J 34686, Seal Installer

- 1. Light coat of oil to the inside diameter of the new seal.
- 2. New seal over the mandril of J 34686 until the dust lip (back of the seal) bottoms against the collar of the tool (figure 31).
- 3. J 34686 to the crankshaft by hand or torque the attaching screws to 4 N m (3 ft. lbs.).
 - Align the dowel pin of J 34686 with the dowel pin hole in the crankshaft.
- 4. Light coat of oil to the outside diameter of the seal.
- 5. Seal into the bore.
 - Turn the "T" handle of the tool so the collar pushes the seal into the bore.
 - Turn the handle until the collar of the tool is tight against the cylinder block to seat the seal properly.
- · Loosen the "T" handle until it comes to a stop.
- Remove the attaching screws.

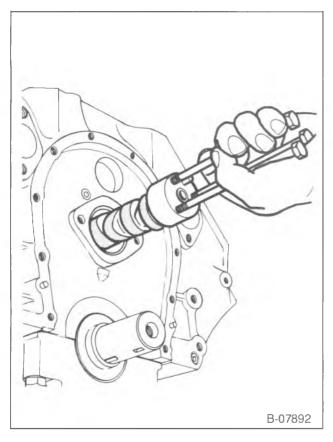


Figure 32—Replacing the Camshaft

CAMSHAFT, TIMING CHAIN AND SPROCKET INSTALLATION

→+ Install or Connect (Figures 32 and 33)

- Coat the camshaft lobes and journals with a high quality engine oil supplement (GM Engine Oil Supplement or equivalent).
- When a new camshaft is installed, install new oil and filter. It is also recommended that all valve lifters

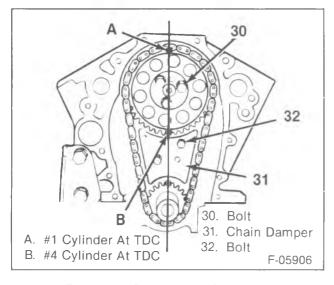


Figure 33—Camshaft Timing Marks

be replaced to insure durability of the camshaft lobes and lifter feet.

1. Camshaft.

? Important

- All camshaft bearing journals are the same diameter and care must be exercised in installing the camshaft to avoid bearing damage.
- 2. Timing chain onto the sprocket.
 - Lubricate the thrust surface with "Molykote" or equivalent.
- 3. Sprocket onto the camshaft.
 - Hold the sprocket vertically with the chain hanging down and align the marks on the camshaft and crankshaft sprockets.
 - Align the dowl in the camshaft with the dowel hole in the sprocket.
- 4. Bolts (30).
 - Draw the camshaft sprocket onto the camshaft using the mounting bolts.



- Bolts (30) to 23 N m (17 ft. lbs.).
- 5. Chain damper (31).



၃ Tighten

• Bolts (32) to 21 N m (15 ft. lbs.).

FRONT COVER AND WATER PUMP INSTALLATION

Install or Connect

- Lubricate the lips of the front crankshaft oil seal with engine oil.
- 1. New gasket.
 - · Make sure all sealing surfaces are clean.
 - Take care not to damage sealing surfaces.
 - Lightly coat both sides of the lower 5 mm of the gasket with anaerobic sealant (GM Part No. 1052080 or equivalent).
- 2. Front cover.
- 3. Water pump.
- 4. Bolts and stud.



Bolts and stud to specification.

TORSIONAL DAMPER INSTALLATION

NOTICE: The inertial weight section of the torsional damper is assembled to the hub with a rubber sleeve. The installation procedure must be followed (with proper tools) or movement of the inertia weight section of the hub will destroy the tuning of the torsional damper and the engine timing reference.

6A2-22 2.8 LITER V-6

The torsional damper has three timing notches on the inertia ring. The number one cylinder timing reference mark will be identified by a dab of white paint. If a new damper assembly is installed, mark the new assembly in the same place for future reference. Number one cylinder reference is the first clockwise mark from the keyway when viewing the engine from the front.

Install or Connect

Tool Required:

++

- J 29113, Torsional Damper Installer
- 1 Engine oil to the front cover seal contact area on the damper.
- 2. Sealant (GM Part No. 1052366 or equivalent) on the key and the keyway.
- 3. Damper over the key on the crankshaft.
- 4. Pull the damper onto the crankshaft.
 - Install J 29113 into the crankshaft so at least 6 mm (1/4-inch) of thread is engaged.
 - Pull damper into position and remove J 29113 from the damper.
- 5. Torsional damper retaining bolt.

된 Tighten

- Bolt to 95 N·m (75 ft. lbs.).
- 6. Drive pulley to the damper.

PISTON AND CONNECTING ROD INSTALLATION

CONNECTING ROD BEARING SELECTION


Connecting rod bearings are of the precision insert type and do not use shims for adjustment. DO NOT FILE RODS OR ROD CAPS. If clearances are excessive install a new bearing. Service bearings are available in standard size and 0.013 mm and 0.026 mm undersize for use with new and used standard size crankshafts.

Install or Connect

Tool Required:

J 8037, Ring Compressor

- Lubricate the cylinder walls lightly with engine oil.
- Make sure the piston is installed in the proper cylinder with the notch forward.
- 1. Connecting rod bearing inserts.
 - Be certain that the inserts are of the proper size.
 - Install the inserts in the connecting rod and connecting rod cap.
- 2. Piston and connecting rod to the proper bore.
 - Install guide hose over the threads of the rod studs to prevent damage to the bearing journal and rod studs.
 - Locate the ring end gaps as shown in figure 34.
 - Lubricate the piston and rings with engine oil.
 - Without disturbing the ring end gap location, install J 8037 over the piston.
 - Use a hammer handle to tap the piston down into its matching bore (figure 35).
 - The notch in the piston crown must face the front of the engine.

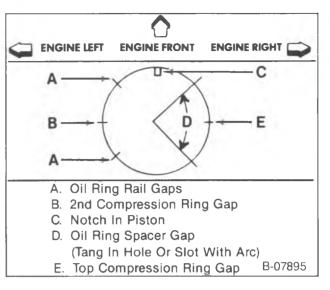



 While tapping the piston into its bore, guide the connecting rod into position on the crankpin. Hold the ring compressor against the block until all rings have entered the cylinder bore.

Important

• Each connecting rod and bearing cap should be marked, beginning at the front of the engine. Cylinders 2, 4, and 6 are the left bank and, 1, 3, and 5 are the right bank. The

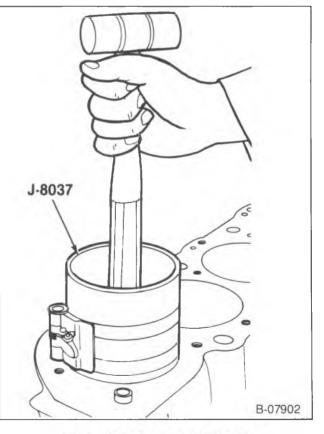


Figure 35—Installing the Piston

numbers on the connecting rod and bearing cap must be on the same side when installed in the cylinder bore. If a connecting rod is ever transposed from one block or cylinder to another, new connecting rod bearings should be fitted and the connecting rod should be numbered to correspond with the new cylinder number.

3. Connecting rod cap with bearing insert.

🗓 Measure

 Connecting rod bearing clearance. Refer to GENERAL ENGINE MECHANICAL (SEC. 6A).



Connecting rod cap nuts to 53 N m (39 ft. lbs.).

🖳 Measure

 Connecting rod side clearance (figure 36). The proper clearance is 0.16 to 0.64 mm.

OIL PUMP INSTALLATION

++ Install or Connect (Figure 37)

- Pump and shaft with retainer to the rear main bearing cap.
 - Align the top end of the hexagon extension shaft with the hexagon socket on the lower end of the distributor drive gear.
- 2. Bolt (40).

၃ Tighten

• Bolt to 41 N m (30 ft. lbs.).

OIL PAN INSTALLATION



Sealing surfaces on the engine and oil pan.



Install or Connect (Figure 38)

NOTICE: Before installing the oil pan, check that the sealing surfaces on the pan, cylinder case, and front cover are clean and free of oil. Make sure that all RTV is removed from blind attaching holes.

- 1. Gasket.
 - Apply sealer (GM Part No. 1052914 or equivalent) to the area shown in figure 38.
- 2. Oil pan to the cylinder block.
- 3. Reinforcement (37), nuts, bolts, and studs.

री Tighten

- Bolts (36) to 25 N m (18 ft. lbs.).
- Bolts and studs (35) and nuts (38) to 10 N·m (7 ft. lbs.).

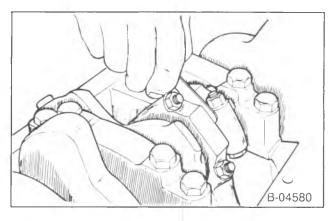


Figure 36—Measuring Connecting Rod Side Clearance

CYLINDER HEAD INSTALLATION



- Carbon deposits from combustion chambers.
- All traces of old head gasket from the cylinder head and block.
- Cylinder head bolt threads and threads in the block.

Inspect

• Sealing surfaces of the block and cylinder head for nicks, heavy scratches, or other damage.

Install or Connect

- 1. Gasket in place over the dowel pins with the note "This Side Up" showing.
- 2. Cylinder head.
 - Gasket must be fully seated on the block before head installation.
- 3. Head bolts.
 - Coat the bolt threads with sealing compound (GM part no. 1052080 or equivalent).
 - Install all bolts finger tight.

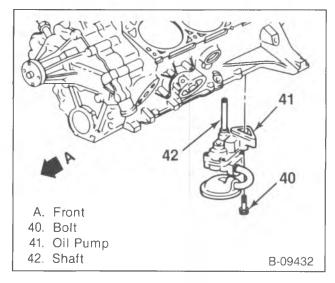


Figure 37—Oil Pump Installation

6A2-24 2.8 LITER V-6

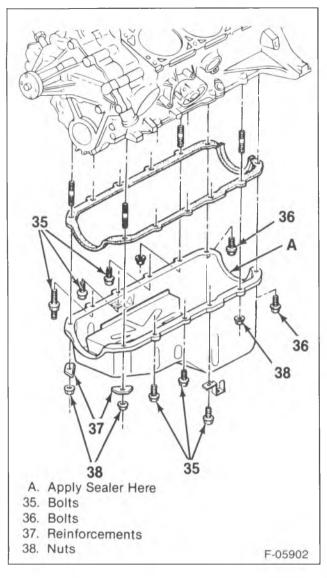
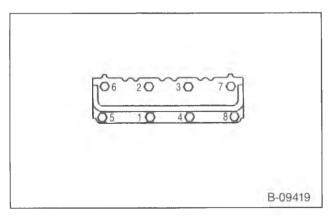


Figure 38—Oil Pan Installation

री Tighten

- All bolts to 55 N·m (40 ft. lbs.), using the sequence shown in figure 39.
- In sequence, tighten all bolts an additional 90 degrees (1/4-turn).





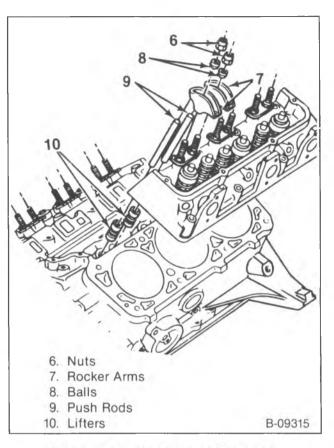


Figure 40—Rocker Arms and Pushrods

VALVE TRAIN COMPONENT INSTALLATION

If lifter replacement is necessary, use new lifters with a narrow flat along the lower 3/4 of the body length. This provides additional oil to the cam lobe and lifter surfaces.

? Important

Replace all hydraulic lifters if a new camshaft was installed.

Install or Connect (Figure 40)

- Lubricate the hydraulic lifter bodies and feet with Engine Oil Supplement (GM Part No. 1051396 or equivalent).
- 1. Hydraulic lifters (10) to the block.
- 2. Pushrods (9).
 - Seat the pushrods into the socket in the hydraulic lifters.
- Coat the mating surfaces of the rocker arms (7) and balls (8) with "Molykote" or equivalent.
- 3. Rocker arms.
- 4. Balls (8).
- 5. Nuts (6).

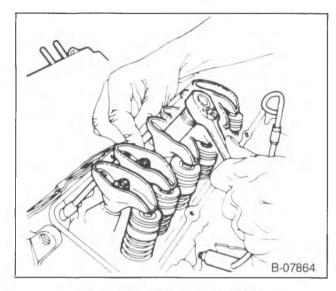


Figure 41-Adjusting the Valves

VALVE ADJUSTMENT

- 1. Crank the engine until the mark on the torsional damper lines up with the "O" mark on the timing tab and the engine in the number one firing position. This may be determined by placing fingers on the number one valve as the mark on the damper comes near the "O" mark on the timing tab. If the rocker arms are not moving, the engine is in the number one firing position. If the rocker arms move as the mark comes up to the timing tab, the engine is in the number four firing position and should be turned over one more time to reach the number one position.
- 2. With the engine in the number one firing position as determined above, the following valves may be adjusted:
 - Exhaust: 1, 2, 3
 - Intake: 1, 5, 6

(Even numbered cylinders are in the left bank; odd numbered cylinders are in the right bank, when viewed from the rear of the engine).

- 3. Back out the adjusting nut until lash if felt at the pushrod then turn in the adjusting nut until all lash is removed. This can be determined by rotating the pushrod while turning the adjusting nut (figure 41). When the play has been removed, turn the adjusting nut in one and one-half additional turns (to center the lifter plunger).
- 4. Crank the engine one revolution until the timing tab "O" mark and vibration damper mark are again in alignment. This is the number four firing position. The following valves may be adjusted:
 - Exhaust: 4, 5, 6
 - Intake: 2, 3, 4

INTAKE MANIFOLD INSTALLATION

Install or Connect (Figure 42)

- 1. RTV to the front and rear sealing surfaces on the block. Apply a 5 mm (3/16-inch) bead of RTV (part number 1052917 or equivalent) to the front and rear of the block as shown.
 - · Make sure that no oil or water is present on the surfaces to be sealed.
- 2. Gaskets to the cylinder head.
 - · Gaskets are marked Right Side or Left Side. Use them only as indicated to maintain design efficiency of the engine.
 - · Hold the gaskets in place by extending the bead of RTV 6 mm (1/4-inch) from the block sealing surfaces up onto the gasket ends.
 - . The new gaskets will have to be cut where indicated to install behind the pushrods. Cut only the areas where necessary.
- 3. Intake manifold.
 - Make sure the areas between the case ridges and the intake manifold are completely sealed.
- 4. Intake manifold bolts and nuts.



• Nuts and bolts to 31 N m (23 ft. lbs.) in the sequence shown in figure 42. Then re-torque in the same sequence.

ROCKER ARM COVER INSTALLATION

Clean

· All traces of old gasket from the rocker arm cover and cylinder head.

16 Inspect


 Rocker arm cover sealing surfaces for distortion. Replace if necessary.

- Install or Connect (Figure 43)
- 1. Rocker arm cover and gasket.
 - Apply a 5 mm (3/16-inch) dab of RTV sealant (GM Part No. 1052917 or equivalent) at the point where the inlet manifold meets the head.
- 2. Rocker arm cover nuts and reinforcements.




Nuts to 8 N-m (6 ft. lbs.).

6A2-26 2.8 LITER V-6

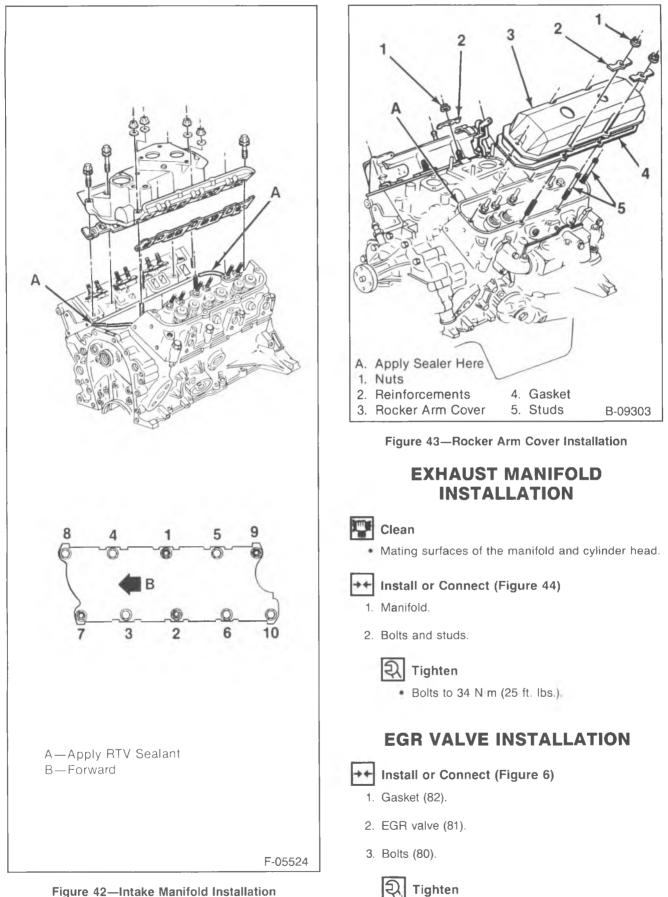



Bolts to 25 N m (18 ft. lbs.).

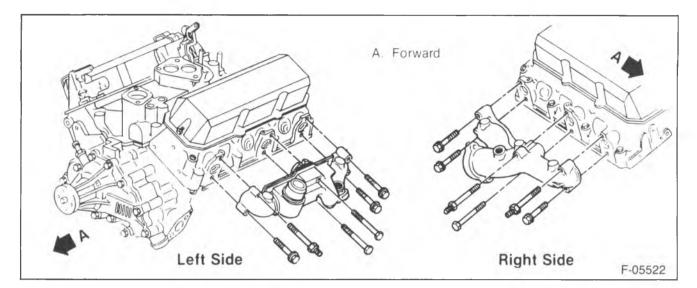



AIR INJECTION TUBE INSTALLATION

→+ Install or Connect (Figure 5)

- 1. Air injection tube (76).
- 2. Nut (75).

री Tighten

- Air injection tube to 34 N m (25 ft. lbs.).
- Nuts (75) to 25 N+m (18 ft. lbs.).

FLYWHEEL INSTALLATION

++ Install or Connect

- 1. Flywheel.
- 2. Retainer (automatic transmission only).
- 3. Bolts.

री Tighten

• Bolts to 70 N m (52 ft. lbs.).

ENGINE ACCESSORY INSTALLATION

Install the engine accessories (distributor, TBI unit, oil filter, generator, etc.) as directed in the proper Truck Service Manual. Connect all vacuum hoses and electrical equipment the same way as removed.

ENGINE SET-UP AND TESTING

- 1. After overhaul, the engine should be tested before installation in the vehicle. If a suitable test stand is not available, the following procedure can be used after the engine is installed in the vehicle.
- 2. Fill the crankcase with the proper quantity and grade of oil.

Important

- If a new camshaft or hydraulic lifters were installed, add Engine Oil Supplement (GM Part No. 1051396) or equivalent to the engine oil
- 3. Fill the cooling system with the proper coolant.
- 4. With the ignition "OFF," or disconnected, crank the engine several times. Listen for any unusual noises or evidence that any parts are binding.
- 5. Start the engine and listen for unusual noises.
- 6. Run the engine at about 1000 RPM until the engine is at operating temperature.
- 7 Listen for improperly adjusted valves or sticking lifters, and other unusual noises.
- 8. Check for oil and coolant leaks while the engine is running.
- 9. Using the proper Truck Service Manual or Emission Control Label for specifications, adjust the ignition timing and idle speed.

6A2-28 2.8 LITER V-6

SPECIFICATIONS

ENGINE SPECIFICATIONS

All Specifications are in MILLIMETERS unless otherwise noted.

GE	NERAL DATA:			
Туре			60° V-6	
Disp	placement		2.8L	
RPC)		LL2	
Bore	e		89.0	
Stro	ke		76.0	
Con	npression Ratio		8.9:1	
Firir	ng Order		1-2-3-4-5-6	
Oil Pressure			69 kPa @ 500 RPM; 205-380 kPa @ 2000 RPM (10 psi @ 500 RPM; 30-55 psi @ 2000 RPM)	
CYI	INDER BORE:			
Diameter			88.992-89.070	
Ou	t Of Round		0.02 (Maximum)	
Taper—Thrust Side			0.02 (Maximum)	
PIS	TON:			
Clearance			0.017-0.043	
	TON RING:			
C O M	Groove Clearance	Тор	0.030-0.070	
P R		Second	0.040-0.095	
E S S	Gap –	Тор	0.25-0.50	
I O N		Second	0.25-0.50	
0	Groove Clearance		0.199 (Maximum)	
L	Gap		0.51–1.40	
PIS	TON PIN:			
Dia	meter		22.9937–23.0015	
Clearance			0.0065-0.0091	
Fit In Rod			0.0187-0.0515 (Press)	

F-05523

SPECIFICATIONS

ENGINE SPECIFICATIONS (CONT.)

All specifications are in MILLIMETERS unless otherwise noted.

CRANKSHAFT

	Diameter - 3	3 Dots	67.241-67.249
	Diameter - 2	2 Dots	67.249-67.257
Main	Diameter - 1	Dot	67.257-67.265
Journal	Taper		0.005 (Maximum)
	Out of Roun	d	0.005 (Maximum)
Main Bearing	Clearance		0.041-0.081
Crankshaft E	nd Play		0.06-0.21
	Diameter —	2 Dots	50.758-50.771
Crankpin	Diameter - 1 Dot		50.771-50.784
Станкріп	Taper		0.005 (Maximum)
	Out of Round	d	0.005 (Maximum)
Rod Bearing	Clearance		0.035-0.095
Rod Side Cle	arance		0.16-0.64
CAMSHAFT:			
Lift		Intake	6.65
Lint		Exhaust	6.94
Journal Diam	eter		47.44-47.49
Journal Clearance			0.026-0.101
VALVE SYST	EM:		
Lifter	ifter		Hydraulic
Rocker Arm F	Ratio		1.50:1
Valve Lash	Intake		One And One Half Turns
	Exhaust		Down From Zero Lash
Face Angle (I	ntake & Exhaus	st)	45°
Seat Angle (Ir	ntake & Exhaus	it)	46°
Seat Runout (Intake & Exhau	ust)	0.05
Seat Width	Intake		1.25–1.50
	Exhaust		1.60–1.90
Stem Clearance			0.026-0.068
	Free Length		48.5
Valve	Pressure	Closed	391 @ 40
Spring	N @ mm	Open	867 @ 30
	Installed heig	ght	40
Valve Spring	Free Length		47.2
Damper	Approx. # of Coils		4


F-05525

6A2-30 2.8 LITER V-6

SPECIFICATIONS (CONT.)

TORQUE SPECIFICATIONS

Item	N-m	Ft. Lbs.			
Rocker Arm Cover Bolts	8	6			
Intake Manifold Bolts	31	23			
Exhaust Manifold Bolts	34	25			
Cylinder Head Bolts	95	70			
Torsional Damper Bolt	95	70			
Timing Chain Damper	21	15			
Front Cover Bolt	24	18			
Oil Pan Bolts (Rear Two)	25	18			
Oil Pan Bolts, Studs and Nuts	10	7			
Oil Pump Bolt	41	30			
Camshaft Sprocket Bolts	23	17			
Connecting Rod Cap Nuts	53	39			
Oil Filter Adapter	85	63			
Main Bearing Cap Bolts	95	70			
Flywheel Bolts	70	52			
Spark Plugs	30	22			
Water Outlet Bolts	21	15			
Water Pump Nut	10	7			
Water Pump Bolt (M6 x 1.0)	10	7			
Water Pump Bolts (M8 x 1.25)	24	18			
EGR Valve	25	18			
Oil Pump Cover Screws	9	7			
Rocker Arm Studs	65	48			
Air Injection Tube	34	25			
Air Injection Tube Nut	25	18			

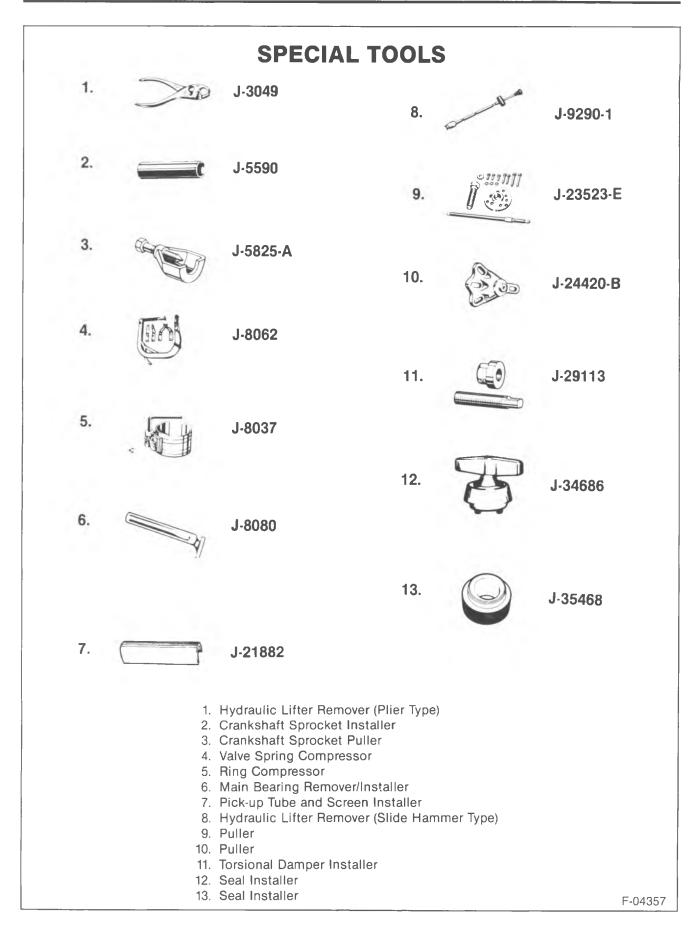

6A2-32 2.8 LITER V-6

SECTION 6A3

4.3 LITER V-6

CONTENTS

SUBJECT

PAGE

Description6A3- 2Engine Lubrication6A3- 2Disassembly6A3- 5Tools and Shop Equipment.6A3- 5Accessory Removal6A3- 5Cleaning6A3- 5Draining The Engine6A3- 5EGR Valve Removal6A3- 5ER Valve Removal6A3- 6Rocker Arm Cover Removal6A3- 6Valve Train Component Removal.6A3- 6Valve Train Component Removal.6A3- 7Oil Pan Removal.6A3- 7Priot Cover Removal.6A3- 7Piston and Connecting Rod Removal.6A3- 7Piston and Connecting Rod Removal.6A3- 9Rear Crankshaft Oil Seal Retainer Removal.6A3- 9Rear Crankshaft Oil Seal Retainer Removal.6A3- 9Prantshaft Removal.6A3- 9Cranshaft Removal.6A3- 10Dick.6A3- 10Piston and Connecting Rod Removal.6A3- 10Dick.6A3- 10Dick.6A3- 10Piston and Connecting Rod Assembly6A3- 10Piston and Connecting Rod Removal.6A3- 10Dick.6A3- 10Piston and Connecting Rod Assembly6A3- 10Dick.6A3- 10Piston and Connecting Rod Assembly6A3- 10Piston and Connecting Rod Assembly6A3- 10Dick.6A3- 10Piston and Ropair.6A3-			
Disassembly			
Tools and Shop Equipment6A3 - 5Accessory Removal6A3 - 5Cleaning6A3 - 5Draining The Engine.6A3 - 5EGR Valve Removal6A3 - 5Exhaust Manifold Removal.6A3 - 6National Conver Removal.6A3 - 6Intake Manifold Removal.6A3 - 6Valve Train Component Removal.6A3 - 6Valve Train Component Removal.6A3 - 6Cylinder Head Removal.6A3 - 7Oil Pan Removal.6A3 - 7Oil Pan Removal.6A3 - 7Oil Pump Removal.6A3 - 7Oil Pump Removal.6A3 - 7Oil Pump Removal.6A3 - 7Piston and Connecting Rod Removal.6A3 - 7Piston and Connecting Rod Removal.6A3 - 9Rear Crankshaft Oil Seal Retainer Removal.6A3 - 9Crankshaft Removal.6A3 - 9Crankshaft Removal.6A3 - 9Crankshaft Removal.6A3 - 9Crankshaft Oil Seal Retainer Removal.6A3 - 9Crankshaft Oil Seal Retainer Removal.6A3 - 10Piston and Connecting Rod Assembly.6A3 - 10Piston and Connecting Rod Assembly.6A3 - 10Piston and Connecting Rod Assembly.6A3 - 11Canshaft Removal6A3 - 11Canshaft Bearings6A3 - 11Canshaft Bearings6A3 - 11Canshaft Bearings6A3 - 11Canshaft Bearings6A3 - 12Oil Pan and Rocker Arm Covers6A3 - 12Oil Pump6A3 - 12Oil Pump6A3 - 12Oil P			
Accessory Removal 6A3 - 5 Cleaning 6A3 - 5 Draining The Engine 6A3 - 5 EGR Valve Removal 6A3 - 5 Exhaust Manifold Removal 6A3 - 6 Intake Manifold Removal 6A3 - 6 Intake Manifold Removal 6A3 - 6 Valve Train Component Removal 6A3 - 6 Valve Train Component Removal 6A3 - 7 Torsional Damper Removal 6A3 - 7 Oil Pan Removal 6A3 - 7 Oil Pump Removal 6A3 - 7 Front Cover Removal 6A3 - 7 Carshaft Removal 6A3 - 7 Front Cover Removal 6A3 - 7 Front Cover Removal 6A3 - 7 Front Cover Removal 6A3 - 7 Piston and Connecting Rod Removal 6A3 - 7 Piston and Connecting Rod Removal 6A3 - 9 Rear Crankshaft Oil Seal Retainer Removal 6A3 - 9 Crankshaft Removal 6A3 - 9 Crankshaft Removal 6A3 - 9 Crankshaft Removal 6A3 - 9 Main Bearing Removal (Without Removing Crankshaft) 6A3 - 10 Piston and Connecting Rod Assembly 6A3 - 10			
Cleaning			
Draining The Engine .6A3 - 5 EGR Valve Removal .6A3 - 5 Exhaust Manifold Removal .6A3 - 5 Rocker Arm Cover Removal .6A3 - 6 Intake Manifold Removal .6A3 - 6 Valve Train Component Removal .6A3 - 6 Cylinder Head Removal .6A3 - 6 Cylinder Head Removal .6A3 - 7 Oil Pam Removal .6A3 - 7 Oil Pump Removal .6A3 - 7 Oil Pump Removal .6A3 - 7 Control Cover Removal .6A3 - 7 Oil Pump Removal .6A3 - 7 Carshaft Removal .6A3 - 7 Piston and Connecting Rod Removal .6A3 - 7 Piston and Connecting Rod Removal .6A3 - 9 Rear Crankshaft Oil Seal Removal .6A3 - 9 Rear Crankshaft Oil Seal Removal .6A3 - 10 Piston and Connecting Rod Assembly .6A3 - 10 Block .6A3 - 10 Piston and Connecting Rod Assembly .6A3 - 10 Block .6A3 - 10 Piston and Connecting Rod Assembly .6A3 - 10 Intake and Exhaust Manifolds .6A3 - 10 Carakshaft Locker Arm Covers			
EGR Valve Removal			
Exhaust Manifold Removal			
Rocker Arm Cover Removal	EGR Valve Removal	iA3- 5	
Intake Manifold Removal			
Valve Train Component Removal			
Cylinder Head Removal			
Torsional Damper Removal			
Oil Pan Removal			
Oil Pump Removal.6A3- 7Front Cover Removal.6A3- 7Camshaft Removal.6A3- 7Camshaft Removal.6A3- 7Piston and Connecting Rod Removal.6A3- 8Flywheel Removal.6A3- 9Rear Crankshaft Oil Seal Retainer Removal.6A3- 9Rear Crankshaft Oil Seal Retainer Removal.6A3- 9Crankshaft Removal.6A3- 9Crankshaft Removal.6A3- 9Main Bearing Removal (Without Removing Crankshaft).6A3- 10Cleaning, Inspection, and Repair6A3- 10Block.6A3- 10Piston and Connecting Rod Assembly.6A3- 10Intake and Exhaust Manifolds6A3- 11Camshaft.6A3- 11Camshaft Bearings6A3- 12Oil Pan and Rocker Arm Covers6A3- 12Oil Pan and Rocker Arm Covers6A3- 13Cylinder Head.6A3- 13Chiners6A3- 13Cylinder Head.6A3- 13Cylinder Head.6A3- 13Chiners6A3- 13Cylinder Head.6A3- 13Chiners6A3- 16Cassembly of Engine.6A3- 17			
Front Cover Removal.6A3-7Camshaft Removal.6A3-7Piston and Connecting Rod Removal.6A3-8Flywheel Removal.6A3-9Rear Crankshaft Oil Seal Removal.6A3-9Rear Crankshaft Oil Seal Retainer Removal.6A3-9Crankshaft Removal.6A3-9Main Bearing Removal (Without Removing Crankshaft).6A3-10Cleaning, Inspection, and Repair6A3-10Block.6A3-10Piston and Connecting Rod Assembly.6A3-10Intake and Exhaust Manifolds.6A3-11Camshaft6A3-11Camshaft Bearings6A3-12Water Pump.6A3-12Oil Pan and Rocker Arm Covers6A3-12Oil Pump.6A3-12Valve Train Components.6A3-13Cylinder Head6A3-13Cylinder Head6A3-13Cylinder Head6A3-16Assembly of Engine.6A3-16Assembly of Engine.6A3-16			
Camshaft Removal			
Piston and Connecting Rod Removal.6A3- 8Flywheel Removal.6A3- 9Rear Crankshaft Oil Seal Removal.6A3- 9Rear Crankshaft Oil Seal Retainer Removal.6A3- 9Crankshaft Oil Seal Retainer Removal.6A3- 9Crankshaft Removal6A3- 9Main Bearing Removal (Without Removing Crankshaft).6A3- 10Cleaning, Inspection, and Repair6A3- 10Block6A3- 10Piston and Connecting Rod Assembly.6A3- 10Intake and Exhaust Manifolds6A3- 11Camshaft.6A3- 11Camshaft Bearings6A3- 11Camshaft Bearings6A3- 11Ciming Chain and Sprockets6A3- 11Front Cover6A3- 12Oil Pan and Rocker Arm Covers6A3- 12Oil Pump6A3- 12Valve Train Components6A3- 13Hydraulic Lifters6A3- 13Cylinder Head6A3- 13Thermostat and Water Outlet6A3- 16Crankshaft and Bearings6A3- 16Carakshaft and Bearings6A3- 16Chasembly of Engine.6A3- 17			
Flywheel Removal			
Rear Crankshaft Oil Seal Removal			
Rear Crankshaft Oil Seal Retainer Removal			
Crankshaft Removal			
Main Bearing Removal (Without Removing Crankshaft)	Rear Crankshaft Oil Seal Retainer Removal6	6A3- 9	
Cleaning, Inspection, and Repair.	Crankshaft Removal6	6A3- 9	
Block	Main Bearing Removal (Without Removing Crankshaft)	6A3-10	
Piston and Connecting Rod Assembly6A3-10Intake and Exhaust Manifolds.6A3-11Camshaft.6A3-11Camshaft Bearings.6A3-11Timing Chain and Sprockets.6A3-11Front Cover.6A3-12Water Pump6A3-12Oil Pan and Rocker Arm Covers.6A3-12Oil Pump.6A3-12Valve Train Components.6A3-13Hydraulic Lifters.6A3-13Cylinder Head.6A3-13Thermostat and Water Outlet6A3-16Crankshaft and Bearings.6A3-17	Cleaning, Inspection, and Repair	6A3-10	
Intake and Exhaust Manifolds6A3-11Camshaft6A3-11Camshaft Bearings6A3-11Timing Chain and Sprockets6A3-11Front Cover6A3-12Water Pump.6A3-12Oil Pan and Rocker Arm Covers6A3-12Oil Pump6A3-12Valve Train Components6A3-13Hydraulic Lifters6A3-13Cylinder Head6A3-13Thermostat and Water Outlet.6A3-16Crankshaft and Bearings6A3-17	Block	A3-10	
Camshaft6A3-11Camshaft Bearings6A3-11Timing Chain and Sprockets6A3-11Front Cover6A3-12Water Pump.6A3-12Oil Pan and Rocker Arm Covers6A3-12Oil Pump6A3-12Valve Train Components6A3-13Hydraulic Lifters6A3-13Cylinder Head6A3-13Thermostat and Water Outlet.6A3-16Crankshaft and Bearings6A3-16Assembly of Engine.6A3-17	Piston and Connecting Rod Assembly6	6A3-10	
Camshaft6A3-11Camshaft Bearings6A3-11Timing Chain and Sprockets6A3-11Front Cover6A3-12Water Pump.6A3-12Oil Pan and Rocker Arm Covers6A3-12Oil Pump6A3-12Valve Train Components6A3-13Hydraulic Lifters6A3-13Cylinder Head6A3-13Thermostat and Water Outlet.6A3-16Crankshaft and Bearings6A3-16Assembly of Engine.6A3-17			
Timing Chain and Sprockets6A3-11Front Cover6A3-12Water Pump.6A3-12Oil Pan and Rocker Arm Covers6A3-12Oil Pump.6A3-12Valve Train Components6A3-13Hydraulic Lifters6A3-13Cylinder Head6A3-13Thermostat and Water Outlet.6A3-16Crankshaft and Bearings6A3-17	Camshaft	6A3-11	
Timing Chain and Sprockets6A3-11Front Cover6A3-12Water Pump.6A3-12Oil Pan and Rocker Arm Covers6A3-12Oil Pump.6A3-12Valve Train Components6A3-13Hydraulic Lifters6A3-13Cylinder Head6A3-13Thermostat and Water Outlet.6A3-16Crankshaft and Bearings6A3-17	Camshaft Bearings	6A3-11	
Front Cover6A3-12Water Pump.6A3-12Oil Pan and Rocker Arm Covers6A3-12Oil Pump.6A3-12Valve Train Components6A3-13Hydraulic Lifters6A3-13Cylinder Head6A3-13Thermostat and Water Outlet.6A3-16Crankshaft and Bearings6A3-17			
Oil Pan and Rocker Arm Covers6A3-12Oil Pump6A3-12Valve Train Components6A3-13Hydraulic Lifters6A3-13Cylinder Head6A3-13Thermostat and Water Outlet6A3-16Crankshaft and Bearings6A3-16Assembly of Engine.6A3-17			
Oil Pan and Rocker Arm Covers6A3-12Oil Pump6A3-12Valve Train Components6A3-13Hydraulic Lifters6A3-13Cylinder Head6A3-13Thermostat and Water Outlet6A3-16Crankshaft and Bearings6A3-16Assembly of Engine.6A3-17			
Oil Pump6A3-12Valve Train Components6A3-13Hydraulic Lifters6A3-13Cylinder Head6A3-13Thermostat and Water Outlet6A3-16Crankshaft and Bearings6A3-16Assembly of Engine.6A3-17			
Valve Train Components. .6A3-13 Hydraulic Lifters. .6A3-13 Cylinder Head. .6A3-13 Thermostat and Water Outlet. .6A3-16 Crankshaft and Bearings. .6A3-16 Assembly of Engine .6A3-17	Oil Pump	A3-12	
Cylinder Head			
Thermostat and Water Outlet	Hydraulic Lifters	A3-13	
Crankshaft and Bearings	Cylinder Head	6A3-13	
Assembly of Engine	Thermostat and Water Outlet	A3-16	
	Crankshaft and Bearings6	A3-16	
	Assembly of Engine	6A3-17	
Crankshaft and Main Bearing Installation			
Rear Crankshaft Oil Seal Retainer Installation			
Rear Crankshaft Oil Seal Installation			
Camshaft, Timing Chain and Sprocket Installation			

6A3-2 4.3 LITER V-6

CONTENTS

SUBJECT

Assembly of Engine (Continued)	
Front Cover Installation	
Torsional Damper Installation	
Piston and Connecting Rod Installation	
Oil Pump Installation	
Oil Pan Installation	
Cylinder Head Installation	
Valve Train Component Installation	
Valve Adjustment	
Intake Manifold Installation	
Rocker Arm Cover Installation	
Exhaust Manifold Installation	
EGR Valve Installation	
Flywheel Installation	
Engine Accessory Installation	
Engine Set-Up and Testing	
Specifications	
Special Tools	

DESCRIPTION

GM 4.3L engines are 90-degree V6 type, overhead valve, water cooled, with cast iron block and heads.

The crankshaft is supported by four precision insert main bearings, with crankshaft thrust taken at the number four (rear) bearing.

The camshaft is supported by four plain type bearings and is chain driven. Motion from the camshaft is transmitted to the valves by hydraulic lifters, pushrods, and ball type rocker arms. The valve guides are integral in the cylinder head.

The connecting rods are forged steel, with precision insert type crankpin bearings. The piston pins are a press fit in the connecting rods.

The pistons are cast aluminum alloy. The piston pins are a floating fit in the piston.

For identification, refer to GENERAL INFORMATION (SEC. 0B).

ENGINE LUBRICATION

Lubrication schematics are shown in figures 1 and 2. The gear type oil pump is driven from the distributor shaft, which is gear driven from the camshaft. Oil is drawn into the oil pump through a pickup screen and pipe.

Pressurized oil is routed to the oil filter. In case of excessive oil pressure, a bypass valve is provided. Filtered oil flows into the main gallery and then to the camshaft and crankshaft bearings. The valve lifter oil gallery supplies oil to the valve lifters. Oil flows from the hydraulic lifters through the hollow pushrods to the rocker arms. Oil from the overhead drains back to the crankcase through oil drain holes.

The timing chain is drip fed from the front camshaft bearing. The pistons and piston pins are lubricated by oil splash.

PAGE

4.3 LITER V-6 6A3-3


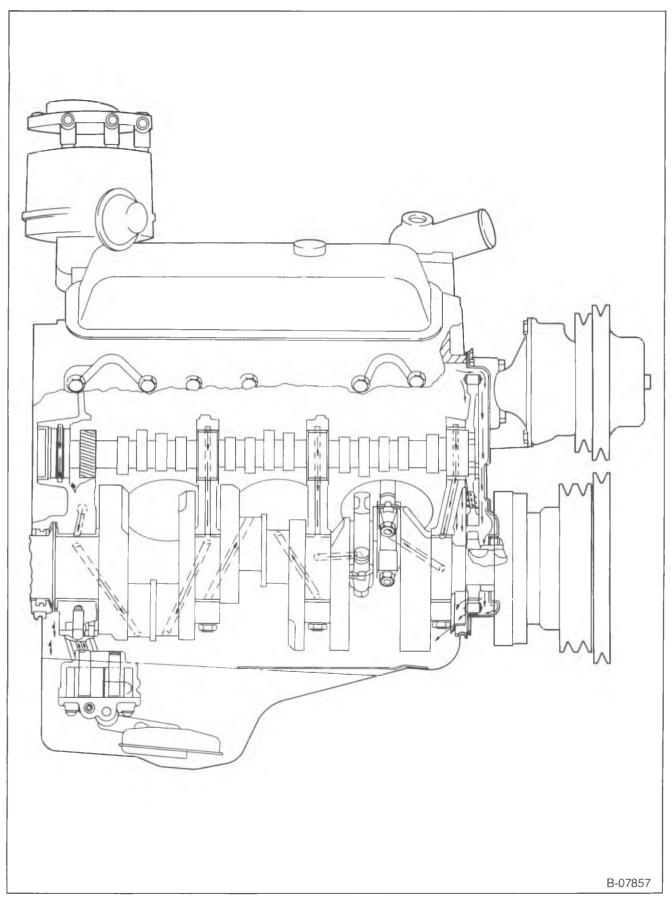


Figure 1—Engine Lubrication Diagram

6A3-4 4.3 LITER V-6



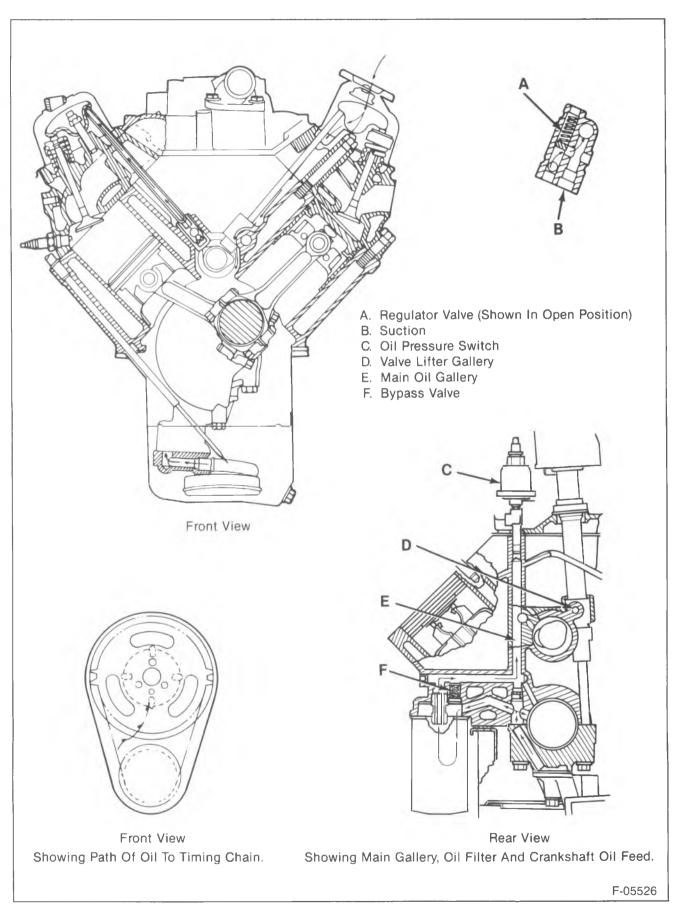

DISASSEMBLY

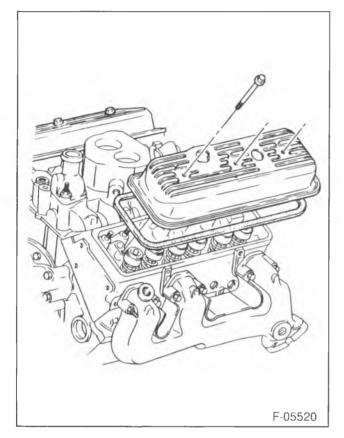


Figure 3—Rocker Arm Cover Installation

TOOLS AND SHOP EQUIPMENT

A clean, well lit work area should be available. Other necessary equipment includes: A suitable parts cleaning tank, compressed air supply, trays to keep parts and fasteners organized, and an adequate set of hand tools.

An approved engine repair stand will aid the work and help prevent personal injury or damage to engine components.

Special tools are illustrated throughout this section. and are listed at its end. These tools (or their equivalents) are specially designed to quickly and safely accomplish the operations for which they are intended. The use of these tools will also minimize possible damage to engine components.

Some precision measuring tools are required for inspection of certain critical components. Torque wrenches will be necessary for correct assembly of various parts.

ACCESSORY REMOVAL

This manual assumes that the engine accessories have been removed. These accessories may include one or more of the following:

Hydraulic Pump AIR Pump Generator Air Conditioning Compressor Cooling Fan Distributor Carburetor TBI Unit

It is beyond the scope of this section to detail the many different accessory installations. Refer to the proper Truck Service Manual for this information.

Diagrams of emission and vacuum hose routings, wiring harness routing, accessory drive belt layout, etc., should be made before removing accessories.

CLEANING

Remove the engine accessories before cleaning, to provide better access to engine exterior surfaces. After removing the carburetor, TBI unit, distributor, fuel pump, etc., cover the openings with tape to prevent the entry of water, solvent and dirt.

Methods used to clean the engine will depend on the aids which are available. Steam cleaning, pressure washing, or solvent cleaning are some acceptable methods. Allow the engine to dry before beginning the work.

It is important that the engine be as clean as possible to prevent dirt from entering critical areas during disassembly.

DRAINING THE ENGINE

++ Remove or Disconnect

- 1. Oil pan plug and allow the oil pan to drain.
- 2. Oil filter.
- 3. Block drains and allow the coolant to drain.

++ Install or Connect

- 1. Oil pan plug and washer.
- 2. Block drain plugs.
- 된 Tighten

Block drain plugs to 14 N m (10 ft. lbs.).

EGR VALVE REMOVAL

Remove or Disconnect

- 1. Bolts.
- 2. EGR valve.
- 3. Gasket.

EXHAUST MANIFOLD REMOVAL

++ Remove or Disconnect

- 1. Exhaust manifold bolts, washers, and tab washers.
- 2. Heat shield (if equipped).
- 3. Exhaust manifold.

6A3-6 4.3 LITER V-6

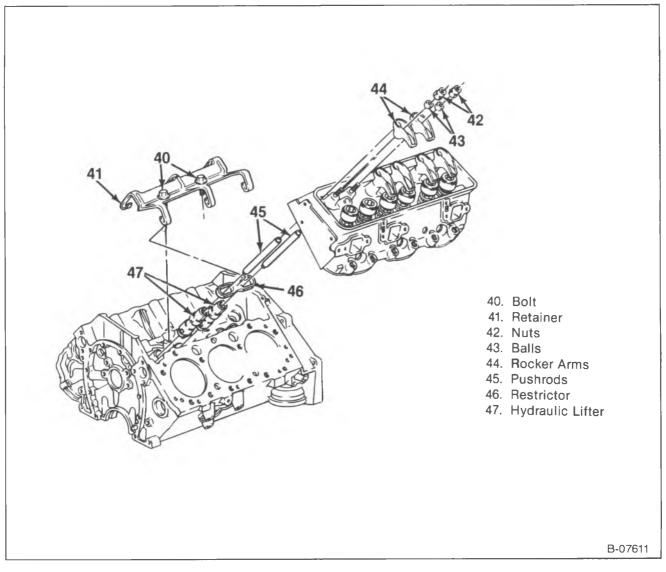


Figure 4—Valve Train Components

ROCKER ARM COVER REMOVAL



Remove or Disconnect (Figure 3)

- 1. Rocker arm cover bolts.
- 2. Rocker arm cover and gaskets.

INTAKE MANIFOLD REMOVAL

++ Remove or Disconnect

1. Intake manifold bolts.

2. Intake manifold and gaskets.

VALVE TRAIN COMPONENT REMOVAL

- Remove or Disconnect (Figure 4)
 - 1. Rocker arm nuts, balls, rocker arms, and pushrods.



- Store used components in order so they can be reassembled in the same location.
- 2. Bolts (40).
- 3. Retainer (41) with restrictors (46).
- 4. Hydraulic lifters.
 - · Remove the lifters one at a time and place them in an organizer rack. The lifters must be installed into the same bore from which they were removed.

4.3 LITER V-6 6A3-7

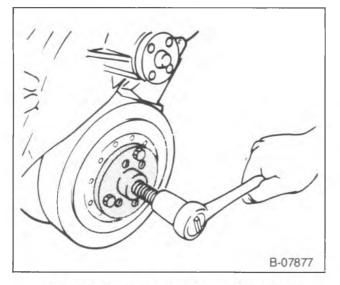


Figure 5—Removing the Torsional Damper

CYLINDER HEAD REMOVAL

++

Remove or Disconnect

- 1. Spark plugs.
- 2. Cylinder head bolts.
- 3. Cylinder heads.
- 4. Head gaskets.

TORSIONAL DAMPER REMOVAL

Remove or Disconnect (Figure 5)

Tool Required:

- J 23523-E, Torsional Damper Puller and Installer
- 1. Torsional damper bolt.
- 2. Torsional damper using J 23523-E.
- 3. Crankshaft key (if necessary).

OIL PAN REMOVAL

►→ Remove or Disconnect (Figure 6)

- 1. Oil pan bolts, nuts, and reinforcements.
- 2. Oil pan and gasket.

OIL PUMP REMOVAL

Remove or Disconnect

- 1. Oil pump to main bearing cap bolt.
- 2. Oil pump.

++

4.4

FRONT COVER REMOVAL

Remove or Disconnect

- 1. Front cover bolts and reinforcements.
- 2. Front cover.
- 3. Front cover to block gasket.

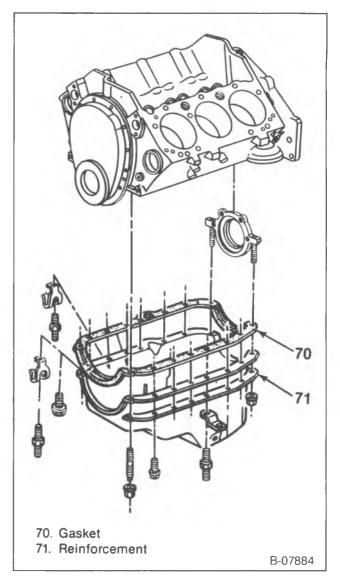


Figure 6—Oil Pan Installation

CAMSHAFT REMOVAL



Remove or Disconnect (Figures 7 and 8)

- 1. Camshaft sprocket bolts.
- 2. Camshaft sprocket and timing chain. The sprocket is a light interference fit on the camshaft. Tap the sprocket on its lower edge to loosen it.
- 3. Screws (88) and thrust plate (87).
- 4. Camshaft.
 - Install two or three 5/16-18 inch bolts 100-125 mm (4-5 inches) long into the camshaft threaded holes. Use these bolts to handle the camshaft (figure 8).
 - Pull the camshaft from the block. Use care to prevent damage to the camshaft bearings.

6A3-8 4.3 LITER V-6

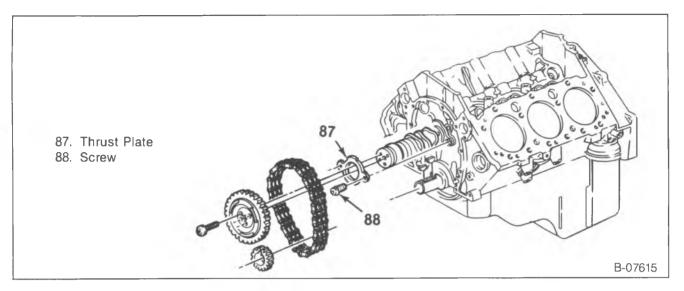


Figure 7-Camshaft and Components

PISTON AND CONNECTING ROD REMOVAL

Remove or Disconnect (Figures 9 and 10)

Tool Required:

J 5239, Guide Set.

- 1. Ridge or deposits from the upper end of the cylinder bores.
 - Turn the crankshaft until the piston is at BDC.

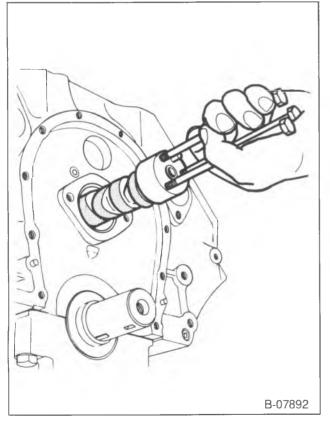


Figure 8—Replacing the Camshaft

- · Place a cloth on top of the piston.
- Perform the cutting operation with a ridge reamer (figure 9).
- Turn the crankshaft until the piston is at TDC.
- Remove the cloth and cuttings.
- Mark the cylinder number on all pistons, connecting rods, and caps. Starting at the front, the cylinders on the left bank are numbered 1-3-5 and the right bank is numbered 2-4-6.
- 2. Connecting rod cap. Check the connecting rod and cap for identification marks. Mark the parts if required. The connecting rod and cap must be kept together as mating parts.
- 3. Connecting rod and piston.
 - Attach J 5239 to the connecting rod bolts (figure 10).
 - Use the long guide rod of J 5239 to push the connecting rod and piston out of the bore.
- 4. Connecting rod bearing.

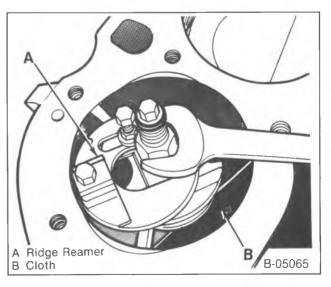


Figure 9—Removing the Cylinder Ridge

4.3 LITER V-6 6A3-9

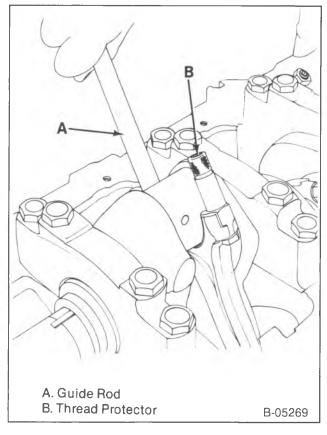


Figure 10—Replacing the Piston and Connecting Rod (Typical)

FLYWHEEL REMOVAL

Remove or Disconnect

- 1. Flywheel bolts.
- 2. Flywheel.

REAR CRANKSHAFT OIL SEAL REMOVAL

Remove or Disconnect

NOTICE: Care should be taken when removing the rear crankshaft oil seal so as not to nick the crankshaft sealing surface.

 Rear crankshaft oil seal. Insert a screwdriver into the notches provided in the seal retainer and pry the seal out (figure 11).

REAR CRANKSHAFT OIL SEAL RETAINER REMOVAL

Remove or Disconnect (Figure 12)

- 1. Screws (81).
- 2. Seal retainer (82).
- 3. Gasket (84).

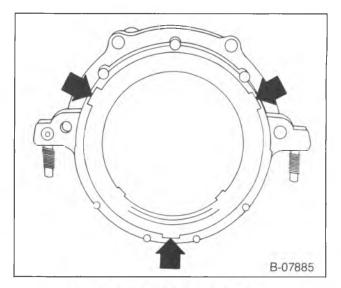


Figure 11-Seal Removal Notches

CRANKSHAFT REMOVAL

Remove or Disconnect

- Check the main bearing clearance before removing the crankshaft. Refer to "Crankshaft and Main Bearing Installation" later in this section.
- The main bearings and rear oil seal can be replaced without removing the crankshaft as outlined later in this section.
- 1. Main bearing cap bolts.
- 2. Main bearing caps.
- 3. Crankshaft from the cylinder block.
 - Lift the crankshaft straight up, taking care to avoid damage to the crankshaft journals and thrust flange surfaces.

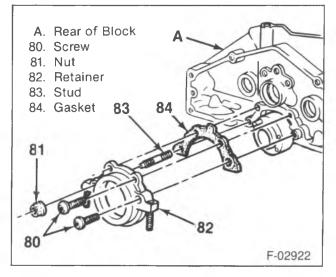


Figure 12—Rear Crankshaft Oil Seal Retainer Installation

6A3-10 4.3 LITER V-6

MAIN BEARING REMOVAL (WITHOUT REMOVING CRANKSHAFT)

Remove or Disconnect

Tool Required:

- J 8080, Main Bearing Remover/Installer
- 1. Main bearing caps.
 - Check the main bearing caps for location markings. Mark the caps if necessary. The caps must be returned to their original locations during assembly.
- 2. Lower main bearing inserts from the main bearing caps.
- 3. Upper main bearing inserts.
 - Insert J 8080 into the crankshaft oil hole (figure 13).
 - Rotate the crankshaft to turn the bearing insert out of the block.

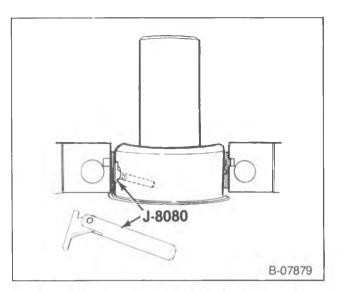


Figure 13—Removing the Main Bearing Insert

CLEANING, INSPECTION, AND REPAIR

A solvent tank, large enough to hold the larger engine parts, will be needed along with various bristle brushes and a gasket scraper. A source of compressed air will be helpful in the cleaning operations.

Precision measuring tools will 'a required for the inspection procedure. These include: micrometers, cylinder bore gage, feeler gages, dial indicator set, etc. The inspection work, performed with the prop ' method and tools, is most important. The rebuilt eng is cannot be expected to perform properly if parts wor , beyond acceptable limits are reused.



BLOCK

- 1. Block in solvent.
- 2. Block gasket surfaces.
- 3. Cylinder bores.
- 4. Oil galleries and passages.
- 5. Scale deposits from the coolant passages.

Inspect

- 1. All expansion plugs for lack of fit or leakage.
- 2. Valve lifter bores for deep scratches and varnish deposits.
- 3. Block for cracks.
 - Cylinder walls.
 - Coolant jackets.
 - Main bearing webs.
 - Engine mount bosses.
- 4. Main bearing bores and main bearing caps.
 - All main bearing bores should be rounded and uniform in ID at all bearing supports.
 - The area where the main bearing inserts contact the main bearing bore should be smooth.

- If a main bearing cap is damaged and requires replacement, replace it.
- 5. Head gasket surface for flatness. Use a straightedge and feeler gage. Minor irregularities may be carefully machined. If more than 0.25 mm (0.010-inch) must be removed, replace the block.
- 6. Oil pan rail and timing cover attaching area for nicks. Minor irregularities may be cleaned up with a flat file.

CYLINDER BORE



Cylinder bores for scoring or other damage.

4 Measure

• Cylinder bore taper and out-of-round. Refer to GENERAL ENGINE MECHANICAL (SEC. 6A).

Cylinder Bore Reconditioning

Refer to GENERAL ENGINE MECHANICAL (SEC. 6A).

PISTON AND CONNECTING ROD ASSEMBLY

Refer to GENERAL ENGINE MECHANICAL (SEC. 6A) and perform the following:












Components as outlined.

4.3 LITER V-6 6A3-11

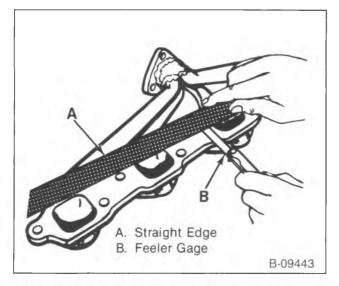



🗓 Measure

- Piston pin diameter and clearance.
- Piston to bore clearance, and fit pistons as outlined.

Assemble

Components as outlined.

Important

· Each connecting rod and bearing cap should be marked, beginning at the front of the engine. Cylinders 1, 3 and 5 are at the left bank, and 2, 4 and 6 are the right bank. The numbers on the connecting rod and bearing cap must be on the same side when installed in the cylinder bore. If a connecting rod is ever transposed from block or cylinder to another, new connecting rod bearings should be fitted and the connecting rod should be numbered to correspond with the new cylinder number.

Measure

Ring end gap and ring clearance.

Inspect

Ring fit.

INTAKE AND EXHAUST MANIFOLDS

Clean

- Old pieces of gasket from the gasket surfaces.
- Excessive carbon build-up in the exhaust passages of the intake manifold.
- Scale and deposits from the coolant passages of the intake manifold.
- EGR passage of excessive carbon deposits.

Inspect (Figure 14)

 Manifolds for cracks, broken flanges, and gasket surface damage.

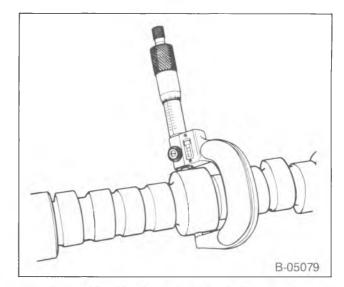


Figure 15-Checking the Camshaft Journals

 Alignment of manifold flanges. Use a straight edge and feeler gage. If the flanges do not align, the manifold is warped and should be replaced.

CAMSHAFT

Important

 Whenever the camshaft needs to be replaced, a new set of lifters must also be installed.

0 Inspect

 Camshaft lobes and journals for scratches, pitting, scoring, and wear.

Measure

U

· Camshaft journal diameter (figure 15). The proper diameter is listed in "Specifications."

CAMSHAFT BEARINGS

Refer to GENERAL ENGINE MECHANICAL (SEC. 6A) for replacement procedures.

TIMING CHAIN AND SPROCKETS

Inspect

- Sprockets for chipped teeth and wear.
- Timing chain for damage.
- It should be noted that excessively worn sprockets will rapidly wear a new chain. Likewise, an excessively worn chain will rapidly wear a new set of sprockets.

CRANKSHAFT SPROCKET REPLACEMENT


Remove or Disconnect (Figure 16)

Tool Required:

- J 5825-A Crankshaft Sprocket Puller
- 1. Crankshaft sprocket using J 5825-A.
- 2. Key (if necessary).



6A3-12 4.3 LITER V-6

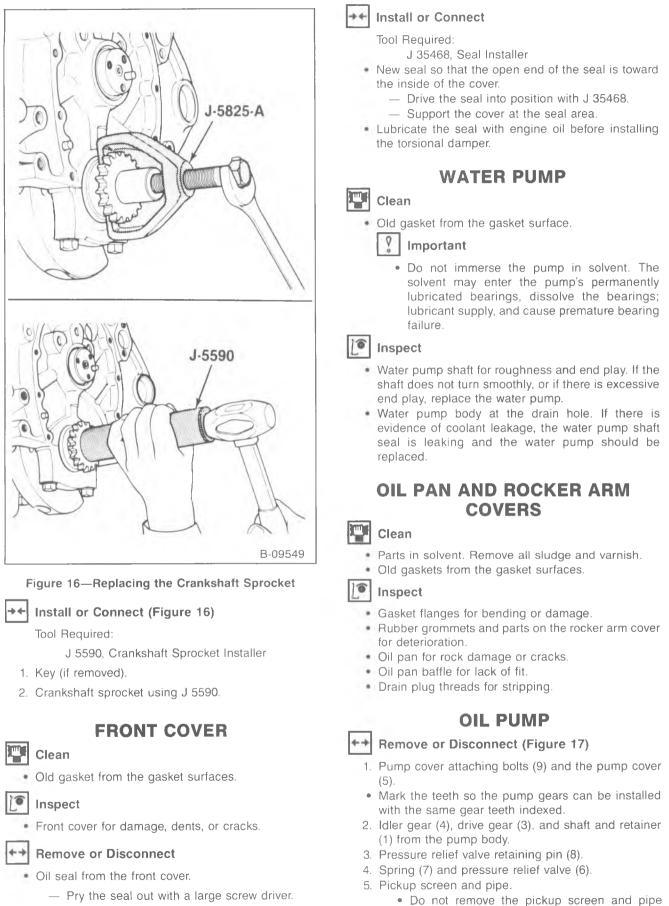

unless replacement is required.

- Be careful not to distort the front cover.

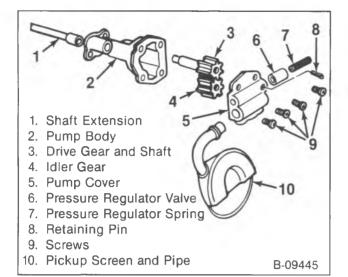


Figure 17—Oil Pump Components

- The pickup pipe is a press fit in the pump body.
- Do not try to remove the screen from the pipe. The pickup screen and pipe is serviced as an assembly only.

Clean

All parts in clean solvent and blow dry with compressed air.

Inspect (Figure 17)

- Pump body (2) and cover (5) for cracks or other damage
- Gears (3 and 4) for wear.
- Drive gear and shaft (3) for lack of fit in the pump body (2).
- Inside of the cover (5) for wear that would permit oil to leak past the ends of the gears. The pump gears, cover, and body are not serviced separately. If the parts are damaged or worn, replace the entire oil pump assembly.
- Pickup screen and pipe (10) for damage to the screen, pipe or relief grommet.
- Pressure relief valve (6) for fit. The regulator valve should slide freely in its bore without sticking or binding.

Install or Connect (Figure 17)

Tool Required:

J 21882, Pickup Tube and Screen Installer

- 1. Pressure regulator valve.
- 2. Spring.
- 3. Spring retaining pin.
- 4. Drive gear and shaft.
- 5. Idler gear.

· Index the marks made during disassembly. 6. Cover and screws

- 3 Tighten
 - Screws to 5.0 N·m (84 in, lbs.).
- Turn the drive shaft by hand to check for smooth operation.

NOTICE: Be careful of twisting, shearing or collapsing the pipe while installing the pump.

- 7. Pickup screen and pipe (if removed) (figure 18).
 - If the pickup screen and pipe assembly was removed, it should be replaced with a new part. Loss of press fit condition could result in an air leak and loss of oil pressure.
 - · Mount the oil pump in a soft jawed vise.
 - Apply sealer to the end of the pipe.
 - Tap the pickup screen and pipe into place, using J 21882 and a hammer.
 - The pump screen must be parallel with the bottom of the oil pan when installed.
- 8. Oil pump drive shaft and connector (1).

VALVE TRAIN COMPONENTS

PUSHRODS, ROCKER ARMS, BALLS, AND NUTS Clean

- Parts in solvent. Blow dry with compressed air.
- Make sure the oil passages in the pushrods are clear.

Inspect

- Rocker arms and balls at their mating surfaces. These surfaces should be smooth and free from scoring or other damage.
- Rocker arm areas which contact the valve stems and the sockets which contact the pushrods. These areas should be smooth and free of damage and wear
- Rocker arm nuts.
- Pushrods for bending. Roll the pushrod on a flat surface to determine if it is bent. Replace if necessary.
- Pushrod ends for scoring or roughness.

HYDRAULIC LIFTERS

Refer to GENERAL ENGINE MECHANICAL (SEC. 6A).

CYLINDER HEAD

Remove or Disconnect (Figures 19 and 20)

Tool Required:

J 8062, Valve Spring Compressor

- 1. Valve keepers (20).
 - Compress the springs with J 8062 (figure 20).
 - Remove the keepers.
 - Remove J 8062.
- 2. Cap (21), shield (22), seal (24), and damper (25), and spring (26) (intake valve).
- 3. Rotator (28), shield (22), seal (24), and damper (25), and spring (26) (exhaust valve).
- 4. O-ring seals (23).
- 5. Valves (27 and 29).
 - Place the valves in a rack so they can be returned to their original position at assembly.

6A3-14 4.3 LITER V-6

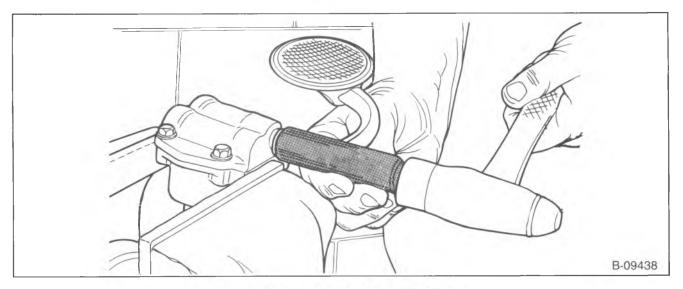


Figure 18-Installing the Oil Pump Screen

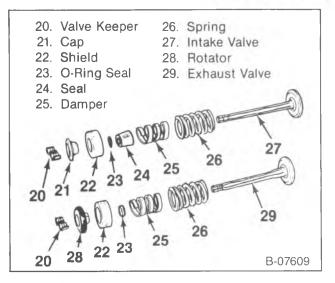


Figure 19—Valves and Components

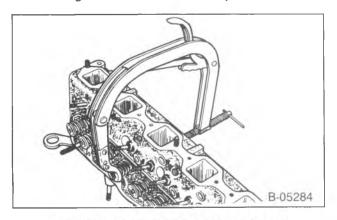


Figure 20-Compressing the Valve Springs

CLEANING AND INSPECTION OF COMPONENTS Refer to GENERAL ENGINE MECHANICAL (SEC. 6A) and perform the following.

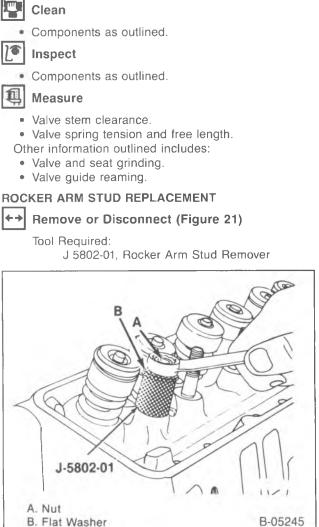


Figure 21-Removing the Rocker Arm Stud

4.3 LITER V-6 6A3-15

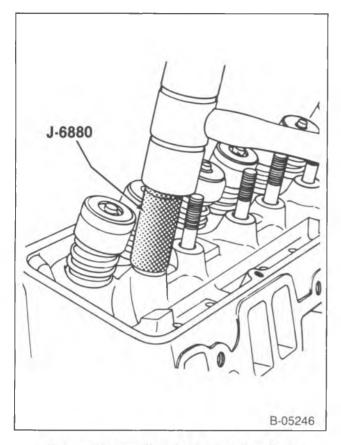


Figure 22-Installing the Rocker Arm Stud

- · Rocker arm stud.
 - Place J 5802-01 over the rocker arm stud.
 - Install a nut and flat washer.
 - Turn the nut to remove the stud.

→+ Install or Connect (Figure 22)

Tools Required:

- J 5715, Reamer (0.003-inch oversize) or
- J 6036, Reamer (0.013-inch oversize)
- J 6880, Rocker Arm Stud Installer

NOTICE: Do not attempt to install an oversize rocker arm stud without reaming the stud hole as this could damage the cylinder head.

- · Ream the hole to the proper size for the replacement oversize rocker arm stud. Use J 5715 for 0.003-inch oversize studs; J 6036 for 0.013-inch oversize stud (figure 23).
- · Coat lower end (press-fit area) of rocker arm stud with hypoid axle lubricant.
- · Rocker arm stud. Use J 6880 (figure 22). Stud is installed to proper depth when the tool bottoms on the cylinder head.

ASSEMBLY

++ Install or Connect (Figures 19, 20, and 24)

Tools Required:

- J 8062, Valve Spring Compressor J 23738-A, Vacuum Pump

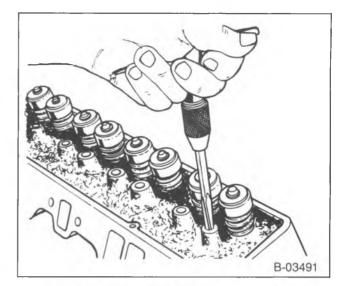


Figure 23-Reaming the Rocker Arm Stud Bore

- 1. Valves (27 and 29).
 - · Lubricate the valve stems with engine oil.
 - Insert the valves into the proper seats.
- 2. Seal (24) (intake valve only).
 - · Install the seal over the valve stem and seat it against the head.
- 3. Springs and dampers.
- 4. Shields (22).
- 5. Cap (21) or rotator (28)
- 6. O-ring seals (23) and valve keepers (20).

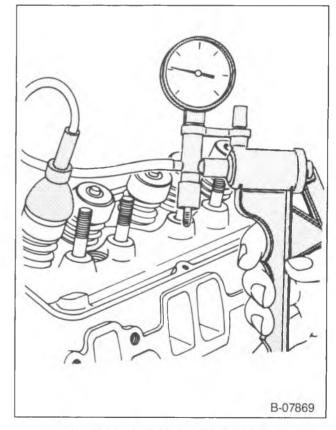


Figure 24-Checking the Valve Seals

6A3-16 4.3 LITER V-6

- · Compress the valve spring using J 8062 (figure 20). Compress the spring enough so the lower valve stem groove can be seen clearly.
- · Push a new O-ring seal (23) onto the valve stem. The seal is to be installed on the stem's lower groove. Make sure the seal is flat and not twisted.
- · Apply a small amount of grease to the area of the upper valve stem groove. Assemble the two valve keepers using the grease to hold the keys in place. Make sure the keepers seat properly in the groove.
- · Release the compressor tool. Make sure the valve keepers stay in place.
- · Repeat the preceding steps on the remaining valves
- Check each O-ring seal for leakage (figure 24).
 - · Place the suction cup supplied with J 23738-A over the shield.
 - · Connect J 23738-A to the suction cup and apply a vacuum. Watch the vacuum pump gage. No air should be able to leak past the seal. If the seal will not hold a vacuum, it may have been damaged or improperly installed.

Measure

- Valve spring installed height of each spring as follows.
 - 1. Use a narrow thin scale. A cutaway scale may be helpful.
 - 2. Measure from the top of the shim or the spring to the top of the shield.
 - 3. If this measurement exceeds the figure given in "Specifications," install valve spring seat shims approximately 1.6 mm (1/16-inch) thick (between the spring and cylinder head). NEVER shim the spring so as to give an installed height under the specified figure.

THERMOSTAT AND WATER OUTLET

Remove or Disconnect

1. Bolts.

++

++

- 2. Water outlet.
- 3. Gasket.
- 4. Thermostat.

6 Inspect

Water outlet for cracks.

Install or Connect

- 1. Thermostat.
- 2. New gasket.
- 3. Water outlet.
- 4. Bolts



Bolts to 28 N m (21 ft. lbs.).

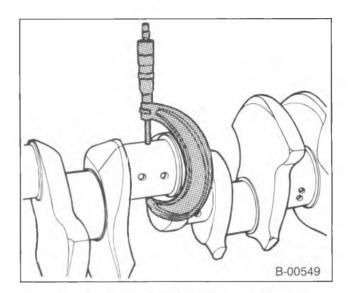


Figure 25—Measuring the Crankshaft Journals

CRANKSHAFT AND BEARINGS

Clean

- Crankshaft with solvent.
 - Do not scratch the bearing journals.
 - Blow all sludge from the oil passages with compressed air.
 - · Main bearing inserts. Wipe free of oil with a soft cloth.

Inspect

- Crankshaft for cracks. Use the magnaflux method, if available.
- · Crankpins, main bearing journals and thrust surfaces for scoring, nicks, or damage caused by lack of lubrication.
- · Main bearing inserts for scoring or other damage.

In general, the lower inserts (except the #1 bearing), show greater wear and the most distress from fatigue. If, upon inspection, the lower insert is suitable for use, it can be assumed that the upper insert is also satisfactory. If the lower insert shows evidence of wear or damage, both the upper and lower inserts must be replaced.

1 Measure

 Main bearing and connecting rod journal diameters (figure 25). Compare with "Specifications." Grind or replace the crankshaft if necessary.

Main bearing and connecting rod journals for taper and out-of-round (figure 25). If the journals are tapered more than 0.001-inch or out-of-round more than 0.002-inch, grind or replace the crankshaft.

- Crankshaft run-out.
 - · Mount the crankshaft in V-blocks or between centers.
 - Use a dial indicator.
 - If the main journals are misaligned, the crankshaft is bent and must be replaced, along with the main bearing.

ASSEMBLY OF ENGINE

PRIOR TO ASSEMBLY

The importance of cleanliness during the assembly procedure cannot be overstressed. Dirt will cause premature wear of the rebuilt engine.

Lubricate all moving parts lightly with engine oil or engine assembly lubricant (unless specified otherwise) during assembly. This will provide initial lubrication when the engine is started.

CRANKSHAFT AND MAIN BEARING INSTALLATION

Main bearings are of the precision insert type and do not use shims for adjustment. If clearances are excessive, a new bearing plus both upper and lower inserts will be required. Service bearings are available in standard size and 0.001-inch, 0.002-inch, 0.009-inch, 0.010-inch, and 0.020-inch undersize.

Selective fitting of both rod and main bearing inserts is necessary in production to obtain close tolerances. For this reason you may find one half of a standard insert with one half of a 0.001-inch undersize insert which will decrease the clearance 0.0005-inch from using a full standard bearing.

Some engines may have rear main bearings that are 0.008-inch wider than standard across the thrust faces.

- The crankshaft on these engines can be identified by ".008" stamped on the rear counterweight.
- If the rear main bearings are replaced, they must have the proper distance between thrust faces to obtain proper crankshaft end play.

++ Install or Connect

1. Upper main bearing inserts to the block.

Important

- If any undersized bearings are used, make sure they are fitted to the proper journals.
- 2. Crankshaft.
- 3. Lower main bearing inserts to the main bearing caps.

🗓 Measure

- Main bearing clearance. Refer to GENERAL ENGINE MECHANICAL (SEC. 6A).
- Apply engine oil to the main bearing inserts.
- Main bearing caps (except rear cap) and bolts to the block.

N Tighten

Main bearing cap bolts to 100 N-m (75 ft. lbs.).5. Rear main bearing cap.

- Apply engine oil to the bearing inserts.
- 6. Rear main bearing cap bolts.



Bolts to 14 N m (10 ft. lbs.).

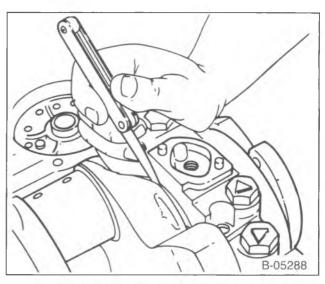


Figure 26—Measuring Crankshaft End Play

Measure

- Crankshaft end play, as follows:
 - Tap the end of the crankshaft first rearward then forward with a lead hammer. This will line up the rear main bearing and crankshaft thrust surfaces.
 - Tighten the rear main bearing cap bolts to 110 N+m (80 ft. lbs.).
 - With the crankshaft forced forward, measure at the front end of the rear main bearing with a feeler gage (figure 26). The proper clearance is 0.002-0.006-inch.
 - If correct end play cannot be obtained, be certain that the correct size rear main bearing has been installed. Production engines may have rear main bearings that are 0.008-inch wider across the thrust faces than standard.

Inspect

 Crankshaft for binding. Try turning the crankshaft to check for binding. If the crankshaft does not turn freely, loosen the main bearing cap bolts, one pair at a time, until the tight bearing is located. Burrs on the bearing cap, foreign matter between the insert and the block or the bearing cap, or a faulty insert could cause a lack of clearance at the bearing.

REAR CRANKSHAFT OIL SEAL RETAINER INSTALLATION

Clean

Gasket surfaces on the block and seal retainer.

++

1. New gasket (84) to the block.

Install or Connect (Figure 27)

• It is not necessary to use sealant to hold the gasket in place.

6A3-18 4.3 LITER V-6

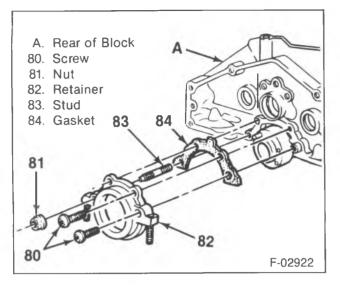


Figure 27—Rear Crankshaft Oil Seal Retainer Installation

- 2. Seal retainer (82).
- 3. Screws (80) and nuts (81).



Screws and nuts to 15.3 N m (135 in. lbs.).

REAR CRANKSHAFT OIL SEAL INSTALLATION

Install or Connect (Figure 28)

Tool Required:

J 35621 Seal Installer

- Rear crankshaft oil seal.
 - Lubricate the inner and outer diameter of the seal with engine oil.
 - Install the seal on J 35621.
 - Position J 35621 against the crankshaft. Thread the attaching screws into the tapped holes in the crankshaft.

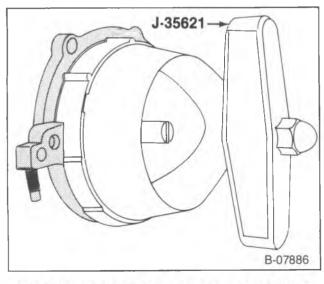


Figure 28—Installing the Rear Crankshaft Oil Seal

- Tighten the screws securely with a screwdriver. This will ensure that the seal is installed squarely over the crankshaft.
- Turn the handle until it bottoms.
- Remove J 35621.

CAMSHAFT, TIMING CHAIN AND SPROCKET INSTALLATION

++ Install or Connect (Figures 29, 30, and 31)

- Coat the camshaft lobes and journals with a high quality engine oil supplement (GM Engine Oil Supplement or equivalent).
- 1. Two or three 5/16-18 bolts 100-125 mm (4-5 inches) long into the camshaft threaded holes. Use these bolts to handle the camshaft.
- 2. Camshaft to the engine (figure 30). Handle the camshaft carefully to prevent damage to the camshaft bearings.
- 3. Thrust plate (87) and screws (88).



- Screws to 11.9 N m (105 in. lbs.).
- 4. Camshaft sprocket and timing chain.

Important

- Line up the timing marks on the camshaft sprocket and crankshaft sprocket (figure 31).
- 5. Camshaft sprocket bolts.

री Tighten

• Camshaft sprocket bolts to 28 N m (21 ft. lbs.).

FRONT COVER INSTALLATION

Install or Connect

- 1. Front cover gasket to the front cover.
 - Use gasket cement to hold the gasket in place.
- 2. Front cover to the engine.
- 3. Front cover bolts and reinforcements.

री Tighten

 Front cover to block bolts to 13.6 N m (120 in. lbs.).

TORSIONAL DAMPER INSTALLATION



Tool Required:

- J 23523-E, Torsional Damper Puller and Installer
- 1. Crankshaft key (if removed).

4.3 LITER V-6 6A3-19

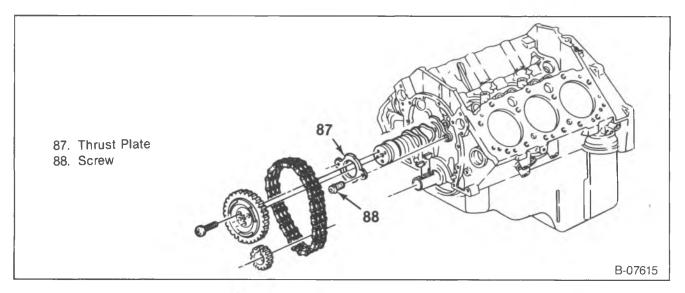


Figure 29—Camshaft and Components

NOTICE: The inertia weight section of the torsional damper is assembled to the hub with rubber type material. The correct installation procedures (with the proper tool) must be followed or movement of the inertia weight section of the hub will destroy the tuning of the torsional damper.

2. Stud (item A, figure 32) to the crankshaft. Thread the stud fully into the tapped hole in the crankshaft.

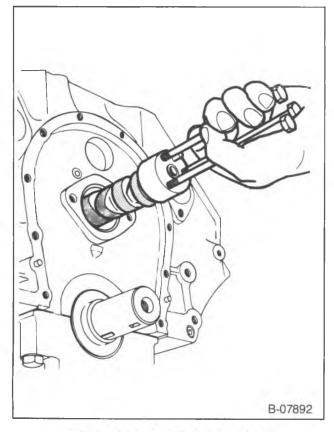


Figure 30—Installing the Camshaft

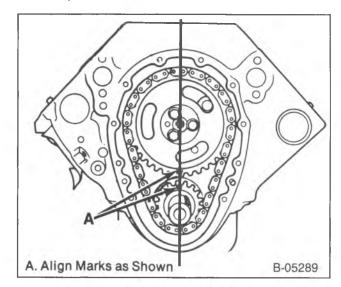


Figure 31-Timing Marks

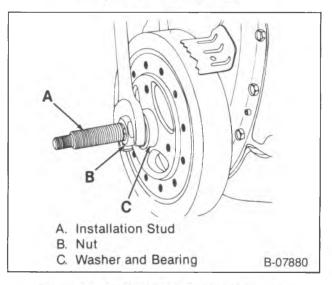


Figure 32—Installing the Torsional Damper

6A3-20 4.3 LITER V-6

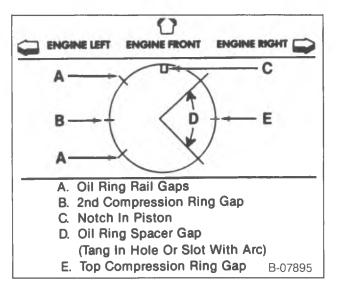


Figure 33—Piston Ring End Gap Locations

- 3. Torsional damper over the end of the stud. Align the keyway in the torsional damper shaft with the crankshaft key.
- 4. Bearing, washer and nut (figure 28).
 - Turn the nut to pull the vibration damper into place.
 - Remove the tool.
- 5. Torsional damper bolt and washer.



Bolt to 95 N m (70 ft. lbs.).

PISTON AND CONNECTING ROD INSTALLATION

CONNECTING ROD BEARING SELECTION

Connecting rod bearings are of the precision insert type and do not use shims for adjustment. DO NOT FILE RODS OR ROD CAPS. If clearances are excessive install a new bearing. Service bearings are available in standard size and 0.0014 mm undersize for use with new and used standard size crankshafts.

→← Install or Connect (Figures 33 through 35)

- Tools Required:
 - J 5239, Connecting Rod Guide Set
 - J 8037, Ring Compressor
- Lubricate the cylinder walls lightly with engine oil.
- Make sure the piston is installed in the matching cylinder.
- 1. Connecting rod bearings.
 - Be certain that the bearing inserts are of the proper size.
 - Install the bearing inserts in the connecting rod and connecting rod cap.
 - Lubricate the bearings with engine oil.
- 2. Piston and connecting rod to the proper bore.
 - With the connecting rod cap removed, install J 5239 onto the connecting rod studs.

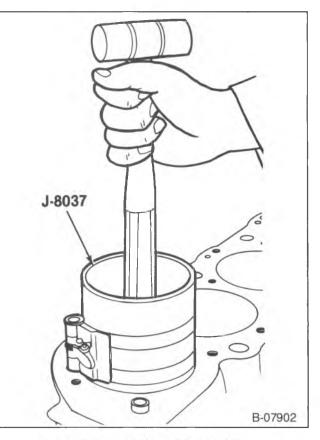


Figure 34—Installing the Piston

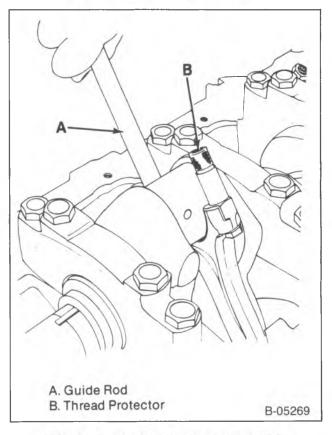


Figure 35—Guiding the Connecting Rod

4.3 LITER V-6 6A3-21

- Locate the piston ring end gaps as shown in figure 33. Lubricate the piston and rings with engine oil.
- Without disturbing the ring end gap location, install J 8037 over the piston (figure 34).
- The piston must be installed so that the notch in the piston faces the front of the engine (figure 33).
- Place the piston in its matching bore. The connecting rod bearing tang slots must be on the side opposite the camshaft. Using light blows with a hammer handle, tap the piston down into its bore (figure 34). At the same time, from beneath the vehicle guide the connecting rod to the crankpin with J 5239 (figure 35). Hold the ring compressor against the block until all rings have entered the cylinder bore.
- · Remove J 5239 from the connecting rod bolts.

Important

- Each connecting rod and bearing cap should be marked, beginning at the front of the engine. Cylinders 1, 3 and 5 are at the left bank and 2, 4 and 6 are the right bank. The numbers on the connecting rod and bearing cap must be on the same side when installed in the cylinder bore. If a connecting rod is ever transposed from one block or cylinder to another, new connecting rod bearings should be fitted and the connecting rod should be numbered to correspond with the new cylinder number.
- 3. Connecting rod cap with bearing insert.

🖳 Measure

Connecting rod bearing clearance. Refer to GENERAL ENGINE MECHANICAL (SEC. 6A).

री Tighten

Connecting rod cap nuts to 60 N m (45 ft. lbs.).

Measure

• Connecting rod side clearance (figure 36). The proper clearance is 0.006 to 0.014-inch.

OIL PUMP INSTALLATION

Install or Connect

- 1. Oil pump to the engine.
 - Align the slot in the oil pump shaft with the tang on the distributor shaft.
 - The oil pump should slide easily into place.
 - · No gasket is used.
- 2. Oil pump to main bearing cap bolt.

री Tighten

 Oil pump to main bearing cap bolt to 90 N·m (65 ft. lbs.).

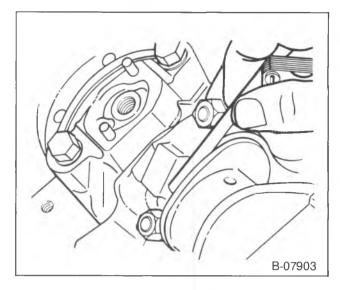


Figure 36—Measuring Connecting Rod Side Clearance

OIL PAN INSTALLATION

Install or Connect (Figure 37)

- Apply PST sealant (GM part number 1052080 or equivalent) to the front cover to block joint and to the rear crankshaft retainer seal to block joint. Apply the sealant about 25 mm (1-inch) in both directions from each of the four corners (figure 37).
- 1. Oil pan gasket to the oil pan.
- 2. Oil pan to the engine.
- 3. Oil pan reinforcements, bolts and nuts.
 - ၃ Tighten
 - Bolts to 11.3 N m (100 in. lbs.).
 - Nuts to 22.6 N m (200 in. lbs.).

CYLINDER HEAD INSTALLATION

Clean

Gasket surfaces on the block and cylinder head.

Install or Connect (Figure 38)

- 1. Head gasket.
 - If a steel gasket is used, coat both sides of the gasket with sealer. Spread the sealer thin and even.
 - Do not use sealer on composition steel-asbestos gaskets.
 - Place the gasket over the block dowel pins with the head up.
- 2. Cylinder head. Carefully guide the cylinder head into place over the dowel pins and gasket.
- Cylinder head bolts. Coat threads of the cylinder head bolts with sealing compound (GM part number 1052080 or equivalent) and install finger-tight.

री Tighten

 Cylinder head bolts, a little at a time, using the sequence shown in figure 38. The proper torque is 90 N·m (65 ft. lbs.).

6A3-22 4.3 LITER V-6

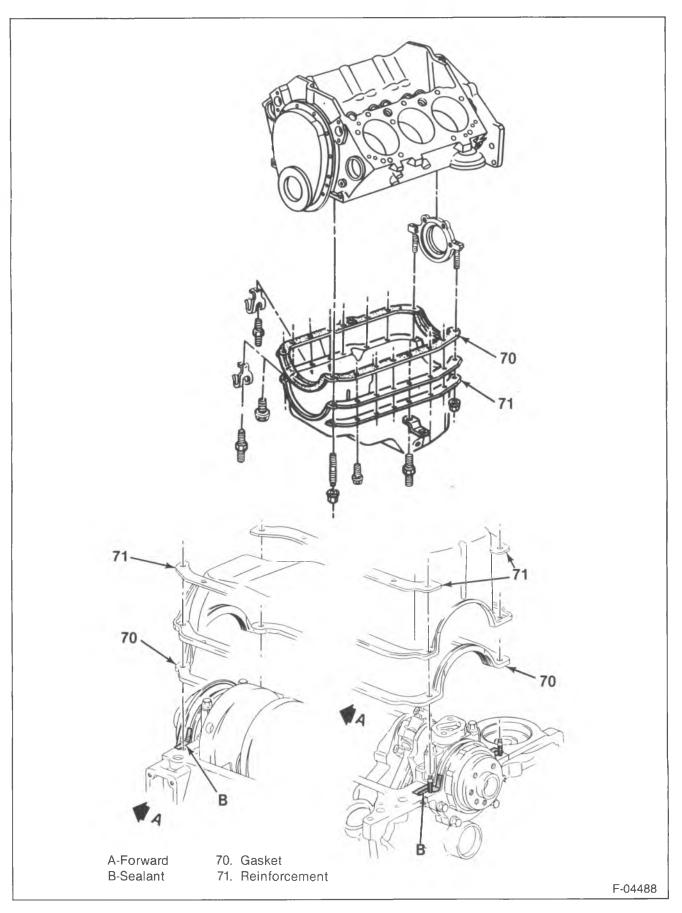


Figure 37—Oil Pan Installation

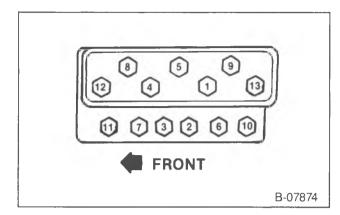


Figure 38—Cylinder Head Bolt Tightening Sequence

VALVE TRAIN COMPONENT INSTALLATION

Important

Replace all hydraulic lifters if a new camshaft was installed.

→+ Install or Connect (Figure 39)

- Lubricate the hydraulic lifter bodies and feet with Engine Oil Supplement (GM Part N0. 1051396 or equivalent).
- 1. Hydraulic lifters to the block.
- 2. Restrictors (46) and retainer (41) with bolts (40).



- Bolts (40) to 16.4 N·m (145 in. lbs.).
- 3. Pushrods.
 - Seat the pushrods into the socket in the hydraulic lifters.
- Coat the mating surfaces of the rocker arms and balls with "Molykote" or equivalent.
- 4. Rocker arms.
- 5. Balls.
- 6. Nuts.

VALVE ADJUSTMENT

- 1. Crank the engine until the mark on the torsional damper lines up with the "O" mark on the timing tab and the engine in the number one firing position. This may be determined by placing fingers on the number one valve as the mark on the damper comes near the "O" mark on the timing tab. If the rocker arms are not moving, the engine is in the number one firing position. If the rocker arms move as the mark comes up to the timing tab, the engine is in the number four firing position and should be turned over one more time to reach the number one position.
- With the engine in the number one firing position as determined above, the following valves may be adjusted:
 - Exhaust: 1, 5, 6.
 - Intake; 1, 2, 3.

(Even numbered cylinders are in the right bank; odd numbered cylinders are in the left bank, when viewed from the rear of the engine).

- 3. Back out the adjusting nut until lash is felt at the pushrod then turn in the adjusting nut until all lash is removed. This can be determined by rotating the pushrod while turning the adjusting nut. When the play has been removed, turn the adjusting nut in one full additional turn (to center the lifter plunger).
- 4. Crank the engine one revolution until the timing tab "O" mark and torsional damper mark are again in alignment. This is the number four firing position. The following valves may be adjusted:
 - Exhaust: 2, 3, 4.
 - Intake: 4, 5, 6.

INTAKE MANIFOLD INSTALLATION

Install or Connect (Figures 40 and 41)

- 1. Gaskets to the cylinder head with the port blocking plates facing the rear of the engine.
- RTV to the front and rear sealing surfaces on the block. Apply a 5 mm (³/₁₆-inch) bead of RTV (GM Part No. 1052366 or equivalent) to the front and rear of the block as shown in figure 40. Extend the bead 13 mm (¹/₂-inch) up each cylinder head to seal and retain the gaskets.
- 3. Intake manifold to the engine.
- 4. Intake manifold bolts.



++

 Bolts to 48 N m (35 ft. lbs.) using the tightening sequence shown in figure 41.

ROCKER ARM COVER INSTALLATION

→+ Install or Connect (Figure 42)

- 1. Rocker arm cover and new gasket.
- 2. Rocker arm cover bolts and washers.

री Tighten

• Rocker arm cover bolts to 10.2 N·m (90 in. lbs.).

EXHAUST MANIFOLD INSTALLATION



- Install or Connect (Figure 43)
- 1. Exhaust manifold.
- 2. Heat shield (if removed).
- 3. Exhaust manifold bolts, washers, and tab washers.



 Bolts on center exhaust tube to 36 N m (26 ft. lbs.).

6A3-24 4.3 LITER V-6

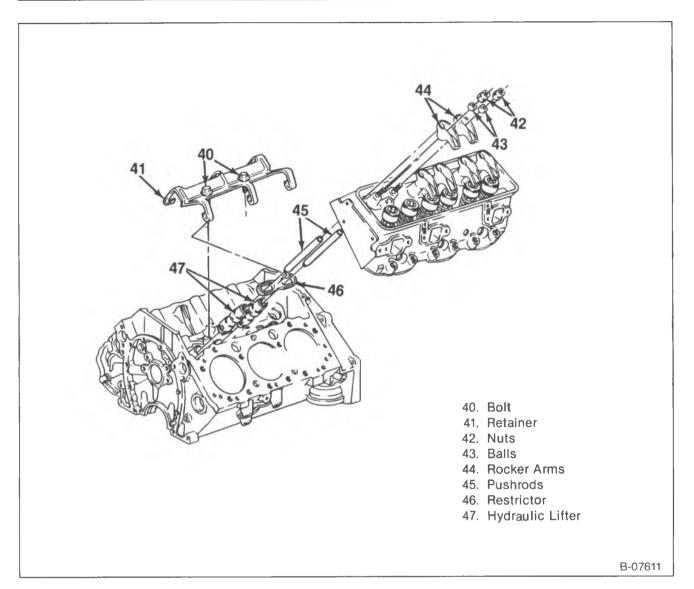


Figure 39—Valve Train Components

- Bolts on front and rear exhaust tubes to 28 N·m (20 ft. lbs.).
- Bend the tab washers over the heads of all bolts.

FLYWHEEL INSTALLATION

- ++ Install or Connect
 - 1. Flywheel.
- 2. Flywheel bolts.



• Bolts to 100 N m (75 ft. lbs.).

ENGINE ACCESSORY INSTALLATION

Install the engine accessories (distributor, carburetor, oil filter, generator, etc.) as directed in the proper Truck Service Manual. Connect all vacuum hoses and electrical equipment the same way as removed.


EGR VALVE INSTALLATION

Install or Connect

- 1. New gasket.
- 2. EGR valve.
- 3. Bolts.

री Tighten

Bolts to 31 N m (23 ft. lbs.).

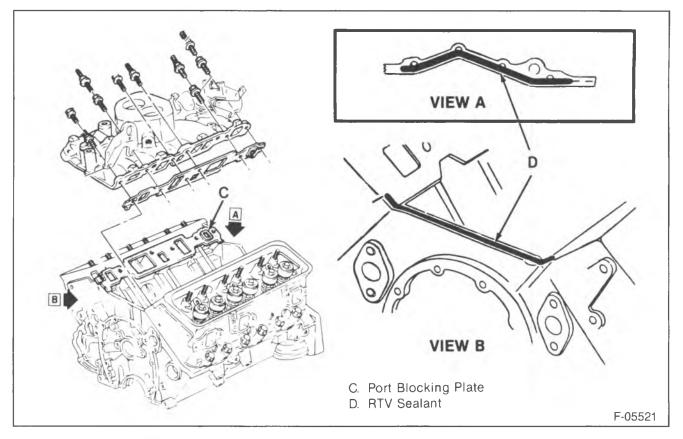



ENGINE SET-UP AND TESTING

- 1. After overhaul, the engine should be tested before installation in the vehicle. If a suitable test stand is not available, the following procedure can be used after the engine is installed in the vehicle.
- 2. Fill the crankcase with the proper quantity and grade of oil.

Important

• If a new camshaft or hydraulic lifters were

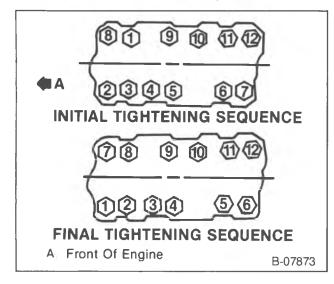


Figure 41—Intake Manifold Bolt Tightening Sequence

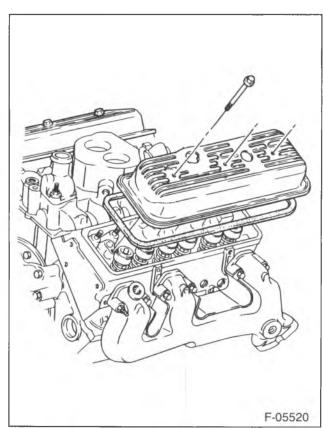


Figure 42—Rocker Arm Cover Installation

6A3-26 4.3 LITER V-6

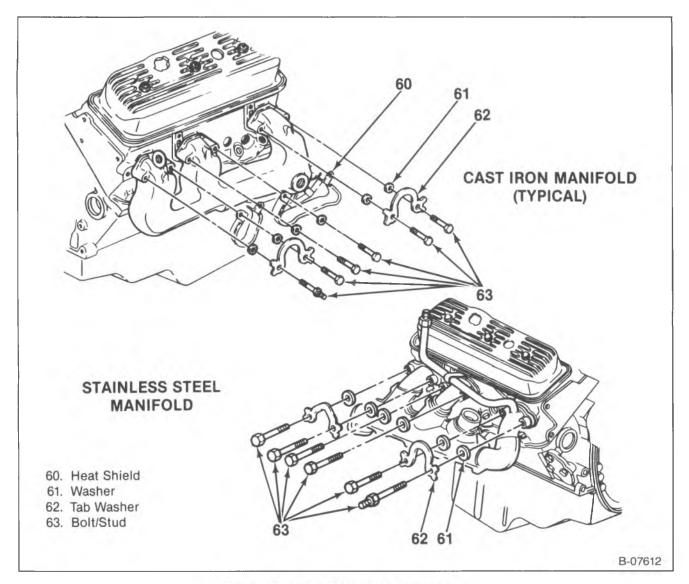


Figure 43—Exhaust Manifold Components

installed, add Engine Oil Supplement (GM part no. 1051396) or equivalent to the engine oil.

- Fill the cooling system with the proper coolant.
 With the ignition "OFF," or disconnected, crank the engine several times. Listen for any unusual noises or evidence that any parts are binding.
- 5. Start the engine and listen for unusual noises.
- 6. Run the engine at about 1000 rpm until the engine is at operating temperature.
- 7. Listen for improperly adjusted valves or sticking lifters, and other unusual noises.
- 8. Check for oil and coolant leaks while the engine is running.
- 9. Using the proper Truck Service Manual or Emission Control Label for specifications, adjust the ignition timing, idle rpm and mixture, and governor settings, if so equipped.

SPECIFICATIONS

ENGINE SPECIFICATIONS

All Specifications are in INCHES unless otherwise noted.

GEN		ATA:					
Туре					V6		
Displacement					4.3L (262 Cu. In.)		
RPO					LB4		
Bore					4.00		
Strok	e					3.48	
Compression Ratio					9.3:1		
Firing Order						1 - 6 - 5 - 4 - 3 - 2	
Oil P	ressure					10 psi @ 500 RPM; 30-35 psi @ 2000 RPM	
CYLI	NDER B	ORE:					
Diameter					3.9995-4.0025-		
Οι	ut Of	Proc	luction			0.001 (Maximum)	
Ro	ound	Serv	vice			0.002 (Maximum)	
Taper		5	Production	Thrust Side		0.0005 (Maximum)	
		'	Toduction	Relief Side		0.001 (Maximum)	
		Serv	Service			0.001 (Maximum)	
PIST	ON:						
Clearance		Proc	luction			0.0007-0.0017	
		Serv	vice Limit			0.0027 (Maximum)	
PIST	ON RIN	G:					
C			Production		Тор		
0 M	Groo	ve			Ond	0.0012-0.0032	
P	Cleara	nce			2nd		
RE			Service Limit			Hi Limit Production + 0.001	
S	Gap		Production		Тор	0.010-0.020	
S I					2nd	0.010-0.025	
O N			Service Limit			Hi Limit Production + 0.010	
	Groove Production			0.002-0.007			
0	Clearance		Service Limit			Hi Limit Production + 0.001	
			Production			0.015-0.055	
L	Ga	Gap Service L				Hi Production + 0.010	
PIST	ON PIN						
Diam	eter					0.9270-0.09273	
Clearance Production		Production			0.0002-0.0007		
In Piston		Service Limit			0.001 (Maximum)		
Fit In Rod			0.0008-0.0016 Interference				

6A3-28 4.3 LITER V-6


			CATIONS (CONT.) HES unless otherwise noted.	
DISPLACEMI			4.3L	
CRANKSHAP	T:			
		#1	2.4484-2.4493	
	Diameter	#2, #3	2.4481-2.4490	
		#4	2.4479-2.4488	
Main	Taper	Production	0.0002 (Maximum)	
Journal	laper	Service Limit	0.001 (Maximum)	
	Out Of	Production	0.0002 (Maximum)	
	Round	Service Limit	0.001 (Maximum)	
		#1	0.0008-0.0020	
	Production	#2, #3	0.0011-0.0023	
Main		#4	0.0017-0.0032	
Bearing		#1	0.0010-0.0015	
Clearance	Service Limit	#2, #3	0.0010-0.0025	
		#4	0.0025-0.0035	
Crankshaft Er	nd Play		0.002-0.006	
		Diameter	2.2487-2.2497	
	Taper	Production	0.0005	
Crankpin	10001	Service Limit	0.001 (Maximum)	
	Out	Production	0.0005	
	Round	Service Limit	0.001 (Maximum)	
Rod Bearing	1	Production	0.0013-0.0035	
Clearance		ervice Limit	0.0030	
Rod Side Cle	arance		0.006-0.014	
CAMSHAFT:				
Lobe		Intake	0.357	
Lift ± 0.002		Exhaust	0.390	
Journal Diam			1.8682-1.8692	
Camshaft End			0.004-0.012	
VALVE SYS1	EM:			
Lifter			Hydraulic	
Rocker Arm F	latio		1.50:1	
Valve Lash		Intake Exhaust	One Turn Down From Zero Lash	
	ntake & Exhaust)		45°	
	ntake & Exhaust)		46°	
Seat Runout	(Intake & Exhaus	1	0.002 (Maximum)	
Seat Width		Intake	1/32-1/16	
		Exhaust	1/16-3/32	
	Production	Intake	0.0010-0.0027	
Stem		Exhaust	0.0010-0.0027	
Clearance	Service	Intake	High Limit Production + 0.001	
		Exhaust	High Limit Production + 0.002	
	Free Length	1	2.03	
Valve	Pressure	Closed	76-84 lbs. @ 1.70-in.	
Spring	lbs. @ in.	Open	194-206 lbs. @ 1.25-in.	
(Outer)	Installed Height ± 1/32"		1 ²³ / ₃₂	
Valve	F	ree Length	1.86	
Spring		rox. # of Coils	4	

SPECIFICATIONS (CONTINUED)

TORQUE SPECIFICATIONS

ITEM	N·m	FT. LBS.	IN, LBS,
Rocker Arm Cover Bolts	10.2	—	90
Intake Manifold Bolts	48	35	_
Center Two Bolts.	36	26	-
All Others	28	20	
Cylinder Head Bolts	90	65	-
Torsional Damper Bolt	95	70	-
Front Cover Bolts	13.6		120
Oil Pan Nuts	22.6		200
Oil Pan Bolts	11.3	_	100
Oil Pump Bolt	90	65	
Rear Crankshaft Oil Seal Retainer Screws and Nuts	15.3		135
Camshaft Sprocket Bolts	28	21	_
Connecting Rod Cap Nuts.	60	45	-
Oil Filter Adapter Bolts.	20	15	_
Main Bearing Cap Bolts	110	80	-
Oil Pump Cover Bolts	9.0		80
Flywheel Bolts	100	75	_
Spark Plugs	30	22	-
Water Outlet Bolts	28	21	_
Water Pump Bolts	40	30	
Flywheel Housing Bolts	44	32	
Hydraulic Lifter Restrictor Retainer Bolts	16.4	—	145
Oil Pan Studs to Oil Seal Retainer or Crankcase	1.7	—	15
Camshaft Thrust Plate	11.9	_	105

6A3-30 4.3 LITER V-6

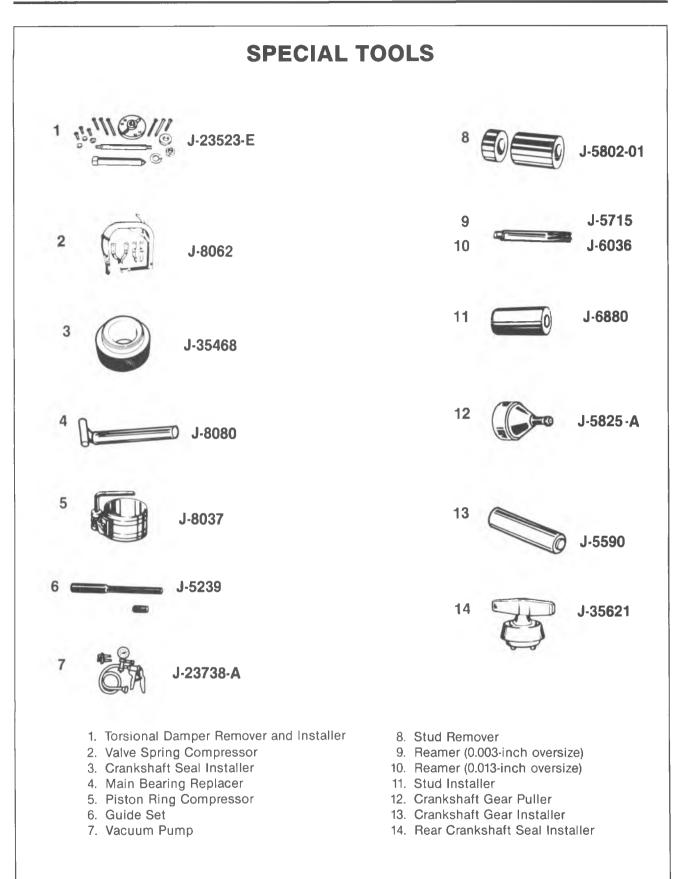

F-04490

SECTION 6A4

4.8 LITER L6

CONTENTS

SUBJECT

PAGE

Description	
Disassembly	
Tools and Shop Equipment	
Accessory Removal	
Cleaning	
Parts Identification	
Draining the Engine	6A4- 8
Air Manifold and Injection Tube Removal	6A4- 8
Manifold Removal	6A4- 8
Thermostat Housing Removal	6A4- 9
Water Pump Removal	6A4- 9
Valve Train Component Removal	6A4- 9
Cylinder Head Removal	
Torsional Damper Removal	
Oil Pan Removal	
Oil Pump Removal	
Timing Gear Cover Removal	
Piston and Connecting Rod Removal	
Flywheel Removal	
Crankshaft Removal	
Crankshaft Rear Oil Seal Removal (Without Removing Crankshaft)	
Main Bearing Removal (Without Removing Crankshaft)	
Camshaft Removal	
Cleaning, Inspection, and Repair.	
Block	
Main Bearing Cap Replacement	
Cylinder Bores	
Piston and Connecting Rod Assemblies	
Intake and Exhaust Manifolds	
Camshaft	
Camshaft Bearings	
Timing Gear Cover.	
Water Pump	
Oil Pan and Rocker Arm Cover	
Oil Pump	
Valve Train Components	
Cylinder Head.	
Thermostat and Housing	
Torsional Damper	
Crankshaft and Bearings	
Oil Filter Relief Valve Replacement	
Assembly of Engine	
Prior to Assembly	
Crankshaft Rear Oil Seal Installation6	6A4-23
Main Bearing Installation (With Crankshaft Installed)6	3A4-25
Crankshaft and Main Bearing Installation6	
Camshaft Installation	6A4-26
Timing Gear Cover Installation	6A4-26
Torsional Damper Installation	
Piston and Connecting Rod Installation	6A4-27
Oil Pump Installation	

6A4-2 4.8 LITER L6

CONTENTS (CONTINUED)

SUBJECT

Assembly of Engine (Cont.)	
Oil Pan Installation.	
Cylinder Head Installation	
Valve Train Component Installation	
Valve Adjustment	
Checking Valve Timing	
Rocker Arm Cover and Tappet Cover Installation	
Water Pump Installation	6A4-30
Thermostat Housing Installation	
Intake and Exhaust Manifold Installation.	
Air Manifold Installation	
Flywheel Installation	
Engine Accessory Installation	6A4-31
Engine Set-Up and Testing	
Specifications	6A4-32
Special Tools	6A4-35

DESCRIPTION

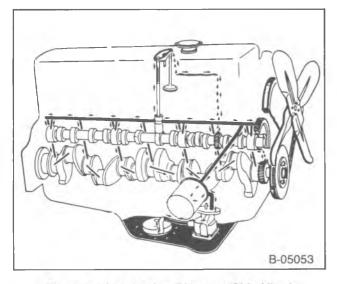


Figure 1—Lubrication Diagram (Side View)

GM 4.8L engines are inline six cylinder type, overhead valve, water cooled, with cast iron block and head.

The crankshaft is supported by seven precision insert main bearings, with crankshaft thrust taken at the number seven (rear) bearing.

The camshaft is supported by four plain type bearings and is gear driven. Motion from the camshaft is transmitted to the valves by hydraulic lifters, pushrods, and balltype rocker arms. The valve guides are integral in the cylinder head. The connecting rods are forged steel, with precision insert type crankpin bearings. The piston pins are a press fit in the connecting rods.

The pistons are case aluminum alloy. The piston pins are a floating fit in the pistons.

Lubrication schematics are shown in figures 1 and 2. The gear type oil pump is driven through an extension shaft from the distributor drive shaft, which is gear driven from the camshaft. Oil is drawn into the oil pump through a pickup screen and pipe (figure 2). Pressurized oil is routed to the oil filter. In case of excessive backpressure at the oil filter, a bypass valve is provided. This valve will allow oil flow to the main oil gallery at the right side of the block (figure 1). This gallery supplies oil to the camshaft bearings, hydraulic lifters, and main bearings. The connecting rods are supplied oil from the main bearings by means of drilled passages in the crankshaft. The valve train is supplied with oil by the hydraulic lifers. Oil is pumped from the lifters through the hollow pushrods to the rocker arms. Oil drains back to the crankcase through oil drain holes and the pushrod holes. The piston, piston pin, and timing gears are lubricated by oil splash.

For engine identification, refer to GENERAL INFORMA-TION (SEC. 6A).

PAGE

4.8 LITER L6 6A4-3

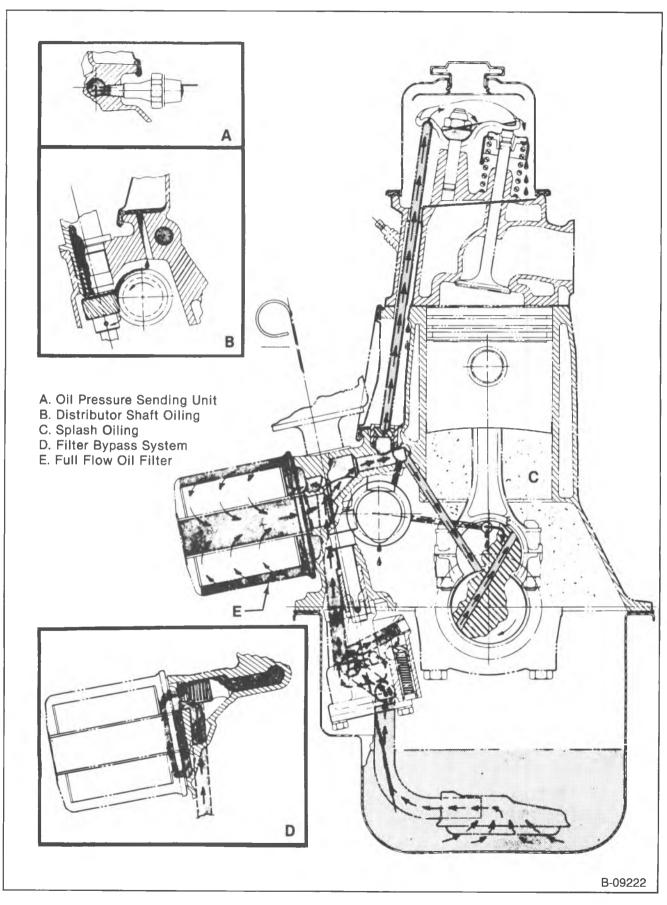


Figure 2—Lubrication Diagram (Front View)

6A4-4 4.8 LITER L6

DISASSEMBLY

2. 3. 4. 5. 6. 7. 8. 9. 10. 11. 12. 13. 14. 15. 16. 17. 18.	Clip22.Screw23.Reinforcement24.PCV Valve25.Seal26.Rocker Arm Cover27.Gasket28.Grommet29.Connector30.Nut31.Ball32.Rocker Arm Stud34.Valve Key35.O-ring Seal36.Rotator37.Shield38.	Bolt Washer Bracket Cylinder Head Gasket Stud Washer Nut Intake Manifold Nut Head Gasket Clamp Bolt Gasket Exhaust Manifold Stud	 41. Stud 42. Intake Valve 43. Exhaust Valve 44. Switch 45. Plug 46. Clamp 47. Hose 48. Nipple 49. Gasket 50. Housing 51. Bolt 52. Thermostat 53. Gasket 54. Water Outlet 55. Bolt 56. Stud 57. Washer 58. Bracket 59. Stud 	e
		Bolt Washer	59. Stud	
L				B-07995

Figure 3—Cylinder Head, Manifolds, and Components

TOOLS AND SHOP EQUIPMENT

A clean, well lit work area should be available. Other necessary aids include: A suitable parts cleaning tank, compressed air supply, trays to keep parts and fasteners organized, and an adequate set of hand tools.

An approved engine repair stand will aid the work and help prevent personal injury or damage to engine compartments.

Special tools are illustrated throughout this section, and are listed at its end. These tools (or their equivalents) are specially designed to quickly and safely accomplish the operations for which they are intended. The use of these tools will also minimize possible damage to engine components.

Some precision measuring tools are required for inspection of certain critical components. Torque wrenches will be necessary for correct assembly of various parts.

ACCESSORY REMOVAL

This manual assumes that the engine accessories have been removed. These accessories may include one or more of the following:

Hydraulic Pump Generator Distributor AIR Pump Cooling Fan Carburetor It is beyond the score of this manual to detail the many different accessory installations. Refer to the proper Truck Service Manual for this information.

Diagrams of emission and vacuum hose routings, wiring harness routings, accessory drive belt layout, etc., should be made before removing accessories.

CLEANING

Remove the engine accessories before cleaning to provide better access to engine exterior surfaces. After removing the carburetor, distributor, fuel pump, oil filter, etc., cover the openings with tape to prevent the entry of water, solvent, and dirt.

Methods used to clean the engine will depend on the aids which are available. Steam cleaning, pressure washing, or solvent cleaning are some acceptable methods. Allow the engine to dry before beginning the work.

It is important that the engine be as clean as possible to prevent dirt from entering critical areas during disassembly.

PARTS IDENTIFICATION

Refer to figures 3 through 6.

4.8 LITER L6 6A4-5

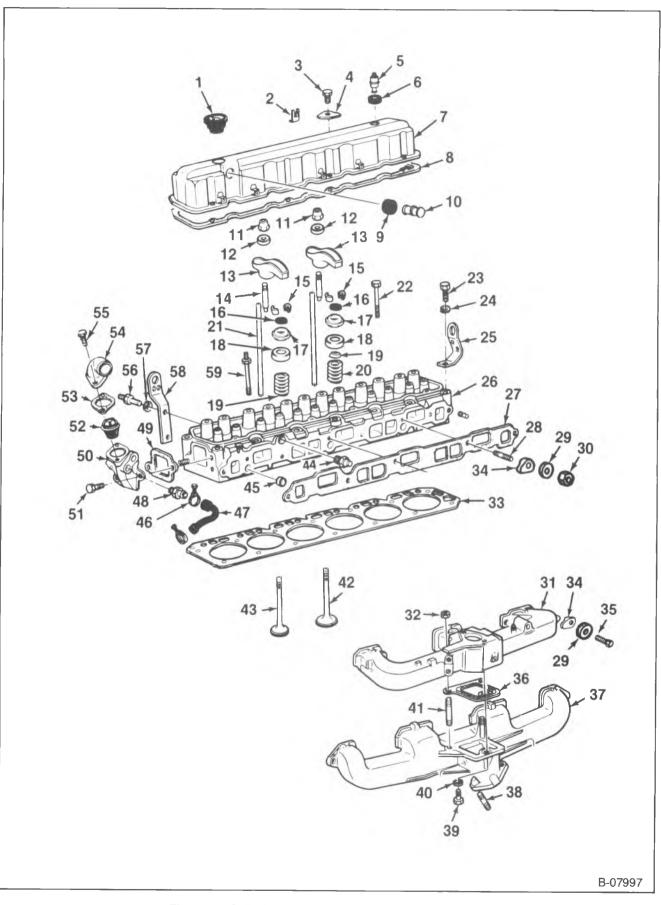


Figure 4—Cylinder Head, Manifolds, and Components

6A4-6 4.8 LITER L6

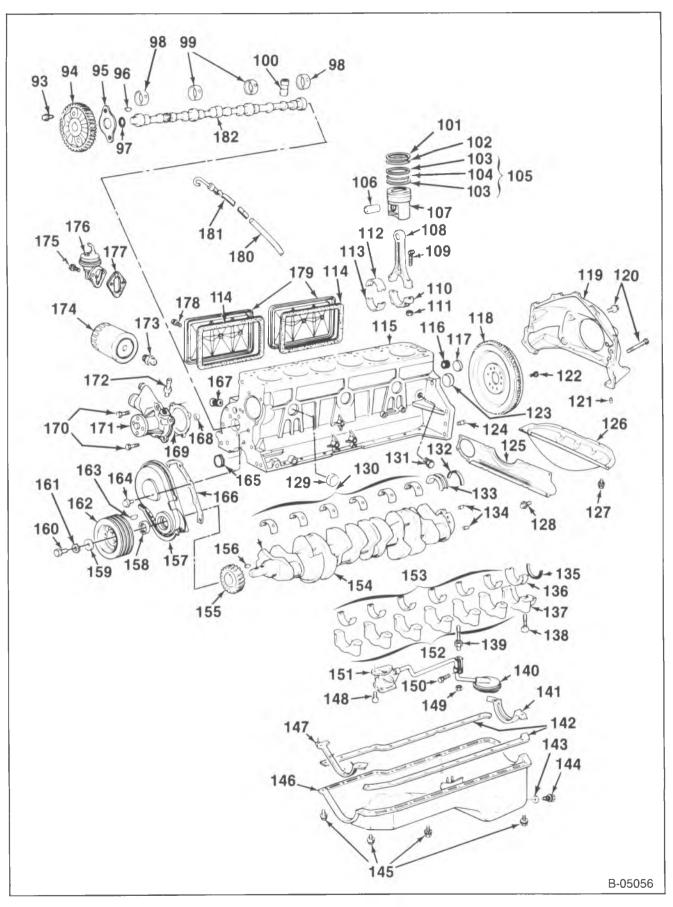


Figure 5—Block and Components

93. Screw 94. Camshaft Gear 95. Thrust Plate 96. Key 97. Spacer 98. Outer Camshaft Bearing 99. Inner Camshaft Bearing 100. Hydraulic Lifter 101. Top Compression Ring 102. Second Compression Ring 103. Rail 104. Expander 105. Oil Control Ring 106. Piston Pin 107. Piston 108. Connecting Rod 109. Connecting Rod Stud 110. Connecting Rod Cap 111. Nut 112. Upper Connecting Rod Bearing Insert 113. Lower Connecting Rod Bearing Insert 114. Gasket 115. Block 116. Plug 117. Rear Camshaft Plug 118. Flywheel 119. Flywheel Housing 120. Bolt 121. Dowel 122. Bolt 123. Plug 124. Dowel 125. Extention 126. Inspection Cover 127. Bolt 128. Bolt 129. Plug 130. Upper Main Bearing Inserts 131. Drain Plug 132. Upper Seal Half 133. Upper Rear Main Bearing Insert 134. Dowel Pin 135. Lower Seal Half 136. Lower Rear Main Bearing Insert 137. Rear Main Bearing Cap 138. Bolt 139. Bolt (Special) 140. Screen 141. Rear Oil Pan Seal 142. Gasket 143. Washer 144. Drain Plug

145. Bolt 146. Oil Pan 147. Front Oil Pan Seal 148. Bolt 149. Nut 150. Bolt 151. Oil Pump 152. Main Bearing Caps 153. Lower Main Bearing Inserts 154. Crankshaft 155. Crankshaft Gear 156. Key 157. Timing Gear Cover 158. Seal 159. Washer 160. Bolt 161. Washer 162. Torsional Damper 163. Key 164. Bolt 165. Plug 166. Gasket 167. Nipple 168. Plua 169. Gasket 170. Bolt 171. Water Pump 172. Nipple 173. Connector 174. Oil Filter 175. Bolt 176. Fuel Pump 177. Gasket 178. Bolt 179. Pushrod Cover 180. Dipstick Tube 181. Dipstick 182. Camshaft

F-04941

6A4-8 4.8 LITER L6

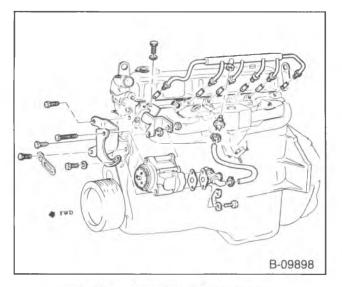


Figure 7—AIR System Components

DRAINING THE ENGINE

+> Remove or Disconnect (Figure 5)

- Oil pan drain plug (144). Allow the oil to drain.
- Oil filter (174).
- Block drain plug (131). Allow the coolant to drain.

Install or Connect (Figure 5)

- Oil pan drain plug (144) and washer (143).

乳 Tighten

Oil pan drain plug (144) to 24 N m (18 ft. lbs.).
 Block drain plug (31).

री Tighten

• Block drain plug (131) to 12.7 N·m (112 in. lbs.).

AIR MANIFOLD AND INJECTION TUBE REMOVAL

Remove or Disconnect (Figures 7 and 8)

- 1. Air manifold (182).
 - Unscrew the fittings.
 - Remove the air manifold.
- 2. Air injection tubes (183).
 - The air injection tubes are a push fit.
 - If the air injection tubes will not come out, they may be easier to remove after the manifolds (31 and 37) are removed, as described later.

MANIFOLD REMOVAL

The intake and exhaust manifolds are removed as an assembly. Instructions for separating and replacing the manifolds are outlined later in this section.

Remove or Disconnect (Figures 4, 9, and 10)

- 1. Heat stove (191) if used (figure 9).
 - Remove the bolt (190).

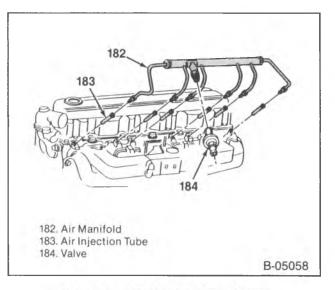


Figure 8—AIR Manifold Installation

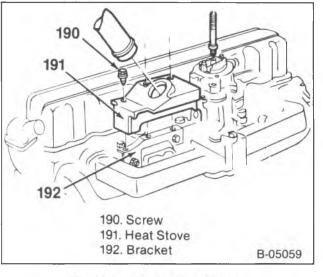


Figure 9—Manifold Heat Stove

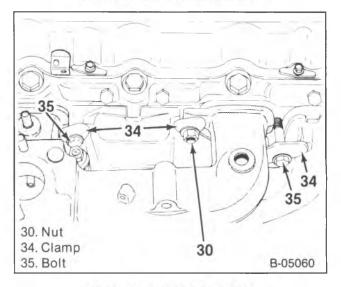


Figure 10-Manifolds Installed

4.8 LITER L6 6A4-9

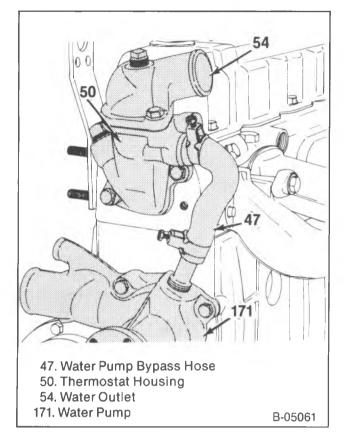


Figure 11—Thermostat Housing and Water Pump Installed

- · Remove the heat stove (191).
- 2. PCV hose.
- 3. Bolts (35), nuts (30), washers (29) and clamps (34).
- 4. Intake manifold (31) and exhaust manifold (37) as an assembly.
- 5. Gasket (27).

THERMOSTAT HOUSING REMOVAL

←→ Remove or Disconnect (Figures 4 and 11)

- 1. Bolts (51).
- 2. Thermostat housing (50).
- 3. Gasket (49).

WATER PUMP REMOVAL

Remove or Disconnect (Figures 5 and 11)

- 1. Bolts (170).
- 2. Water pump (171).
- 3. Gasket (169).

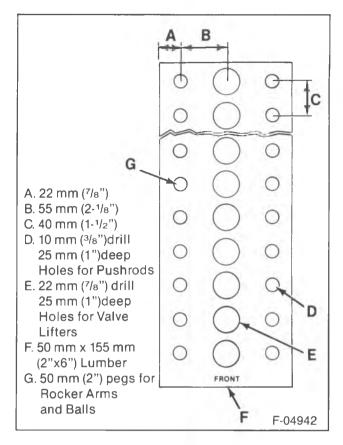


Figure 12—Valve Train Component Rack

VALVE TRAIN COMPONENT REMOVAL



Remove or Disconnect (Figures 3, 4, 12, 13, and 14)

Tools Required:

J-3049 Valve Lifter Remover (Plier Type) J-9290-01 Valve Lifter Remover (Slide Hammer Type)

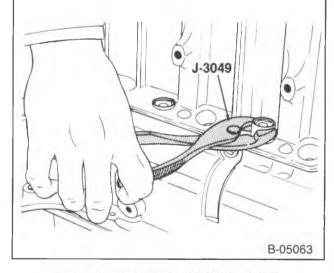


Figure 13-Removing the Valve Lifters

6A4-10 4.8 LITER L6

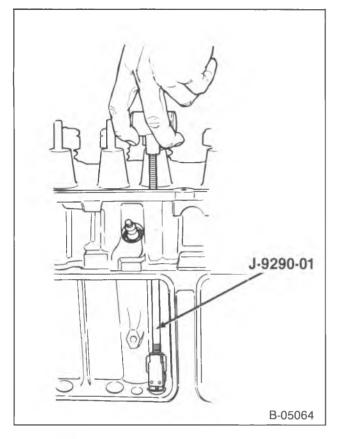


Figure 14—Removing the Valve Lifters

- 1. Rocker arm cover (7).
 - · If the rocker arm cover adheres to the cylinder head (26), try to shear the gasket by bumping the end of the cover with a rubber mallet. If the cover will not come loose, carefully pry until loose. DO NOT DISTORT THE SEALING FLANGE.
- 2. Nuts (11), balls (12), rocker arms (13) and pushrods (20)
 - · Every effort should be made to insure that these mating parts are installed in their original locations during assembly. A simple valve train component organizer rack can be made from a piece of wood, as shown in figure 12.
- 3. Bolts (178) and pushrod covers (179).
- 4. Gaskets (114).
- 5. Hydraulic lifters (100).
 - Remove the lifters one at a time and place them in the organizer rack. The lifters must be installed in the same bore from which they were removed.
 - A stuck fifter can be removed using J-3049 (figure 13) or J-9290-01 (figure 14).

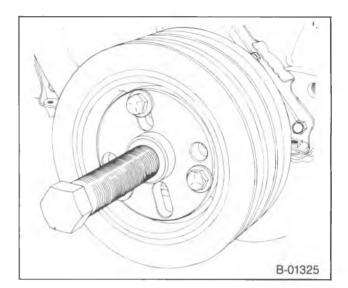


Figure 15—Removing the Torsional Damper

CYLINDER HEAD REMOVAL

★→ Remove or Disconnect (Figure 4)

- 1. Bolts (21).
- 2. Cylinder head (26). Use care when handling the cylinder head to prevent damage to the gasket surfaces.
- 3. Gasket (33).

TORSIONAL DAMPER REMOVAL

Remove or Disconnect (Figures 5 and 15)

Tool Required:

J-23523-E Torsional Damper Remover/Installer

- 1. Bolt (160) and washers (159 and 161).
- 2. Torsional damper (162). Use J-23523-E (figure 15).

OIL PAN REMOVAL

Remove or Disconnect (Figure 5)

- 1. Bolts (145).
- 2. Oil pan (146).
- 3. Gaskets (142).
- 4. Front and rear oil pan seals (141 and 147).

OIL PUMP REMOVAL

←→ Remove or Disconnect (Figure 5)

- 1. Bolt (164).
- 2. Front cover (157).
- 3 Gasket (166).

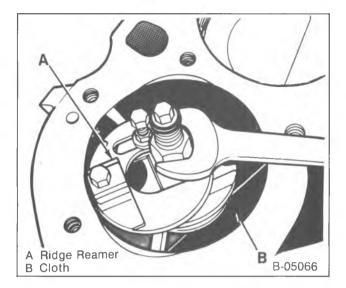


Figure 16—Removing the Cylinder Ridge

TIMING GEAR COVER REMOVAL

★→ Remove or Disconnect (Figure 5)

- 1. Bolt (164).
- 2. Timing gear cover (157).
- 3. Gasket (166).

44

PISTON AND CONNECTING ROD REMOVAL

Remove or Disconnect (Figures 5, 16, and 17)

Tool Required:

J-5239 Connecting Rod Guide Set

- 1. Ridge (or deposits) at the top of the cylinder as follows:
 - Turn the crankshaft (154) until one piston (107) is at the bottom of its stroke. Place a soft cloth on top of the piston.

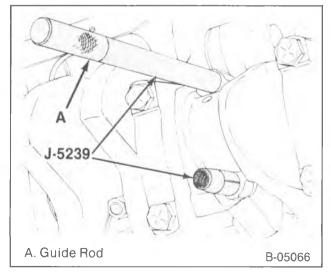


Figure 17—Removing the Piston and Connecting Rod

- Using the manufacturer's directions, install a ridge reamer into the top of the cylinder (figure 16). Perform the cutting operation.
- After the ridge and/or deposits are removed, remove the ridge reamer. Turn the crankshaft until the piston is at the top of its stroke. Remove the cloth and cuttings.
- Repeat this procedure for each piston.
- 2. Connecting rod caps (110) as follows:
 - Make note of the arrangement of the connecting rod (108) markings, to insure that they will be returned to their proper position during assembly. Mark the connecting rods with a scratch awl if necessary.
 - Remove the nuts (111).
 - To avoid mismatching the connecting rods and connecting rod caps, remove only one connecting rod cap at a time. Place the piston (107) at the bottom of its stroke.
 - Remove the connecting rod cap.
 - Install J-5239 onto the studs (109) (figure 17). Use of the specified guide set will prevent the connecting rod from scratching the bore or crankshaft journal during the removal process. The tool will also prevent the rod bearing half from falling out of the connecting rod during removal.
- 3. Connecting rod (108) and piston (107) from the block (115).
 - Push on the guide rod (item A, figure 17) to push the piston and connecting rod out. Use the guide rod to prevent the connecting rod from scoring the cylinder bore.
 - Loosely assemble the connecting rod cap (110) onto the connecting rod.
 - Repeat this procedure on the remaining piston and connecting rod assemblies.

FLYWHEEL REMOVAL

The crankshaft can be removed from the block without removing the flywheel. If the flywheel is removed, the dowel holes must be reamed oversize and oversized dowel pins installed, as outlined later. If flywheel removal is necessary, proceed as follows:

++ R

- Remove or Disconnect (Figures 5 and 18)
- Mark the crankshaft (154) and flywheel (118) so that the dowel holes can be aligned in their original positions at the assembly.
- 1. Flywheel housing (119).
- 2. Rear main bearing cap (137).
- 3. Dowel pins (134).
 - With the block (115) inverted, turn the crankshaft (154) so that a dowel pin is at the 12 o'clock position.
 - Drive the dowel pin out, using a hammer and drift.
 - Repeat the preceding steps to drive out the remaining dowel pins. The crankshaft must be turned each time so that the pin can be driven out without contacting the block.

6A4-12 4.8 LITER L6

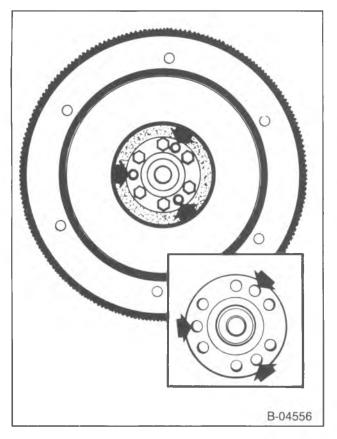


Figure 18—Flywheel Installed

- 4. Bolts (122).
- 5. Flywheel (118).

CRANKSHAFT REMOVAL

The main bearings and rear oil seal can be replaced without removing the crankshaft, as outlined later in this section.

+> Remove or Disconnect (Figures 5 and 19)

- Check the main bearing caps (152) for location markings. Mark the caps if necessary. The caps must be returned to their original locations during the engine assembly.
- 1. Bolts (138) and stud (139).
- 2. Main bearing caps (137 and 152).
- 3. Crankshaft (154). Lift the crankshaft straight up, taking care to avoid damage to the crankshaft journals and thrust flange surfaces.
- 4. Upper and lower seal halves (132 and 135). Pry the seal halves out with a screwdriver (figure 19).
- 5. Main bearing inserts (130, 133, 136, and 153). If the main bearing inserts are to be reused, mark them to insure they are instralled in their original positions before removal.

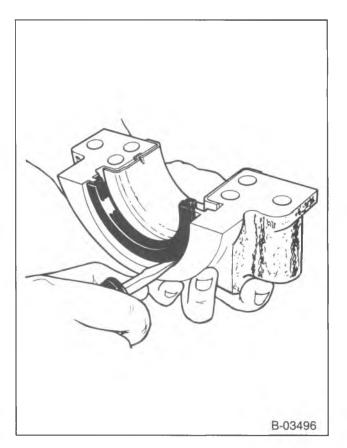


Figure 19—Removing the Lower Seal Half

CRANKSHAFT REAR OIL SEAL REMOVAL (WITHOUT REMOVING CRANKSHAFT)



- Remove or Disconnect (Figures 5, 19, and 20)
- 1. Rear main bearing cap (137).
- 2. Lower seal half (135) (figure 19).
- 3. Upper seal half (132).
 - · Tap on the upper seal half, using a small drift and hammer (figure 20).
 - · Remove the upper seal half, using pliers (figure 20).

MAIN BEARING REMOVAL (WITHOUT REMOVING **CRANKSHAFT**)



Remove or Disconnect (Figures 5, 21, and 22)

Tool Required:

J-8080 Main Bearing Remover/Installer

- Check the main bearing caps (152) for location markings. Mark the caps if necessary. The caps must be returned to their original locations during assembly.
- 1. Main bearing caps (137 and 152).
- 2. Upper and lower seal halves (132 and 135), as previously described.
- 3. Upper rear main bearing insert (133).

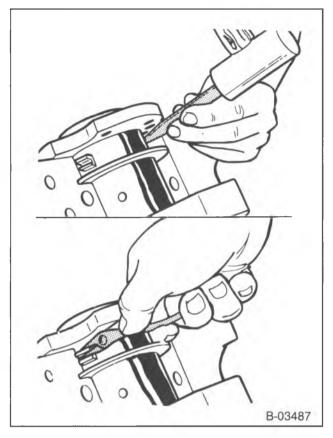


Figure 20—Removing the Upper Seal Half

- Use a small brass drift and hammer. Tap on the insert, on the side opposite the bearing tang, until the insert rotates out of position (figure 21).
- Use a pair of pliers with the jaws taped to prevent damage to the crankshaft. Clamp the insert to the crankshaft flange (figure 21). Rotate the crankshaft (154) to remove the bearing insert.
- 4. Upper main bearing inserts (130).
 - Insert J-8080 into the crankshaft (154) oil hole (figure 22).
 - Rotate the crankshaft to "turn" the bearing insert out of the block.

CAMSHAFT REMOVAL

Remove or Disconnect (Figures 5 and 23)

- Turn the camshaft (182) until the screws (93) are visible through the holes in the camshaft gear (94) (figure 23).
- 1. Screws (93).
- 2. Camshaft (182). Pull the camshaft out of the block. Support the camshaft carefully when removing to prevent damage to the camshaft bearings.

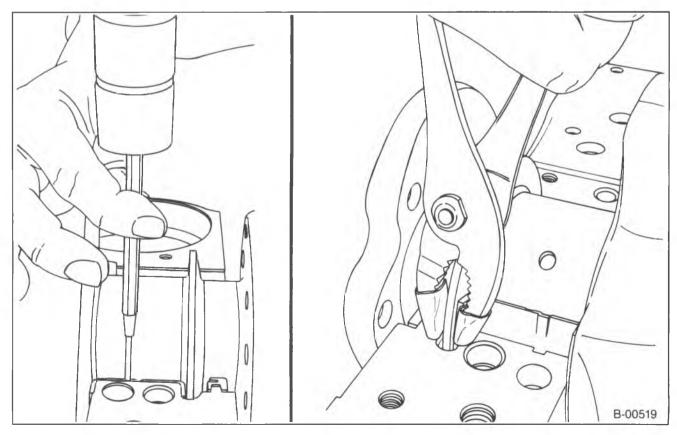


Figure 21—Removing the Upper Rear Main Bearing Insert

6A4-14 4.8 LITER L6


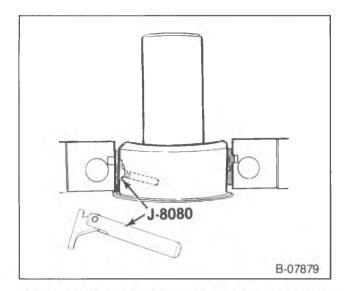


Figure 22—Removing the Upper Main Bearing Inserts



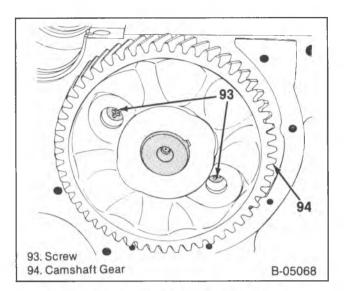

CLEANING, INSPECTION, AND REPAIR

A solvent tank, large enough to hold the larger engine parts, will be needed along with various bristle brushes and a gasket scraper. A source of compressed air will be helpful in the cleaning operations.

Precision measuring tools will be required for the inspection procedure. These include: micrometers, cylinder bore gage, feeler gages, dial indicator set, etc. The inspection work, performed with the proper method and tools, is most important. The rebuilt engine cannot be expected to perform properly if parts worn beyond acceptable limits are reused.

BLOCK

Clean (Figure 5)

- 1. Block (115) in solvent.
- 2. Block gasket surfaces.
- 3. Cylinder bores.
- 4. Oil galleries and passages.
- 5. Scale deposits from the coolant passages.

Inspect (Figure 5)

- 1. All expansion plugs for looseness or leakage.
- 2. Valve lifter bores for deep scratches and varnish deposits.
- 3. Block (115) for cracks, especially in the following areas:
 - Cylinder walls
 - Coolant jackets.
 - Main bearing webs.
 - Engine mount bosses.
- Main bearing bores and main bearing caps (137 and 152).
 - All main bearing bores should be round and uniform in ID at all bearing supports.

- The area where the main bearing inserts (130, 133, 136, and 153) contact the main bearing bore should be smooth.
- If a main bearing cap is damaged and requires replacement, replace it as outlined later in this section.



++

Measure (Figure 24)

 Head gasket surface distortion. Use a straight edge and feeler gage to check for flatness of the milled surface at the top of the cylinder block. The surface must be flat (within 0.10 mm [0.004-inch]) to assure that the gasket will provide a tight seal between the cylinder head and block.

MAIN BEARING CAP REPLACEMENT

Install or Connect (Figure 5)

- 1. New main bearing cap (137 or 152). The arrow on the main bearing cap faces the front of the engine (opposite the flywheel).
- 2. Bolts (138) and stud (139).

री Tighten

• Bolts (138) and stud (139) to 90 N·m (65 ft. lbs.).

Measure (Figure 25)

- Main bearing vertical ID (inside diameter). Use an inside micrometer.
 - This dimension should be the same as the other main bearing bore vertical diameters.
 - If it is necessary to increase the vertical ID, use an equal thickness of special service bearing cap shims at each side of the cap to

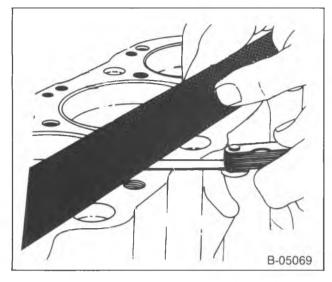


Figure 24—Checking the Block Gasket Surface

provide the same dimension as at the other bores. This is necessary to assure the proper "crush" on bearing inserts when the engine is assembled.

CYLINDER BORES

Inspect

· Cylinder walls for scoring or other damage.

1 Measure

 Cylinder out of round and taper. Refer to GENERAL ENGINE MECHANICAL (SEC. 6A).

CYLINDER BORE RECONDITIONING

Refer to GENERAL ENGINE MECHANICAL (SEC. 6A).

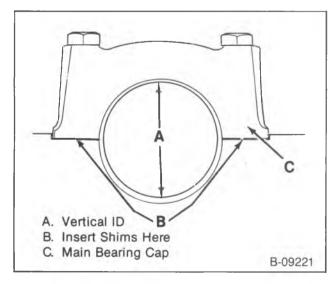


Figure 25—Main Bearing Cap Shim Location

PISTON AND CONNECTING ROD **ASSEMBLIES**

Refer to GENERAL ENGINE MECHANICAL (SEC. 6A) and perform the following:

\Rightarrow	Disassemble				
	Components as	required.			

- Clean
- Components as outlined.
- Inspect
- Components as outlined.

Measure

- Piston pin diameter and pin to piston clearance.
- · Piston to bore clearance, and fit pistons as outlined.
- Assemble
 - Components as outlined.

Ð Measure

Ring end gap and ring clearance.

Inspect

Ring fit.

INTAKE AND EXHAUST MANIFOLDS



- Disassemble (Figure 4)
 - 1. Bolts (39) and washers (40).
 - 2. Nuts (32).
 - 3. Intake manifold (31) and exhaust manifold (37).
 - 4. Gasket (36).



Old pieces of gasket from the gasket surfaces.

15 Inspect

- Manifolds for cracks, broken flanges, etc.
- Gasket surfaces for heavy scratches.
- Manifold heat control valve (if used). The heat control valve is in the exhaust manifold. The thermostatic spring and anti-rattle spring must be in place and in good condition. The shaft should turn freely when weight is moved and the spring should return the shaft to its original position.

Measure

 Manifold distortion. Lay a straight edge along the full length of the exhaust port faces and measure any gaps between the straight edge and the port faces. If at any point a gap of 0.80 mm (0.030-inch) or more exists, it is likely that the manifold has distorted to a point where it will not seal properly. If a good exhaust seal is to be expected, the exhaust manifold must be replaced.

6A4-16 4.8 LITER L6

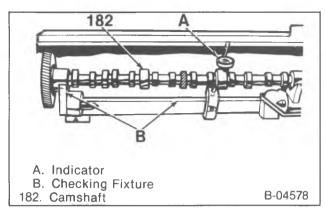


Figure 26—Measuring Camshaft Journal Runout

Assemble (Figure 4)

- 1. Gasket (36) to the exhaust manifold (37).
- 2. Intake manifold (31) and exhaust manifold (37).
- 3. Nuts (32), bolts (39) and washers (40). Leave the fasteners hand-tight until the manifold to cylinder head bolts are torqued. Refer to "Intake and Exhaust Manifold Installation."

CAMSHAFT

? Important

 Whenever the camshaft needs to be replaced, a new set of hydraulic lifters must also be installed.

Inspect (Figures 5, 26, 27, and 28)

- Camshaft (182) lobes and journals for scratches, pitting, scoring, and wear.
- Timing gear (94) for damaged or missing teeth.

Measure (Figures 26, 27, and 28)

Tool Required:

J-7872 Dial Indicator (or equivalent)

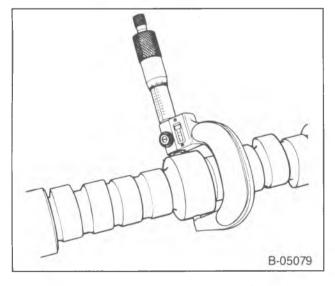


Figure 27—Checking the Camshaft Journals


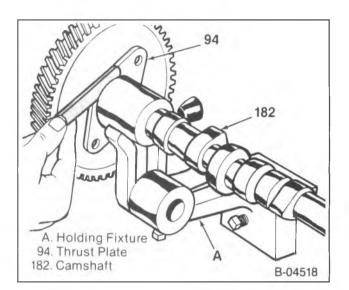


Figure 28—Measuring Camshaft Thrust Plate Clearance (Camshaft End Play)

- Camshaft (182) runout (figure 26). Mount the camshaft between centers or in V-blocks. Using J-7872 (or equivalent), check the intermediate camshaft journals. If runout exceeds 0.020-inch, the camshaft is excessively bent and should be replaced, along with the camshaft bearings.
- Camshaft journal out of round. Use a micrometer (figure 27). The proper diameter is 1.8677-1.8697-inch.
- Thrust plate (94) to camshaft (182) clearance. This clearance governs camshaft end play. Use a feeler gage (figure 28). Proper clearance is 0.003-0.008-inch. Excessive clearance indicates that the thrust plate is worn and should be replaced, as outlined following:

CAMSHAFT GEAR AND THRUST PLATE REPLACEMENT

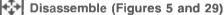

1. Camshaft gear (94).

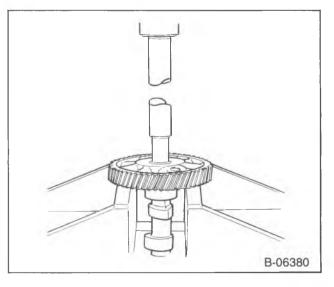


Figure 29—Removing the Camshaft Gear

4.8 LITER L6 6A4-17

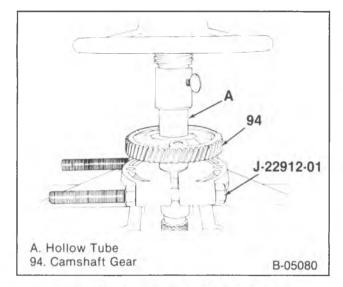


Figure 30-Installing the Camshaft Gear

 Place the camshaft (182) in a press. Support the camshaft gear. DO NOT support the thrust plate (95).

NOTICE: The thrust plate must be positioned so that the key (96) does not damage it during the removal operation.

- · Press the camshaft out of the camshaft gear.
- 2. Thrust plate
- 3. Spacer (97).

Assemble (Figures 5 and 30)

Tool Required:

J-22912-01 Support Plate (or equivalent)

- Support the camshaft (182) at the front journal with tool J-22912-01 (or equivalent) (figure 30). Mount the camshaft in a press as shown.
- · Lubricate the thrust plate (95) with engine oil.
- 1. Key (96) (if removed).
- 2. Spacer (97). Make sure the chamfer in the spacer faces towards the journal radius.
- 3. Thrust plate.
- 4. Camshaft gear (94).
 - MAKE SURE THAT THE TIMING MARK IS TO THE OUTSIDE.
 - Press the camshaft gear onto the camshaft until it bottoms on the spacer (figure 30).
 - · Remove the camshaft from the press.



Measure (Figure 28)

• Camshaft to thrust plate clearance. Use a feeler gage (figure 28). The correct clearance is 0.003-0.008-inch.

CAMSHAFT BEARINGS

Refer to GENERAL ENGINE MECHANICAL (SEC. 6A).

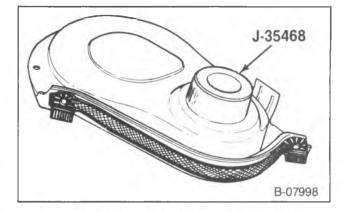


Figure 31—Installing the Front Crankshaft Gear

TIMING GEAR COVER

Clean

Old gasket from the gasket surfaces.

Inspect

- Timing tab for damage.

Disassemble (Figure 5)

- Timing gear cover for cracks, large dents, etc.

\Leftrightarrow

Seal (158). Pry the seal out with a screwdriver.

Assemble (Figure 31)

Tool Required:

J-35468 Seal Installer

- Seal (158). Use J-35468.
 - Support the inside of the front cover around the seal bore area.
 - Press the seal into place. The open end of the seal faces inside the front cover.
 - Lubricate the seal lips with grease.

WATER PUMP

Clean

Old gasket from the gasket surface.

? Important

 Do not immerse the pump in solvent. The solvent may enter the pump's permanently lubricated bearings, dissolve the bearings' lubricant supply, and cause premature bearing failure.

Inspect

- Water pump shaft for roughness and end play. If the shaft does not turn smoothly, or if there is excessive end play, replace the water pump.
- Water pump body at the drain hole. If there is evidence of coolant leakage, the water pump shaft seal is leaking, and the water pump should be replaced.

6A4-18 4.8 LITER L6

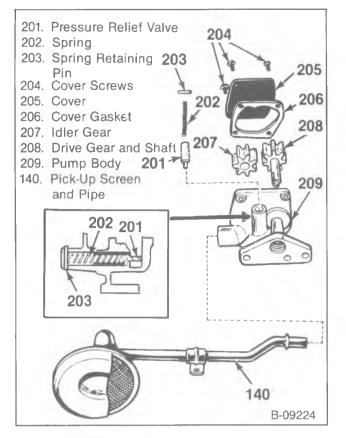


Figure 32—Oil Pump Components

OIL PAN AND ROCKER ARM COVER

Clean

Parts in solvent. Remove all sludge and varnish. Old gaskets from the gasket surfaces.

Inspect

- Gasket flanges for bending or damage.
- Rubber grommets and parts on the rocker arm cover for deterioration.
- Oil pan for rock damage or cracks.
- Oil pan baffle for looseness.
- Drain plug threads for stripping.

OIL PUMP

Disassemble (Figure 32)

- 1. Cover screws (204).
- 2. Cover (205).
- 3. Gasket (206).
- Mark the gear teeth so the pump gears can be installed with the same gear teeth indexed.
- 4. Drive gear and shaft (208).
- 5. Idler gear (207).
- 6. Spring retaining pin (203).
- 7. Spring (202).
- 8. Pressure relief valve (201).
- 9. Pick-up screen and pipe (140).

- Do not remove the pick-up screen and pipe unless replacement is required.
- The pick-up pipe is a press fit in the pump body (209).
- Do not try to remove the screen from the pipe. The pick-up screen and pipe is serviced as an assembly only.

Clean

• All parts in clean solvent and blow dry with compressed air.

Inspect (Figure 32)

- Pump body (209) and cover (205) for cracks or other damage.
- Gears (207 and 208) for wear.
- Drive gear and shaft (208) for looseness in the pump body (209).
- Inside of the cover (205) for wear that would permit oil to leak past the ends of the gears.
- The pump gears, cover, and body are not serviced separately.
- Pressure relief valve (201) for fit. The regulator valve should slide freely in its bore without sticking or binding.

Assemble (Figures 32 and 33)

Tool Required:

J-21882 Pick-up Tube and Screen Installer

- 1. Pressure relief valve (201).
- 2. Spring (202).
- 3. Spring retaining pin (203).
- 4. Drive gear and shaft (208).
- 5. Idler gear (207) in the pump body (209) with the smooth side of the gear toward the pump cover opening. Index the marks made during disassembly.
- 6. Gasket (206).
- 7. Cover (205) and screws (204).

R Tighten

- Screws (204) to 7.9 N m (70 in. lbs.).
- Turn the drive shaft by hand to check for smooth operation.

NOTICE: Be careful not to twist, shear or collapse the pipe while installing.

- 8. Pick-up screen and pipe (140) (if removed) (figure 33).
 - If the pick-up screen and pipe assembly was removed, it should be replaced with a new part. Loss of press fit condition could result in an air leak and loss of oil pressure.
 - Mount the oil pump in a soft-jawed vise.
 - Apply sealer to the end of the pipe.
 - Tap the pick-up screen and pipe into place, using J-21882 and a hammer.
 - The pump screen must be parallel with the bottom of the oil pan when installed.

4.8 LITER L6 6A4-19

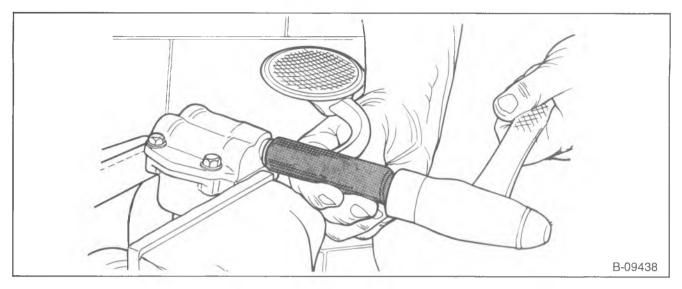


Figure 33—Installing the Oil Pump Screen and Pipe

VALVE TRAIN COMPONENTS

PUSHRODS, ROCKER ARMS, BALLS, AND NUTS

Clean

• Parts in solvent. Blow dry with compressed air. Make sure the oil passages in the pushrods are clear.

Inspect (Figure 4)

- Rocker arms (13) and balls (12) at their mating surfaces. These surfaces should be smooth and free from scoring or other damage.
- Rocker arm areas which contact the valve stems, and the sockets which contact the pushrods (20). These areas should be smooth and free of damage and wear.
- Nuts (11). The nuts are prevailing torque nuts. At least 6.2 N·m (55 in. lbs.) torque should be required to thread the nuts onto the rocker arm studs. If not, it is possible that the nut(s) could back off during engine operation, causing loss of lash and valve train noise.
- Pushrods for bending. Roll the pushrod on a flat surface to determine if it is bent. Replace if necessary.
- Ends of the pushrods for scoring or roughness.

HYDRAULIC LIFTERS

Refer to GENERAL ENGINE MECHANICAL (SEC. 6A).

CYLINDER HEAD

DISASSEMBLY

Disassemble (Figures 34, and 35)

Tool Required:

J-8062 Valve Spring Compressor

- 1. Valve keys (15).
 - Compress the valve springs (19), using J-8062 (figure 35).
 - Remove the valve keys.
 - Remove the tool.
- 2. Rotators (17), and shields (18).
- 3. Valve springs (20) and dampers (240).
- 4. O-ring seals (16) and seals (19).

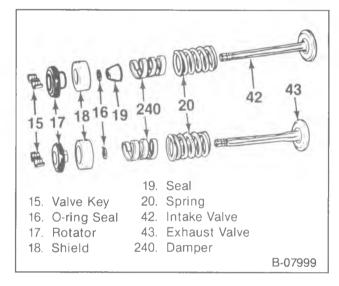


Figure 34—Valves and Components

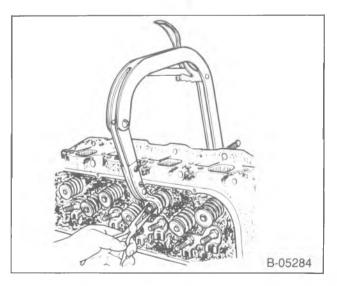


Figure 35—Compressing the Valve Springs

6A4-20 4.8 LITER L6

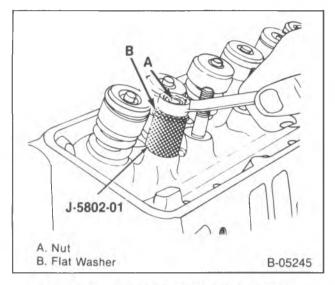


Figure 36—Removing the Rocker Arm Stud

5. Valves (42 and 43). Place them in a rack so they can be returned to their original position at assembly.

CLEANING AND INSPECTION OF COMPONENTS

Refer to GENERAL ENGINE MECHANICAL (SEC. 6A) and perform the following:

Clean

Components as outlined.

Inspect

Components as outlined.

4 Measure

- · Valve stem clearance.
- · Valve spring tension and free length.

Other information outlined includes:

- Valve and seat grinding.
- · Valve guide reaming.

ROCKER ARM STUD REPLACEMENT

Tools Required:

J-5802-01 Stud Remover

- J-5715 Reamer (0.003-inch oversize) or
- J-6036 Reamer (0.013-inch oversize)
- J-6880 Stud Installer

Rocker arm studs that have damaged threads or are loose in cylinder heads should be replaced. New studs are available in 0.003-inch and 0.013-inch oversize.

- 1. Place tool J-5802-01 over the stud to be removed. Install a nut and flat washer. Remove the stud by turning the nut (figure 36).
- Ream the hole to the proper size for the replacement oversize stud. Use reamer J-5715 for 0.003-inch oversize studs; reamer J-6036 for 0.013-inch oversize stud (figure 37).
- Coat lower end (press-fit area) of stud with hypoid axle lubricant. Drive the stud into place with a hammer and tool J-6880. Stud is installed to proper depth when the tool bottoms on the cylinder head (figure 38).

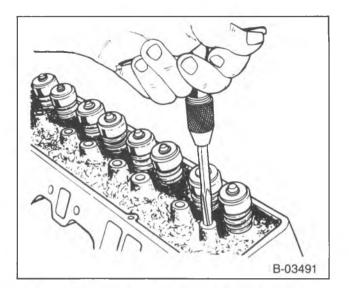


Figure 37—Reaming the Rocker Arm Stud Bore

ASSEMBLY

Assemble (Figures 34, 35, and 39)

Tools Required:

J-8062 Valve Spring Compressor J-23738-A Vacuum Pump

- 1. New seals (19) (intake valves only). Install the seals over the valve guides and seat them against the head.
- 2. Valves (42 and 43).
 - Lubricate the valve stems with engine oil.

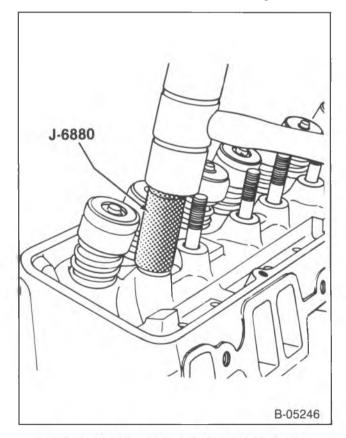


Figure 38—Installing the Rocker Arm Stud

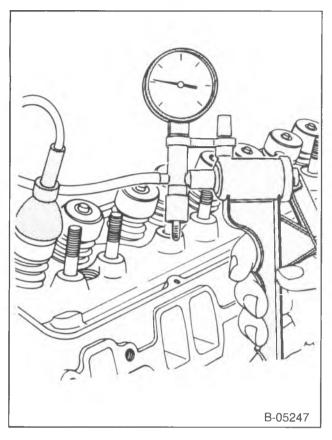


Figure 39—Checking the Valve Seals

Insert the valves into the proper ports.

- 3. Valve spring shims (if used).
- 4. Valve springs (20) with dampers (240).
- 5. Shields (18).
- 6. Rotators (17).
- 7. O-ring seals (16) and valve keys (15).
 - Compress the valve spring, using J-8062 (figure 35). Compress the spring enough so the lower valve stem groove can be clearly seen.
 - Push a new O-ring seal onto the valve stem. The seal is to be installed on the stem's lower groove. Make sure the seal is flat and not twisted.
 - Apply grease to the area of the upper valve stem groove. Assemble the two valve keys, using the grease to hold the keys in place. Make sure the keys seat properly in the groove.
 - Release the compressor tool. Make sure the valve keys stay in place.
 - Repeat the preceding steps on the remaining valves.
 - Check each valve stem seal, using J-23738-A (figure 39). Place the adapter cup over the shield (18). Operate the vacuum pump. Observe the vacuum pump gage. No air should be able to leak past the seal. If the O-ring seal will not hold a vacuum, it may have been damaged or improperly installed.

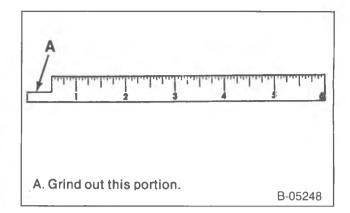


Figure 40—Scale for Checking Valve Spring Installed Height

Measure (Figures 34, 40, and 41)

- Valve spring installed height of each valve spring.
- 1. Use a narrow, thin scale. A cutaway scale (figure 40) may be helpful.
- 2. Measure from the valve shim or spring seat to the top of the shield (18) (figure 41).
- 3. If this measurement exceeds the figure given in "Specifications," install valve spring seat shims of sufficient thickness (between the spring and cylinder head) to give the desired measurement. NEVER shim the spring so as to give an installed height under the specified figure.

THERMOSTAT AND HOUSING

The thermostat is located in a housing bolted to the front of the cylinder head (figure 4).

Thermostats consist of a restriction valve controlled by a thermostatic element. The restriction valve cracks or just starts to open at a predetermined temperature and continues to open as the engine coolant temperature increases. To assure proper cooling and engine warm-up it is important that the correct thermostat be used. Refer to the proper Truck Service Manual for the correct thermostat application.

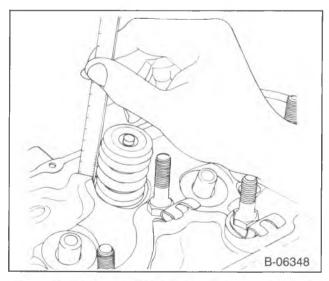


Figure 41—Measuring Valve Spring Installed Height

6A4-22 4.8 LITER L6

Disassemble (Figure 4)

1. Bolts (55).

10

- 2. Water outlet (54).
- 3. Thermostat (52).
- 4. Gasket (53).

Inspect (Figure 4)

 Water outlet (54) and housing (50) for cracks or damage.

Assemble (Figure 4)

- 1. Thermostat (52).
- 2. Gasket (53).
- 3. Water outlet (54).
- 4. Bolts (55).

र्श्ती Tighten

• Bolts (55) to 40 N m (30 ft. lbs.).

TORSIONAL DAMPER

lnspect

- Torsional damper weight for looseness or signs of shifting on the hub. Replace as needed.
- Area of the torsional damper hub shaft which contacts the front crankshaft seal for roughness or nicks. Replace the damper if this condition exists.

CRANKSHAFT AND BEARINGS

CLEANING AND INSPECTION

🕎 Clean

- Crankshaft with solvent.
 - Do not scratch the bearing journals.
 - Blow all sludge from the oil passages with compressed air.
- Main bearing inserts. Wipe free of oil with a soft cloth.

Inspect

- Crankshaft for cracks. Use the magnaflux method, if available.
- Crankpins, main bearing journals and thrust surfaces for scoring, nicks, or damage caused by lack of lubrication.
- Main bearing inserts for scoring or other damage. In general, the lower inserts (except the #1 bearing) shows a greater wear and the most distress from fatigue. If, upon inspection, the lower insert is suitable for use, it can be assumed that the upper insert is also satisfactory. If the lower insert shows evidence of wear or damage, both upper and lower inserts must be replaced.

- Crankshaft gear for chipped or damaged teeth.

43) Measure (Figures 42 and 43)

 Main bearing and connecting rod journal diameters (figure 42). Compare with "Specifications." Grind or replace the crankshaft if necessary.

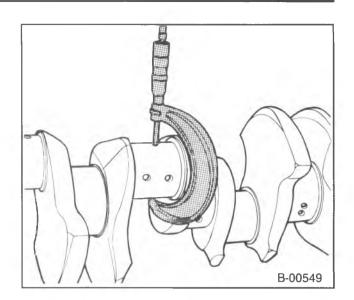


Figure 42—Measuring the Crankshaft Journals

- Main bearing and connecting rod journals for taper and out of round (figure 42). If the journals are tapered or out of round more than 0.001-inch, grind or replace the crankshaft.
- Crankshaft runout (figure 43).
 - Mount the crankshaft in V-blocks or between centers.
 - Use a dial indicator as shown.
 - If the main bearing journals are misaligned, the crankshaft is bent and must be replaced along with the main bearings.

CRANKSHAFT GRINDING

A "tufftriding" hardening process is applied to crankshaft journals used in engines covered by this manual. The crankshaft should not be reground unless it can be tufftrided after grinding.

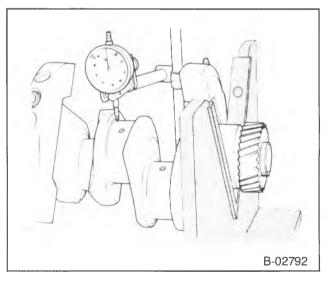


Figure 43—Checking Crankshaft Runout

4.8 LITER L6 6A4-23

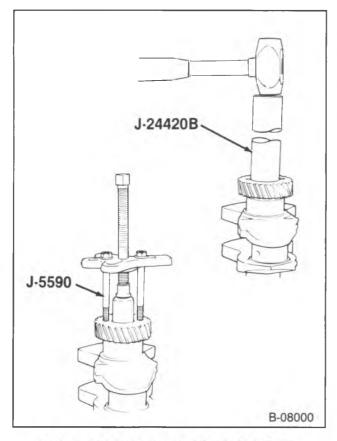


Figure 44—Replacing the Crankshaft Gear

CRANKSHAFT BEARING AVAILABILITY

Main bearings are available in standard and 0.001, 0.002, 0.010, 0.020, and 0.030-inch undersizes. Connecting rod bearings are available in standard and 0.001, 0.002, 0.010, and 0.020-inch undersizes.

CRANKSHAFT GEAR REPLACEMENT

Disassemble (Figure 44)

Tool Required: J-24420-B Puller

• Crankshaft gear, using J-24420-B.

ASSEMBLY OF ENGINE

PRIOR TO ASSEMBLY

The importance of cleanliness during the assembly procedure cannot be overstressed. Dirt will cause premature wear of the rebuilt engine.

Lubricate all moving parts lightly with engine oil or engine assembly lubricant (unless specified otherwise) during assembly. This will provide initial lubrication when the engine is started.

CRANKSHAFT REAR OIL SEAL INSTALLATION

An oil seal installation tool (figure 46) should be fabricated (if not provided in the seal kit) to prevent seal damage during installation. Extreme care should be

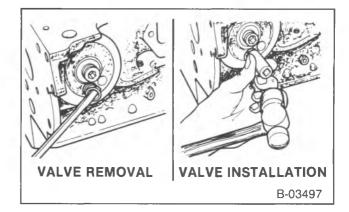


Figure 45—Replacing the Oil Filter Bypass Valve

Assemble (Figure 44)

Tool Required:

- J-5590 Gear Installer
- Crankshaft gear, using J-5590.
- Make sure the timing mark faces outside.

OIL FILTER RELIEF VALVE REPLACEMENT



Disassemble (Figure 45)

• Oil pressure relief valve. Use a screwdriver to pry it from the block.

🔆 Ass

- Assemble (Figure 45)
- Oil pressure relief valve. Use a 9/16-inch, thin wall, deep socket to tap it into place.

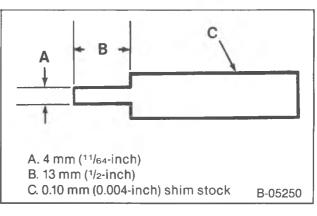


Figure 46—Oil Seal Installation Tool

6A4-24 4.8 LITER L6

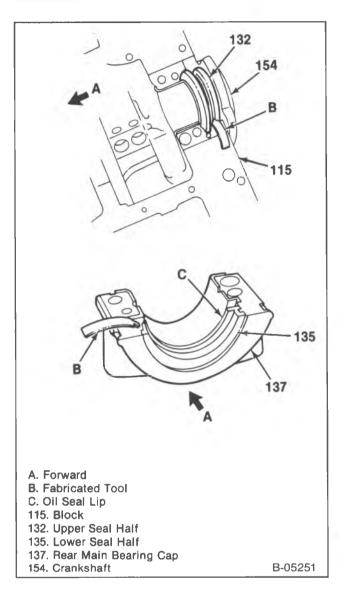


Figure 47—Crankshaft Rear Oil Seal Installation

exercised when installing this seal to protect the sealing bead located in the channel on the outside diameter of the seal.

WITH CRANKSHAFT INSTALLED

++ Install or Connect (Figures 5, 47, and 48)

- 1. Upper seal half (132).
 - Coat the seal lips lightly with engine oil. Keep the oil off of the seal mating ends.
 - Position the tip of the tool between the crankshaft (154) and the seal seat in the block (115) (figure 47).
 - Position the seal half between the crankshaft and tip of the tool. Make sure that the oil seal lip is positioned toward the front of the engine (figure 47).
 - Roll the seal around the crankshaft using the tool as a "shoe-horn" to protect the seal bead from the sharp corner of the seal seat surface

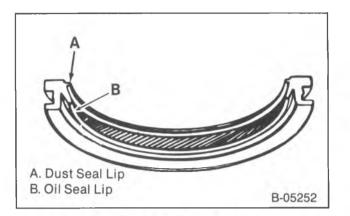


Figure 48-Crankshaft Rear Oil Seal Half

in the block. The installation tool must remain in position until the seal half is properly positioned with both ends flush with the block.

- Remove the tool, being careful not to withdraw the seal half.
- 2. Lower seal half (135).
 - Coat the seal lips lightly with engine oil. Keep the oil off of the seal mating ends.
 - Insert the seal half into the rear main bearing cap (135). Use the tool to protect the seal half from the sharp edge of the seal seat. Feed the seal half into the rear main bearing cap, using light finger pressure. Make sure the oil seal lip faces the front of the engine (figure 48).
- 3. Rear main bearing cap (135) as outlined later.

WITH CRANKSHAFT REMOVED

→← Install or Connect (Figures 5 and 48)

- 1. Upper seal half (132).
 - Insert the seal half in the block (115), using the installation tool to protect the back sealing bead of the seal from the sharp corner of the block. Position the seal and the tip of the tool so that the seal contacts the tool. Make sure that the oil seal lip is positioned toward the front of the engine (figure 79).
 - Feed the seal into position gradually, using the tool as a "shoe-horn" to protect the seal outer diameter from damage. The tool must remain in position until the seal is properly in position, with both ends flush with the block.
 - Remove the tool, being careful not to withdraw the seal.
- 2. Lower seal half (135).
 - Insert the seal half into the rear main bearing cap (135). Use the tool to protect the seal half from the sharp edge of the seal seat. Feed the seal half into the rear main bearing cap, using light finger pressure.
 - Make sure the oil seal lip faces the front of the engine (figure 48).
 - Coat the seal lips lightly with engine oil. Keep the oil off of the oil seal mating ends.

4.8 LITER L6 6A4-25

MAIN BEARING INSTALLATION (WITH CRANKSHAFT INSTALLED)

Refer to "Crankshaft and Main Bearing Installation," later in this section for main bearing insert sizing information.

✦✦ Install or Connect (Figures 5 and 21)

Tool Required:

J-8080 Main Bearing Remover/Installer 1. Upper rear main bearing insert (133).

- Apply engine oil to an insert of the proper size.
 - Insert the plain end (without the bearing tang) of the insert between the crankshaft journal and the notched side of the block (115).
 - Use pliers with taped jaws to clamp the bearing to the crankshaft (154) as shown in figure 21. Rotate the crankshaft to "roll" the insert into the block. Then seat the insert using a small drift and hammer.
- 2. Lower rear main bearing insert (136).
 - Apply engine oil to an insert of the proper size.
 Press the insert into the rear main bearing cap (137).
- 3. Upper main bearing inserts (130).
 - Insert J-8080 into a crankshaft main bearing oil hole.
 - Apply engine oil to inserts of the proper size.
 - Insert the plain end (without the bearing tang) of the insert between the crankshaft (154) and the notched side of the block (115).
 - Rotate the crankshaft (154) to "roll" the insert into the block.
 - Remove J-8080.
- 4. Lower main bearing inserts (153) to the main bearing caps (152).
 - · Make sure the inserts are of the proper size.
 - · Apply engine oil to the inserts.
- 5. Main bearing caps (137 and 152). Refer to "Crankshaft and Main Bearing Installation" later in this section.

🖲 Measure

 Main bearing clearance and crankshaft end play. Refer to GENERAL ENGINE MECHANICAL (SEC. 6A).

CRANKSHAFT AND MAIN BEARING INSTALLATION

Main bearings are of the precision insert type and do not use shims for adjustment. If clearances are found to be excessive, a new bearing, plus both upper and lower inserts will be required. Service main bearings are available in standard size and 0.001-inch, 0.002-inch, 0.010-inch, 0.020-inch and 0.030-inch undersize.

Selective fitting of the main bearing inserts is necessary in production in order to obtain close tolerances. For this reason you may use one standard insert with one 0.001-inch undersize insert which will decrease the clearance 0.0005-inch from using two standard inserts.

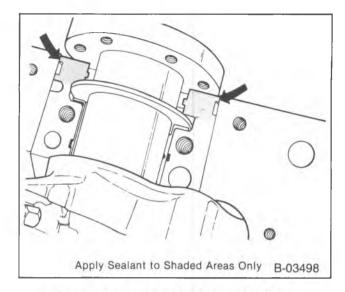


Figure 49—Applying Sealant to the Block

MAIN BEARING SELECTION

The simplest, most accurate way to measure main bearing clearance is with the use of gaging plastic. This wax-like material compresses evenly between the bearing and journal surfaces without damaging them. Proceed as follows:

++ Install or Connect (Figure 5)

- 1. Upper main bearing inserts (130 and 133) to the block (115).
 - If any undersized bearings are used, make absolutely certain they are fitted to the proper journal.
- 2. Crankshaft (154). Take care not to damage the thrust areas.
- 3. Lower bearing inserts (136 and 153) to the bearing caps (137 and 153).

4 Measure

- Main bearing clearance. Refer to GENERAL ENGINE MECHANICAL (SEC. 6A).
- Apply oil to the main bearing inserts.
- 4. Rear main bearing cap (137).
 - Apply a brush-on type oil sealing compound to the mating surface of the block and cap (figure 49). Do not allow any sealant on either crankshaft or rear oil seal.
 - Install the rear main bearing cap.
- 5. Bolts (138).



• Bolts (138) to 14 N·m (10 ft. lbs.).

- Main bearing caps (152) with the selected lower main bearing inserts (153). Be sure to put the main bearing caps in their original locations, with the arrows facing the front of the engine.
- 7. Bolts (138 and 139). Make sure the special bolt (139), which retains the oil pump screen bracket, is installed in the proper position. (#5 main bearing cap, camshaft side hole.)

6A4-26 4.8 LITER L6

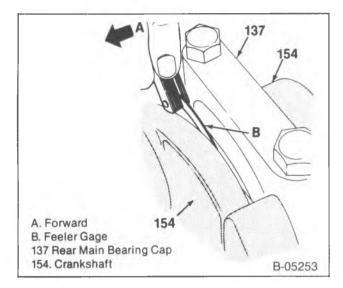


Figure 50—Measuring Crankshaft End Play



 All bolts (138 and 139) EXCEPT THE REAR MAIN BEARING CAP BOLTS to 90 N·m (65 ft. lbs.).

🖲 Measure (Figure 50)

- Crankshaft end play.
 - Tap the end of the crankshaft (154) first rearward then forward with a lead hammer. This will line up the rear main bearing and crankshaft thrust surfaces.
 - Tighten the rear main bearing cap bolts (138) to 90 N·m (65 ft. lbs.).
 - 3. With the crankshaft forced forward, measure at the front end of the rear main bearing with a feeler gage (figure 50). The proper clearance is 0.002-0.006-inch.

Inspect

 Crankshaft (154) for binding. Try turning the crankshaft to check for binding. If the crankshaft does not turn freely, loosen the bolts (138 and 139), one pair at a time, until the tight bearing is located. Burrs on the bearing cap, foreign matter between the insert and the block or the bearing cap, or a faulty insert could cause a lack of clearance at the bearing.

CAMSHAFT INSTALLATION



Install or Connect (Figures 5 and 51)

- Coat the camshaft lobes with Engine Oil Supplement (GM part number 1051396) or equivalent. Coat the bearing journals with engine oil.
- Camshaft (182) into the block (115). Take care not to damage the camshaft bearings (98 and 99).



• Align the timing marks (figure 51).

2. Screws (93).

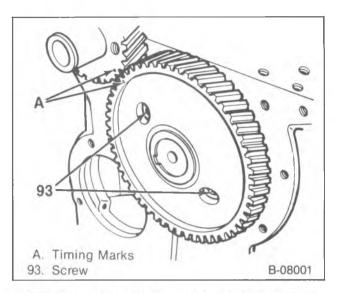


Figure 51—Timing Marks and Thrust Plate Screws

Tighten
 Screws (93) to 9.0 N·m (80 in. lbs.).

TIMING GEAR COVER INSTALLATION

Install or Connect (Figures 5 and 52)

Tool Required:

J-35468 Seal Installer and Centering Tool

- Apply engine oil to the lips of the seal (158).
- 1. J-35468 to the seal (158). The tool is necessary to properly "center" the front seal on the crankshaft. If the seal is not centered, it may be damaged when the vibration damper is installed, or it may fail prematurely.
- 2. Gasket (166) to the block (115).
- 3. Timing gear cover (157), with the tool, to the block (115) (figure 52).
- 4. Bolts (164).
 - री Tighten
 - Bolts (164) to 9.0 N m (80 in. lbs.).

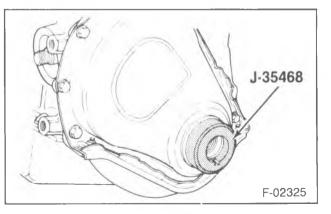


Figure 52—Front Cover Centering Tool

4.8 LITER L6 6A4-27

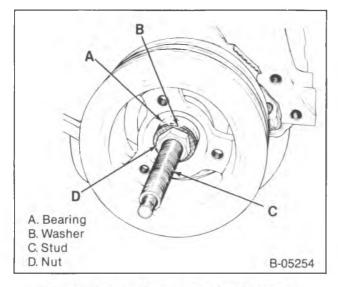


Figure 53—Installing the Torsional Damper



J-35468 from the seal (158).

TORSIONAL DAMPER INSTALLATION

Install or Connect (Figures 5 and 53)

Tool Required:

J-23523-E Torsional Damper Remover/Installer

NOTICE: The inertia weight section of the torsional damper is assembled to the hub with a rubber type material. The correct installation procedures (with the proper tool) must be followed or movement of the inertia weight section of the hub will destroy the tuning of the damper.

- 1. Key (163).
- 2. Stud (item C, figure 53) to the crankshaft (154). Thread the stud fully into the tapped end of the crankshaft.
- 3. Torsional damper (162) over the end of the stud. Align the keyway in the vibration damper shaft with the crankshaft key.
- 4. Bearing, washer, and nut (figure 53).
 - Turn the nut to pull the vibration damper into place.
 - · Remove the tool.
- 5. Bolt (160) and washer (161).



Bolt (160) to 80 N m (60 ft. lbs.).

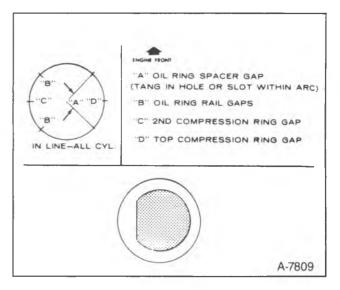


Figure 54—Piston Ring Gap Location

PISTON AND CONNECTING ROD INSTALLATION

CONNECTING ROD BEARING SELECTION

Connecting rod bearings are of the precision insert type and do not use shims for adjustment. DO NOT FILE RODS OR ROD CAPS. If clearances are found to be excessive, a new bearing will be required. Service bearings are available in standard size and 0.001-inch and 0.002-inch undersize for use with new and used standard size crankshafts, and in 0.010-inch and 0.020-inch undersize for use with reconditioned crankshafts.

The simplest, most accurate way to measure connecting rod bearing clearance is with the use of gaging plastic. This wax-like material compresses evenly between the bearing and journal surfaces without damaging them.

Selective fitting of the bearing inserts is necessary to obtain close tolerances. For this reason you may use, for example, one standard insert with one 0.001-inch undersize insert, which will decrease the clearance 0.0005-inch from using two standard inserts.

Install or Connect (Figures 5 and 54 through 56)

Tools Required:

J-5329 Connecting Rod Guide Set J-8037 Ring Compressor

- Make sure the cylinder walls are clean. Lubricate the cylinder wall lightly with engine oil.
- Make sure the piston is installed in the matching cylinder. Refer to "Piston and Connecting Rod Assemblies," previously in this section.
- 1. Connecting rod bearing inserts (112 and 113).
 - Be certain that the inserts are of the proper size.
 - Install the inserts in the connecting rod (108) and connecting rod cap (110).
- 2. Piston (107) and connecting rod (108) to the proper bore.

6A4-28 4.8 LITER L6

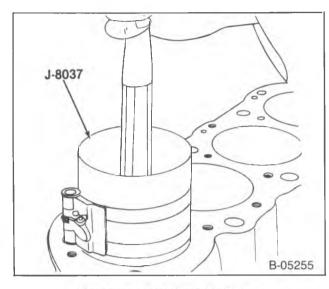


Figure 55—Installing the Piston

- With the connecting rod cap removed, install J-5329 onto the connecting rod studs (69).
- Locate the piston ring end gaps as shown in figure 87. Lubricate the piston and rings (101, 102, and 105) with engine oil.
- Locate the ring end gaps as shown in figure 54.
- Without disturbing the ring end gap location, install J-8037 over the piston (figure 55).
- The piston must be installed so that the piston crown depression's flat side faces to the engine's left side (figure 56).
- Place the piston in its matching bore. Using light blows with a hammer handle, tap the piston down into its bore (figure 55). At the same time, guide the connecting rod into piston on the crankpin, using the J-5329 Guide Tool. Hold the ring compressor against the block until all rings have entered the cylinder bore.
- 3. Connecting rod cap (110) with the lower connecting rod bearing insert.

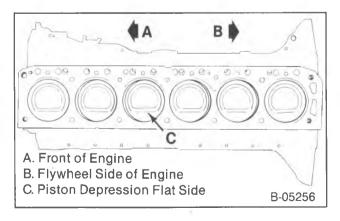


Figure 56—Pistons Installed

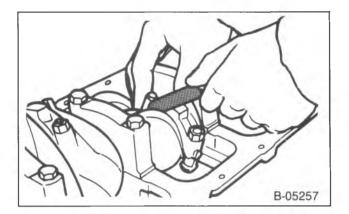


Figure 57—Measuring Connecting Rod Side Clearance

4 Measure

- Connecting rod bearing clearance. Refer to GENERAL ENGINE MECHANICAL (SEC. 6A). Then apply engine oil to the connecting rod bearing.
- 4. Nuts (111).



Nuts (111) to 80 N·m (60 ft. lbs.).

Measure (Figure 57)

• Connecting rod side clearance. Use a feeler gage. The proper clearance is 0.006-0.017-inch.

OIL PUMP INSTALLATION

Install or Connect (Figure 5)

- 1. Oil pump (151).
- 2. Bolts (148) and nut (149).

री Tighten

- Bolts (148) to 13.0 N m (115 in. lbs.).
- Nut (149) to 34 N m (26 ft. lbs.).

OIL PAN INSTALLATION

→+ Install or Connect (Figure 5)

- 1. Rear oil pan seal (141).
- 2. Front oil pan seal (147).
- 3. Gaskets (142).
- 4. Oil pan (146).
- 5. Bolts (145).

Q Tighten

- 1/4-20 bolts to 9.0 N m (80 in. lbs.).
- ⁵/₁₆-18 bolts (except oil pan [146] to front cover [157] bolts) to 18.6 N·m (165 in. lbs.).
- Oil pan (146) to front cover (157) bolts to 5.1 N·m (45 in. lbs.).

4.8 LITER L6 6A4-29

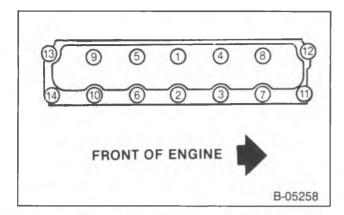


Figure 58—Cylinder Head Bolt Tightening Sequence

CYLINDER HEAD INSTALLATION



Clean (Figures 4 and 5)

- Gasket surfaces on the block (115) and cylinder head (26).
- Threads for cylinder head bolts in the block (115).

Install or Connect (Figures 4, 5 and 58)

- 1. Head gasket (33).
 - On engines using a STEEL gasket, coat both sides of a new gasket with a good sealer. Spread the sealer thin and even. One method of applying the sealer that will assure the proper coat is with the use of a paint roller. Too much sealer may hold the gasket away from the head or block.

Use no sealer on engines using a composition STEEL ASBESTOS gasket.

- Place the gasket in position over the dowel pins with the bead up.
- Cylinder head (26). Carefully guide the cylinder head into place over the dowel pins and head gasket (33).
- 3. Bolts (21) and stud (59).
 - Coat the threads of the cylinder head bolts and stud with sealing compound (Loctite #592 or equivalent).
 - Install finger tight.



Tighten

- Bolts (21) and stud (59) a little at a time, using the sequence shown in figure 58. The proper torques are as follows:
 - Left-hand front bolt 115 N m (85 ft. lbs.).
 - All others: 130 N m (95 ft. lbs.).

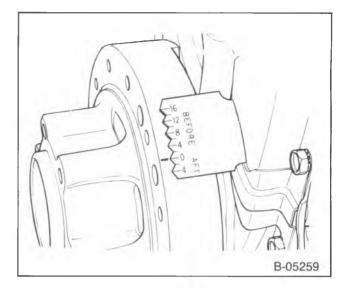


Figure 59—Timing Marks (Typical)

VALVE TRAIN COMPONENT INSTALLATION

? Important

Replace all hydraulic lifters if a new camshaft was installed.

→ Install or Connect (Figures 4 and 5)

- Lubricate the hydraulic lifters (100) with Engine Oil Supplement (GM part number 1051396) or equivalent.
- 1. Hydraulic lifters (100) into their mating bores in the block (115).
- 2. Pushrods (20). Seat the pushrods into the socket in the lifters (100).
- Coat the mating surfaces of the rocker arms (13) and balls (12) with a molybdenum disulfide grease.
- 3. Rocker arms (13).
- 4. Balls (12).
- 5. Nuts (11).

VALVE ADJUSTMENT

Adjust the valves when in contact with the cam base circle, as follows:

- Turn the crankshaft until the timing mark on the vibration damper is lined up with the "0" mark on the timing marker (figure 59) and cam lobes #7 and #9 (counted from the front of the engine) are up.
- 2. Turn the adjusting nuts for rocker arm numbers 4, 6, 8, 10, 11, and 12 (counted from the front of the engine) until there is no free lash at the pushrod (figure 60). Then tighten the nut one full additional turn (to center the lifter plunger).
- 3. Crank the engine one full turn (360 degrees) until the damper timing mark and the "0" mark on the timing marker are again in alignment. Cam lobes #4 and #6 are now up.
- 4. Adjust rocker arm numbers 1, 2, 3, 5, 7, and 9 as outlined in step 2 above.

6A4-30 4.8 LITER L6

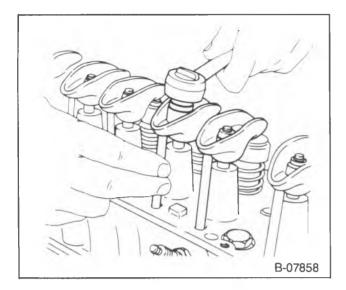


Figure 60—Adjusting the Valves

CHECKING VALVE TIMING

Tool Required:

J-8520 Dial Indicator Adaptor

When it becomes necessary to make a check of valve timing, the procedure following may be used:

- Loosen the nut at the #1 intake valve rocker arm, swing the rocker arm away from the pushrod, then remove the pushrod.
- 2. Install a dial indicator, along with J-8520 (figure 61). Turn the crankshaft until the #2 exhaust valve opens and the timing mark on the vibration damper is aligned with the "0" mark on the timing marker.
- 3. Position the dial indicator to measure lifter movement and set indicator at zero. Turn the crankshaft 360 degrees and read the indicator. On correctly time engines the indicator will read 0.012-0.020-inch.
- 4. If the reading is not as shown, reset the indicator at zero and turn the crankshaft 360 degrees, then read the indicator again. If reading is now within specifications, the engine is timed properly.

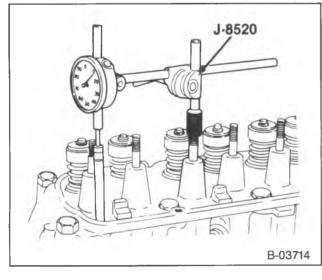


Figure 61—Measuring Camshaft Lobe Lift

 The following chart shows indicator readings with gears properly indexed for 4.8L engines and the indicator readings resulting from improperly indexed gears.

Engine Camshaft Pa Valve Lift	art Number	4.8L 3848000 0.405″	
Dial	Gears Properly Indexed	0.016" ± 0.004"	
Indicator	One Tooth Advanced	0.0379″	
Readings	One Tooth Retarded	0.0068"	

ROCKER ARM COVER AND PUSHROD COVER INSTALLATION

INSTALLATION

- ++ Install or Connect (Figures 4 and 5)
 - 1. Gasket (8).
 - 2. Rocker arm cover (7).
 - 3. Bolts (3), clips (2) and reinforcements (4).

Q Tighten

Bolts (3) to 4.3 N·m (38 in. lbs.).

- 4. Gaskets (114).
- 5. Pushrod covers (179).
- 6. Bolts (178).
 - 된 Tighten
 - Bolts (178) to 9.0 N m (80 in. lbs.).

WATER PUMP INSTALLATION

++ Install or Connect (Figure 5)

- 1. Gasket (169).
- 2. Water pump (171).
- 3. Bolts (170).
 - र्श्वि Tighten
 - Bolts (170) to 20 N⁺m (15 ft. lbs.).

THERMOSTAT HOUSING INSTALLATION

Install or Connect (Figure 4)

- 1. Gasket (49).
- 2. Thermostat housing (50).
- 3. Bolts (51).
 - री Tighten
 - Bolts (51) to 38 N m (28 ft. lbs.).
- 4. Hose (47).

INTAKE AND EXHAUST MANIFOLD INSTALLATION

++ Install or Connect (Figure 4)

- The manifold attaching bolt (39) and nuts (32) must be finger tight ONLY. Do not tighten the manifold attaching bolt and nuts until the manifold to head bolts and nuts (30 and 35) have been tightened.
- 1. Gasket (27).
- 2. Intake and exhaust manifold assembly.
- 3. Clamps (34), washers (29), bolts (35) and nuts (30).

री Tighten

- Nuts (30) and bolts (35) to 52 N·m (38 ft. lbs.).
- Nuts (32) and bolts (39) to 60 N·m (44 ft. lbs.).

AIR MANIFOLD INSTALLATION

++ Install or Connect (Figures 7 and 8)

- 1. Air injection tubes (183).
- 2. Air manifold (182).

FLYWHEEL INSTALLATION

Clean (Figure 5)

 Mating surfaces of the flywheel (118) and crankshaft (154).

Install or Connect (Figures 5 and 18)

- 1. Flywheel (118) to the crankshaft (154). Align the marks made at disassembly. Make sure the dowel holes in the crankshaft and flywheel are aligned.
- 2. Bolts (122).

री Tighten

- Bolts (122) to 150 N m (110 ft. lbs.).
- 3. Dowel pins (134).
 - The interference fit dowel pins must be replaced with an oversized dowel pin when installing the flywheel.
 - Ream the dowel pin holes to the proper size (0.4510-0.4517-inch).
 - Tap the dowel pins into place, flush with the flywheel retaining bolt surface.

ENGINE ACCESSORY INSTALLATION

Install the engine accessories (distributor, carburetor, oil filter, generator, etc.) as directed in the proper Truck Service Manual. Connect all vacuum hoses and electrical equipment the same way as removed.

ENGINE SET-UP AND TESTING

- After overhaul, the engine should be tested before installing in the vehicle. If a suitable test stand is not available, the following procedure can be used after the engine is installed in the vehicle.
- 2. Fill the crankcase with the proper quantity and grade of oil. Refer to the proper Truck Service Manual or Owner's and Driver's Manual for this information. If a new camshaft or hydraulic lifters were installed, add Engine Oil Supplement (GM part no. 1051396 or equivalent) to the engine oil. Fill the cooling system with the proper coolant.
- 3. With the ignition "OFF," or disconnected, crank the engine several times. Listen for any unusual noises or evidence that any parts are binding.
- 4. Start the engine and listen for unusual noises. Run the engine at about 1000 rpm until the engine is at operating temperature.
- 5. Listen for improperly adjusted valves or sticking lifters, and other unusual noises.
- 6. Check for oil and coolant leaks while the engine is running.
- Using the proper Truck Service Manual or Emission Control Label for specifications, adjust the ignition timing, and idle rpm and mixture.

6A4-32 4.8 LITER L6

SPECIFICATIONS

ENGINE SPECIFICATIONS

All Specifications are in INCHES unless otherwise noted.

GEN		ATA:						
Туре					In Line			
Displacement					4.8L (292 Cu. In.)			
No. (Of Cylind	ers				6		
Bore						3.876		
Strol	e					4.12		
Com	pression	Ratio				8.0:1		
Firin	g Order			_		1 - 5 - 3 - 6 - 2 - 4		
Oil P	ressure					16 psi @ 700 RPM; 30-45 psi @ 1500 RPM		
CYL	NDER B	ORE:						
Dian	eter					3.8750-3.8780		
0	ut Of	Proc	Production			0.0005 (Maximum)		
R	ound	Serv	Service			0.002 (Maximum)		
		F	Production	Thrust Side		0.0005 (Maximum)		
Т	aper		roduotion	Relief Side		0.0005 (Maximum)		
		Serv	ervice			0.001 (Maximum)		
PIST	ON:				t			
Clearance Producti			uction		0.0026-0.0036			
		1.0.0	vice Limit		0.0045 (Maximum)			
	ON RIN	G:	,					
C O	-				Тор	0.0000.00040		
M	Groo	ve	Production		2nd	0.0020-0.0040		
Р	Cleara	nce						
RE			Service Limit			Hi Limit Production ± 0.001		
S			Production		Тор	0.010-0.020		
S I	Ga	р			2nd	0.010-0.020		
O N			Service Limit			Hi Limit Production + 0.010		
	Groo	ve	Production			0.005-0.0055		
0	Cleara	ince	Service Limit	t		Hi Limit Production + 0.001		
	-	Production				0.015-0.055		
LGa		þ	Service Limit			Hi Production + 0.010		
PIS1	ON PIN	:						
Dian						0.9270-0.09273		
Clea	rance		Production			0.00015-0.00025		
In Piston Service Limit		0.001 (Maximum)						
Fit In Rod			0.0008-0.0016 Interference					

B-07896

SPECIFICATIONS

ENGINE SPECIFICATIONS (CONT.) All specifications are in INCHES unless otherwise noted.

CRANKSHA	FT:			
	Diameter		All	
			2.2979-2.2994	
Main	Taper	Production	0.0002 (Maximum)	
Journal		Service Limit	0.001 (Maximum)	
	Out of Production		0.0002 (Maximum)	
	Round	Service Limit	0.001 (Maximum)	
Main	Production		#1-#6: 0.0010-0.0024	
Bearing	Service Limit		#7: 0.0016-0.0035	
Clearance			#1-#6: 0.0010-0.0025	
Crankshaft E	nd Play		#7: 0.0015-0.0035	
Grankshart E	Diameter		0.002-0.006	
		Production		
Crankpin	Taper	Service Limit	0.0005 (Maximum)	
отапкріп	Out	Production	0.001 (Maximum)	
		Service Limit	0.0005 (Maximum)	
Ded Beering	Round		0.001 (Maximum)	
Rod Bearing Clearance		Production	0.0010-0.0026	
	1	Service Limit	0.0030 (Maximum)	
Rod Side Cle			0.006-0.017	
CAMSHAFT:	1	letek-	0.0015	
Lobe		Intake	0.2315	
Lift ± 0.002 Exhaust		Exhaust	0.2315	
Journal Diameter			1.8677-1.8697	
Camshaft Ru			0.020 (Maximum)	
Camshaft En			0.003-0.008	
VALVE SYS	TEM:			
Lifter			Hydraulic	
Rocker Arm I	Hatio		1.75:1	
Valve Lash		Intake	One Turn Down From Zero Lash	
		Exhaust		
the second se	Intake & Exhaust		46°	
	ntake & Exhaust		46°	
Seat Runout	(Intake & Exhaus		0.002 (Maximum)	
Seat Width		Intake	0.035-0.060	
	ī —	Exhaust	0.062-0.093	
_	Production	Intake	0.0010-0.0027	
Stem		Exhaust	0.0015-0.0032	
Clearance	Service	Intake	High Limit Production + 0.001	
		Exhaust	High Limit Production + 0.002	
Valve Spring (Outer)	Free Length		2.08	
	Pressure	Closed	78-86 lbs. @ 1.66"	
	lbs. @ in. Open		170-180 lbs. @ 1.26"	
	Installed Height		121/32	
Valve		Free Length	1.94	
Spring Damper	Approx. # of Coils		4	


B-07898

6A4-34 4.8 LITER L6

SPECIFICATIONS (CONT.)

TORQUE SPECIFICATIONS

Item	N-m	Ft. Lbs.	In. Lbs.
Flywheel Bolts	150	110	—
Flywheel Housing Bolts	40	30	_
Main Bearing Cap Bolts	90	65	_
Camshaft Thrust Plate Screws	9.0		80
Front Cover Bolts	9.0	-	80
Torsional Damper Bolt	70	50	—
Connecting Rod Cap Nuts	60	44	—
Oil Pump Bolts	13.0	—	115
Oil Pump Bracket Nut (to Main Bearing Cap Bolt)	34	25	-
Oil Pump Cover Bolts	7.9	_	70
Oil Pan Bolts (to front cover)	5.1 9.0	_	45 80
(to block [1/4-20]) (to block [5/16-18])	18.6	_	165
Cylinder Head Bolts (left-front bolt)	115	85	-
(all others)	130	95	-
Rocker Arm Cover Bolts	4.3	-	38
Pushrod Cover Bolts	9.0	-	80
Water Pump Bolts	20	15	
Thermostat Housing to Block Bolts	38	28	
Water Outlet to Thermostat Housing Bolts	28	20	_
Intake Manifold to Exhaust Manifold Bolts and Nuts	60	44	-
Manifold to Cylinder Head Bolts and Nuts	52	38	
Spark Plug	20	15	-

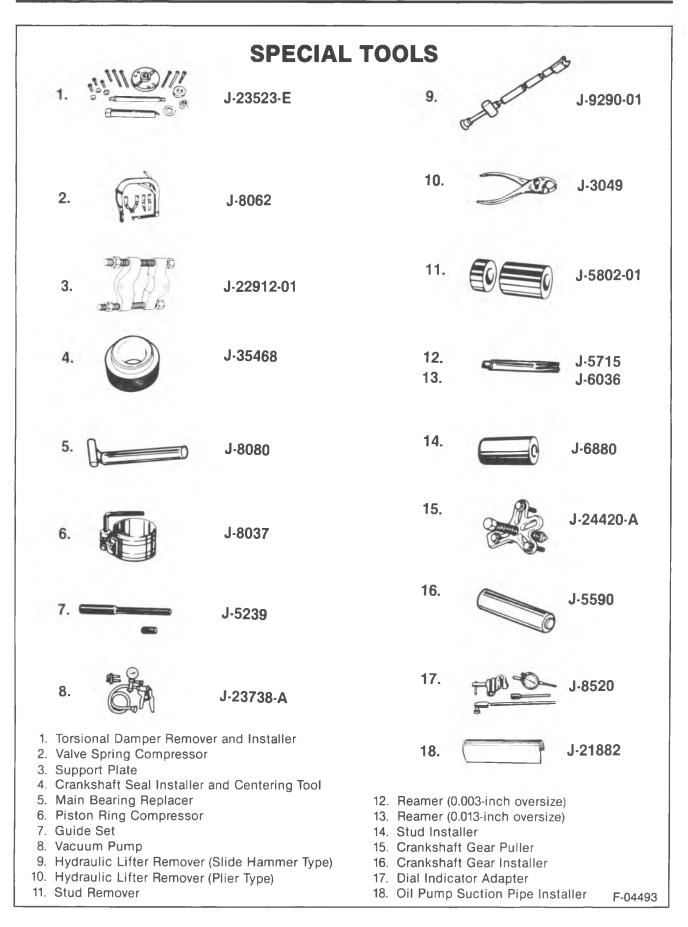

6A4-36 4.8 LITER L6

PAGE

SECTION 6A5

V8 ENGINE 5.0 LITER (305 Cu. In.) 5.7 LITER (350 Cu. In.) 7.4 LITER (454 Cu. In.)

CONTENTS

SUBJECT

Description		
Engine Identification		
Disassembly		
Tools and Shop Equipment		
Accessory Removal		
Cleaning		
Draining the Engine		
Exhaust Manifold Removal		
Water Pump Removal		
Intake Manifold Removal		
Rocker Arm Cover Removal		
Valve Train Component Removal		
Cylinder Head Removal		
Torsional Damper Removal		
Oil Pan Removal	.6A5-	8
Oil Pump Removal		
Front Cover Removal		
Timing Chain and Camshaft Sprocket Removal	.6A5-	9
Camshaft Removal	.6A5-	9
Piston and Connecting Rod Removal	.6A5-	9
Flywheel Removal		
Rear Crankshaft Oil Seal Retainer Removal (5.0 L and 5.7 L Engines)	.6A5-	13
Crankshaft Removal.		
Cleaning, Inspection, and Repair.	.6A5-	14
Block		
Piston and Connecting Rod Assemblies	.6A5-	15
Intake and Exhaust Manifold.	.6A5-	16
Camshaft	.6A5-1	16
Camshaft Bearings		
Timing Chain and Sprockets		
Front Cover.		
Water Pump		
Oil Pan and Rocker Arm Covers		
Oil Pump		
Valve Train Components		
Cylinder Head		
Thermostat and Water Outlet		
Torsional Damper	.6A5-2	24
Crankshaft and Bearings	.6A5-2	24
Oil Filter Bypass Valve	.6A5-2	25
Rear Crankshaft Oil Seal Retainer (5.0 L and 5.7 L Engines)	.6A5-2	26
Assembly of Engine	.6A5-2	26
Prior to Assembly		
Rear Crankshaft Oil Seal Installation (7.4 L Engines)		
Crankshaft and Main Bearing Installation		

6A5-2 V8 ENGINE

CONTENTS (CONT.)

SUBJECT

Assembly of Engine (Cont.)
Rear Crankshaft Oil Seal and Retainer Installation (5.0 L and 5.7 L Engines)
Camshaft, Timing Chain, and Sprocket Installation
Front Cover Installation
Torsional Damper Installation6A5-30
Piston and Connecting Rod Installation
Oil Pump Installation
Oil Pan Installation
Cylinder Head Installation
Valve Train Component Installation
Valve Adjustment
Intake Manifold Installation
Rocker Arm Cover Installation
Exhaust Manifold Installation6A5-36
Water Pump Installation
Engine Accessory Installation
Engine Set-Up and Testing6A5-37
Specifications
Special Tools

DESCRIPTION

GM V8 engines covered by this section are 90-degree V8 type, overhead valve, water cooled, with cast iron block and heads.

The camshaft is supported by five plain type bearings and is chain driven. Motion from the camshaft is transmitted to the valves by hydraulic lifters, pushrods, and ballpivot type rocker arms. The valve guides are integral in the cylinder head.

The crankshaft is supported by five precision insert type bearings, with crankshaft thrust taken at the number five (rear) bearing.

The connecting rods are forged steel, with precision insert type crankpin bearings. The piston pins are a press fit in the connecting rods.

The pistons are cast aluminum alloy. The piston pins are a floating fit in the pistons.

The gear type oil pump is driven through an extension shaft from the distributor driveshaft which is gear driven from the camshaft. The oil is drawn from the engine oil pan through a pickup screen and tube. Pressurized oil is delivered through internal passages to the camshaft and crankshaft to lubricate the bearings. Lubrication diagrams are shown in figure 1, 2, and 3.

ENGINE IDENTIFICATION

Two basic types of engines, with three different displacements, are covered in this section.

The first type is the "small block" engine, which is available in 5.0 L (305 cu. in.) and 5.7 L (350 cu. in.) displacements.

The second type is the 7.4 L (454 cu. in.) engine, which is sometimes referred to as the "Mark IV" engine.

To determine the displacement of the engine, use the Vehicle Identification (VIN) of the vehicle the engine was removed from. Refer to "Specifications" at the end of this section. If the VIN is not available, the bore and stroke of the engine involved can be measured and compared against "Specifications" to determine the engine model.

Refer to General Information (Section 0A) in this manual for further information.

PAGE

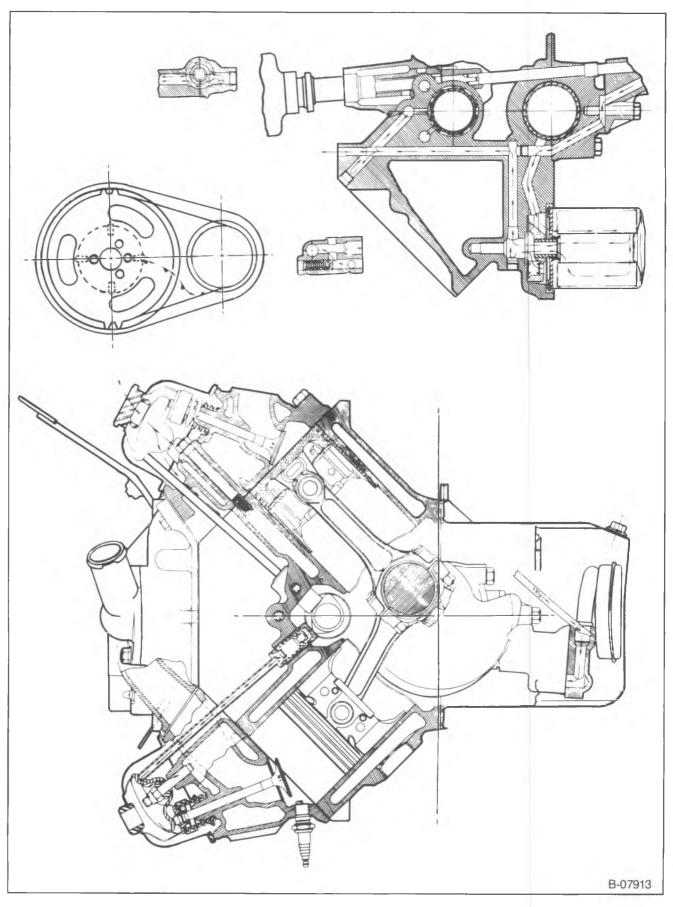


Figure 1—Lubrication Diagram (5.0L and 5.7L Engines)

6A5-4 V8 ENGINE

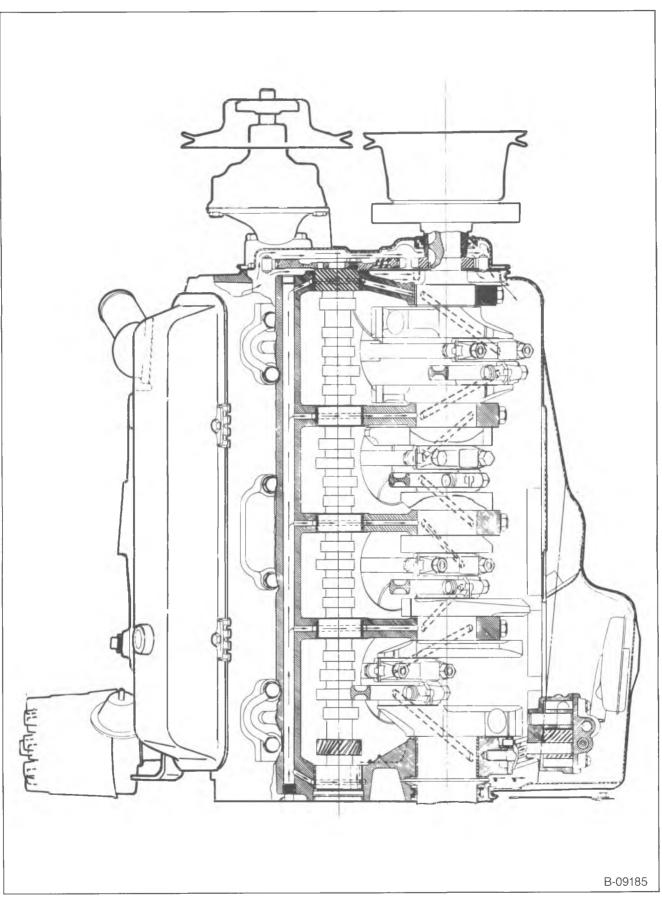


Figure 2—Lubrication Diagram (5.0L and 5.7L Engines)

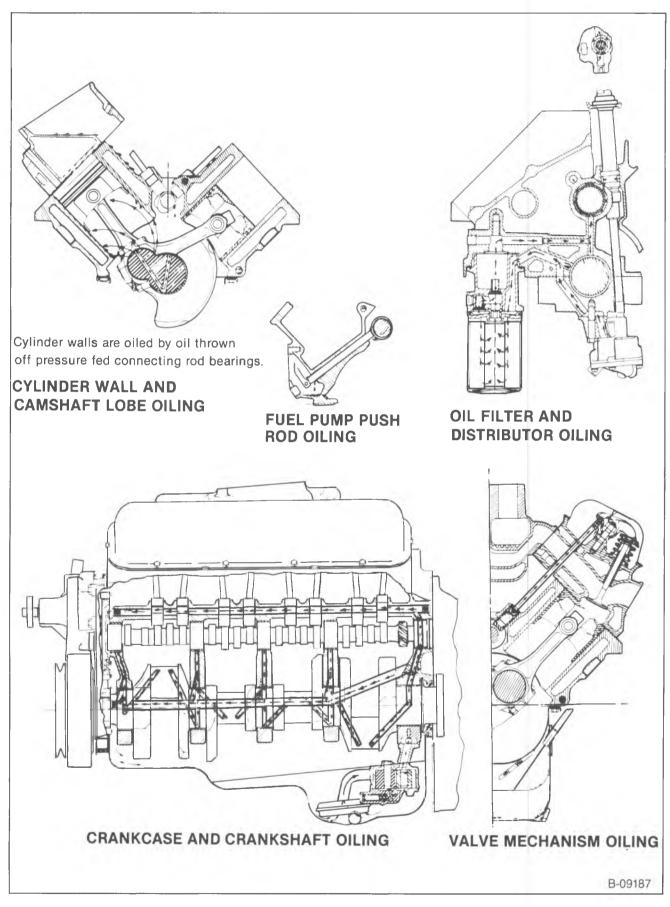


Figure 3—Lubrication Diagram (7.4L Engines)

DISASSEMBLY

TOOLS AND SHOP EQUIPMENT

A clean, well lit work area should be available. Other necessary equipment includes: A suitable parts cleaning tank, compressed air supply, trays to keep parts and fasteners organized, and an adequate set of hand tools.

An approved engine repair stand will aid the work and help prevent personal injury or damage to engine components.

Special tools are illustrated throughout this section, and are listed at its end. These tools (or their equivalents) are specially designed to quickly and safely accomplish the operations for which they are intended. The use of these tools will also minimize possible damage to engine components.

Some precision measuring tools are required for inspection of certain critical components. Torque wrenches will be necessary for correct assembly of various parts.

ACCESSORY REMOVAL

This manual assumes that the engine accessories have been removed. These accessories may include one or more of the following:

Hydraulic Pump AIR Pump Generator Air Conditioning Compressor Cooling Fan

Distributor Carburetor Fuel Pump EGR Valve and Emission Control Equipment

It is beyond the scope of this section to detail the many different accessory installations. Refer to the proper Truck Service Manual for this information.

Diagrams of emission and vacuum hose routings, wiring harness routing, accessory drive belt layout, etc., should be made before removing accessories.

CLEANING

Remove the engine accessories before cleaning, to provide better access to engine exterior surfaces. After removing the carburetor, distributor, fuel pump, etc., cover the openings with tape to prevent the entry of water, solvent, and dirt.

Methods used to clean the engine will depend on the aids which are available. Steam cleaning, pressure washing, or solvent cleaning are some acceptable methods. Allow the engine to dry before beginning the work.

It is important that the engine be as clean as possible to prevent dirt from entering critical areas during disassembly.

DRAINING THE ENGINE

- + Remove or Disconnect
- 1. Oil pan drain plug. Allow the oil pan to drain.
- 2. Oil filter.
- 3. Block drain plugs. Allow the coolant to drain.

Install or Connect

1. Oil pan drain plug.

री Tighten

• Oil pan drain plug to 28 N m (20 ft. lbs.).

- 2. Block drain plugs.
 - ၃ Tighten

Block drain plugs to 12.7 N-m (112 in. lbs.).

EXHAUST MANIFOLD REMOVAL

++

Remove or Disconnect (Figures 4 and 5)

- 1. Oil dipstick tube.
 - On 5.0 L and 5.7 L engines with cast iron manifolds, bend back the tab washers (3).
- 2. Bolts and studs (4).
- 3. Tab washers (3) and washers (2) (some 5.0 L and 5.7 L engines).
- 4. Heat shields (6) (if used).
- 5. Exhaust manifold (1). Take care not to damage the AIR injection tubes (if used).

WATER PUMP REMOVAL

Remove or Disconnect (Figure 6)

- 1. Bolts (12).
- 2. Water pump (10).
- 3. Gaskets (11).

INTAKE MANIFOLD REMOVAL

Remove or Disconnect (Figures 7 and 8)

- 1. Bolts (20).
- 2. Intake manifold (21).
 - Pull the intake manifold up.
 - Do not attempt to loosen the manifold by prying under the gasket surface with any tool.
- 3. Gaskets (22).
- 4. Seals (23) (7.4 L engines).

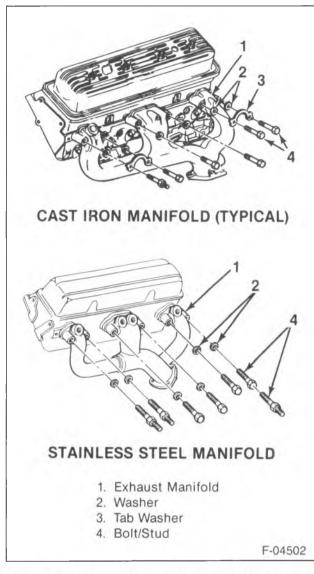


Figure 4-Exhaust Manifold (5.0L and 5.7L Engines)

ROCKER ARM COVER REMOVAL

- **F** Remove or Disconnect (Figure 9)
 - 1. Nuts (30), clips (35), and reinforcements (31) or bolts (36) and washers (37).
 - 2. Rocker arm covers (32). If the rocker arm cover adheres to the cylinder head, try to shear the gasket by bumping the end of the cover with a rubber mallet. If the cover will not come loose, carefully pry until loose. DO NOT DISTORT THE SEALING FLANGE.
 - 3. Gaskets (34).

VALVE TRAIN COMPONENT REMOVAL

Remove or Disconnect (Figures 10 through 13)

Tools Required: J 3049 Valve Lifter Remover (Plier Type)

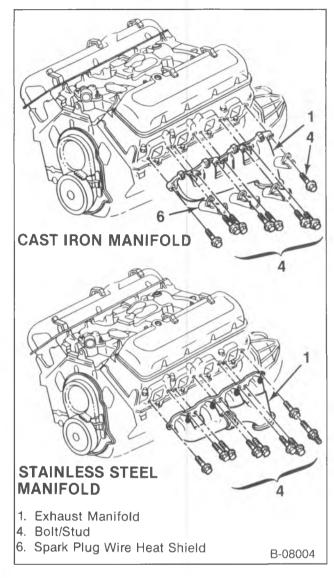


Figure 5—Exhaust Manifold (7.4L Engines)

J 9290-01 Valve Lifter Remover (Slide Hammer Type)

- 1. Nuts (40), balls (41), rocker arms (42) and pushrods (43).
 - Note that on 7.4 L engines, the exhaust valve pushrods are longer than the intake valve pushrods.
 - Every effort should be made to insure that these mating parts are installed in their original locations during assembly. A simple valve train component organizer rack can be made from a piece of wood, as shown in figure 11.
- 2. Hydraulic lifters (44).
 - Remove the lifters one at a time, using a magnet. Place the lifters in the organizer rack, or tag them in some way to insure that they can be returned to the valve lifter bore from which they were removed.

6A5-8 V8 ENGINE

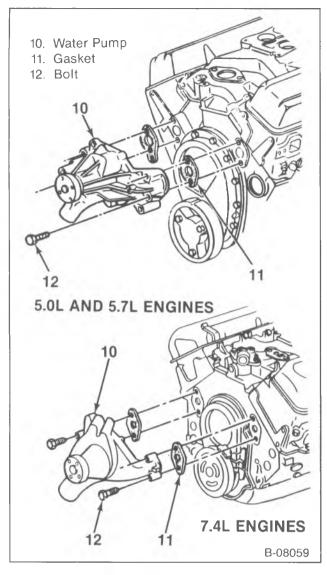


Figure 6—Water Pumps

 Some lifters may be stuck in their bores due to gum or varnish deposits. These lifters can be removed using either J 3049 (figure 12) or J 9290-01 (figure 13).

CYLINDER HEAD REMOVAL

** Remove or Disconnect (Figure 10)

- 1. Bolts (45).
- 2. Cylinder heads (46). Use care when handling the cylinder heads, to prevent damage to rocker arm studs or gasket sealing surfaces.
- 3. Gaskets (47).

TORSIONAL DAMPER REMOVAL

Remove or Disconnect (Figure 14)

- Tool Required: J 23523-E Torsional Damper Puller and Installer
- 1. Crankshaft pulley.

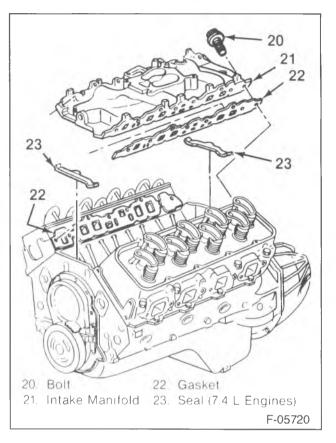


Figure 7—Intake Manifold

- 2. Torsional damper retaining bolt and washer.
- 3. Torsional damper. Use J 23523-E (figure 14).

OIL PAN REMOVAL



Remove or Disconnect (Figures 15 and 16)

- 1. Oil pan bolts, timing marker (if used), clips and reinforcements.
- 2. Oil pan.
- 3. Gasket or gaskets.
- 4. Front and rear oil pan seals (7.4 L engines).

OIL PUMP REMOVAL



++

Remove or Disconnect (Figure 15)

- 1. Bolt (72).
- 2. Oil pump, with drive shaft and connector.

FRONT COVER REMOVAL

Remove or Disconnect (Figure 17)

- 1. Bolts (93).
- 2. Timing tab (92) (7.4 L engines).
- 3. Front cover (91).
- 4. Gasket (90).

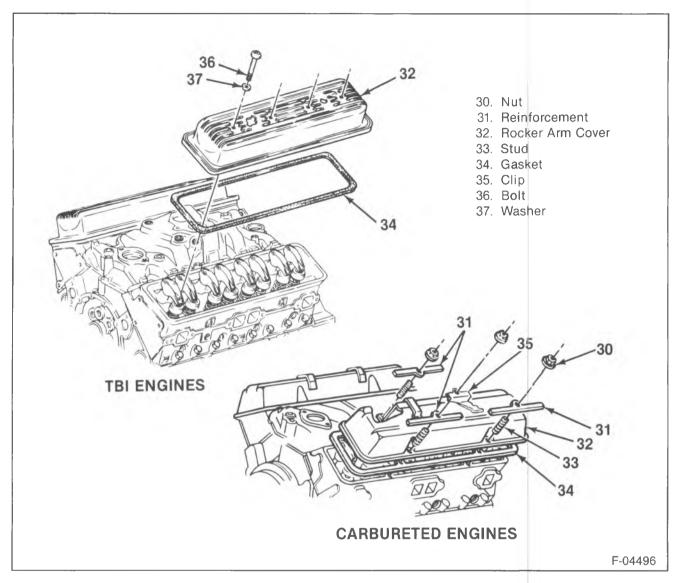


Figure 8—Rocker Arm Cover (5.0L and 5.7L Engines)

TIMING CHAIN AND CAMSHAFT SPROCKET REMOVAL

- **Remove or Disconnect (Figure 18)**
- Timing chain free play. If the chain can be moved back and forth in excess of 16 mm (5/8-inch), make a note that the timing chain should be replaced during assembly.

++ Remove or Disconnect (Figure 18)

- 1. Bolts (100).
- 2. Camshaft sprocket (101) and timing chain (102) together.

CAMSHAFT REMOVAL

- **Remove or Disconnect (Figure 19)** €→l
 - · Camshaft.
 - Install three 5/16-18 bolts 100-125 mm (4-5-inches) long into the camshaft tapped holes. Use these bolts to handle the camshaft.
 - · Pull the camshaft from the block.
 - Use care to prevent damage to the camshaft and bearings.

PISTON AND CONNECTING **ROD REMOVAL**

Remove or Disconnect (Figures 20 and 21)

Tool Required:

J 5239 Connecting Rod Guide Set

1. Ridge (or deposits) at the top of the cylinder as follows:

6A5-10 V8 ENGINE

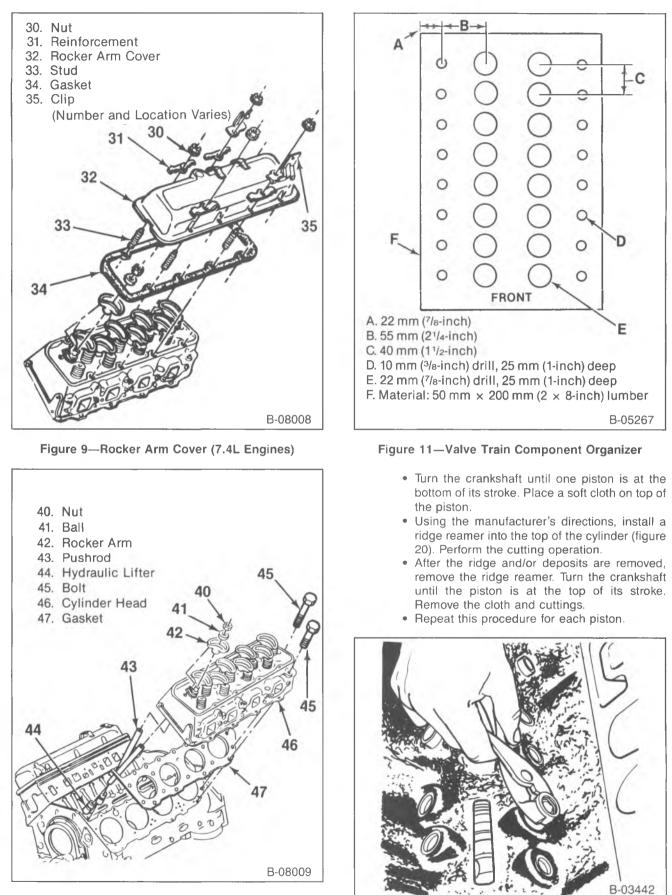


Figure 10—Cylinder Head and Components (Typical)

Figure 12—Removing the Hydraulic Lifter

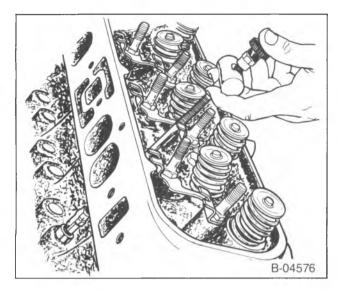


Figure 13—Removing the Hydraulic Lifter

- 2. Connecting rod caps as follows:
 - Make note of the arrangement of the connecting rod markings, to insure that they will be returned to their proper position during assembly. Mark the connecting rods with a scratch awl if necessary.
 - · Remove the connecting rod nuts.
 - To avoid mismatching the connecting rods and connecting rod cap, remove only one connecting rod cap at a time. Place the piston at the bottom of its stroke.
 - Remove the connecting rod cap.
 - Install J 5239 onto the studs. Use of the specified guide set will prevent the connecting rod from scratching the bore or crankshaft journal during the removal process. The tool will also prevent the rod bearing half from falling out of the connecting rod during removal.
- 3. Connecting rod and piston from the block.
 - Push on the guide rod (item A, figure 21) to push the piston and connecting rod out.

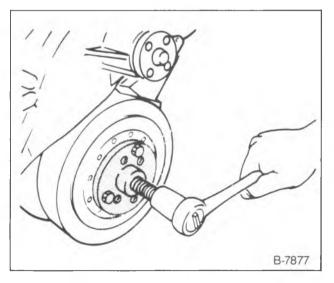


Figure 14—Removing the Torsional Damper

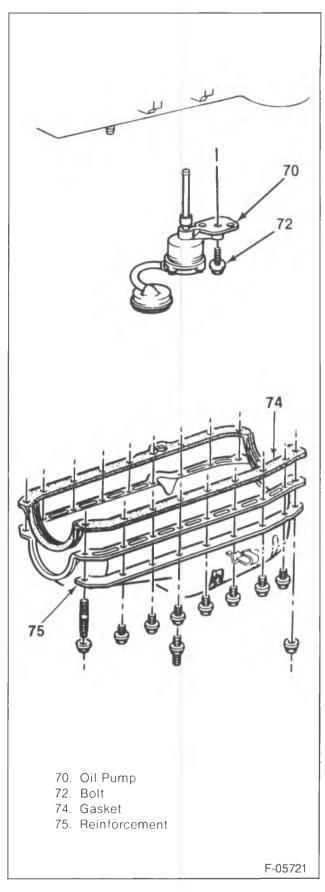


Figure 15—Oil Pan (5.0L and 5.7L Engines)

6A5-12 V8 ENGINE

Figure 17—Front Cover

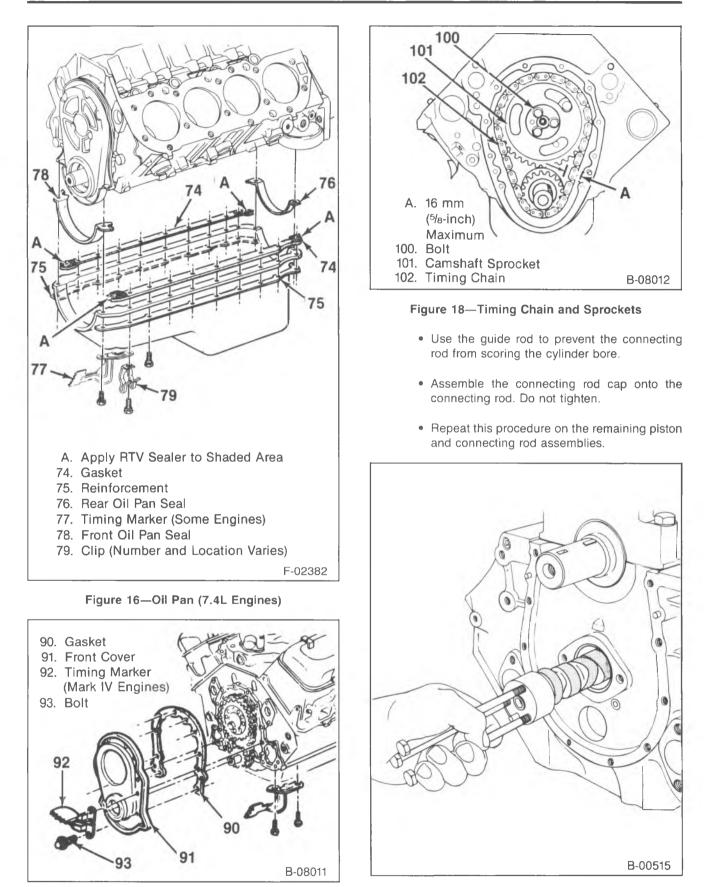


Figure 19—Removing the Camshaft

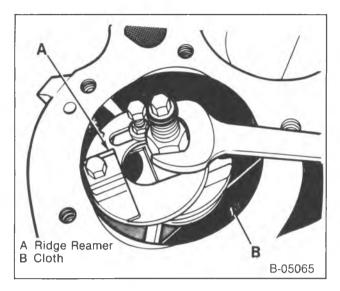
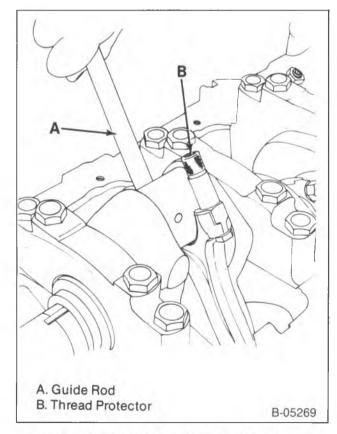


Figure 20—Removing the Cylinder Ridge

FLYWHEEL REMOVAL

+> Remove or Disconnect (Figure 22)

- 1. Bolts (111).
- 2. Flywheel (110).





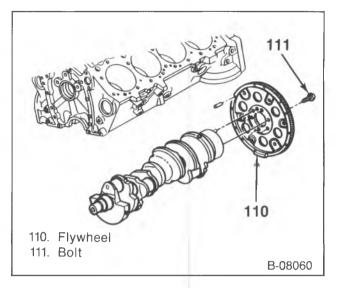


Figure 22—Flywheel (5.0L and 5.7L Shown)

REAR CRANKSHAFT OIL SEAL RETAINER REMOVAL (5.0 L and 5.7 L ENGINES)

Remove or Disconnect (Figure 23)

- 1. Screws and nuts.
- 2. Seal retainer (121).
- 3. Gasket (120).

CRANKSHAFT REMOVAL

Remove or Disconnect (Figures 24 and 25)

- Check the main bearing caps for location markings. Mark the caps if necessary. The caps must be returned to their original locations during assembly.
- 1. Bolts (134).

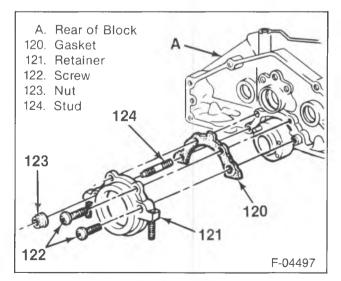


Figure 23—Rear Crankshaft Oil Seal Retainer (5.0L and 5.7L Engines)

6A5-14 V8 ENGINE

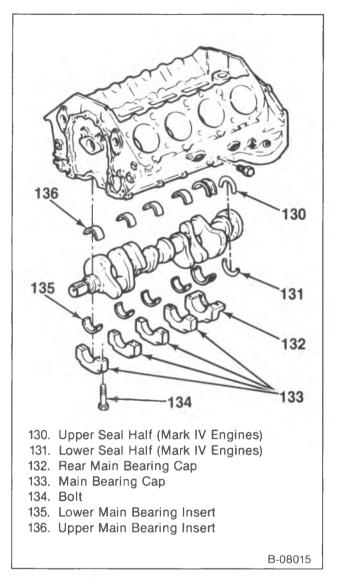


Figure 24—Crankshaft and Components (Typical)

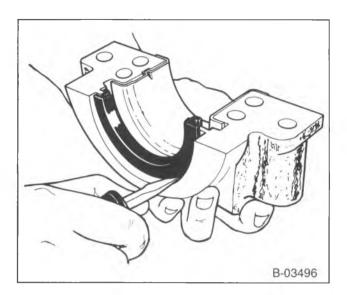


Figure 25—Removing the Rear Crankshaft Seal (7.4L Engines)

- 2. Main bearing caps (132 and 133).
- 3. Crankshaft. Lift the crankshaft straight up, taking care to avoid damage to the crankshaft journals and thrust flange surfaces.
- 4. Upper and lower seal halves (130 and 131) (7.4 L engines). Pry the seal halves out with a screwdriver (figure 25).
- 5. Main bearing inserts (136 and 136). If the main bearings are to be reused, mark them to insure they are installed in their original positions before removal.

CLEANING, INSPECTION, AND REPAIR

A solvent tank, large enough to hold the larger engine parts, will be needed along with various bristle brushes and a gasket scraper. A source of compressed air will be helpful in the cleaning operations.

Precision measuring tools will be required for the inspection procedure. These include: micrometers, cylinder bore gage, feeler gages, dial indicator set, etc. The inspection work, performed with the proper method and tools, is most important. The rebuilt engine cannot be expected to perform properly if parts worn beyond acceptable limits are reused.

BLOCK



- 1. Block in solvent.
- 2. Block gasket surfaces.
- 3. Cylinder bores.
- 4. Oil galleries and passages.
- 5. Scale deposits from the coolant passages.

Inspect

- 1. All expansion plugs for poor fit or leakage.
- 2. Hydraulic lifter bores for deep scratches and varnish deposits.
- 3. Block for cracks.

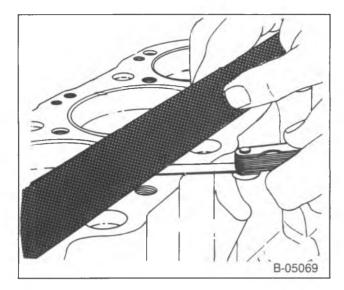


Figure 26—Checking the Block Gasket Surface

- Cylinder walls.
- Coolant jackets.
- Main bearing webs.
- Engine mount bosses.
- 4. Main bearing bores and main bearing caps.
 - All main bearing bores should be round and uniform in ID at all bearing supports.
 - The area where the main bearing inserts contact the main bearing bore should be smooth.
 - If a main bearing cap is damaged and requires replacement, replace it as outlined later.

4 Measure (Figure 26)

Head gasket surface distortion. Use a straight edge and feeler gage to check for flatness of the milled surface at the top of the cylinder block. The surface must be flat (within 0.10mm [0.004-inch]) to assure proper head gasket sealing

MAIN BEARING CAP REPLACEMENT

→+ Install or Connect


- 1. New main bearing cap. The arrow on the main bearing cap faces the front of the engine (opposite the flywheel).
- 2. Main bearing cap bolts.



Bolts to "Specifications."

Measure (Figure 27)

- Main bearing vertical ID (inside diameter). Use an inside micrometer.
- This dimension should be the same as the other main bearing bore vertical diameters.
- If it is necessary to increase the vertical ID, use an equal thickness of special service bearing cap shims at each side of the cap to provide the same dimension as at the other

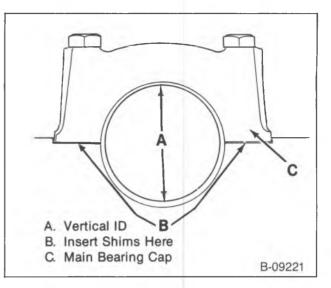



bores. This is necessary to assure the proper crush on the bearing inserts when the engine is assembled.

CYLINDER BORES

16 Inspect

Cylinder bores for scoring and other damage.

Measure

• Cylinder out of round and taper. Refer to GENERAL ENGINE MECHANICAL (SEC. 6A).

Cylinder Bore Reconditioning

 Refer to GENERAL ENGINE MECHANICAL (SEC. 6A).

PISTON AND CONNECTING ROD ASSEMBLIES

Refer to GENERAL ENGINE MECHANICAL (SEC. 6A) and perform the following:

\Rightarrow	Disa	issen	nble
	-		



inn i Clean



Inspect

Components as outlined.

Measure

- Piston pin diameter and pin to piston clearance.
- Piston to bore clearance, and fit pistons as . outlined.

Assemble

- Components as outlined.
- 1

6A5-16 V8 ENGINE

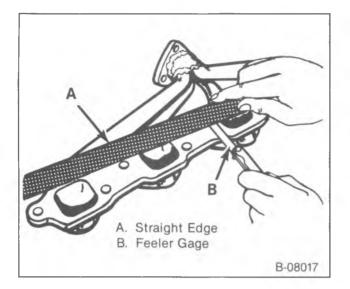


Figure 28—Checking Alignment of Manifold Flanges (Typical)

Important

• Each connecting rod and bearing cap should be marked, beginning at the front of the engine. Cylinders 1, 3, 5 and 7 are the left bank and 2, 4, 6, and 8 are the right bank. The numbers on the connecting rod and bearing cap must be on the same side when installed in the cylinder bore. If a connecting rod is ever transposed from one block or cylinder to another, new connecting rod bearings should be fitted and the connecting rod should be numbered to correspond with the new cylinder number.

붴 Measure

Ring end gap and ring clearance.

Inspect

Ring fit.

INTAKE AND EXHAUST MANIFOLD

Clean

- Old pieces of gasket from the gasket surfaces.
- Excessive carbon build-up in the exhaust passages of the intake manifold.
- Scale and deposits from the coolant passages of the intake manifold.
- EGR passage (if used) of excessive carbon deposits.

Inspect (Figure 28)

- Manifolds for cracks, broken flanges, and gasket surface damage.
- Alignment of exhaust manifold flanges. Use a straight edge and feeler gage (figure 28). If the flanges do not align, the manifold is warped and should be replaced.

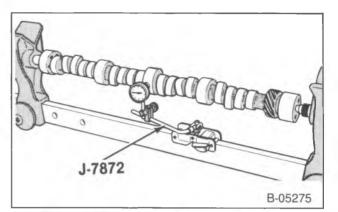


Figure 29—Measuring Camshaft Run-Out

 AIR injection tubes for damage. Replace as needed.

CAMSHAFT

Important

 Whenever the camshaft needs to be replaced, a new set of valve lifters must also be installed.

Inspect

 Camshaft lobes and journals for scratches, pitting, scoring, and wear.



Measure (Figures 29 and 30)

Tool Required:

J 7872 Dial Indicator (or equivalent)

- Camshaft runout (figure 29). Mount the camshaft in V-blocks or between centers. Using J 7872, check the intermediate camshaft journal. If runout exceeds (0.0015-inch), the camshaft is excessively bent and should be replaced along with the camshaft bearings.
- Camshaft journal out-of-round. Use a micrometer (figure 30). If the journals are more than 0.001-inch out-of-round, replace the camshaft.

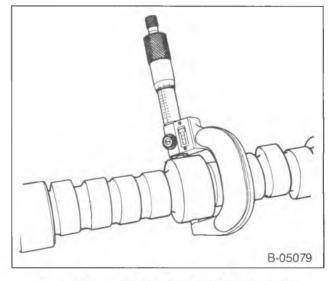


Figure 30—Checking the Camshaft Journals

Camshaft journal diameter. Use a micrometer (figure 30). The proper diameter is listed in "Specifications."

CAMSHAFT BEARINGS

Refer to GENERAL ENGINE MECHANICAL (SEC. 6A) for replacement procedures.

TIMING CHAIN AND SPROCKETS

Inspect

- Sprockets for chipped teeth and wear.
- Timing chain for damage.
- It should be noted that excessively worn sprockets will rapidly wear a new chain. Likewise, an excessively worn chain will rapidly wear a new set of sprockets.

CRANKSHAFT SPROCKET REPLACEMENT

Disassemble (Figures 31 and 32)

- Tools Required:
 - J 5825 Crankshaft Sprocket Puller
 - (5.0 L and 5.7 L engines) J1619 Crankshaft Sprocket Puller
 - (7.4L engines)
- Crankshaft sprocket. On 5.0 L and 5.7 L engines, use J 5825 (figure 31). On 7.4 L engines, use J 1619 (figure 32).
- 2. Key, if necessary.

Assemble (Figures 31 and 32)

Tools Required:

- J 5590 Crankshaft Sprocket Installer
- (5.0 L and 5.7 L engines)
- J 22102 Crankshaft Sprocket Installer (7.4 L engines)
- 1. Key, if removed.
- Crankshaft sprocket. Use J 5590 (5.0 L and 5.7 L engines) or J 22102 (7.4 L engines). Make sure the timing mark faces outside.

FRONT COVER

Clean

Old gasket from the gasket surfaces.

Inspect

- Timing marker for damage.
- Front cover for damage, dents, or cracks.

Disassemble

Front crankshaft seal. Pry the seal out with a screwdriver.

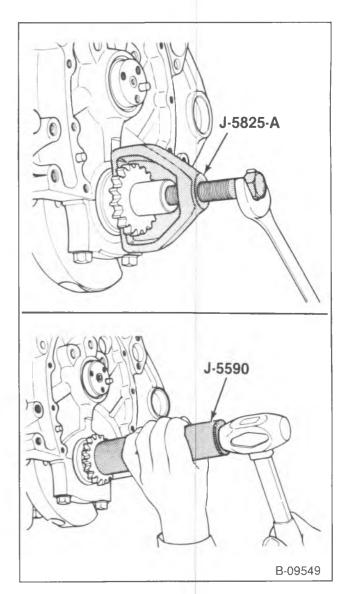


Figure 31—Crankshaft Sprocket Replacement (5.0L and 5.7L Engines)



Assemble (Figure 33)

- Front crankshaft seal. Use J 35468 (5.0 L and 5.7 L engines) or J 22102 (7.4 L engines) (figure 33).
 The open end of the seal must be facing the inside of the front cover.
- Lightly coat the seal lips with grease.

WATER PUMP


Clean

Old gasket from the gasket surface.

Important

 Do not immerse the pump in solvent. The solvent may enter the pump's permanently lubricated bearings, dissolve the bearings' lubricant supply, and cause premature bearing failure.

6A5-18 V8 ENGINE

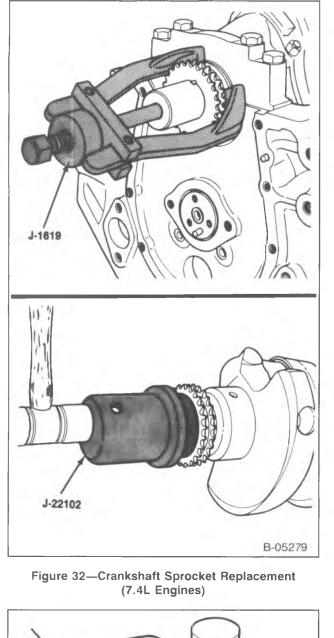

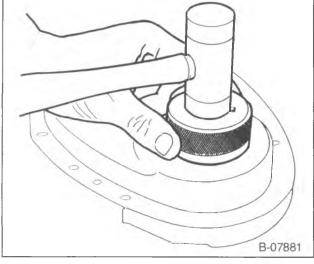


Figure 33—Installing the Front Crankshaft Seal (Typical)

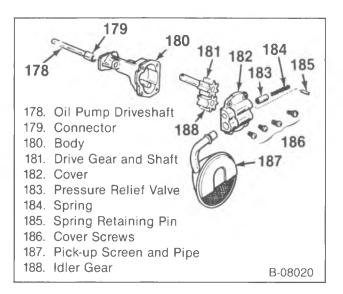


Figure 34—Oil Pump Components (5.0L and 5.7L Engines)

Inspect

- Water pump shaft for roughness and end play. If the shaft does not turn smoothly, or if there is excessive end play, replace the water pump.
- Water pump body at the drain hole. If there is evidence of coolant leakage, the water pump shaft seal is leaking and the water pump should be replaced.

OIL PAN AND ROCKER ARM COVERS

Clean

Parts in solvent. Remove all sludge and varnish.
Old gaskets from the gasket surfaces.

Inspect

- Gakset flanges for bending or damage.
- Rubber grommets and parts on the rocker arm cover for deterioration.
- Oil pan for rock damage or cracks.
- Oil pan baffle for lack of fit.
- Drain plug threads for stripping.

OIL PUMP

Disassemble (Figures 34 and 35)

- 1. Oil pump driveshaft (178) and connector (179).
- 2. Cover screws (186).
- 3. Cover (182) and gasket (180) (7.4L engines).
- Mark the gear teeth so the pump gears can be installed with the same gear teeth indexed.
- 4. Drive gear and shaft (181).
- 5. Idler gear (181).
- 6. Spring retaining pin (185).
- 7. Washer (189) (7.4 L engines).
- 8. Spring (184).
- 9. Pressure relief valve (183).

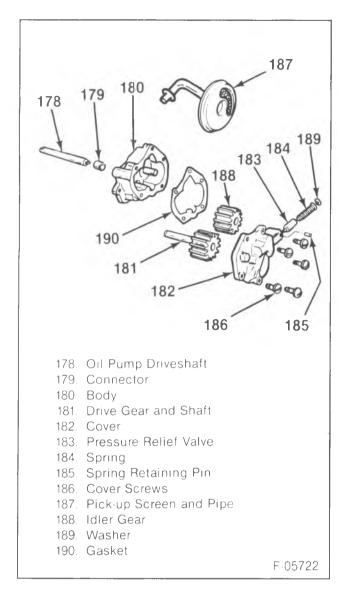


Figure 35—Oil Pump Components (7.4L Engines)

10. Pickup screen and pipe (187).

- · Do not remove the pickup screen and pipe unless replacement is required.
- · The pickup pipe is a press fit in the pump body (182).
- Do not try to remove the screen from the pipe. The pickup screen and pipe is serviced as an assembly only.

Clean

All parts in clean solvent and blow dry with compressed air.



- Pump body (180) and cover (182) for cracks or other damage.
- Gears (181 and 188) for wear.
- --- Drive gear and shaft (181) for lack of fit in the pump body (180).

- Inside of the cover (182) for wear that would permit oil to leak past the ends of the gears. The pump gears, cover, and body are not serviced separately. If the parts are damaged or worn, replace the entire oil pump assembly.
- Pressure relief valve (183) for fit. The regulator valve should slide freely in its bore without sticking or binding.

-X-Assemble (Figures 34, 35, and 36)

Tool Required:

- J 21882 Pickup Tube and Screen Installer
- (5.0 L and 5.7 L engines)
- J 22144 Pickup Tube and Screen Installer (7.4L engines)
- 1. Pressure relief valve (183).
- 2. Spring (184).
- 3. Washer (189) (7.4 L engines).
- 4. Spring retaining pin (185).
- 5. Drive gear and shaft (181).
- 6. Idler gear (188) in the pump body (180) with the smooth side of the gear toward the pump cover opening. Index the marks made during disassembly.
- 7. Cover (182), gasket (190) (7.4L engines) and screws (186)



- Screws (186) to 9.0 N-m (80 in. lbs.).
- Turn the driveshaft by hand to check for smooth operation.

NOTICE: Be careful of twisting, shearing or collapsing the pipe while installing in the pump.

- 8. Pickup screen and pipe (187) (if removed) (figure 36).
 - If the pickup screen and pipe assembly was removed, it should be replaced with a new part. Loss of press fit condition could result in an air leak and loss of oil pressure.
 - · Mount the oil pump in a soft jawed vise.
 - · Apply sealer to the end of the pipe.
 - Tap the pickup screen and pipe into place, using J 21882 (5.0 L and 5.7 L engines) or J 22144 (7.4 L engines), and a hammer.
 - The pump screen must be parallel with the bottom of the oil pan when installed.
- 9. Oil pump driveshaft (178) and connector (179).

VALVE TRAIN COMPONENTS

PUSHRODS, ROCKER ARMS, BALL, AND NUTS

Clean

- Parts in solvent. Blow dry with compressed air.
- · Make sure the oil passages in the pushrods are clear.

Inspect

Rocker arms and balls at their mating surfaces. These surfaces should be smooth and free from scoring or other damage.

6A5-20 V8 ENGINE

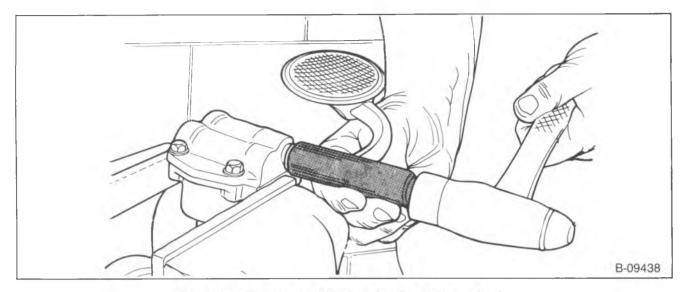


Figure 36—Installing the Oil Pump Pickup Tube and Screen

- Rocker arm areas which contact the valve stems and the sockets which contact the pushrods. These areas should be smooth and free of damage and wear.
- Rocker arm nuts.
 - The nuts are prevailing torque nuts. At least 6.2 N-m (55 in. lbs.) torque should be required to thread the nuts onto the rocker arm studs. If not, it is possible that the nut(s) could back off during engine operation, causing loss of lash and valve train noise.
- Pushrods for bending. Roll the pushrod on a flat surface to determine if it is bent. Replace if necessary.
- Ends of the pushrods for scoring or roughness.

HYDRAULIC LIFTERS

Refer to GENERAL ENGINE MECHANICAL (SEC. 6A).

CYLINDER HEAD

Disassemble (Figures 37, 38 and 39)

Tool Required:

J 8062 Valve Spring Compressor

- 1. Valve keepers (251).
 - Compress the springs (256) with J 8062 (figure 39).
 - · Remove the valve keepers.
 - Remove J 8062.
- 2. Caps (253), shields (255), springs with dampers (256) and rotators (254).
- 3. O-ring seals (252) (if used) and seals (257).
- Valves (258 and 259). Place them in a rack so they can be returned to their original position at assembly.

CLEANING AND INSPECTION OF COMPONENTS

Refer to GENERAL ENGINE MECHANICAL (SEC. 6A) and perform the following:

ш.	Clean
----	-------





Components as outlined.

I Measure

- Valve stem clearance.
- Valve spring tension and free length.

Other information outlined includes:

- Valve and seat grinding.
- Valve guide reaming.

ROCKER ARM STUD REPLACEMENT (5.0 L AND 5.7 L ENGINES)

Tools Required:

- J 5802-01 Stud Remover
- J 5715 Reamer (0.003-inch oversize) or
- J 6036 Reamer (0.013-inch oversize)
- J 6880 Stud Installer

Rocker arm studs that have damaged threads or are loose in cylinder heads should be replaced. New studs are available in 0.003-inch and 0.013-inch oversize.

- 1. Place J 5802-01 over the stud to be removed. Install a nut and flat washer. Remove the stud by turning the nut (figure 40).
- 2. Ream the hole to the proper size for the replacement oversize stud. Use J 5715 for 0.003-inch oversize studs; J 6036 for 0.013-inch oversize studs (figure 41).
- 3. Coat lower end (press-fit area) of stud with hypoid axle lubricant. Drive the stud into place with a hammer and J 6880. Stud is installed to proper depth when the tool bottoms on the cylinder head (figure 42).

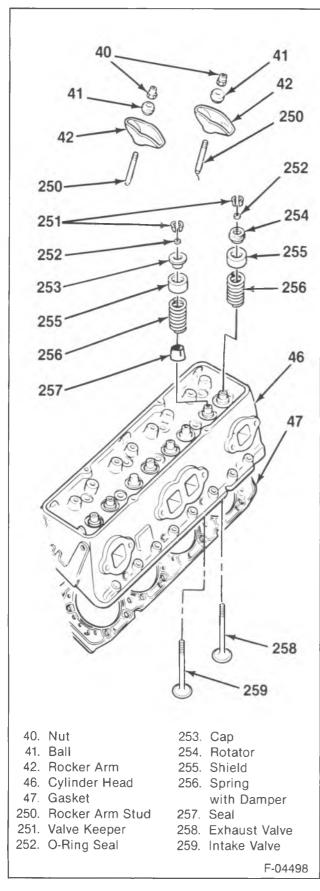


Figure 37—Cylinder Head and Components (5.0L and 5.7L Engines)

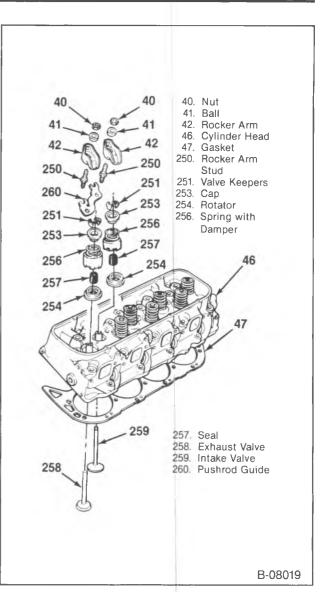


Figure 38—Cylinder Head and Components (7.4L Engines)

ROCKER ARM STUD AND PUSHROD GUIDE REPLACEMENT (7.4 L ENGINES)

The rocker arm studs used in 7.4 L engines are threaded in place.



- Disassemble (Figure 38)
- 1. Rocker arm studs (250). Use a deep socket.
- 2. Pushrod guide (260).



- 1. Pushrod guide.
- 2. Rocker arm studs. Use a deep socket.

री Tighten

• Rocker arm studs to 68 N m (50 ft. lbs.).

6A5-22 V8 ENGINE

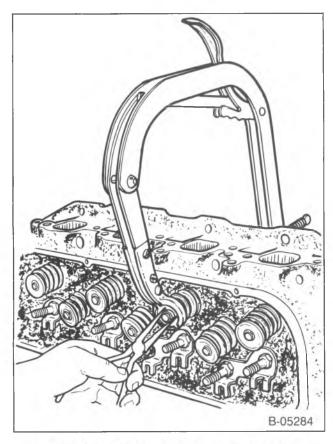


Figure 39—Compressing the Valve Springs

ASSEMBLY (5.0 L AND 5.7 L ENGINES)

Assemble (Figures 37, 39, and 43)

Tools Required:

- J 8062 Valve Spring Compressor
- J 23738-A Valve Seal Leak Detector
- 1. Valves (258 and 259).
 - Lubricate the valve stems with engine oil.
 - · Insert the valves into the proper ports.

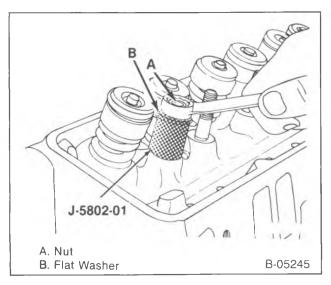


Figure 40—Removing the Rocker Arm Stud (5.0L and 5.7L Engines)

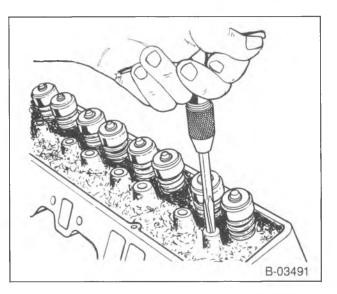


Figure 41—Reaming the Rocker Arm Stud Bore (5.0L and 5.7L Engines)

- 2. Seals (257) (intake valve only). Install the seals over the valve stems and seat them against the head.
- 3. Springs with dampers (256).
- 4. Shields (255).
- 5. Caps (253) (intake valves only).
- 6. Rotators (254) (exhaust valves only).
- 7. O-ring seals (252) and valve keepers (251).

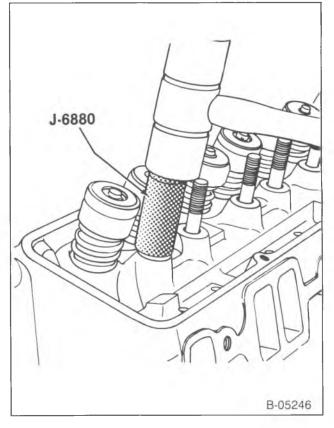


Figure 42—Installing the Rocker Arm Stud (5.0L and 5.7L Engines)

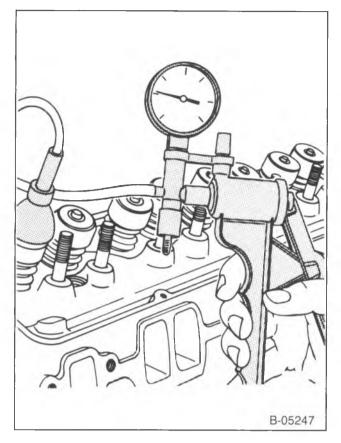


Figure 43—Checking the Valve Seal (5.0L and 5.7L Engines)

- Compress the valve spring, using J 8062 (figure 39). Compress the spring enough so the lower valve stem groove can be clearly seen.
- Push a new O-ring seal onto the valve stem. The seal is to be installed on the stem's lower groove. Make sure the seal is flat and not twisted.
- Apply a small amount of grease to the area of the upper valve stem groove. Assemble the two valve keepers using the grease to hold the keys in place. Make sure the keepers seat properly in the groove.
- Release the compressor tool. Make sure the valve keepers stay in place.
- Repeat the preceding steps on the remaining valves.
- Check each seal, using J 23738-A (figure 43). Place the adapter cup over the shield. Operate the vacuum pump. Observe the vacuum pump gage. No air should be able to leak past the seal. If the seal will not hold a vacuum, it may have been damaged or improperly installed.

Measure (Figures 44 and 45)

- Valve spring installed height of each valve spring as follows:
 - 1. Use a narrow, thin scale. A cutaway scale (figure 44) may be helpful.
 - 2. Measure from the valve shim or spring seat to the top of the shield (255) (figure 45).

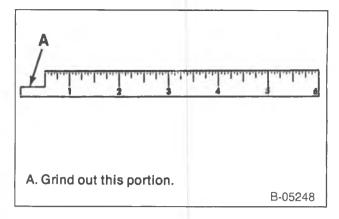


Figure 44—Cutaway Scale

3. If this measurement exceeds the figure given in "Specifications," install valve spring seat shims of sufficient thickness (between the spring and cylinder head) to give the desired measurement. NEVER shim the spring so as to give an installed height under the specified figure.

ASSEMBLY (7.4 L ENGINES)

Assemble (Figures 38 and 39)

Tool Required:

J 8062 Valve Spring Compressor

- 1. Valves (258 and 259).
 - Lubricate the valve stems with engine oil.

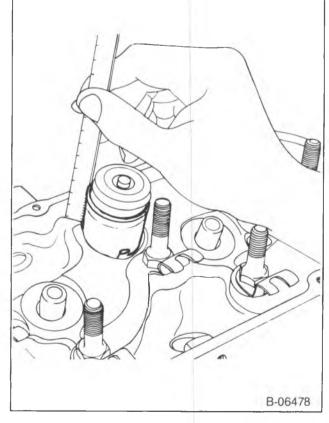


Figure 45—Measuring Valve Spring Installed Height (7.4L Engine Shown)

6A5-24 V8 ENGINE

- Insert the valve into the proper port.
- 2. Rotators (254).
- 3. Seals (257).
 - · Lubricate the seals with engine oil.
- · Push the seals into place.
- 4. Valve springs with dampers (256).
- 5. Caps (253).
- 6. Valve keepers (251).
 - Compress the valve spring using J 8062 (figure 39). Compress the spring until the valve stem groove can be seen.
 - · Apply a small amount of grease to the area of the valve stem groove.
 - Assemble the valve keepers, using the grease to hold the keys in place. Make sure the keepers seat properly in the groove.
 - · Release the compressor tools. Make sure the valve keepers stay in place.
 - · Repeat this procedure on the remaining valves.

Measure (Figures 44 and 45)

- Valve spring installed height of each valve spring.
 - 1. Use a narrow, thin scale. A cutaway scale (figure 44) may be helpful.
 - 2. Measure from the spring seat to the top of the valve spring (figure 45).
 - 3. If this measurement exceeds the figure given in "Specifications," install valve spring seat shims of sufficient thickness (between the spring and cylinder head) to give the desired measurement. NEVER shim the spring so as to give an installed height under the specified figure.

THERMOSTAT AND WATER OUTLET

4⊅ **Disassemble (Figure 46)**

- 1. Bolts or studs (300).
- 2. Water outlet (301).
- 3. Gasket (302).
- 4. Thermostat (303).
- |)) Inspect

Water outlet for cracks.

Thermostat Check

- 1. Suspend the thermostat and a thermometer in water with the thermometer located close to the thermostat. The thermostat must be completely submerged and the water thoroughly agitated while heating. Apply heat to the water and record both the temperature at which the thermostat begins to open and the temperature at which the thermostat is fully open.
- 2. Compare the temperature readings taken in the test with those given in the proper Truck Service Manual.
- 3. Do not attempt to repair the thermostat. If the thermostat does not function properly, replace it with a new unit which has been checked as directed previously.

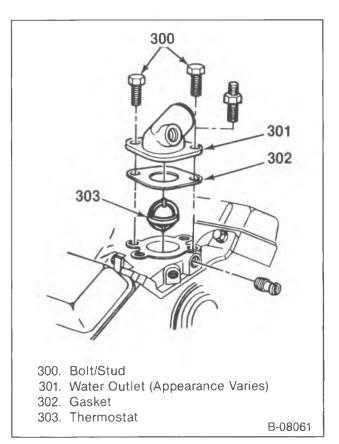


Figure 46—Thermostat and Components



- Install or Connect (Figure 46)
- 1. Thermostat (303).
- 2. Gasket (302).
- 3. Water outlet (301).
- 4. Bolts or studs (300).

Ð Tighten

- Bolts or studs to specifications.
 - 5.0 L and 5.7 L engines: 28 N·m (21 ft. lbs.).
 - 7.4 L engines: 40 N m (30 ft. lbs.).

TORSIONAL DAMPER

Inspect

- Torsional damper weight for lack of fit or signs of shifting on the hub. Replace as needed.
- Area of the torsional damper hub shaft which contacts the front crankshaft seal for roughness or nicks. Replace the damper if this condition exists.

CRANKSHAFT AND BEARINGS

Clean

- Crankshaft with solvent.
- Blow all sludge from the oil passages with compressed air.
- Main bearing inserts. Wipe free of oil with a soft cloth.

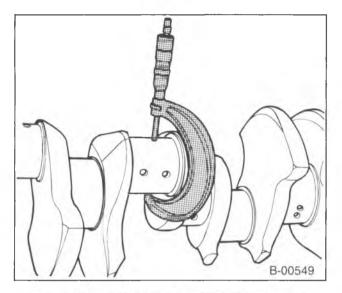


Figure 47—Measuring the Crankshaft Journals

 Seal running surfaces with a non-abrasive cleaner.

Inspect

- Crankshaft for cracks. Use the magnaflux method, if available.
- Crankpins, main bearing journals and thrust surfaces for scoring, nicks, or damage caused by lack of lubrication.
- Main bearing inserts for scoring or other damage.

In general, the lower inserts (except the #1 bearing) show greater wear and the most distress from fatigue. If, upon inspection, the lower insert is suitable for use, it can be assumed that the upper insert is also satisfactory. If the lower insert shows evidence of wear or damage, both the upper and lower inserts must be replaced.

📵 Measure (Figures 47 and 48)

 Main bearing and connecting rod journal diameters (figure 47). Compare with "Specifications." Grind or replace the crankshaft if necessary.

- Main bearing and connecting rod journals for taper and out-of-round (figure 47). If the journals are tapered or out-of-round more than 0.001-inch, grind or replace the crankshaft.
- Crankshaft run-out (figure 48).
 - Mount the crankshaft in V-blocks or between centers.
 - Use a dial indicator as shown.
 - If the main journals are misaligned, the crankshaft is bent and must be replaced, along with the main bearing.

Crankshaft Bearing Availability

Crankshaft main and connecting rod bearings are available in 0.001, 0.002, 0.010, and 0.020-inch undersizes.

OIL FILTER BYPASS VALVE

- Disassemble (Figure 49)
 - 1. Bolts (321).
 - 2. Oil filter bypass valve (320).

Clean

- Oil filter bypass valve.
- Oil passages in the block.

Inspect (Figure 49)

 Valve disc (item A) and spring for damage or sticky operation. Replace the assembly if faulty.

Assemble (Figure 49)

- 1. Oil filter bypass valve (320).
- 2. Bolts (321).

री Tighten

• Bolts (321) to 9.0 N m (80 in. lbs.).

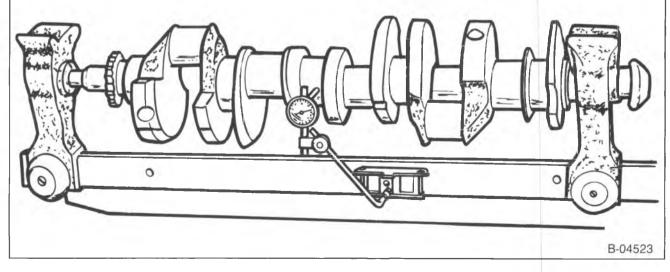


Figure 48—Checking Crankshaft Run-Out

6A5-26 V8 ENGINE

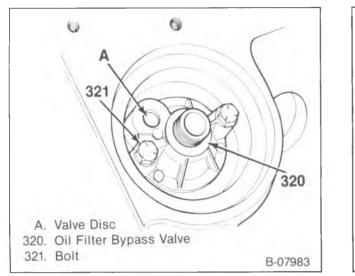


Figure 49-Oil Filter Bypass Valve

REAR CRANKSHAFT OIL SEAL RETAINER (5.0 L AND 5.7 L ENGINES)

◆ Disassemble (Figure 50)

 Rear crankshaft oil seal. Insert a screwdriver into the notches provided in the seal retainer and pry the seal out (figure 50).

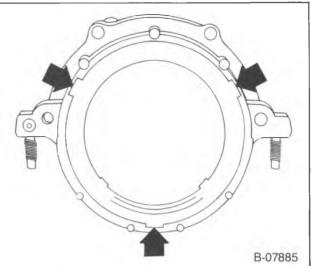


Figure 50—Seal Removal Notches

Clean

All traces of old gasket from the retainer.



Retainer for cracks, porosity, and damage to the sealing surfaces.

Important

• Install the new rear crankshaft oil seal with the proper tool, after the retainer is assembled to the engine, as outlined later.

ASSEMBLY OF ENGINE

PRIOR TO ASSEMBLY

The importance of cleanliness during the assembly procedure cannot be overstressed. Dirt will cause premature wear of the rebuilt engine.

Lubricate all moving parts lightly with engine oil or engine assembly lubricant (unless specified otherwise) during assembly. This will provide initial lubrication when the engine is started.

REAR CRANKSHAFT OIL SEAL INSTALLATION (7.4 L ENGINES)

An oil seal installation tool (figure 51) should be fabricated (if not provided in the seal kit) to prevent seal damage during installation. Extreme care should be exercised when installing this seal to protect the sealing bead located in the channel on the outside diameter of the seal.

Install or Connect (Figures 51, 52, and 53)

1. Lower seal (131) (figure 52).

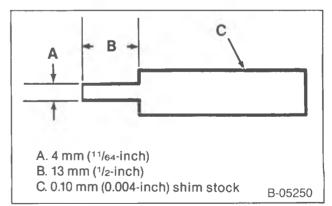


Figure 51—Oil Seal Installation Tool (7.4L Engine)

 Insert the seal half into the rear main bearing cap (132). Use the tool to protect the seal half from the sharp edge of the seal seat. Feed the seal half into the rear main bearing cap, using light finger pressure. Make sure the oil lip faces the front of the engine.

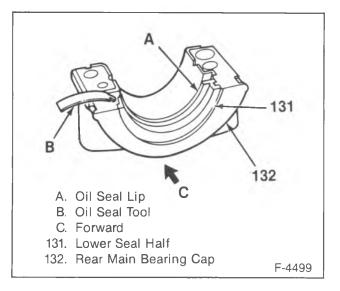


Figure 52—Crankshaft Rear Oil Seal Installation (7.4L Engines)

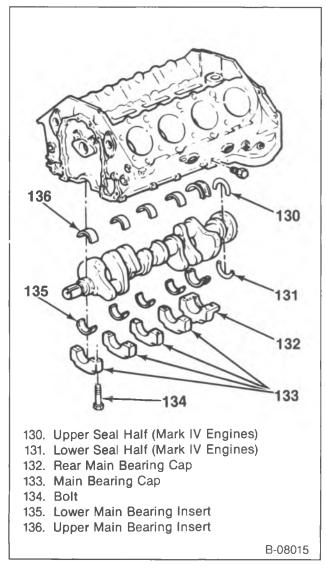


Figure 53—Crankshaft and Components (Typical)

- Coat the seal lips lightly with engine oil. Keep the oil off the oil seal mating ends.
- 2. Upper seal half (130).
 - Insert the seal half in the block using the installation tool to protect the back sealing bead of the seal from the sharp corner of the block. Position the seal and the tip of the tool so that the seal contacts the tool. Make sure that the oil seal lip is positioned toward the front of the engine.
 - Feed the seal into position the same way as for the main bearing cap, gradually, using the tool as a "shoe-horn" to protect the seal outer diameter from damage. The tool must remain in position until the seal is properly in position, with both ends flush with the block.
 - Remove the tool, being careful not to withdraw the seal.

CRANKSHAFT AND MAIN BEARING INSTALLATION

Main bearings are of the precision insert type and do not use shims for adjustment. If clearances are excessive, a new bearing plus both upper and lower inserts will be required. Service bearings are available in standard size and 0.001-inch, 0.002-inch, 0.010-inch, and 0.020-inch undersize. 0.009 inch is available for 5.0L and 5.7L engines only.

Selective fitting of both rod and main bearing inserts is necessary obtain close tolerances. For this reason you may use, for example, one half of a 0.001-inch undersize insert which will decrease the clearance 0.0005-inch from using a full standard bearing.

UNDERSIZE MAIN JOURNALS (5.0 L AND 5.7 L ENGINES)

 On 5.0 L and 5.7 L engines, when a production crankshaft cannot be precision fit by the method described previously, it is then ground 0.009-inch undersize ON ONLY THOSE MAIN JOURNALS THAT CANNOT BE PROPERLY FITTED. ALL JOURNALS WILL NOT BE NECESSARILY BE GROUND. A 0.009-inch undersize bearing or 0.010-inch undersize bearing will then be used for precision fitting in the same manner as previously described.

OVERSIZE REAR MAIN BEARING THRUST FACES (5.0 L AND 5.7 L ENGINES)

- Some 5.0 L and 5.7 L production engines may have rear main bearings that are 0.008-inch wider than standard across the thrust faces.
- The crankshaft on these engines can be identified by ".008" stamped on the rear counterweight.
- If the rear main bearings are replaced, they must have the proper distance between thrust faces to obtain correct crankshaft end play.

Install or Connect (Figures 53, 54, and 55)

1. Upper main bearing inserts to the block.

6A5-28 V8 ENGINE

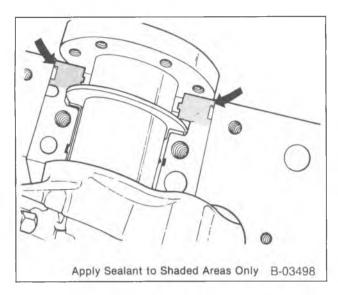


Figure 54—Applying Sealant to the Block (7.4L Engines)

Important

- If any undersized bearings are used, make sure they are fitted to the proper journals.
- 2. Crankshaft.
- 3. Lower main bearing inserts to the main bearing caps.

1 Measure

- Main bearing clearance. Refer to GENERAL ENGINE MECHANICAL (SEC. 6A).
- Apply engine oil to the main bearing inserts.
- 4. Main bearing caps (except rear cap) and bolts to the block.



- Main bearing cap bolts to specifications.
 - 5.0 L and 5.7 L engines:
 - Outer bolts on #2, #3, and #4 main bearing caps: 95 N m (70 ft. lbs.).
 All others: 110 N m (20 ft. lbs.)
 - All others: 110 N m (80 ft. lbs.).

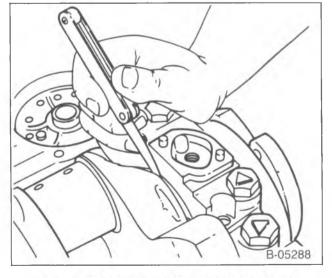


Figure 55—Measuring Crankshaft End Play

• 7.4 L engines: 150 N m (110 ft. lbs.).

- 5. Rear main bearing cap and bolts to the block.
 - On 7.4 L engines, apply a brush-on type oil sealing compound to the mating surface of the block and cap (figure 54). Do not allow any sealant on either crankshaft or rear oil seal.



• Rear main bearing cap bolts temporarily to 14 N·m (10 ft. lbs.).

4 Measure (Figure 55)

- Crankshaft end play, as follows:
 - Tap the end of the crankshaft first rearward then forward with a lead hammer. This will line up the rear main bearing and crankshaft thrust surfaces.



- Rear main bearing cap bolts to specifications:
 - 5.0 L and 5.7 L engines: 110 N·m (80 ft. lbs.).
 - 7.4 L engines: 150 N⁻m (110 ft. lbs.).
- 2. With the crankshaft forced forward, measure at the front end of the rear main bearing with a feeler gage (figure 55). The proper clearance is 0.002–0.006-inch (5.0L and 5.7L engines), 0.006–0.010-inch (7.4L engines).
- 3. On 5.0 L and 5.7 L engines, if correct end play cannot be obtained, be certain that the correct size rear main bearing has been installed. Production engines may have rear main bearings that are 0.008-inch wider across the thrust faces than standard, as explained previously.

Inspect

 Crankshaft for binding. Try turning the crankshaft to check for binding. If the crankshaft does not turn freely, loosen the main bearing cap bolts, on one cap at a time, until the tight bearing is located. Burrs on the bearing cap, foreign matter between the insert and the block or the bearing cap, or a faulty insert could cause a lack of clearance at the bearing.

REAR CRANKSHAFT OIL SEAL AND RETAINER INSTALLATION (5.0 L AND 5.7 L ENGINES)

++ Install or Connect (Figures 56 and 57)

Tool Required:

J 35621 Seal Installer

- Whenever the seal retainer is removed, a new retainer gasket and rear crankshaft oil seal must be installed.
- 1. Gasket (120) to the block. It is not necessary to use sealant to hold the gasket in place.
- 2. Seal retainer (121).
- 3. Screws and nuts.

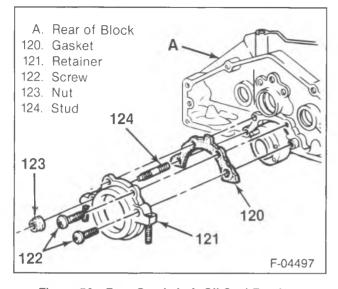


Figure 56—Rear Crankshaft Oil Seal Retainer (5.0L and 5.7L Engines)

၃ Tighten

- Screws and nuts to 15.3 N m (135 in. lbs.).
- 4. Rear crankshaft oil seal (figure 57).
 - Make sure the crankshaft rear chamfer is free of grit, loose rust, and burrs. Correct as needed.
 - Lubricate the inner and outer diameter of the seal with engine oil.
 - Install the seal on J 35621.
 - Position J 35621 against the crankshaft. Thread the attaching screws into the tapped holes in the crankshaft.
 - Tighten the screws securely with a screwdriver. This will ensure that the seal is installed squarely over the crankshaft.
 - Turn the handle until it bottoms.
 - Remove J 35621.

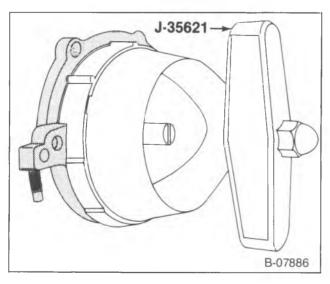


Figure 57—Installing the Rear Crankshaft Oil Seal (5.0L and 5.7L Engines)

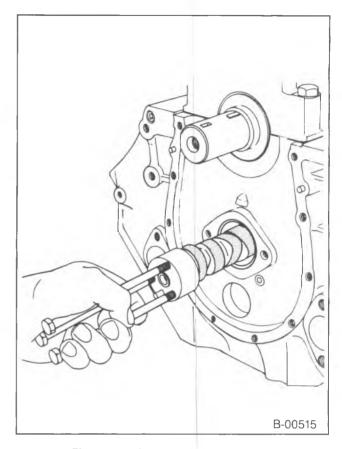


Figure 58—Installing the Camshaft

CAMSHAFT, TIMING CHAIN AND SPROCKET INSTALLATION

→← Install or Connect (Figures 58 and 59)

- Coat the camshaft lobes and journals with Engine Oil Supplement (GM part number 1051396) or equivalent.
- 1. Camshaft (figure 58).

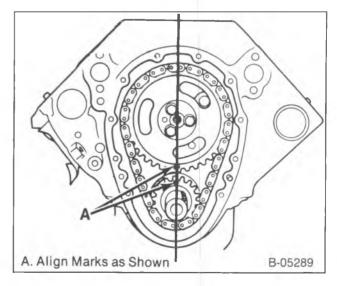


Figure 59—Timing Marks

6A5-30 V8 ENGINE

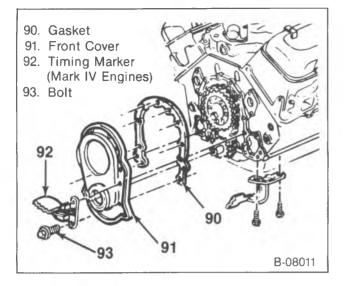


Figure 60—Front Cover

- Use three 5/16-18 bolts 100-125 mm (4-5-inches) long, threaded into the camshaft's tapped holes, to handle the camshaft.
- Take care to avoid damaging the camshaft bearings.
- Remove the three bolts after installation.
- 2. Timing chain to the camshaft sprocket.
- 3. Camshaft sprocket and timing chain to the engine.

Important 1

- Align the timing marks on the camshaft sprocket and crankshaft sprocket (figure 59).
- 4. Camshaft sprocket bolts. Use the bolts to draw the camshaft sprocket onto the camshaft. DO NOT ATTEMPT TO HAMMER THE CAMSHAFT SPROCKET ONTO THE CAMSHAFT TO DO SO MAY DISLODGE THE REAR CAMSHAFT PLUG.

된 Tighten

- Camshaft sprocket bolts to specifications.
 - 5.0 L and 5.7 L engines: 28 N m (21 ft. Ibs.).
 - 7.4 L engines: 26 N m (20 ft. lbs.).

Measure

 Timing chain free play. The free play should not exceed 16 mm (⁵/₈-inch).

FRONT COVER INSTALLATION

→← Install or Connect (Figure 60)

- Lubricate the lips of the front seal crankshaft oil with engine oil.
- 1. Gasket (90).
- 2. Front cover (91).
- 3. Timing tab (92) (7.4 L engines).
- 4. Bolts (93)

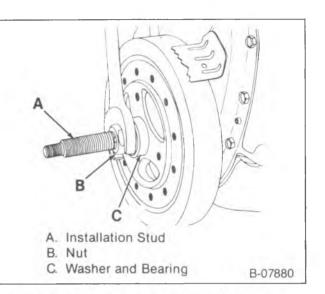


Figure 61—Installing the Torsional Damper

친 Tighten

- · Bolts (93) to specifications:
 - 5.0 L and 5.7 L engines: 10.8 N m (96 in. lbs.).
 - 7.4 L engines: 11.3 N-m (100 in. lbs.).

TORSIONAL DAMPER INSTALLATION

Install or Connect (Figure 61)

Tools Required: J 23523-E Torsional Damper Puller

- and Installer
- 1. Crankshaft key.

NOTICE: The inertia weight section of the torsional damper is assembled to the hub with a rubber type material. The correct installation procedures (with the proper tool) must be followed or movement of the inertia weight section of the hub will destroy the tuning of the torsional damper.

- 2. Stud (item A, figure 61) to the crankshaft. Thread the stud fully into the tapped hole in the crankshaft.
- Torsional damper over the end of the stud. Align the keyway in the torsional damper shaft with the crankshaft key.
- 4. Bearing, washer and nut (figure 61).
 - Turn the nut to pull the vibration damper into place.
 - · Remove the tool.
 - Use a small amount of RTV sealant to seal the keyway to crankshaft joint.
- 5. Torsional damper bolt and washer.

री Tighten

- Bolt to specifications.
 - 5.0 L and 5.7 L engines: 95 N·m (70 ft. lbs.).
 - 7.4 L engines: 115 N/m (85 ft. lbs.).

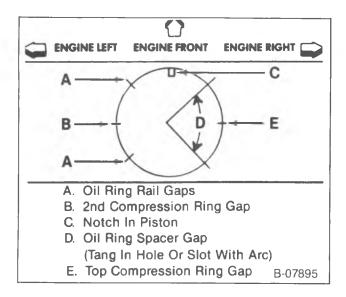


Figure 62—Piston Ring End Gap Location (5.0L and 5.7L Engines)

PISTON AND CONNECTING ROD INSTALLATION

CONNECTING ROD BEARING SELECTION

Connecting rod bearings are of the precision insert type and do not use shims for adjustment. DO NOT FILE RODS OR ROD CAPS. If clearances are excessive install a new bearing. Service bearings are available in standard size and 0.001-inch and 0.002-inch undersize for use with new and used standard size crankshafts, and in 0.010-inch and 0.020-inch undersize for use with reconditioned crankshafts.

On production 5.0 L and 5.7 L engines, it is possible to find an 0.010-inch undersize bearing. These are used in manufacturing for selective fitting.

Selective fitting of both rod and main bearing inserts is necessary to obtain close tolerances. For this reason you may use, for example, one half of a standard insert with one half of a 0.001-inch undersize insert which will decrease the clearance 0.0005-inch from using a full standard bearing.

INSTALLATION

Install or Connect (Figures 62 through 65)

Tools Required:

- J 5239 Connecting Rod Guide Set
- J 8037 Ring Compressor
- Lubricate the cylinder walls lightly with engine oil.
- Make sure the piston is installed in the matching cylinder.
- 1. Connecting rod bearing inserts.
 - Be certain that the inserts are of the proper size.
 - Install the inserts in the connecting rod and connecting rod cap.
- 2. Piston and connecting rod to the proper bore.
 - With the connecting rod cap removed, install J 5239 onto the connecting rod studs.

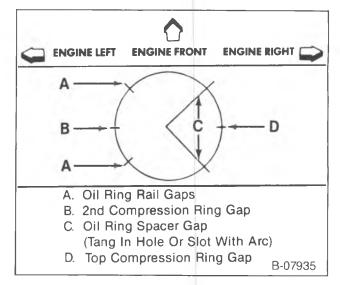


Figure 63—Piston Ring End Gap Location (7.4L Engines)

- Locate the piston ring end gaps as shown in figure 62 (5.0 L and 5.7 L engines) or figure 63 (7.4 L engines).
- Lubricate the piston and rings with engine oil.
- Without disturbing the ring end gap location, install J 8037 over the piston (figure 64).
- Use a hammer handle to tap the piston down into its matching bore.

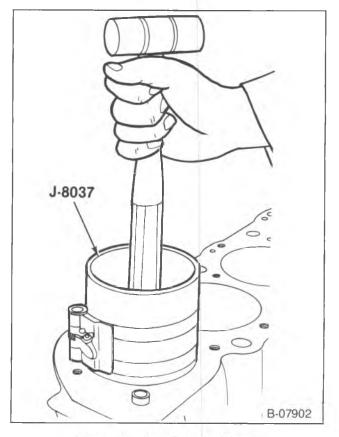


Figure 64—Installing the Piston

6A5-32 V8 ENGINE

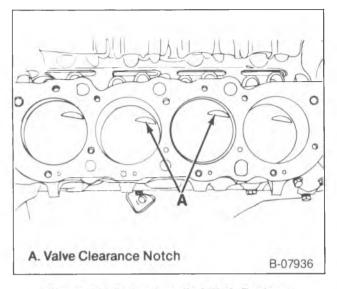


Figure 65—Piston Installed (7.4L Engines)

- On 5.0 L and 5.7 L engines, the notch in the piston crown (figure 62) must face the front of the engine.
- On 7.4 L engines, the valve clearance notches must face the top of the block (figure 65).
- While tapping the piston into its bore, guide the connecting rod into position on the crankpin, using J 5239. Hold the ring compressor against the block until all rings have entered the cylinder bore.

Important

- Each connecting rod and bearing cap should be marked, beginning at the front of the engine. Cylinder 1, 3, 5 and 7 are the left bank and 2, 4, 6, and 8 are the right bank. The numbers on the connecting rod and bearing cap must be on the same side when installed in the cylinder bore. If a connecting rod is ever transposed from one block or cylinder to another, new connecting rod bearings should be fitted and the connecting rod should be numbered to correspond with the new cylinder number.
- 3. Connecting rod cap with bearing insert.

1 Measure

 Connecting rod bearing clearance. Refer to GENERAL ENGINE MECHANICAL (SEC.
 6A). Then apply engine oil to the connecting rod bearing.

국 Tighten

- · Connecting rod cap nuts to specifications.
 - 5.0 L and 5.7 L engines: 60 N m (45 ft. lbs.).
 - 7.0 L engines: 66 N m (48 ft. lbs.).

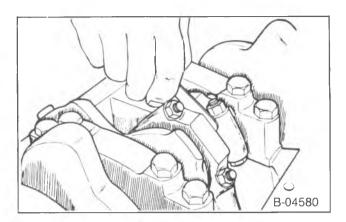


Figure 66—Measuring Connecting Rod Side Clearance

Measure (Figure 66)

- Connecting rod side clearance. Use a feeler gage between the connecting rods (figure 66). The proper clearance is as follows:
 - 5.0 L and 5.7 L engines: 0.006–0.014-inch.
 - 7.4 L engines: 0.013–0.023-inch.

OIL PUMP INSTALLATION

Install or Connect

- 1. Oil pump with connector and oil pump driveshaft.
- 2. Oil pump to main bearing cap bolt.

[) Tighten

• Bolt to 90 N m (65 ft. lbs.).

OIL PAN INSTALLATION

5.0 L AND 5.7 L ENGINES

Install or Connect (Figure 67)

- Apply PST sealer (GM part no. 1052080 or equivalent) to the front cover to block joint and rear crankshaft seal retainer to block joint as shown in figure 67.
- Oil pan gasket to the oil pan.
- 2. Oil pan to the engine.
- 3. Oil pan bolts, nuts, and reinforcements.

री Tighten

- Oil pan bolts to 11.3 N·m (100 in. lbs.).
- Oil pan nuts to 22.6 N·m (200 in. lbs.).

7.4 L ENGINES

Install or Connect (Figure 68)

- 1. Gaskets (74) to the block. Retain with gasket cement.
- 2. Rear oil pan seal (76) to the rear main bearing cap. The ends of the seal should mate against the gaskets (74).
- 3. Front oil pan seal (78) to the front cover. The ends of the seal should mate against the gaskets (74).

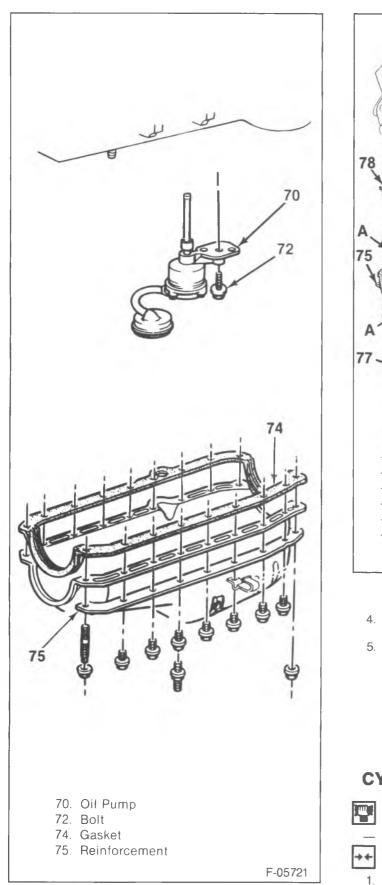


Figure 67—Oil Pan (5.0L and 5.7L Engines)

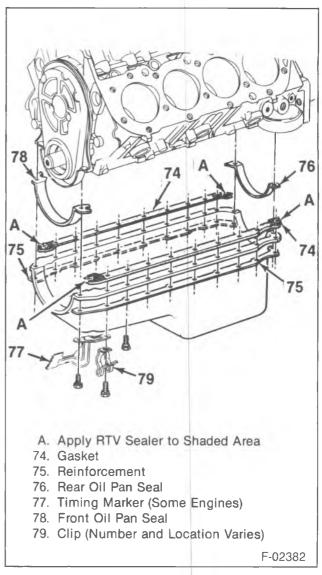


Figure 68—Oil Pan (7.4L Engines)

- 4. Oil pan. Make sure the gasket and seals stay in place.
- 5. Clips (79), reinforcements (75) and bolts.

၃ Tighten

- Bolts to specifications:
 - Oil pan to block bolts: 18.1 N m (160 in. lbs.).
 - Oil pan to front cover bolts: 7.9 N·m (70 in. lbs.).

CYLINDER HEAD INSTALLATION

Clean

Gasket surfaces on block and cylinder head.

Install or Connect (Figures 69, 70, and 71)

- 1. Head gasket.
 - On engines using a STEEL gasket, coat both sides of the new gasket with a good sealer. Spread the sealer thin and even. One method

6A5-34 V8 ENGINE

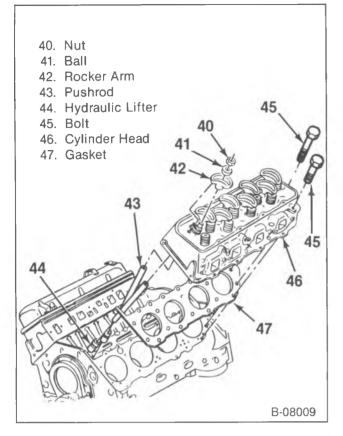


Figure 69—Cylinder Head and Components

of applying the sealer that will assure the proper coat is with the use of a paint roller. Too much sealer may hold the gasket away from the head or block.

- Use no sealer on engines using a composition STEEL ASBESTOS gasket.
- Place the gasket in position over the dowel pins with the bead up.
- 2. Cylinder head. Carefully guide the cylinder head into place over the dowel pins and head gaskets.
- 3. Cylinder head bolts. Coat the threads of the bolts with sealing compound (Loctite #592 or equivalent) and install finger tight.

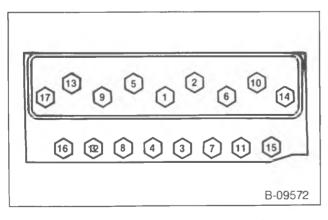


Figure 70—Cylinder Head Bolt Tightening Sequence (5.0L and 5.7L Engines)

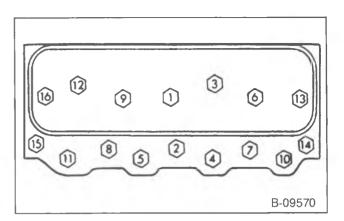


Figure 71—Cylinder Head Bolt Tightening Sequence (7.4L Engines)

၃ Tighten

- Bolts a little at a time using the sequence shown in figures 70 or 71 until the proper torque is reached:
 - 5.7 L engines: 90 N m (65 ft. lbs.).
 - 7.4 L engines: 110 N m (80 ft. lbs.).

VALVE TRAIN COMPONENT INSTALLATION

Important

Replace all hydraulic lifters if a new camshaft was installed.

→+ Install or Connect (Figure 69)

- Lubricate the hydraulic lifter bodies and feet with Engine Oil Supplement (GM part no. 1051396 or equivalent).
- 1. Hydraulic lifters (44) to the block.
- 2. Pushrods (43). Seat the pushrods into the socket in the hydraulic lifters.
- Coat the mating surfaces of the rocker arms (42) and balls (41) with "Moly Kote" or equivalent.
- 3. Rocker arms.
- 4. Balls.
- 5. Nuts (40).

VALVE ADJUSTMENT

- 1. Remove the rocker arm covers.
- 2. Crank the engine until the mark on the torsional damper lines up with the center or "0" mark on the timing tab (figure 72). The engine must be in the number one firing position. This may be determined by placing fingers on the number one cylinder's valves as the mark on the damper comes near the "0" mark on the crankcase front cover. If the valves are not moving, the engine is in the number one firing position. If the valves move as the mark comes up to the timing tab, the engine is in the number six firing position and should be turned over one more time to reach the number one position.

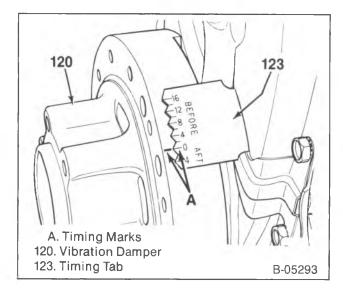


Figure 72—Timing Mark

- With the engine in the number one firing position as determined above, the following valves may be adjusted:
 - Exhaust 1, 3, 4, 8
 - Intake 1, 2, 5, 7

(Even numbered cylinders are in the right bank; odd numbered cylinders are in the left bank, when viewed from the rear of the engine.)

- 4. Back out the adjusting nut until lash is felt at the pushrod then turn in the adjusting nut until all lash is removed. This can be determined by rotating the pushrod while turning the adjusting nut (figure 73). When the play has been removed, turn the adjusting nut in as follows:
 - 5.0 L and 5.7 L engines: One full turn.
 - 7.4 L engines: 3/4 turn.
- 5. Crank the engine one revolution until the pointer "0" mark and torsional damper mark are again in alignment. This is the number six firing position. With the engine in this position the following valves may be adjusted:
 - Exhaust 2, 5, 6, 7
 - Intake 3, 4, 6, 8

INTAKE MANIFOLD INSTALLATION

5.0 L AND 5.7 L ENGINES

Install or Connect (Figures 74 and 75)

- 1. Gaskets to the cylinder heads.
 - On TBI engines, make sure the tab and/or arrow faces the front of the engine. The side stamped "This Side Down" must face the cylinder head.
- 2. RTV sealant to the front and rear intake manifold sealing surfaces on the block as follows:
 - Refer to figure 74.

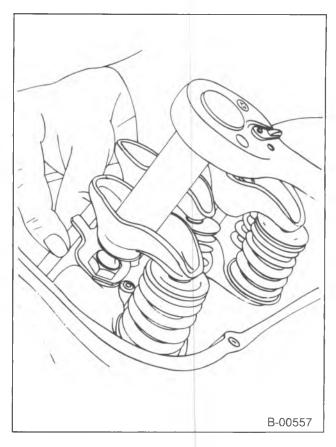


Figure 73—Adjusting the Valves

- Apply a 5 mm (³/₁₆-inch) bead of RTV sealer (part number 1052289 or equivalent) on the front and rear of the block. Extend the bead 13 mm (¹/₂-inch) up each cylinder head to seal and retain the gaskets.
- 3. Intake manifold to the engine.
- 4. Intake manifold bolts.
 - री Tighten
 - Bolts to 48 N m (35 ft. lbs.). Use the tightening sequence shown in figure 75.

7.4 L ENGINES

Install or Connect (Figures 76 and 77)

- 1. Gaskets (22) to the cylinder heads.
- 2. Seals (23) to the block.
- 3. Intake manifold (21).
- 4. Bolts (20).

री Tighten

 Bolts (20) to 40 N m (30 ft. lbs.). Use the tightening sequence shown in figure 77.

6A5-36 V8 ENGINE

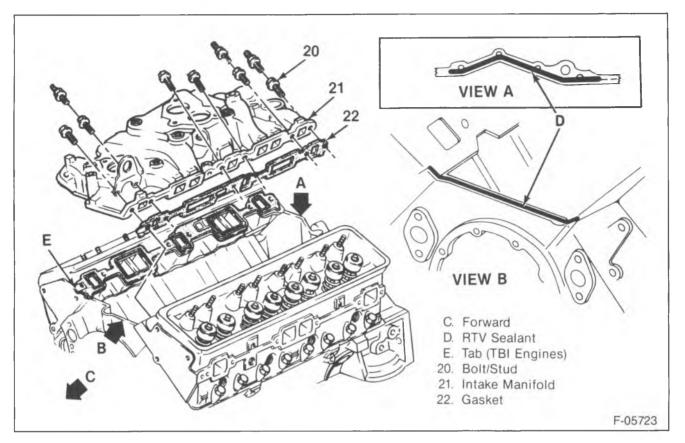


Figure 74—Intake Manifold (5.0L and 5.7L Engines)

ROCKER ARM COVER INSTALLATION

EXHAUST MANIFOLD INSTALLATION

5.0L AND 5.7L TBI ENGINES

→← Install or Connect (Figure 78)

- 1. Gaskets (34).
- 2. Rocker arem covers (32).
- 3. Bolts (36) and washers (37).

री Tighten

• Bolts to 10.2 N m (90 in. lbs.)

ALL OTHERS

++ Install or Connect (Figure 79)

- 1. Gaskets (34).
- 2. Rocker arm covers (32).
- 3. Reinforcements (31) and clips.
- 4. Nuts (30).



- Nuts (30) to specification:
 - 5.0 L and 5.7 L engines: 7.3 N m (65 in. lbs.).
 - 7.4 L engines: 13.0 N m (115 in. lbs.).

INSTALLATION

- Install or Connect (Figures 80 and 81)
 - 1. Exhaust manifold (1).
 - 2. Spark plug wire heat shields (if used).
 - 3. Washers (2), tab washers (3) (5.0 L and 5.7 L engines) and bolts or studs (4).

2 Tighten

- · Bolts or studs to specifications:
 - 5.0 L and 5.7 L engines with cast iron manifolds:
 - Two center bolts: 36 N·m (26 ft. lbs.).
 - Outside bolts: 28 N m (20 ft. lbs.).
 - Bend the tab washers against the bolt heads.
 - 5.0 L and 5.7 L engines with stainless steel manifolds: 36 N m (26 ft. lbs.).
 - 7.4 L engines: 54 N m (40 ft. lbs.).

WATER PUMP INSTALLATION

- →+ Install or Connect (Figure 82)
 - 1. Gaskets (11).
 - 2. Water pump (10).
 - 3. Bolts (12).
 - री Tighten

Bolts (12) to 40 N-m (30 ft. lbs.).

ENGINE ACCESSORY INSTALLATION

Install the engine accessories (distributor, carburetor, oil filter, generator, etc.) as directed in the proper Truck Service Manual. Connect all vacuum hoses and electrical equipment the same way as removed.

ENGINE SETUP AND TESTING

- 1. After overhaul, the engine should be tested before installation in the vehicle. If a suitable test stand is not available, the following procedure can be used after the engine is installed in the vehicle.
- 2. Fill the crankcase with the proper quantity and grade of oil.

? Important

- If a new camshaft or hydraulic lifters were installed, add Engine Oil Supplement (GM part no. 1051396) or equivalent to the engine oil.
- 3. Fill the coolant system with the proper coolant.
- 4. With the ignition "OFF," or disconnected, crank the engine several times. Listen for any unusual noises or evidence that any parts are binding.
- 5 Start the engine and listen for unusual noses.
- Run the engine at about 1000 until the engine is at operating temperature.
- 7. Listen for improperly adjusted valves or sticking lifters, and other unusual noises.
- 8. Check for oil and coolant leaks while the engine is running.
- Using the proper Truck Service Manual or Emission Control Label for specifications, adjust the ignition timing, idle and mixture, and governor settings, if so equipped.

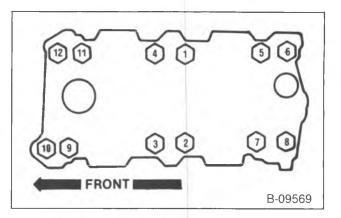


Figure 75—Intake Manifold Bolt Tightening Sequence (5.0L and 5.7L Engines)

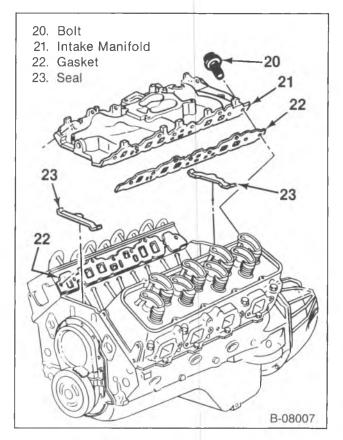


Figure 76—Intake Manifold (7.4L Engines)

6A5-38 V8 ENGINE

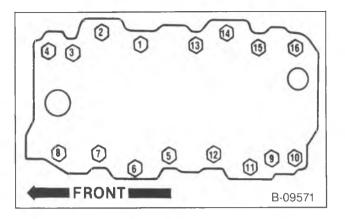


Figure 77—Intake Manifold Bolt Tightening Sequence (7.4L Engines)


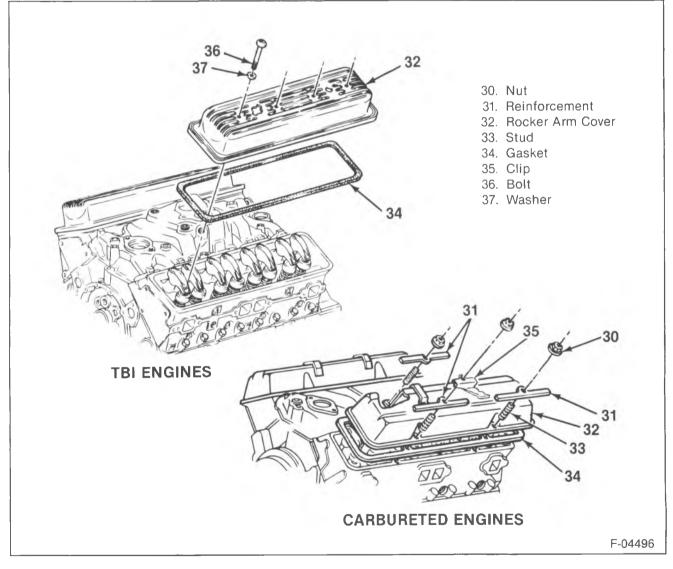


Figure 78—Rocker Arm Cover Installation (5.0L and 5.7L Engines)

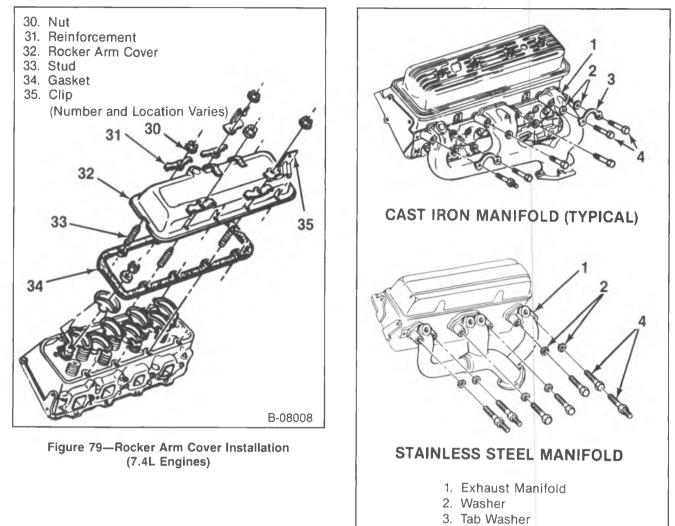

4. Bolt/Stud

F-04502

Figure 80—Exhaust Manifold (5.0L and 5.7L Engines)

6A5-40 V8 ENGINE

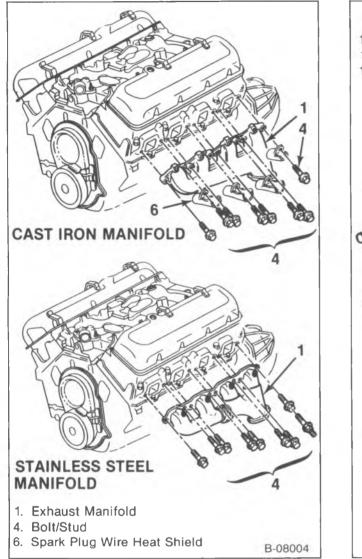


Figure 81—Exhaust Manifold (7.4L Engines)

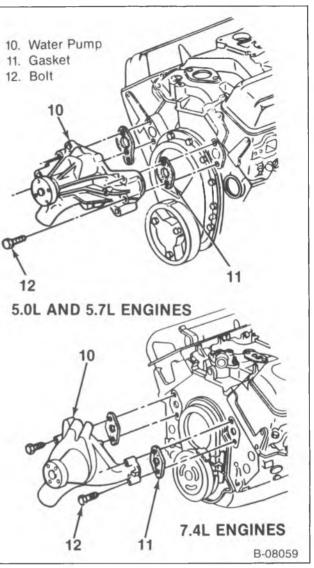


Figure 82—Water Pumps and Components

SPECIFICATIONS

ENGINE SPECIFICATIONS (5.0 L/5.7 L)

All Specifications are in INCHES unless otherwise noted.

GEN	IERAL D	ATA:				<u> </u>			
Туре					V8		**************************************		
Displacement			5.0L (305 Cu. In.)	5.7	.7L (350 Cu. In.)				
RPC) (VIN Co	de)				L03 (H)	L05	(K)	LT9 (M)
Bore)					3.736		4.00	
Stro	ke						480		
Com	pression	Ratic)			9.3:1			8.2:1
Firin	g Order					1 - 8 - 4 - 3	- 6 - 5 -	7 - 2	
Oil F	ressure					6 PSI min. @ 1000 RPM	: 18 PSI	min @	2000 RPM
CYL	INDER B	ORE:							
Diar	neter					3.7350-3.7385	3.	9995-4.	0025
С	ut Of	Proc	duction			0.001 (1	laximur	n)	
R	ound	Serv	vice			0.002 (1	Aaximur	n)	
	_		Production	Thrust Side		0.0005 (0.0005 (Maximum)		
٦	aper			Relief Side		0.001 (1	laximun	n)	
		Serv	vice			0.001 (M	/laximun	n)	
PIS	ron:								
Clearance Prod		Production			0.0007-0.0017				
Service Limit			0.0027 (Maximum)						
	ON RIN	G:	T		· · · · ·				
C O			Production Top 2nd		Тор				
м	Groo	ve			and	0.0012-0.0032			
Ρ	Cleara	nce			2110				
R E			Service Limit			Hi Limit Production + 0.001			
S					Тор	0.010)-0.020		
S I	Gap		Gap Production		2nd	0.010)-0.025		
O N			Service Limit		Hi Limit Proc	luction -	+ 0.01 0		
	Groo	ve	Production			0.002-0.007			
0	Cleara	nce	Service Limit			Hi Limit Production + 0.001			
	Gap		Production		0.015-0.055				
Service Limit		Hi Produc	tion +0	.010					
	ON PIN								
	neter		<u> _ `` = </u>				9-0.9271		
Clearance Production		0.0002-0.0007							
In Piston Service Limit			0.001 (Maximum)						
Fit In Rod			0.0008-0.0016 Interference						

*8.6:1 (Over 8500-Ib. GVW) 9.3:1 (Under 8500-Ib. GVW)

F-05724

6A5-42 V8 ENGINE

the second se

NODI AOCHE	INT		E OL (205 Out 1=)	E 71 (050 0 1-)	
SPLACEME			5.0L (305 Cu. In.)	5.7L (350 Cu. In.)	
MANKSHAF	1.	#1	2.4484	2 4403	
	Diameter	#2, #3, #4	2.4481-		
	Diameter	#5	2.4479		
Main		Production	0.0002 (N		
Journal	Taper	Service Limit	0.001 (M		
obarriar	Out Of	Production	0.0002 (N		
	Round	Service Limit	0.001 (M		
		#1	0.0008		
	Production	#2, #3, #4	0.0011-		
Main		#5	0.0017-		
Bearing		#1	0.0010		
Clearance	Service Limit	#2, #3, #4	0.0010-	0.0025	
		#5	0.0025		
rankshaft Er	nd Play	· · · · · · · · · · · · · · · · · · ·	0.002		
		Diameter	· · · · · · · · · · · · · · · · · · ·	-2.0998	
	Tene-	Production	0.0005 (N	faximum)	
Crankpin	Taper	Service Limit	0.001 (M	aximum)	
e l	Out	Production		0.0005 (Maximum)	
	Round	Service Limit	0.001 (M		
od Bearing	l	Production	0.0013	0.0035	
Clearance	S	ervice Limit	0.003 (M	aximum)	
od Side Clea	arance		0.006	-0.014	
AMSHAFT:					
Lobe		Intake	0.2336	0.2565	
.ift ± 0.002		Exhaust	0.2565	0.2690	
ournal Diam	eter		1.8682	-1.8692	
amshaft End	l Play		0.004	-0.012	
ALVE SYST	EM:	·			
ifter		·		aulic	
locker Arm F	latio	1	1.5	0:1	
alve Lash		Intake Exhaust		From Zero Lash	
	ntake & Exhaust)			5°	
	take & Exhaust)			5°	
eat Runout (Intake & Exhaus			laximum)	
eat Width		Intake		-1/16	
		Exhaust		-3/32	
0.	Production	Intake		-0.0027	
Stem		Exhaust		-0.0027	
Clearance	Service	Intake		duction + 0.001	
	Ence La M	Exhaust		duction + 0.002	
Mat	Free Length	Closed		03	
Valve	Pressure	Closed		. @ 1.70"	
Spring	lbs. @ in.	Open	194-206 lb	s. @ 1.25"	
(Outer)	Ins	talled Height ± 1/32"	12	3/32	
Valve	F	ree Length	1	86	
Spring Approx. # of Coils		4			

And a second second

SPECIFICATIONS

ENGINE SPECIFICATIONS (7.4 L)

All Specifications are in INCHES unless otherwise noted.

GEN	IERAL D	ATA:					
Туре			V8				
Displacement			7.4L (454 Cu. In.)				
RPC)					L19, LE8	
Bore)					4.25	
Stro	ke					4.00	
Com	pression	Ratio		_		7.9:1	
Firin	g Order					1 - 8 - 4 - 3 - 6 - 5 - 7	- 2
Oil F	Pressure					10 psi @ 500 RPM Minimum; 40-60	psi @ 2000 RPM
CYL	INDER B	ORE:					
Dian	neter					4.2495-4.2525	
0	ut Of	Proc	luction			0.001 (Maximum)	
R	ound	Serv	vice			0.002 (Maximum)	
_	_	F	Production	Thrust Side		0.0005 (Maximum)	
T	aper			Relief Side		0.001 (Maximum)	
		Serv	rice			0.001 (Maximum)	
PIST	ION:	1					
Clearance Producti					0.003-0.004		
		1	vice Limit			0.005 (Maximum)	
		G:			1		
C O	0	_	Production		Тор	0.0017-0.0032	
M	Groo				2nd	0.0017-0.0032	
R E	0.0drd		Service Limit		_	Hi Limit Production +0	.001
S			Production		Тор	0.010-0.018	
1	Gap		FIODUCTION		2nd	0.016-0.024	
O N			Service Limit	imit		Hi Limit Production + 0	0.010
~	Groo	ve	Production			0.0050-0.0065	
0	Cleara	ince	Service Limit	ł		Hi Limit Production + 0	1.001
L	Ga	D	Production			0.015-0.055	
-		1	Service Limit			Hi Limit Production +	0.010
	TON PIN						
	neter					0.9895-0.9898	
Clearance Production			0.00025-0.00035				
In Piston Service Limit		0.001 (Maximum)					
Fit I	n Rod					0.0013-0.0021 Interferen	nce

F-05725

6A5-44 V8 ENGINE

SPECIFICATIONS

ENGINE SPECIFICATIONS (7.4 L) (Cont.)

All specifications are in INCHES unless otherwise noted.

DISPLACEMENT			7.4L		
CRANKSHAF	T:				
	Diameter	#1, #2, #3, #4	2.7481-2.7490		
	Diameter	#5	2.7476-2.7486		
Main	Tapar	Production	0.0002 (Maximum)		
Journal	Taper	Service Limit	0.001 (Maximum)		
	Out Of	Production	0.0002 (Maximum)		
	Round	Service Limit	0.001 (Maximum)		
Main	Production	#1,#2, #3, #4	0.0013-0.0025		
Bearing	FIDUUCIUM	#5	0.0024-0.0040		
Clearance	Service Limit	#1, #2, #3, #4	0.0010-0.0025		
	Service Limit	#5	0.0025-0.0035		
Crankshaft Er	nd Play		0.006-0.010		
		Diameter	2.1990-2.200		
l	Tanar	Production	0.0005		
Crankpin	Taper	Service Limit	0.001		
	Out	Production	0.0005		
	Round	Service Limit	0.001		
Rod Bearing		Production	0.0009-0.0025		
Clearance	S	ervice Limit	0.003 (Maximum)		
Rod Side Clearance			0.0013-0.023		
CAMSHAFT:					
Lobe		Intake	0.2343		
Lift ± 0.002		Exhaust	0.2530		
Journal Diameter			1.9482-1.9492		
VALVE SYST	EM:	L. L			
Lifter			Hydraulic		
Rocker Arm F	Ratio		1.70:1		
Valve Lash		Intake	3/4 Turn Down From Zero Lash		
Valve Lasii		Exhaust			
Face Angle (I	ntake & Exhaust)		45°		
Seat Angle (Ir	ntake & Exhaust)		46°		
Seat Runout	(Intake & Exhaus	it)	0.002 (Maximum)		
Seat Width		Intake	1/32-1/16		
Seat Width		Exhaust	1/16-3/32		
	Production	Intake	0.0010-0.0027		
Stem	rioduction	Exhaust	0.0012-0.0029		
Clearance	Service	Intake	High Limit Production + 0.001		
		Exhaust	High Limit Production + 0.002		
	Free Length		2.12		
	Pressure	Closed	74-86 lbs. @ 1.80 in.		
Valve	lbs. @ in.	Open	195-215 lbs. @ 1.40 in.		
Spring	Installed Height ± 1/32"		151/64		
	Valve Spring Fi		0.042-0.094 Interference		

F-04506

SPECIFICATIONS (CONT.)

TORQUE SPECIFICATIONS (5.0 L AND 5.7 L ENGINES)


Item	N·m	Ft. Lbs.	In. Lbs.
Rocker Arm Cover Nuts (Carbureted Engines).	7.3		65
Rocker Arm Cover Bolt (TBI Engines)	10.2	_	90
Intake Manifold Bolts	48	35	_
Exhaust Manifold Bolts			
Cast Manifolds:		00	
Two Center Bolts	36	26	_
All Others	28	20	_
Tubular (Stainless Steel) Manifolds (All Bolts)	36	26	_
Cylinder Head Bolts.	90	65	_
Torsional Damper Bolt	95	70	
Front Cover Bolts	11.3	_	100
Oil Pan Nuts at Corners	22.6	-	200
Oil Pan Bolts	11.3	_	100
Oil Pump Bolt	90	65	
Oil Pan Baffle Nuts (Some 5.7 L Engines)	36	26	
Rear Crankshaft Oil Seal Retainer Screws and Nuts.	15.3	—	135
Camshaft Sprocket Bolts	28	21	—
Connecting Rod Cap Nuts	60	45	—
Oil Filter Bypass Valve Bolts	26	20	_
Outer Bolts on #2, #3, and #4 Caps	95	70	
All Others	110	80	_
Oil Pump Cover Bolts	9.0		80
Flywheel Bolts	100	75	_
Spark Plugs	30	22	_
Water Outlet Bolts	28	21	_
Water Pump Bolts	40	30	
Flywheel Housing Bolts	44	32	—
Oil Pan Drain Plug.	28	20	—
Block Drain Plug	12.7		112
Rocker Arm Cover Studs to Head (Carbureted Engines).	1.7	—	15

(7.4 L ENGINES)

It a m

Item	N·m	Ft. Lbs.	In. Lbs.
Rocker Arm Cover Nuts	13.0		115
Intake Manifold Bolts	40	30	_
Rocker Arm Studs	68	50	_
Exhaust Manifold Bolts	54	40	
Cylinder Head Bolts	110	80	_
Torsional Damper Bolts.	115	85	_
Front Cover to Block Bolts	10.8	—	96
Oil Pan to Front Cover Bolts	7.9	_	70
Oil Pan to Block Bolts.	18.1	—	160
Oil Pump Bolt	90	65	
Main Bearing Caps	150	110	_
Camshaft Sprocket Bolts	26	20	_
Connecting Rod Cap Nuts	66	48	_
Oil Filter Bypass Valve Bolts	26	20	
Flywheel Bolts	90	65	
Oil Pump Cover Bolts	9.0	_	80
Flywheel Housing Bolts	40	30	—
Water Pump Bolts	40	30	
Water Outlet Bolts	40	30	
Spark Plugs	30	22	_
Oil Pan Drain Plug	28	20	_
Block Drain Plug	12.7		112

6A5-46 V8 ENGINE

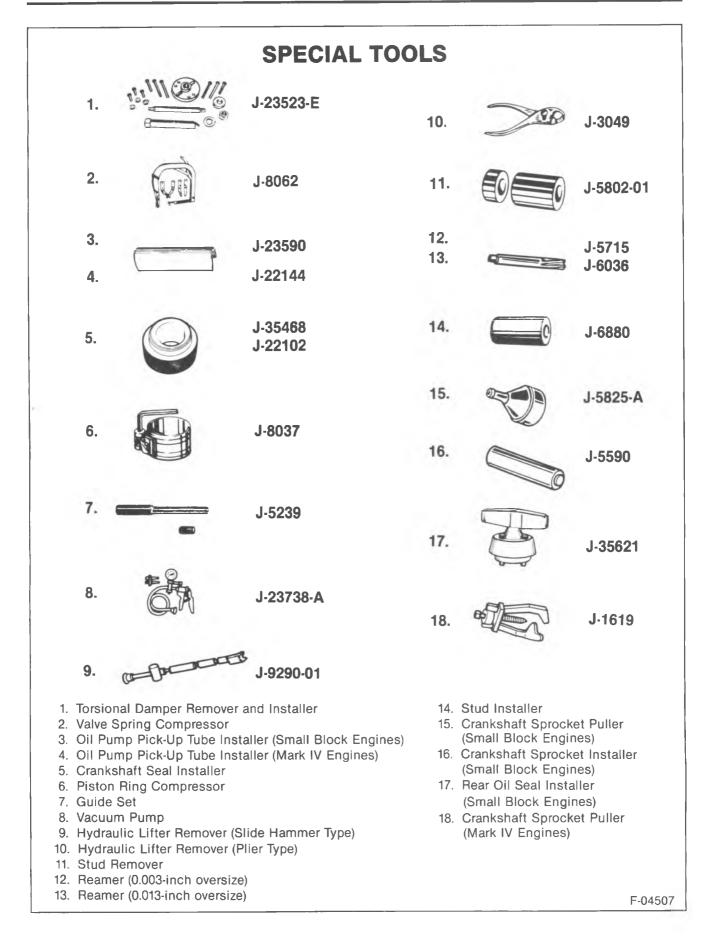

6A7-1

SECTION 6A7 6.2 LITER DIESEL CONTENTS

SUBJECT

PAGE

Description	 .6A7- 2
Engine Lubrication	 .6A7- 2
Disassembly	 .6A7- 3
Tools and Shop Equipment	 .6A7- 3
Accessory Removal	
Cleaning	 .6A7- 4
Draining the Engine	
Vacuum Pump/Õil Pump Drive Removal	
Intake Manifold Removal	
Injection Line Removal	
Injection Nozzle Removal	
Glow Plug Removal	
Exhaust Manifold Removal	 .6A7- 5
Dipstick Tube Removal	
Water Crossover Removal	
Rocker Arm Cover Removal	
Rocker Arm and Pushrod Removal	 .6A7- 6
Cylinder Head Removal	.6A7- 7
Hydraulic Lifter Removal	
Water Pump Removal	
Torsional Damper Removal	
Injection Pump Removal	
Front Cover Removal.	
Timing Chain and Sprocket Removal	
Camshaft Removal.	.6A7- 9
Oil Pan Removal.	
Oil Pump Removal	
Piston and Connecting Rod Removal	
Flywheel Removal	
Crankshaft Removal.	
Cleaning, Inspection, and Repair	
Block	
Cylinder Bores	
Piston and Connecting Rod Assemblies	
Intake and Exhaust Manifolds	
Camshaft	
Camshaft Bearings	 .6A7-12
Timing Chain, Sprockets, and Timing Gears	 .6A7-14
Front Cover	 .6A7-14
Water Pump	
Oil Pan and Rocker Arm Covers	 .6A7-14
Oil Pump	 .6A7-14
Valve Train Components	 .6A7-15
Cylinder Head	 .6A7-15
Glow Plugs	 .6A7-17
Thermostat and Water Crossover	 .6A7-18
Injection Nozzles	 .6A7-18
Injection Lines	 .6A7-18
Injection Pump	
Crankshaft and Bearings	 .6A7-18
Flywheel	
Torsional Damper	 .6A7-20
Oil Filter Bypass Valve Replacement	 .6A7-20

6A7-2 6.2 LITER DIESEL

CONTENTS (CONTINUED)

SUBJECT

Assembly	
Crankshaft Installation.	
Flywheel Installation	
Connecting Rod and Piston Installation	6A7-22
Camshaft Installation	6A7-23
Timing Chain and Sprocket Installation	6A7-24
Front Cover Installation	6A7-24
Oil Pump Installation	6A7-25
Oil Pan Installation	6A7-26
Injection Pump Installation	6A7-26
Torsional Damper Installation	6A7-26
Water Pump Installation	6A7-27
Hydraulic Lifter Installation	6A7-27
Cylinder Head Installation	6A7-28
Pushrod and Rocker Arm Installation	6A7-29
Rocker Arm Cover Installation	6A7-29
Water Crossover Installation	6A7-30
Dipstick Tube Installation	6A7-30
Exhaust Manifold Installation	6A7-30
Glow Plug Installation	6A7-30
Injection Nozzle Installation	6A7-31
Injection Line Installation	6A7-31
Intake Manifold Installation	6A7-31
Oil Pump Drive or Vacuum Pump Installation	6A7-32
Engine Accessory Installation	6A7-32
Engine Set-Up and Testing	6A7-32
Specifications	6A7-36
Special Tools	6A7-39

DESCRIPTION

GM 6.2L diesel engines are 90 degree V8 type, naturally aspirated, with indirect type combustion chambers.

The crankshaft is supported by five precision insert main bearings, with crankshaft thrust taken at the number three (center) main bearing.

The camshaft is supported by five plain type bearings and is chain driven. Motion from the camshaft is transmitted to the overhead valves by roller type hydraulic lifters, pushrods, and shaft mounted rocker arms. The valve guides are integral in the cylinder head.

The connecting rods are forged steel, with precision insert type crankpin bearings. The piston pins are retained by snap ring retainers.

For engine identification information, refer to GENERAL INFORMATION (SEC. 0A).

ENGINE LUBRICATION

A lubrication schematic is shown in figure 1.

The gear type oil pump is driven from either the vacuum pump shaft or from a drive gear, depending on engine application. The vacuum pump or drive gear is driven by the camshaft. Oil is drawn into the pump through a pickup screen and pipe.

Pressurized oil is routed to the oil cooler, located in the radiator. A bypass valve is provided should the oil cooler become restricted. Oil flows from the cooler to a full flow oil filter. An oil filter bypass valve is provided should the oil filter become restricted.

Oil flows from the oil filter to the oil galleries, providing pressurized lubrication to various components.

The hydraulic valve lifters receive oil from the oil galleries. Oil flows from the hydraulic lifters through hollow pushrods to the rocker arms. Oil from the overhead drains back to the crankcase through oil drain holes.

The pistons, rings, piston rings, cylinder walls, and connecting rod small end bearings are lubricated by oil splash.

PAGE

6.2 LITER DIESEL 6A7-3

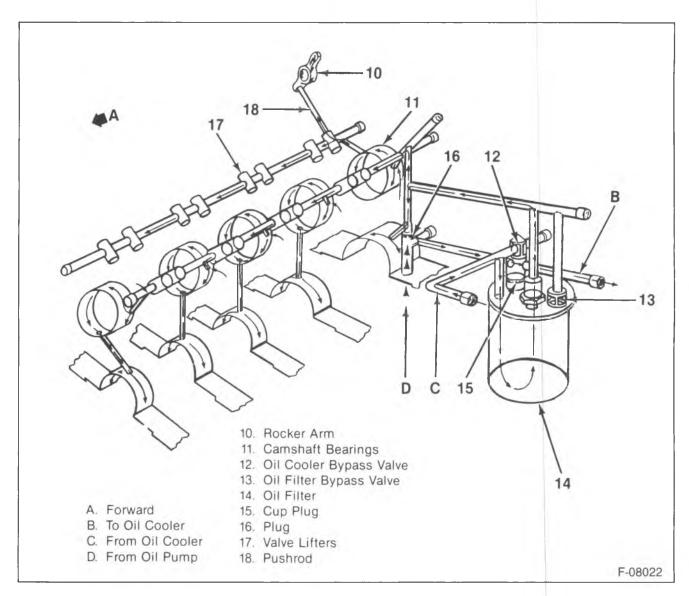


Figure 1—Lubrication Diagram

DISASSEMBLY

TOOLS AND SHOP EQUIPMENT

A clean, well lit work area should be available. Other necessary equipment includes: A suitable parts cleaning tank, compressed air supply, trays to keep parts and fasteners organized, and an adequate set of hand tools.

An approved engine repair stand will aid the work and help prevent personal injury or damage to engine components.

Special tools are illustrated throughout this section, and are listed at its end. These tools (or their equivalents) are specially designed to quickly and safely accomplish the operations for which they were intended. The use of these tools will also minimize possible damage to engine components.

Some precision measuring tools are required for inspection of certain components. Torque wrenches will be necessary for correct assembly of various parts.

ACCESSORY REMOVAL

This manual assumes that the engine accessories have been removed. These accessories may include one or more of the following:

Hydraulic Pump

Generator

Air Conditioning Compressor

Cooling Fan

Fuel Pump

CDR Valve, EGR Valve, and other emisssions equipment

It is beyond the scope of this section to detail the many different accessory installations. Refer to the proper Truck Service Manual for this information.

Diagrams of emission and vacuum hose routings, wiring harness routing, accessory drive belt layout, etc., should be made before removing accessories.

6A7-4 6.2 LITER DIESEL

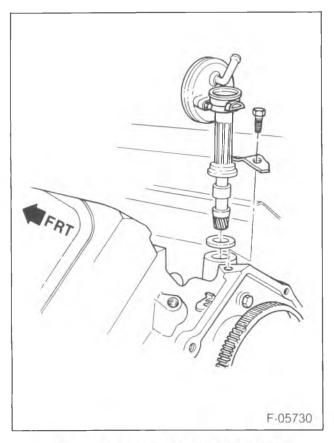


Figure 2—Vacuum Pump (R-V Models)

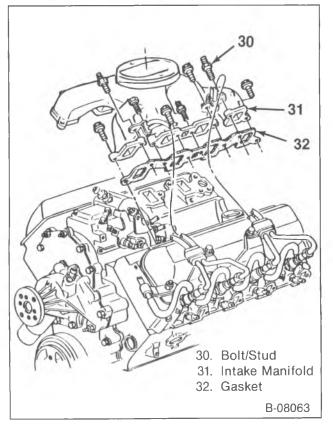


Figure 3—Intake Manifold

CLEANING

NOTICE: Clean the engine only when it is cold, never when it is warm or hot, and never when the engine is running. Spraying or pouring water or other fluids on your engine when it is warm or hot, or when it is running, can cause serious damage to the engine and its components.

Remove the engine accessories before cleaning to provide better access to engine exterior surfaces. Cover the openings with tape to prevent the entry of water, solvent, and dirt.

Methods used to clean the engine will depend on the aids which are available. Steam cleaning, pressure washing, or solvent cleaning are some acceptable methods. Allow the engine to dry before beginning the work.

It is important that the engine be as clean as possible to prevent dirt from entering critical areas during disassembly.

DRAINING THE ENGINE

Remove or Disconnect

- 1. Oil pan drain plug. Allow the oil pan to drain.
- 2. Oil filter.
- 3. Block drain plugs. Allow the coolant to drain.

→← Install or Connect

1. Oil pan drain plug.

री Tighten

- Oil pan drain plug to 10.0 N m (90 in. lbs.).
- 2. Block drain plugs.

၃ Tighten

Block drain plugs to 22 N·m (16 ft. lbs.).

VACUUM PUMP/OIL PUMP DRIVE REMOVAL

+-

Remove or Disconnect (Figure 2)

- 1. Hold down clamp and bolt.
- 2. Speed sensor wire.
- 3. Vacuum pump or oil pump drive. Pull out to remove.
- 4. Gasket.

6.2 LITER DIESEL 6A7-5

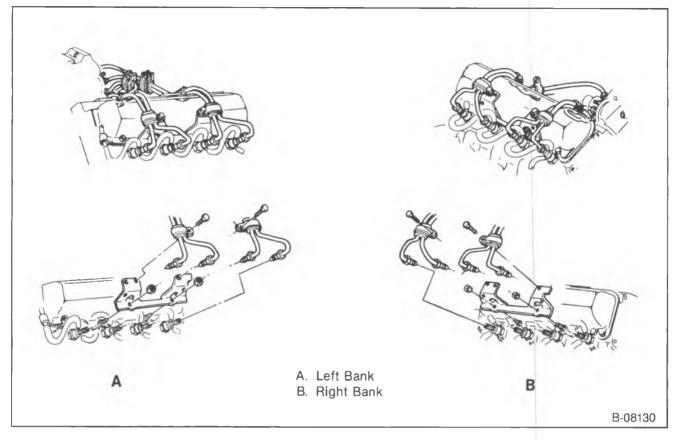


Figure 4—Injection Lines

INTAKE MANIFOLD REMOVAL

Remove or Disconnect (Figure 3)

- 1. Intake manifold bolts and fuel line clips.
- 2. Intake manifold.
- 3. Gaskets.

++

Install or Connect

Tool Required:

J 29664 Manifold Cover Set

J 29664-1 to the intake ports.

INJECTION LINE REMOVAL

Clean

 All injection line fittings at the nozzles and injection pump.

++ Remove or Disconnect (Figure 4)

- 1. Injection line clips at the brackets.
- 2. Injection lines at the nozzles.
 - Cap the lines and nozzles immediately.
 - Do not bend injection lines.
- 3. Injection lines at the pump.
 - · Cap the lines and pump fittings immediately.
 - Tag the lines for installation.
- 4. Injection line brackets.

INJECTION NOZZLE REMOVAL

Remove or Disconnect (Figure 5)

Tool Required:

J 29873, Nozzle Socket

- 1. Fuel line clip.
- 2. Fuel return hose.

NOTICE: When removing an injection nozzle, use J 29873. Remove the nozzle using the 30 mm hex portion. Failure to do so will result in damage to the injection nozzle.

- 3. Injection nozzle using J 29873. Store the nozzles in a clean place.
- 4. Gaskets.

GLOW PLUG REMOVAL



Remove or Disconnect

· Glow plugs. Use a suitable socket.

EXHAUST MANIFOLD REMOVAL

↔ Remove or Disconnect

- 1. Exhaust manifold bolts.
- 2. Exhaust manifolds.

6A7-6 6.2 LITER DIESEL

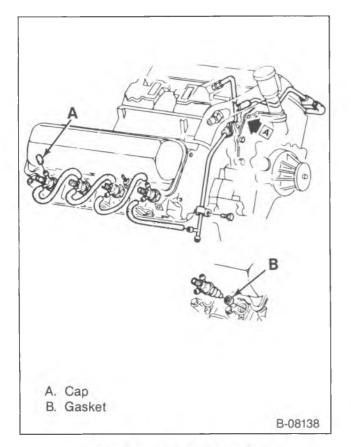


Figure 5—Injection Nozzles

DIPSTICK TUBE REMOVAL

Remove or Disconnect

- 1. Dipstick bracket bolt.
- 2. Dipstick tube. Pull out to remove.
- 2. O-ring from the dipstick tube.

WATER CROSSOVER REMOVAL

★→ Remove or Disconnect (Figure 6)

- 1. Glow plug inhibit switch wire.
- 2. Clamps (47).
- 3. Bolts or studs (44).
- 4. Water crossover (45).
- 5. Gaskets (46).
- 6. Hose (48).

ROCKER ARM COVER REMOVAL

Remove or Disconnect (Figure 7)

1. Bolts (58).

NOTICE: Do not pry on the rocker arm cover. Damage to sealing surfaces may result.

2. Rocker arm covers (57).

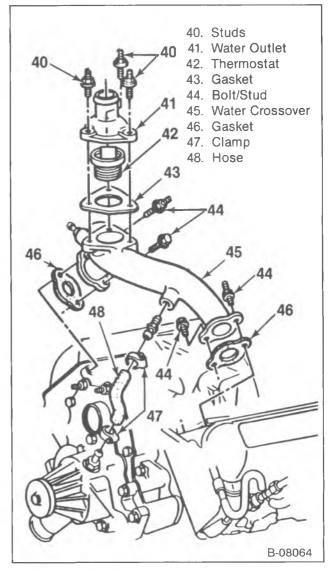


Figure 6—Thermostat and Water Crossover

ROCKER ARM AND PUSHROD REMOVAL



←→ Remove or Disconnect (Figure 7)

- 1. Bolts (54).
- 2. Rocker arm assemblies (55). Mark the assemblies so they can be returned to the original location at assembly.
- 3. Pushrods (18).



- The pushrods must be installed in the original direction at assembly. This is because the pushrods have a different degree of hardness at each end. A paint stripe identifies the upper end of the pushrod. If the paint stripe is not visible, mark the pushrods on the upper end as they are removed.
- Mark the pushrods so they can be installed in the same location at assembly.

6.2 LITER DIESEL 6A7-7


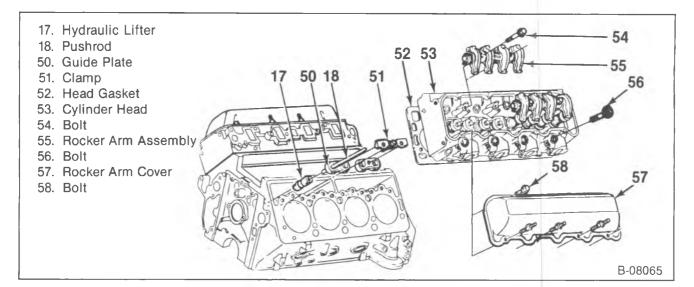


Figure 7—Cylinder Head and Components



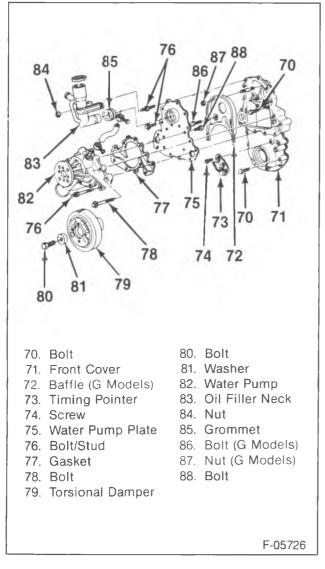

CYLINDER HEAD REMOVAL

Remove or Disconnect (Figure 7)

- 1. Fuel return line bolts.
- 2. Bolts (56).
- 3. Cylinder heads (53).
- 4. Head gaskets (52).

HYDRAULIC LIFTER REMOVAL

++ Remove or Disconnect (Figure 7)

- 1. Clamps (51).
- 2. Guide plates (50).
- 3. Hydraulic lifters (17). Place the lifters in an organizer rack. The lifters must be installed in the same bore from which they were removed.


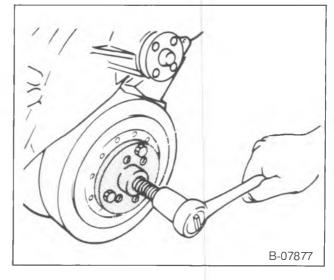


Figure 9—Removing the Torsional Damper (Typical)

6A7-8 6.2 LITER DIESEL



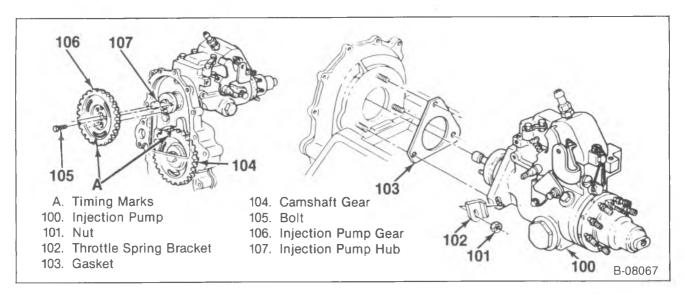

WATER PUMP REMOVAL

Remove or Disconnect (Figure 8)

- 1. Nuts (84).
- 2. Oil filler neck (83).
- 3. Bolts and studs (76).
- 4. Water pump (82) with water pump plate (75).
- 5. Bolts (88).
- 6. Water pump from the water pump plate.
- 7. Gasket (77).

TORSIONAL DAMPER REMOVAL

Remove or Disconnect (Figures 8 and 9)

Tool Required:

J 23523-E Torsional Damper Puller

- 1. Bolt (80) and washer (81).
- 2. Torsional damper (79). Use J 23523-E (figure 9).

INJECTION PUMP REMOVAL

Remove or Disconnect (Figure 10)

- Scribe a line across the injection pump flange and front cover.
- 1. Wires and hoses at the injection pump.
- 2. Bolts (105).
- 3. Injection pump gear (106).
- 4. Nuts (101), and throttle spring bracket (102).
- 5. Injection pump (100).
- 6. Gasket (103).

FRONT COVER REMOVAL

- Remove or Disconnect (Figure 8)
- 1. Oil pan to front cover bolts.
- 2. Bolts (86), nut (87) and baffle (72) (G models).
- 3. Bolts (70).
- 4. Front cover (71).

TIMING CHAIN AND SPROCKET REMOVAL

Measure

- Timing chain free play as follows:
 - 1. Mount a dial indicator to the front of the block.
 - Position the dial indicator so that the plunger contacts the timing chain between the two gears.
 - 3. Pull the chain outward (parallel to the front face of the block) the maximum amount with finger pressure on the inside of the chain.
 - 4. Set the dial indicator to zero.
 - 5. Move the chain inward (parallel to the front face of the block) the maximum amount with finger pressure on the outside of the chain.
 - 6. The total indicator travel can be noted. With used parts, the deflection must not exceed 20.3 mm (0.80 inch). If the deflection exceeds this limit, the sprockets and timing chain must be inspected for wear and replaced as necessary.

Remove or Disconnect (Figure 11)

- 1. Bolt (119) and washer (118).
- 2. Camshaft gear (104).
- 3. Camshaft sprocket (115) with timing chain (116).
- 4. Crankshaft sprocket (117).

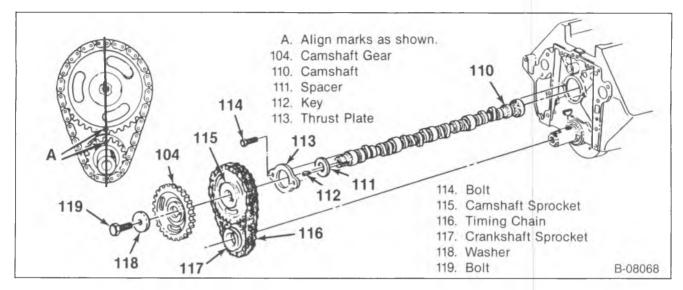


Figure 11—Camshaft and Components

CAMSHAFT REMOVAL

Remove or Disconnect (Figure 11)

- 1. Bolts (114) and thrust plate (113).
- 2. Camshaft (110).
 - · The fuel pump (lift pump) and pushrod must be removed to remove the camshaft.
 - · Pull the camshaft from the block carefully to avoid damage to the camshaft bearings.

OIL PAN REMOVAL

★→ Remove or Disconnect (Figure 12)

- 1. Bolts (133)
- 2. Oil Pan (134).
- 3. Oil pan rear seal (132).

OIL PUMP REMOVAL

*** * Remove or Disconnect (Figure 12)**

- 1. Bolt (131).
- 2. Oil pump (130).

PISTON AND CONNECTING ROD REMOVAL



- 1. Ridge or deposits from the upper end of the cylinder bores.
 - Turn the crankshaft until the piston is at BDC.
 - · Place a cloth on top of the piston.
 - · Perform the cutting operation with a ridge reamer (figure 13).
 - Turn the crankshaft until the piston is at TDC.
 - · Remove the cloth and cuttings.

- 2. Connecting rod cap. Check the connecting rod and cap for identification marks. Mark the parts if required. The connecting rod and cap must be kept together as mating parts.
- 3. Connecting rod and piston.
 - Attach two short pieces of 10 mm (3/8-inch) hose to the connecting rod bolts (figure 14). This will protect the crankshaft journal during removal.
 - · Push the connecting rod and piston out of the bore
 - · After removal, assemble the connecting rod and cap.

FLYWHEEL REMOVAL

+ + Remove or Disconnect (Figure 15)

- 1. Bolts (141).
- 2. Flywheel (140).

CRANKSHAFT REMOVAL

Remove or Disconnect (Figure 15)

- Check the main bearing caps for location markings. Mark the caps if necessary. The caps must be returned to their original locations during the engine assembly.
- 1. Bolts (146).
- 2. Main bearing caps (147).
- 3. Crankshaft (148). Lift the crankshaft straight up, taking care to avoid damage to the crankshaft journals and thrust flange suraces.
- 4. Rear crankshaft seal halves (142 and 145).
- 5. Main bearing inserts (143 and 144).

6A7-10 6.2 LITER DIESEL

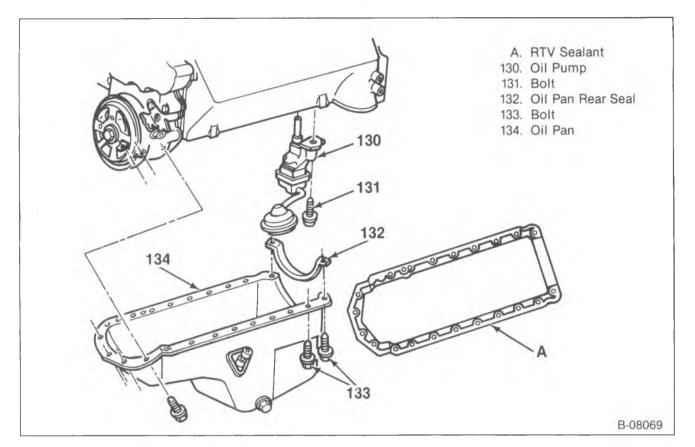


Figure 12—Oil Pan and Oil Pump

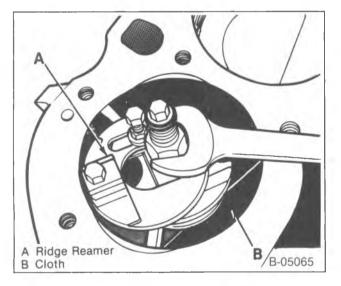


Figure 13—Removing the Cylinder Ridge

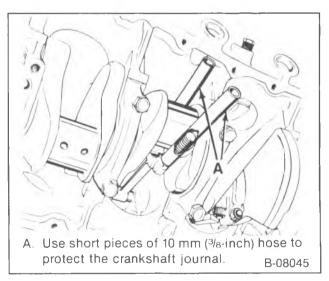


Figure 14—Removing the Piston and Connecting Rod

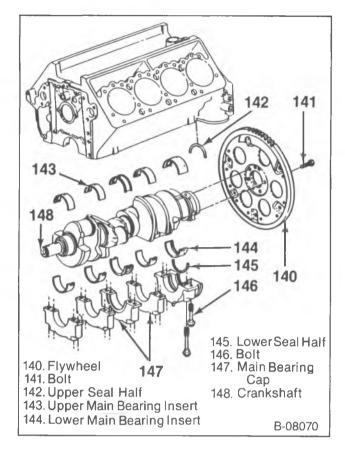


Figure 15—Crankshaft and Components

CLEANING, INSPECTION, AND REPAIR

A solvent tank, large enough to hold the larger engine parts, will be needed along with various bristle brushes and a gasket scraper. A source of compressed air will be helpful in the cleaning operations.

Precision measuring tools will be required for the inspection procedure. These include: micrometers, cylinder bore gage, feeler gages, dial indicator set, etc. The inspection work, performed with the proper method and tools, is most important. The rebuilt engine cannot be expected to perform properly if parts worn beyond acceptable limits are reused.

BLOCK

Clean

- 1. Block in solvent.
- 2. Block gasket surfaces.
- 3. Cylinder bores.
- 4. Oil galleries and passages.
- 5. Scale deposits from the coolant passages.

1 Inspect

- 1. All expansion plugs for poor fit or leakage.
- 2. Hydraulic lifter bores for deep scratches and varnish deposits.
- 3. Block for cracks.

- Cylinder walls.
- Coolant jackets.
- Main bearing webs.
- Engine mount bosses.
- 4. Main bearing bores and main bearing caps.
 - All main bearing bores should be round and uniform in ID at all bearing supports.
 - The area where the main bearing inserts contact the main bearing bore must be free of burrs and scratches.
- 5. Head gasket surface for scratches, burrs and damage.



I Measure

· Fire deck warpage. Use a straightedge and feeler gage. If the block is warped more than 0.15 mm (0.006-inch) longitudinally or 0.08 mm (0.003-inch) transversely, it should be replaced. Do not attempt to resurface the fire deck or cylinder head.

6A7-12 6.2 LITER DIESEL

CYLINDER BORES

Inspect

Cylinder bores for scoring and other damage.

1 Measure

• Cylinder out of round and taper. Refer to GENERAL ENGINE MECHANICAL (SEC. 6A).

Cylinder Bore Recomditioning

Refer to GENERAL ENGINE MECHANICAL (SEC. 6A).

PISTON AND CONNECTING ROD ASSEMBLIES

Refer to GENERAL ENGINE MECHANICAL (SEC. 6A) and perform the following:

Disassemble

Components as required.

Clean

Components as outlined.



1

-X-

Components as outlined.

Measure

- Piston pin diameter and pin to connecting rod bushing.
- Piston to bore clearance, and fit pistons as outlined.

Assemble

Components as outlined.

? Important

• Each connecting rod and bearing cap should be marked, beginning at the front of the engine. Cylinders 1, 3, 5 and 7 are the left bank and, 2, 4, 6, and 8 are the right bank. The numbers on the connecting rod and bearing cap must be on the same side when installed in the cylinder bore. If a connecting rod is ever transposed from one block or cylinder to another, new connecting rod bearings should be fitted and the connecting rod should be numbered to correspond with the new cylinder number.

4 Measure

Ring end gap and ring clearance.



Ring fit.

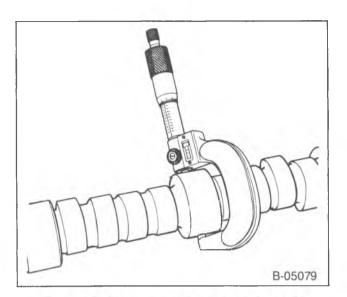


Figure 16—Measuring the Camshaft Journals

INTAKE AND EXHAUST MANIFOLDS

Clean

- Old pieces of gasket from the gasket surfaces.
 Soot deposits from the intake manifold.
- Inspect
 - Manifolds for cracks, broken flanges, and gasket surface damage.

CAMSHAFT

Important

• Whenever the camshaft needs to be replaced, a new set of hydraulic lifters must also be installed.

Inspect (Figure 11)

- Camshaft lobes and journals for scratches, pitting, scoring, and wear.
 - Thrust plate (113) for wear and scoring.

Measure (Figure 16)

- Camshaft journals. Use a micrometer (figure 16). The proper journal dimensions are as follows:
 #5 (rear) journal: 50.975-51.025 mm.
 - #8 (rear) journal: 50.975-51.025 mm.
 All others: 54.975-55.025 mm.

CAMSHAFT BEARINGS

Inspect

 Camshaft bearings for scratches, pits, or loose fit in their bores. Replace the camshaft bearings if necessary.

Disassemble (Figures 17 and 18)

Tools Required:

J 6098-01 Camshaft Bearing Remover and Installer

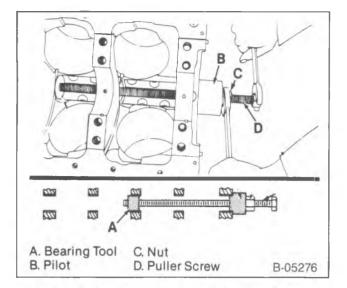


Figure 17-Replacing the Inner Camshaft Bearings

J 6098-10 Adapter Set

- 1. Rear camshaft plug.
- 2. Inner camshaft bearings. Use J 6098-01 and J 6098-10 (figure 17).
 - Insert the pilot into the front camshaft bearing bore.
 - Slide the puller screw, with the nut and washer, through the pilot.
 - Insert the bearing tool (J 6098-11) into the inner camshaft bearing bore, with the shoulder of the tool against the bearing.
 - Thread the puller screw into the bearing tool. Make sure enough threads are engaged.
 - Hold the puller screw with a wrench. Turn the nut with a second wrench to pull the camshaft bearing from its bore.
 - Repeat this procedure to remove the remaining inner camshaft bearings. Note that the rear inner bearing must be removed with the pilot fitted into the rear camshaft bearing.
- 3. Front camshaft bearing. Use J 6098-01 and J 6098-10 (figure 18).

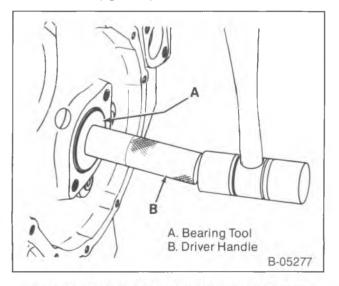


Figure 18—Replacing the Outer Camshaft Bearings

6.2 LITER DIESEL 6A7-13

- Assemble the bearing tool (J 6098-11) and driver handle.
- Drive the outer camshaft bearings out of the block.
- Rear camshaft bearing, as described in step 3. Use the driver handle and bearing tool J 6098-12 (figure 18).



• Camshaft bearing bores in the block.

Assemble (Figures 17 and 18)

Tool Required:

J 6098-01 Camshaft Bearing Remover and Installer

- J 6098-10 Adapter Set
- The outer camshaft bearings must be installed first. These bearings serve as guides for the pilot, and help center the innter bearings during the installation process.
- Be sure to fit the correct cam bearing into the bore. The cam bearing bores vary in size.
- 1. Rear camshaft bearing. Drive the bearing into place using the driver handle and J 6098-12 (figure 18).

Important

9

Q

- The bearing oil hole MUST align with the oil hole in the block. This hole is located at about the 4 o'clock position from the block upright (viewed from the front of the block).
- The seam in the bearing must be in the upper half of the block face.
- 2. Front camshaft bearing. Drive the bearing into place with the driver handle and J 6098-11 (figure 18).

Important

- The notch in the bearing must face the front of the block.
- There are two oil holes in the bearing. One hole is located at about the 4 o'clock position; the other is located between the 12 o'clock and 1 o'clock position (block upright). The bearing oil holes MUST align with the holes in the block.
- The seam in the bearing must be in the upper half of the block face.
- 3. Inner camshaft bearings. Use J 6098-01 and J 6098-10 (figure 17).
 - Assemble the tool with the pilot engaged in the front bearing and the pilot flange against the front face of the block.
 - Slide the puller screw, with nut and washer, through the pilot.
 - Place the new bearing on the bearing tool (J 6098-011). Hold the bearing tool and bearing against the bearing bore. Align the bearing oil hole with the oil hole in the block.
 - Thread the puller screw into the bearing tool enough to hold the tool and bearing in place.
 - Holding the puller screw with a wrench, turn the nut with a second wrench to pull the camshaft bearing into place.

6A7-14 6.2 LITER DIESEL

Remove the puller screw, pilot, and bearing tool

Important

- The bearing oil hole MUST align with the oil hole in the block. This hole is located at about the 4 o'clock position with the block upright (viewed from the front of the block).
- The seam in the bearing must be in the upper half of the block face.
- 4. New rear camshaft plug.
 - · Coat the camshaft plug with sealer (Loctite #592 or equivalent).
 - Install the plug flush to 0.80 mm (1/32-inch) deep.

TIMING CHAIN, SPROCKETS AND TIMING GEARS

16 Inspect

- Sprockets for chipped teeth and wear.
- Timing chain for damage.
 - It should be noted that excessively worn sprockets will rapidly wear a new chain. Likewise, an excessively worn chain will rapidly wear a new set of sprockets.
- Timing gears on the injection pump and camshaft for wear and broken teeth.

Important

If the timing chain, sprockets, or gears are replaced, it will be necessary to re-time the engine, as outlined later.

FRONT COVER



9

Old sealer from the sealing surfaces.

]6 Inspect

- Baffle for damage.
- Front cover for cracks and damage to the sealing surfaces.

Disassemble

Front crankshaft seal. Pry the seal out with a large screwdriver.

Assemble

Tool Required:

- J 22102 Seal Installer
- Front crankshaft seal. Use J 22102. The open end of the seal must face inside the cover.
- Coat the seal lips with grease.

9 Important

If a new front cover is installed, the engine must be re-timed, as outlined later.

WATER PUMP

Clean

Old gasket from the gasket surfaces on the water pump and water pump plate.

Important

Do not immerse the pump in solvent. The solvent may enter the pump's permanently lubricated bearings, dissolve the bearings' lubricant supply, and cause premature bearing failure.

Inspect

- Water pump shaft for roughness and end play. If the shaft does not turn smoothly, or if there is excessive end play, replace the water pump.
- Water pump body at the drain hole. If there is evidence of coolant leakage, the water pump shaft seal is leaking and the water pump should be replaced.
- Water pump plate for damage.

OIL PAN AND ROCKER ARM COVERS

Clean

- Parts in solvent. Remove all sludge and varnish.
- Old sealer from the sealing surfaces.

)6 Inspect

- Sealing flanges for bending or damage.
- Rubber grommets and parts on the rocker arm cover for deterioration.
- Oil pan for rock damage or cracks.
- Oil pan baffle for loose fit.
- Drain plug threads for stripping

OIL PUMP

Disassemble

- 1. Oil pump cover screws.
- 2. Oil pump cover.
- · Mark the gear teeth so the pump gears can be installed with the same gear teeth indexed.
- 3. Drive gear and shaft.
- 4. Idler gear.
- 5. Pressure regulator valve retaining pin, valve, spring, and related parts. Note the order of assembly.

100 Clean

All parts in clean solvent and blow dry with compressed air.



- Pump body and cover for cracks or other damage.
- Gears for wear.
- Drive gear and shaft for improper fit in the pump body.







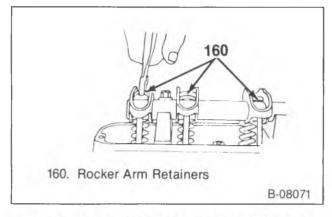


Figure 19—Removing the Rocker Arm Retainers

- Inside of the cover for wear that would permit oil to leak past the ends of the gears. The pump gears, cover, and body are not serviced separately. If the parts are damaged or worn, replace the entire oil pump assembly.
- Pickup screen and pipe for damage to the screen, pipe or relief grommet.

- Assemble

- 1. Pressure regulator valve and related parts.
- 2. Idler gear and drive gear with shaft. Align the marks made during disassembly.
- 3. Oil pump cover.
- 4. Oil pump cover screws.

Inspect

• Oil pump operation. Turn the drive shaft by hand and check for smooth rotation.

VALVE TRAIN COMPONENTS

Clean

- Parts in solvent. Blow dry with compressed air.
- Make sure the oil passages in the pushrods are clear.

Disassemble (Figure 19)

- 1. Rocker arm retainers (160).
 - Insert a screwdriver into the rocker arm shaft bore and break off the end of the retainers.
 - Pull the rocker arm retainers out with pliers (figure 19).
- 2. Rocker arms from the rocker arm shaft. Mark the rocker arms so they can be returned to their original locations at assembly.

Inspect

- Rocker arms and shafts at their mating surfaces. These surfaces should be smooth and free from scoring or other damage.
- Rocker arm areas which contact the valve stems and the sockets which contact the pushrods. These areas should be smooth and free of damage and wear.



6.2 LITER DIESEL 6A7-15

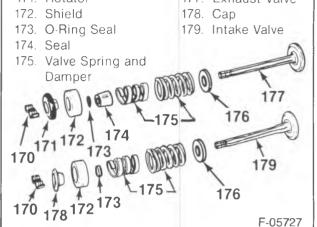


Figure 20—Valves and Components

- Pushrods for bending. Roll the pushrod on a flat surface to determine if it is bent. Replace if necessary.
- Ends of the pushrods for scoring or roughness.
- Hydraulic lifter guide plates and clamps for damage.

- Assemble

1. Rocker arms to the rocker arm shaft. Used rocker arms must be returned to their original locations.

Important

- Lubricate the rocker arms with engine oil before installing.
- 2. New rocker arm retainers (160).
 - Center the rocker arms on the corresponding holes in the rocker arm shaft.
 - Install the retainers with a drift of at least 13 mm (1/2-inch) diameter.

HYDRAULIC LIFTERS

Refer to GENERAL ENGINE MECHANICAL (SEC. 6A).

Important

• Some engines will have both standard 0.010-inch oversize hydraulic lifters. The oversize lifter will have a "10" etched on the side. The block will be stamped "O.S." on the cast pad adjacent to the lifter bore and on the top rail of the cylinder case above the lifter bore.

CYLINDER HEAD

Disassemble (Figures 20, 21, and 22)

Tool Required:

- J 8062 Valve Spring Compressor
- 1. Valve keepers (170).
 - Compress the valve springs with J 8062 (figure 21).
 - Remove the valve keepers.
 - Remove J 8062.

6A7-16 6.2 LITER DIESEL

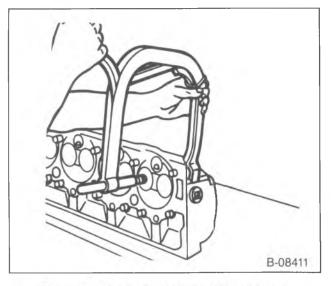


Figure 21—Compressing the Valve Springs

- 2. Caps (178), rotators (171), shields (172), valve springs with dampers (175) and shims (176).
- 3. Valve seals (174) and O-ring seals (173).
- 4. Valves (177 and 179). Place them in a rack so they can be returned to their original position at assembly.
- 5. Pre-chambers (180) (if required) (figure 22). Drive out with a small nylon drift inserted through the injection nozzle hole.

Cleaning and Inspection of Components

Clean

 Components as outlined in GENERAL ENGINE MECHANICAL (SEC. 6A).

Inspect (Figure 23)

 Components outlined in GENERAL ENGINE MECHANICAL (SEC. 6A). Replace all valve springs at overhaul.

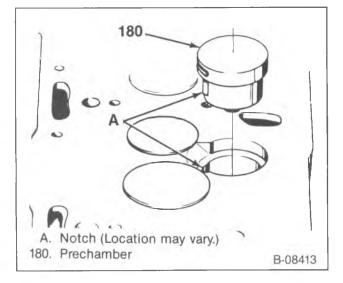


Figure 22—Prechamber

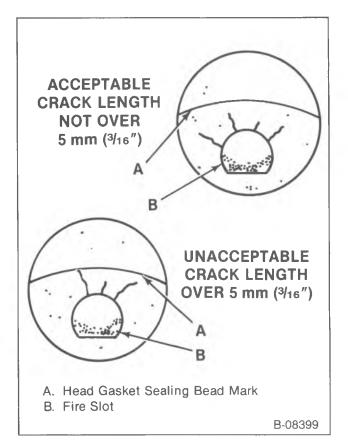


Figure 23—Prechamber Inspection

 Pre-chambers for cracks. Replace any pre-chambers with facial cracks longer than 5 mm (³/₁₆-inch) (figure 23). Service pre-chambers are available in standard and 0.254 mm oversize.

Measure (Figure 24)

- Valve stem clearance. Refer to GENERAL ENGINE MECHANICAL (SEC. 6A).
- Cylinder head warpage. Use a straightedge and a feeler gage (figure 24). If the head is warped more than 0.15 mm (0.006-inch) longitudinally or 0.08 mm (0.003-inch) transversely, replace the cylinder head. Resurfacing is not recommended.
- Cylinder head thickness (rocker arm cover gasket rail to head gasket surface) must be at least 97.87 mm (3.853-inch).

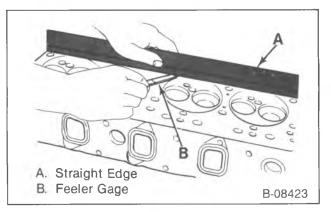


Figure 24—Checking the Cylinder Head for Warpage

Valve Guides and Valve Seats Refer to GENERAL ENGINE MECHANICAL (SEC. 6A).

NOTICE: Valve seats on 6.2L engines are induction hardened. Excessive removal of stock may result in damage to the valve seats.

Assemble (Figures 20, 21 and 22)

Tool Required:

J 8062 Valve Spring Compressor

- 1. Pre-chambers (180) (if removed) (figure 22).
 - Align the locating notches. The pre-chamber will fit correctly in only one position.
 - Tap into place. Use a 32 mm (11/4-inch) socket.

🖳 Measure

- Pre-chamber installed depth. The pre-chamber should be flush to a maximum of 0.05 mm (0.002-inch) protrusion.
 - Make the measurement at two or more points on the pre-chamber where the prechamber seats on the head gasket shield and sealing ring.
 - Measure the difference between the flat of the pre-chamber and the flat surface of the cylinder head.
 - The pre-chamber must not protrude out of the cylinder head more than 0.05 mm (0.002-inch).
 - The pre-chamber must not be recessed into the cylinder head.
- 2. Valves (177 and 179).
 - · Lubricate the valve stems with engine oil.
 - Insert the valves into the proper ports.
- 3. Shims (176).
- Valve seals (174) (exhaust valves only). Install the vale seals over the valve stems and seat them against the heads.
- 5. New valve springs with dampers (175).
- 6. Shields (172).
- 7. Caps (178) (intake valves only).
- 8. Rotators (171) (exhaust valves only).
- 9. O-ring seals (173) and valve keepers (170).
 - Compress the valve spring, using J 8062 (figure 21). Compress the spring enough so the lower valve stem groove can be clearly seen.
 - Push a new seal onto the valve stem. The seal is to be installed on the stem's lower groove. Make sure the seal is flat and not twisted.
 - Apply a small amount of grease to the area of the upper valve stem groove. Assemble the two valve keepers using the grease to hold the keepers in place. Make sure the keepers seat properly in the groove.
 - Release the compressor tool. Make sure the valve keepers stay in place.
 - Repeat the preceding steps on the remaining valves.

Measure (Figures 25 and 26)

 Valve spring installed height of each valve spring, as follows:

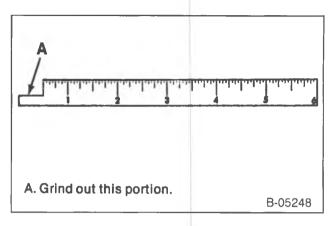


Figure 25—Cutaway Scale

- 1. Use a narrow, thin scale. A cutaway scale (figure 25) may be helpful.
- 2. Measure from the valve shim or spring seat to the top of the shield (figure 26).
- 3. If this measurement exceeds the figure given in "Specifications," install valve spring seat shims of sufficient thickness (between the spring and cylinder head) to give the desired measurement. NEVER shim the spring so as to give an installed height under the specified figure.

GLOW PLUGS

Inspect

 Glow plugs for stripped threads and damage. Replace the glow plugs if the tips are cracked, bulged, or broken.

4 Measure

 Glow plug resistance. Connect an ohmmeter between the electrical connector blade and the glow plug body. Replace any glow plug with a resistance greater than 2 ohms.

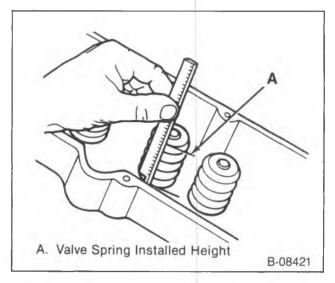


Figure 26—Measuring Valve Spring Installed Height (Typical)

6A7-18 6.2 LITER DIESEL

THERMOSTAT AND WATER CROSSOVER

Disassemble (Figure 6)

- 1. Bolts or studs (40).
- 2. Water outlet (41).
- 3. Thermostat (42).
- 4. Gasket (43).



Water outlet and water crossover for cracks.

Thermostat Check

- 1. Suspend the thermostat and a thermometer in water with the thermometer located close to the thermostat. The thermostat must be completely submerged and the water throughly agitated while heating. Apply heat to the water and record both the temperature at which the thermostat begins to open and the temperature at which the thermostat is fully open.
- 2. Compare the temperature readings taken in the test with those given in the proper Truck Service Manual.
- 3. Do not attempt to repair the thermostat. If the thermostat does not function properly, replace it with a new unit which has been checked as directed previously.



→← Install or Connect (Figure 6)

- 1. Gasket (43).
- 2. Thermostat (42).
- 3. Water outlet (41).
- 4. Bolts or studs (40).

Ð Tighten

Bolts or studs to 47 N m (35 ft. lbs.).

INJECTION NOZZLES

Perform the following tests on the injection nozzles as outlined in the proper truck service manual:

- Nozzle opening pressure.
- Leakage test.
- Chatter test.
- · Spray pattern test.

Replace any faulty nozzles. Do not attempt repairs.

NOTICE: On LH6 (light duty emissions) engines, the nozzles used in G models are shorter than nozzles used on C-K-R-V-P models. They must not be interchanged. Attempts to use the incorrect nozzle will damage the nozzle and/or cylinder head.

INJECTION LINES

Inspect

Injection lines for kinks and damaged fittings. Replace any damaged lines.

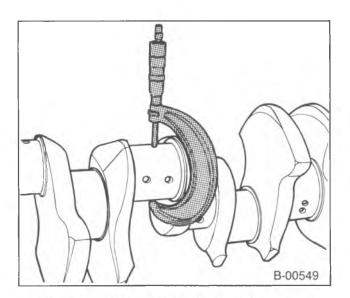


Figure 27—Measuring the Crankshaft Journals

INJECTION PUMP

Inspect

- Injection pump body and mounting flange for damage.
- Injection pump for evidence of fuel leakage.
- Injection line fittings for stripping.

Injection Pump Repair

Refer to the proper truck service manual for allowable repairs. If necessary, have the pump repaired by an authorized repair station.

CRANKSHAFT AND BEARINGS

CLEANING AND INSPECTION

..... Clean

- Crankshaft with solvent.
 - Do not scratch the bearing journals.
 - Blow all sludge from the oil passages with compressed air.
- Main bearing inserts. Wipe free of oil with a soft cloth.


]) Inspect

- Crankshaft for cracks. Use the magnaflux method, if available.
- Crankpins, main bearing journals and thrust surfaces for scoring, nicks, or damage caused by lack of lubrication.
- Main bearing inserts for scoring or other damage.

In general, the lower inserts (except the #1 bearing) show greater wear and the most distress from fatigue. If, upon inspection, the lower insert is suitable for use, it can be assumed that the upper insert is also satisfactory. If the lower insert shows eivdence of wear or damage, both the upper and lower inserts must be replaced.

U Measure (Figures 27 and 28)

Main bearing and connecting rod journal diameters

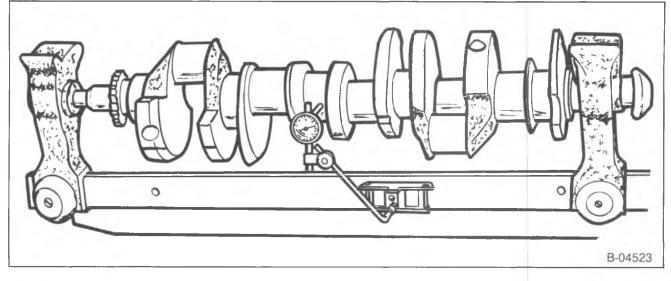



<image>

Figure 29—Oil Filter Bypass Valve Replacement

(figure 27). Compare with "Specifications." Grind or replace the crankshaft if necessary.

 Main bearing and connecting rod journals for taper and out-of-round (figure 27). If the journals are tapered or out-of-round more than 0.001-inch, replace the crankshaft.

- Crankshaft run-out (figure 28).

- Mount the crankshaft in V-blocks or between centers.
- Use a dial indicator as shown.
- If the main journals are misaligned, the crankshaft is bent and must be replaced, along with the main bearings.

AVAILABLE BEARING SIZES

- Main bearings are available in 0.013 mm (0.0005-inch) and 0.026 mm (0.001-inch) undersizes for select fitting to attain proper main bearing clearance.
- Connecting rod bearings are available in 0.026 mm (0.001-inch) undersizes for select fitting.
 - Some VIN Code C (RPO LH6) (light duty emissions) engines may have both standard and 0.08 mm (0.003-inch) OVERSIZE connecting rod bearings. The oversize connecting rods are stamped "O.S." on the cap's lower end.

FLYWHEEL

Clean

 Mating surfaces of crankshaft and flywheel. Remove any burrs.

Inspect

- Flywheel for burning, scoring, warping, and wear. Replace the flywheel if necessary. Do not machine the flywheel.
- Flywheel ring gear for worn or broken teeth.

6A7-20 6.2 LITER DIESEL

Flywheel Ring Gear Replacement

1. Use a torch to heat the gear around the entire circumference, then drive the gear off the flywheel, using care not to damage the flywheel.

NOTICE: Never heat starter gear to red heat as this will change metal structure.

- Uniformly heat the flywheel gear to temperature which will expand the gear to permit installation. Temperature must not exceed 200°C (400°F).
- 3. As soon as the gear has been heated, install on the flywheel.

TORSIONAL DAMPER

Inspect

• Oil seal contact area on the torsional damper shaft for grooving and roughness. Replace if necessary.

OIL FILTER BYPASS VALVE REPLACEMENT



Remove or Disconnect (Figure 29)

1. Oil filter.

2. Oil filter bypass valve. Pry out with a screwdriver.

Clean

· Recess in the block.

Install or Connect (Figure 29)

- 1. Oil filter bypass valve. Tap into place, using a 16 mm socket.
- 2. Oil filter.

ASSEMBLY

CRANKSHAFT INSTALLATION

MAIN BEARING SELECTION

Main bearings are of the precision insert type and do not use shims for adjustment. If clearances are excessive, a new bearing, both upper and lower inserts, will be required. Service bearings are available in standard size and 0.013 mm (0.0005-inch) and 0.026 mm (0.001-inch) undersizes.

Selective fitting of both rod and main bearings inserts is necessary to obtain close tolerances. For this reason you may use, for example, one half of a standard insert with one half of a 0.026 mm (0.001-inch) undersize insert which will decrease the clearance 0.013 mm (0.0005-inch) from using a full standard bearing.

REAR CRANKSHAFT OIL SEAL

The production rear crankshaft oil seal is a "rope" type seal. The rope seal is replaced with a two piece type seal for service.

INSTALLATION

Clean

- Main bearing cap and block mating surfaces with carburetor cleaner or equivalent.
- --- Seal grooves in the block and main bearing cap with carburetor cleaner of equivalent.

→+ Install or Connect (Figures 30 through 33)

- 1. Upper main bearing inserts to the block.
- 2. Crankshaft.
- 3. Lower main bearing inserts to the main bearing caps.

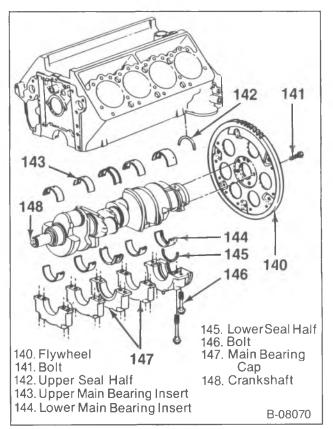


Figure 30—Crankshaft and Components

🗐 Measure

 Main bearing clearance. Refer to GENERAL ENGINE MECHANICAL (SEC. 6A). If clearance is out of specification at the rear main bearing, and a rope type seal is being

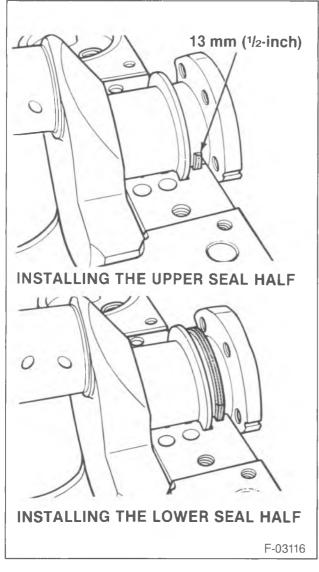
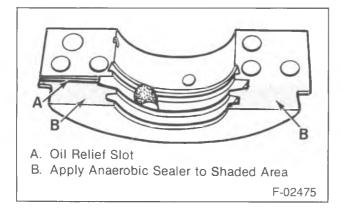


Figure 31—Installing the Two-Piece Rear Oil Seal

installed, check for fraying that may prevent the bearing cap from seating.

- Apply engine oil to the main bearings.
- 4. Rear crankshaft oil seal halves to the block.
 - Apply a light coat of engine oil to the seal lips where they contact the crankshaft.





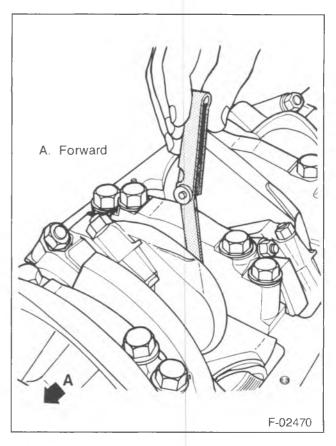


Figure 33—Measuring Crankshaft End Play

- "Roll" one seal half into the block seal groove until 13 mm (1/2-inch) of the seal's one end is extending out of the block (figure 31).
- Insert the other seal half into the opposite side of the seal groove in the block (figure 31).

Important

• The contact ends of the seal halves should now be at the four and ten o'clock positions, or at the eight and two o'clock positions. This is necessary to align the rear main bearing cap and seal lips.

NOTICE: The main bearing caps are to be tapped into place with a brass or leather mallet before the attaching bolts are installed. Do not use the attaching bolts to pull the main bearing caps into their seats, as this may damage the bearing cap and/or block.

- 5. Number 5 (rear) main bearing cap.
 - If a two piece type seal is to be installed, lightly coat the seal groove in the cap with adhesive (GM part number 1052621 [Loctite 414] or equivalent).
 - Apply a thin film of anaerobic sealant (GM part number 1052756 or equivalent) to the bearing cap as shown in figure 32. Keep the sealant off the seal and bearing. Do not put sealant in the bearing cap oil relief slot.
 - Apply engine oil to the main bearing cap bolt threads.

6A7-22 6.2 LITER DIESEL

 Tap the main bearing cap into place with a brass or leather mallet. Then install the bolts.

시 Tighten

- Bolts to specifications, in the following sequence:
 - Inner bolts: 150 N·m (110 ft. lbs.).
 - Outer bolts: 135 N·m (100 ft. lbs.).
 - Re-tighten all bolts in the same sequence.
- 6. Numbers 1, 2, and 4 main bearing caps and bolts.

री Tighten

- · Bolts to specifications. Refer to step 5.
- Number 3 (center) main bearing cap and bolts. Tighten the bolts temporarily to 14 N m (10 ft. lbs.).

Measure (Figure 33)

- Crankshaft end play, as follows:
 - Tap the end of the crankshaft first rearward then forward with a lead hammer. This will line up the main bearing and crankshaft thrust surfaces.
 - Tighten the main bearing cap bolts to specifications. Refer to step 5.
 - With the crankshaft forced forward, measure at the front end of the number 3 main bearing with a feeler gage (figure 33). The proper clearance is 0.10-0.25 mm.

Inspect

 Crankshaft for binding. Try turning the crankshaft to check for binding. If the crankshaft does not turn freely, loosen the main bearing cap bolts, one pair at a time, until the tight bearing is located. Burrs on the bearing cap, foreign matter between the insert and the block or the bearing cap, or a faulty insert could cause a lack of clearance at the bearing.

FLYWHEEL INSTALLATION

Install or Connect (Figure 30)

- 1. Flywheel (140).
- 2. Bolts (141).

Q Tighten

• Bolts (141) to 90 N m (65 ft. lbs.).

CONNECTING ROD AND PISTON INSTALLATION

CONNECTING ROD BEARING SELECTION

Connecting rod bearings are of the precision insert type and do not use shims for adjustment. DO NOT FILE RODS OR ROD CAPS. If clearances are excessive install a new bearing. Service bearings are available in standard size and 0.026 mm (0.001-inch) undersizes.

Selective fitting of both rod and main bearing inserts is necessary to obtain close tolerances. For this reason you may use, for example, one half of a standard insert with

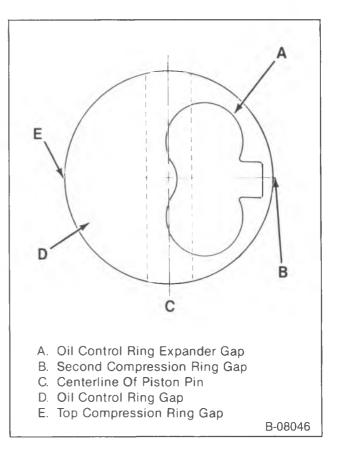


Figure 34—Ring Gap Location

one half of a 0.026 mm (0.001-inch) undersize insert which will decrease the clearance 0.013 mm (0.0005-inch) from using a full standard bearing.

Some VIN Code C (RPO LH6) (light duty emissions) engines may have both standard and 0.08 mm (0.003-inch) oversize connecting rod bearings. The oversize connecting rods are stamped "O.S." on the cap's lower end.

INSTALLATION

✦✦ Install or Connect (Figures 34, 35, and 36)

Tool Required:

J 8037 Ring Compressor

- Make sure the cylinder walls are clean. Lubricate the cylinder wall lightly with engine oil.
- Make sure the piston is installed in the matching cylinder. Install new pistons in the cylinders for which they were fitted. Install used pistons in the cylinder from which they were removed.
- 1. Connecting rod bearings.
 - Be certain that the bearings are the proper size.
 - Install the bearings in the connecting rod and connecting rod cap.
- 2. Piston and connecting rod to the proper bore.
 - With the connecting rod cap rmeoved, install two short pieces of 10 mm (3/8-inch) hose onto the connecting rod studs.
 - Locate the piston ring end gaps as shown in figure 34. Lubricate the piston and rings with engine oil.

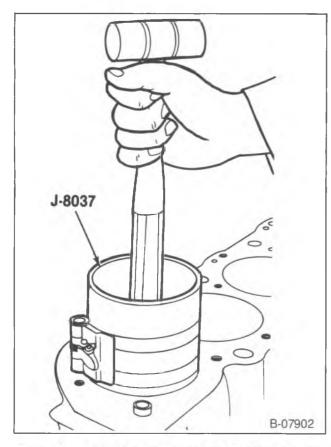
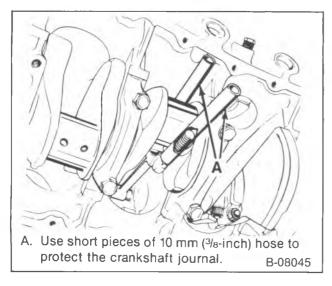


Figure 35-Installing the Piston and Connecting Rod

- Without disturbing the ring end gap location, install J 8037 over the piston (figure 35).
- The piston must be installed so that the depression in the piston crown is towards the outside of the engine. The connecting rod bearing tang slots must be opposite the camshaft.
- Place the piston in its matching bore. Using light blows with a hammer handle, tap the piston down into its bore (figure 35). At the same time, from beneath the engine guide the





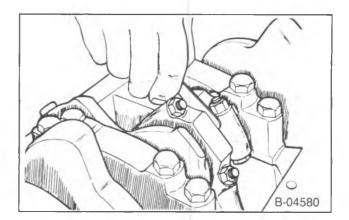


Figure 37—Checking Connecting Rod Side Clearance

connecting rod to the journal with the pieces of hose (figure 36). Hold the ring compressor against the block until all rings have entered the cylinder bore.

• Remove the hoses from the connecting rod bolts.

Important

• Each connecting rod and bearing cap should be marked, beginning at the front of the engine. Cylinders 1, 3, 5 and 7 are the left bank and, 2, 4, 6 and 8 are the right bank. The numbers on the connecting rod and bearing cap must be on the same side when installed in the cylinder bore. If a connecting rod is ever transposed from one block or cylinder to another, new connecting rod bearings should be fitted and the connecting rod should be numbered to correspond with the new cylinder number.

4 Measure

- Connecting rod bearing clearance. Refer to GENERAL ENGINE MECHANICAL (SEC. 6A).
- Apply engine oil to the connecting rod bearings.
- 3. Connecting rod cap with bearing.
- 4. Connecting rod cap nuts

၃ Tighten

Connecting rod cap nuts to 65 N m (48 ft. lbs.).

Measure (Figure 37)

• Connecting rod side clearance. Use a feeler gage between the connecting rod and crankshaft (figure 37). The correct clearance is 0.17-0.63 mm.

CAMSHAFT INSTALLATION

→← Install or Connect (Figure 38)

- When a new camshaft is installed, replacement of all hydraulic lifters, engine oil, and oil filter is recommended.
- 1. Key (112).
- 2. Spacer (111), with the ID chamfer towards the camshaft (110).

6.2 LITER DIESEL 6A7-23

6A7-24 6.2 LITER DIESEL

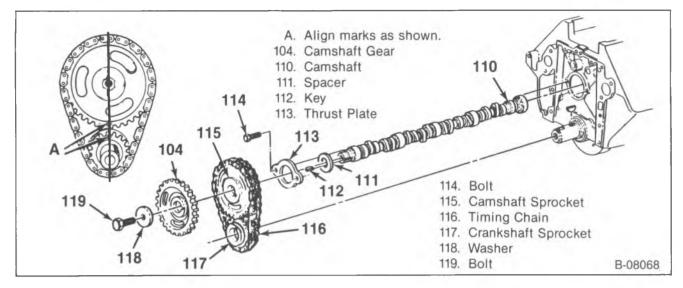


Figure 38—Camshaft and Components

- 3. Camshaft.
 - Coat the camshaft lobes with "Molykote" or equivalent.
 - Lubricate the camshaft bearing journals with engine oil.
 - Insert the camshaft carefully into the block to avoid damage to the camshaft bearings.
- 4. Thrust plate (113) and bolts (114).

री Tighten

• Bolts (114) to 23 N m (17 ft. lbs.).

TIMING CHAIN AND SPROCKET INSTALLATION

++

- 1. Crankshaft sprocket (117).
- 2. Camshaft sprocket (115) with timing chain (116).

Important

Align the timing marks (figure 38).

Install or Connect (Figure 38)

3. Camshaft gear (104), washer (118) and bolts (119).

र् Tighten

• Bolt (119) to 100 N·m (75 ft. lbs.).

🖲 Measure

- Timing chain free play as follows:
 - 1. Mount a dial indicator to the front of the block.
 - Position the dial indicator so that the plunger contacts the timing chain between the two sprockets.
 - 3. Pull the chain outward (parallel to the front face of the block) the maximum amount with finger pressure on the inside of the chain.
 - 4. Set the dial indicator to zero.
 - 5. Move the chain inward (parallel to the front face of the block) the maximum amount with finger pressure on the outside of the chain.

6. The total indicator travel can be noted. With used parts, the deflection must not exceed 20.3 mm (0.80-inch). If the deflection exceeds this limit, the sprockets and timing chain must be inspected for wear and replaced as necessary. With new parts, the deflection must not exceed 12.7 mm (0.50-inch).

FRONT COVER INSTALLATION

Clean

• Sealing surfaces on the block and front cover with carburetor cleaner or equivalent.

→← |

Install or Connect (Figures 39 and 40)

- Apply a 2 mm (3/32-inch) bead of anaerobic sealant (GM part number 1052357 or equivalent) to the front cover sealing area shown in figure 40.
- 1. Front cover to the engine. Install the bolts (70).
 - री Tighten
 - Bolts (70) to 45 N·m (33 ft. lbs.).
- 2. Baffle (72) bolts (86) and nut (87) (G models).

री Tighten

• Bolts (86) and nut (87) to 45 N m (33 ft. lbs.).

4 Measure

 Clearance between injection pump gear and baffle (figure 40). It is necessary to maintain a minimum of 1.0 mm (0.040-inch) between the gear and baffle, or noise may result.

Important

If a new front cover was installed, mark TDC on the cover as outlined following. This is necessary to provide a reference mark for timing the injection pump.

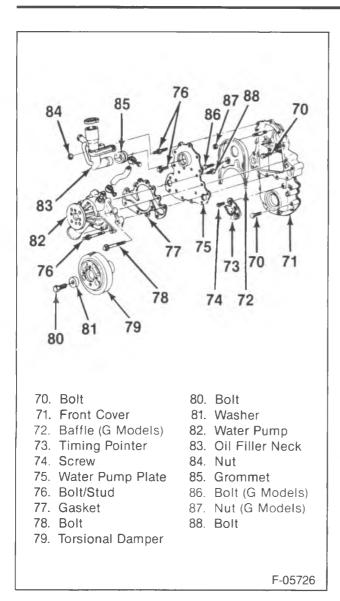


Figure 39—Front Cover and Components

MARKING TDC ON THE FRONT COVER

- Tool Required:
 - J 33042, Timing Fixture
- 1. Set the engine so that number 1 cylinder is at TDC (firing).
- 2. Install J 33042 in the injection pump location.Do not use the gasket.
- 3. Set the injection pump gear (106) (figure 44) in place, aligning the timing marks on the injection pump and camshaft gears, as shown. The slot in the injection pump gear should be in the vertical 6 o'clock position (figure 41). If not, remove J 333042 and rotate the engine crankshaft 360 degrees.
- 4. Fasten J 33042 to the injection pump gear and tighten (figure 42).
- 5. Install one 10 mm nut to the upper housing stud to hold the tool flange.
 - The nut should be finger tight.
- 6. Tighten the large bolt (18 mm head) clockwise (looking at the front of the engine) to 48 N·m (35 ft. lbs.).
- 7 Tighten the 10 mm nut.
- 8. Check that the crankshaft has not rotated and that the tools did not bind.
- 9. Strike the scriber with a mallet to mark TDC on the front cover.
- 10. Remove J 33042.

OIL PUMP INSTALLATION



- Install or Connect (Figure 43)
- Oil pump with extension.
 Bolt (131).

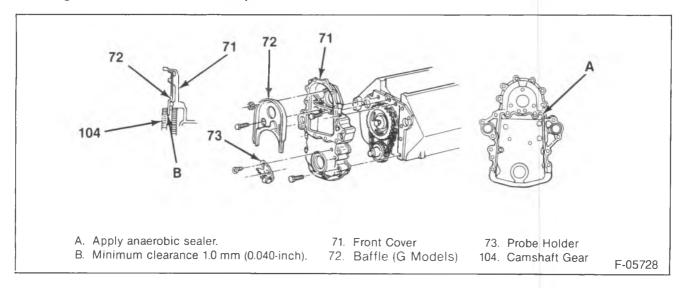


Figure 40—Front Cover Installation

6A7-26 6.2 LITER DIESEL

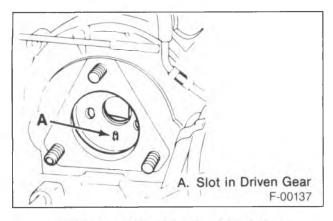


Figure 41—Slot in Injection Pump Gear

री Tighten

Bolt (131) to 90 N m (65 ft. lbs.).

OIL PAN INSTALLATION

Install or Connect (Figure 43)

- Apply a 5 mm (³/₁₆-inch) bead of RTV sealant (GM part number 1052915 or equivalent) to the oil pan sealing surface, inboard of the bolt holes (figure 40). The sealer must be wet to the touch when the oil pan is installed.
- 1. Oil pan rear seal to the oil pan.
- 2. Oil pan to the engine.
- 3. Bolts (133).

၃ Tighten

- All except rear two bolts to 10.0 N m (84 in. lbs.).
- Rear two bolts to 23 N m (17 ft. lbs.).

INJECTION PUMP INSTALLATION

- ++ Install or Connect (Figure 44)
 - 1. Gasket (103) to the front cover.
 - 2. Injection pump (100).
 - 3. Throttle spring bracket (102).
 - 4. Nuts (101). Leave finger tight until the injection pump timing is adjusted.
 - 5. Injection pump gear (106). Align the slot in the injection pump with the locating pin on the injection pump hub (107).

? Important

• Align the timing marks (figure 44).



P

++

• Bolts (105) to 25 N·m (20 ft. lbs.).

7. Wires and hoses at the injection pump.

Adjust (Figure 45)

 Injection pump timing. For the engine to be properly timed, the marks on the top of the engine front cover must be aligned with the marks on the injection pump flange (figure 45). The engine must be off when the timing is reset.



- Tighten (Figure 44)
- Nuts (101) to 40 N·m (30 ft. lbs.).

TORSIONAL DAMPER INSTALLATION

Install or Connect (Figure 39)

- 1. Torsional damper (79). Tap into place with a mallet. Make sure the key is in place. Make sure the damper is all the way on the crankshaft.
- 2. Bolt (80) and washer (81).

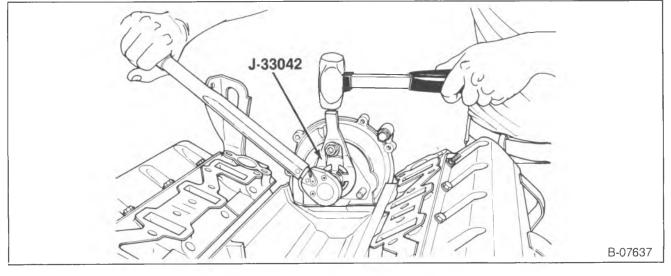


Figure 42—Marking TDC on the Front Cover

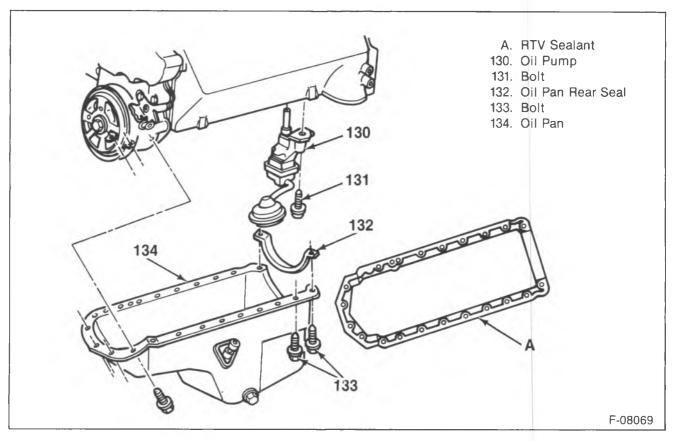


Figure 43—Oil Pan and Oil Pump

्रे Tighten

• Bolt (80) to 270 N·m (200 ft. lbs.).

WATER PUMP INSTALLATION

Clean

 Sealing surfaces on the water pump plate and block. Use carburetor cleaner or equivalent.

++ Install or Connect (Figures 39 and 46)

- 1. Water pump (82) and gasket (77) to the water pump plate (75).
- 2. Bolts (88).

र्श्त्र Tighten

- Bolts (88) to 22 N m (16 ft. lbs.).
- Apply a bead of anaerobic sealer (GM part no. 1052357 or equivalent) to the water pump plate as shown in figure 46.
- 3. Water pump plate to the engine. The sealer must be wet to the touch when installing the plate.
- Apply sealant (GM Part no. 1052080 or equivalent) to the threads of bolts and studs (76).

4. Bolts and studs (76)

री Tighten

- Water pump to front cover bolts to 42 N·m (32 ft. lbs.).
- Water pump plate to front cover bolts to 22 N·m (16 ft. lbs.).

5. Oil filler neck (83) and nuts (84).

HYDRAULIC LIFTER INSTALLATION

Important

• Some engines will have both standard and 0.010-inch oversize hydraulic lifters. The oversize lifter will have a "10" etched on the side. The block will be stamped "O.S." on the cast pad adjacent to the lifter bore and on the top rail of the cylinder case above the lifter bore.




Install or Connect (Figure 47)

NOTICE: New hydraulic lifters must be primed before installation. Damage to the lifters may result if dry when the engine is started.

- 1. Hydraulic lifters to the engine.
 - Prime new hydraulic lifters before installation by working the lifter plunger while submerged in clean kerosene or diesel fuel.
 - Coat the lifter roller and bearings with lubricant (GM part number 1052365 or equivalent).
 - Lifters MUST be installed in their original locations.
- 2. Guide plates (50).
- 3. Clamps (51).

6A7-28 6.2 LITER DIESEL

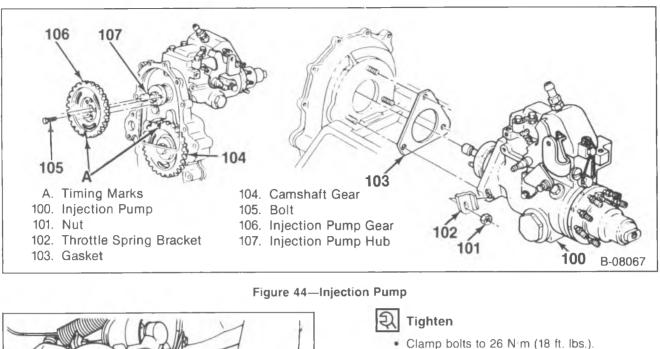

Important

 After all clamps are installed, turn the crankshaft by hand 720 degrees (two full turns), to insure free movement of the lifters in the guide plates. If the engine will not turn over by hand, one or more of the lifters may be binding in the guide plate.

CYLINDER HEAD INSTALLATION

→← Install or Connect (Figures 47 and 48)

Tool Required:

J 29664 Manifold Cover Set

1. Head gasket to the block, over the dowel pins.

💡 Important

- The block gasket surfaces must be clean.
- DO NOT use a sealer on the head gasket. The head gasket is manufactured with the proper amount of sealant "printed" on its surface. Additional sealer may cause leakage or malfunction. In addition, some sealers may attack the sealant already on the head gasket.
- Cylinder head. Make sure the gasket surfaces are clean. Guide the head carefully into place over the dowel pins.

3. Bolts (56).

- Make sure the bolt threads are clean.
- Apply sealant (GM part number 1052080 or equivalent) to the bolt threads and under the bolt heads.



- · Bolts (56).
- Using the sequence shown in figure 48, tighten all bolts to 25 N m (20 ft. lbs.).

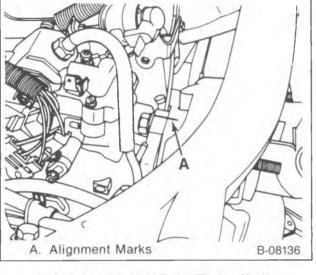


Figure 45—Injection Pump Timing Marks

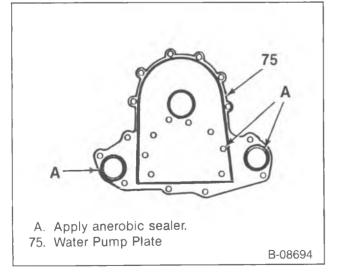


Figure 46—Applying Sealer to the Water Pump Plate

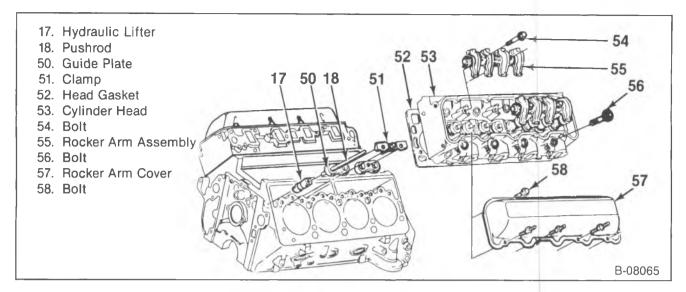


Figure 47—Cylinder Head and Components

- In sequence, tighten all bolts to 65 N·m (50 ft. lbs.).
- In sequence, tighten all bolts an additional 90 degrees (1/4 turn).
- 4. J 29664-1 to the intake ports.

PUSHROD AND ROCKER ARM INSTALLATION

Install or Connect (Figures 47 and 49)

NOTICE: The pushrods must be installed with the marked or painted end up. Failure to do so may result in damage or premature wear.

- 1. Pushrods, with the painted or marked end up.
- 2. Rocker arm shaft assembly. Make sure the ball ends of the pushrods seat in the rocker arms.

NOTICE: Improper installation of the rocker arm shaft bolts may cause rocker arm shaft breakage and/or piston to valve contact.

3. Bolts (54).

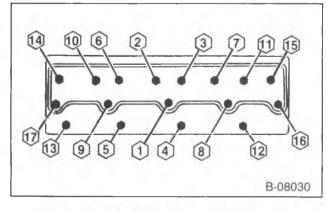


Figure 48—Head Bolt Tightening Sequence

- Rotate the engine until the mark on the torsisonal damper aligns with the "0" mark on the timing tab.
- Rotate the engine counterclockwise 88 mm (3¹/₂-inches), measured at the torsional damper. This measurement can be estimated by aligning the torsional damper mark with the first lower water pump bolt (figure 49). This procedure will position the engine so no valves are close to a piston crown.
- Install the bolts finger tight

있 Tighten

• Bolts (54) alternately to 55 N m (40 ft. lbs.).

ROCKER ARM COVER INSTALLATION

🛄 Clean

Sealing surfaces on the cylinder head and rocker arm cover with carburetor cleaner or equivalent.



Install or Connect (Figure 50)

NOTICE: Do not allow RTV sealant into the rocker arm cover bolt holes. This may cause a "hydraulic lock" condition when the bolts are tightened, damaging the cylinder head casting.

- Apply a 5 mm (3/16-inch) bead of RTV sealant (GM part number 1052915 or equivalent) to the rocker arm covers, inboard of the bolt holes. Refer to figure 50. The sealer must be wet to the touch when the bolts are torqued.
- 1. Rocker arm covers.
- 2. Bolts (58).



Bolts (58) to 22 N m (16 ft. lbs.).

6A7-30 6.2 LITER DIESEL

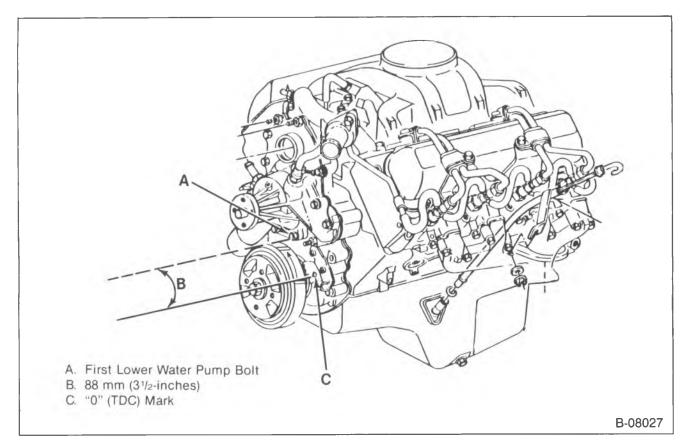


Figure 49—Aligning the Timing Mark

WATER CROSSOVER INSTALLATION



- 1. Gaskets (46).
- 2. Water crossover.
- 3. Bolts and studs (44).

री Tighten

- Bolts and studs (44) to 42 N m (31 ft. lbs.),
- 4. Hose (48) and clamps (47).
- 5. Glow plug inhibit switch wire

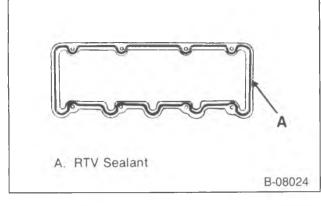


Figure 50—Applying Sealant to the Rocker Arm Cover

DIPSTICK TUBE INSTALLATION

Install or Connect

- 1. New O-ring to the dipstick.
- 2. Dipstick to the engine.
- 3. Dipstick bracket bolt.

EXHAUST MANIFOLD INSTALLATION

← Install or Connect

· Exhaust manifolds and bolts.

၃ Tighten

• Bolts to 35 N m (26 ft. lbs.).

GLOW PLUG INSTALLATION

++ Install or Connect

Glow plugs.

૱ Tighten

Glow plugs to 14 N m (10 ft. lbs.).

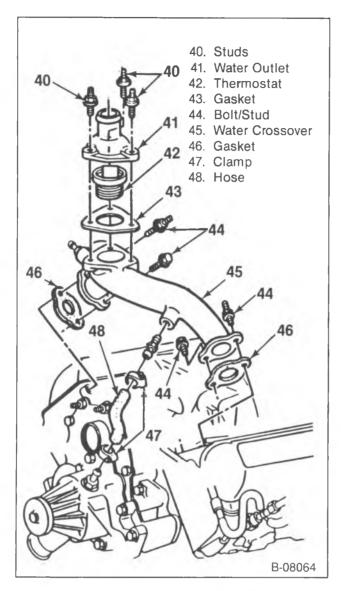


Figure 51—Thermostat and Water Crossover

INJECTION NOZZLE INSTALLATION

Install or Connect (Figure 52)

Tool Required:

J 29873, Nozzle Socket

NOTICE: Nozzles used in LH6 (light duty emissions) engines used in G models are shorter than nozzles used in other models. Attempts to intall an incorrect nozzle will damage the cylinder heads.

NOTICE: When installing an injection nozzle, use J 29873. Install the nozzle using the 30 mm hex portion. Failure to do so will result in damage to the injection nozzle.

1. Injection nozzle with gasket using J 29873.

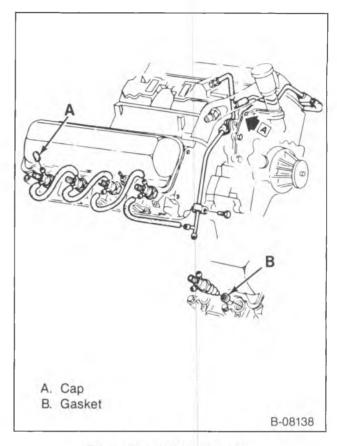


Figure 52—Injection Nozzles

री Tighten

- Nozzle to 70 N m (50 ft. lbs.).
- Fuel return hose.
 Fuel line clip.

ior nine onp.

INJECTION LINE INSTALLATION

Install or Connect (Figures 53 and 54)

- 1. Injection line brackets.
- 2. Injection lines to the pump. Uncap the lines before assembly. Do not bend the injection lines.
- Injection lines to the nozzles. Uncap the lines before assembly. Do not bend the injection lines.

री Tighten

- Injection line fittings at both ends of the lines to 25 N m (19 ft. lbs.).
- Injection line clips to the brackets.

INTAKE MANIFOLD INSTALLATION

Remove or Disconnect
 J 29664-1 from the intake ports.

- J 29

→+ Install or Connect (Figure 55)

Tool Required: J 29664 Manifold Cover Set

6A7-32 6.2 LITER DIESEL

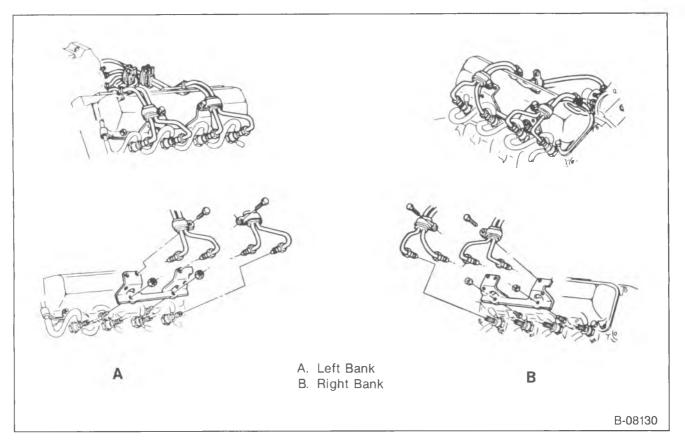


Figure 53—Injection Lines

- New gaskets. Be sure to use the correct gasket. The gaskets for light duty emissions models have openings for the EGR, the gaskets for heavy duty emissions models do not.
- 2. Intake manifold.
- 3. Intake manifold bolts and fuel line clips.

री Tighten

- Intake manifold bolts to 42 N⁺m (31 ft. lbs.). Use the tightening sequence shown in figure 55.
- 4. J 29664-2 to the mouth of the intake manifold.

OIL PUMP DRIVE OR VACUUM PUMP INSTALLATION

NOTICE: Do not run the engine without the gear driven vacuum pump or oil pump drive in place. This will cause extensive engine damage.



- 1. New gasket to the oil pump drive or vacuum pump.
- 2. Oil pump drive or vacuum pump to the engine. Index the drive or pump with the camshaft gear and oil pump drive shaft. Make sure the drive or pump seats fully.
- Rotate the vacuum pump (if used) to its correct position (figure 58).
- 3. Clamp and bolt.



Bolt to 42 N m (31 ft. lbs.).


4. Speed sensor wire.

ENGINE ACCESSORY INSTALLATION

Install the engine accessories as directed in the proper Truck Service Manual. Connect all vacuum hoses and electrical equipment the same way as removed.

ENGINE SET-UP AND TESTING

- 1. After overhaul, the engine should be tested before installation in the vehicle. If a suitable test stand is not available, the following procedure can be used after the engine is installed in the vehicle.
- Fill the crankcase with the proper quantity and grade of oil and install a new oil filter. Refer to the proper Truck Service Manual or Owner's and Driver's Manual for this information. Replacement of the engine oil and filter is recommended, especially if a new camshaft was installed.
- 3. Fill the cooling system with the proper coolant.
- 4. With the shutdown solenoid disconnected, crank the engine several times. Listen for any unusual noises or evidence that any parts are binding.
- 5. Start the engine and listen for unusual noises. Run the engine at about 1000 rpm until the engine is at operating temperature.

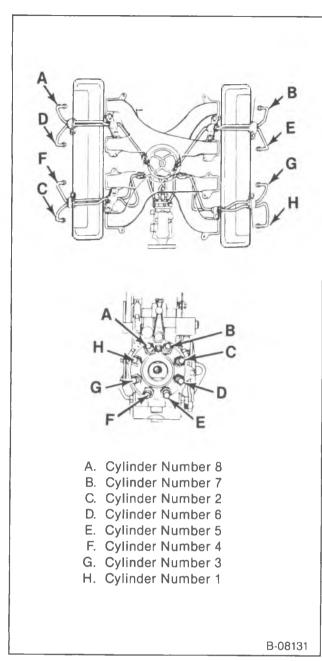

Using the proper Truck Service Manual or Emission Control Label for specifications, adjust idle speed, fast idle speed, etc. as required.

6.2 LITER DIESEL 6A7-33

Figure 54—Injection Line Routing

6A7-34 6.2 LITER DIESEL

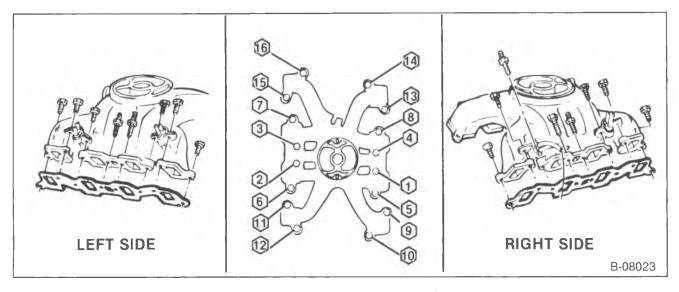


Figure 55—Intake Manifold Installation

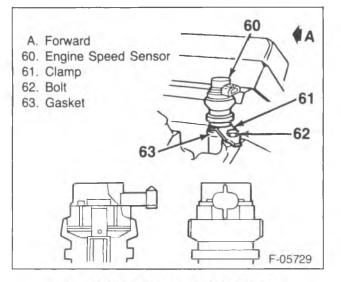


Figure 56-Oil Pump Drive Installed

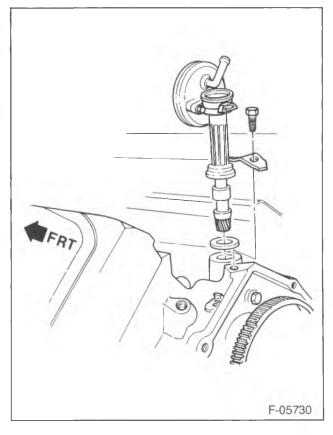


Figure 57—Vacuum Pump

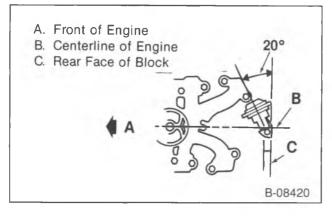


Figure 58—Vacuum Pump Installed

6A7-36 6.2 LITER DIESEL

	All Spec	ifica	SPE ENGIN ations are in	CIFIC E SPEC millimete	CIFICATIONS rs (mm) unless otherwise noted.						
GENERAL											
Туре					90-degree V8 Diesel						
Displacem	ent				6.2L						
RPO					LH6 LL4						
Bore					101						
Stroke					97						
Compressi	on Ratio				21.3:1						
Firing Orde	er en				1-8-7-2-6-5-4-3						
Oil Pressu					10 psi at idle (hot); 40-45 psi at 2000 RPM						
CYLINDER	BORE:			i							
Diameter	-				100.987-101.065						
Diameter			- · · · · · · · · · · · · · · · · · · ·		0.02 (Maximum)						
Taper (Thru	ust Side)				0.02 (Maximum)						
PISTON:											
			Bores 1 thr	ough 6	0.089–0.115						
Clearance	Bohn Pistor	าร	Bores 7 an	d 8	0.102–0.128						
Clearance			Bores 1 thr	ough 6	0.112-0.138						
	Zollner Pisto	ns	Bores 7 an	d 8	0.125–0.151						
PISTON R	ING:										
	Groove			Тор	0.076–0.178						
• • •	Clearand	e		2nd	0.039-0.080						
Compressi		Gap			0.30-0.55						
	Gap				0.75-1.00						
	Groove (Clea	rance		0.040-0.096						
Oil	Gap				0.25-0.51						
PISTON P	IN:										
Diameter					30.9961-31.0039						
Clearance					0.0101-0.0153						
Fit in Rod					0.0081-0.0309						
CRANKSH	AFT										
	Diameter		#1, 2, 3, 4		74.917-74.941						
Main	Biamotor		#5		74.912–74.936						
Journal	Taper				0.005 (Maximum)						
	Out of Ro	und			0.005 (Maximum)						
Main Bearing #1, 2, 3, 4			, 2, 3, 4		0.045-0.083						
Clearance #5			5		0.055–0.093						
Crankshaft	End Play				0.10-0.25						
		D	iameter		60.913–60.939						
Crankpin		Taper			0.005 (Maximum)						
		0	ut-of-Round		0.005 (Maximum)						
Rod Bearii	ng Clearance				0.045–0.100						
					0.17-0.63						

SPECIFICATIONS

ENGINE SPECIFICATIONS (CONT.) All Specifications are in millimeters (mm) unless otherwise noted.

DISP	ACEMENT		6.2 L							
CAMS	SHAFT:									
		Intake	7.133							
Lobe	Lift <u>+</u> 0.05	Exhaust	7.133							
Journal Diameter		#1, 2, 3, 4	54.970-55.025							
		#5	50.970-51.025							
Journal Clearance		#1, 2, 3, 4	0.025-0.118							
Journ	al Clearance	#5	0.020-0.113							
Cams	haft End Play		0.051-0.305							
VALV	E SYSTEM:									
Lifter			Hydraulic Roller							
Rocke	er Arm Ratio		1.5 : 1							
		Intake								
Valve Lash		Exhaust	Not Adjustable							
Face Angle (Intake & Exhaust)			45°							
Seat Angle (Intake & Exhaust)			46°							
Seat Runout (Intake & Exhaust			0.05							
		Intake	0.89-1.53							
Seat \	Nidth	Exhaust	1.57-2.36							
		Intake	0.026-0.069							
Stem	Clearance	Exhaust	0.026-0.069							
Valve	Pressure	Closed	356 N @ 46.0 mm							
	Newtons @ mm	Open	1025 N @ 35.3 mm							
Spring	Installed Height		46							
Timin	n Chain Free Play	New Chain	12.7 mm (0.500-inch)							
Timing Chain Free Play		Used Chain	20.3 mm (0.800-inch)							
Hydraulic Lifter		Standard	23.39-23.41							
Diame	eter	0.010-inch Oversize	23.64-23.66							
Lifter	Bore Diameter	Standard	23.45-23.47							
		0.010-inch Oversize	23.70-23.72							
Lifter	to Bore Clearance		0.040-0.080*							

*An oversize lifter can be used to replace a standard lifter, if resulting clearance is as specified.


F-05782

6A7-38 6.2 LITER DIESEL

SPECIFICATIONS (CONT.)

TORQUE SPECIFICATIONS

Item	N·m	Ft. Lbs.	In. Lbs.
Water Outlet Bolts/Studs	47	35	_
Water Crossover to Cylinder Head Bolts/Studs	42	31	_
(Inner)	150	110	
(Outer)	135	100	
Flywheel Bolts	90	65	
Connecting Rod Cap Nuts.	65	48	
Camshaft Thrust Plate Bolts	23	17	_
Camshaft Gear Bolt	100	75	_
Front Cover to Block Bolts.	45	33	_
Injection Pump Gear Baffle Bolts and Nut	45	33	_
Oil Pump to Bearing Cap Bolt	90	65	_
Oil Pan Bolts			
All except Rear Two Bolts	10.0	_	84
Rear Two Bolts	23	17	-
Injection Pump Gear Bolts.	25	20	-
Injection Pump Flange Nuts	40	30	-
Oil Pan Drain Plug	10.0		90
Block Drain Plug	22	16	-
Torsional Damper Bolt	270	200	-
Water Pump Plate to Water Pump Bolts	22	16	-
Water Pump to Front Cover Bolts	42	32	_
Water Pump Plate to Front Cover Bolts	22	16	-
Hydraulic Lifter Guide Plate Clamp Bolts	26	18	-
Cylinder Head Bolts — See Text	_	_	-
Rocker Arm Assembly Bolts	55	40	-
Rocker Arm Cover Bolts	22	16	-
Exhaust Manifold Bolts	35	26	_
Glow Plugs	14	10	-
Injection Nozzles	70	50	—
Injection Line Fittings	25	19	-
Intake Manifold Bolts	42	31	-
Vacuum Pump/Oil Pump Drive Clamp Bolt	42	31	-

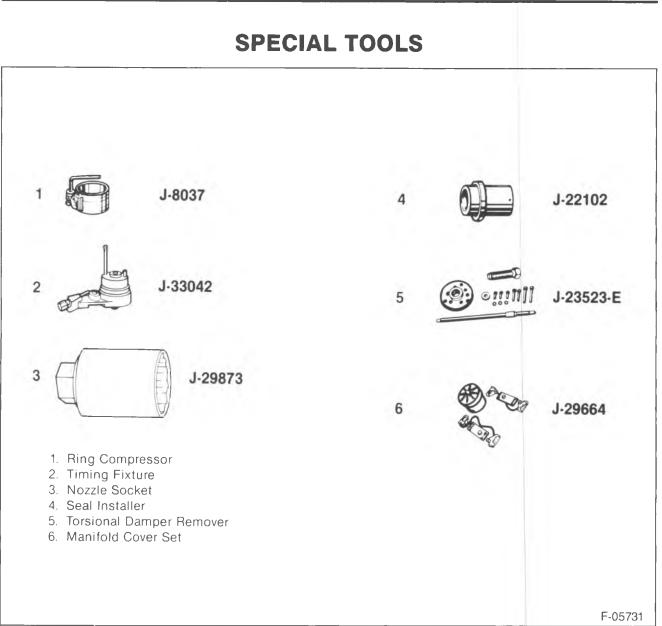

6A7-40 6.2 LITER DIESEL

SECTION 6C1 MODEL 1MEF CARBURETOR

CONTENTS

SUBJECT												PAGE
Carburetor Identification .												601- 2
General Description												6C1-2
Carburetor Disassembly	•											. 6C1- 6
Cleaning, Inspection and Rep												
Carburetor Reassembly												
Metering Rod Adjustment .											4	. 6C1 - 18
Float Adjustment	•									•		. 6C1 - 18
Choke Stat Lever Adjustmen	t .											. 6C1 - 20
Choke Link (Fast Idle Cam) A	djus	tme	nt.					•				. 6C1 - 20
Vacuum Break Adjustment .												
Choke Unloader Adjustment												
Specifications												
Special Tools										1.		. 6C1 - 22

6C1-1

6C1-2 MODEL 1MEF CARBURETOR

CARBURETOR IDENTIFICATION

Model Number: 17086101 Application: Federal (Non-California) 4.8 Liter L6 engine

The carburetor identification number is stamped vertically on the float bowl, next to the fuel inlet nut (Figure 1). Refer to this number when servicing the carburetor. If replacing the float bowl assembly, transfer the identification number to the new float bowl. Follow the instructions on the envelope included in the service package.

Carburetor parts are shown in the disassembled view (Figure 14), and are identified by name on the facing page (Figure 15).

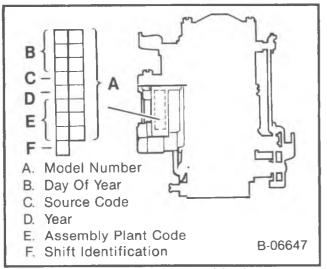


Figure 1 - Carburetor Identification

GENERAL DESCRIPTION

Model 1MEF is a single stage, single barrel carburetor of the "1M" family (Figure 2). Letters following the "1M" designate these features:

- E: It has an integral Electric choke.
- F: It has adjustable wide open throttle mixture control.

Model 1MEF has three major assemblies: an air horn, a float bowl and a throttle body. It has the six operating systems shown in Figures 3 through 8:

Figure 3	Float	Figure 6	Power
Figure 4	Idle	Figure 7	Pump
Figure 5	Main Metering	Figure 8	Choke

NOTICE: The factory-set metering rod adjusting screw, located in the air horn (Figure 6), controls the position of the enrichment portion of the metering rod in the jet. Any unnecessary adjustment of that screw could result in engine damage or excessive emissions.

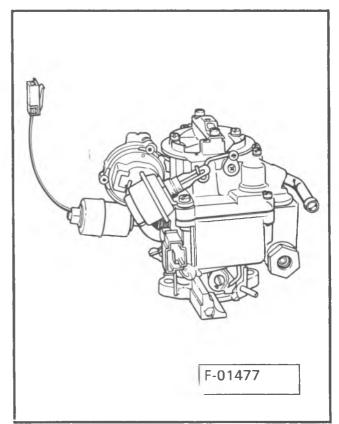


Figure 2 - Model 1MEF Carburetor (Front View)

IDLE STOP SOLENOID (ISS)


The electric idle stop solenoid (ISS) is used to provide the desired engine idle speed, and to prevent "dieseling" when the ignition is switched off.


UNIT REPAIR

The information that follows applies to a complete overhaul, after the carburetor has been removed from the engine, and includes disassembly, thorough cleaning, inspection and replacement of all gaskets, seals, worn or damaged parts, and adjustment of individual systems.

Refer to the disassembled view (Figure 14), and parts list (Figure 15), for parts identification.

MODEL 1MEF CARBURETOR 6C1-3

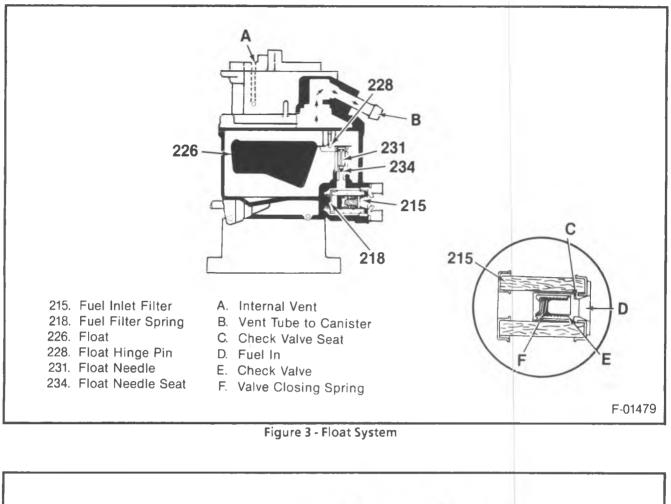

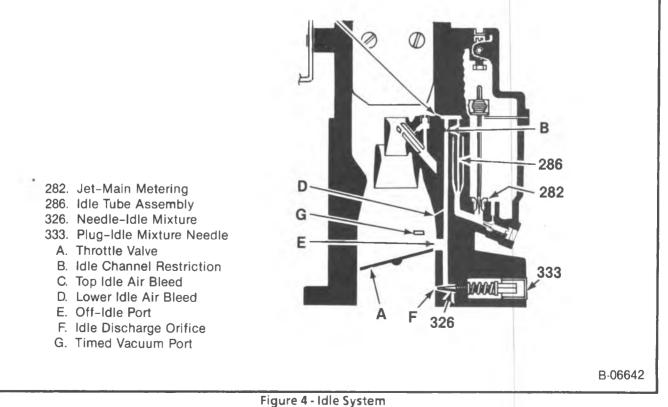

6C1-4 MODEL 1MEF CARBURETOR

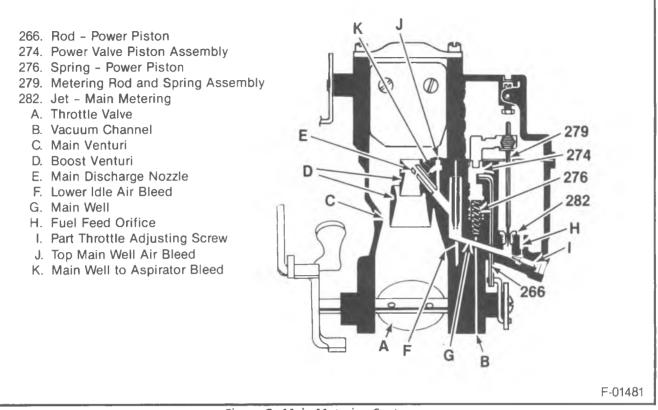


Figure 5 - Main Metering System

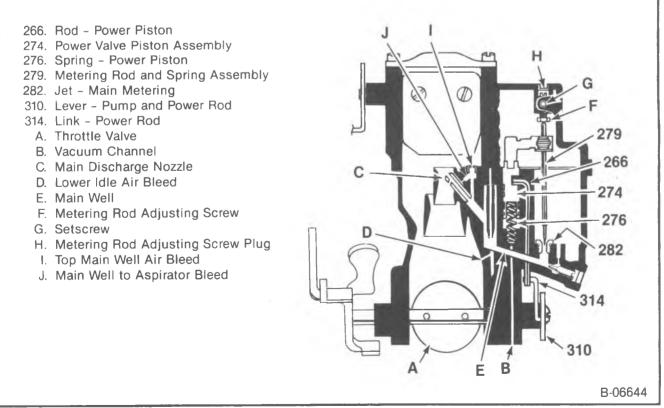


Figure 6 - Power System

MODEL 1MEF CARBURETOR 6C1-5


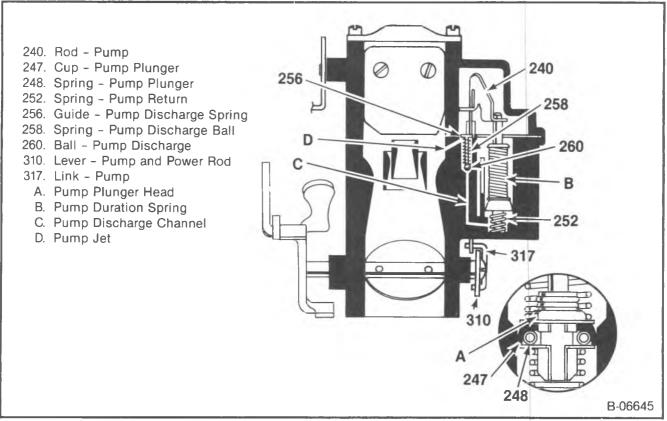


Figure 7 - Pump System



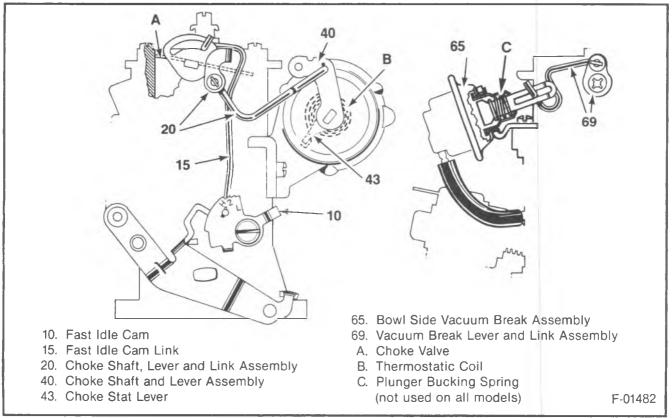

6C1-6 MODEL 1MEF CARBURETOR


CARBURETOR DISASSEMBLY

IDLE MIXTURE NEEDLE PLUG

+→

Remove or Disconnect (Figure 9)

- Invert carburetor, and support it, to avoid damaging external components.
- Make two parallel hacksaw cuts (C) in the throttle body, one on each side of the locator point (B) above idle mixture needle plug (333).
 - Cut down to the plug, but not more than 1/8" beyond the locator point.

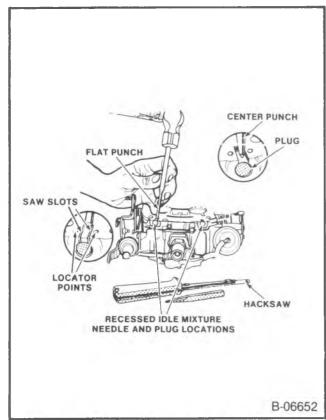




- Place a flat punch (D) at a point near the ends of the saw marks. Hold the punch at a 45° angle, and drive it into the throttle body to break casting away, to expose the plug.
- 4. Use center punch (E) to break plug apart, to uncoveridle mixture needle.
- 5. Remove all loose pieces of plug.

FUEL INLET NUT AND FILTER

 Support carburetor to avoid damaging external components

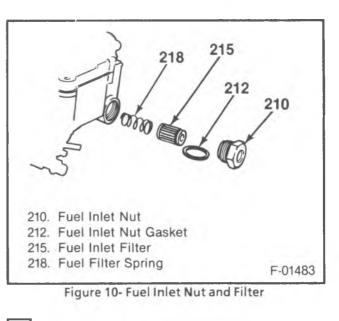

←→ Remove or Disconnect (Figure 10)

- 1. Fuel inlet nut (210).
- 2. Fuel inlet filter (215), inlet nut gasket (212), and filter spring (218).
 - Discard gasket.

lnspect

Cut filter open. If clogged, check tank(s) and fuel lines for source of material.

IDLE STOP SOLENOID



Remove or Disconnect (Figures 14, 15)

- Idle stop solenoid (400), and idle stop solenoid spring (401).
 - Use 9/16" socket or hex wrench on end of of solenoid body

THROTTLE RETURN SPRING BRACKET



Remove or Disconnect (Figures 14, 15)

- Loosen bracket attaching screw (421)(bottom).
- 2. Remove countersunk bracket attaching screws (420) and throttle return spring anchor bracket (415).

CHOKE COMPONENTS

Vacuum Break Assembly



Remove or Disconnect (Figure 11)

Vacuum break hose (67)

MODEL 1MEF CARBURETOR 6C1-7

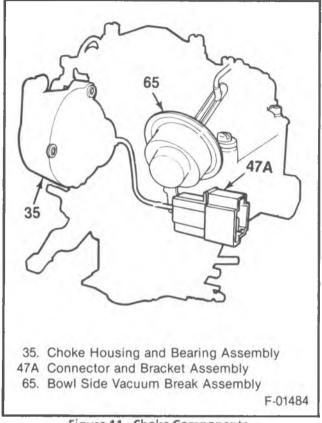


Figure 11 - Choke Components

- Air horn to float bowl (vacuum break attaching) screws (111) and bowl side vacuum break assembly (65).
 - Disconnect vacuum break from vacuum break link (69A).
 - Allow choke wire connector bracket assembly (47A) to hang freely.

Choke Housing

+→ Re

Remove or Disconnect (Figure 12)

- Choke housing attaching screws (36, 37), and choke housing and bearing assembly (35).
 - Disconnect choke housing from choke link (20A).

Fast Idle Cam and Link



Remove or Disconnect (Figure 13)

- Fast idle cam attaching screw (12), cam (10) and cam link (15).
 - Disconnect fast idle cam link from choke shaft lever (20)

AIR HORN COMPONENTS



Remove or Disconnect (Figure 16)

1. Air horn to float bowl screw assemblies (105, 108).

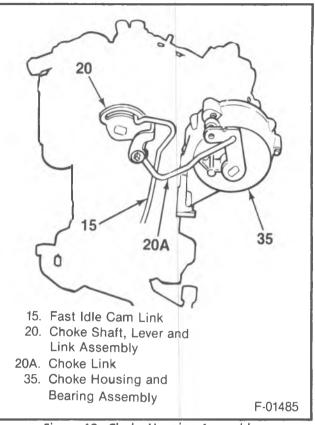


Figure 12 - Choke Housing Assembly

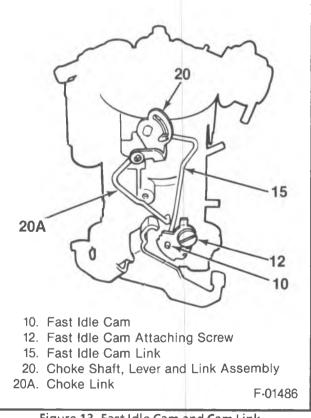


Figure 13- Fast Idle Cam and Cam Link

6C1-8 MODEL 1MEF CARBURETOR

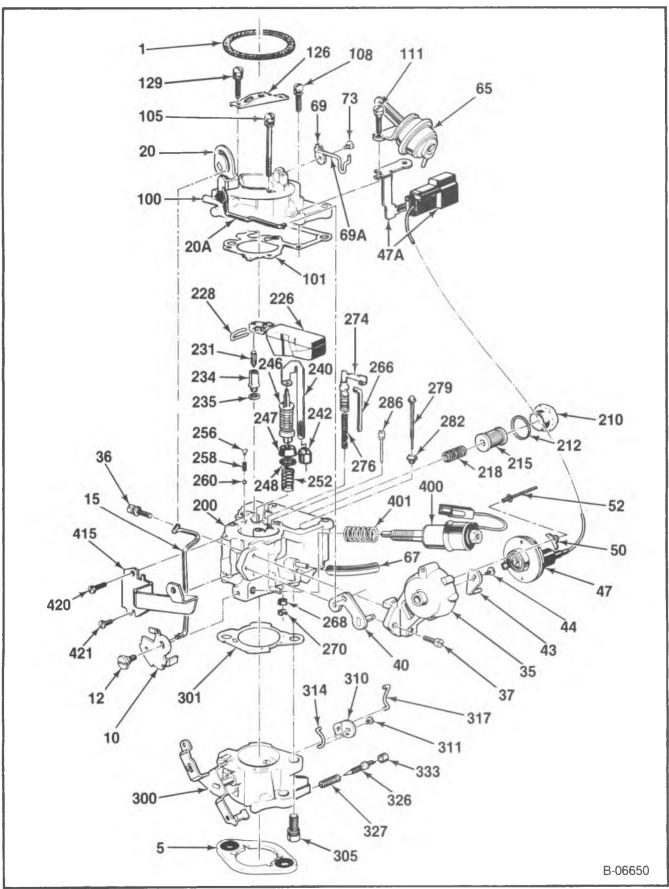


Figure 14 - Monojet - Model 1MEF

MODEL 1MEF CARBURETOR 6C1-9

MODEL 1MEF CARBURETOR

Parts Identification

Figure 15 -- Monojet - Model 1MEF

2.	Air	horn	assem	bly	(100).
----	-----	------	-------	-----	--------

3. Air horn to float bowl gasket (101).

• Discard gasket.

Further disassembly of the air horn is not required. Do not remove the staked choke valve screws, or the vacuum break lever attaching screw, which is installed with thread locking compound.

NOTICE: Do not turn or remove the metering rod adjusting screw (Figure 6). Unnecessary

adjustment of this screw could result in engine damage or increased exhaust emissions.

FLOAT BOWL COMPONENTS

Float and Float Needle



Remove or Disconnect (Figure 17)

Float (226) and hinge pin (228). Pull up on hinge pin.

6C1-10 MODEL 1MEF CARBURETOR

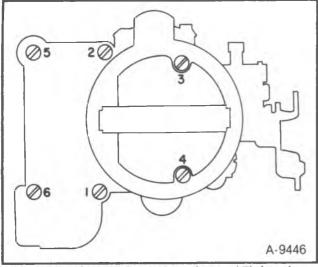


Figure 16 - Air Horn Screw Location and Tightening Sequence

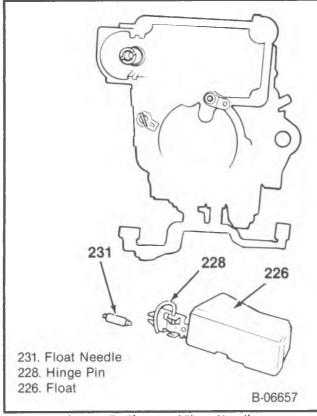


Figure 17 - Float and Float Needle

2. Float needle (231) from needle seat (234).

Pump and Power Piston



Remove or Disconnect (Figures 18 - 22)

- Pump lever attaching screw (311).
- Pump and power rod lever (310), power rod link (314), and pump link (317) as follows:
 A. Close throttle

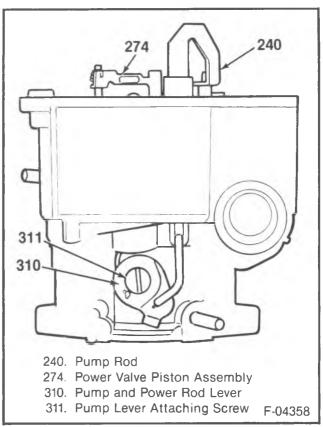


Figure 18- Pump and Power Rod Lever

- Remove pump and power rod lever (310) from end of throttle shaft.
- C. Press down on power valve piston assembly (274), and disconnect power rod link (314) from power piston rod (266).
- D. Press down on pump rod (240), and disconnect pump link (317) from slot in rod.
- 3. Pump rod (240) and pump assembly (246).
 - Disa


Disassemble (Figure 21)

- Pump plunger spring (248) and cup (247) from pump assembly (246).
- 4. Pump rod seal (242) from boss on float bowl.
- 5. Pump return spring (252) from pump well.
- 6. Power valve piston assembly (274), metering rod and spring assembly (279), and power piston rod (266).



Disassemble (Figure 22)

- Metering rod and spring assembly (279) from metering rod hanger.
- 7. Power piston spring (276) from float bowl.

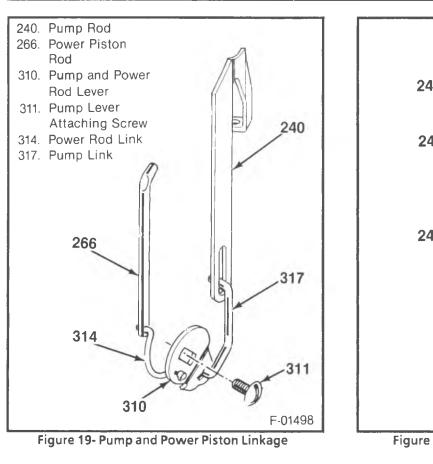

MODEL 1MEF CARBURETOR 6C1-11

<image>

Figure 21 - Pump Plunger Cup and Spring

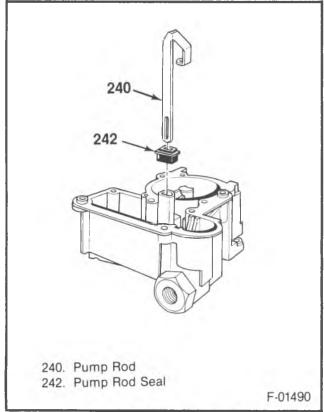


Figure 20 - Pump Rod Seal

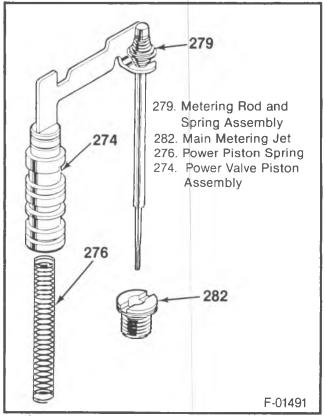


Figure 22 - Power Piston, Metering Rod and Jet

6C1-12 MODEL 1MEF CARBURETOR

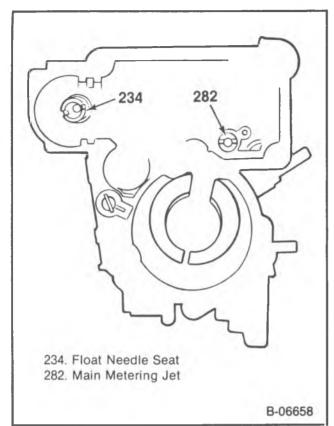


Figure 23 - Float Needle Seat and Main Metering Jet

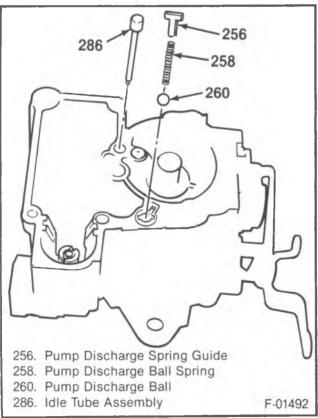


Figure 24 - Idle Tube and Pump Discharge Ball

Float Needle Seat and Main Metering Jet

++

1.

++

++

Remove or Disconnect (Figures 23, 22)

- Float needle seat (234) and seat gasket (235).
- 2. Main metering jet (282).

Idle Tube Assembly

- ►→ Remove or Disconnect (Figure 24)
- Idle tube assembly (286).
 - Invert carburetor, and catch idle tube.

Pump Discharge Ball and Spring

- Remove or Disconnect (Figure 24)
- Pump discharge spring guide (256).
 Use needle nose pliers.
- Pump discharge ball spring (258), and ball (260).
 Invert carburetor, and catch spring and ball.

THROTTLE BODY COMPONENTS

Idle Mixture Needle

Remove or Disconnect (Figure 25)

Tool required:

J-29030-B or BT-7610B, Idle Mixture

- Socket (Adjusting Tool). Idle mixture needle (326) and spring (327)
- Count, and make a record of, number of turns needed to lightly bottom needle, for use in reassembly.


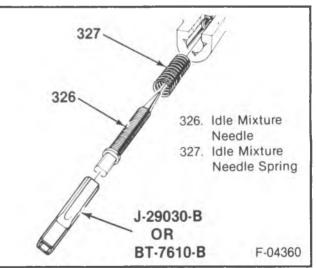


Figure 25 - Idle Mixture Needle and Spring

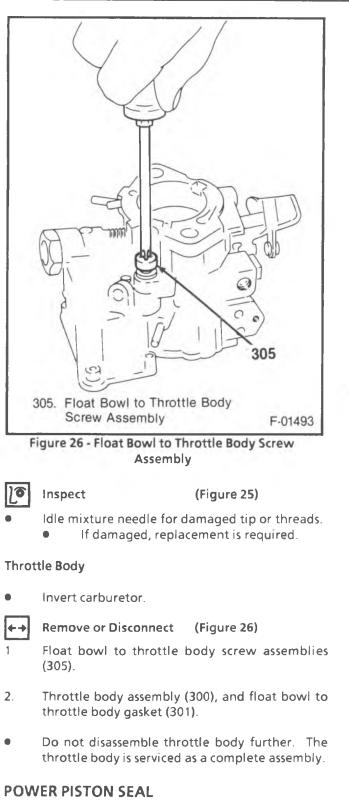

MODEL 1MEF CARBURETOR 6C1-13


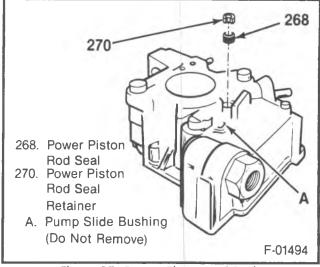


Figure 27 - Power Piston Rod Seal

CLEANING, INSPECTION AND REPAIR

Inspect

If an excessive amount of foreign material is found in the float bowl, check tank(s) and fuel lines for the source.

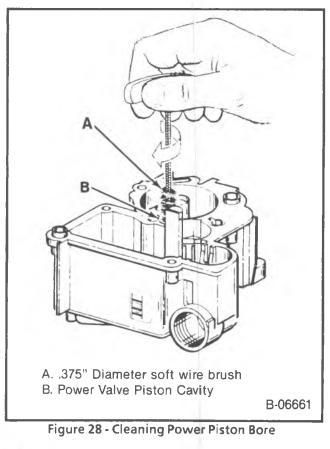



Clean

(Figure 28)

Power piston bore of float bowl

Invert float bowl.

++

Remove or Disconnect (Figure 27)

- Power piston rod seal retainer (270). Use small screwdriver or awl.
- 2. Power piston rod seal (268).

6C1-14 MODEL 1MEF CARBURETOR

- Use 0.375 inch soft wire brush. Turn clockwise through full length of the power piston bore. Turn brush several more turns, to remove dirt and varnish.
- 2. Metal carburetor parts in cold immersion type cleaner, Carbon X (X-55) or equivalent.

NOTICE: Do not immerse idle stop solenoid, electric choke cover and stat assembly, vacuum break, float, pump plunger, and seals in cleaner, as they may become non-functional, swell, harden or distort.

- 3. Blow out all passages in the castings with compressed air.
 - Do Not pass drill bits or wire through main metering jet or other passages.

Inspect

Check the following items, and if the condition listed is noted, clean, repair or replace the components.

- Air and fuel passages, and metering parts, for dirt or burrs.
- Mating surfaces of castings, for nicks or damage that would prevent sealing air or fuel.
- Power valve piston assembly for free movement in bore.
- Power piston spring for being distorted.
- Choke valve for freedom of movement.
- Throttle shaft for freedom of movement. If cleaning does not correct condition, replace throttle body assembly.
- Throttle valve for nicks or damage. If noted, replace throttle body assembly.
- Idle mixture needle for grooves, ridges or bends.
- Levers for looseness on shafts, or wear in holes. If throttle lever is loose, replace throttle body assembly.
- Links for wear or rubbing against other components.
 - Correct cause, and replace if necessary.
- Float, float lever and hinge pin for distortion, binds and burrs.
- The float for being loaded.
 - Check weight of float in comparison with a new float, and replace if heavier.
- Plastic parts for cracks, damage, etc.

PUMP SYSTEM CHECK

Inspect

10

(Figures 21, 24, 7)

Perform this check with a new pump cup installed on the pump plunger, and with the pump discharge ball, ball spring and spring guide installed.

- 1. Fill empty float chamber and pump well with a clean solvent, such as mineral spirits.
- 2. Seal the pump discharge passage on top of the pump discharge spring guide with a finger. Use other hand to push pump assembly slowly downward in pump well.
 - Pump assembly should not travel to bottom of well. Only movement should be compressing of the duration spring.
 - If pump assembly moves down in well, this may indicate that the pump cup is not sealing properly or that the pump well is worn or scored.
- With clean solvent in float chamber and pump well, slowly move pump assembly down in pump well until solvent is visible at top of the pump discharge spring guide.
- Remove pump assembly, continue to observe solvent level at the spring guide.
 Solvent level should not lower.
 - If level lowers, the discharge ball may not be seating correctly because of foreign material, damage to the ball, or because the seat for the ball needs restaking.
- 5. Satisfactory pump system operation requires that these checks be successful. After cleaning or parts replacement, repeat procedure.

VACUUM BREAK CHECKING PROCEDURE

Inspect

(Figures 29, 30)

Tool required: J-23738-A or BT-7517 - Hand Operated Vacuum Pump.

1. If the vacuum break has an air bleed hole, plug it as shown, during this checking procedure.

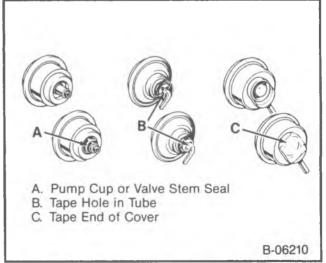


Figure 29 - Vacuum Break Information

- Apply 51kPa (15" Hg) vacuum to the vacuum break.
 - Apply finger pressure to the plunger to see if it has moved through full travel. If not, replace the vacuum break.
 - Observe vacuum gage. Vacuum should hold for at least twenty seconds. If not, replace the vacuum break.
- 3. Replace vacuum break hose if it is cracked, cut or hardened.

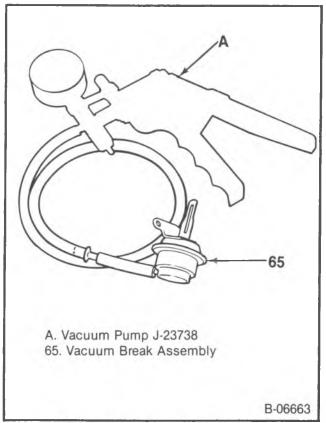


Figure 30 - Checking Vacuum Break

IDLE STOP SOLENOID CHECKING PROCEDURE

Check the idle stop solenoid (400) electrically, using a 12 volt automotive battery.

- 1. Hold the solenoid plunger in (against the internal stop), using finger pressure.
- 2. Apply + 12 volts to the terminal and -12 volts to the solenoid body.
- 3. If the solenoid plunger does not extend when the voltage is applied, replace the solenoid.

ELECTRIC CHOKE COVER AND STAT ASSEMBLY REPLACEMENT

The electric choke cover and stat assembly may be removed for replacement or to access the choke shaft and lever assembly as follows:

Electric Choke Cover and Stat



1.

Remove or Disconnect (Figure 31)

- Heads of choke cover attaching rivets (52).
 Use 4 mm (5/32") drill bit.
- 2. Choke cover retainers (50).
- 3. Electric choke cover and stat assembly (47).
- 4. Remaining pieces of rivets in housing.
 Use punch to drive out.

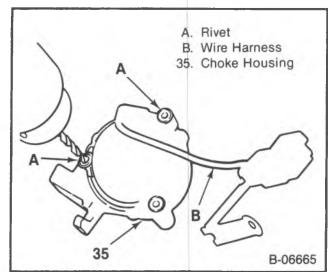


Figure 31 - Removing Choke Cover Attaching Rivets

Choke Housing (Disassemble For Cleaning)

₩

(Figure 32)

- 1. Stat lever attaching screw (44).
- 2. Choke stat lever (43).

Disassemble

3. Choke shaft and lever assembly (40).

Clean

Choke housing and bearing assembly (35), in cold immersion type cleaner, Carbon X (X-55) or equivalent.

MODEL 1MEF CARBURETOR 6C1-16


Choke Housing

Assemble



(Figure 32)

- Choke shaft and lever assembly (40) in choke 1. housing (35).
- Choke stat lever (43) on flats of choke shaft 2 assembly (40).
 - Line-up gaging hole in choke shaft lever with hole in housing, install stat lever on shaft in the four o'clock position.
- 3. Stat lever attaching screw (44).

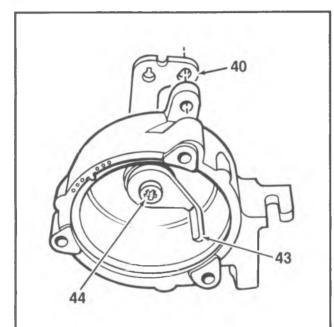

- 40. Choke Shaft and Lever Assembly
- 43. Choke Stat Lever
- 44. Stat Lever Attaching Screw

F-04361


Figure 32 - Choke Housing

Electric Choke Cover and Stat

1.

Install or Connect (Figures 32, 33)

- Electric choke cover and stat assembly (47) in choke housing (35) as follows:
 - Line up gaging hole in choke shaft lever Α. (40) with hole in housing, install choke cover with stat tang under stat lever.
 - Rotate choke cover to line-up notch in the Β. cover with the projection on the housing.
- Choke cover retainers (50) and attaching rivets 2. (52).
 - Use blind rivet tool to install rivets.

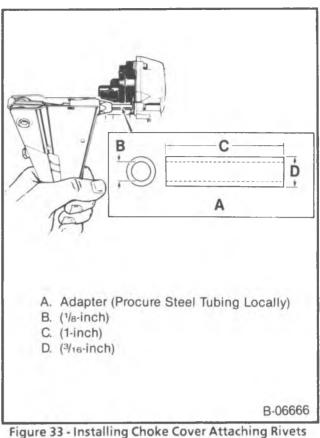

- - It may be necessary to use an adapter (tube) if the tool interferes with the electrical connector on the electric choke cover and stat (47)
 - Instructions are included in choke cover retainer kit

CARBURETOR REASSEMBLY

POWER PISTON ROD SEAL (In Float Bowl)

++

Install or Connect (Figure 27)

- New power piston rod seal (268) in float bowl. 1
- New power piston rod seal retainer (270). 2. Install flush with casting surface.

THROTTLE BODY COMPONENTS

Throttle Body

Invert float bowl (200). •

Install or Connect ++

(Figure 26)

- New float bowl to throttle body gasket (301). Install over locator bosses on float bowl.
- 2 Throttle body assembly (300)

MODEL 1MEF CARBURETOR 6C1-17

- 3. Float bowl to throttle body screw assemblies (305).
- হ্ম ।

Tighten

Screw assemblies to 20N + m (15 ft.lbs.).

Idle Mixture Needle

Support carburetor.

Install or Connect

(Figure 25)

Tool required:

J-29030-B or BT-7610B, Idle Mixture Socket (Adjusting Tool).

- Idle mixture needle (326) and spring (327).
 - Turn needle in to lightly bottom, then back out number of turns counted during disassembly.
 - Final idle mixture adjustment is made on the vehicle. For information on the idle mixture adjustment procedure, refer to Carburetors (SEC. 6C1) in the 1987 Light Duty Trucks Service Manual.

FLOAT BOWL COMPONENTS

If replacing the float bowl assembly, transfer the identification number to the new float bowl at location shown, (figure 1). Follow the instructions on the envelope included in the service package.

Pump Discharge Ball and Spring

	++
1	1

Install or Connect (Figure 24) Pump discharge ball (260).

- 2. Pump discharge ball spring (258).
- Pump discharge spring guide (256).
 Install flush with casting surface.

Idle Tube Assembly



Install or Connect (Figure 24)

- Idle tube assembly (286).
- Should be flush with casting surface.

Main Metering Jet and Float Needle Seat



Install or Connect (Figures 22, 23)

- 1. Main metering jet (282).
- 2. Float needle seat (234) with new gasket (235).

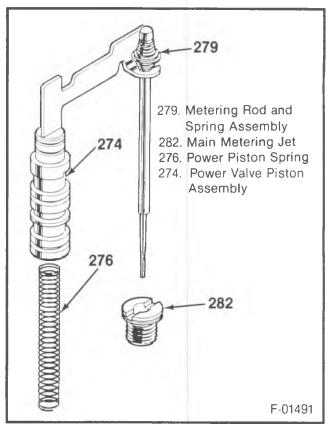


Figure 34 - Power Piston, Metering Rod and Jet

POWER PISTON AND PUMP



1

Install or Connect (Figures 34, 20, 35)

- Power piston spring (276) in float bowl.
- 2. Power piston rod (266) with piston drive end facing away from piston cavity.
- 3. Power valve piston assembly (274), *without* the metering rod spring assembly (279).
 - Press down on piston and rotate piston rod to engage slot in piston.



(Figure 21)

- Pump assembly (246), with new pump plunger cup (247), and spring (248), (if not installed for pump system check).
- 4. Pump return spring (252) in pump well.
- New pump rod seal (242) over boss on float bowl.
- 6. Pump assembly (246) and pump rod (240).

Assemble



(Figure 35)

Pump link (317) and power rod link (314) to pump and power rod lever (310) as shown in Figure 35.

6C1-18 MODEL 1MEF CARBURETOR

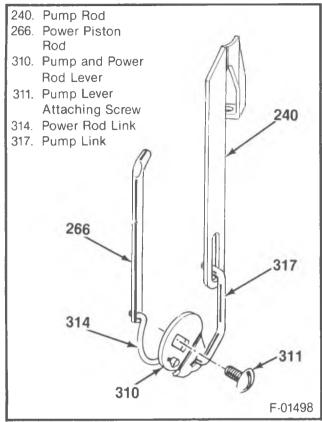


Figure 35 - Pump and Power Piston Linkage

- Pump and power rod lever and links to 7. carburetor as follows:
 - Press down on pump rod (240) and Α connect pump link (317) to pump rod.
 - Press down on power valve piston Β. assembly (274) and connect power rod link (314) to power piston rod (266).
 - Close throttle and install pump and C. power rod lever (310) on flats of throttle shaft.
- 8. Pump lever attaching screw (311).

METERING ROD ADJUSTMENT



(Figures 36, 44)


Tool Required:

J-9789-D or BT-3005A, Universal Carburetor Gage Set

Metering Rod

Adjust

- Specification is in Figure 44.
- Close the throttle valve completely, and press the power valve piston down against its stop.
- Swing the metering rod hanger over the flat bowl surface next to the carburetor bore
- Gage between the end of the metering rod hanger and the top of the casting

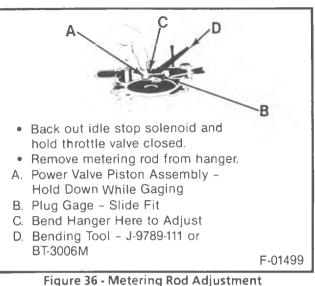

- - Use the specified plug gage.
- Gage should have a slide fit.
- If an adjustment is needed, bend at point "C" shown in Figure 36.
- 9 Install metering rod and spring assembly (279) as follows:
 - Α. Hold throttle wide open.
 - Β. Position metering rod in main metering jet, then connect to power piston metering rod hanger, with metering rod spring on top of hanger.

FLOAT AND FLOAT NEEDLE

++

Install or Connect (Figure 17)

- Float needle (231) in seat (234) 1.
- 2. Float hinge pin (228) through float lever
- 3. Float (226) and hinge pin.

FLOAT ADJUSTMENT

Adjust

(Figures 37, 44)

Tool Required: J-34817-A or BT-8426, Float Positioning Tool Kit

- Float Level.
 - Specification is in Figure 44.

AIR HORN COMPONENTS




1

Install or Connect (Figure 38)

- Air horn to float bowl gasket (101) Slit portion over metering rod hanger
- Air horn assembly (100)
- 2

MODEL 1MEF CARBURETOR 6C1-19

- 3. Long air horn to float bowl screw assemblies (105) at locations #1, 3 and 4, short screw assembly (108) at location #6.
 - Finger tighten only.

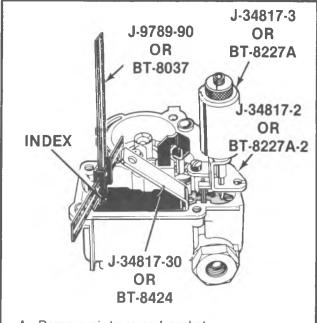

- A. Remove air horn and gasket.
- B. Attach J-34817-2 or BT-8227A-2 to float bowl using an air horn attaching screw.
- C. Place J-34817-3 or BT-8227A in base with contact pin resting on outer edge of float lever.
- D. Measure distance from top of casting to top of Index at toe of float. Use J-9789-90 or BT-8037
- E. If more than $\pm 2/32$ " from specification, use J-34817-30 or BT-8424 to bend lever up or down. Remove bending tool and measure, repeating until within specification.
- F. Check float alignment. G. Reassemble carburetor.

B-06669

Figure 37 - Float Adjustment

CHOKE COMPONENTS

Fast Idle Cam and Link

Install or Connect (Figure 13)



Fast idle cam link (15) through slot in choke shaft lever (20).

- 2 Attach fast idle cam (10) to cam link (15).
 - Unloader tang on cam should face outward
- 3. Fast idle cam attaching screw (12).

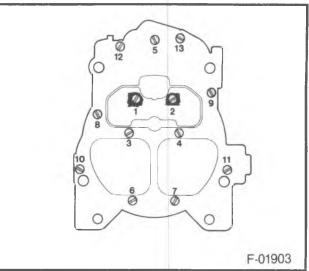


Figure 38 - Air Horn Screw Location and Tightening Sequence

Choke Housing

|++| Install or Connect (Figure 12)

- 1 Connect choke link (20A) to choke shaft and lever assembly (40), then position choke housing and bearing assembly (35) on float bowl.
 - Choke shaft lever should be facing upward.
- 2. Install choke housing attaching screws as follows:
 - Δ Start countersunk attaching screw (37). It is slightly longer than throttle return spring anchor bracket attaching screws (420).
 - Start attaching screw assemblies (36). Β.
 - Tighten countersunk screw (37), then С. tighten screw assemblies (36).

Vacuum Break

++ 1.

Install or Connect (Figures 11, 38)

- Connect bowl side vacuum break assembly (65) to vacuum break link (69A)
- Position choke wire connector and bracket 2. assembly (47A) under vacuum break bracket.
- 3 Install air horn to float bowl (vacuum break attaching) screws (111).
 - Tighten all air horn to float bowl screws (in sequence shown in Figure 38.)

THROTTLE RETURN SPRING BRACKET



(Figures 14, 15)

bracket attaching screws (420, 421)

Install or Connect

Throttle return spring anchor bracket (415) with

6C1-20 MODEL 1MEF CARBURETOR

IDLE STOP SOLENOID

++

Install or Connect (Figures 14, 15)

- Idle stop solenoid (400) and spring (401).
 - Use 9/16" socket or hex wrench on end of solenoid body.
 - Turn solenoid in, until plunger just contacts throttle lever.

FUEL INLET NUT AND FILTER

++

Install or Connect (Figure 10)

- 1. Fuel filter spring (218), in float bowl.
- 2. New gasket (212), on fuel inlet nut (210).
- 3. Inlet nut with new filter (215).



Tighten

Fuel inlet nut to 45 N·m (33 ft.lbs.).

CHOKE ADJUSTMENTS

- Tools required: J-9784-D or BT-3005A, Universal Carburetor Gage Set J-23738-A or BT-7517, Hand Operated Vacuum Pump
- Specifications are in Figure 44.

CHOKE STAT LEVER ADJUSTMENT

P

Adjust (Figure 39)


- Place the fast idle cam follower on the highest step of the fast idle cam.
- Hold the choke valve completely closed.
- Insert a 3 mm (0.120 inch) plug gage through the hole in the lever, and into the hole in the choke housing.
- If gage does not pass freely through both holes, bend choke link at point shown in Figure 39 to align the holes.

CHOKE LINK (FAST IDLE CAM) ADJUSTMENT



Adjust (Figures 40, 44)

- Position the fast idle cam follower on the second step of the fast idle cam against the rise of the high step.
- Hold down on the choke valve with the fast idle cam link in the end of the choke lever slot.
- Check the gap between the lower edge of the choke valve and the air horn wall.
- If an adjustment is needed, bend the fast idle cam link at the point shown in Figure 40

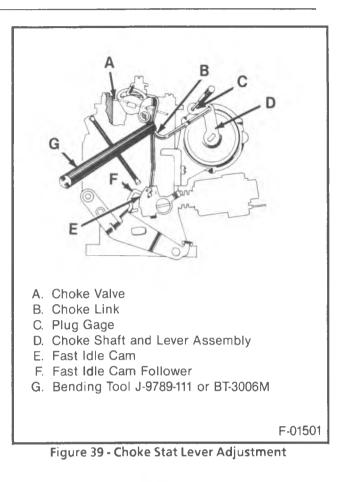

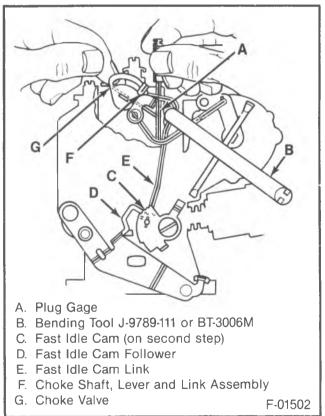


Figure 40 - Choke Link (Fast Idle Cam) Adjustment

MODEL 1MEF CARBURETOR 6C1-21

VACUUM BREAK ADJUSTMENT

ß

Adjust (Figures 41 - 42, 44)

- Place the fast idle cam follower on the highest step of the cam.
- If vacuum break has a bleed orifice (hole), plug it as shown, during the adjustment.
- Apply 51kPa (15" Hg) vacuum to the vacuum break. Push down on the choke valve. (Compress the plunger bucking spring and seat the plunger stem.)
- Check the gap between the lower edge of the choke valve and the air horn wall.
- If an adjustment is needed, bend the vacuum break link at the point shown in inset, Figure 42.
- Release the vacuum source and apply it again.
- Check the gap once more, and adjust as needed.

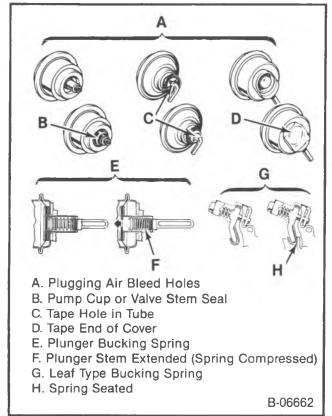



Figure 41 - Vacuum Break Adjustment Information

CHOKE UNLOADER ADJUSTMENT


r	_		-		
I		14		н	
I		ĸ	7	1	
u	1	7			
1	U				
L	-	_	_	-	

Adjust (Figures 43, 44)

- Hold the throttle lever in the wide open throttle position.
- Hold down on the choke valve with the fast idle cam link in the end of the choke lever slot.
- Check the gap between the lower edge of the choke valve and the air horn wall.
- If adjustment is needed, bend the unloader tang on throttle lever as shown in inset of Figure 43

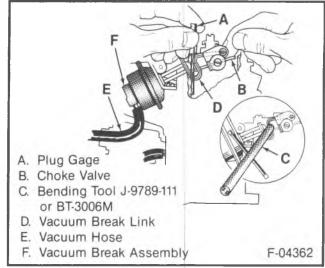



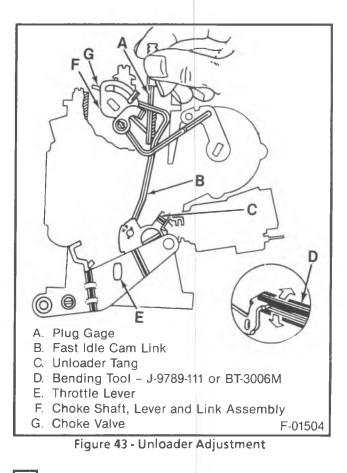

+

Install or Connect

Carburetor on vehicle, with new flange gasket(s).

Adjust

- Idle mixture and idle speeds.
 - For information on idle mixture and idle speed adjustments, refer to Carburetors (SEC. 6C1) in the 1987 Light Duty Trucks Service Manual

6C1-22 MODEL 1MEF CARBURETOR


SPECIFICATIONS

1MEF CARBURETOR

Float Level .									. 11/32 inch
Metering Rod .									. 0.090 inch
Choke Stat Lever									. 0.120 inch
Choke Link - Fast	Idle	Car	n						. 0.275 inch
Vacuum Break									
Unloader .									. 0. 520 inch

Figure 44 Specifications

SPECIAL TOOLS

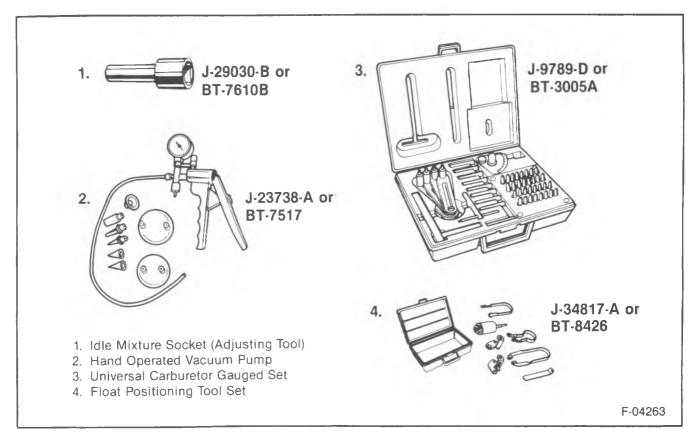

SECTION 6C2

MODEL M4MEF CARBURETOR

CONTENTS

SUBJECT

Carburetor Identification	
General Description.	6C2- 2
Carburetor Disassembly	
Cleaning And Inspection	6C2-13
Pump System Checking Procedure	6C2-14
Vacuum Break Checking Procedure	6C2-14
Idle Stop Solenoid Checking Procedure	6C2-15
Carburetor Reassembly.	6C2-15
Adjustment Procedures	6C2-19
Specifications	6C2-25
Special Tools	6C2-16

CARBURETOR IDENTIFICATION

Listed below are model identification numbers for carburetor M4MEF.

MODEL	MODEL NUMBER	APPLICATION
M4MEF	17088040	FED. 5.7L V8 W/MT
M4MEF	17088041	FED. 5.7L V8 W/AT
M4MEF	17085004	FED. 7.4L V8 W/MT
M4MEF	17085212	FED. 7.4L V8 W/AT

The carburetor model identification number is stamped vertically on the float bowl, near the secondary throttle lever, as shown, (Figure 1). Refer to this part number when servicing the carburetor. If replacing the float bowl assembly, transfer the identification number to the new float bowl. Follow instructions on the envelope included in the service package. Carburetor parts are shown in the disassembled view (Figure 8) and are identified by name on the facing page (Figure 9).

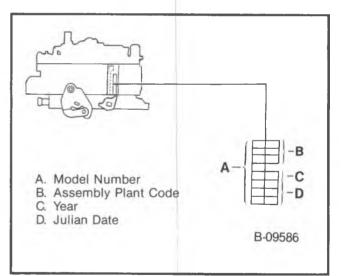


Figure 1 -- Carburetor Identification

PAGE

6C2-2 MODEL M4MEF CARBURETOR

GENERAL DESCRIPTION

The letters and number in the model name M4MEF describe specific features of the carburetor:

- It has a Modified open-loop primary metering M: system.
- 4M: A member of the Quadrajet (four barrel, two stage) carburetor family.
 - E: It has an integral Electric choke.
 - It has adjustable wide open throttle mixture **F**: control.

Model M4MEF is a four barrel, two stage carburetor, with three major sub-assemblies: the air horn, float bowl and throttle body. Each has six basic operating systems, shown in Figures 2 through 7:

•	FLOAT	•	POWER
•	IDLE	•	PUMP

- IDLE
- MAIN METERING

Important

The part throttle adjusting screw was set at the factory and then plugged. Any attempt to readjust this screw could result in increased exhaust emissions.

CHOKE

NOTICE: The rich stop adjusting bushing and the secondary well bleed adjusting screw (Figure 5) are also factory set. Any attempt to readjust them could result in engine damage or increased exhaust emissions.

IDLE STOP SOLENOID (ISS)

V8 Engines With Manual Transmission.

The electric Idle Stop Solenoid (ISS) found on these applications is used to provide the desired engine idle speed, and to prevent "dieseling" when the ignition is switched off.

UNIT REPAIR

The information that follows applies to a complete overhaul, after the carburetor has been removed from the engine, and includes: disassembly, thorough cleaning, inspection and replacement of all gaskets, seals, worn or damaged parts, and adjustment of individual systems.

Refer to Figures 8 and 9 for parts identification.

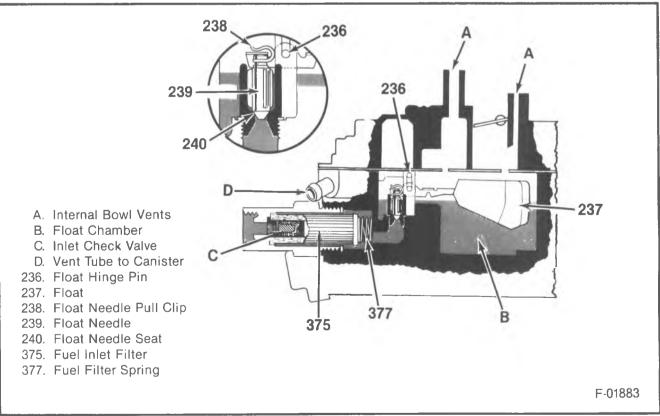


Figure 2 -- Float System

MODEL M4MEF CARBURETOR 6C2-3


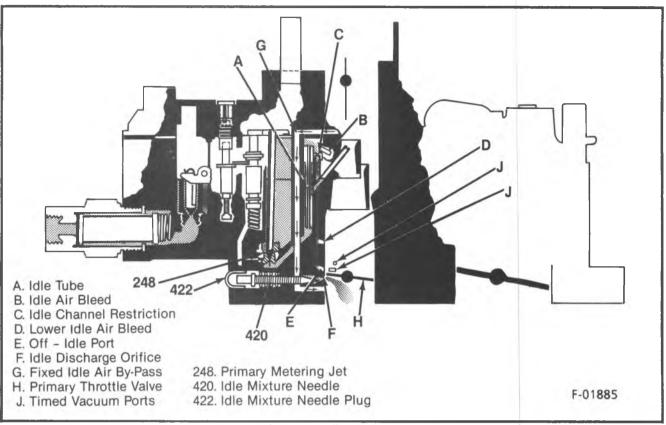


Figure 3 -- Idle System

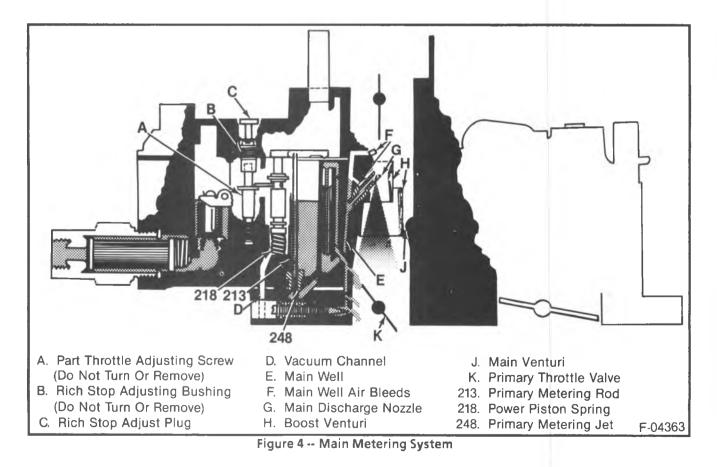

6C2-4 MODEL M4MEF CARBURETOR

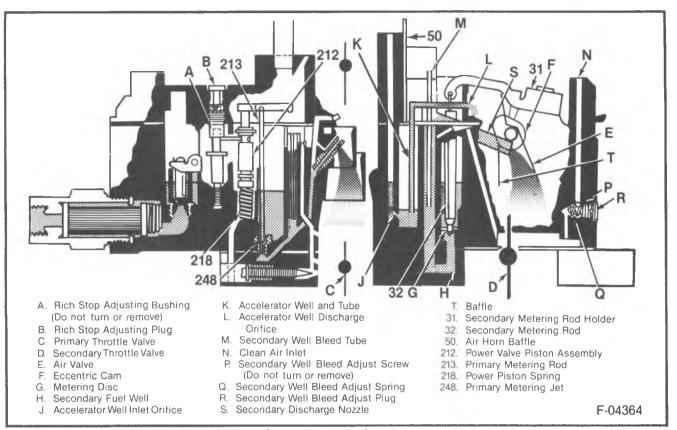


Figure 5 -- Power System

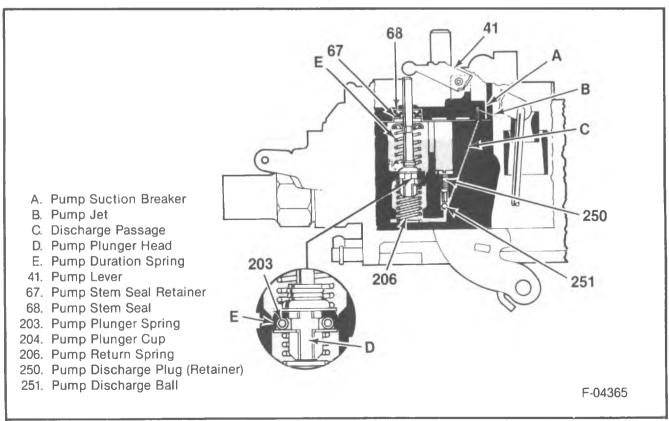


Figure 6 -- Pump System

MODEL M4MEF CARBURETOR 6C2-5

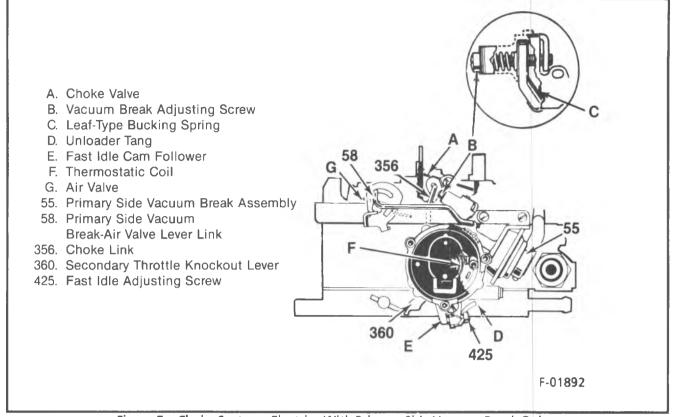


Figure 7 -- Choke System - Electric - With Primary Side Vacuum Break Only

CARBURETOR DISASSEMBLY

IDLE MIXTURE NEEDLE PLUGS

++

Remove or Disconnect

(Figure 10)

- 1. Invert and support carburetor to avoid damaging external components.
- 2. Make two parallel hacksaw cuts in the throttle body, between the locator points near one idle mixture needle plug (422). The distance between the cuts depends on the size of the punch to be used.
 - Cut down to the plug, but not more than 1/8" beyond the locator points.
- 3. Place a flat punch at a point near the ends of the saw marks. Hold the punch at a 45° angle, and drive it into the throttle body to break casting away and expose the plug.
- 4. Use center punch to break plug apart and uncoveridle mixture needle.
 - Remove all loose pieces of plug.

5. Repeat steps 2 through 4 for other needle plug.

CARBURETOR HOLDING STAND (Figure 11)

Tool Required: J-9789-118 or BT-3553 - Carburetor Holding Stand.

Place carburetor on holding stand.

NOTICE: Failure to place carburetor on holding stand could cause damage to throttle valves.

FUEL INLET NUT AND FILTER



(Figure 12)

- 1. Fuel inlet nut (370).
- Fuel inlet filter (375), inlet nut gasket (372), and filter spring (377).
 Discard gasket
 - Discard gasket.



Inspect

Cut filter open. If clogged, check tank(s) and fuel lines for source of material.

6C2-6 MODEL M4MEF CARBURETOR

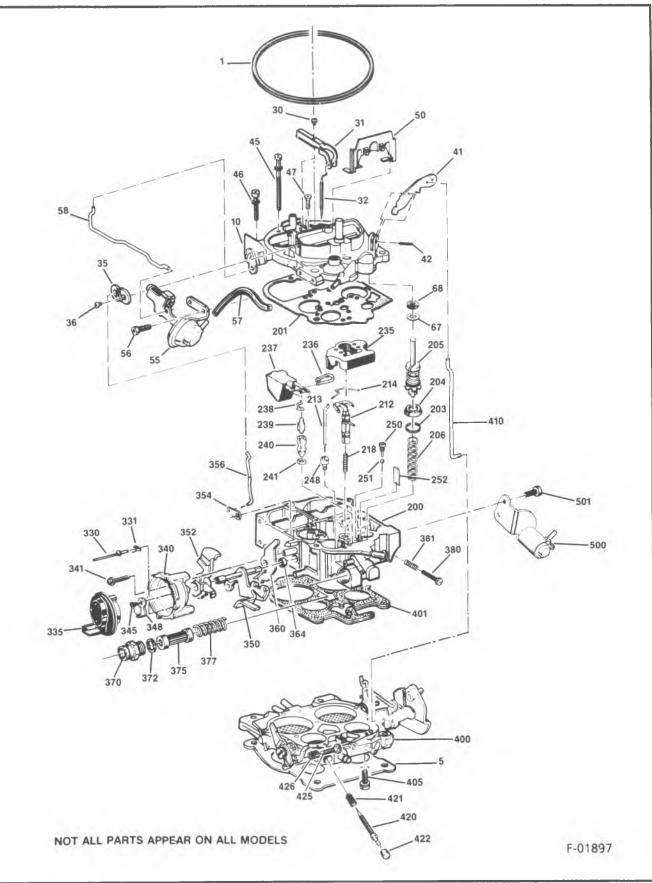


Figure 8 -- Model M4MEF

MODEL M4MEF CARBURETOR 6C2-7

	CARBURETOR MODEL M4MEF					
Parts Identification						
1	Gasket - Air Cleaner	240	Seat - Float Needle			
5	Gasket - Flange	241	Gasket - Float Needle Seat			
10	Air Horn Assembly	248	Jet - Primary Metering			
30	Screw - Secondary Metering Rod Holder	250	Plug - Pump Discharge (Retainer)			
	Attaching	251	Ball - Pump Discharge			
31	Holder - Secondary Metering Rod	252	Baffle - Pump Well			
32	Rod - Secondary Metering	330	Rivet - Choke Cover Attaching			
35	Lever - Choke	331	Retainer - Choke Cover			
36	Screw - Choke Lever Attaching	335	Electric Choke Cover and Stat Assembly			
41	Lever - Pump	340	Choke Housing Assembly			
42	Pin - Pump Lever Hinge	341	Screw and Washer Assembly - Choke Housing			
45	Screw Assembly - Air Horn to Throttle Body		to Float Bowl			
46	Screw Assembly - Air Horn to Float Bowl	345	Screw - Choke Stat Lever Attaching			
47	Screw - Air Horn to Float Bowl (Countersunk)	348	Lever - Choke Stat			
50	Baffle - Air Horn	350	Intermediate Choke Shaft, Lever and Link			
55	Vacuum Break Assembly - Primary Side (Front)		Assembly			
56	Screw - Primary Side (Front) Vacuum Break	352	Fast Idle Cam Assembly			
	Assembly Attaching	354	Lever - Intermediate Choke			
57	Hose - Primary Side (Front) Vacuum Break	356	Link - Choke			
58	Link - Primary Side Vacuum Break - Air Valve Lever	360	Lever - Secondary Throttle Lockout			
67	Retainer - Pump Stem Seal	364	Seal - Intermediate Choke Shaft			
68	Seal - Pump Stem	370	Nut - Fuei Inlet			
200	Float Bowl Assembly	372	Gasket - Fuel Inlet Nut			
200	Gasket - Air Horn to Float Bowl	375	Filter - Fuel Inlet			
201	Spring - Pump Plunger	377	Spring - Fuel Filter			
203	Cup - Pump Plunger	380	Screw - Throttle Stop			
204	Pump Assembly	381	Spring - Throttle Stop Screw			
205	Spring - Pump Return	400	Throttle Body Assembly			
212	Power Valve Piston Assembly	401	Gasket - Float Bowl to Throttle Body			
213	Rod - Primary Metering	405	Screw Assembly - Float Bowl to Throttle Body			
214	Spring - Primary Metering Rod	410	Link - Pump			
218	Spring - Power Piston	420	Needle - Idle Mixture			
235	Insert - Float Bowl	421	Spring - Idle Mixture Needle			
235	Hinge Pin - Float	422	Plug - Idle Mixture Needle			
230	Float	425	Screw - Fast Idle Adjusting			
237		426	Spring - Fast Idle Adjusting Screw			
	Pull Clip - Float Needle	500	Solenoid and Bracket Assembly			
239	Needle - Float	501	Screw - Bracket Attaching			

Figure 9 -- Model M4MEF

6C2-8 MODEL M4MEF CARBURETOR

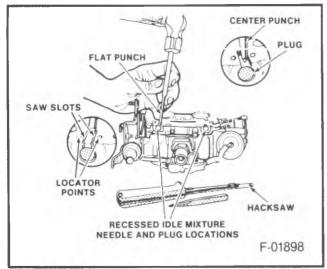


Figure 10 -- Removing Idle Mixture Needle Plugs

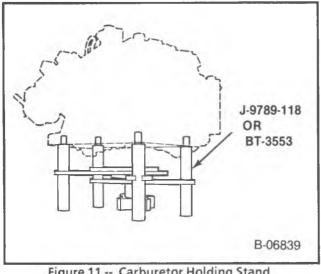


Figure 11 -- Carburetor Holding Stand

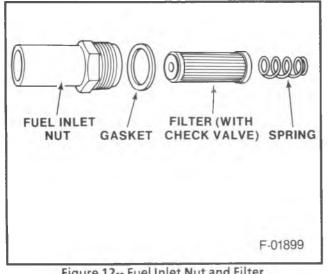


Figure 12-- Fuel Inlet Nut and Filter

SOLENOID AND BRACKET ASSEMBLY

(Figures 8, 9)

Bracket attaching screws (501), and solenoid and bracket assembly (500).

VACUUM BREAK ASSEMBLY

++	R
++	R

lemove or Disconnect (Figures 8, 9)

- Primary side vacuum break hose (57). 1
- Primary side vacuum break attaching screws 2. (56).
- 3. Primary side vacuum break assembly (55) and primary side vacuum break-air valve lever link (58)

AIR HORN COMPONENTS

Secondary Metering Rods

++

- **Remove or Disconnect** (Figure 13)
- Secondary metering rod holder attaching screw 1 (30).
- Metering rod holder (31), and metering rods 2. (32).

Choke Lever and Link



Remove or Disconnect (Figure 14)

- Choke lever attaching screw (36). 1.
- 2. Choke lever (35).
- 3. Choke link (356).

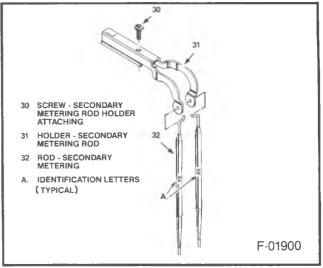


Figure 13 -- Secondary Metering Rods and Holder

MODEL M4MEF CARBURETOR 6C2-9

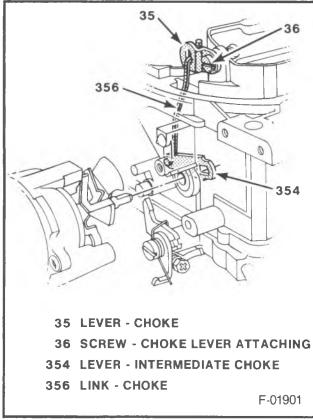


Figure 14 -- Choke Lever and Link

• Pull up on link, hold intermediate choke lever (354) outward with screwdriver. Twist link from lever.

Pump Lever and Link

---> Remove or Disconnect

Tool Required: J-25322 or BT-7523 - Pump Lever Pin Punch.

(Figure 15)

(Figure 16)

- 1. Pumplever (41).
 - Use tool J-25322 or BT-7523, or small punch, to drive pump lever hinge pin (42) inward, to release pump lever.
- 2. Pump link (410), from throttle lever.

Air Horn

1

Remove or Disconnect

Air horn screws:

- Air horn to throttle body screw assemblies (45).
- Air horn to float bowl screw assemblies (46).
 - Air horn baffle (50), if used.
- Air horn to float bowl (countersunk) screws (47).

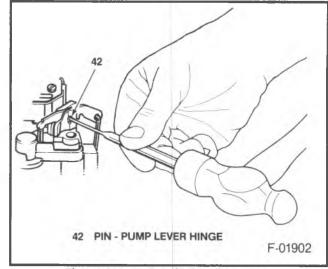


Figure 15 -- Removing Pump Lever

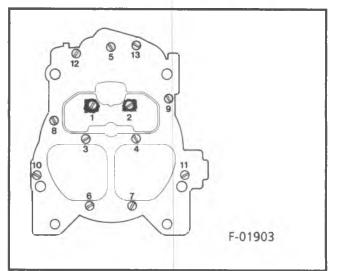


Figure 16 -- Air Horn Screw Location and Tightening Sequence

- 2. Air horn assembly (10).
 - Lift straight up.
 - Leave air horn gasket (201) on float bowl.

NOTICE: Use care when removing air horn, to prevent damage to tubes pressed into the air horn casting. (DO NOT remove tubes).

Pump Stem Seal

Invert air horn assembly.


Remove or Disconnect

+

(Figure 17)

- Pump stem seal (68).
 - Use small screwdriver to remove the seal retainer (67).
 - Use suitable tool to remove old staking.
- Do not disassemble air horn further.

6C2-10 MODEL M4MEF CARBURETOR

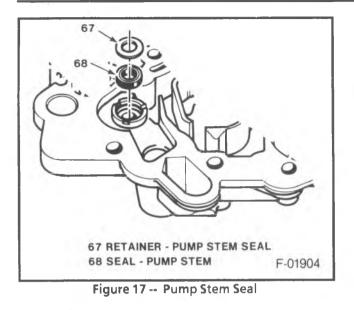

If it is necessary to replace the air valve return spring or secondary cam; a repair kit, with instructions, is available.

NOTICE: Do not turn nor remove the rich stop adjusting bushing (Figure 5). Unnecessary adjustment of this bushing could result in engine damage or increased exhaust emissions.

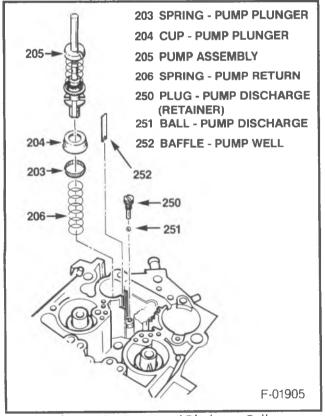


Figure 18 -- Pump and Discharge Ball

FLOAT BOWL COMPONENTS

Pump

1

++

1

- Remove or Disconnect ++
 - Air horn to float bowl gasket (201). Discard.
- 2 Pump assembly (205).
 - **Disassemble** (Figure 18)
 - Pump plunger spring (203), and cup (204).
- Pump return spring (206) from pump well. 3.

Power Valve Piston and Metering Rods

- - Remove or Disconnect (Figures 19 - 20)
- Power valve piston assembly (212) and primary metering rods (213).
 - Press down on piston stem and release it, causing the power piston to snap up against retainer. Repeat until free.

NOTICE: Do not use pliers on metering rod holder to remove power valve piston, as the holder could come loose from piston.

Important

(Figure 21)

(Figure 18)

Do not remove nor adjust the factory set part throttle adjusting (APT) screw, which could result in increased exhaust emissions.

If required, a replacement float bowl contains a preset APT adjusting screw.

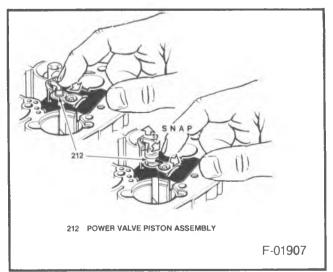
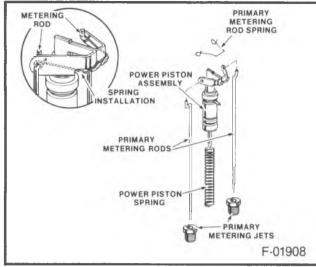


Figure 19 -- Removing Power Valve Piston Assembly

MODEL M4MEF CARBURETOR 6C2-11





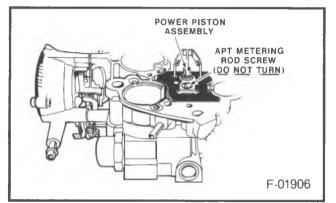


Figure 21 -- APT Metering Rod Screw

Disassemble

 \Rightarrow

(Figure 20)

- Primary metering rods (213) and metering rod spring (214), from power valve piston assembly (212).
- Note the position of the metering rod spring for reassembly.
- Remove power piston spring (218) from float bowl.

Float, Needle and Seat

++


(Figure 22)

Tool Required:

Remove or Disconnect

J-22769 or BT-3006M - Needle Seat Tool.

- 1. Float bowl insert (235).
- 2. Float (237), hinge pin (236), float needle (239) and pull clip (238).
 - Pull up on float hinge pin (236).

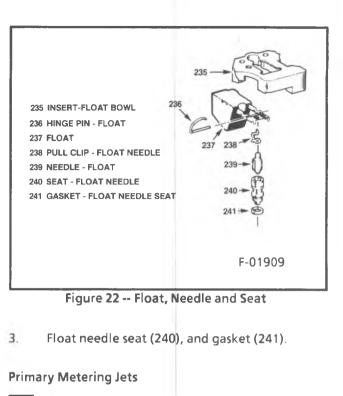

Remove or Disconnect

(Figure 20)

Primary metering jets (248) from float bowl.

NOTICE: Do not remove secondary metering discs. They are pressed into place, and if damaged, entire bowl replacement is required.

Pump Discharge Ball and Pump Well Baffle

++

Remove or Disconnect (Figure 18)

- 1. Pump discharge plug (retainer) (250).
- 2. Pump discharge ball (251).Invert bowl and catch ball.
- 3. Pump well baffle (252).

CHOKE COMPONENTS

The tamper resistant choke cover discourages unnecessary readjustment of the choke cover and stat assembly. However, for overhaul, it is necessary to remove this assembly.

Electric Choke Cover and Stat




Remove or Disconnect (Figure 23)

Heads of choke cover attaching rivets (330).

Use a 4 mm (5/32") drill bit.

6C2-12 MODEL M4MEF CARBURETOR

- 2. Choke cover retainers (331).
- 3. Electric choke cover and stat assembly (335).
- 4. Remaining pieces of rivets in housing.
 - Use punch to drive out.

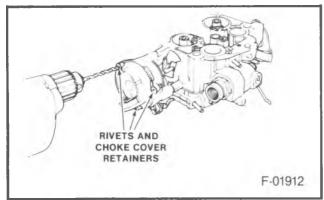



Choke Housing

++

Remove or Disconnect

(Figure 24)

- Choke housing to float bowl screw and washer assembly (341).
- 2. Choke housing assembly (340).
- Secondary throttle lockout lever (360).
- Intermediate choke lever (354).
 - Invert bowl.
- Intermediate choke shaft seal (364), from float bowl.
 - Do not remove bushing from float bowl.



Disassemble

(Figure 24)

(Figure 25)

- 1. Remove choke stat lever attaching screw (345).
- 2. Choke stat lever (348).
- 3. Intermediate choke shaft, lever and link assembly (350).
- 4. Fast idle cam assembly (352).

THROTTLE BODY COMPONENTS

Idle Mixture Needles



Remove or Disconnect

Tool Required: J-29030-B or BT-7610B, Idle Mixture Socket (Adjusting Tool).

35 LEVER - CHOKE 36 SCREW - CHOKE LEVER ATTACHING LINK - SECONDARY SIDE (REAR) VACUUM BREAK TO CHOKE (NOT USED ON ALL MODELS) 322 CHOKE HOUSING ASSEMBLY 341 SCREW AND WASHER ASSEMBLY - CHOKE HOUSING TO FLOAT BOWL 345 SCREW - CHOKE STAT LEVER ATTACHING 348 LEVER - CHOKE STAT 350 INTERMEDIATE CHOKE SHAFT, LEVER AND LINK ASSEMBLY 352 FAST IDLE CAM ASSEMBLY 354 LEVER - INTERMEDIATE CHOKE 356 LINK - CHOKE 35 360 "LEVER - SECONDARY THROTTLE LOCKOUT (4 BARREL ONLY) 362 SEAL - CHOKE HOUSING TO FLOAT BOWL 356 354 364 SEAL - INTERMEDIATE CHOKE SHAFT THOT AIR CHOKE MODELS ONLY 341

Figure 24 -- Choke Housing Assembly

- Idle mixture needles (420), and springs (421).
 - Count, and make a record of, number of turns needed to lightly bottom needles, for use in reassembly.



(Figure 25)

F-01913

Needles for damaged tip or threads.

If damaged, replacement is required.

Throttle Body

Invert carburetor.

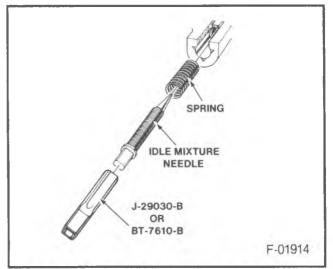


Figure 25 -- Idle Mixture Needle and Spring

THROTTLE BODY TO BOWL SCREWS (3)

Figure 26 -- Throttle Body Screw Location



Remove or Disconnect (Figure 26)

- . Float bowl to throttle body screw assemblies (405).
- 2. Throttle body assembly (400), and float bowl to throttle body gasket (401).

Discard gasket.

Do not disassemble throttle body further. The throttle body is serviced as a complete assembly.

CLEANING AND INSPECTION

If an excessive amount of foreign material is found in float bowl, check tanks and fuel lines for the source.



1.

Clean

(Figure 27)

- Power piston bore of float bowl.
 - Use 0.375 inch soft wire brush. Turn clockwise through full length of the power piston bore. Turn brush several more turns, to remove dirt and varnish.
- 2. Metal parts in cold immersion cleaner, X-55 or equivalent.

NOTICE: Do not immerse ISS, vacuum breaks, electric choke cover and stat assembly, float and float bowl insert, pump plunger, seals, etc., in cleaner as they may become non-functional, swell, harden, or distort.

- The plastic cam on the air valve shaft will withstand normal cleaning.
- 3. Rinse thoroughly after soaking.

MODEL M4MEF CARBURETOR 6C2-T3

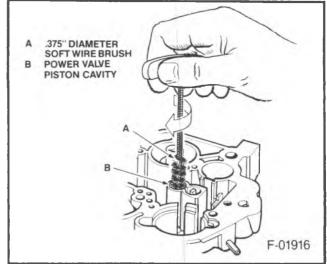


Figure 27 -- Cleaning Power Piston Bore

4. Blow dry with compressed air.

• Do Not pass drill bits or wire through jets or other passages.



Inspect

Check the following items and if the condition listed is noted: clean, repair or replace the components.

- Air and fuel passages, and metering parts, for dirt or burrs.
- Mating surfaces of castings for nicks or damage that would prevent sealing air or fuel.

IMPORTANT (Figure 28) If replacing float bowl, look for letters "MW", which indicate Machined pump Well, and determine the type of pump that can be used. If present, a new bowl must also have the letters.

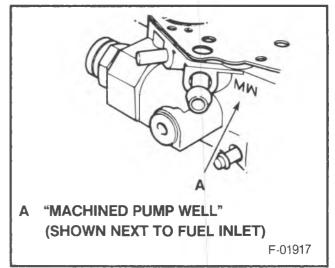


Figure 28 -- Machined Pump Well Indication

Power valve piston assembly for free movement in the bore.

- Power piston spring for being stretched or distorted.
- Choke valve and secondary air valves for freedom of movement.
- Throttle shafts for freedom of movement. If cleaning does not correct condition, replace throttle body assembly.
- Throttle valves for nicks or damage. If noted, replace throttle body assembly.
- Idle mixture needles for grooves, ridges or bends.
- Levers for looseness on shafts, or wear in holes. If throttle lever is loose, replace throttle body assembly.
- Links for wear or rubbing against other components.
 - Correct cause, and replace if necessary.
- Float, float lever and hinge pin for distortion, binds and burrs.
- The float for being loaded.
 - Check weight of float in comparison with a new float, and replace if heavier.
- Plastic parts for cracks, damage, etc.

PUMP SYSTEM CHECKING PROCEDURE

Inspect

(Figures 6, 18)

- Perform this check with a new pump cup installed on the pump plunger, and with the pump discharge ball, plug (retainer), and pump well baffle installed.
- 1. Fill empty float chamber and pump well with a clean solvent, such as mineral spirits.
- 2. Seal the two pump discharge passages on top surface of float bowl with two fingers. Use other hand to push pump assembly down slowly in pump well.
 - Pump assembly should not travel to bottom of well. Only movement should be compressing of the duration spring.
 - If pump assembly moves down in well, this may indicate that: the pump cup is not sealing properly, the pump well is worn or scored, or the pump discharge plug is leaking (as indicated by bubbles around plug).
- 3. With clean solvent in float chamber and pump well, slowly move pump assembly down in pump well until solvent is visible at top of pump discharge passages.

- 4. Remove pump assembly. Continue to watch solvent in passages. The level should not lower.
 - If level begins to drop, the discharge check ball may be: missing, not seating correctly because of foreign material, damaged, or, the seat for the ball may need restaking.
- 1

5.

Satisfactory pump system operation requires all above checks be successful. After cleaning or parts replacement, repeat procedure.

VACUUM BREAK CHECKING PROCEDURE



(Figures 29, 30)

Tool required:

- J-23738-A or BT-7517 Hand Operated Vacuum Pump.
- 1. If the vacuum break has an air bleed hole, plug it as shown, during this checking procedure.
- Apply 15" Hg (51kPa) vacuum to the vacuum break.
 - Apply finger pressure to the plunger to see if it has moved through full travel. If not, replace the vacuum break.
 - Observe vacuum gage. Vacuum should hold for at least twenty seconds. If not, replace the vacuum break.
- Replace vacuum break hoses that are cracked, cut or hardened.

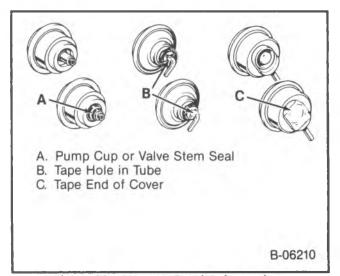


Figure 29 -- Vacuum Break Information

A VACUUM BREAK ASSEMBLY B VACUUM BREAK PLUNGER C LINK F-01918

Figure 30 -- Checking Vacuum Break

IDLE STOP SOLENOID CHECKING PROCEDURE

) Inspect

Check the idle stop solenoid (500) electrically, using a 12 volt automotive battery.

- Retract the solenoid plunger, using finger pressure.
- 2. Apply + 12 volts to the terminal and -12 volts to the solenoid body.
- 3. If the solenoid plunger does not extend when the voltage is applied, replace the solenoid with a new one.

CARBURETOR REASSEMBLY

THROTTLE BODY COMPONENTS

Throttle Body

++

Invert float bowl (200).

Install or Connect

(Figure 26)

- New float bowl to throttle body gasket (401).
 Install over locator pins on float bowl.
- 2. Throttle body assembly (400).
- Float bowl to throttle body screw assemblies (405).

MODEL M4MEF CARBURETOR 6C2-15

Idle Mixture Needles

→+ Install or Connect

(Figures 11, 25)

- Tools Required: J-9789-118 or BT-3553 - Carburetor Holding Stand. J-29030-B or BT-7610B - Idle Mixture Socket (Adjusting tool).
- 1. Place carburetor on J-9789-118 or BT-3553.
- 2. Idle mixture needles (420), and springs (421).
 - Use J-29030-B or BT-7610B to lightly seat each needle, then back out the number of turns counted in disassembly.
 - Final idle mixture adjustment is made on the vehicle. For information on the idle mixture adjustment procedure, refer to Carburetors (SEC. 6C1) in the 1988 Light Duty Trucks Service Manual.

CHOKE COMPONENTS

Choke Housing



(Figure 31)

 Fast idle cam assembly (352) to choke housing (340), with cam bushing facing away from housing.

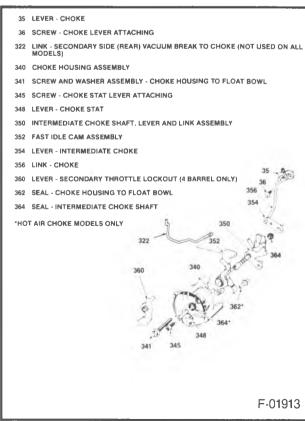


Figure 31 -- Choke Housing Assembly

6C2-16 MODEL M4MEF CARBURETOR

- Position tail of cam (weighted end) in line with housing attaching screw hole.
- Intermediate choke shaft assembly (350) into 2. the choke housing, so the vacuum break lever will surround the tail of the fast idle cam.
- Choke stat lever (348) on flats of intermediate 3. choke shaft, with stat lever tang lined up with vacuum break lever of intermediate choke shaft.
- Install choke stat lever attaching screw (345). 4.

Install or Connect (Figures 31, 32)

Tool Required:

J-23417 or BT-6911 - Choke Lever Installing Tool.

- 1 New intermediate choke shaft seal (364) in float bowl.
 - . Sealing lip faces outward.
- 2. Secondary throttle lockout lever (360).
- 3. Choke housing assembly (340) as follows:
 - Position intermediate choke lever (354) Δ in bowl cavity, using J-23417 or BT-6911.

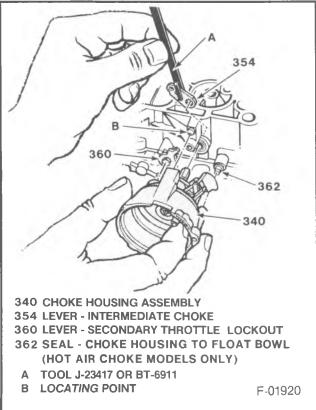


Figure 32 -- Installing Choke Housing Assembly

- Β. Guide intermediate choke shaft through slot in intermediate choke lever.
- 4 Choke housing to float bowl screw and washer assembly (341).

16 Inspect

Linkage for freedom of movement.

Important

Electric choke cover and stat assembly (335) should be installed after making choke stat lever adjustment.

FLOAT BOWL COMPONENTS

If replacing the float bowl assembly, transfer the identification number on the new float bowl at location shown, (Figure 1). Follow the instructions on the envelope included in the service package.

Pump Discharge Ball and Pump Well Baffle

Install or Connect ++

(Figure 18)

- 1.
- Pump well baffle (252).
- Slot toward bottom.
- 2. Pump discharge ball (251).
- 3. Pump discharge plug (retainer) (250).

Primary Metering Jets

- Install or Connect (Figure 33)
- Primary metering jets (248) in float bowl.


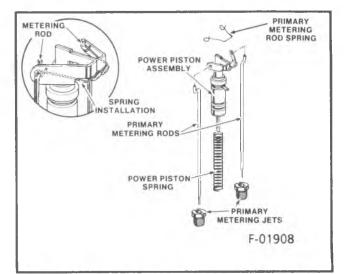


Figure 33 -- Power Piston, Metering Rods and Jets



→+

Tool Required: J-22769 or BT-3006M - Needle Seat Tool 1. Float needle seat (240) with new gasket (241).

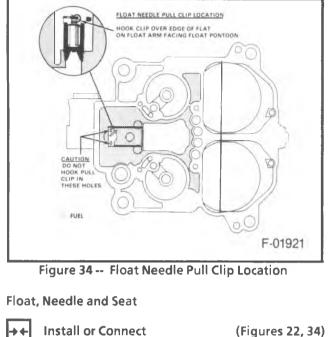

(Figures 22, 34)

- Float needle pull clip (238) to float needle Α. (239).
- Β. Float needle onto float lever as shown in Figure 34.
- С. Hinge pin (236) through float lever. Open end faces pump well.
- 2. Install float, needle, and hinge pin.

Adjust

(Figures 39, 50)

(Figures 19, 33)

Tools Required: J-9789-90 or BT-8037 - Float Level T-Scale. J-34817-A or BT-8426 - Float Positioning Tool Kit.

- Float Level. Specification is in Figure 50.
- 3. Install float bowl insert (235).

Power Valve Piston and Metering Rods



Assemble (Figure 33)

Primary metering rods (213), and metering rod spring (214), to power valve piston assembly (212).

++ 1

- Install or Connect
- Power piston spring (218).

MODEL M4MEF CARBURETOR 6C2-17

- 2. Install power valve piston assembly and primary metering rods, as follows:
 - Align pin on piston with slot in bore, and Α. primary metering rods in jets.
 - Β. Press plastic retainer flush with top of float bowl.
 - If necessary, use a small punch and hammer.

Pump



Assemble (Figure 18)

Pump assembly (205) with new pump plunger cup (204), and spring (203).



- 1 Pump return spring (206).
- 2. Pump assembly (205).
- 3. New air horn to float bowl gasket (201).

AIR HORN COMPONENTS

Pump Stem Seal

- ++ Install or Connect (Figure 17) New pump stem seal (68) in air horn. 1. . Sealing lip faces outward.
- 2. New seal retainer (67).
 - Lightly stake retainer in three different places than original stakings.

Lubricating Air Valve Spring Pin



Install or Connect (Figure 35)

Apply lithium grease to the air valve shaft pin where it contacts the air valve return spring.

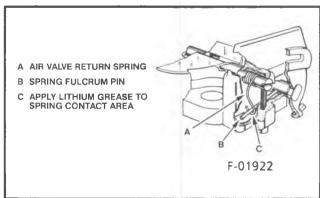


Figure 35 -- Lubricating Air Valve Spring Pin



6C2-18 MODEL M4MEF CARBURETOR

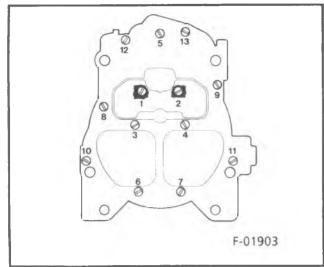


Figure 36 -- Air Horn Screw Location and Tightening Sequence


Air Horn

→← Install or Connect

(Figure 36)

- 1. Air horn assembly (10).
 - Hold air horn gasket (201) down at pump location, guide pump stem through air horn.
 - Be sure that tubes are positioned properly through the holes in the air horn gasket.
- 2. Air horn screws, in sequence shown:
 - Two countersunk screws (47) (locations #1 & 2), located next to the venturi area.
 - Air horn to float bowl screw assemblies (46).
 - Air horn baffle (50), if used, under screw assemblies in locations #3 and 4.
 - Air horn to throttle body screw assemblies (45).

Pump Lever and Link

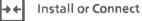



(Figures 37, 50)

Tool Required:

J-25322 or BT-7523 - Pump Lever Pin Punch

- 1. Pump link (410), in throttle lever.
 - End of link with squirt (bump) faces outward in the lever.
- 2. Pump lever (41).
 - A. Pump link in specified hole.
 - Specification is in figure 50.
 - B. Use J-25322 or BT-7523, or small punch, to align hole in lever with hole in air horn casting.

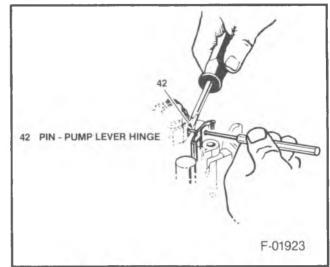

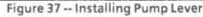

C. Use screwdriver to push pump lever hinge pin (42) in until flush with casting boss.

Choke Lever and Link

+	Install or Connect	(Figure 14)

- . Choke link (356) into intermediate choke lever (354).
 - Hold fast idle cam (352) down to rotate lever up for easier installation.
- 2. Choke lever (35).
 - Connect lever to choke link, and install on end of choke shaft.
- 3. Choke lever attaching screw (36).

Secondary Metering Rods

++

1

÷

Install or Connect (Figure 13)

- Secondary metering rods (32), and holder (31). • Ends of rods face each other.
- 2. Holder attaching screw (30).
- Work air valves up and down several times, to be sure they move freely both ways.

VACUUM BREAK ASSEMBLY

Install or Connect



2

(Figures 7, 29, 30)

- Primary side vacuum break air valve lever link
 (58) to air valve lever.
 - Primary side vacuum break assembly (55).
 - Connect plunger to air valve lever link.

MODEL M4MEF CARBURETOR 6C2-19

- 3. Vacuum break attaching screws (56).
- 4. Primary side vacuum break hose (57).

SOLENOID AND BRACKET ASSEMBLY



Install or Connect

(Figure 8)

Solenoid and bracket assembly (500) with bracket attaching screws (501).

FUEL INLET NUT AND FILTER



Install or Connect (Figure 12)

- 1. Fuel filter spring (377), in float bowl.
- 2. New gasket (372), on inlet nut (370).
- 3. Inlet nut with new filter (375).

री Tighten

Nut to 62 N · m (46 lbs.ft..).

ADJUSTMENT PROCEDURES

If you are following the unit repair procedures, proceed with adjustments in Figures 39 - 50.

P

(Figures 39 through 50)

Tools Required:

Adjust

J-9789-D or BT-3005A, Universal Carburetor Gage Set.

J-9789-90 or BT-8037, Float Level T-Scale. J-9789-111 or BT-3006M, Linkage Bending

Tool.

J-26701-A or BT-7704, Choke Valve Angle Gage.

J-23738-A or BT-7517, Hand Operated Vacuum Pump.

- Float, Figure 39.
- Pump, Figure 40.
- Air Valve Return Spring, Figure 41.
- Choke Stat Lever, Figure 42.
- Choke Valve Angle Gage, Figure 43.
- Choke Link Fast Idle Cam, Figure 44.
- Vacuum Break Information, Figure 45
- Primary Side Vacuum Break, Figure 46.
- Air Valve Link, Figure 47.
- Unloader, Figure 48
- Secondary Throttle Lockout, Figure 49.
- Specifications are in Figure 50.

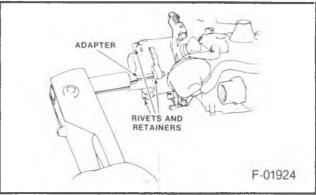


Figure 38 -- Installing Choke Cover Rivets

ELECTRIC CHOKE COVER AND STAT

→+ Ii

Install or Connect

(Figure 38, 42)

- Place fast idle cam (352) on high step, against cam follower lever.
- 2. Electric choke cover and stat assembly (335) in the choke housing (340).
 - Be sure coil tang engages the choke stat lever, and notch in cover lines up with projection on housing.

Important

Ground contact for the electric choke is provided by the metal plate on the back side of the choke cover assembly. Do Not install a stat cover gasket.

3. Choke cover retainers (331) and attaching rivets (330).

- Use blind rivet tool to install rivets.
- It may be necessary to use an adapter (tube) if the tool interferes with the electrical connector on the electric choke cover and stat (335).
- Instructions are included in choke cover retainer kit.

Install or Connect

Carburetor on vehicle, with new flange gasket.

Adjust

- Idle mixture and idle speeds.
 - For information on idle mixture and idle speed adjustments, refer to Carburetors (SEC.6C1) in the 1988 Light Duty Trucks Service Manual.

6C2-20 MODEL M4MEF CARBURETOR


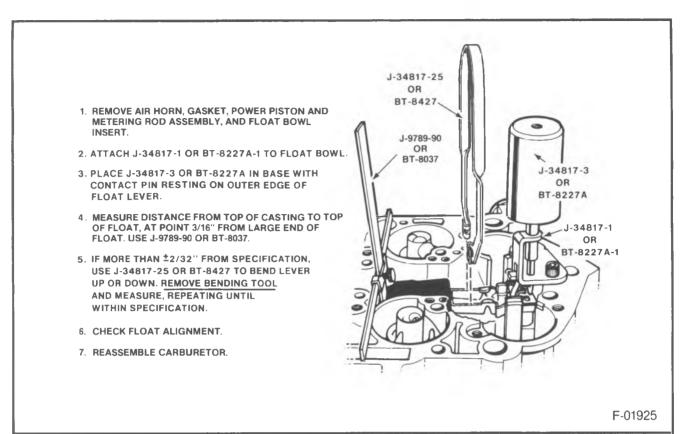



Figure 39 -- Float Adjustment

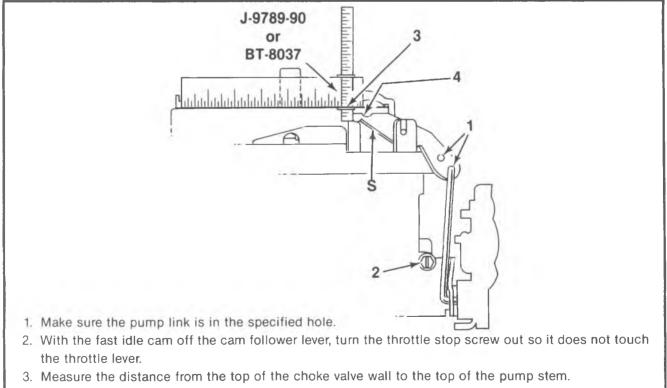


4. Adjust, if necessary, by supporting the pump lever at **S** and bending at the notch. **F-04367**


Figure 40 -- Pump Adjustment

MODEL M4MEF CARBURETOR 6C2-21

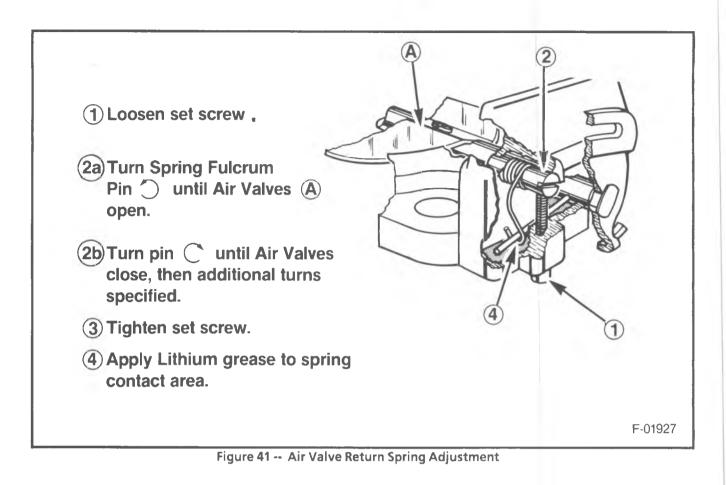

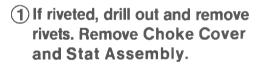

- (2) Place Fast Idle Cam on high step against Cam Follower Lever.
- (3) Push up on Choke Stat Lever to close Choke Valve.
- (4) Check Stat Lever for correct orientation by inserting .120" plug gage in hole.
 - Gage should fit in hole and touch edge of lever.
- (5) Adjust, if necessary, by bending Choke Link.

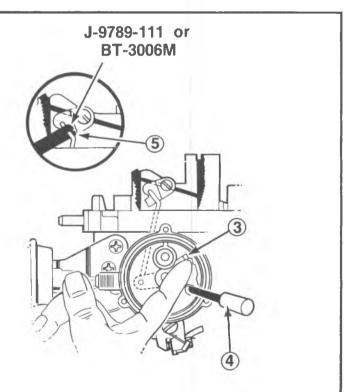

F-01928

Figure 42 -- Choke Stat Lever Adjustment

6C2-22 MODEL M4MEF CARBURETOR

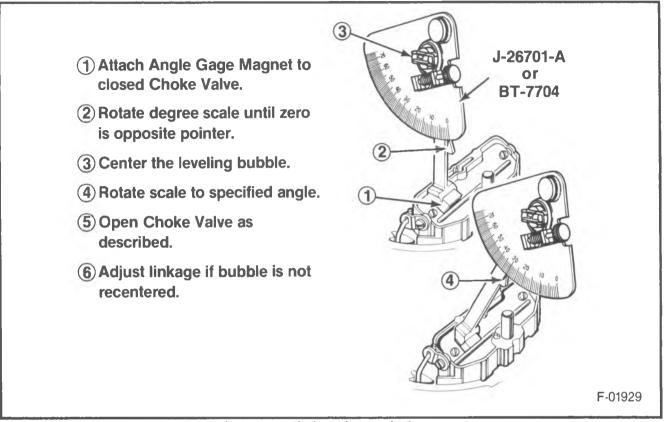


Figure 43 -- Choke Valve Angle Gage

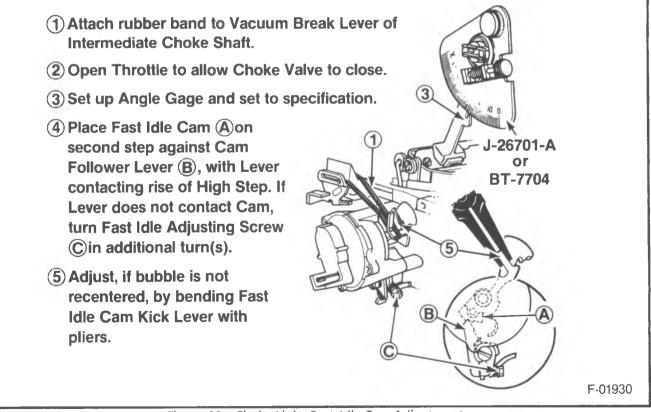


Figure 44 -- Choke Link - Fast Idle Cam Adjustment

MODEL M4MEF CARBURETOR 6C2-23

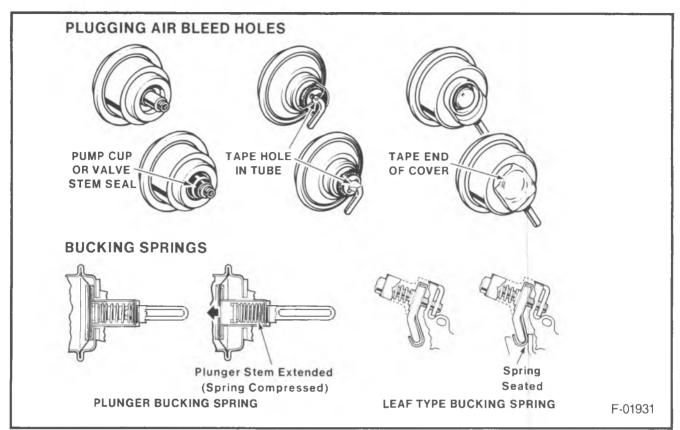


Figure 45 -- Vacuum Break Adjustment Information


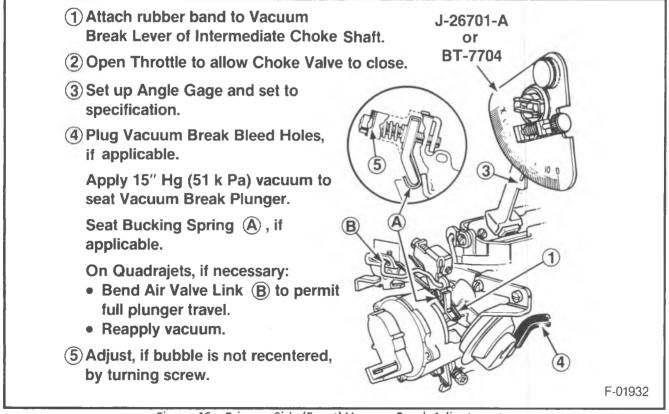


Figure 46 -- Primary Side (Front) Vacuum Break Adjustment

6C2-24 MODEL M4MEF CARBURETOR

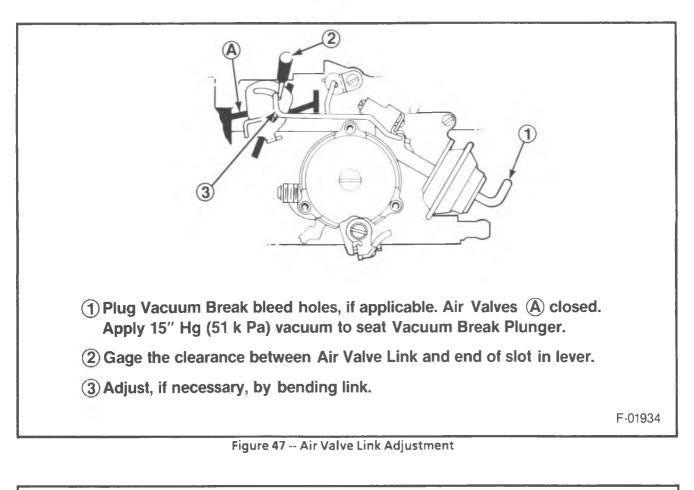

- (1) Attach rubber band to Vacuum Break Lever of Intermediate Choke Shaft.
- (2) Open Throttle to allow Choke Valve to close.
- (3) Set up Angle Gage and set to specification.
- (4) On Quadrajet, hold Secondary Throttle Lockout Lever (A) away from pin (B).
- (5) Hold Throttle Lever in wide open position.
- 6 Adjust, if bubble is not recentered, by bending Fast Idle Lever.

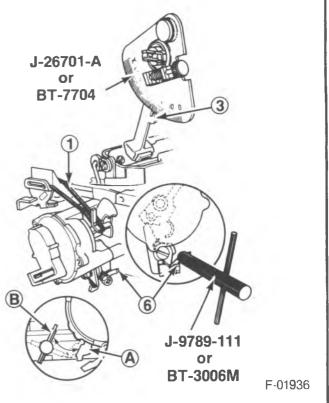


Figure 48 -- Unloader Adjustment

MODEL M4MEF CARBURETOR 6C2-25


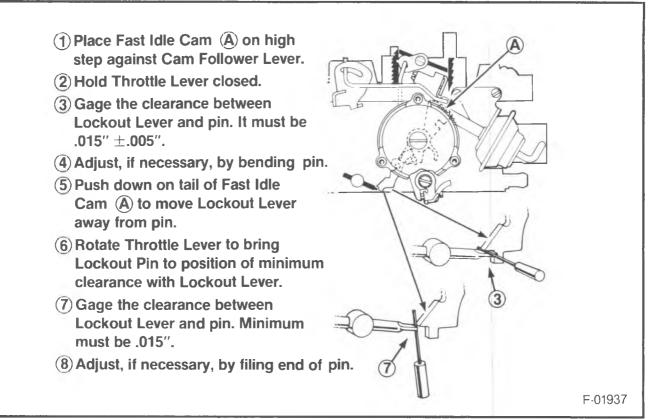


Figure 49 -- Secondary Throttle Lockout Adjustment

CARBURETOR NUMBER	FLOAT SETTING ± 2/32"	PUMP SETTING	AIR VALVE SPRING TURNS	CHOKE STAT LEVER	CHOKE LINK CAM ± 2.5°	VAC. BRK. FRONT ± 2.5°	AIR VALVE LINK	UN- LOADER ± 4°
17088040	13/32″	Inner 9/32″	7/8	0.120″ G	46°	27°	0.025"	35°
17088041	13/32″	Inner 9/32″	7/8	0.120″ G	46°	27°	0.025″	35°
17085004	13/32″	Inner 9/32"	7/8	0.120″ G	46°	23°	0.025″	35°
17085212	13/32"	Inner 9/32"	7/8	0.120″ G	46°	23°	0.025″	35°

Figure 50 -- Specifications

6C2-26 MODEL M4MEF CARBURETOR

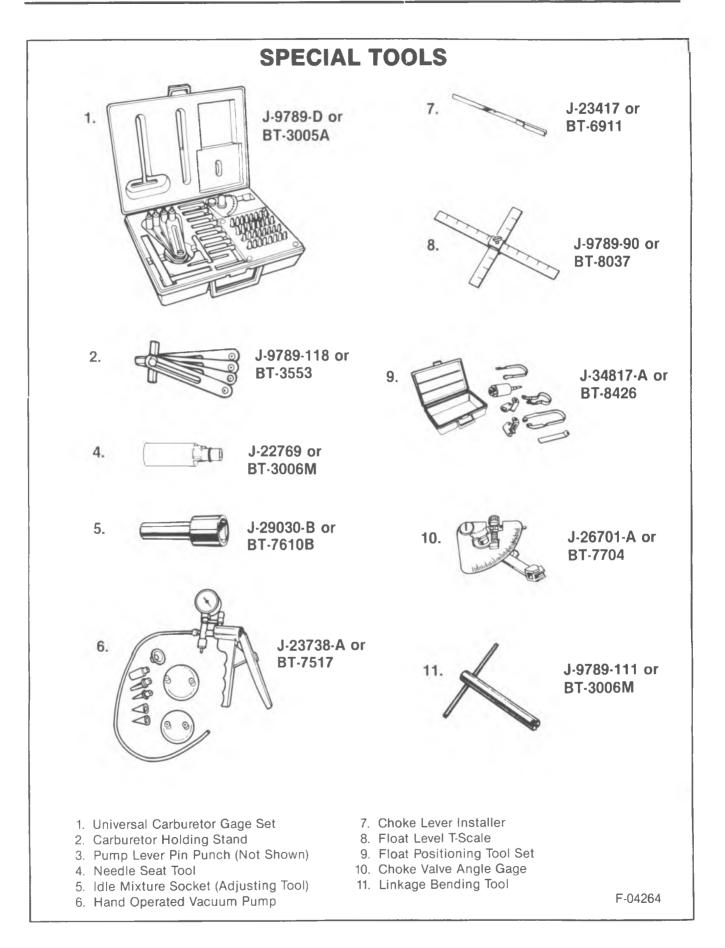

SECTION 6D

ENGINE ELECTRICAL

CONTENTS

SUBJECT

PAGE

Delco-Remy 12-SI Series, Type 100 and 17-SI Series, Type 100 Generators	6D- 1
Description	
Generator Output Test	
Disassembly	
Inspection and Repair	6D- 7
Electrical Tests	6D- 7
Assembly	
Delco-Remy 5MT, 10MT and 27MT Starting Motors	6D-11
Description	
Diagnosis of the Starting Motor	6D-11
Disassembly	6D-13
Inspection and Repair	6D-14
Assembly	6D-18
Pinion Clearance Check	6D-21
Delco-Remy PMGR Starting Motor	
Description	6D-21
Diagnosis of the Starting Motor	6D-21
Disassembly	
Inspection and Repair	6D-24
Assembly	
Pinion Clearance Check	
Delco-Remy Distributors	
Description	6D-28
Disassembly of Distributors with Integral Coils	
Inspection and Electrical Tests	
Assembly of Distributors with Integral Coils	
Disassembly of Distributors with Separate Coils	
Inspection and Electrical Tests	
Assembly of Distributors with Separate Coils	
Specifications	
Lubrication	
Special Tools	

DELCO-REMY 12-SI SERIES, TYPE 100 AND 17-SI SERIES, TYPE 100 GENERATORS

DESCRIPTION

The generators shown in figures 1 and 2 feature a solid state regulator mounted inside the slip ring end frame. The SI-series indicates "Systems Integral" (generator with built-in regulator). All regulator components are enclosed in a solid mold. This unit, along with the brush holder assembly, is attached to the slip ring end frame. The regulator voltage setting is not adjustable.

The generator rotor bearings contain enough grease to eliminate periodic lubrication. Two brushes carry current through two slip rings to the field coil.

The stator windings are assembled on the inside of a laminated core that forms part of the generator frame. A

rectifier bridge connected to the stator windings contains six diodes, and electrically changes the stator AC voltages to a DC voltage which appears at the generator output "BAT" terminal. Generator field current is supplied through a diode trio connected to the stator windings. A capacitor, or condenser, mounted to the end frame protects the rectifier bridge and diode trio from high voltages, and suppresses radio noise.

The generator part number is the seven-digit number stamped on the drive end frame above the build date (figure 1).

6D-2 ENGINE ELECTRICAL

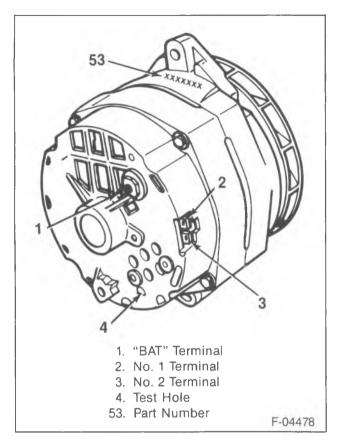


Figure 1—12-SI Series 100 Generator

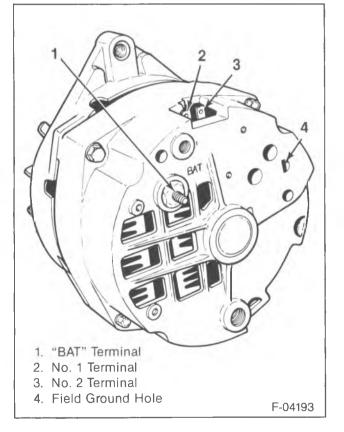


Figure 2—17-SI Series 100 Generator

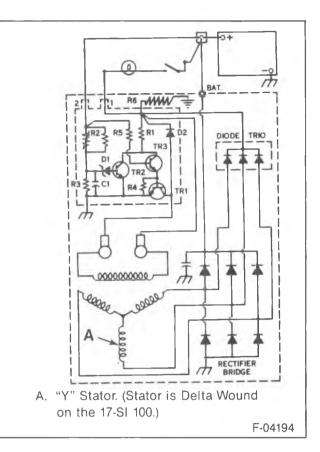


Figure 3—Generator Schematic

OPERATING PRINCIPLES (Figure 3)

The battery is directly connected to the No. 2 terminal on the generator. This supplies voltage through resistor R5 to the base-emitter of transistor TR3. Transistor TR3 turns on which then turns on transistor TR1 which allows field current to flow through to ground. Also, resistors R2 and R3 are connected to the battery through terminal No. 2, but the discharge current of the battery is very low because of the resistance values of R2, R3, R5, TR1 and TR3.

At this point, transistors TR3 and TR1 are turned on, but no current is flowing through them. Now the engine control switch is closed, allowing current to flow from the battery through the indicator lamp to the No. 1 terminal on the generator. From No. 1 terminal, the current goes through resistor R1, transistors TR3 and TR1 to ground, turning on the indicator lamp. Resistor R6 carries some of the indicator lamp current.

When the generator is spinning, AC voltages are generated in the "Y" stator windings (delta windings on the 17-SI). The AC is converted to DC current in the diode trio, and is then fed through to the field to transistor TR1 and to ground. At the same time, the DC voltage from the diode trio causes the indicator lamp current to stop, making the indicator lamp go out.

Now the AC voltages are converted to DC in the rectifier bridge. This DC voltage is then fed through the "BAT" terminal to the battery, thus keeping the battery charged and supplying electricity to the vehicle electrical loads.

As the generator speed and voltage increase, the voltage between R2 and R3 increases to the point where the zener diode D1 conducts. This turns on transistor TR2

which causes TR3 and TR1 to turn off. With TR1 off, the field current and system voltage decrease. D2 stops conducting when the voltage drops to a certain level, causing TR3 and TR1 to turn back on. This cycle repeats many times per second to limit the generator voltage to a preset value.

Capacitor C1 smoothes out the voltage across R3. Resistor R4 prevents excessive current through TR1 at high temperatures. Diode D2 prevents induced high voltages in the field windings when TR1 turns off. Resistor R2 is a thermister which causes the regulated voltage to vary with temperature, thus providing the optimum voltage for charging the battery.

Some installations do not use an indicator lamp. Instead a resistor or resistance wire is used in its place. The charge rate is then indicated by a voltmeter.

If an open should occur in the No. 2 terminal circuit, TR3 and TR1 will turn off, field current will stop and the indicator lamp current will flow through R6 to ground, causing the indicator lamp to come on. Also, an open in the field circuit will cause the indicator lamp to turn on because indicator lamp current will flow through R6 to ground.

If an open should occur in the No. 1 terminal circuit, the indicator lamp will stay off, and the generator will not generate current.

GENERATOR OUTPUT TEST

To check the generator in a test stand, proceed as follows:

- 1. Make the connections as shown in figure 4, except leave the carbon pile disconnected.
 - The ground polarity of the battery and the generator must be the same.
 - Use a fully charged battery, and a 10 ohm resistor rated at six watts or more between the generator No. 1 terminal and the battery.
- 2. Slowly increase the generator speed and observe the voltage.
- 3. If the voltage is uncontrolled with speed and increases above 15.5 volts on a 12-volt system, replace the regulator and check the field winding.
- 4. If the voltage is below 15.5 volts on a 12-volt system, connect the carbon pile as shown.
- Operate the generator at moderate speed as required and adjust the carbon pile as required to obtain maximum current output.
- 6. If the output is within 10 amperes of the rated output as stamped on the generator frame, the generator is good.
- 7. If the output is not within 10 amperes of the rated output, keep the battery loaded with the carbon pile, and ground the generator field (figure 5).
 - The field ground tab is within 25 mm (1-inch) of the casting surface. DO NOT force the screwdriver deeper into the end frame.
- 8. Operate the generator at a moderate speed and adjust the carbon pile as required to obtain maximum output.
- 9. If the output is within 10 amperes of the rated output, replace the regulator and check the field winding.

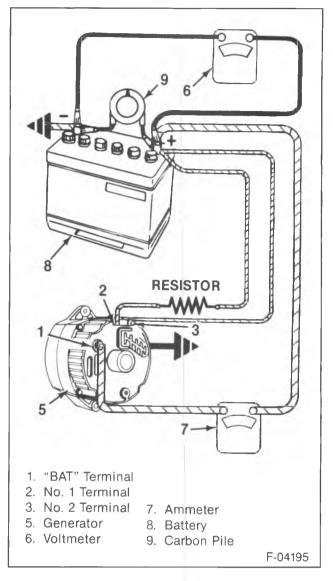


Figure 4—Generator Bench Check

10. If the output is not within 10 amperes of the rated output, check the field winding, diode trio, rectifier bridge, and stator as described later under "Inspection and Repair" and "Electrical Tests".

DISASSEMBLY

SLIP RING END FRAME

Disassemble (Figures 6, 7, 8, and 9)

- Hold the generator in a vise, clamping the mount flange lengthwise.
- Make a scribe mark to help locate the frame end parts in the same position during assembly.
- 1. Four through bolts (27).
- 2. Slip ring housing (40) and stator (41).
- 3. Stator lead nuts.
- 4. Stator from the end frame.
- 5. Insulated screws (30) and ground screw (29) from the brush holder (13).
- 6. Wire resistor (14).

6D-4 ENGINE ELECTRICAL

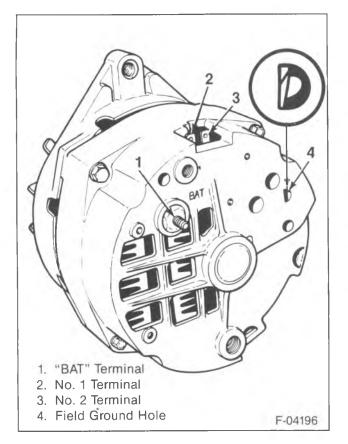


Figure 5—Field Ground Tab

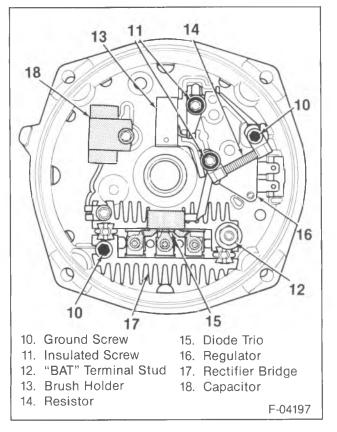


Figure 6—Slip Ring End Frame: 12-Sl 100

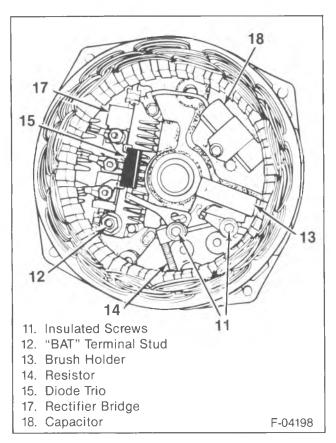


Figure 7—Slip Ring End Frame: 17-SI 100

- 7. Diode trio (15).
- 8. Brush holder (13).
- 9. Regulator (16).
- 10. Capacitor lead bolt.
- 11. Capacitor strap bolt.
- 12. Capacitor (18).

12-SI Series (Figures 6 and 8)

- 13. Ground screw (29) from the rectifier bridge (17).
- 14. "BAT" terminal stud nut (20) from the rectifier bridge.
- 15. Rectifier bridge (17), "BAT" terminal (1), and insulator (36) from the end frame.

17-SI Series (Figures 7 and 9)

- 16. Two ground screws from the rectifier bridge (17).
- 17. "BAT" terminal stud nut (20) from the rectifier bridge.
- Rectifier bridge, "BAT" terminal (1), and insulator (36) from the end frame.

Both Models

19. Bearing (31).

- Support the bearing housing from the inside.
- Press out the bearing, using a tube slightly smaller than the bearing shell.
 - Press out the bearing from the outside toward the inside.


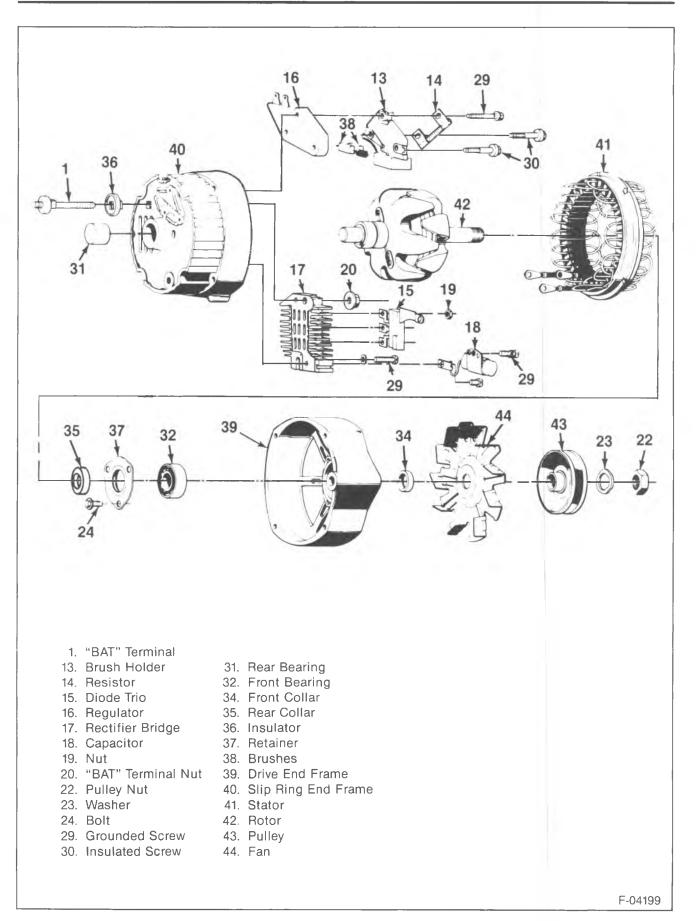


Figure 8—12-SI Series 100 Components

6D-6 ENGINE ELECTRICAL



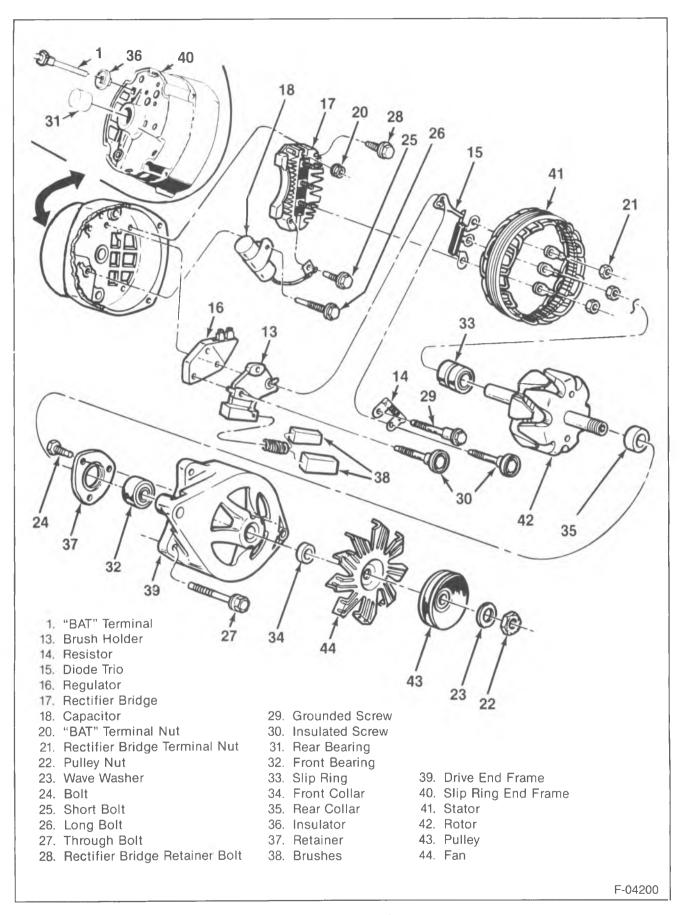

DRIVE END FRAME

Disassemble (Figures 9 and 10)

 Place the rotor, but not the rotor shaft, in a vise and tighten only enough to permit removal of the pulley nut.

NOTICE: The rotor may be distorted if the vise is overtightened.

- 1. Pulley nut (22).
 - Insert a hex head wrench in the end of the rotor shaft to counteract the force of rotation when removing the pulley nut.
- 2. Washer (23).
- 3. Pulley (43).
- 4. Fan (44).
- 5. Front collar (34)
- 6. Rotor (42).
- 7. Rear collar (35).
- 8. Bearing retainer bolts (24).
- 9. Bearing retainer (37).
- 10. Bearing (32).
 - Support the bearing housing when pressing out the bearing.

INSPECTION AND REPAIR

Clean

- All metal parts except the voltage regulator, rectifier bridge, stator, rotor and bearing assemblies in a suitable solvent.
 - Wipe or blow the parts dry.

Inspect

1. Brush holder for damage.

Clean

- Brush holder. Make sure the brush pockets are clean.
- Brushes with a soft dry cloth.
- 2. Insulating sleeves on the insulated screws for splits or wear.
- 3. Brushes for wear. If the brushes are worn to one half or less of their original length, replace them.
- 4. Brush leads for broken wires, corrosion or chafing.
- 5. Slip ring end bearing for grease. If the grease supply is used up, replace the bearing. DO NOT relubricate the bearing.
- 6. Slip ring end of the rotor shaft for overheating or scoring. If the signs of overheating or scoring are present, replace the bearing and rotor.
- 7. Drive end bearing for roughness, looseness, and seal condition. If the condition of the bearing is doubtful, replace it.
- 8. Windings for burned insulation. Replace the rotor or stator if either looks burned.
 - Burned insulation appears as a very dark or blackened wiring. A strong acrid odor will be apparent.
- 9. Terminal connectors for corrosion or breaks.

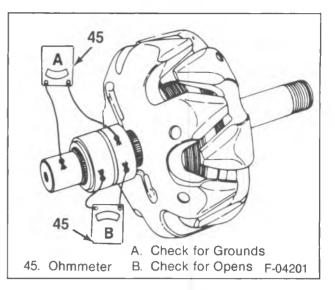


Figure 10—Checking Rotor Field Windings

- Windings on the stator for chipped insulation. If the chipped area is small and the rest of the stator is OK, repair the stator with insulating varnish.
- 11. Slip rings for scoring, wear or pitting.
 - If the rings are dirty, clean with a 400 grain, or finer, polishing cloth.
 - Spin the rotor and hold the polishing cloth against the slip rings until they are clean.
 - If scored, worn, or pitted, true the rings in a lathe to 0.05 mm (0.002-inch).
 - Finish with 400 grain or finer polishing cloth. Blow away all dust.
- Rotor and stator windings electrically as described later under "Electrical Tests."
- 13. Generator housing for cracks, warping, or other damage.

ELECTRICAL TESTS

Except as stated, make the following tests with an ohmmeter on the low range scale.

ROTOR FIELD WINDING CHECKS (Figure 10)

The rotor may be checked electrically with a 110-volt test lamp or an ohmmeter.

Open Winding

To check for opens, connect the test lamp or ohmmeter to each slip ring. If the lamp fails to light, or if the ohmmeter reading is high (infinite), the winding is open.

Ground Winding

Connect a test lamp or ohmmeter from one slip ring to the shaft. If the lamp lights, or if the reading is low, the rotor winding is grounded.

Short Circuit or Resistance Check

The winding is checked for short-circuits or excessive resistance by connecting a battery and ammeter in series with the edge of the two slip rings. Note the ammeter reading and refer to "Specifications" at the end of this section.

6D-8 ENGINE ELECTRICAL

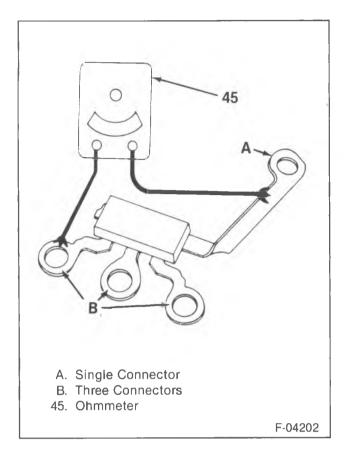


Figure 11—Diode Trio Check

An ammeter reading above the specified value indicates shorted windings; a reading below the specified value indicates excessive resistance. An alternate method is to check the resistance of the field by connecting an ohmmeter to the two slip rings. If the resistance reading is above the specified value the winding has excessive resistance. Note the reading and refer to "Specifications" at the end of this section.

Remember that the winding resistance and ammeter readings will vary slightly with winding temperature changes. If the rotor is all right, but the generator fails to supply rated output, the problem is in the diode trio, rectifier bridge, stator or regulator.

If the rotor is bad, replace it.

DIODE TRIO CHECK (Figure 11)

Connect an ohmmeter having a 1.5-volt cell, and using the lowest range scale, to the single connector and to one of the three connectors (figure 11). Observe the reading. Then reverse the ohmmeter leads to the same two connectors. If both readings are the same, replace the diode trio. A good diode trio will give one high and one low reading. Repeat this same test between the single connector and each of the other two connectors. Also, connect the ohmmeter to each pair of the three connectors (not illustrated). If any reading is zero, replace the diode trio.

RECTIFIER BRIDGE CHECK (Figure 12)

To check the rectifier bridge, connect the ohmmeter to the grounded heat sink and one of the three flat metal connectors or threaded studs, depending on the type of regulator. Refer to figure 12.

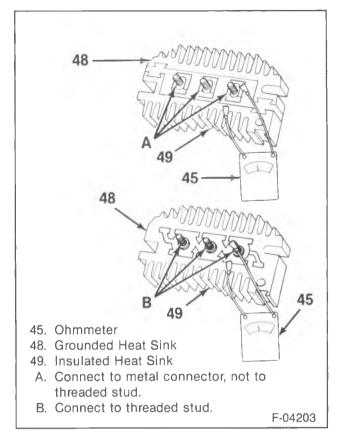


Figure 12—Rectifier Bridge Check

Observe the ohmmeter reading and reverse the lead connectors to the grounded heat sink and the same flat metal connector or stud. If both readings are the same, replace the rectifier bridge. A good rectifier bridge will give one high and one low reading. Repeat this same test between the grounded heat sink and the other two terminals or connectors, and between the insulated heat sink and each of the three terminals or connectors. This makes a total of six checks, with two readings taken for each check.

The ohmmeter check of the rectifier bridge, and of the diode trio as previously covered, is a valid and accurate check. Do not replace either unit unless at least one pair of readings is the same.

STATOR CHECKS (Figure 13)

The stator windings may be checked with a 110-volt test lamp or ohmmeter. If the meter reading is low when connected from any stator lead to the frame, the windings are grounded. If the lamp fails to light, or if the meter reading is high when successively connected between each pair of stator leads, the windings are open.

Delta windings on the 17-SI Series cannot be checked for opens. Check the windings for ground only.

A short circuit in the delta stator windings is difficult to locate without laboratory test equipment due to the low resistance of the windings. However, if all other electrical checks are normal and the generator fails to supply rated output, shorted stator windings or an open delta winding is indicated. Also a shorted stator can cause the indicator lamp to be on with the engine at low speed. Check the regulator before replacing the stator.

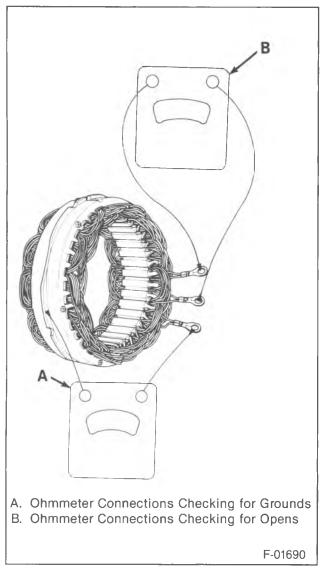


Figure 13—Checking the Stator

TESTING THE VOLTAGE REGULATOR (Figure 14)

- 1. Connect the voltmeter and the fast charger to the 12-volt battery.
- 2. Connect the regulator and the test lamp as shown. Observe battery polarity.
- 3. Test lamp should be on.
- 4. Turn on the fast charger and slowly increase the charge rate. Observe the voltmeter. The lamp should go out at the voltage regulator setting. The voltage regulator setting should be a minimum of 13.5 volts and a maximum of 16.0 volts.

The test lamp is connected into the circuit, exactly as the rotor is when the regulator is inside the generator. The regulator shuts off the current to the test lamp when the regulator setting is reached. This voltage will vary with temperature differences.

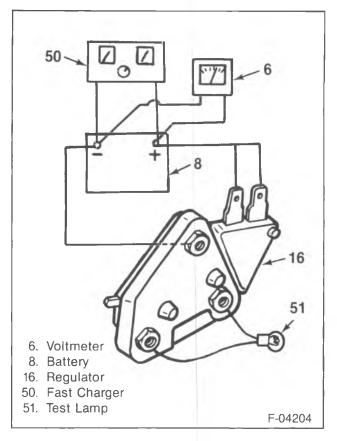


Figure 14—Testing the Voltage Regulator

ASSEMBLY

SLIP RING END FRAME

→← Install or Connect (Figures 8, 9 and 15)

- If the old bearing is dry, do not lubricate or reinstall it. Replace the bearing.
- 1. Bearing (31).
 - Support the inside of the frame.

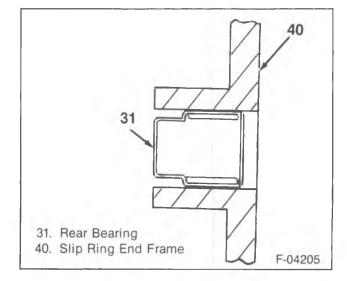


Figure 15—Slip Ring End Frame Bearing

6D-10 ENGINE ELECTRICAL

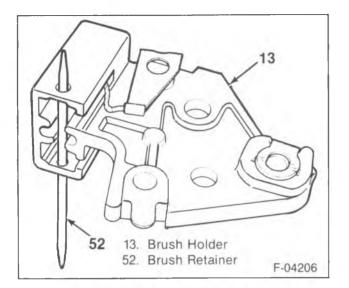


Figure 16—Brush Retainer Installed

- Place a flat plate over the bearing and press in from the outside to the inside of the end frame housing.
- Press the bearing flush with the outside of the end frame (figure 15).
- 2. Rectifier bridge (17) (figures 7 and 8)
- 3. Ground screw(s) (29) in the rectifier bridge.
- 4. "BAT" terminal (1) and insulator (36).
- 5. "BAT" terminal nut (20).
- 6. Capacitor (18) in the end frame.
 - · Retain with a screw.
- 7. Capacitor lead to the rectifier bridge (17) with a screw.
- 8. Regulator (16).
- 9. Brushes (38) in the brush holder (13).
 - Retract the brushes in the holder.
 - Retain the retracted brushes with a toothpick (figure 16).
 - Be sure that the toothpick extends through the end frame when the brush holder is in place in the end frame. After the rotor and drive end frame are installed, the toothpick will be pulled out, allowing the brushes to contact the slip rings.
- 10. Brush holder with retracted brushes.
- 11. Diode trio (15).
- 12. Resistor (14).
- 13. Retaining screws.
 - Insulated screws are located at the brush clip and the diode trio connecting strap.
 - Grounded screw is located on the resistor mount.
- 14. Stator (41) to the end frame, aligning the three stator leads to the three rectifier bridge terminals.
- 15. Three terminal nuts. Tighten the nuts securely.

DRIVE END FRAME

Assemble (Figures 8 and 9)

1. Bearing (32).

-X-

- · Support the end frame.
- Position the bearing with the sealed end toward the outside of the generator.

- Press the bearing into the bore using a metal tube against the bearing outer race.
- Fill the cavity between the retainer plate and the bearing with specified lubricant. Refer to "Lubrication" later in this section.
- If the bearing is sealed on both sides, do not add lubricant.
- 2. Bearing retainer (37).
- 3. Three attaching bolts (24).
- 4. Rear collar (35) in the bearing retainer, if previously removed.
- 5. Rotor (42) through the rear collar and the bearing in the drive end frame.
- 6. Front collar (34).
- 7. Fan (44).
- 8. Pulley (43).
- 9. Wave washer (23).
- 10. Pulley nut (22).
 - Clamp the rotor in a vise only tight enough to torque the nut.



Pulley nut to 68 N m (50 ft. lbs.).

MAIN ASSEMBLY

→+ Install or Connect

- 1. Drive end frame (39) and rotor assembly to the slip ring end.
- 2. Four through bolts (27). Tighten securely.
 - Remove the brush retainer (toothpick) from the end frame.
 - · Test the generator output.

DELCO-REMY 5MT, 10MT, AND 27MT STARTING MOTORS

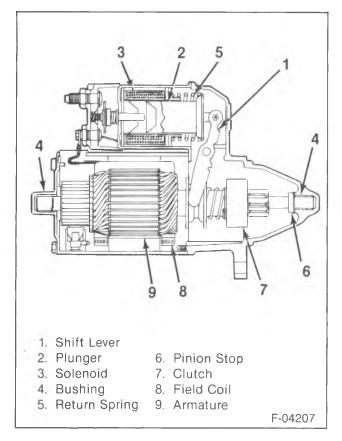


Figure 17—5MT Starting Motor

DESCRIPTION

The overrunning-clutch type starting motors covered in this section are the enclosed shift lever type (figures 17, 18 and 19).

The starting motor has the drive end housing extended to enclose the shift lever and solenoid plunger. The solenoid flange is mounted on the drive end housing with sealing compound between the flange and the field frame.

The starter motor bearings are lubricated during motor assembly and do not require service except during motor repair.

The part number can be found either stamped on the outside of the frame or on an identification label attached to the frame.

DIAGNOSIS OF THE STARTING MOTOR

STARTING MOTOR TESTS

Before disassembling the starting motor for repair, the following tests should be made.

NOTICE: Never operate the starting motor more than 30 seconds at a time without pausing to allow it to cool for at least two minutes. Overheating, caused by too much cranking, will damage the starting motor.

Inspect

- 1. Pinion for freedom of operation by turning it on the spline shaft.
- Armature for freedom of rotation by prying the pinion with a screwdriver.
 - Tight bearings, a bent armature shaft, or a loose pole shoe screw will cause the armature to not turn freely.
 - If the armature does not turn freely, the motor should be disassembled.
 - If the armature does rotate freely, the motor should be given a no-load test before disassembly.

NO LOAD TEST (Figure 20)

Connect a voltmeter from the motor terminal to the motor frame and an rpm indicator to measure armature speed. Connect the motor and an ammeter in series with a fully charged battery of the specified voltage, and a switch in the open position switch terminal. Close the switch and compare the rpm, current, and voltage readings with the specifications at the end of this section. It is not necessary to obtain the exact voltage specified as a good reading can be made by understanding that if the voltage is slightly higher the rpm will be slightly higher, with the current remaining basically unchanged. However, if the exact voltage is desired, a carbon pile connected across the battery can be used to reduce the voltage to the specified value. Compare the test results as follows:

- 1. Rated current draw and no-load speed indicates normal condition of the starting motor.
- 2. Low free speed and high current draw indicates:
 - a. **Too much friction.** Tight, dirty, or worn bearings, bent armature shaft or loose pole shoes allowing the armature to drag.
 - b. **Shorted armature.** This can be further checked on a growler after disassembly.
 - c. **Grounded armature or fields.** Check further after disassembly.
- 3. Failure to operate with high current draw indicates:
 - a. A direct ground in the terminal or fields.
 - b. **Seized bearings.** This should have been noted by turning the armature by hand.
- 4. Failure to operate with no current draw indicates:
 - a. **Open field circuit.** This can be checked after disassembly by inspecting internal connections and tracing the circuit with a test lamp.
 - b. **Open armature coils.** Inspect the commutator for badly burned bars after disassembly.
 - c. Broken brush springs, worn brushes. High insulation between the commutator bars or other causes which would prevent good contact between the brushes and commutator.
- 5. Low no-load speed and low current draw indicates a high internal resistance due to poor connections, defective leads, dirty commutator and causes listed under step 4.

6D-12 ENGINE ELECTRICAL

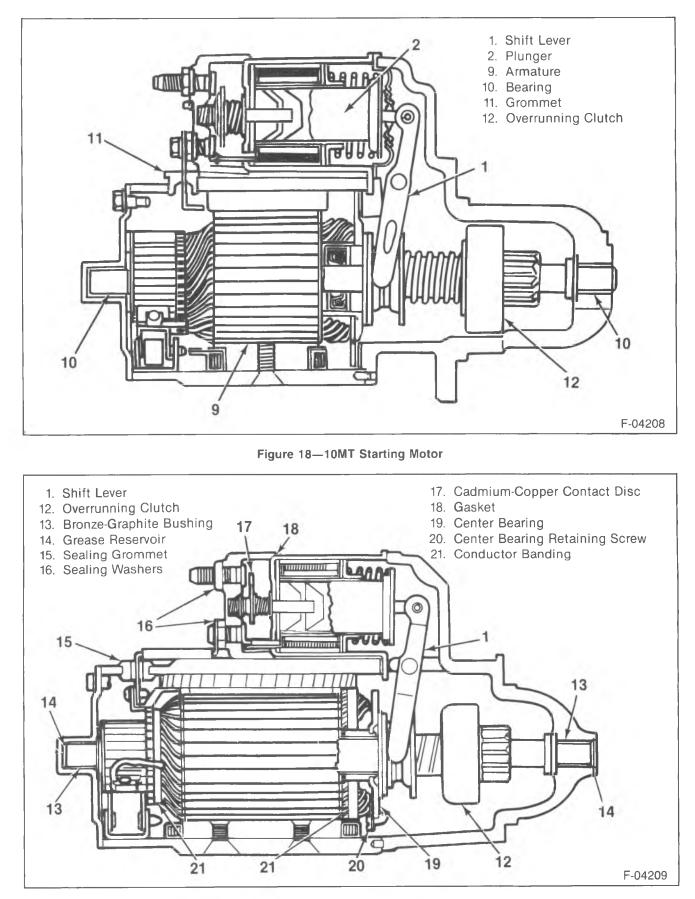


Figure 19—27MT Starting Motor

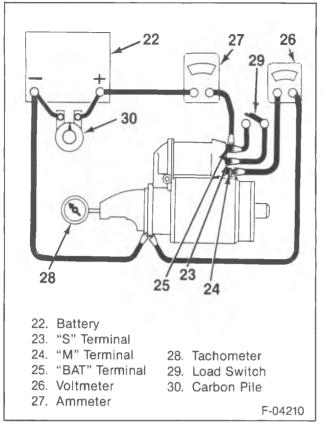


Figure 20—No Load Test Hookup

6. High free speed and high current draw indicates shorted fields. If shorted fields are suspected, replace the field coil assembly and check for improved performance.

DISASSEMBLY

If the motor does not perform to specifications, it may need to be disassembled for further testing of the components. Normally the starting motor should be disassembled only so far as is necessary to make repair or replacement of parts. As a precaution, it is suggested that safety glasses be worn when disassembling or assembling the starting motor.

FIELD FRAME

Disassemble (Figures 21, 22, and 23)

- Clean the outside of the starter housing, removing grease, oil, mud, etc.
- Make scribe marks to show the relationship of the nose housing, lever housing, field frame, and end frame to aid in assembly.
- 1. Field coil strap (51) from the solenoid motor terminal (figure 24).
- 2. Through bolts (35).
- 3. End frame (41).
- 4. Washer (34) from the commutator end of the armature shaft (10MT and 27MT).
- 5. Field frame (41) from the drive housing (31) and the armature assembly (9).

- 6. Armature from the drive housing by tilting the armature to disengage the shift lever fingers (1) from the drive collar (32) (figure 25).
- On the 27MT, it may be necessary to perform steps 2, 3 and 4 below before the drive assembly can be removed from the drive housing.

LEVER HOUSING

Disassemble

- 1. Drive assembly (32) from the armature shaft (9) as follows:
 - Remove the pinion stop washer (34) or thrust collar (39) from the armature shaft.
 - Drive the stop collar (39) away from the pinion stop retainer ring (37) by sliding a metal cylinder onto the armature shaft and with a hammer, striking the metal cylinder against the stop collar (figures 26 and 27).
 - Remove the pinion stop retainer ring from the groove in the armature shaft. If the retainer ring is distorted during removal, it must be replaced.
 - Slide the drive assembly and the stop collar off the armature shaft.
- 2. Bolts (35) attaching the solenoid (3) to the drive housing.
- 3. Bolt and nut (44) and washer on the 10MT or the retainer ring (37) and shaft (43) on the 5MT and 27MT attaching the shift lever to the drive housing.
- 4. Shift lever (1) and the attached solenoid plunger (2) from the drive housing.
- 5. Roll pin (40) in order to separate the shift lever from the solenoid plunger (2).

Disassemble

5MT (Figure 28)

- 1. Brush holders (38) from the brush supports (62).
- 2. Screws from the brush holders.
- 3. Brushes (33) from the holders.

10MT and 27MT (Figure 29)

- 1. Brush holder pivot pins (63).
- 2. Brush springs (64).
- 3. Brushes (33) from the brush holders.

SOLENOID

First perform the electrical tests on the solenoid described under "Inspection and Repair" later in this section. Then disassemble the solenoid to inspect the contact disc and terminals.

++

Remove or Disconnect (Figure 30)

- 1. Nuts from the "S" terminal (23) and the motor terminal (24).
- 2. Screws attaching the end cover (67).
- 3. End cover from the solenoid body.



- 1. Contact disc for wear.
 - · Replace if worn.

6D-14 ENGINE ELECTRICAL

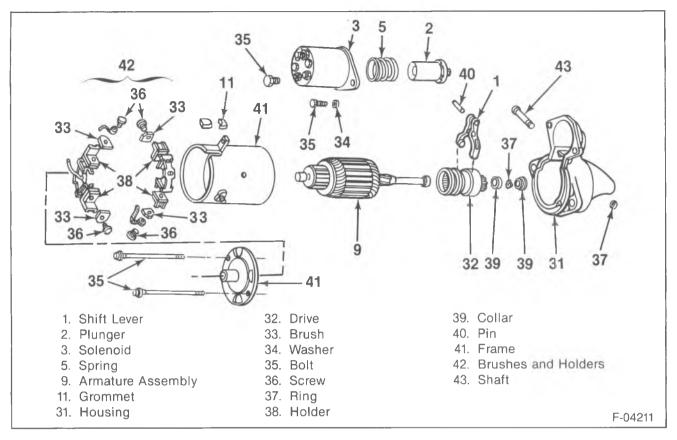


Figure 21—5MT Components

INSPECTION AND REPAIR

Clean

- All parts, except the drive, with mineral spirits. Do not clean the parts in a degreasing tank or with grease dissolving solvents.
 - Dry by wiping with a clean cloth.

Inspect

- 1. Armature bearing fit in the end frame, lever housing, and nose housing. On 27MT models with bushings, check them. If the bushings are worn, replace them. Also replace the oil wicks when a bushing is replaced.
 - Lubricate the oil wicks and bushings before assembling the starter motor.
- End frame bushing for damage or wear. Replace if damaged or worn.
- Armature shaft for runout or scoring. Replace the armature assembly if the condition of the armature shaft is doubtful.
- 4. Commutator for run out.
 - Do not turn the commutator.
 - Do not undercut the insulation.
 - Clean the commutator with No. 240 grit emery cloth. If the commutator cannot be cleaned, replace the armature.
- 5. Armature for short circuits (figure 31).

- Rotate the armature in a growler with a steel strip, such as a hacksaw blade, held on the armature parallel to the shaft. The steel strip will vibrate on the area of the short circuit.
- Shorts between the commutator bars are sometimes produced by brush dust or copper dust.
- 6. Armature for opens.
 - Look for loose connections where the conductors join the commutator bars. Poor connections cause arcing and burning of the commutator. If the bars are not badly burned, the leads can be resoldered.
- 7. Armature for grounds by using a test lamp (figure 32).
 - If the test lamp lights when one test prod is placed on the commutator and the other test prod is placed on the armature core or shaft, the armature is grounded.
- 8. Motor housing and solenoid housing for oil and water.
 - If oil or water is present, this indicates broken O-rings, leaking gaskets, or oil seal wear. Replace all seals and gaskets as required.
- 9. Brushes for wear. If the brushes are worn to half the size of a new brush, replace the brushes.
- 10. Brush holders for dirt or damage.
 - Make sure that the brushes are not binding in the holders.
- 11. Brush springs for distortion or discoloring. If the springs are weak, bent, or discolored, replace them.
- 12. Field coils.

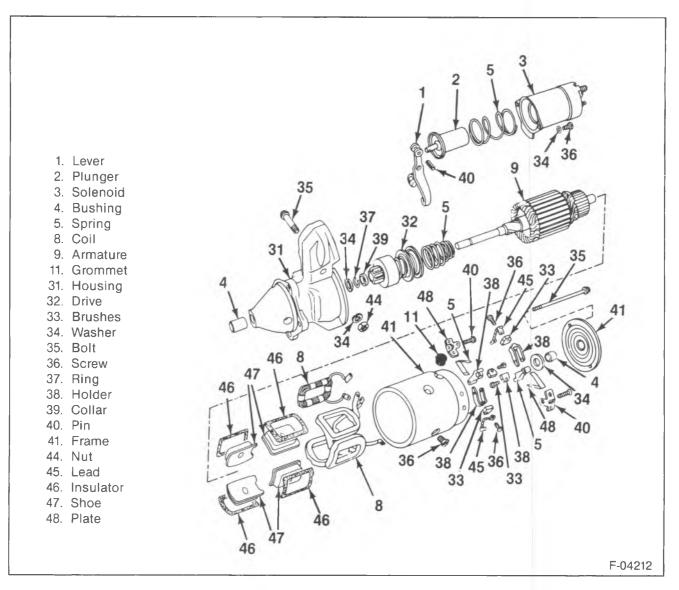


Figure 22—10MT Components

- Look for burned or damaged insulation, damaged connections or loose poles. Replace the field coils if their condition is doubtful.
- 13. Field coils for grounds.
 - Disconnect the field coil ground connections.
 - Connect a test lamp between the field frame and the field connector.
 - If the test lamp lights, the field coils are grounded and must be repaired or replaced.
- 14. Field coils for opens.
 - Connect a test lamp across the ends of the coils.
 - If the test lamp does not light, the field coils are open.
- 15. Field coils for shorts.
 - Shorts are indicated by poor motor performance after everything else has been checked out. On the 5MT starter motor, the coils cannot be replaced separately because of the integral frame construction. The frame and field assembly must be replaced. To

replace the field coils on the 10MT or 27MT, a pole shoe spreader and pole shoe screwdriver should be used. Care should be exercised in replacing the field coils to prevent grounding or shorting them as they are tightened into place. Where the pole shoe has a long lip on the side, it should be assembled in the direction of armature rotation.

- 16. Drive assembly (clutch) by turning the drive pinion in the cranking direction.
 - If the drive pinion turns roughly or slips in the cranking direction, replace the complete overrunning clutch assembly.
- 17. Solenoid for grounds.
 - Connect a 100 volt test lamp between the solenoid case and each terminal, one terminal at a time.
 - If the test lamp lights, the terminal is grounded. If the solenoid is grounded, replace the solenoid.
- 18. Hold-in winding and pull-in winding.

6D-16 ENGINE ELECTRICAL

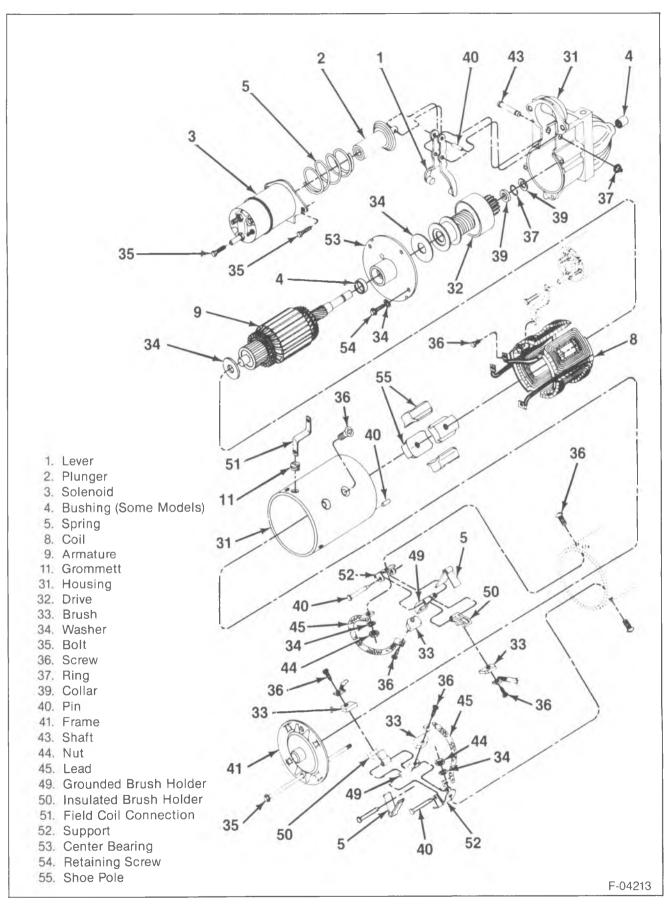


Figure 23—27MT Components

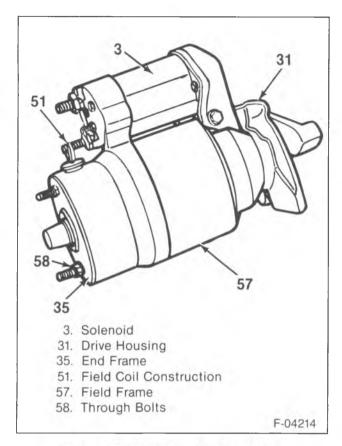


Figure 24—Light Duty Starting Motor

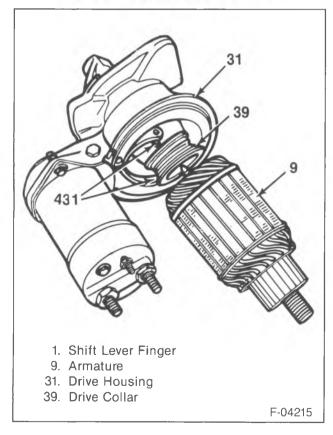


Figure 25—Disengaging the Drive Collar from the Shift Lever Fingers

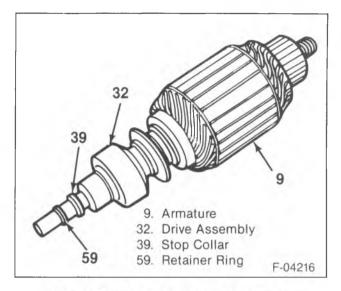


Figure 26-Retaining Ring on Armature

• With all the leads disconnected from the solenoid, make the test connections as shown in figure 33.

NOTICE: To prevent overheating the pull-in winding, do not leave the winding energized more than 15 seconds. The current draw will decrease as the winding temperature increases.

• Turn the switch on and adjust the carbon pile

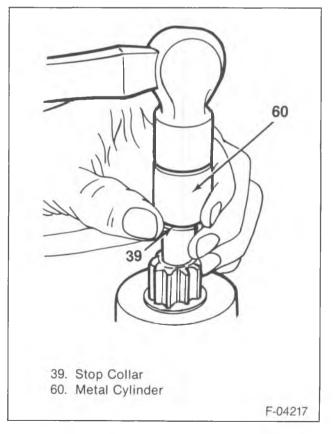


Figure 27—Driving the Stop Collar Off the Retaining Ring

6D-18 ENGINE ELECTRICAL

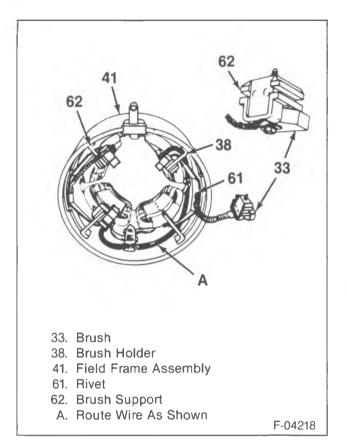


Figure 28—Replacing Brushes on the 5MT Starting Motor

to lower the battery voltage to the value shown in "Specifications" at the end of this section.

- Note the ampere reading; a high reading indicates a shorted or grounded winding, and a low reading indicates excessive resistance.
 - The windings resistance can be read directly using a digital ohmmeter that can measure tenths of an ohm.
 - The coil resistance can be determined by dividing the voltage by the current (amperes) values listed in "Specifications" at the end of this section.

ASSEMBLY

SOLENOID

Assemble (Figure 30)

- 1. New solenoid disc assembly if needed.
- 2. End cover to the solenoid body.
- 3. Screws attaching the end cover.
- 4. Nuts from the "S" terminal and the motor terminal.

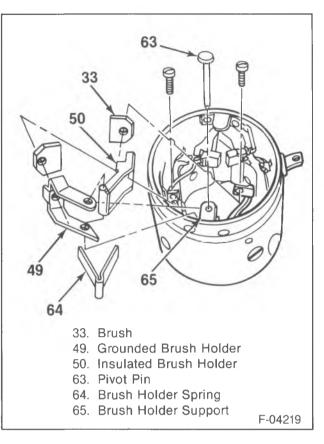


Figure 29—Replacing Brushes on the 10MT and 27MT Starting Motors

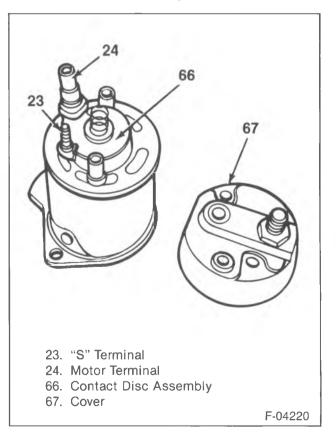


Figure 30—Solenoid Disassembled

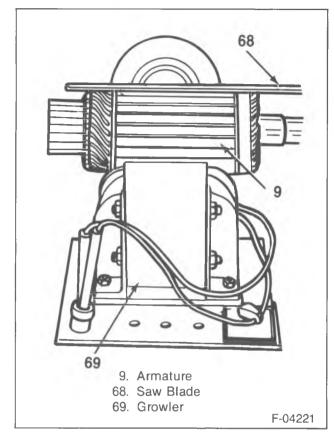


Figure 31—Testing the Armature for Short Circuits

BRUSHES

Assemble

5MT (Figure 28)

- 1. Brushes (33) into the holders (38).
- 2. Screws into the brush holders.
- 3. Brush holders into the brush supports (62).

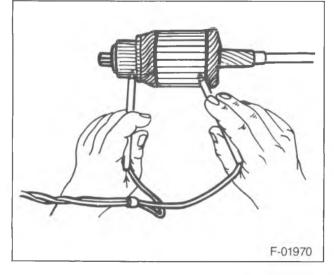


Figure 32—Testing the Armature for Grounds

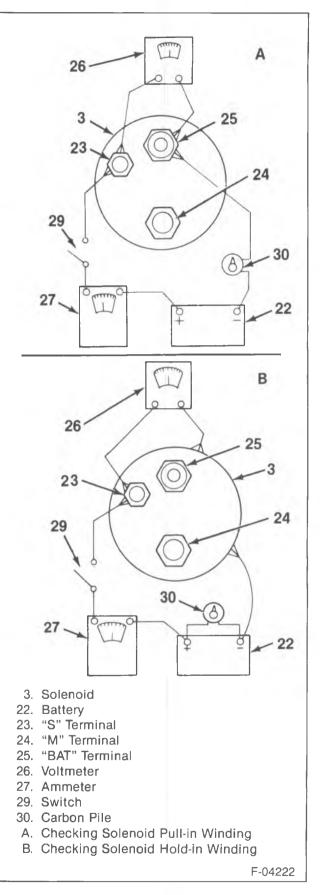


Figure 33—Solenoid Test Connections

6D-20 ENGINE ELECTRICAL

10MT and 27MT (Figure 29)

- 1. Brushes (33) into the brush holders.
- 2. Brush springs (64).
- 3. Brush holder pivot pins (63).

LEVER HOUSING AND FIELD FRAME (Figures 21 through 23)

- 1. Solenoid plunger (2) to the shift lever (1) with the roll pin (40).
- Lever assembly in the drive housing (31) with bolt (35), washer (34), and nut (44) on the 10MT or with the shaft (43) and snap ring on the 5MT and 27MT.
 Make sure the shift lever pivots freely.

Important

- Lubricate the drive end, commutator, bushings or bearings and armature shaft with Delco-Remy Lubricant No. 1960954 or equivalent.
- 2. On starters with bronze bearings and oil wicks, soak the wicks and bearing surfaces with non-detergent SAE #20 oil. Do not drill, ream or machine sintered bronze bearings in any way. Oil from the wick will bleed through the highly porous bearing to lubricate the shaft.
- 3. Lubricate the shaft underneath the overrunning clutch assembly with a silicone grease, such as General Electric CG321, or Dow Corning 33 medium, or equivalent. the overrunning clutch does not require lubrication.
- 3. Drive assembly (32) on the armature shaft.
 - Slide the drive assembly on the shaft with the pinion gear toward the shaft end.
- 4. Stop collar (39) on the shaft with the cupped end away from the pinion gear.
- 5. Retainer ring (37) on the shaft (figure 34).
 - Place the ring on the end of the shaft.
 - With a wood block on the top of the ring, force the ring onto the shaft with a light hammer blow.
 - Slide the ring down and into the shaft groove. Do not distort the retainer ring when installing it
- 6. Stop collar with the retainer ring (figure 35).
 - Place a suitable washer over the retainer ring end and squeeze the collar and washer together.
 - Remove the washer.
- 7. Thrust collar (39) or pinion stop washer (34) with the flat side away from the pinion.
 - Apply sealing compound to the solenoid flange, just under the solenoid.
 - Spread the brush assemblies using a tool socket slightly larger in diameter than the commutator.
 - Slide the field frame over the armature. The brush retaining tool socket will slide out as the field frame bottoms.
 - Install the washer, end frame and the two through bolts.

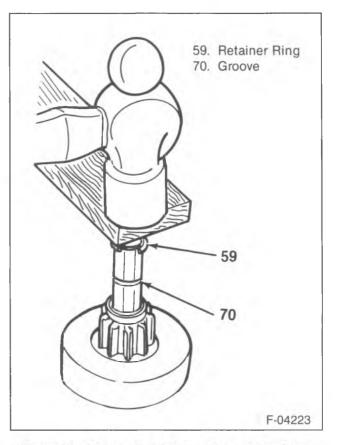


Figure 34—Forcing the Retainer Ring on the Shaft

- 8. Brake washer (34) on the commutator end of the armature shaft (10MT and 27MT).
- 9. Solenoid (3) and the solenoid return spring (5) with the drive end housing (31).
- 10. Solenoid retaining screws.
- 11. Drive assembly collar to the shift lever fingers.
- 12. Armature shaft into the drive end bearing.
- 13. Field frame to the drive end assembly.
- 14. Field coil strap to the solenoid motor terminal.

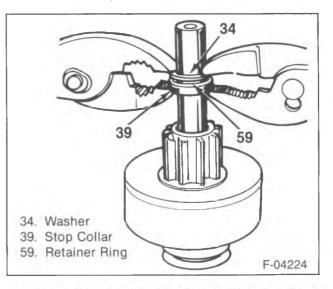


Figure 35—Forcing the Collar over the Retainer Ring

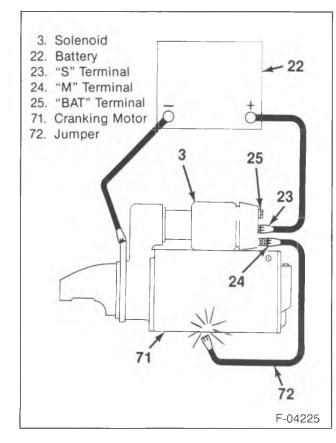


Figure 36—Pinion Clearance Circuit

PINION CLEARANCE CHECK

The pinion clearance cannot be adjusted but should be checked after reassembly of the motor. Improper clearance is an indication of worn parts.

To check pinion clearance, perform the following steps (figures 36 and 37).

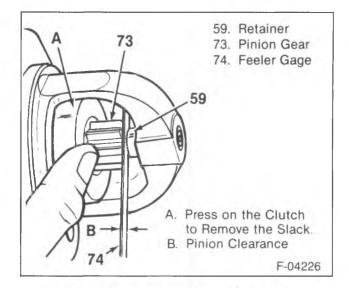


Figure 37—Measuring Pinion Clearance

- 1. Disconnect the motor field connector from the solenoid motor terminal and **insulate it carefully.**
- Connect a battery of the same voltage as the solenoid from the solenoid switch terminal to the solenoid frame.
- Momentarily flash a jumper lead from the solenoid motor terminal to the solenoid frame. This will shift the pinion into cranking position and it will remain so until the battery is disconnected.
- 4. Push the pinion back toward the commutator end to eliminate slack movement.
- 5. Measure the distance between pinion and pinion stop.
 - Clearance should be 0.25 mm to 4.06 mm (0.010 inch to 0.160 inch).

DELCO-REMY PMGR STARTING MOTOR

DESCRIPTION

The PMGR starting motor features small permanent magnets mounted inside the field frame (figure 38). These magnets take the place of current-carrying field coils mounted on iron pole pieces.

The use of MAGNEQUENCH[®] permanent magnets permits the design of a gear reduction motor that is about half as large and half the weight of a field coil motor having the same cranking performance. Internal gear reduction through planetary gears results in armature speeds in the 7000 rpm range. This higher armature speed may result in a noticeable difference in sound during cranking. The armature and drive shaft are mounted on roller or ball bearings in place of bushings.

Electrically the motor consists of the brush assembly and the armature. The solenoid contains pull-in and hold-in windings, and the motor external wiring is the same as field-coil motors. No periodic lubrication is required except during motor repair.

The part number and the date code are stamped on the outside of the end plate. The date code shows the year, month and day of month of production.

DIAGNOSIS OF THE STARTING MOTOR

STARTING MOTOR TESTS

Before disassembling the starting motor for repair, the following tests should be made.

NOTICE: Never operate the starting motor more than 30 seconds at a time without pausing to allow it to cool for at least two minutes. Overheating, caused by too much cranking, will damage the starting motor.

6D-22 ENGINE ELECTRICAL

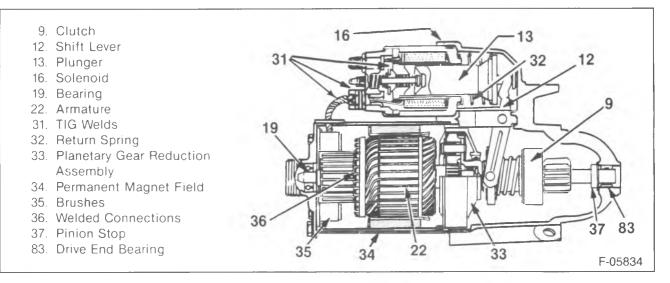


Figure 38—PMGR Starter Motor

Inspect

- 1. Pinion for freedom of operation by turning it on the screw shaft.
- 2. Armature for freedom of rotation by prying the pinion with a screwdriver.
 - Tight bearings or a bent armature shaft will cause the armature to not turn freely.
 - If the armature does not turn freely, the motor should be disassembled.
 - If the armature does not rotate freely, the motor should be given a no-load test before disassembly.

NO LOAD TEST (Figure 39)

Connect a voltmeter from the motor terminal to the motor frame and an rpm indicator to measure drive speed. Connect the motor and an ammeter in series with a fully charged battery of the specified voltage, and a switch in the open position switch terminal. Close the switch and compare the rpm, current, and voltage readings with the specifications at the end of this section. It is not necessary to obtain the exact voltage specified as a good reading can be made by understanding that if the voltage is slightly higher the rpm will be slightly higher, with the current remaining basically unchanged. However, if the exact voltage is desired, a carbon pile connected across the battery can be used to reduce the voltage to the specified value. Compare the test results as follows:

- 1. Rated current draw and no-load speed indicates normal condition of the starting motor.
- 2. Low free speed and high current draw indicates:
 - a. **Too much friction.** Tight, dirty, or worn bearings or bent armature shaft allowing the armature to drag.
 - b. **Shorted armature**. This can be further checked on a growler after disassembly.
 - c. Grounded armature or fields. Check further after disassembly.
- 3. Failure to operate with high current draw indicates:
 - A direct ground in the terminal or brush assembly.

- b. Seized bearings. This should have been noted by turning the armature by hand.
- 4. Failure to operate with no current draw indicates:
- a. Open brush leads.
 - b. **Open armature coils.** Inspect the commutator for badly burned bars after disassembly.
 - c. Broken brush springs, worn brushes, high insulation between the commutator bars. Look for these or other causes which would prevent good contact between the brushes and commutator.

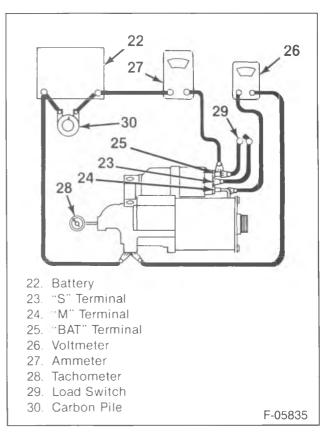


Figure 39—No Load Test Hookup

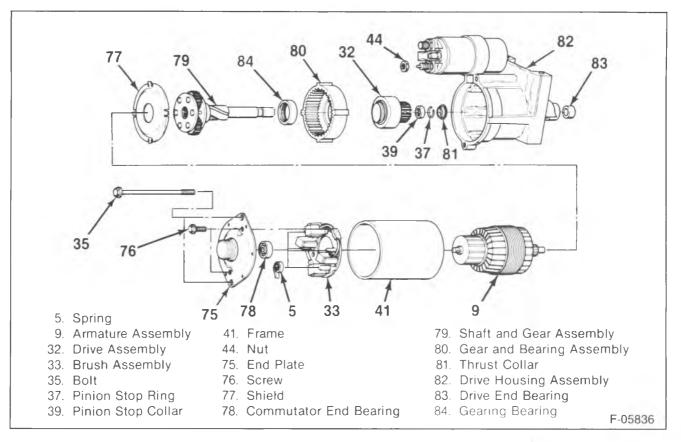


Figure 40—PMGR Starting Motor Components

5. Low no-load speed and low current draw indicates a high internal resistance due to poor connections, worn leads, dirty commutator and causes listed under step 4.

DISASSEMBLY

If the motor does not perform to specifications, it may need to be disassembled for further testing of the components. Normally the starting motor should be disassembled only so far as is necessary to make repair or replacement or parts. As a precaution, it is suggested that safety glasses be worn when disassembling or assembling the starting motor.

Remove or Disconnect (Figures 40 through 43)

Tool Required:

J 28509-A Bearing Puller

- Clean the outside of the starter housing, removing grease, oil, mud, etc.
- Make scribe marks to show the relationship of the lever housing, field frame, and end plate to aid in assembly.
- 1. Nut (44) and lead at solenoid terminal.
- 2. Through bolts (35).
- 3. Two screws and end plate (75).

CAUTION: The magnets in the frame have a strong attraction to metal parts. Do not put your fingers between the armature and frame when removing or installing the armature assembly or injury could result.

- 4. Field frame with armature and shield (77) from the drive end.
- 5. Armature (9) from the field frame (41).
- 6. Commutator end bearing (78) from the armature shaft with J 28509-A or equivalent.
 - Lift the brushes so each spring rests against the brush to prevent brush damage during brush assembly removal (figure 41).
- 7. Brush assembly from the commutator.

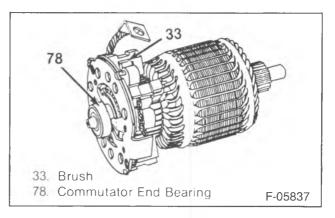


Figure 41—Armature Assembly

6D-24 ENGINE ELECTRICAL

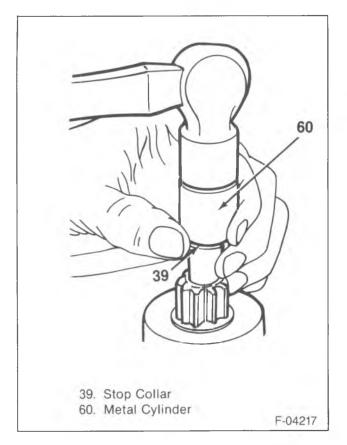


Figure 42—Driving the Stop Collar Off the Pinion Stop Ring

- 8. Gear and drive from the drive housing assembly (82).
 - Use a screwdriver to pry the shift lever off the drive pins.
- 9. Thrust collar (81) from the drive shaft.
- Slide a deep socket over the shaft and tap the socket to drive the stop collar (39) off the pinion stop ring (37) (figure 42).
- 10. Stop collar and stop ring.
- 11. Drive and gear from the shaft.
- 12. Bearing (83) from the drive housing assembly (figure 43).
 - The assembly, including the solenoid, plunger, return spring, shift lever, and drive housing, cannot be disassembled.

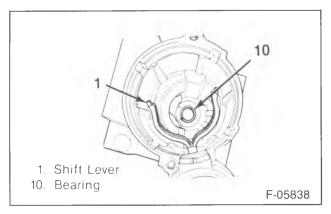


Figure 43—Drive End Bearing

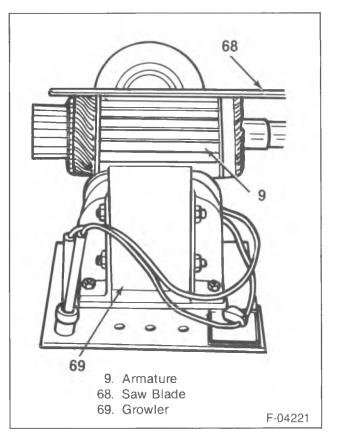


Figure 44—Testing the Armature for Short Circuits

INSPECTION AND REPAIR

Clean

 All parts with a soft dry cloth. Do not use grease dissolving solvents on the field frame, armature, bearings or drive assembly.

Inspect

- Brushes and brush holders. Make sure they are clean and the brushes are not worn. Check by hand that the brush springs are giving firm contact between the brushes and commutator. If the springs are discolored or distorted, or the brushes worn, replace the brush assembly.
- Armature. If the commutator is rough or worn, turn it down only enough to clean the surface. Do not undercut it.
- 3. Armature for short circuits (figure 44).
 - Rotate the armature in a growler with a steel strip, such as a hacksaw blade, held on the armature parallel to the shaft. The steel strip will vibrate on the area of the short circuit.
 - Shorts between the commutator bars are sometimes produced by brush dust or copper dust.
- 4. Armature for opens.
 - Look for loose connections where the conductors join the commutator bars. Poor connections cause arcing and burning of the

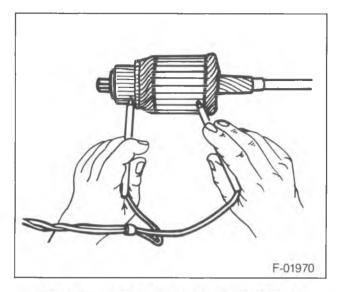


Figure 45—Testing the Armature for Grounds

commutator. If the bars are black or discolored where the windings are connected to the bars, replace the armature.

- 5. Armature for grounds by using a test lamp (figure 45).
 - If the test lamp lights when one test prod is placed on the commutator and the other test prod is placed on the armature core or shaft, the armature is grounded.
- 6. Shaft, bearings, pinion and gears for wear and discoloration. Replace as necessary.
- 7. Solenoid hold-in winding.
 - With all the leads disconnected from the solenoid, make the test connections as shown in figure 46.
 - Turn the switch on and adjust the carbon pile to lower the battery voltage to the value shown in "Specifications" at the end of this section.
 - Note the ampere reading; a high reading indicates a shorted or grounded winding, and a low reading indicates excessive resistance.
- 8. Solenoid pull-in winding.
 - With all the leads disconnected from the solenoid, make the test connections as shown in figure 47.

NOTICE: To prevent overheating the pull-in winding, do not leave the winding energized more than 15 seconds. The current draw will decrease as the winding temperature increases.

- Turn the switch on and adjust the carbon pile to lower the battery voltage to the value shown in "Specifications" at the end of this section.
- Note the ampere reading; a high reading indictes a shorted or grounded winding, and a low reading indicates excessive resistance.

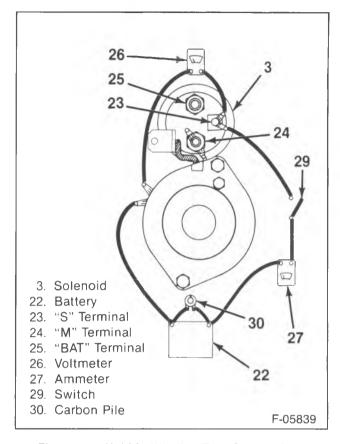


Figure 46—Hold-In Winding Test Connections

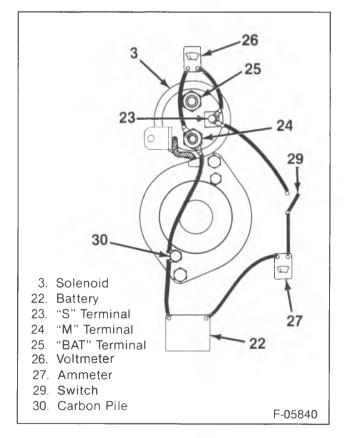


Figure 47—Pull-In Winding Test Connections

6D-26 ENGINE ELECTRICAL

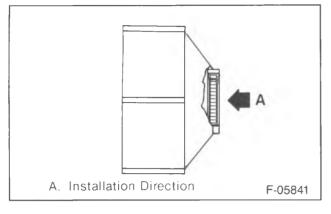


Figure 48—Gear Bearing Installation

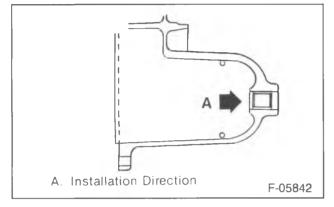


Figure 49—Drive End Bearing Installation

ASSEMBLY



Install or Connect (Figures 40, 41, 48 through 52)

- Lift the brushes up in the holders with the springs resting against the sides of the brushes.
- 1. Brush assembly onto the commutator.

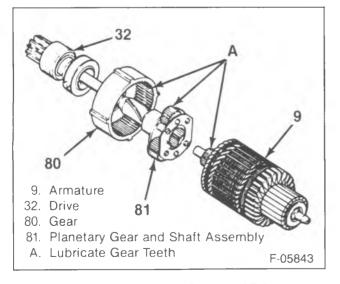


Figure 50—Armature, Gears and Drive

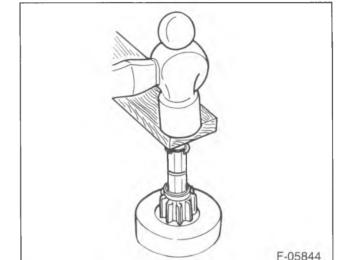


Figure 51—Forcing the Stop Ring on the Shaft

- Commutator end bearing inner race onto the shaft by pressing until the inner race contacts the stop shoulder.
 - The bearing is sealed and does not need lubrication.
- Lift the springs and allow the brushes to drop onto the commutator.
- 3. Gear bearing into the gear by pressing until it is 0.28 to 0.38 mm (0.011 to 0.014 inch) below the casting surface (figure 48).
- Lubricate the bearing with lubricant PN 10497186 or equivalent if needed. This grease maintains lubricating qualities even at temperature extremes.
- 4. Drive end bearing into the drive housing assembly (figure 49).
 - Press the bearing until it is 0.25 to 0.45 mm
 - (0.009 to 0.010 inches) below the casting face.Add lubricant PN 10497186 or equivalent to the bearing.
- Lubricant PN 10497186 or equivalent to the inner gear teeth, planetary gears, armature shaft gear teeth, and the shaft assembly bearing (figure 50).
- 6. Inner gear and drive over the shaft.
- 7. Stop collar (39) onto the shaft.
- 8. Stop ring (37) on the shaft (figure 51).
 - Place the ring on the end of the shaft.

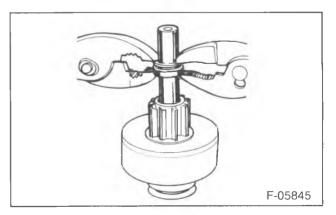


Figure 52—Forcing the Collars over the Stop Ring

- With a wood block on the top of the ring, force the ring onto the shaft with a light hammer blow.
- Slide the ring down and into the shaft groove. Do not distort the retainer ring when installing it.
- 9. Thrust collar (81) onto the shaft.
- Use pliers to squeeze the collars over the stop ring (figure 52).
- 10. Drive and shaft assembly into the drive housing assembly.
 - With a screwdriver, guide the shift lever over the shift collar pins on the drive assembly.
- 11. Shield (77) to the drive housing assembly.

CAUTION: The magnets in the frame have a strong attraction to metal parts. Do not put your fingers between the armature and frame when removing or installing the armature assembly or injury could result.

- 12. Armature assembly (9) into the frame.
- 13. Frame to the drive housing assembly.
- 14. End plate (75) to the brush assembly with two screws.
- 15. Two bolts (35) to the starter assembly.
- 16. Nut (44) and lead to the solenoid terminal.

PINION CLEARANCE CHECK

The pinion clearance cannot be adjusted but should be checked after reassembly of the motor. Improper clearance is an indication of worn parts.

To check pinion clearance, perform the follow steps (figures 53 and 54).

- 1. Disconnect the motor lead connector from the solenoid motor terminal.
- 2. Connect a 12-volt battery from the solenoid switch terminal to the drive housing.
- Momentarily flash a jumper lead from the solenoid motor terminal to the drive housing. This will shift the pinion into cranking position and it will remain so until the battery is disconnected.
- 4. Push the pinion back toward the commutator end to eliminate slack movement.
- 5. Measure the distance between pinion and pinion stop.
 - Clearance should be 0.25 mm to 3.56 mm (0.010 to 0.160 inch).
- 6. The clearance is not adjustable. If it is not within limits, check for improper assembly.

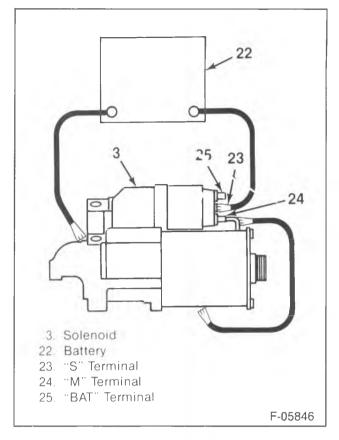


Figure 53—Pinion Clearance Check Circuit

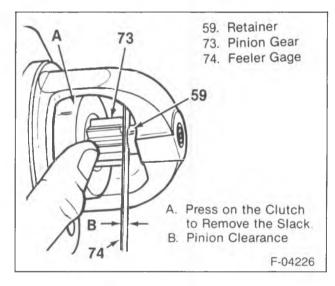


Figure 54—Measuring Pinion Clearance

6D-28 ENGINE ELECTRICAL



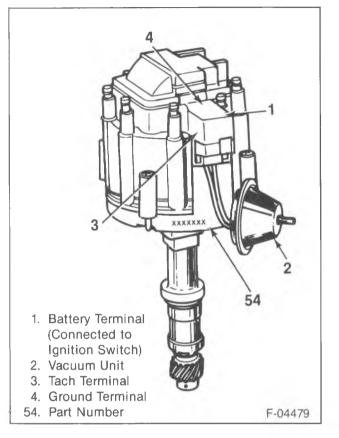


Figure 55--Distributor with Integral Coil

DESCRIPTION

This distributor is a magnetic pulse triggered, transistor controlled, inductive discharge distributor (figures 55 through 58). The magnetic pickup assembly located inside the distributor contains a permanent magnet, a pole piece with internal teeth, and a pickup coil. When the teeth of the timer core rotating inside the pole piece line up with the teeth of the pole piece, an induced voltage in the pickup coil signals the electronic module to trigger the coil primary circuit. The primary current decreases and a high voltage of up to 35,000 volts is induced in the ignition coil secondary winding which is directed through the rotor and secondary leads to fire the spark plugs. The capacitor in the distributor is for radio noise suppression.

The magnetic pickup assembly is mounted over the main bearing on the distributor housing. The electronic module within the distributor automatically controls the dwell period.

A distributor with an integral coil is used on engines without TBI (Throttle Body Injection). A distributor with a separate coil is used on engines with TBI, and the ignition system is then controlled by the computer. This EST (Electronic Spark Timing) system may include ESC (Electronic Spark Control). Refer to ENGINE ELECTRICAL (SEC. 6D) in the applicable truck service manual for a description of these systems.

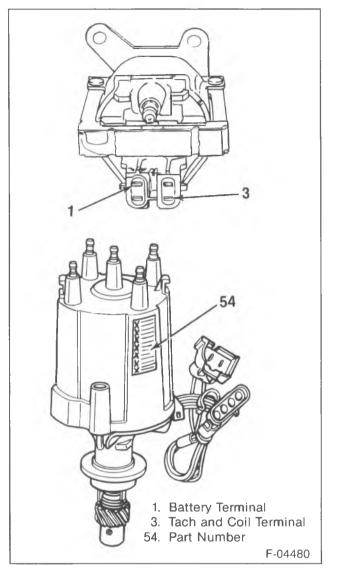


Figure 56—Distributor with Separate Coil

On a distributor with an integral coil, the part number (seven digits) is stamped on the distributor housing (figure 55). On a distributor with a separate coil, it is located on a label on the distributor cap (figure 56).

IGNITION COIL

The coil is built like a transformer with the winding surrounded by a laminated iron frame. It generates a high secondary voltage (up to 35,000 volts) when the primary circuit is broken. It may be contained in the cap or mounted separately and connected to the distributor by a high tension wire.

ELECTRONIC MODULE

The electronic module is a solid state unit containing many complete circuits. The circuits control spark triggering, switching, current limiting, dwell control and distributor pickup. The dwell angle is controlled by the module and is varied in direction relation to engine speed.

ENGINE ELECTRICAL 6D-29

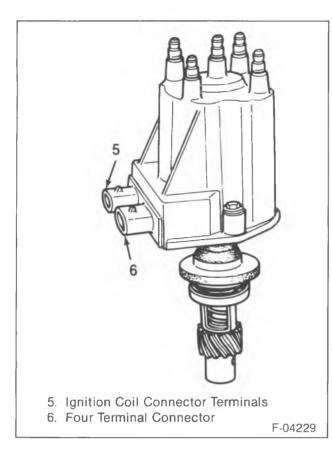


Figure 57—Distributor with Separate Coil and Sealed Connectors

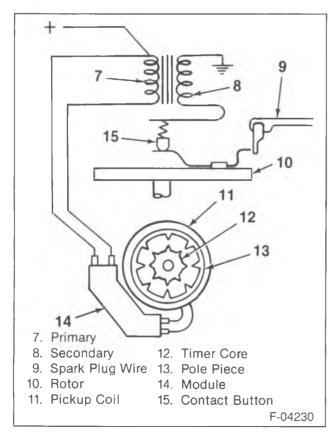


Figure 58—Basic Wiring Schematic

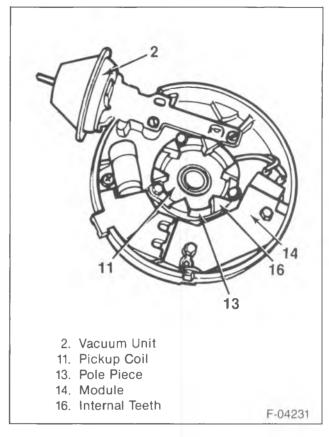


Figure 59—Top View of Distributor

With an EST system, the computer sends signals to the module to control dwell and spark timing. The module may have from four to eight terminals, depending on the ignition system.

POLE PIECE AND COIL ASSEMBLY (Figure 59)

The pole piece and plate assembly (often referred to as the pickup coil assembly) consists of the following: A stationary pole piece with internal teeth and a pickup coil and magnet which are located between the pole piece and a bottom plate.

CENTRIFUGAL AND VACUUM ADVANCE (Figures 59 and 60)

Distributors without EST systems have centrifugal advance weights and springs. Some also have vacuum advance units.

Centrifugal advance is achieved through the rotation of the timer core in relation to the distributor shaft. Vacuum advance is achieved by attaching the pickup coil and pole piece to the vacuum advance unit actuating arm.

On distributors without the vacuum unit, a plastic retainer is installed to hold the pickup coil assembly stationary. Only centrifugal advance is used on these models.

HALL EFFECT SWITCH

This switch, used on some distributors in the EST system, signals the computer which cylinder will fire next.

6D-30 ENGINE ELECTRICAL

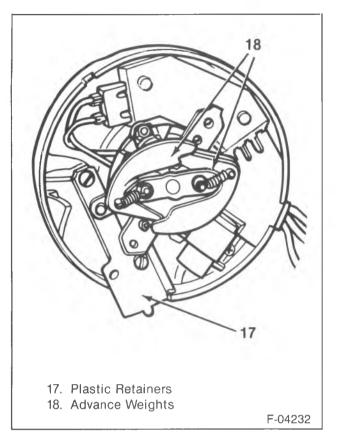


Figure 60—Distributor with Centrifugal Advance Weights

DISASSEMBLY OF DISTRIBUTORS WITH INTEGRAL COILS

Remove or Disconnect (Figure 61)

Сар

- Wiring harness connector from the ignition coil terminal connector (figure 55).
- Unlatch the four spring latches holding the cap to the housing.
- 2. Cap and coil.
 - Inspect and check the coil. Refer to "Inspection and Electrical Tests" later in this section.

Coil

- 3. Cover attaching bolts (32) and the cover (19) from the cap (23).
- 4. Four attaching bolts from the coil (21).
- 5. Coil wires from the connector housing with needle nose pliers (figure 62).
- 6. Coil and wiring from the cap.
- 7. Arc seal (22) and the ground wire (20) from the cap (23).
 - Refer to "Inspection and Electrical Tests" later in this section.

Shaft Assembly

- Two bolts (32) holding the rotor (10) to the shaft (26).
 Rotor.
- 10. Two bolts holding the Hall Effect switch to the housing (if equipped).
- 11. Hall Effect switch (35) if equipped (figure 63).
 - Refer to "Inspection and Electrical Tests" later in this section.
- 12. Roll pin (27) from the shaft (26) (figure 64).
 - Mark the shaft and driven gear so they can be aligned for assembly.
 - Drive out the roll pin with a small punch.
- 13. Driven gear (29) on distributor for a 6-cylinder engine.
- 14. Driven gear (29), shim washer (31) and thrust washer on distributor for an 8-cylinder engine.
- 15. Timer core shaft (26) from the housing (30).
 - Distributors for non-EST ignition systems have centrifugal advance weights and springs. These are part of the shaft assembly and are not serviceable.

Module Components

- Four-wire connector from the pickup coil connector on distributors with ESC (figure 65).
- 17. Pickup coil connector from the module (figure 66).
 - Check the vacuum advance unit (if equipped) and the pickup coil. Refer to "Inspection and Electrical Tests" later in this section.
- 18. Screw holding the capacitor to the housing
- 19. Capacitor (36), wiring harness connector (40) and module (14) from the housing (figure 67).
- 20. Connector from the module.
 - Check the module. Refer to "Inspection and Electrical Tests" later in this section.

Pickup Coil Assembly (Figure 68)

- 21. Magnetic shield (if equipped).
- 22. Thin washer (31) from the housing.
- 23. Pickup coil assembly (11).
 - Do not disassemble. The coil is serviced only as an assembly.
- 24. Vacuum unit (2) (if equipped) or plastic retainer and two bolts.

INSPECTION AND ELECTRICAL TESTS

Inspect

- 1. Cap for cracks or holes. Replace the cap if it is damaged at all.
- 2. Metal terminals in the cap for corrosion. Scrape them clean with a knife or replace the cap.
- 3. Seal and the button in the cap (figure 69). Replace the button if the end that contacts the distributor rotor is pitted or burned.
- 4. Rotor for wear or burning at the outer terminal. The presence of carbon on the terminal indicates rotor wear and the need for replacement. Do not try to scrape carbon deposits from the outer terminal since this would shorten the terminal and might alter ignition timing.

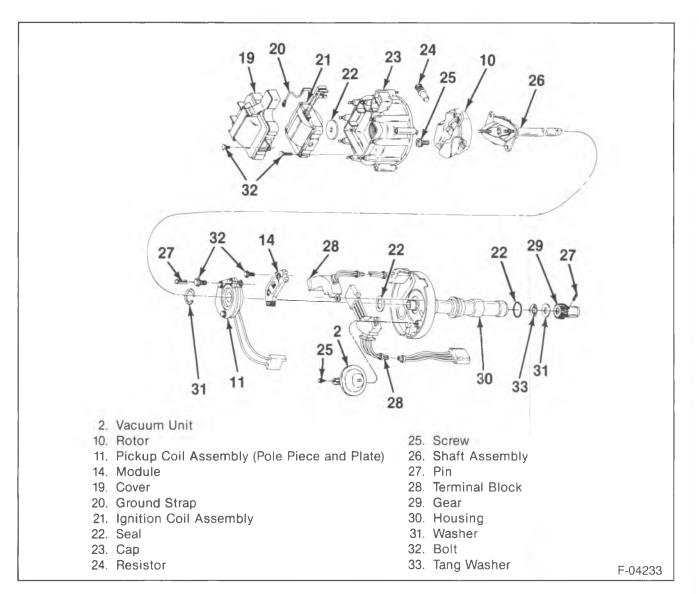


Figure 61—Distributor Components

5. Advance assembly components (springs and weights) for corrosion or dirt.

Clean

- The advance components and rotor shaft in a solvent.
- The advance components and shaft can only be replaced as an assembly.
- Distributor shaft for shaft-to-bushing looseness. Insert the shaft in the housing. If the shaft wobbles in the bushings, replace the housing and/or shaft. The bushings are not serviceable.
- 7. Housing for cracks or damage.

1 Measure

Tool Required:

J 24642-F Module Tester

1. Vacuum level of the vacuum advance unit with a vacuum source (figure 70). Compare to "Specifications" at the end of this section. The unit must function with no leak-down; that is, it must hold a vacuum until the vacuum source is released.

- 2. Voltage of the Hall Effect switch (if equipped).
 - Connect a 12 volt battery and voltmeter as shown in figure 71.
 - With a knife blade inserted and held against the magnet the voltmeter should read within 0.5 volts of the battery voltage. If not, replace the switch.
 - Remove the knife blade. The voltmeter should read less than 0.5 volts. If not, replace the switch.
- 3. Resistance of the pickup coil with an ohmmeter.
 - Connect an ohmmeter as shown in figure 72, step 1. If the ohmmeter reads less than 500 ohms or more than 1500 ohms while flexing the leads, replace the pickup coil.
 - If the coil does not have an open, check for ground as shown in step 2. The reading should be infinite.
- 4. Resistance of the ignition coil with an ohmmeter.
 - Connect the ohmmeter as shown in figure 73, step 1. The reading should be zero or nearly zero. If not, replace the coil.

6D-32 ENGINE ELECTRICAL

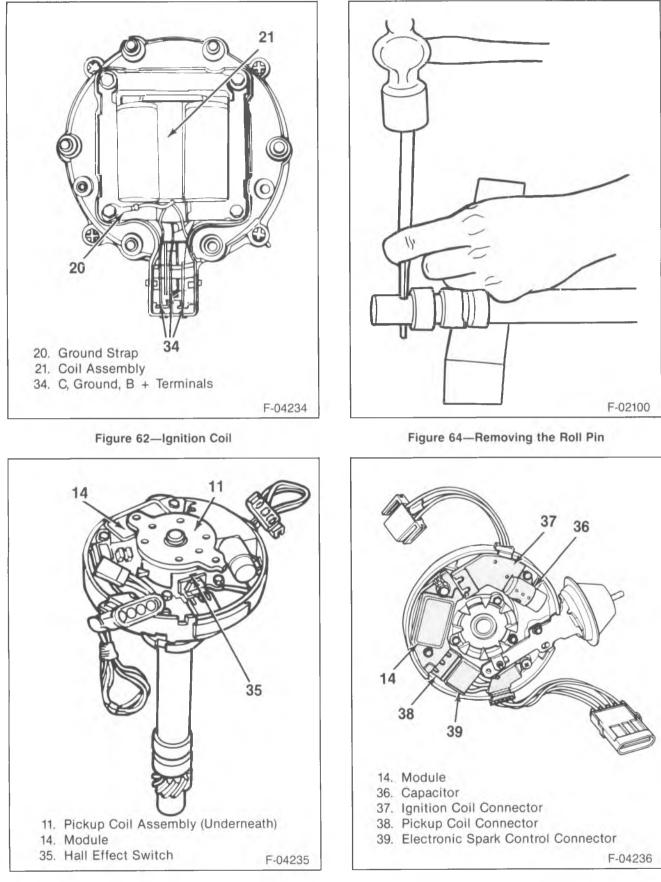


Figure 63—Distributor with Hall Effect Switch

Figure 65—Module and Connectors

ENGINE ELECTRICAL 6D-33

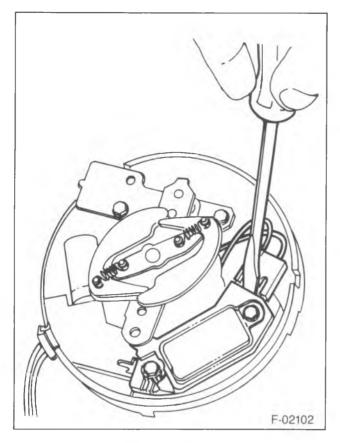


Figure 66—Removing the Pickup Coil Connector

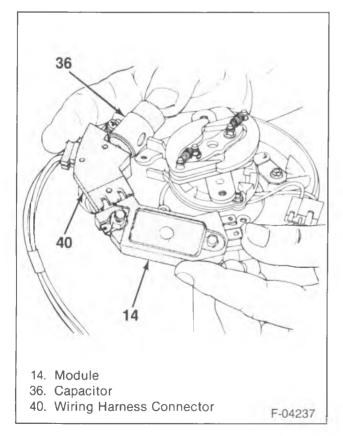


Figure 67—Removing the Module

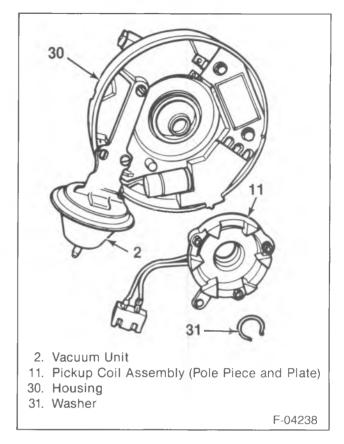


Figure 68—Pickup Coil Removed

- Connect the ohmmeter as shown in steps 2 and 3. Use the high scale. Replace the coil only if both readings are infinite.
- 5. Electrical performance of the module. The module can only be checked with an approved module tester, such as J 24642-F or equivalent. Follow the directions exactly that come with the tester.

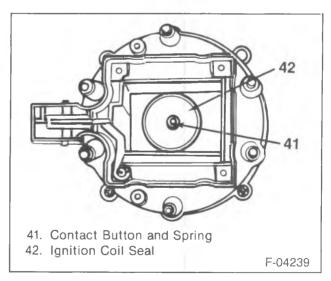


Figure 69—Cap and Seal

6D-34 ENGINE ELECTRICAL

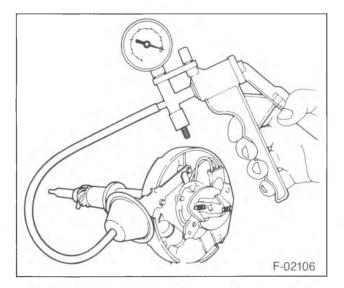


Figure 70-Checking the Vacuum Advance Unit

ASSEMBLY OF DISTRIBUTORS WITH INTEGRAL COILS

++ Install or Connect (Figure 61)

Сар

- 1. Spring, button (41) and seal (42) into the cap (figure 69).
- 2. Coil (21) and wiring into the cap (figure 62).
- 3. Four bolts holding the coil to the cap.

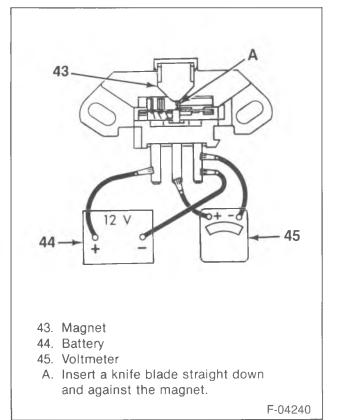


Figure 71—Testing the Hall Effect Switch

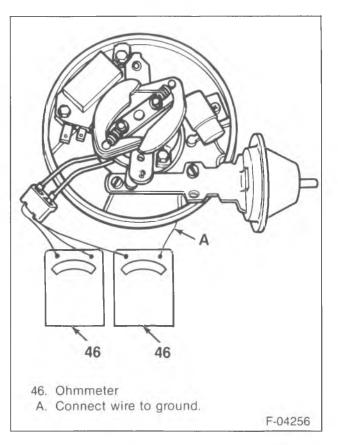


Figure 72—Checking the Pickup Coil

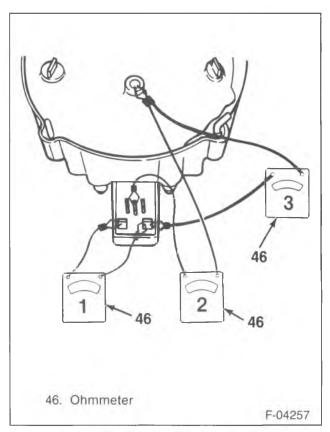


Figure 73—Checking the Ignition Coil

ENGINE ELECTRICAL 6D-35

4. Cover (19) to the cap (23) with two bolts.

Distributor Components

- 5. Lubricant into the lube cavity of the housing (30) only if needed.
 - Refer to "Specifications" at the end of this section.
- 6. Vacuum unit (2) if equipped or plastic retainer.
- 7. Screws holding the vacuum unit or retainer to the housing.
- 8. Pickup coil assembly (11) into the housing (30).
 - Position the assembly over the pin on the vacuum unit or retainer.

NOTICE: If the arm of the assembly is not properly installed on the pin, the arm can float and cause the ignition timing to vary.

- Secure the assembly with the C-washer (figure 68).
- 9. Magnetic shield (if equipped).
- 10. Wiring connectors to the module (figure 65).
 - Lubricate.
 - Module terminals with a thin coat of petroleum jelly to prevent future oxidation.
 - Bottom of the module and the module rest pad in the housing with silicone grease or an equivalent heat transfer substance.

NOTICE: Be sure to thoroughly coat the bottom of the module. Failure to do so could result in heat damage to the module.

Install or Connect

- Pickup coil connector to the module.
- ESC connector (if equipped) to the pickup coil connector.
- Wiring harness and capacitor to the other end of the module.
- 11. Module, wiring harness, and capacitor to the housing with three bolts.
- 12. Shaft assembly into the housing.
 - Rotate the shaft to check for even clearance all around between the pickup coil assembly and the teeth on the distributor shaft assembly. If interference exists, loosen the three bolts on the pickup coil assembly and move the pole piece (teeth) to provide an even clearance and tighten the three bolts.
- Hall Effect switch (if equipped) to the housing with two bolts.
- 14. Rotor to the shaft assembly with two screws.

Distributors for 6 Cylinder Engines

15. Driven gear (29) onto the shaft.

Distributors for 8 Cylinder Engines

16. Seal (22), thrust washer, washer (31), and driven gear (29) onto the shaft.

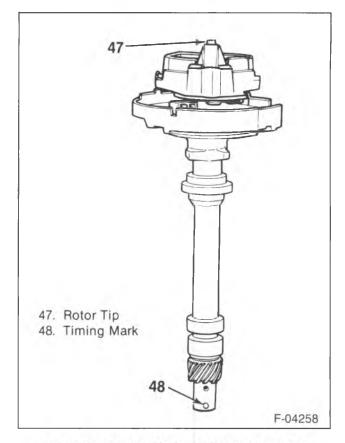


Figure 74—Timing Mark and Rotor Alignment

All Distributors

- Align the timing mark (48) on the driven gear with the rotor tip (47) (figure 74).
- 17. Roll pin into the driven gear (figure 75).
- 18. Distributor cap (23) onto the housing (30) with the tab on the rim of the cap in the notch of the housing.
- 19. Four spring clips on the cap onto the rim of the housing.
- 20. Wiring harness connector to the terminal on the side of the distributor cap (figure 76).

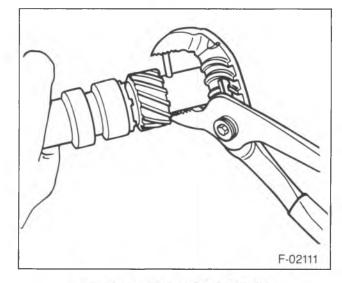


Figure 75—Installing the Roll Pin

6D-36 ENGINE ELECTRICAL

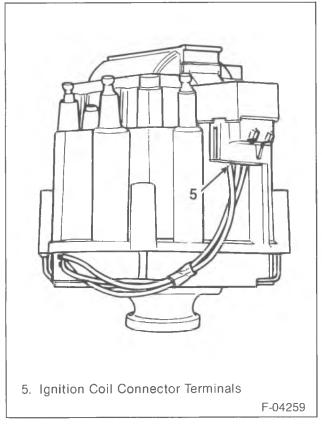


Figure 76—Wiring Harness Connector

DISASSEMBLY OF DISTRIBUTORS WITH SEPARATE COILS

DISTRIBUTORS WITH SEALED MODULE CONNECTORS (Figure 57)

+> Remove or Disconnect (Figure 77 and 78)

- 1. Screws and washers holding the cap to the housing.
- 2. Cap (23) from the housing.

- Place marks on the rotor and the shaft assembly to help line up the rotor during assembly.
- 3. Rotor (10) from the shaft by lifting or prying straight up.
- 4. Roll pin (27) from the shaft (26).
 - Mark the shaft and driven gear for reassembly.
 Drive out the roll pin with a small punch (figure 79).
- 5. Driven gear (29), washer or spring, and spring retainer (52) or tang washer (33).
- 6. Shaft (26) with the pole piece and plate from the housing (30).
- 7. Retainer (49) from the housing (30) by prying it with a screwdriver.
- 8. Shield (50).
- 9. Pickup coil connector from the module (14).Lift the locking tab with a screwdriver.
- 10. Pickup coil (11).
- 11. Two screws holding the module to the housing.
- 12. Module (14).

DISTRIBUTORS WITHOUT SEALED MODULE CONNECTORS

Remove or Disconnect (Figure 80)

- 1. Cap.
 - Unlatch the spring latches holding the cap to the housing.
- Place a mark on the rotor and on the shaft assembly to help line up the rotor during reassembly.
 - 2. Rotor (10).
 - 3. Two bolts holding the Hall Effect switch (if equipped) to the housing.
 - Lift away the locking tab of the connector to the switch.
 - 4. Hall Effect switch (35) by lifting straight up.
 - 5. Roll pin (26) from the shaft (27).
 - Mark the shaft and driven gear so they can be aligned for assembly.
 - Drive out the roll pin with a small punch (figure 79).
 - 6. Driven gear (29), washer (31), spring (51), retainer (52), and tang washer (33).

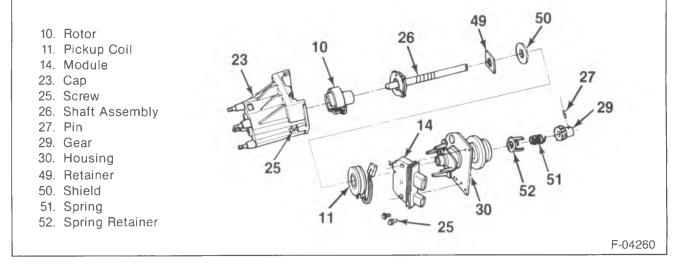


Figure 77—Distributor Components (Separate Coil and Sealed Connector)

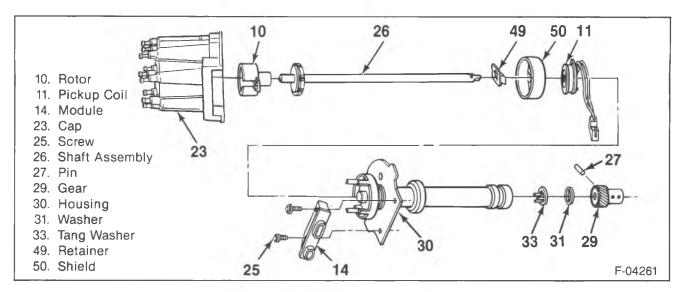


Figure 78—Distributor Components (Separate Coil and Sealed Connector) for an 8-Cylinder Engine

- 7. Shaft (27) from the housing (30).
 - Pry straight up.
- 8. Thin "C" retaining washer (53) from inside the pickup coil assembly.
- 9. Pickup coil connector from the module (14).
- 10. Pickup coil assembly (11) from the housing.
- 11. Wiring harness connectors from the module.
- 12. Two screws holding the module to the housing.
- 13. Module (14).
- 14. Bolt holding the wiring harness to the housing.
- 15. Wiring harness.

INSPECTION AND ELECTRICAL TESTS

Inspect

- 1. Cap for cracks or tiny holes. Replace the cap if it is damaged at all.
- 2. Metal terminals in the cap for corrosion. Scrape them clean with a knife or replace the cap.
- 3. Rotor for wear or burning at the outer terminal. The presence of carbon on the terminal indicates rotor wear and the need for replacement.

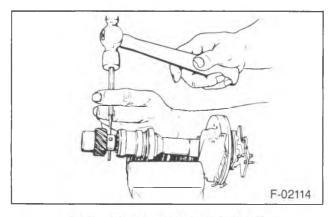


Figure 79—Removing the Roll Pin

- Shaft for shaft-to-bushing looseness. Insert the shaft in the housing. If the shaft wobbles, replace the housing and/or shaft.
- 5. Housing for cracks or damage.

4 Measure

Tools Required:

J 24642-F Module Tester

- 1. Voltage of the Hall Effect switch (if equipped).
 - Connect a 12 volt battery and voltmeter as shown in figure 71.
 - With a knife blade inserted and held against the magnet, the voltmeter should read within 0.5 volts of the battery voltage. If not, replace the switch.
 - Remove the knife blade. The voltmeter should read less than 0.5 volts. If not, replace the switch.
- 2. Resistance of the pickup coil with an ohmmeter.
 - Connect an ohmmeter to either pickup coil lead and the housing as shown in figure 81, step 1. The reading should be infinite. If not, replace the coil.
 - Connect an ohmmeter to both pickup coil leads as shown in figure 81, step 2. Flex the leads by hand at the coil and the connector to locate any intermittent opens. The ohmmeter should read a constant unchanging value in the 500 to 1500 ohm range. If not, replace the coil.
- Electrical performance of the module. The module can only be checked with an approved module tester, such as J 24642 or equivalent. Follow the directions exactly that come with the tester.
- 4. Resistance of the ignition coil with an ohmmeter.
 - Connect the ohmmeter as shown in figure 82, step 1. Use the high scale. The reading should be infinite. If not, replace the coil.
 - Connect the ohmmeter as shown in step 2. Use the low scale. The reading should be very low or zero. If not, replace the coil.

6D-38 ENGINE ELECTRICAL

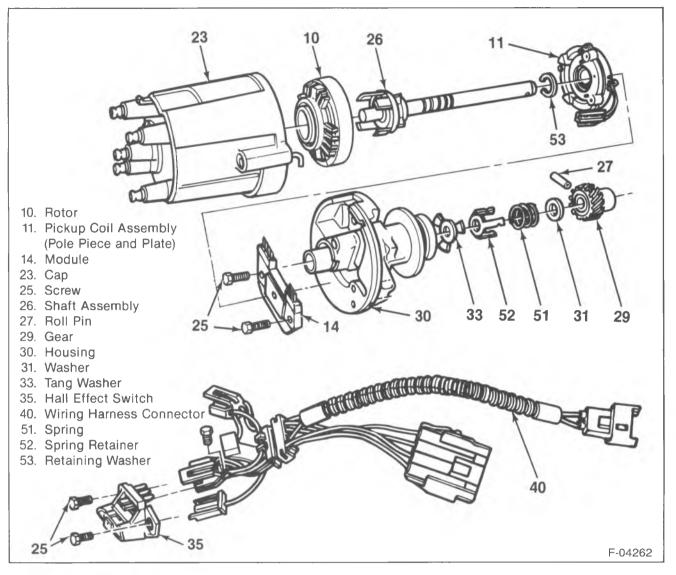


Figure 80—Distributor Components (Separate Coil)

• Connect the ohmmeter as shown in step 3. Use the high scale. The meter should not read infinite. If it does, replace the coil.

ASSEMBLY OF DISTRIBUTORS WITH SEPARATE COILS

DISTRIBUTORS WITH SEALED MODULE CONNECTORS (Figure 57)

→← Install or Connect (Figure 77 and 78)

- Lubricate
 - Bottom of the module and the module rest pad in the housing with silicone grease or an equivalent heat transfer substance.

NOTICE: Be sure to thoroughly coat the bottom of the module. Failure to do so could result in heat damage to the module.

1. Module (14) to the housing (30) with two screws.

- 2. Pickup coil (11).
 - Fit the tab on the bottom of the coil into the anchor hole in the housing.
- 3. Pickup coil wiring connector to the module.
 - Make sure the locking tab is in place.
- 4. Shield (50) onto the coil.
- 5. Retainer (49) onto the shield.
- 6. Shaft assembly (26) into the housing (30).
- 7. Spring retainer (52), spring (51), washer and driven gear (29) onto the bottom of the shaft.
 - Align the marks on the driven gear, housing, and shaft assembly.
- 8. Roll pin (27) into the gear.
- Spin the shaft and make sure the teeth on the shaft assembly do not touch the pole piece.
- 9. Rotor (10) onto the shaft.
 - Fit the tab in the rotor into the slot on the shaft.
- 10. Cap (23) to the housing with screws and washers.

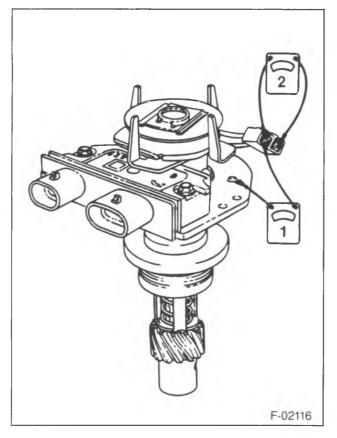


Figure 81—Testing the Pickup Coil

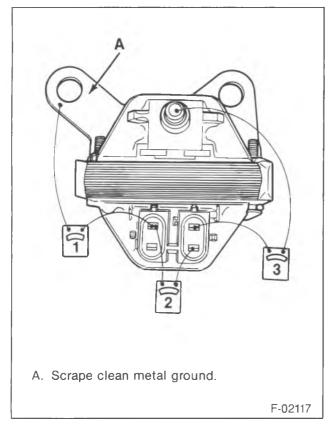


Figure 82—Testing the Ignition Coil

ENGINE ELECTRICAL 6D-39

DISTRIBUTORS WITHOUT SEALED CONNECTOR (Figure 80)

→+ Install or Connect

- Lubricate
 - Bottom of the module and the module rest pad in the housing with silicone grease or an equivalent heat transfer substance.

NOTICE: Be sure to thoroughly coat the bottom of the module. Failure to do so could result in heat damage to the module.

- 1. Module (14) to the housing (30) with two screws.
- 2. Wiring harness into the housing.
- 3. Two harness mounting tabs to the housing with one bolt.
- 4. Two wiring connectors to the module.
- Be sure the locking tabs are in place.5. Pickup coil (11) to the housing.
 - Fit the tab on the bottom of the coil into the anchor hole in the housing.
- 6. Pickup coil wiring connector to the module.
- 7. Thin "C" washer into the coil.
- 8. Shaft (26) into the housing.
- 9. Tang washer (33), spring retainer (52), spring (51), and driven gear (29) onto the shaft.
 - Align the marks on the driven gear, housing, and shaft assembly.
- 10. Roll pin into the driven gear.
 - After assembly, turn the shaft by hand to check tooth clearance between the shaft and pickup coil assembly. If the clearance needs adjustment, loosen and retighten the three pickup coil bolts.
- 11. Wiring connector to the Hall Effect switch (if equipped).
- 12. Hall Effect switch to the housing with two bolts.
 - The teeth on the shaft should rotate between the back plate and the magnet of the switch without touching.
- 13. Rotor (10) onto the shaft.
 - Fit the tab in the rotor into the slot on the shaft.
- 14. Cap (23) onto the housing.
 - Fit the tab inside the rim of the cap into the slot on the rim of the housing.
- 15. Spring clips on the cap onto the rim of the housing.

6D-40 ENGINE ELECTRICAL

SPECIFICATIONS

GENERATOR SPECIFICATIONS

		Rotation		Field Current @ 12 Volts					
	Series	Viewing	Field-Ohms	27°C (80°F)		Cold	Output		Hot Output
Part No.	(Type 100)	Dr. End	27°C (80°F)	AMPS	AMPS	RPM	AMPS	RPM	AMPS
1100207	12 SI	CW	2.4-2.7	4.5-5.0	23	1600	70	6500	66
1101157	12 SI	CW	2.4-2.8	4.2-5.0	30	1600	78	6500	78
1101215	17 SI	CW	1.7-2.1	5.7-7.1	50	1600	120	6500	120
1101240	12 SI	CW	2.4-2.8	4.2-5.0	30	1600	94	6500	94
1101243	12 SI	CW	2.4-2.8	4.2-5.0	23	1600	66	6500	66
1101244	12 SI	CW	2.4-2.8	4.0-5.0	23	1600	66	6500	66
1101245	12 SI	CW	2.4-2.8	4.2-5.0	30	1600	94	6500	94
1101263	17 SI	CW	1.7-2.1	5.7-7.1	50	1600	120	6500	120
1105628	12 SI	CW	2.4-2.7	4.5-5.0	30	1600	81	6500	78
1105632	12 SI	CW	2.4-2.7	4.5-5.0	23	1600	70	6500	66

STARTER SPECIFICATIONS

				No Load Tes	t @ 10 Volts		
Starter			AMPS		RPM		Solenoid
Part No.	Series	Туре	Minimum	Maximum	Minimum	Maximum	Part No.
1113589	27MT	136	120	210	9000	13400	1114247
1113590	27MT	136	120	210	9000	13400	1114558
1998530	5MT	101	50	75	6000	11900	1114530
1998559	10MT	101	60	90	6500	10500	1114520
1998583	10MT	101	70	110	6500	10700	1114520
1998584	10MT	101	70	110	6500	10700	1114520
1998588	10MT	101	70	110	6500	10700	1114563
1998589	10MT	101	70	110	6500	10700	1114563
1998590	10MT	101	70	110	6500	10700	1114531
9000719	PMGR	101	50	90	2300*	26600*	
9000735	PMGR	PG200	50	90	2300*	26600*	
10455016	5MT	101	50	75	6500	11900	1114530
10455018	5MT	101	50	75	6500	11900	1114530

*Drive Speed

SPECIFICATIONS (CONT.)

SOLENOID SWITCHES

Switcl	Switch		Pull-In Winding		Winding
Part No.	Volts	Amps	Volts	Amps	Volts
1114247	12	13-16	5	15-17	10
1114520	12	23-30	5	13-19	10
1114530	12	23-30	5	13-19	10
1114531	12	23-30	5	13-19	10
1114558	12	13-16	5	15-17	10
1114563	12	26-30	5	14-18	10
PMGR Solenoid	12	31-36	5	13-15	10

DISTRIBUTOR SPECIFICATIONS

		art ibutor		nediate ibutor		mum ibutor	Vacuum
Model No.	RPM	Degree	RPM	Degree	RPM	Degree	Model
1103717	650	0-3	1200	6-6	2050	11-13	1973682
1103719	700	0-2	1000	2-5	3000	4-8	1973682

VACUUM ADVANCE SPECIFICATIONS

	Sta	Start		Maximum		
Vacuum Model	Inches Hg.	-kPa	Inches Hg.	-kPa	(Deg.)	
1973682	7-9	24-32	13-14	42-46	5	


LUBRICATION

For generator bearing lubrication, use only Delco-Remy Lubricant No. 1948791 or equivalent. This lubricant is a premium type lithium soap-mineral oil grease made especially for ball and roller bearings.

For starters (other than the PMGR) and distributor part lubrication, use Delco-Remy Gear and Shift Lubricant No. 1960954 or equivalent.

For PMGR starting motors, use Delco-Remy Lubricant No. 10497186.

6D-42 ENGINE ELECTRICAL

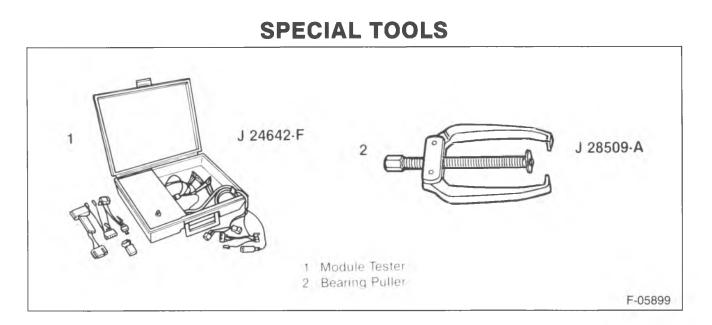

DACE

SECTION 7A

AUTOMATIC TRANSMISSION

CONTENTS

SUBJECT	FAGE
700-R4 Automatic Transmission	7A1-1
400/475 Automatic Transmission.	7 A2 -1
180C Automatic Transmission	7A3-1

The information on the 400 automatic transmission also applies to the 475 automatic transmission.

The automatic transmission in this section are GM Hydromatics.

All automatic transisions have a metal identification nameplate attached of the case exterior. For additional information refer to AUTOMATIC TRANSMISSION (SEC. 7A) in the 1987 Light Duty Truck Service Manual.

SECTION 7A1

700-R4 AUTOMATIC TRANSMISSION

CONTENTS

TRANSMISSION DISASSEMBLY

General Service Information	.7A	1-	4
Disassembly	.7A	1-	4
2-4 Servo Assembly	.7A	1-	4
Servo Pin Length	.7A	1-	4
Governor And Extension	.7A	1-	4
Valve Body And Wiring Harness	.7A	1-	5
Transmission End Play Check	.7A	1-	6
Oil Pump Assembly			7
2-4 Band, Reverse Input Clutch,			
Input And Input Gear Set	.7A	1-	8
Reaction Gear Set			
Lo and Reverse Clutch Parts	.7A	1-1	10
COMPONENT REPAIR AND			
TRANSMISSION ASSEMBLY			
Inner Manual Linkage			
Manual Shaft Seal Replacement	.7A	1-1	10
Case			
Third Accumulator Retainer And			
Check Ball Assembly	.7A	1-1	15
Case Assembly			
Lo And Reverse Clutch Assembly	.7A	1-1	18
*Lo And Reverse Clutch Backing			
Plate Selection			
Parking Pawl	.7A	1-1	18
Reaction Internal Gear And			
Carrier Assembly			
Reaction Internal Gear And Support	.7A	1-1	19
Lo And Reverse Support Assembly	.7A	1-2	20
Reaction Sun Gear And Shell	.7A	1-2	21
Input Interal Gear And Output Shaft			
Input Carrier And Sun Gear	.7A	1-2	24

*Input Clutch Assembly7A1-25 Check Valve Retainer and Ball
Assembly Replacement Procedures7A1-26
Forward Clutch Sprag Assembly
*3-4 Clutch Assembly
*3-4 Clutch Piston Travel Check
Clutch Air Check
*Reverse Input Clutch Assembly7A1-33
*Reverse Input Clutch Backing Plate
Selection
Reverse Input And Input Clutches7A1-35
2-4 Band Assembly7A1-35
*Oil Pump Assembly
*Pump Body7A1-36
Oil Pump Cover7A1-36
Oil Pump Body And Cover
Transmission End Play Check7A1-41
Valve Body And Associated Parts
*Control Valve Assembly7A1-45
*2-4 Servo Assembly7A1-51
Governor Assembly7A1-52
Speedometer
Torque Converter Assembly7A1-55
SEALS AND BEARING
LOCATIONS
TORQUE SPECIFICATIONS AND
BUSHING LOCATIONS
BUSHING REPLACEMENT
PROCEDURE7A1-60
GOVERNOR BORE REPAIR
PROCEDURE
SPECIAL TOOLS

*Designates significant product changes since the publication of the 1987 Service Manual.

7A1-2 700-R4 AUTOMATIC TRANSMISSION

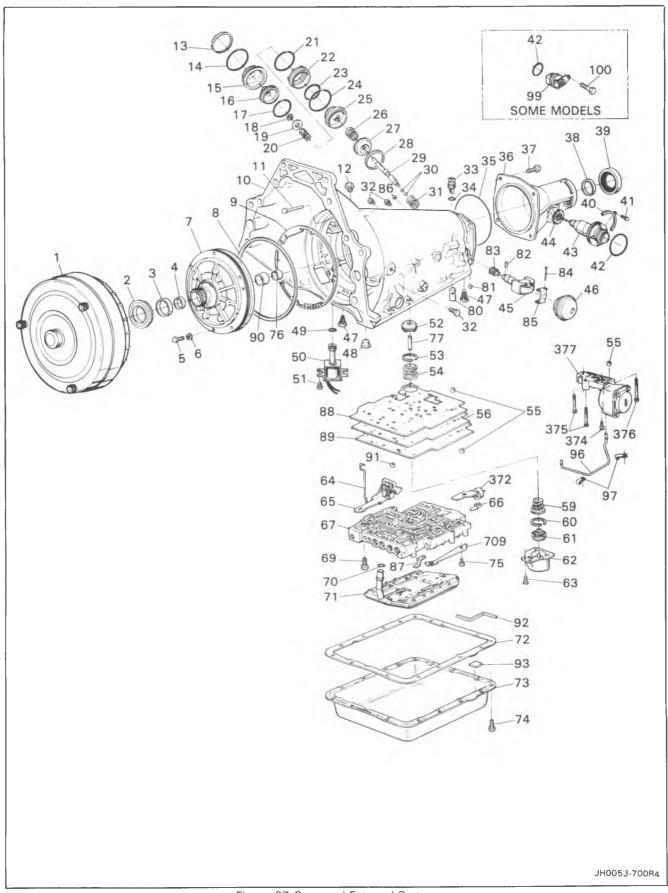


Figure 67 Case and External Parts

ILL. ILL. NO. DESCRIPTION NO. **1 CONVERTER ASSEMBLY** 2 SEAL ASSEMBLY, OIL 3 BUSHING, OIL PUMP BODY 4 BUSHING, STATOR SHAFT (FRONT) 5 BOLT, PUMP TO CASE 6 WASHER, PUMP TO CASE BOLT 7 PUMP ASSEMBLY, OIL 8 SEAL, OIL (PUMP TO CASE) 9 GASKET, PUMP COVER TO CASE 10 CASE, TRANSMISSION 11 VENT ASSEMBLY, TRANSMISSION 12 CONNECTOR, OIL COOLER PIPE 13 RING, SERVO COVER RETAINING 14 SEAL, "O" RING (2-4 SERVO COVER) 15 COVER, 2-4 SERVO 16 PISTON, 4TH APPLY 17 RING, OIL SEAL (4TH APPLY PISTON) (OUTER) 18 RING, RETAINER (APPLY PIN) 19 WASHER, SERVO APPLY PIN 20 SPRING, SERVO APPLY PIN 21 SEAL, "O" RING 22 HOUSING, SERVO PISTON (INNER) 23 RING, OIL SEAL (2ND APPLY PISTON) (INNER) 24 RING, OIL SEAL (2ND APPLY PISTON) (OUTER) 25 PISTON, 2ND APPLY 26 SPRING, SERVO CUSHION 27 RETAINER, SERVO CUSHION SPRING 28 RING, RETAINER (2ND APPLY PISTON) 29 PIN, 2ND APPLY PISTON 31 SPRING, SERVO RETURN 32 PLUG, PRESSURE 33 CONNECTOR, ELECTRICAL
34 SEAL, "O" RING (ELECTRICAL CONNECTION)
35 SEAL, CASE EXTENSION TO CASE 36 EXTENSION, CASE 37 BOLT, CASE EXTENSION TO CASE 38 BUSHING, CASE EXTENSION 39 SEAL ASSEMBLY, CASE EXTENSION OIL 40 RETAINER, SPEEDO DRIVEN GEAR FITTING 41 BOLT & WASHER ASSEMBLY
42 SEAL, "O" RING (SPEEDO FITTING TO CASE EXTENSION) 43 FITTING ASSEMBLY, SPEEDO DRIVEN GEAR 44 GEAR, SPEEDO DRIVEN 45 GOVERNOR ASSEMBLY 46 COVER, GOVERNOR 47 SCREEN, TRANSMISSION OIL PRESSURE (CONVERTER & GOVERNOR) 48 PIN, BAND ANCHOR 49 SEAL, "O" RING (SOLENOID) 50 SOLENOID ASSEMBLY 51 BOLT, HEX WASHER HEAD (SOLENOID) 52 PISTON, 3-4 ACCUMULATOR 53 RING, OIL SEAL (3-4 ACCUMULATOR PISTON) 54 SPRING, 3-4 ACCUMULATOR 55 BALL, .25 DIAMETER 56 PLATE, VALVE BODY SPACER

DESCRIPTION 59 SPRING, 1-2 ACCUMULATOR 60 RING, OIL SEAL (1-2 ACCUMULATOR PISTON) 61 PISTON, 1-2 ACCUMULATOR 62 COVER & PIN ASSEMBLY, 1-2 ACCUM. 63 BOLT, ACCUMULATOR COVER 64 LINK, THROTTLE LEVER TO CABLE 65 LEVER & BRACKET ASSEMBLY, THROTTLE 66 CLIP, ELECTRICAL WIRE 67 VALVE ASSEMBLY, CONTROL BODY 69 BOLT, VALVE BODY 70 SEAL, FILTER 71 FILTER ASSEMBLY, TRANSMISSION OIL 72 GASKET, TRANSMISSION OIL PAN 73 PAN, TRANSMISSION OIL 74 SCREW, SPEC. HEX WASHER HEAD (PAN) 75 BOLT, MANUAL DETENT SPRING 76 BUSHING, CASE 77 PIN, ACCUMULATOR PISTON 80 RETAINER & BALL ASSEMBLY, 3RD ACCUMULATOR 81 PLUG, TRANSMISSION CASE (ACCUMULATOR BLEED) 82 PIN, GOVERNOR GEAR RETAINER 83 GEAR, GOVERNOR DRIVEN 84 PIN, GOVERNOR WEIGHT 85 CAP, GOVERNOR THRUST 86 PLUG, CASE SERVO 87 CLIP, FILTER RETAINER 88 GASKET, SPACER PLATE TO CASE 89 GASKET, SPACER PLATE TO VALVE BODY 90 BUSHING, STATOR SHAFT (REAR) 91 BALL, CARBON STEEL (T.V. EXHAUST) 92 CONDUIT, SOLENOID WIRE 93 MAGNET, CHIP COLLECTOR 96 TUBE, AUXILIARY ACCUMULATOR VALVE 97 CLAMP, TUBE 98 NUT, FLANGED HEX 99 SPEED SENSOR, INTERNAL TRANSMISSION 100 BOLT, SPEEDO SENSOR RETAINING 372 SWITCH, TEMPERATURE (SOME MODELS) 374 BOLT, SPECIAL HEX HEAD (M6 X 1 X 16) 375 BOLT, HEX HEAD (M6 X 1 X 35) 376 BOLT, HEX HEAD (M6 X 1 X 45) 377 AUXILIARY ACCUMULATOR VALVE BODY ASSEMBLY 709 SPRING ASSEMBLY, MANUAL DETENT

JH0054-700-R4

7A1-4 700-R4 AUTOMATIC TRANSMISSION

TRANSMISSION DISASSEMBLY 15 2-4 SERVO COVER **General Service Information** Teflon Oil Seal Rings If any seal rings are damaged, cut, or do not rotate freely in their groove be certain to check the ring groove for debris, burrs, or damage. Thrust Washer Surfaces The thrust washer and thrust bearing surfaces may appear to be polished. This is a normal condition and should not be considered damage. Clean J 29714 Thoroughly clean the exterior of the transmission. 15 **Remove or Disconnect** Figure 70 Servo Cover Removal Torque Converter (1) Remove or Disconnect (Figures 70, 71, 72, 73) J 8763-02 **TOOLS REQUIRED:** J-22269-01 Piston Compressor 4th apply piston (16) 1. Servo return spring (31) 2. 3. apply pin spring (20) 4. 2nd apply piston pin (29). 5 Install J-22269-01. 6. Retainer ring (28) JH0055-700R4 7 Figure 69 Holding Fixture (26)Measure (Figure 74) Install or Connect (Figure 69) **TOOLS REOUIRED: Tools Required**: J-33037 Band Apply Pin Tool J-8763-02 Holding Fixture and Base 1 J-8763-02 onto the transmission case. 1. Apply 11 N·m (100 in. lbs.) torque. 2. Holding fixture into the base. 2. 3. length is correct. 4--> Remove or Disconnect 4. Drain the transmission fluid. length. .

2-4 Servo Assembly

Remove or Disconnect (Figures 67, 68, and 70)

TOOLS REQUIRED:

J-29714 Servo Cover Compressor 1. Install J-29714.

- 2.
- Servo cover retaining ring (13) 3. Servo cover and "O" ring seal (14 and 15)
- 2-4 servo assembly (16-31) 4.

Servo Pin Length

As a diagnostic aid, the servo pin length should now be checked. If the pin length is too short or too long be certain to inspect the 2-4 band and reverse input drum for damage or wear when disassembled.

- JH0056-700R4 Servo pin retainer ring (18), washer (19), and
- Cushion spring retainer (27) and cushion spring
- Install J-33037 as shown with apply pin (29).
- If white line "A" appears in gage slot "B" pin
- Use pin selection chart to determine correct pin

Governor and Extension

Remove or Disconnect (Figure 75) --

- 1. Governor cover (46)
 - tap around the cover flange with a punch to remove
 - DO NOT DAMAGE THE GOVERNOR **COVER**
- 2. Governor assembly (45) Mechanical Speedometer:
- 3. Bolt and washer assembly (41) and retainer (40)
- Speedometer driven gear assembly (43), speedo 4. driven gear (44) and o-ring seal (42)
- Internal Transmission Speed Sensor (I.T.S.S.) 3. Speed sensor retaining bolt (100)
- Speed Sensor assembly (99) and o-ring seal (42) 4

- 5. Case extension bolts (37) and case extension (36)
- 6. Extension seal ring (35)

4-4

- 7. Output shaft sleeve (690) and output shaft o-ring seal (691)
 - Not all models use an output shaft sleeve and seal

Remove or Disconnect (Figures 75)

Models with Mechanical Speedometer

- 1. Speedometer drive gear (689) and clip (688)
 - push tab of retaining clip and tap speedometer gear off the output shaft.
 - use care not to damage the speedo gear

Valve Body and Wiring Harness

←→ Remove or Disconnect (Figures 76, 77)

- 1. Screws (74), oil pan (73), and gasket (72).
- 2. Oil filter (71) and filter seal (70).
 - Filter seal may be stuck in the case
- 3. Outside electrical connector (33) and o-ring seal (34).
- 4. Electrical connections from switches.
 - refer to wiring diagrams in the Hydraulic Diagnosis Section for specific model applications
- 5. Solenoid bolts (51) and solenoid assembly (50) with o-ring seal (49) and wiring harness.
- 6. Accumulator cover bolts (63) and 1-2 accumulator cover and pin assembly (62).
- 7. 1-2 accumulator piston (61) and seal (60).
- 8. Spring (59).

←→ Remove or Disconnect (Figures 78, 79, 80 and 81)

- 1. Bolt (75) and manual detent spring assembly (709).
- 2. Electrical wire clips (66) and tube clamps (97).
- 3. Auxiliary valve tube (96).
- 4. Wiring harness retaining washer (A) and the filter retainer clips (87).
- 5. Bolts (69) and T.V. lever and bracket assembly (65)
- 6. T.V. link (64)

←→ Remove or Disconnect (Figures 78, 80, 81 and 82)

- 1. Remaining valve body bolts (69)
- 2. Manual valve link (705)
- 3. Control valve assembly (67)
- 4. Bolts (374-376), auxiliary valve body (377), and check ball (55)
- 5. Spacer plate (56) and spacer plate gaskets (88 and 89)
- 6. Check balls (55 and 91) spring (54), piston (52), seal (53) and pin
 - Three checkballs are located under the valve body, one in the auxiliary valve body and four are located in the case. The large copper flash colored ball is #10 check ball (91)

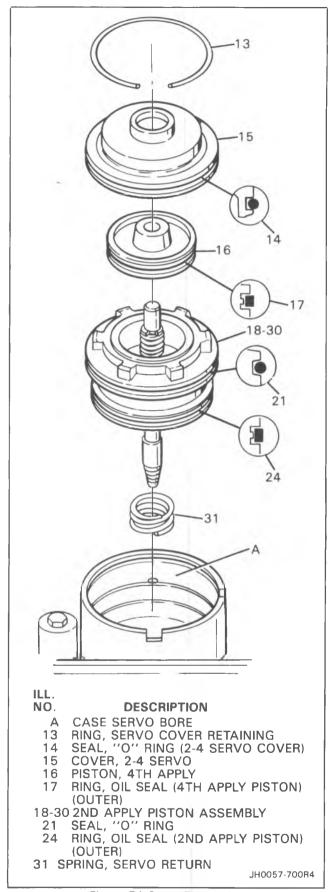


Figure 71 Servo Removal

7A1-6 700-R4 AUTOMATIC TRANSMISSION


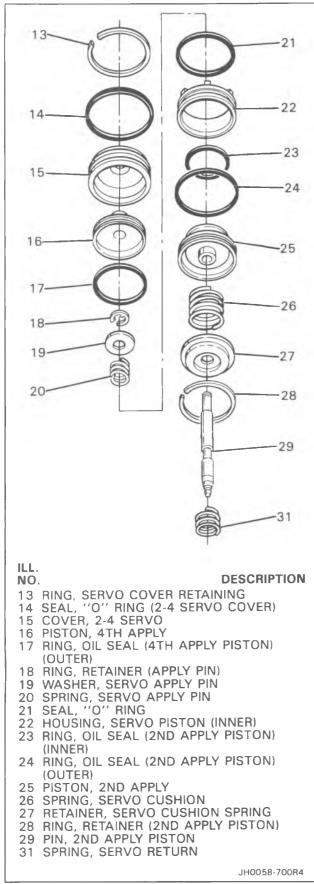


Figure 72 Servo Assembly

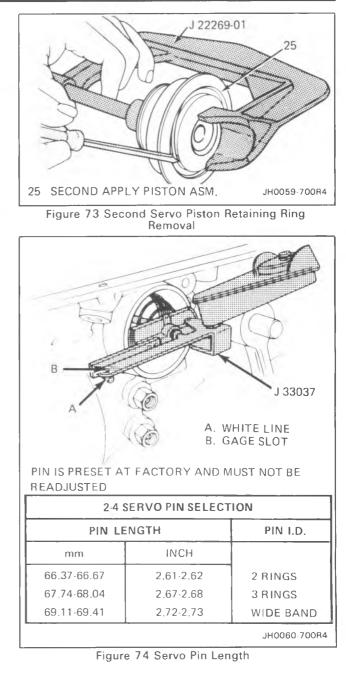


Transmission End Play Check

As a diagnostic aid transmission end play should be checked prior to removing the internal parts. If the end play is not within specifications you should watch for possible worn or misassembled parts during disassembly.

Tighten (Figures 84 and 85)

TOOLS REQUIRED: J-24773-A Oil Pump Remover J-25022-A End Play Adaptor (245 mm) J-34725 End Play Adaptor (298 mm) J-25025-7A Post **Dial Indicator**

1. Remove an oil pump bolt (5) and install a 278 mm (11 in.) bolt and locknut or J-25025-7A.

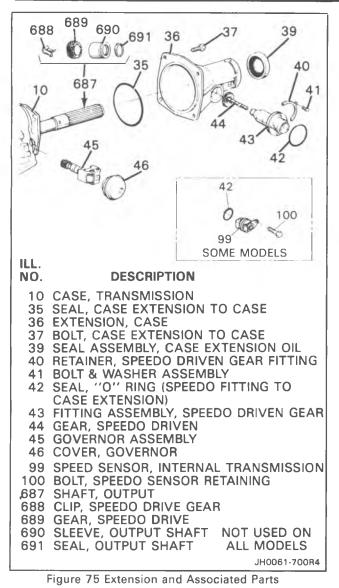

- 2. Install J-25022-A or J-34725 as shown.
- 3. Install J-24773-A as shown.
- 4. Install dial indicator.
 - set to zero
 - pull up on J-24773-A
 - end play should be 0.13/0.92 mm (.005/. 036 in.).


Oil Pump Assembly

Remove or Disconnect (Figures 88 and 89)

TOOLS REQUIRED:

J-24773-A Oil Pump Remover


- 1. "O" ring seal (618)
- 2. All oil pump bolts (5) and washers (6)
- 3. Oil pump assembly (7) with J-24773-A
- 4. Oil pump to case seal (8) and gasket (9)
- 5. Reverse input clutch to oil pump thrust washer (601)

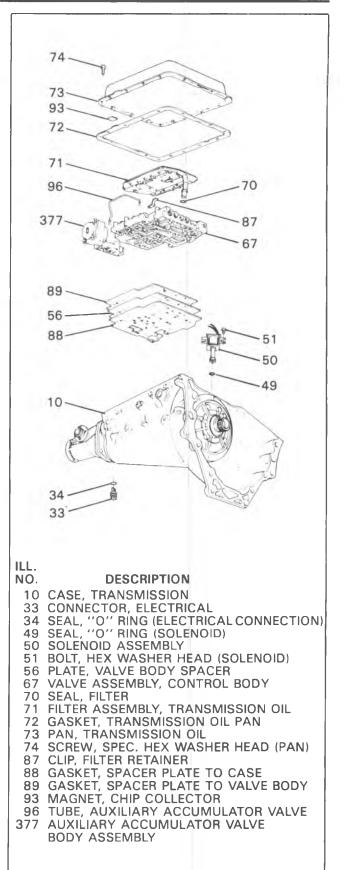

JH0062-700R4

Figure 76 Case and Attaching Parts

7A1-8 700-R4 AUTOMATIC TRANSMISSION

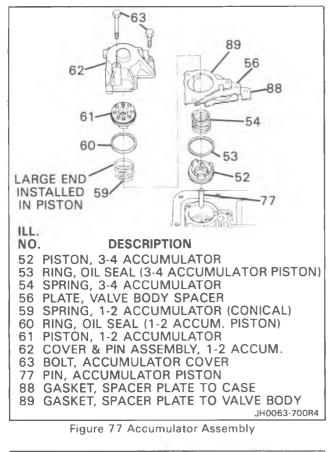

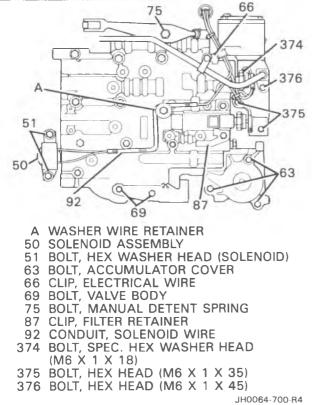


Figure 78 Valve Body Bolt Locations

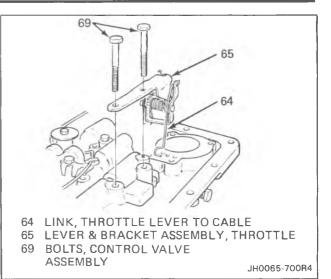


Figure 79 T.V. Lever and Bracket

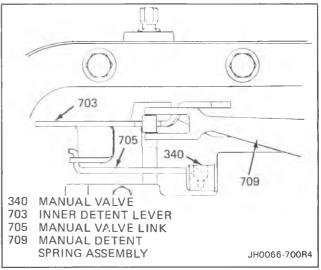


Figure 80 Manual Valve Link

2-4 Band Reverse Input Clutch, Input Clutch and Input Gear Set (Figures 88, 89 and 90)

- 1. Reverse input clutch (605) and input clutch (62) together
 - (grasp the turbine shaft and lift)
- 2. Band assembly pin (48)
- 3. The 2-4 band assembly (602)
- 4. Input sun gear (658)

→← Install or Connect (Figure 91)

- TOOLS REQUIRED:
- J-29837 Output Shaft Support Fixture
- J-29837 as shown

Important

• Output shaft (687) may fall free when input carrier retaining ring (661) is removed if J-29837 is not used.

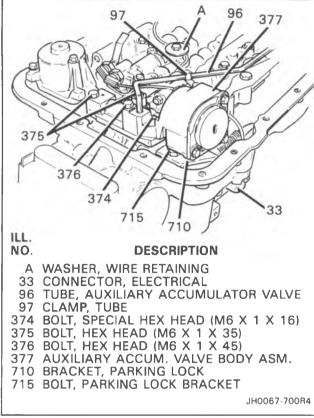


Figure 81 Removing Auxiliary Valve Body Assembly

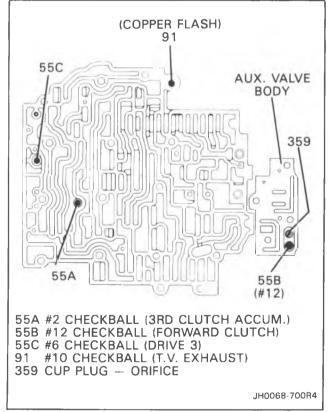


Figure 82 Valve Body Checkballs

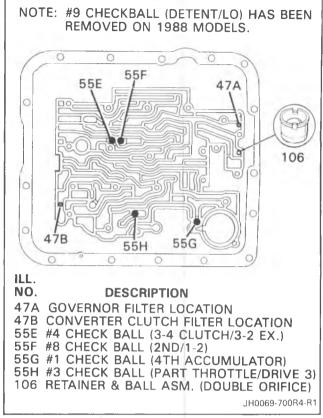


Figure 83 Case Checkballs and Filters

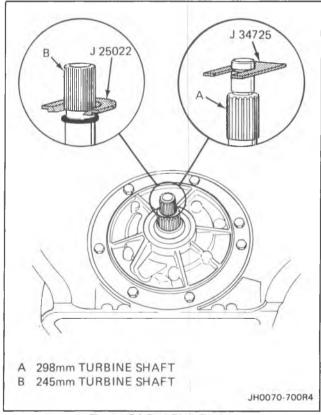


Figure 84 End Play Tool

7A1-10 700-R4 AUTOMATIC TRANSMISSION

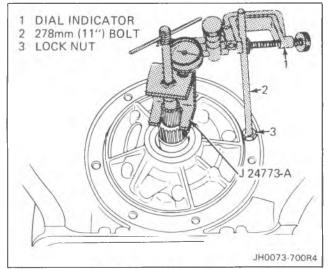


Figure 85 End Play Check

Remove or Disconnect (Figures 86, 87 and 90) 4-4 TOOLS REQUIRED:

J-34627 Snap Ring Pliers

- Input carrier to output shaft retaining ring (661) 1. with J-34627. Do not overexpand the ring.
- Input carrier assembly (662) 2.
- 3. J-29837 and output shaft (687)

9 Important

- The manufacturer assembles the output shaft and reaction internal gear with adhesive for ease of assembly. If these parts have not become separated during use, the output shaft will come out later along with the reaction internal gear.
- 4. Thrust bearing assembly (663)

Reaction Gear Set

←→ Remove or Disconnect (Figures 86, 87, 92)

- 1. Input internal gear (664) and reaction carrier (666)
- Reaction sun shell (670) and thrust washer (669) 2.
- 3. Reaction sun shell to inner race thrust washer (674)
- 4. Lo and reverse support to case retainer ring (676)
- 5. Lo and reverse clutch support retainer spring (680)
- 6. Reaction sun gear (673)
- 7 Lo and reverse inner race (675), roller assembly (678), support assembly (679), and reaction carrier assembly (681)
- 8. Lo and reverse clutch plates (682)
- 9 Reaction internal gear (684) and thrust bearing assembly (683)
- 10. Reaction gear support to case bearing (692)

Lo and Reverse Clutch Parts

Remove or Disconnect (Figures 92, 93 and 94) **|←→**Ì TOOLS REQUIRED:

J-23327 Clutch Spring Compressor

Bolts (715) and parking lock bracket (710) 1.

9 Important

- Due to interference, the parking pawl may have to be removed before removing or installing the low and reverse piston.
- Parking pawl shaft plug (713) with a #4 screw 2. extractor
- 3. Parking pawl pivot shaft (712) with a magnet
- Parking pawl (711) and return spring (714) 4.
- Install tool J-23327. 5.
- 6. Lo and reverse clutch retainer ring (693)
- Lo and reverse clutch spring assembly (694) 7.
- Lo and reverse clutch piston (695) 8.
 - by application of air pressure in the case apply passage


COMPONENT REPAIR AND TRANSMISSION REASSEMBLY

Inner Manual Linkage

←→ Remove or Disconnect (Figure 94)

- 1. Inside manual shaft nut (702)
- 2. Manual shaft (707) and manual shaft retainer (706)
- Parking lock actuator assembly (701) and inside 3. detent lever (703)

Manual Shaft Seal Replacement

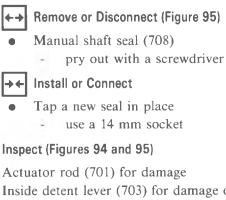

- Inside detent lever (703) for damage or cracks
- Manual shaft (707) for damage or burrs
- Manual detent spring assemby (709) for roller freeness or damage

Install or Connect (Figure 94) ++

- Parking lock actuator (701) onto inside detent lever (703)
- Manual shaft (707) into case (10) and inside detent lever (703)
- Inside manual shaft nut (702) onto manual shaft (707)

torque to 31 N·m (23 ft. lbs.)

Manual shaft retainer (706) onto manual shaft (707)

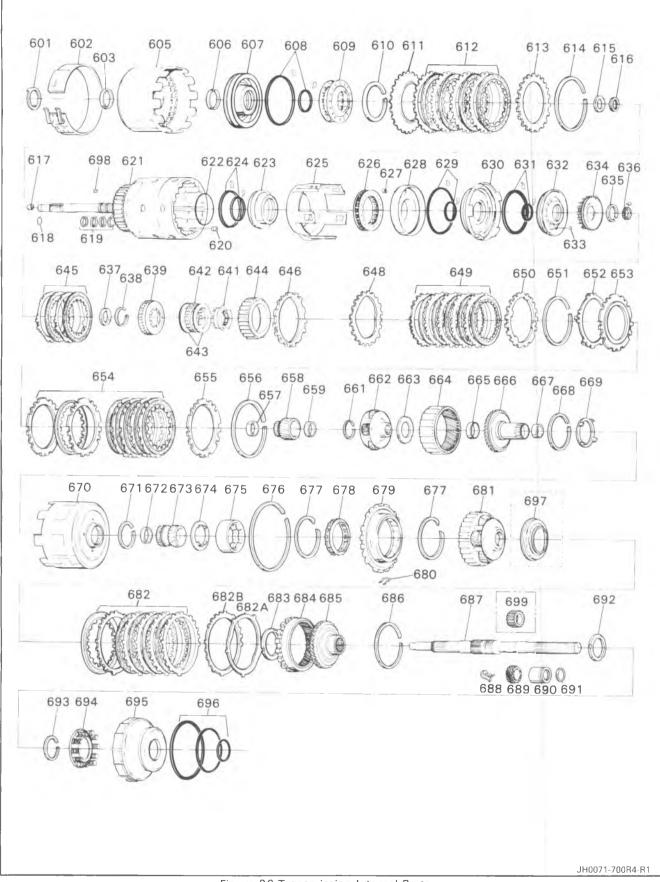


Figure 86 Transmission Internal Parts


7A1-12 700-R4 AUTOMATIC TRANSMISSION

ILL. NO.	DESCRIPTION	ILL. NO.	_
601 602 603	WASHER, THRUST (PUMP TO DRUM) BAND ASSEMBLY, 2-4 BUSHING, REVERSE INPUT CL. (FRONT)	656 657	RII PL BL
	HOUSING & DRUM ASSEMBLY, REVERSE INPUT CLUTCH	658 659	GE BL
606 607 608	BUSHING, REVERSE INPUT CLUTCH (REAR) PISTON ASM., REVERSE INPUT CLUTCH SEALS, REVERSE INPUT CLUTCH (INNER & OUTER)	661 662 663	RE CA BE CA
609 610	SPRING ASM., REVERSE INPUT CLUTCH RING, REVERSE INPUT CLUTCH SPRING RETAINER	664 665	GE BL (Fl
	PLATE, REVERSE INPUT CLUTCH (BELLEVILLE)	666 667	SF
	PLATE ASM., REVERSE INPUT CLUTCH PLATE, REVERSE INPUT CLUTCH BACKING (SELECTIVE)	668	(R RI RE
	RING, REVERSE INPUT CL. RETAINING BEARING ASSEMBLY, STATOR SHAFT/	669	W. SH
617	SELECTIVE WASHER WASHER, THRUST (SELECTIVE) RETAINER & BALL ASM., CHECK VALVE SEAL, ''O'' RING (TURBINE SHAFT/	670 671 672 673	SH RI BL GE
620 621	SELECTIVE WASHER) RING, OIL SEAL (SOLID) RETAINER & CHECK BALL ASSEMBLY HOUSING & SHAFT ASSEMBLY, INPUT	674 675 676	W R/ RI RE
623	SEAL, "O" RING INPUT TO FORWARD HSG. PISTON, 3RD & 4TH CLUTCH	677 678	RI
625	SEAL, 3RD & 4TH CL. (INNER & OUTER) RING, 3RD & 4TH CLUTCH APPLY SPRING ASSEMBLY, 3RD & 4TH CLUTCH RETAINER & BALL ASSEMBLY, FORWARD	679 680	CI SI SF CI
628 629 630 631	CLUTCH HOUSING HOUSING, FORWARD CLUTCH SEAL, FORWARD CLUTCH (INNER & OUTER) PISTON, FORWARD CLUTCH SEAL, OVERRUN CLUTCH (INNER & OUTER)	681 682 682A 682B 683	C/ PL PL PL BE
633 634	PISTON, OVERRUN CLUTCH BALL, OVERRUN CLUTCH SPRING ASSEMBLY, OVERRUN CLUTCH SNAP RING, OVERRUN CLUTCH SPRING RETAINER	684 685 686 687	C/ GI SU RI SH
637 638 639 641 642 643 644	SEAL, INPUT HOUSING TO OUTPUT SHAFT BEARING ASSEMBLY, INPUT SUN GEAR SNAP RING, OVERRUN CL. HUB RETAINING HUB, OVERRUN CLUTCH RETAINER & RACE ASSEMBLY, SPRAG FORWARD SPRAG ASSEMBLY RETAINER RINGS, SPRAG ASSEMBLY RACE, FORWARD CLUTCH (OUTER) PLATE ASSEMBLY, OVERRUN CLUTCH	688 689 690 691 692 693 694 695 696	CI GI SI SI BF RI SI SI
646 648	PLATE, FORWARD CLUTCH APPLY PLATE, FORWARD CLUTCH (WAVED)	697	CI
	PLATE ASSEMBLY, FORWARD CLUTCH PLATE, FORWARD CLUTCH BACKING (SEL.) RING, FORWARD CLUTCH BACKING PLATE	698 699	M Pl R(
652 653	RETAINER PLATE, 3RD & 4TH CLUTCH RING RETAINER PLATE, 3RD & 4TH CLUTCH APPLY		SI
	(STEPPED) PLATE ASSEMBLY, 3RD & 4TH CLUTCH PLATE, 3RD & 4TH CLUTCH BACKING (SEL.)		

NO. DESCRIPTION

- 656 RING, 3RD & 4TH CLUTCH BACKING PLATE RETAINER
- 657 BUSHING, INPUT SUN GEAR (FRONT)
- 658 GEAR, INPUT SUN
- 659 BUSHING, INPUT SUN GEAR (REAR)
- 661 RET., OUTPUT SHAFT TO INPUT CARRIER
- 662 CARRIER ASSEMBLY, INPUT (COMPLETE)
- 663 BEARING ASSEMBLY, THRUST (INPUT CARRIER TO REACTION SHAFT)
- 664 GEAR, INPUT INTERNAL
- 665 BUSHING, REACTION CARRIER SHAFT (FRONT)
 666 SHAFT, REACTION CARRIER
- 667 BUSHING, REACTION CARRIER SHAFT
- (REAR) 668 RING, REACTION SHAFT/INTERNAL GEAR
- RETAINER 669 WASHER, THRUST (REACTION SHAFT/ SHELL)
- 670 SHELL, REACTION SUN
- 671 RING, REACTION SUN GEAR RETAINER
- 572 BUSHING, REACTION SUN
- 673 GEAR, REACTION SUN
- 674 WASHER, THRUST (RACE/REACTION SHELL)
- 675 RACE, LO & REVERSE ROLLER CLUTCH
- 676 RING, LO & REVERSE SUPPORT TO CASE RETAINER
- 677 RING, LO & REVERSE RETAINER (ROLLER ASSEMBLY/CAM)
- 678 CLUTCH ASSEMBLY, LO & REVERSE ROLLER
- 679 SUPPORT ASM., LO & REVERSE CLUTCH
- 580 SPRING, TRANSMISSION (LO & REVERSE CLUTCH SUPPORT RETAINER)
- 681 CARRIER ASSEMBLY, REACTION
- 682 PLATE ASSEMBLY, LO & REVERSE CLUTCH
- 682A PLATE, LO & REVERSE CLUTCH (WAVED)
- 682B PLATE, SPACER LO & REV. CL. (SELECTIVE)
- 683 BEARING ASSEMBLY, THRUST (REACTION CARRIER/SUPPORT)
- 684 GEAR, INTERNAL REACTION
- 685 SUPPORT, INTERNAL REACTION GEAR
- 686 RING, REACTION GEAR/SUPPORT RETAINER
- 687 SHAFT, OUTPUT
- 688 CLIP, SPEEDO DRIVE GEAR
- 689 GEAR, SPEEDO DRIVE
- 690 SLEEVE, OUTPUT SHAFT
- 691 SEAL, OUTPUT SHAFT
- 692 BRG., REACTION GEAR SUPPORT TO CASE
- 693 RING, LO & REVERSE CLUTCH RETAINER
- 694 SPRING ASSEMBLY, LO & REVERSE CLUTCH
- 695 PISTON, LO & REVERSE CLUTCH
- 696 SEAL, TRANSMISSION (LO & REVERSE CLUTCH --- OUTER, CENTER, INNER)
- 697 DEFLECTOR, OIL (HIGH OUTPUT MODELS ONLY)
- 698 PLUG, ORIFICED CUP
- 699 ROTOR, INTERNAL TRANSMISSION SPEED SENSOR

JH0072-700R4-R1

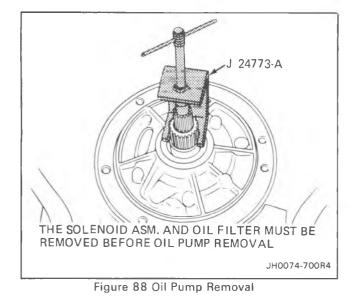

Case

Inspect (Figures 96, 97 and 98)

- Case (10) exterior for cracks or porosity
- Case to valve body face for damage, interconnected oil passages and flatness
 - the face flatness can be checked by inspecting the spacer plate to case gasket for proper land impressions.
- Vent assembly (11) for damage
- Air check all oil passages.
 - see diagnosis section for oil passage identification.
- 2-4 servo bore for
 - damage, porosity, or burrs
 - any sharp edges (i.e. oil passages, slots for retaining ring removal remove if found)
- Orifice cup plug (86) in servo bore for debris or damage
- Third accumulator bore for
 - porosity, damage, or burrs
 - pin damage (77)
 - orifice cup plug (81) damaged or plugged
- Speedometer bore
 - damaged
 - sharp edges
 - porosity
- All bolt holes for thread damage - Heli-coil to repair
 - Cooler connectors (12) for
 - damage
 - proper torque 38 N⋅m (28 ft. lbs.)
- Case interior for
 - damaged ring grooves or casting flash
 - clutch plate lugs worn or damaged
 - bushing (76) scored, worn, or damaged (see Bushing Replacement)
 - governor support pin installation depth. (Incorrect installation depth will cause governor driven gear damage and shift problems.)

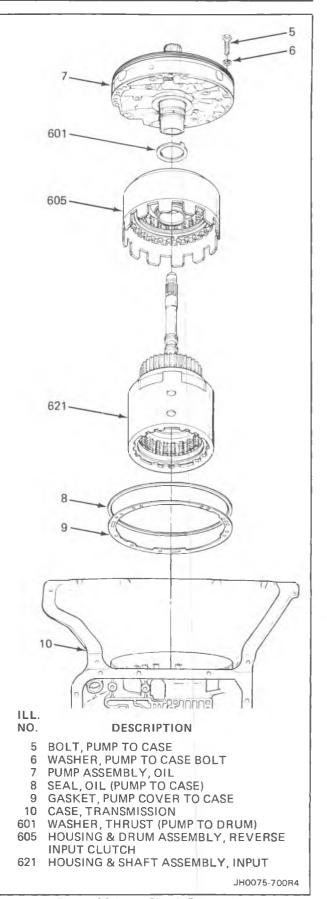
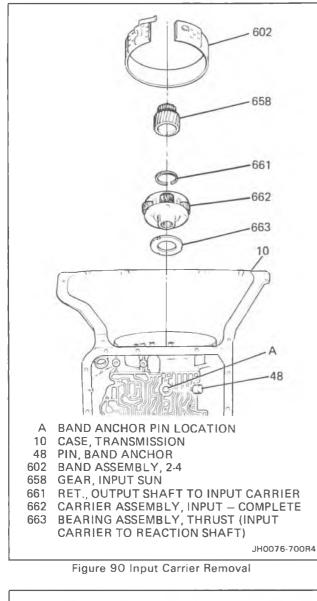
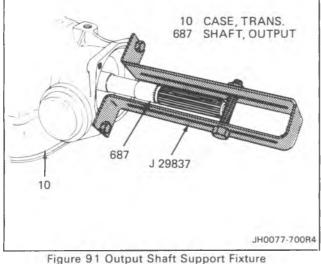


Figure 89 Input Clutch Removal

7A1-14 700-R4 AUTOMATIC TRANSMISSION






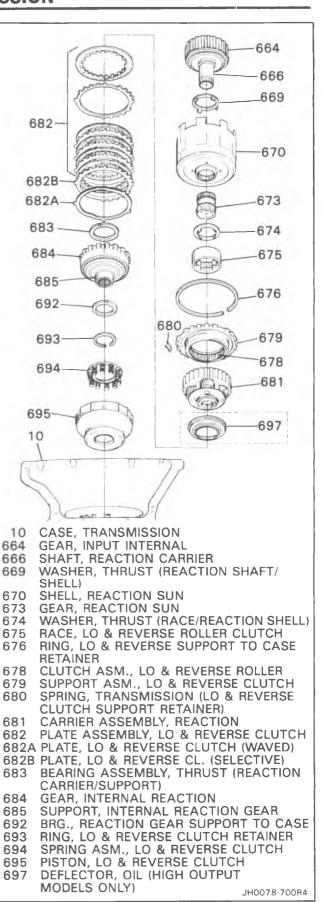


Figure 92 Reaction Gear Set Removal



Third Accumulator Retainer and Ball Assembly (80) (Figure 99)

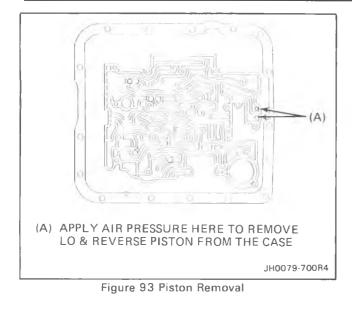

9

- Ball
 - missing
 - sticking or leaking
- Retainer
 - missing -
 - loose -
 - not seated correctly
 - feed slots restricted

Retainer and Ball Assembly Leak Check Procedure

Important (Figure 99)

- 1. Install the servo assembly into the servo bore.
- 2. Install the servo cover and retainer.
- 3. Pour a suitable solvent into the accumulator bore.
- 4, Watch for leakage inside the case.
- If leakage is observed, replace the third 5. accumulator retainer and ball assembly.

Replacement Procedure - Third Accumulator Retainer and Ball Assembly

Remove or Disconnect (Figure 99 and 100) **←→**

TOOLS REOUIRED:


- 6.3 mm (#4) Screw Extractor
- Third accumulator retainer and ball . assembly (80)

use 6.3 (#4) screw extractor

→← Install or Connect (Figure 99 and 100)

TOOLS REQUIRED:

9.5 mm (3/8 in.) Diameter Metal Rod

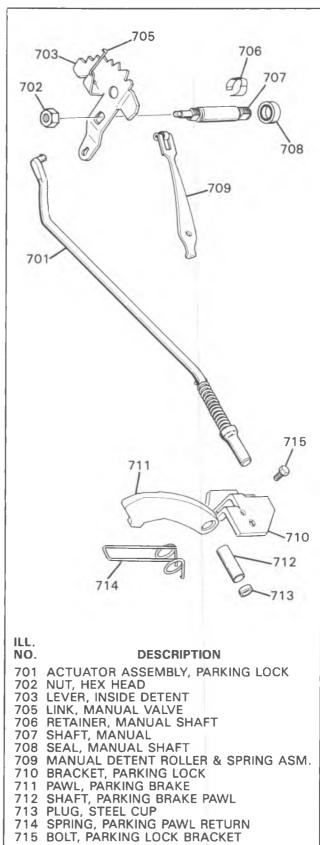

JH0080-700R4

Figure 94 Parking Linkage

7A1-16 700-R4 AUTOMATIC TRANSMISSION

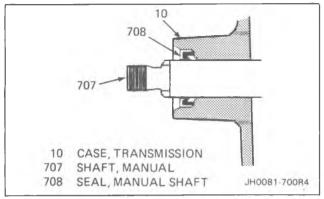


Figure 95 Manual Shaft Seal

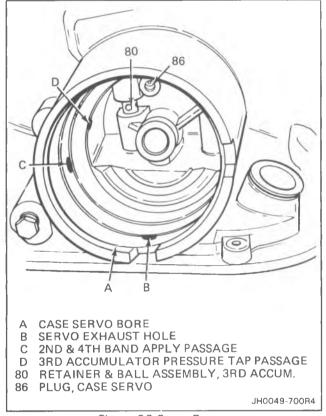


Figure 96 Servo Bore

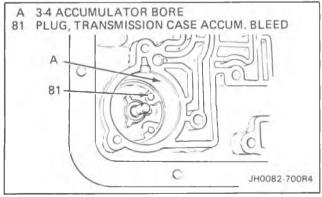
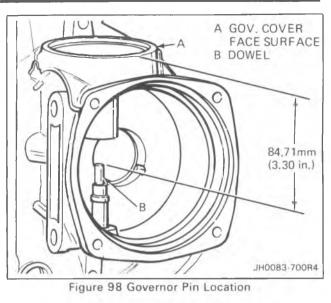


Figure 97 Third Accumulator Bore




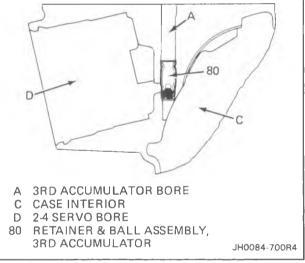


Figure 99 Leak Check - 3rd Accumulator



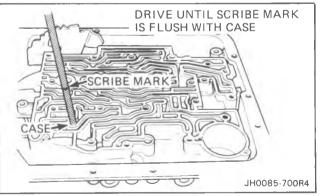

- A new third accumulator retainer and ball assembly
 - oil feed slots in the retainer must line up with oil passage in the servo bore. To be certain of correct installation depth, scribe a mark at 42.0 mm (1.

653 in.) on the 9.5 mm (3/8'') diameter metal rod. Use it to seat the third accumulator and ball assembly as shown. When the scribed line is flush with the case face, installation depth is correct.

7A1-18 700-R4 AUTOMATIC TRANSMISSION

Case Assembly



10

**

- Thoroughly with solvent
- Air dry
 - do not wipe with cloth.

Lo and Reverse Clutch Assembly

Inspect (Figure 101)

- Lo and reverse piston (695) for
 - porosity or damage
 - ring groove damage
- Piston seals (696) for nicks or cuts
- Spring assembly (694) for damage
- Retainer ring (693) overstressed

Install or Connect (Figure 101)

TOOLS REQUIRED:

J-23327 Clutch Spring Compressor

- 1. Piston seals (696) onto the piston (695)
 - lubricate with transmission fluid
- Piston (695) into the case 2
 - index the piston with the notch in the bottom of the case.
- 3. Spring assembly (694) onto the piston flat side of the retainer upward
- J-23327 over the spring assembly 4
 - compress the spring assembly past the ring groove in the case hub.
- Retainer ring (693) into the case hub ring groove 5.

Parking Pawl

Inspect (Figure 102)

- Parking pawl (711) for cracks, burrs, or damage
- Parking pawl return spring (714) for distortion or damage
- Parking pawl pivot shaft (712) for damage and freeness of fit with the parking pawl

Install or Connect (Figure 102) ++

- Parking pawl (711) and parking pawl return 1. spring (714) into the case
- Parking pawl pivot shaft (712) into the parking 2. pawl (711) and the case


CHECK FOR PROPER OPERATION

- Retaining plug (713) into the case 3.
 - coat the plug with loc-tite sealant or equivalent and install it with a hammer and punch.


Reaction Internal Gear and Carrier Assembly

Inspect (Figures 103, 104, 105) 6

- Reaction internal gear (683) and support (684) for
 - proper assembly

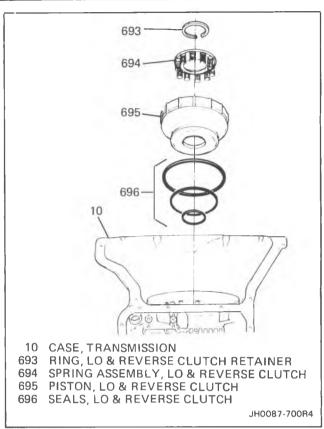



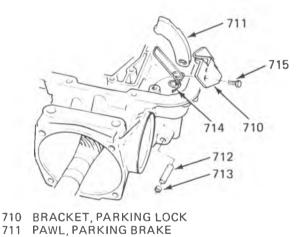

- SHAFT, PARKING BRAKE PAWL 712
- 713 PLUG, STEEL CUP
- SPRING, PARKING PAWL RETURN 714
- 715 BOLT, PARKING LOCK BRACKET

JH0088-700R4

Figure 102 Parking Pawl Installation

- stripped splines
- cracks
- teeth or lug damage
- Thrust bearing assemblies (683 and 692) for damage
- Lo and reverse clutch plates (682)
 - Composition for wear, heat damage, or delamination

- Steel for heat damage or surface finish damage
- Reaction carrier assembly (681) for
 - pinion gear damage
 - excessive pinion washer wear (end play .20-. 61 mm/.008-.024 in.)
 - proper pinion staking
 - keystoned pinion gears (pinions must turn free)
 - damaged or worn thrust bearing To check the captive thrust bearing in the carrier for wear, place a bushing or an output shaft sleeve on the bearing race (do not contact the pinion gears) and turn it with the palm of your hand. Any imperfections will be felt through the bushing.

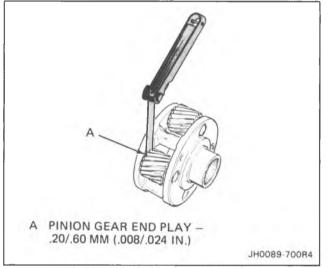


Figure 103 Pinion End Play Check

Reaction Internal Gear and Support

1.

Install or Connect (Figures 106)

- Reaction gear support to case bearing (692) onto the case hub as shown
 - Outside bearing race goes toward case hub.
 - retain with petrolatum.
- Reaction internal gear and support (684 and 685) 2. onto the bearing as shown
- 3. Reaction carrier to support thrust bearing assembly (683) onto the support (685)
- outer bearing race goes toward the support
- 4. Reaction carrier (681) onto the thrust bearing

Lo and Reverse Clutch

Measure (Figure 107 and 108)

TOOLS REQUIRED

- Scale and straight edge
- 1. To Measure for proper selection backing plate. stack the lo and reverse assembly on a flat surface in the following order:
 - 1 waved plate (682B)

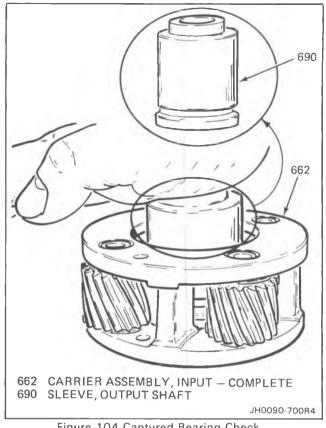


Figure 104 Captured Bearing Check

- 5 fiber and 4 steal plates (682), starting with one fiber plate and alternating with a steal plate.
- Lo and Reverse Clutch Support (679)
- Apply an evenly distributed load to the top of the 2. Lo and Reverse Support Assembly (679) Light pressure (5 lbs.) on the Lo and Reverse Support Assembly (679) will provide the correct dimension for measurement.


CAUTION: EXCESSIVE PRESSURE WILL START TO FLATTEN THE WAVE PLATE RESULTING IN AN **INACCURATE MEASUREMENT**

- Measure the height of the clutch pack from the 3 work surface to the top of the Lo and Reverse Clutch Support (Dimension D)
- Use dimension D to select the proper thickness of 4. the selective spacer plate for assembly.
- 5. Install the proper selective spacer plate between the wave plate and the first fiber clutch plate with the identification side up.
- 6. The overall height for dimension D with the selective spacer plate included should be 30.515 mm - 31.401 mm (1.20" - 1.24).

++ Install or Connect (Figures 107, 108, 109 and 110)

- 5. Lo and reverse clutch plates (682) into case lugs
 - start with a steel plate and alternate with composition.
 - index with the splines of the reaction carrier and the case as shown.

7A1-20 700-R4 AUTOMATIC TRANSMISSION

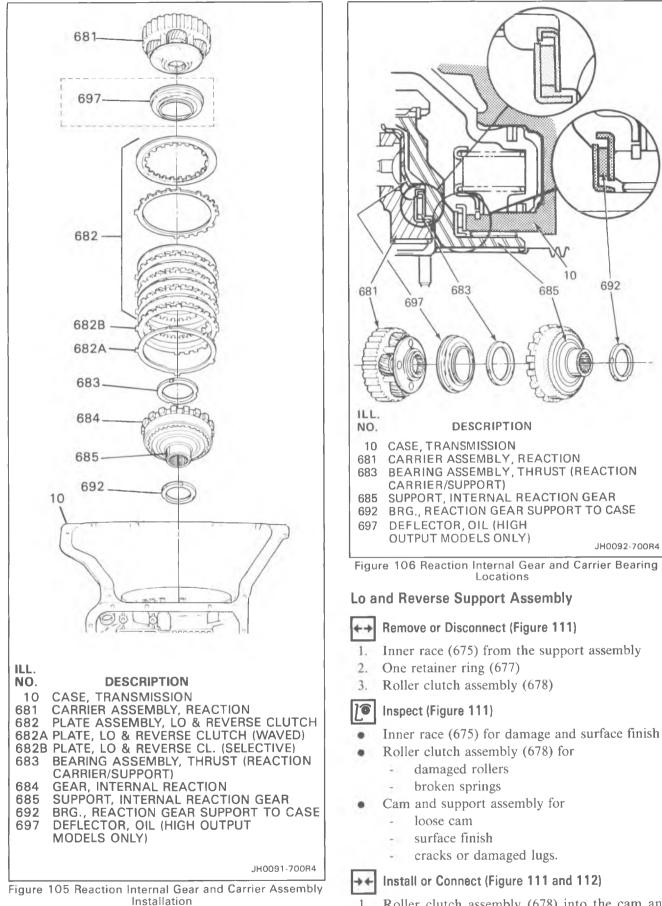

1. Roller clutch assembly (678) into the cam and support assembly (679)

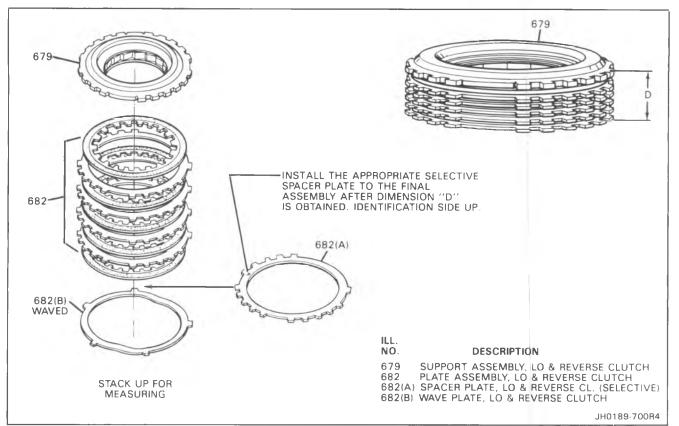


Figure 107 Measuring For Back Plate Selection

IF GAGE DIME	NSIONS 'D' IS	USE	THIS SELECTIVE PL	.ATE
FROM	то	IDENTIFICATION	PLATE TH	IICKNESS
29.559mm (1.164")	28.844mm (1.136″)	NONE	1.671mm (.066″)	1.842mm (.073″)
28.844mm (1.136″)	28.129mm (1.107")	4	2.386mm (.094")	2.557mm (.101″)
28.129mm (1.107")	27.414mm (1.079″)	5	3.101mm (.122″)	3.272mm (.129″) JH0190-7

Figure 108 Lo and Reverse Backing Plate Selection Chart

- 2. Support and roller assembly into the case with the hub down
- 3. Inner race (675) into the roller assembly
- 4. Turn inner race (675) while inserting
 - push down for full engagement.
 - bottom tangs will be flush with carrier hub when properly installed.
 - check for proper operation by rotating the inner race as shown in Figure 111.
- 5. Support retainer spring (680) into the case
 - insert between the case lug and the one open notch in the support.

Reaction Sun Gear and Shell



- Inspect (Figure 114)
- Reaction Sun Gear (673) for
 - nicked, scored, or worn bushing. (See Bushing Replacement).
 - damaged spline or teeth
 - loose or weak retaining ring (do not remove this ring, except to replace it.)
- Reaction sun shell (670) for
 - stripped or worn splines

LO & REVE	RSE CLU	ТСН
	QTY.	THICKNESS
PLATE-FLAT STEEL	4	1.77mm (.069″)
PLATE-COMP. FACED	5	2.25mm (.088″)
PLATE-SELECTIVE	1	SEE FIG. 108
PLATE-WAVED	1	2.43mm (.096")
		JH0094-700R4

7A1-22 700-R4 AUTOMATIC TRANSMISSION

Figure 109 Lo and Reverse Clutch Plate Chart

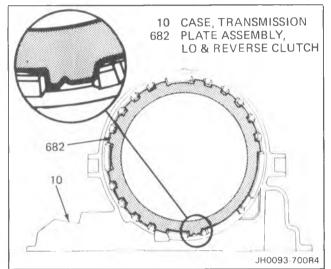


Figure 110 Lo and Reverse Clutch Plates Properly Installed


- broken hub
- bent tangs

++

- Lo and reverse inner race to reaction sun gear shell thrust washer (674) for wear or damage
- Reaction shaft to reaction sun gear shell thrust washer (669) for wear or damage (bronze thrust washer).

Install or Connect (Figure 114 and 115)

- 1. Reaction sun gear retainer ring (671) onto the reaction sun gear, if previously removed.
- 2. Reaction sun gear (673) into the reaction carrier
 - index the teeth with the pinion gears.
- 3. Thrust washer (674) onto the lo and reverse support inner race
 - index the four locating ears into the inner race.
- 4. Reaction gear shell (670) onto the reaction sun gear
- 5. (Bronze) thrust washer (669) onto the reaction sun shell
 - index tangs into the shell.

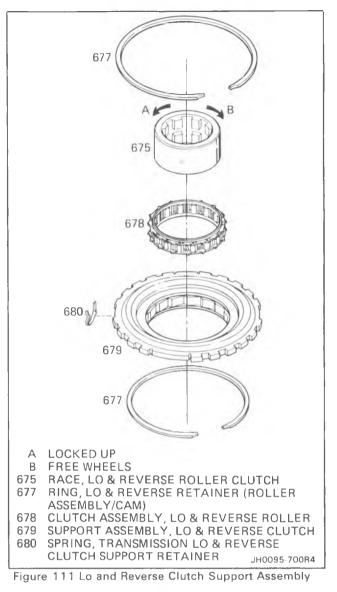

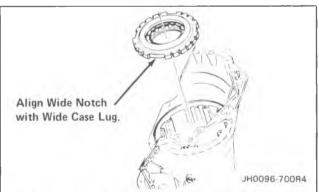


Figure 112 Lo and Reverse Support and Roller Asm. Installation

Input Internal Gear and Output Shaft



- Remove or Disconnect (Figure 116)
- 1. Retainer ring (668) from input internal gear (664)
- 2. Reaction carrier shaft (666) from the input internal gear


678 680 679 10 10 CASE, TRANSMISSION CLUTCH ASSEMBLY, LO & REVERSE ROLLER 678 679 SUPPORT ASSEMBLY, LO & REVERSE CLUTCH 680 SPRING, TRANSMISSION LO & REVERSE **CLUTCH SUPPORT RETAINER** JH0097-700R4 Figure 113 Support Spring - Installed 669 670 671 673 674 675 676 10 100 B 10 CASE, TRANSMISSION 669 WASHER, THRUST (REACTION SHAFT/SHELL) 670 SHELL, REACTION SUN 671 RING, REACTION SUN GEAR RETAINER 673 GEAR, REACTION SUN 674 WASHER, THRUST (RACE/REACTION SHELL) 675 RACE, LO & REVERSE ROLLER CLUTCH 676 RING, LO & REVERSE SUPPORT TO CASE RETAINER JH0098-700R4

Figure 114 Sun Gear and Shell Installation

Inspect (Figures 115, 116, and 118)

• Reaction Carrier Shaft (666) for

700-R4 AUTOMATIC TRANSMISSION 7A1-23

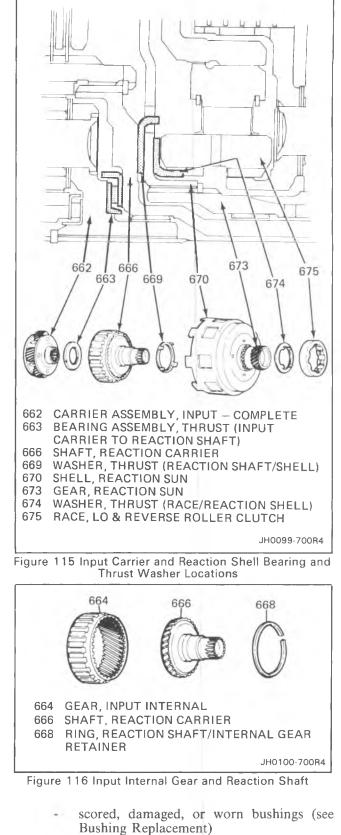

- cracked shaft
- damaged spline or gear teeth
- under cut around the shaft from interference with the sun gear
- Input internal gear (664) for

7A1-24 700-R4 AUTOMATIC TRANSMISSION

- cracks
- damaged spline or gear teeth
- Input carrier to reaction shaft thrust bearing (663) for wear or damage
- Ouput shaft (687)
 - = plugged or restrictred lube passages
 - damaged splines or ring groove
 - damaged governor drive gear teeth
 - burrs or damage to the front of the shaft at seal area. (Polish with crocus cloth if necessary)
 - burrs or damage to bearing journals
 - damaged teeth on speed sensor rotor

Internal Transmission Speed Sensor Rotor REMOVE ONLY IF DAMAGED

TOOLS REQUIRED:

J-21427-01 speedometer gear puller adapter J-8433 speedometer gear puller

J-36352 speedometer gear installater & "C" washer

Mechanical press

- 1. Install J-21427 with J-8433 and remove rotor.
- 2. Place new rotor over output shaft.
- 3. Place J-36352-1 in groove on output shaft. **DO NOT REUSE ROTOR**
- 4. Place J-36352-2 on shaft and press to make contact with J-36352-1.

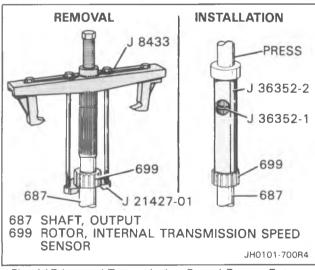


Fig. 117 Internal Transmission Speed Sensor Rotor

++ Install or Connect (Figures 116 and 118)

- 1. Reaction shaft (666) into the input internal gear (664)
- 2. Retainer ring (668) into the input internal gear
- 3. Input internal gear and shaft assembly into the sun gear shell
 - index the shaft spline into the reaction carrier.
- 4. Thrust Bearing (663) onto the reaction carrier shaft.

- outer race goes toward the reaction carrier shaft.
- 5. Output shaft (687) into the transmission index the splines with the mating parts.
- 6. J-29837 onto the case
 - position upwards as far as possible to support the output shaft.

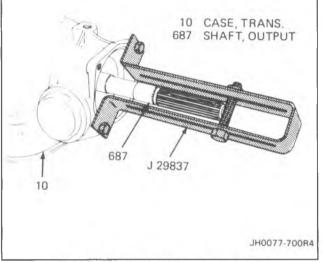


Figure 118 Output Shaft - Installation

Input Carrier and Sun Gear



- Input carrier assembly (662) for
 - pinion gear damage
 - excessive pinion washer wear (end play .20-. 61 mm/.008-.024 in.)
 - proper pin stake
 - keystoned pinion gears (pinion gears must rotate freely)
 - damaged or worn thrust bearing
- Input sun gear (658) for
 - bushing damage or wear (see Bushing Replacement Procedure).
 - cracks
 - damaged spline or gear teeth

Install or Connect (Figure 119)

TOOLS REQUIRED:

J-34627 Snap Ring Pliers

- 1. Input carrier assembly (662) onto the output shaft
- 2. Retainer ring (661) into the output shaft ring groove
 - Do not reuse the old retainer ring if it has been overexpanded.
 - Use care not to overexpand the ring during installation.
- 3. Remove J-29837.
- 4. Input sun gear (658) into the input carrier
 - index the sun gear teeth into the pinion gear teeth.

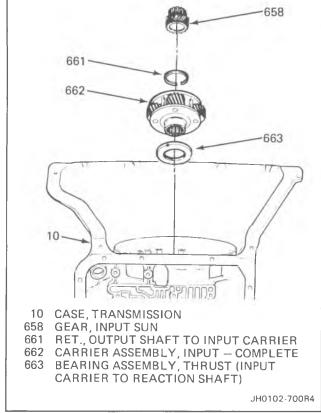


Figure 119 Input Carrier and Sun Gear - Installation

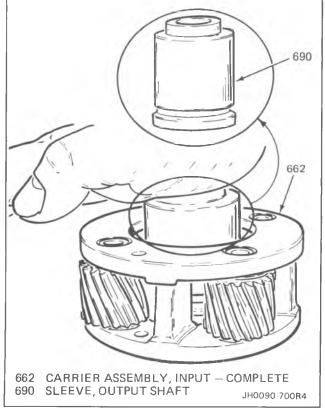


Figure 120 Checking Captured Thrust Bearing

Input Clutch Assembly

←→ Remove or Disconnect (Figure 121)

- Reverse input clutch assembly (605) from the input clutch assembly (621)
- Oil pump to selective washer thrust bearing (615)
- Selective washer (616)

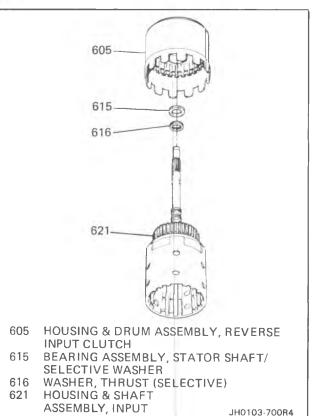


Figure 121 Reverse Input and Input Clutches

◆ Disassemble (Figures 123 and 124)


TOOLS REQUIRED: J-23456 Clutch Spring Compressor Press J-25018 Clutch Spring Compressor

- 1. Place the input clutch assembly (621) on the bench with the turbine shaft through the bench hole.
- 2. The 3-4 clutch plate retainer ring (656) and the backing plate (655)
- 3. The 3-4 clutch plates (654)
- 4. The 3-4 clutch apply plate (653)
- 5. The 3-4 clutch ring retainer plate (652)
- 6. Forward clutch backing plate retainer ring (651) and backing plate (650)
- 7. Forward clutch sprag assembly (638 644)

Disassemble

- 1. Input sun gear bearing assembly (637)
- 2. Input housing to output shaft lip seal (636).
- 3. Forward clutch plates (649)
- 4. Forward wave plate (648)
- 5. Forward clutch apply plate (646)

7A1-26 700-R4 AUTOMATIC TRANSMISSION

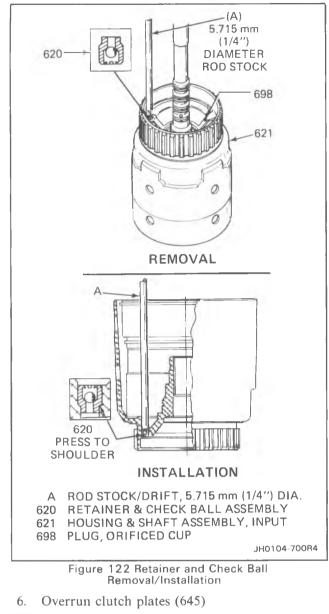

- **+**
 - 1. Install J-23456 and J-25018

Disassemble

- Compress overrun clutch spring assembly (634).
- 2. Overrun clutch retainer ring (635).
- 3. Overrun clutch spring assembly (634).
- 4. Overrun clutch piston (632)
 - inner and outer lip seals (631)
- 5. Forward clutch piston assembly (630) inner and outer lip seals (629)
- 6. Forward clutch housing (628)
- 7. The 3-4 clutch spring assembly (626)
- 8. The 3-4 clutch apply ring (625) and piston (623)
 inner and outer lip seals (624) from piston
- 9. Forward clutch to input housing "O" ring seal (622)
- 10. Four turbine shaft oil seal rings (619)

Inspect (Figure 126 and 127)

- 1. Input housing for porosity or damage
- 2. Input housing and shaft assembly (621)
 - all splines for wear or damage
 - air check feed passages.
 - three turbine shaft sealing balls
 - the balls must **not** be loose or leaking.
 the open hole is the lube oil passage which feeds the output shaft.
 - Presence of orificed cup plug (698)
 - Cracks at lube holes.
 - Four turbine shaft oil seal rings (619) and their ring grooves for damage, burrs, or cuts
 these seals must fit freely into the ring grooves.
 - Check valve retainer and ball assembly (617) for damage
 - the ball must move freely in the retainer.
 - the retainer must be tight in the turbine shaft.

Check Valve Retainer and Ball Assembly - Replacement Procedures

	++	Remove or Disconnect (Figure 125)
		TOOLS REQUIRED: #4 Screw extractor
	1.	Straighten the tangs of the retainer and remove the ball.
	2.	Check valve retainer - use #4 Screw Extractor
	++	Install or Connect (Figure 125)
		TOOLS REQUIRED: 9.5 mm (3/8") diameter metal rod New check valve retainer and ball assembly (617)
		 use the 9.5 mm (3/8") metal rod. seat the retainer 3.0 mm (1/8 in.) below top surface of the turbine shaft. be certain the ball is loose.
)	Inspe	ect (Figure 126 and 127)
•	or da	bine shaft "O" ring seal (618) for nicks, cuts, amage at housing check valve ball (620). the ball must move freely. leak check the ball with solvent.
		Important (Figure 126)

• If the 3-4 clutch plates are burned or worn and a cause is not found during diagnosis or disassembly, replacement of the retainer and check ball assembly may be required.

←→ Remove or Disconnect (Figure 122)

TOOLS REQUIRED:

5.715 mm (1/4") diameter rod or drift hammer

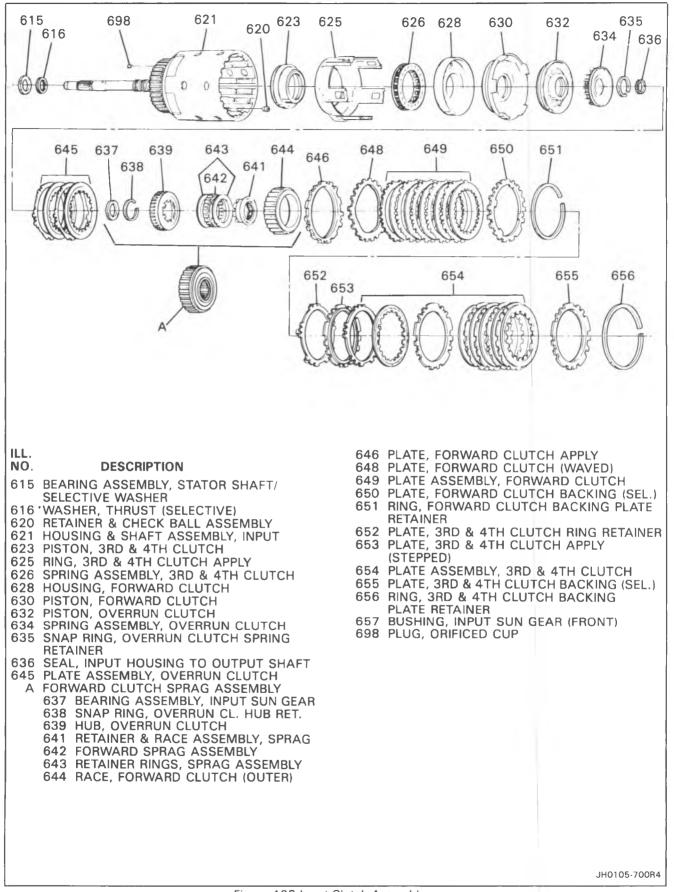
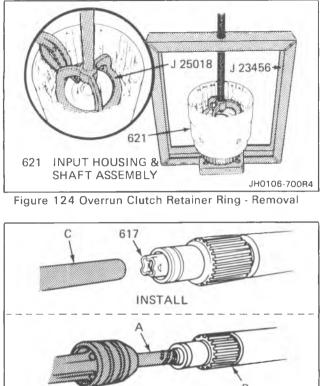


Figure 123 Input Clutch Assembly

7A1-28 700-R4 AUTOMATIC TRANSMISSION



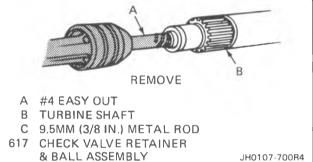


Figure 125 Retainer and Ball Assembly - Replacement

1. Tap out retainer and ball assembly.

→← Install or Connect (Figures 122 and 126)

1. Using same tools, tap in retainer and ball assembly until shoulder is seated in housing.

Inspect (Figure 123)

]

-X-

- The 3-4 clutch piston (623) for damage or porosity
- The 3-4 clutch apply ring (625) for - bent tangs
- The 3-4 clutch spring assemby for damage or distortion

Assemble (Figure 128)

- 1. Position the input housing and shaft assembly on the bench with the turbine shaft through a bench hole.
- 2. Inner and outer 3-4 clutch lip seals (624) on the 3-4 clutch piston
 - seal lips must face away from the piston hub.
 - lubricate the seals with transmission fluid.
- 3. The 3-4 clutch piston (623) into the input housing as shown

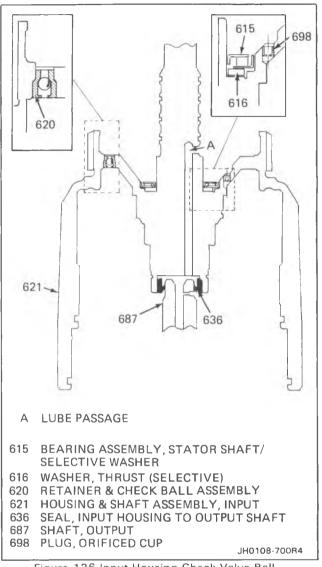


Figure 126 Input Housing Check Valve Ball


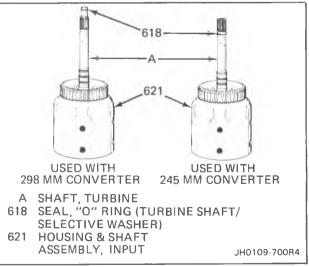


Figure 127 Views of the Input Housing

use care not to damage the seals.

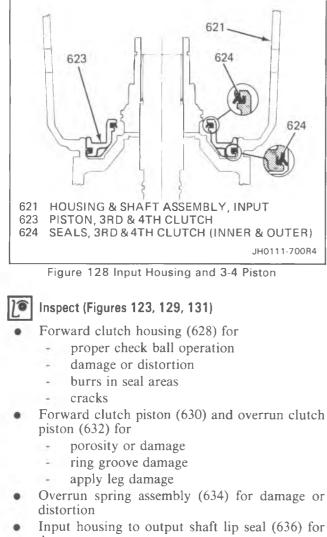

damage or wear

Assemble (Figures 129 and 130)

TOOLS REQUIRED:

J-23456 Clutch Spring Compressor Press J-25018 Clutch Spring Compressor

J-29882 Overrun Clutch Inner Seal Protector

J-29883 Forward Clutch Inner Seal Protector

- 1. Forward clutch housing to input clutch housing "O" ring seal (622) as shown
 - lubricate with transmission fluid.
- 2. Inner and outer seals (629) on forward clutch piston
 - seal lips must face away from the piston tangs as shown.
 - lubricate with transmission fluid.
- 3. Forward clutch piston (630) into the forward clutch housing
 - use care not to damage the outer lip seal.
- 4. The 3-4 clutch spring assembly (626) onto the 3-4 clutch apply ring
- 5. Forward clutch assembly onto the 3-4 clutch spring assembly

- the forward clutch piston apply legs must be indexed with the 3-4 clutch apply ring legs.
- J-29883 on the input housing as shown 6.
- Apply ring and forward clutch assembly into the 7. input housing as shown
 - hold the assembly by the apply ring legs during installation.
 - do not let the forward clutch piston separate from the housing.
 - firmly seat the assembly.
- 8. J-29882 on the input housing as shown
- 9 Overrun clutch piston (632)
 - hub facing upward as shown.
 - if all parts are properly seated to this point, piston the overrun hub will be approximately 3/16 in. below the snap ring groove in the input housing hub.

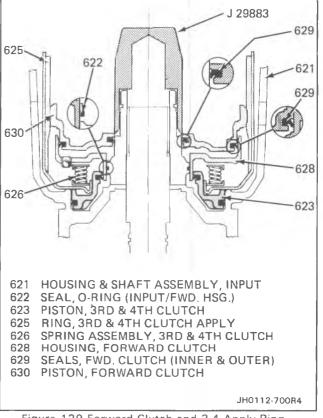


Figure 129 Forward Clutch and 3-4 Apply Ring -Installed

Assemble (Figures 131 and 132)

- Overrun clutch spring assembly (634) onto the 1. overrun clutch piston.
 - locate the springs on the piston tabs
- 2. J-23456 and J-25018 onto the overrun spring assembly.
 - compress springs (Do not over-compress).
- 3. Retainer snap ring (635) into the snap ring groove
- Input housing to output shaft lip seal (636) 4.

Overrun clutch plates (645)

10 Inspect

7A1-30 700-R4 AUTOMATIC TRANSMISSION

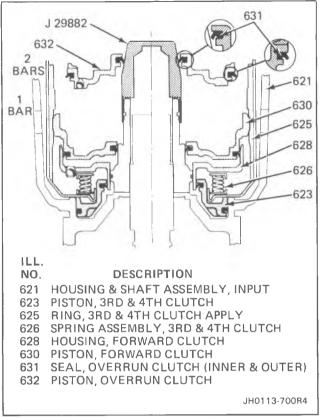


Figure 130 Overrun Piston - Installed

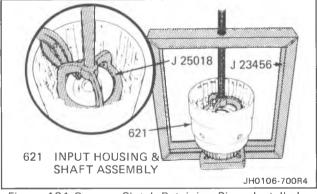


Figure 131 Overrun Clutch Retaining Ring - Installed

- Composition plates for damaged tangs, delamination, or excessive wear
- Steel plates for damaged tangs, wear, or heat damage
- Input sun gear bearing assembly (637) for wear, flatness or damage

*

- Assemble (Figures 133 and 134)

- 1. Overrun clutch plates (645) into the input housing.
 - overrun clutch plates are the smallest of the three sets of plates in the input housing.
 - index the plate as shown.
- 2. Thrust bearing assembly (637) onto the input clutch hub
 - the inside race must face the input housing hub.

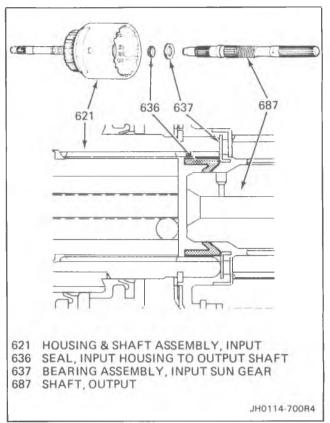


Figure 132 Input Hsg. to Output Shaft Lip Seal

- retain with petrolatum.
- 3. Align the tangs on the two composition overru.. clutch plates.

Forward Clutch Sprag Assembly

◆ Disassemble (Figure 135)

- 1. Forward sprag outer race (644)
- 2. Overrun clutch hub retaining snap ring (638) and clutch hub (639)
- 3. Forward clutch retainer and race assembly (641)

Inspect

- Forward clutch sprag assembly (642) for
 - wear or damage
 - weak or broken springs
 - damaged or missing retainer caps (brass)
- Overrun clutch hub (639) for
 - spline damage
 - plugged lubrication holes
 - damaged tangs
 - cracks
- Forward clutch retainer and race assembly (641) for
 - spline damage
 - ring groove damage
 - surface finish damage
 - loose retainer
 - Forward sprag outer race (644) for
 - spline damage

0	5			
(B	\searrow		
	*	R		
X		RRUN		
* ALIG	IN WIDE	NOTCHES TO	O CASE	LUGS
	OVERR	UN CLUTCH	1	
MODEL	F	UN CLUTCH	(COMP. ACED
MODEL	F	LAT	(

Figure 133 Overrun Clutch Plate Chart


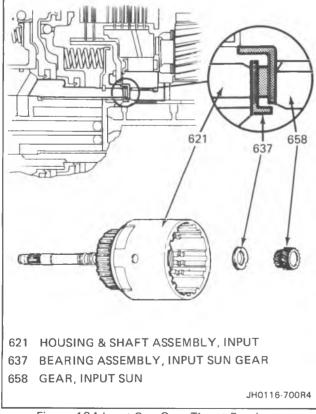


Figure 134 Input Sun Gear Thrust Bearing



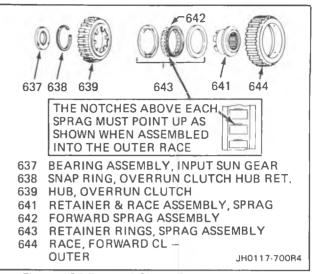

- surface finish damage
- plugged lubrication holes

Assemble (Figures 136, 137, 138)

- 1. Forward clutch sprag assembly (642) into the outer race
 - to correctly install, the notches in the sprag cage must face upward as shown.
- 2. One sprag retainer ring (643) onto the race and retainer assembly
 - the flange on the retainer ring must face away from the retainer.
- 3. Race and retainer assembly into the sprag assembly
 - to assemble, hold the outer race in your left hand with your fingers supporting the sprag at the recessed side of the outer race.
 - insert the race and retainer assembly by pushing in and turning to the left.
- 4. The remaining retainer ring onto the sprag assembly
- 5. Overrun clutch hub (639) onto the wear plate
- 6. Overrun clutch hub retaining snap ring (638) into the snap ring groove of the race and retainer assembly
- 7. Test the assembly for proper operation as shown.
 - If the assembly operates backwards, you have installed the sprag backwards. Reassemble correctly.


Assemble

- Forward clutch sprag assembly into the input clutch housing
 - index the overrun clutch hub into the overrun clutch plates.

Inspect (Figure 139 and 140)

- Forward (649) and 3-4 clutch plates (654)
 - Composition plates for damaged tangs, delamination, or wear

7A1-32 700-R4 AUTOMATIC TRANSMISSION

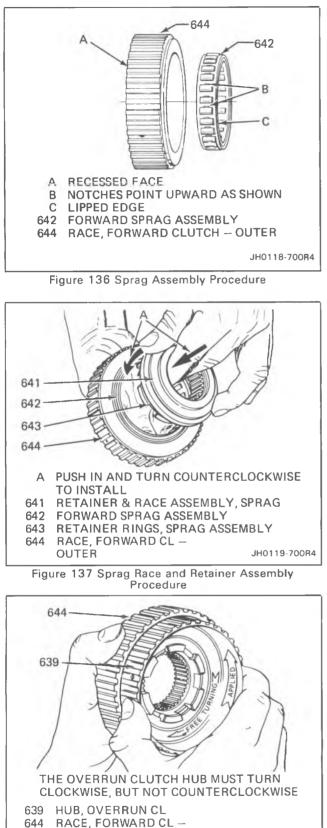

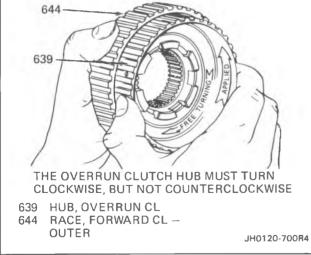


Figure 138 Check Sprag for Proper Operation

Steel plates for damaged tangs, wear, or heat damage

- Forward (650) and 3-4 clutch backing plates (655) for
 - flatness
 - surface finish damage
 - burrs or nicks
- Forward clutch apply plate (646) and spacer plate (647) for
 - flatness
 - surface finish damage
 - burrs or nicks
- The 3-4 clutch apply plate (653) for
 - flatness
- surface finish damage
- The 3-4 clutch ring retainer plate (652) for
- bent tangs
- flatness

Assemble (Figures 139, 140, 141 and 142) ×

- Forward clutch apply plate (646) into the input clutch housing
 - index as shown.
- 2. Waved steel forward clutch plate (648) into the input clutch housing
 - index as shown.
- 3. The remaining forward clutch plates (649) into the input clutch housing
 - start with steel plate and alternate with a composition
- 4. Forward clutch selective backing plate (650)
- 5. Forward clutch retaining ring (651)

Forward Clutch Piston Travel Check

1 Measure (Figure 142)

Check the end clearance between the backing plate (650) and the retaining ring (651) with two feeler gages.

Select the proper backing plate from the chart to obtain the correct clearance



- Assemble (Figure 143 and 147)
- The 3-4 ring retainer plate (652) 1.
 - index each leg into the apply ring legs.
- The 3-4 clutch apply plate (653) 2.
- 3. The 3-4 clutch plates (654)
 - start with composition and alternate with steel
- The 3-4 boost springs (600) (some models only) 4
- The 3-4 clutch backing plate (655) and retainer 5 ring (656)
 - chamfered side up.

3-4 Clutch Piston Travel Check

Measure (Figure 144) 1

Check the end clearance between the backing plate (655) and the first composition plate with a feeler gage.

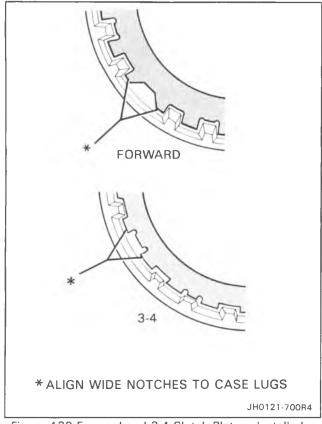


Figure 139 Forward and 3-4 Clutch Plates - Installed

• Select the proper backing plate from the chart to obtain the correct clearance.

Clutch Air Check

(Figure 145)

Air check the 3-4, forward, and overrun clutches by applying air pressure at the feed holes in the turbine shaft. (When the overrun clutch is checked, the air will blow by the forward clutch piston lip seals and exit out the forward clutch feed hole in the turbine shaft.)

Assemble (Figure 146)

TOOLS REQUIRED:

J-36418-1 seal installer

- J-36418-2A seal sizer
- Install four turbine shaft oil seal rings (619) using J-36418-1
 - Adjust screw to obtain proper height
- 2. Use J-36418-2A to size the seals after installation

Reverse Input Clutch Assembly

◆ Disassemble (Figure 148 and 149)

TOOLS REQUIRED:

J-23327 Clutch Spring Compressor

J-25018 Clutch Spring Compressor Adaptor

- 1. Retaining ring (614) from reverse input housing
- 2. Backing plate (613)
- 3. Clutch plates (612) and belleville steel plate (611)

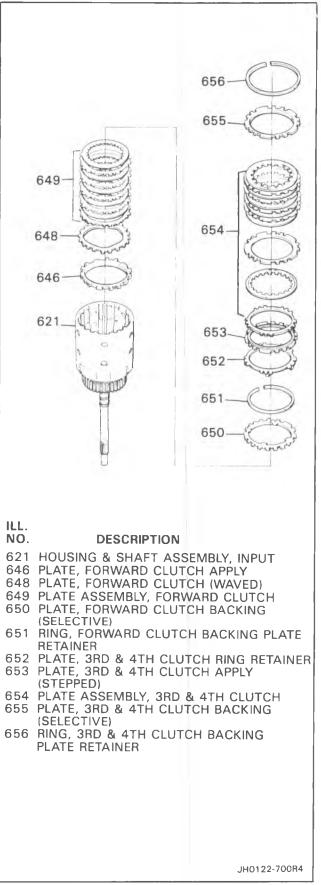


Figure 140 Input Housing with Forward and 3-4 Clutch Plates

7A1-34 700-R4 AUTOMATIC TRANSMISSION

	THICK-	QUANTITY REQUIRE	
PLATE TYPE	NESS	ALL MODELS	
FLAT STEEL CLUTCH PLATE	2.29mm (.090″)	5	
COMPOSITION FACED CLUTCH PLATES	1.78mm (.070″)	5	
APPLY PLATE	6.44mm (.251 ″)	1	
WAVED STEEL CLUTCH PLATE	2.03mm (.079″)	1	
BACKING PLATE	SELEC- TIVE	1	

Figure 141 Forward Clutch Plate Chart

- 4. Install J-23327 and J-25018.compress the spring assembly.
- 5. Spring assembly retainer ring (610) and spring assembly (609)
- 6. Reverse input clutch piston (607)
 - inner and outer lip seals (608) from piston

Inspect (Figures 148 and 150)

Backing plate (613) for

- damage
- distortion or flatness
- burrs or surface finish damage
- Clutch Plates (612)
 - Composition for tang damage, delamination, or wear
 - Steel for tang damage, wear, or heat damage
 - Spring assembly (609) for distortion or damage
- Piston (607) for
 - poposity
 - damaged lip seals
- Housing and drum assembly (605) for
 - damaged or worn bushings (603 and 606)
 - surface on the hub and outer housing
 - leak at the weld

Assemble (Figures 148, 149, 151, 152 and 152A)

TOOLS REQUIRED:

J-23327 Clutch Spring Compressor

J-25018 Clutch Spring Compressor Adaptor

- Inner and outer seals (608) on the piston
 lips must face away from the hub as shown.
 - lubricate with transmission fluid.
- Piston (607) into the housing and drum assembly
 use an 8 mm feeler gage to position the lip seals.

BACKING PLATE	
BACKING PLATE TRAVEL	= .75mm - 1.60mm (.030"063")
PLATE THICKNESS	IDENTIFICATION
6.92mm - 7.07mm (.272"278")	А
6.33mm - 6.48mm (.249"255")	В
5.74mm - 5.89mm (.225″232″)	С
5.15mm - 5.30mm (.203″208″)	D
4.56mm - 4.71mm (.180" - 185")	E

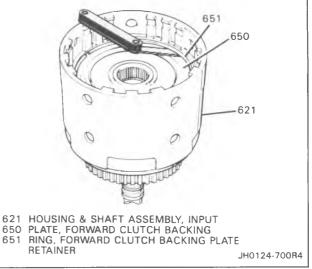


Figure 142 Forward Clutch Backing Plate Travel

- use care not to damage the seals.
- 3. Spring assembly (609)
 - large opening in the assembly goes towards the piston.
- 4. Install J-23327 and J-25018.
 - compress the spring assembly
 - install the retainer ring (610).
- 5. Belleville steel clutch plate (611)
- 6. Clutch plates (612). (4 steel and 4 composition plates required)
 - start with a composition and alternate with steel
- 7. Backing plate (613)
 - chamfered side up
- 8. Retaining ring (614)

Measure (Figure 151, 152, 152A and 153)

1. With the Reverse Input Clutch fully assembled, apply an evenly distributed load to the Clutch Pack in the direction shown in Figure 1. Medium pressure (approximately 20 lbs.) on the Backing Plate applied by hand on five evenly distributed

INFC	3-4 CLI DRMATIC	JTCH DN CHART	
PLATE TYPE	тніск-	QUANTITY	REQUIRED
	NESS	*A-MODELS	*B-MODELS
FLAT STEEL CLUTCH PLATE	1.97mm (.077″)	6	5
COMPOSITION FACED CLUTCH PLATES	2.03mm (.079″)	5	6
STEPPED APPLY PLATE	3.30mm (.130″)	1	1
BACKING PLATE	SELEC- TIVE	1	1
FLAT STEEL	1.97mm (.070″)	1	1
* A-MODELS		ИМ, МАМ, М ИСМ, МТМ, ТВМ, ҮХМ	PRM, TAM,
*B-MODELS		ALL OTHER	RS
†SAME SPLINE CO	NFIGURA	TION AS AP	PLY PLATE
			JH0125-700R4

Figure 143 3-4 Clutch Plate Chart

points will obtain the Backing Plate Travel for measurement.

CAUTION: (Excessive pressure will distort the Belleville plate resulting in an inaccurate measurement.)

- 2. Using a Feeler Gage, measure between the Snap Ring and the Backing Plate. Backing Plate Travel should be 1.02mm - 1.94mm (.040" - .076").
- 3. Select the proper Backing Plate to obtain the specified travel.

Reverse Input and Input Clutches



Assemble (Figures 154 and 155)

- 1. Selective thrust washer (616) onto the input housing
- 2. Bearing assembly (615)
 - inside (black race) goes toward the oil pump.
- 3. Reverse input clutch assembly (605) onto the input clutch assembly
 - index the reverse input clutch plates with the input clutch hub.
 - make certain all clutches are fully engaged.



Assemble (Figure 156)

- Reverse input and input clutch assembly into the transmission case
 - index the 3-4 clutch plates with the input internal gear.

MODEL	BACKING PLATE TRAVEL	*BACKIN PLATE		
		Use Backing Plate Which Gives Correct Travel		
		DIM.	I.D.	
FAM, FMM, MAM, MFM, MRM, MXM, MCM, MTM,	2.42mm - 1.61mm	6.58mm 6.38mm (.259".251")	5	
PRM, TAM, TBM, YXM	(.095 "063 ")	5.75mm 5.55mm (.226″·.218″)	6	
	2.40mm 1.52mm	4.92mm-4.72mm (.194"186")	7	
ALL OTHERS	(.094 "060 ")	4.09mm 3.89mm (.161"153")	8	

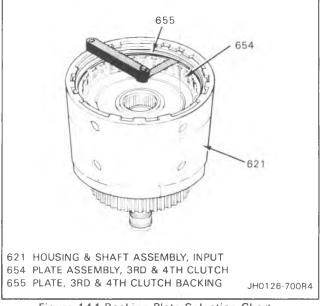


Figure 144 Backing Plate Selection Chart

- make sure all clutch plates are fully engaged.
- when properly assembled, the reverse input clutch housing will be located just below the case oil pump face.

2-4 Band Assembly

Inspect

2-4 band assembly (602) for damage or wear

Assemble (Figure 156, 157)

- 1. The 2-4 band assembly (602) into the case
 - index the band anchor pin end with the case pin hole.
- 2. Band anchor pin (48) into the case
 - index the pin into the 2-4 band.

7A1-36 700-R4 AUTOMATIC TRANSMISSION

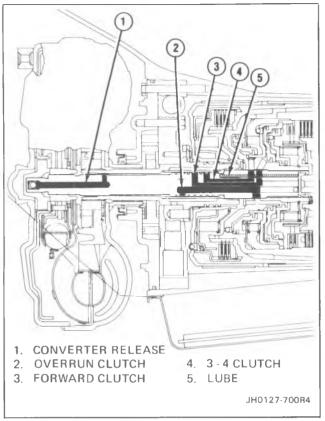


Figure 145 Turbine Shaft Oil Passages

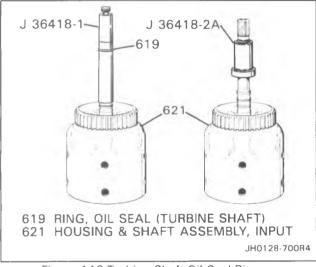


Figure 146 Turbine Shaft Oil Seal Rings

Oil Pump Assembly

++ Remove or Disconnect (Figure 160)

- 1. Thrust washer (601)
- 2. Pump cover to case gasket (9)
- 3. Pump to case oil seal (8)
- 4. Pump cover bolts (236)
- 5. Pump cover (217) from pump body (203)

Pump Body

Disassemble (Figure 160)

- Pump slide spring (209)
 - compress with needle nose pliers.pull straight out.

CAUTION: Spring is under very high pressure. Place covering over spring to prevent possible injury.

- 2. From the pump pocket
 - Pump guide rings (212)
 - Pump vanes (215)
 - Pump rotor (214)
 - Pump guide (213)
 - Slide (206)
 - Slide Seal (211)
 - Seal Support (210)
 - Pivot slide pin (208) and spring (207)
 - Slide seal ring (204) and slide back up seal (205)
- 3. Retainer (94), oil seal assembly (2)
 - pry out with a screwdriver.

Oil Pump Cover

Disassemble (Figure 160)


- 1. Converter clutch apply valve train
 - compress converter clutch apply valve spring (228) with a screwdriver.
 - remove retaining ring (225).
 - slowly release the spring tension.
 - stop valve (226), converter clutch apply valve (227), and two converter clutch valve springs.
- 2. Pressure relief ball (231)
 - ball is under strong spring pressure.
 - cover the ball with a cloth when removed.
- 3. Pressure regulator assembly (218-224).
 - follow the same procedure used to remove the converter clutch valve.


Inspect (Figure 160)

])

- Pressure regulator valve assembly (218-224) and converter clutch apply valve assembly (225-229) for
 - chips, burrs, distortion, plugged oil passage, and free movement in bore
 - remove burrs with lapping compound
- Pressure relief assembly (230-232) for damage or distortion
- Pump cover (217) and pump body (203) for
 - worn or damaged bushings (see Bushing Replacement Procedure)
 - foreign material or debris
 - porosity
 - scored or irregular mating faces
 - cross channel leaks
 - ring groove damage
 - Rotor (214) and slide (206) for cracks



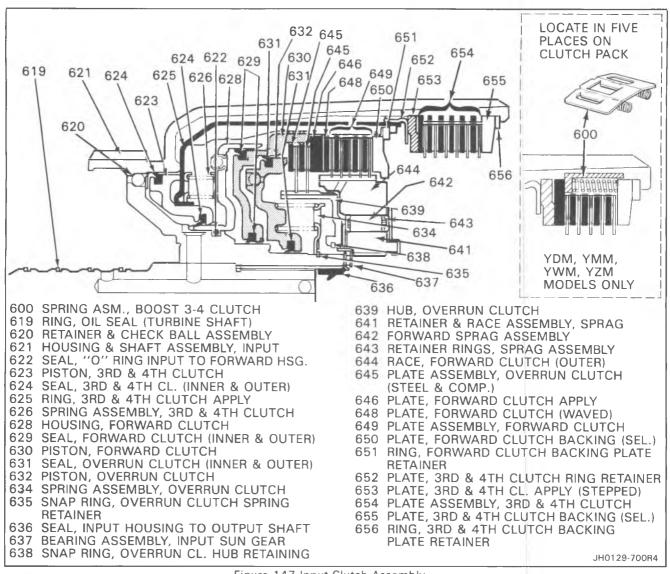

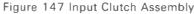

Pump Body

Assemble (Figures 160, 161 and 162)

TOOL REQUIRED:

J-25016 Seal Installer

- "O" ring seal (205) and oil seal ring (204) into the groove on the back side of the slide
 retain with petrolatum.
- 2. Pivot pin spring (207) and pivot pin (208) into the pump body
- 3. Slide (206)
 - index the notch in the slide with the pivot pin.
 - the oil seal ring must face downward into the pump pocket.
- 4. Slide seal (211) and support (210)
- 5. Vane guide ring (212)
- 6. Rotor guide (213) onto the rotor retain with petrolatum.
- 7. Rotor (214)
 - with guide toward the pump pocket.

One inch Mircormeter

Measure (Figure 159)

TOOL REQUIRED:

Wash and air dry all parts.

• Oil pump rotor (214) thickness

Oil seal assembly for damage or wear

do not wipe dry with a cloth.


• Oil pump slide (206) thickness

Important


Clean


Measurement of rotor/slide must be made on undamaged surfaces. Select similar size replacements. Lightly hone both sides of replacement rotor or slide to remove any nicks or burrs.

7A1-38 700-R4 AUTOMATIC TRANSMISSION

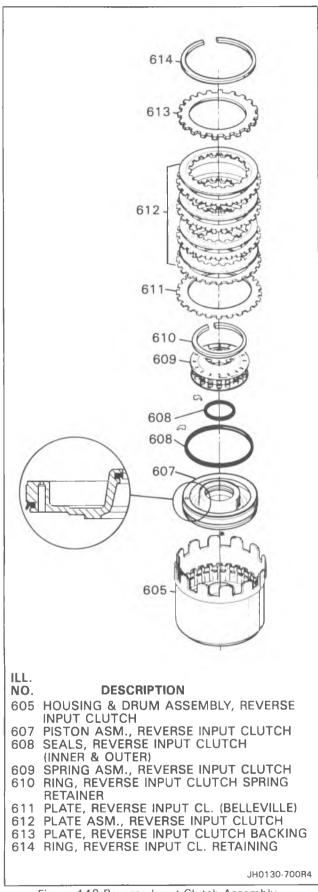



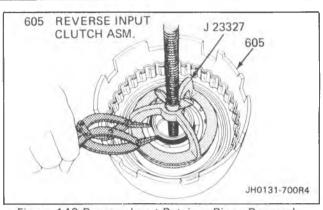

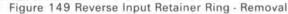

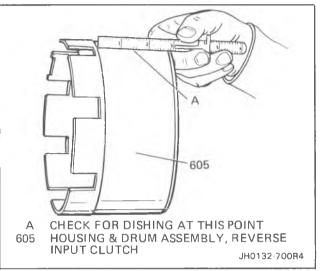


Figure 150 Check Reverse Input Housing For Dishing

- 8. Vanes (215)
- 9. Vane guide ring (212)
- 10. Pump slide spring (209)
- 11. Oil seal assembly (2), retainer (94). use J-25016

Oil Pump Cover

-X Assemble (Figures 160 and 163)

- 1. Pressure relief ball (231), spring (232) and rivet (230)
- 2. Inner (229) and outer (228) converter clutch valve springs into the converter clutch valve bore
- 3. Converter clutch valve (227)
- 4. Stop valve (226)
- 5. Retaining ring (225)
- 6. Pressure regulator valve (218) into the pressure regulator bore
- 7. Pressure regulator valve spring (219)
- 8. T.V. boost valve (222) into the T.V. bushing
 - long land of the valve into the large hole of the bushing.
 - retain with petrolatum.
- 9. Reverse boost valve (220) into the reverse boost valve sleeve
 - small end of the valve first.

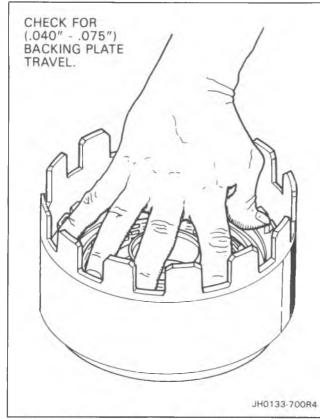


Figure 151 Reverse Input Backing Plate Selection

REVERSE	INPUT	CLUTCH
	NO.	THICKNESS
FLAT STEEL CLUTCH PLATE	4	2.045mm (.081") 1.892mm (.075")
COMPOSITION FACED CLUTCH PLATE	4	1.880mm (.074") 1.730mm (.068")
BELLEVILLE PLATE	1	2.311mm (.091") 2.210mm (.087")
BACKING PLATE	1	SELECTIVE
		JH0134-700R4

Figure 152 Reverse Input Clutch Plate Chart

retain with petrolatum.

- 10. Reverse boost valve sleeve (221) into the pressure regulator bore
- 11. T.V. boost valve sleeve (223) into the pressure regulator bore
- 12. Retainer ring (224)

Oil Pump Cover and Body

- Assemble (Figures 160, 164, 165 and 166)

TOOLS REQUIRED:

J-21368 Oil Pump Body and Cover Alignment Band

- 1. Oil pump cover (217) onto oil pump body stator shaft through a bench hole.
- 2. Pump cover bolts (236)

REVERSE INPUT BACKING PLATE	
ALL MODE	ELS
BACKING PLATE TRAVEL	1.02mm - 1.94mm {.040"076")
PLATE THICKNESS	IDENTIFICATION
7.60mm - 7.45mm (.299"293")	5
6.94mm - 6.79mm (.273"267")	6
6.28mm - 6.13mm (.247"241")	7
5.62mm - 5.47mm {.221"215"}	8
	JH0191-700R

Figure 152A Reverse Input Backing Plate Selection Chart


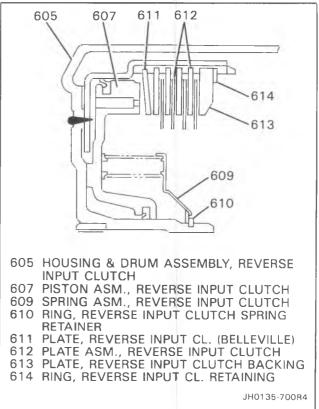


Figure 153 Reverse Input Clutch

- leave finger tight.

- Align pump cover and pump body with J-21368.
 place a screwdriver through a bolt hole and into a hole in the bench.
- 4. Torque attaching bolts to 22 $N \cdot m$ (18 ft. lbs.)
- 5. Pump to case gasket (009) onto case
 - retain with petrolatum.
- 6. Oil seal rings (233), if removed previously, onto the pump cover hub
 - retain with petrolatum.
- 7. Pump to case oil seal (008)

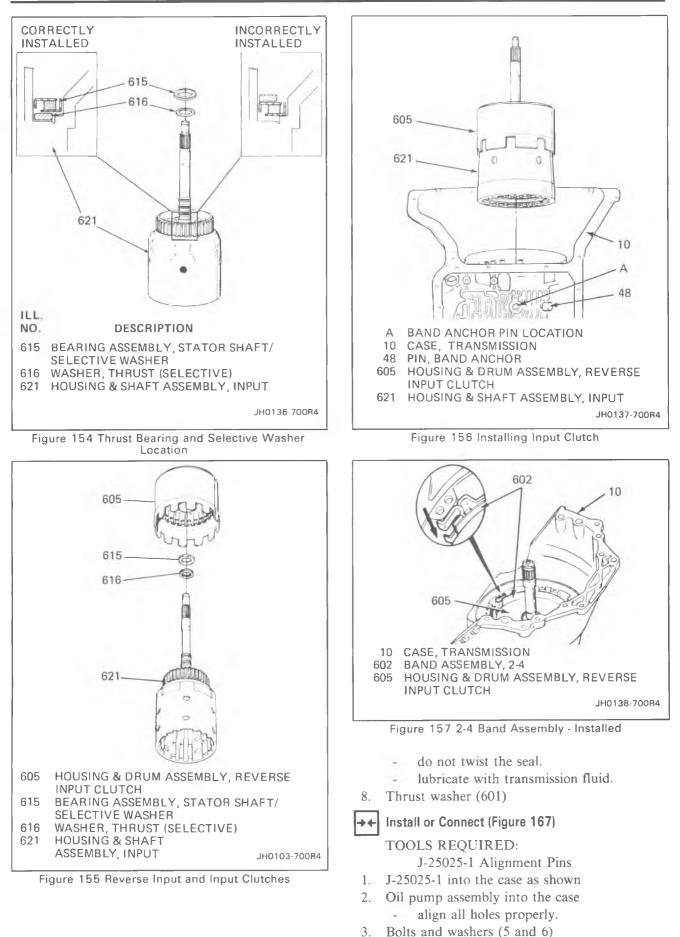

7A1-40 700-R4 AUTOMATIC TRANSMISSION

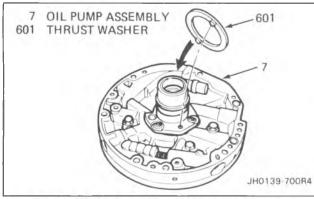


Figure 158 Oil Pump Thrust Washer Location

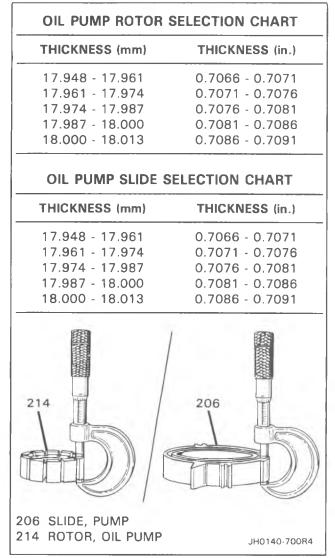


Figure 159 Oil Pump Rotor and Slide Selection

- torque to 22 $N \cdot m$ (18 ft. lbs.)
- Important

Rotate the transmission to a horizontal position. If the transmission is assembled

properly the turbine shaft should turn by hand. If not identify and correct the misassembly now.

Transmission End Play Check



Measure (Figures 168, 169, 170, 171)

TOOLS REQUIRED:

J-24773-A End	Play 0	Check	ing Fi	xture	
J-25022 End		Che	cking	Fixt	ure
Adaptor (245 n	nm)				
J-34725 End	Play	Che	cking	Fixt	ure
Adaptor (298 n	nm)				
278 mm (11		Bolt	and	Nut	or
J-25025-7A Pos	st				
Dial Indicator					

- 1. Remove an oil pump to case bolt and install a 278 mm (11 in.) bolt and lock nut or J-25025-7A.
- 2. Install J-25022-A or J-34725 as shown.
- 3. Install J-24773-A as shown.
- 4. Install a dial indicator.
- set to zero.
- 5. Pull up on J-24773-A.
 - End play should be 0.13 0.92 mm (.005 .036 in.).

The selective washer which controls end play is located between the input housing and the thrust bearing on the oil pump hub. If more or less end play is required, select the proper washer from the chart and install. If dial indicator shows no end play, the selective washer and thrust bearing have been misassembled.



Assemble (Figure 172)

"O" ring seal (618) into the groove in the end of the turbine shaft.


Important (Figure 173)

There should be clearance between the reverse input clutch and the reaction sun gear shell. This clearance can be observed at the point shown in-700-R4 Figure 173. **Do not** try to shim the internal parts because of this clearance.

Inspect (Figure 175, 176 and 177)

- The 1-2 accumulator cover and pin assembly (62) for
 - porosity or damage
 - scored piston wall
 - plugged oil passage
- 1-2 accumulator piston (61) and the 3-4 accumulator piston (52) for
 - porosity
 - ring groove damage
 - pin hole damage
- 1-2 accumulator spring (59) and 3-4 accumulator spring (54) for distortion or damage
- Spacer plate (56) and gaskets (88 and 89) for damage

7A1-42 700-R4 AUTOMATIC TRANSMISSION

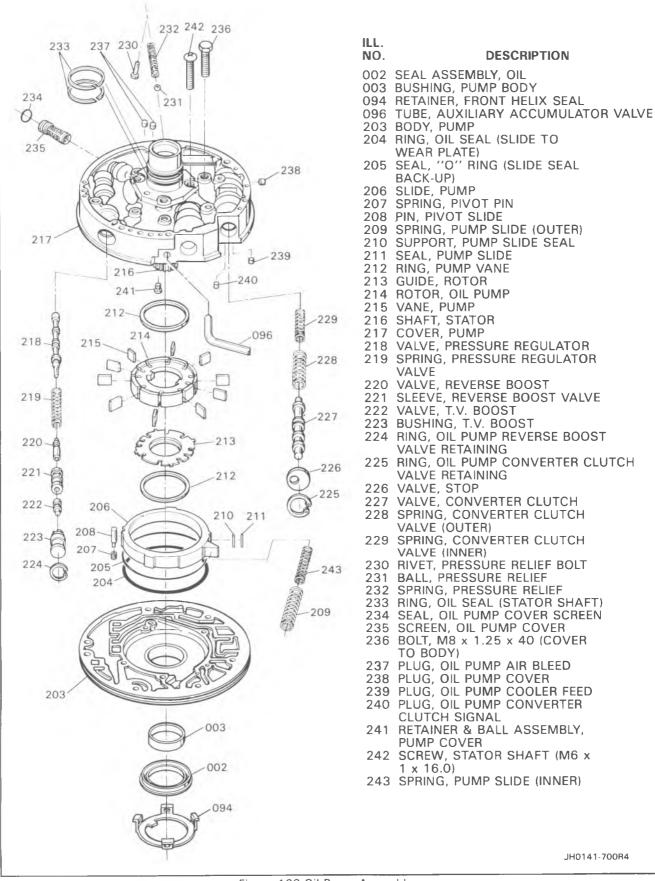

241 RETAINER & BALL ASSEMBLY. 242 SCREW, STATOR SHAFT (M6 x 243 SPRING, PUMP SLIDE (INNER)

DESCRIPTION

JH0141-700R4

Figure 160 Oil Pump Assembly

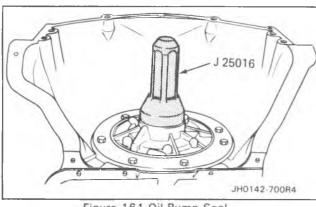


Figure 161 Oil Pump Seal


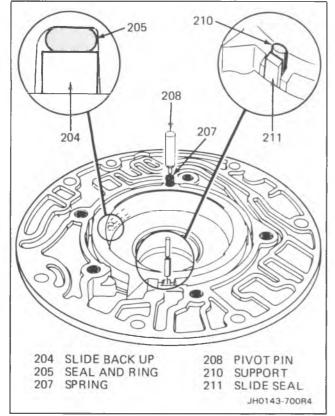


Figure 162 Slide Back Up and Slide Seal

- Checkballs (55) for damage
- T.V. Link (64) for damage
- Manual detent spring (709) for damage
- Oil filter (71) for
 - cut or damaged filter seal (70)
 - cracks in the neck or body
 - casting flash in the neck
- Solenoid assembly (50) for
 - damage
 - cut or pinched wires
 - damaged connectors
 - cut or damaged "O" ring (49)



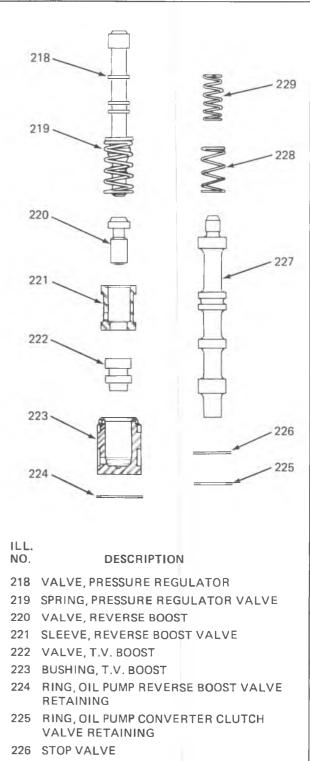

- 227 VALVE, CONVERTER CLUTCH
- 228 SPRING, CONVERTER CLUTCH VALVE (OUTER)
- 229 SPRING, CONVERTER CLUTCH VALVE (INNER)

JH0144-700R4

Figure 163 Pressure Regulator and Converter Clutch Apply Valve Trains

7A1-44 700-R4 AUTOMATIC TRANSMISSION


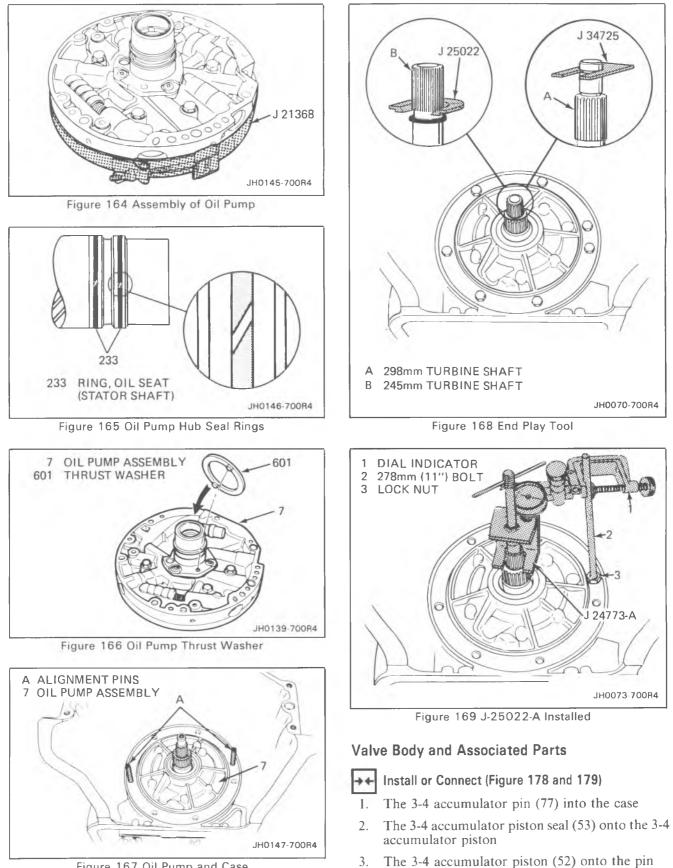


Figure 167 Oil Pump and Case

body. 4. The 3-4 accumulator piston spring (54)

5


the end with three legs must face the valve

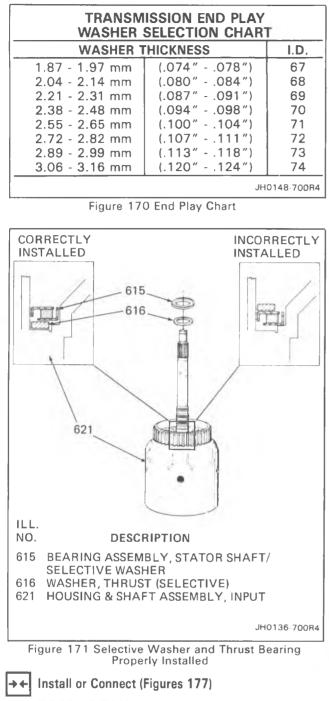

TOOLS REQUIRED:

J-25025-5 Guide Pins

- 1. Governor and converter clutch oil screens (47)
- 2. Four checkballs (55) into the case as shown
- 3. J-25025-5 into the case
- 4. Spacer plate to case gasket (88)
 - gasket identified by a "C"
- 5. Spacer plate (56)
- 6. Valve body to spacer plate gasket (89)
 - gasket indentified by a "V"

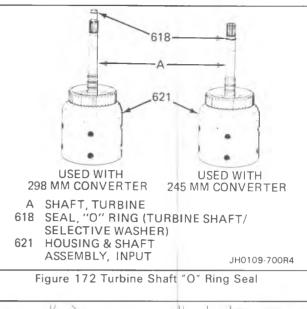

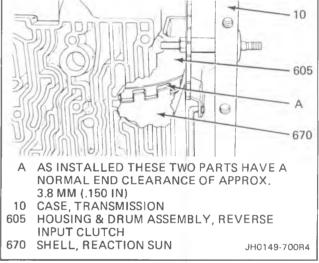


Figure 173 Clearance Between Reverse Input Clutch and the Sun Gear Shell

Control Valve Assembly

🖤 Clean

- Control valve assembly (67) thoroughly in clean solvent-move the valves with a pick or small screwdriver to dislodge any dirt or debris that may have accumulated
- Air Dry

◆ Disassemble (Figures 178 & 179)

Control Valve Assembly

- Position as shown on a clean surface
- Remove valve trains beginning with the upper left hand corner. NOTE : Some valves are under pressure - cover the bores while removing the roll pins
- Remove blind hole roll pins with a modified drill bit
- Valves, springs and bushings must be laid out on a clean surface in the exact sequence they are removed

7A1-46 700-R4 AUTOMATIC TRANSMISSION

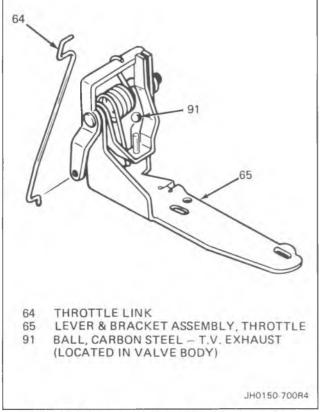


Figure 174 Throttle Lever and Bracket Assembly

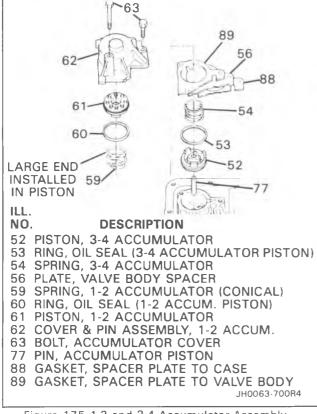


Figure 175 1-2 and 3-4 Accumulator Assembly

1988 Models	1 2 ACCUMULATOR Spring Color	3 4 ACCUMULATOR Spring Color
MHM, MPM, MWM, MZM, PAM, PBM, PCM, TNM, TUM, TXM	RED	VIOLET
MCM, MTM, PRM, YPM, YTM, YWM	YELLOW	RED
FAM, FJM, FMM, MAM, MDM, MFM, MKM, MLM, MRM, MXM, THM, TJM, TKM, TLM, YKM, YNM	RED	RED
TAM, TBM	RED	DK. GREEN
YAM	DK. GREEN	YELLOW
YDM	DK. GREEN	DK. GREEN
YXM	DK. GREEN	RED
YMM	YELLOW	YELLOW
YZM	YELLOW	VIOLET
		JH0151-700R4

Figure 176 1-2 and 3-4 Accumulator Spring Chart

Remove pressure switches

Clean

- All valves, springs, bushings and control valve body in clean solvent
- Dry using compressed air

Inspect

- All Valves and Bushings For:
 - Porosity
 - Scoring
 - Nicks
 - Scratches
- Springs for Damaged or Distorted Coils
- Valve Body Casting For:
 - Porosity
 - Cracks
 - Interconnected Oil Passages
 - Damaged Machined Surfaces

Assemble (Figures 178, 179)

- Control valve assembly (67) exactly as shown. Notice the position of the valve lands and bushing passages.
- ++

Install or Connect (Figures 180, 182)

. Two checkballs (55) and one checkball (91) into the valve body assembly and one checkball (55 B) into the Auxiliary Valve Body as shown. Checkball (91) is the larger copper colored ball shown as #10 on Figure 180.

retain with petrolatum.

- 2. Valve body assembly (67)
 - connect the manual valve link (705) to the inside detent lever (703).

Auxiliary Accumulator Valve Body Assembly

- 📕 Clean (Figure 181)
- Auxiliary valve assembly (377) thoroughly in clean solvent
 - move the valves with a pick or small screwdriver to dislodge any dirt or debris that may have accumulated
- Air dry

Disassemble (Figure 181)

- 1. (3) Bolts (373)
 - Cover (371) is under spring pressure
- 2. Cover (371) and accumulator piston spring (370)
- 3. Piston (367)
- 4. Piston oil seal ring (53)

Disassemble (Figure 181)

- Position the auxiliary accumulator valve body on a clean surface. Remove valve trains beginning with the lower left hand corner. NOTE; valves are under pressure-cover bores while removing the roll pin.
- Valves and springs must be laid out on a clean surface in the exact sequence as they are remvoed

Clean

- All valves and springs in clean solvent
- Air dry

Inspect

- Piston (367) for:
 - cracks
 - porosity
 - damage
- Valves for:
 - scoring
 - nicks
 - scratches
- Springs for damaged or distorted coils
 - Auxiliary valve body (377) for:
 - porosity
 - damaged machined surfaces
- Orifice cup plug (359)
 - remove only if damaged



Remove or Disconnect Tools Required

#3 Screw Extractor

• Orifice cup plug (359). Use modified #3 screw extractor.

++ Install or Connect

Tools Required 3/8" Rod

• Orifice cup plug (359). Use 3/8" rod. - seat flush *

Assemble (Figure 181)

Auxiliary accumulator valve train exactly as shown. Notice the valve lands



Assemble (Figure 181)

- Piston oil seal ring (369) onto piston (367)
 lubricate with petrolatum
- 2. Piston (367)
- 3. Accumulator spring (370)
- 4. Cover (371) and (3) bolts (373)

→← Install or Connect (Figures 181, 184 and 185)

- 1. Check ball (55) into auxiliary accumulator valve (377)
 - do not block orifice cup plug
 - retain with petrolatum
- 2. Bolts (374-376) and auxiliary valve body (377)
 - torque to 11 $N \cdot m$ (8 lbs.-ft.)

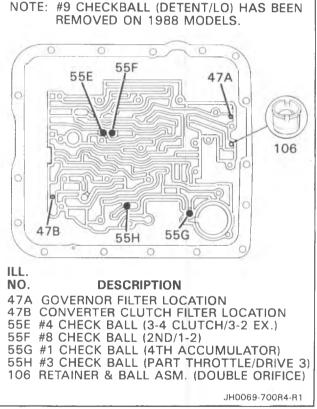


Figure 177 Case Checkballs and Oil Screens - Location


Inspect (Figure 174)


- The throttle lever and bracket assembly (65) for
 - sticking, binding or damage
- Make sure it operates freely without restrictions
- Replace if necessary

→← Install or Connect (Figures 183, 184 and 185)

1. T.V. link (64) onto the T.V. lever and bracket as shown

7A1-48 700-R4 AUTOMATIC TRANSMISSION

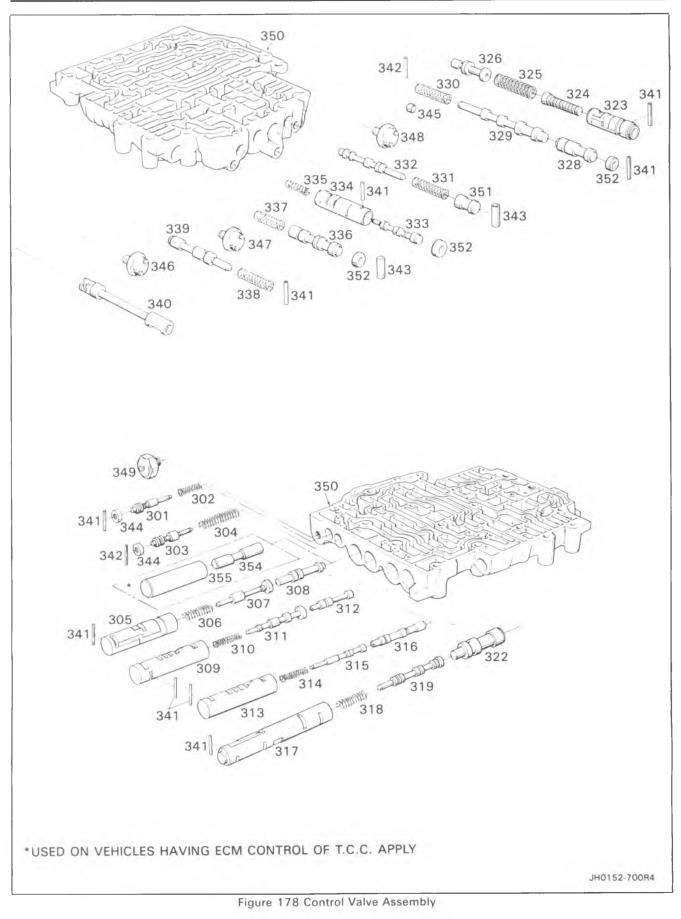

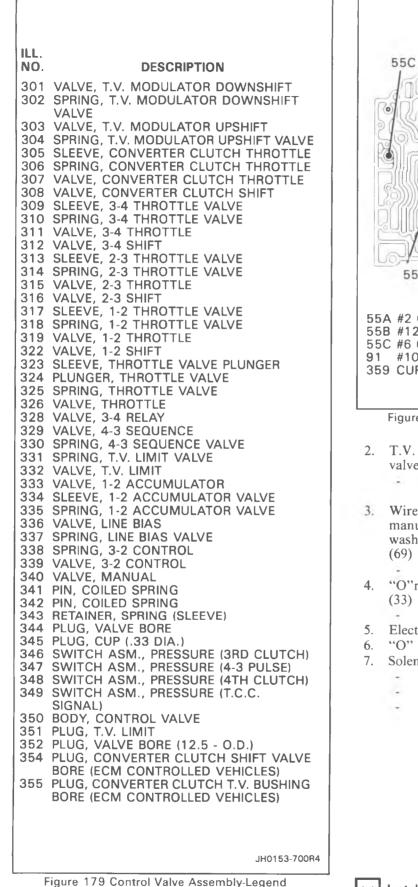

(COPPER FLASH) 91 AUX. VALVE En D BODY 359 m B 55A 55B (#12)55A #2 CHECKBALL (3RD CLUTCH ACCUM.) 55B #12 CHECKBALL (FORWARD CLUTCH) 55C #6 CHECKBALL (DRIVE 3) #10 CHECKBALL (T.V. EXHAUST) 359 CUP PLUG - ORIFICE JH0068-700R4

Figure 180 Valve Body Checkball Locations

- 2. T.V. lever and bracket assembly (65) onto the valve body as shown
 - attach with two valve body to case bolts (69).
- 3. Wire harness clips (66), filter retaining clip (87), manual spring assembly (68), wire retaining washer, and all remaining valve body to case bolts (69)
 - Torque to 11.0 $N \cdot m$ (8 ft.lbs.).
- 4. "O"ring seal (34) onto the electrical connector (33)
 - lubricate with transmission fluid.
- 5. Electrical connector (33) into the case
- 6. "O" ring seal (49) on the solenoid assembly (50)
- 7. Solenoid assembly (50) into the case
 - attach with two solenoid bolts (51)
 - torque to 11 $N \cdot m$ (8 ft. lbs.)
 - to correctly route and hook up the wires see the wiring diagrams in the 700-R4 diagnosis section.

The wire connectors are color coded to correspond to the information in the wiring diagram. On switches which take two connectors, the terminals are reversible. It will be necessary to identify and use the wiring diagram chart which corresponds to the type of vehicle you are working on. (See the Diagnosis Section for the wiring diagrams.)

Install or Connect (Figure 183, and 184)

1. Parking bracket (710)

7A1-50 700-R4 AUTOMATIC TRANSMISSION

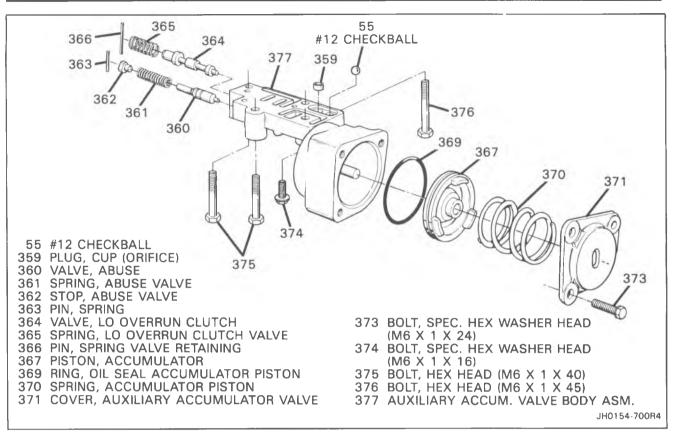


Figure 181 Auxiliary Valve Body Assembly

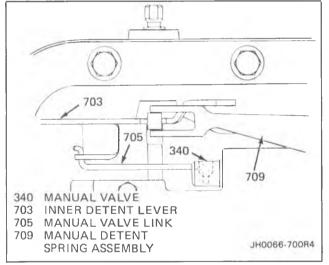


Figure 182 Manual Valve Link

torque to 22 $N \cdot m$ (18 ft. lbs.)

- 2. The 1-2 accumulator piston seal (60) onto the 1-2 accumulator piston ((61)
- 3. The 1-2 accumulator piston (61) into the 1-2 accumulator cover and pin assembly (62)
 - the three legs on the piston must face up toward the case when installed.
- 4. The 1-2 accumulator spring (59) onto the piston
- 5. The 1-2 accumulator cover and pin assembly (62) onto the case
 - torque to 11 N \cdot m (8 ft. lbs.)

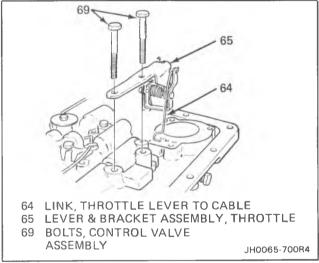


Figure 183 T.V. Lever and Bracket



Install or Connect (Figure 186)

- 1. filter seal (70) onto the oil filter
 - Iubricate with transmission fluid.
- 2. Oil filter (71)
- 3. Oil pan gasket (72)
- 4. Chip magnet (93) into oil pan (73)
- 5. Oil pan (73) and bolts (74)
 - torque to 16 $N \cdot m$ (12 ft. lbs.)

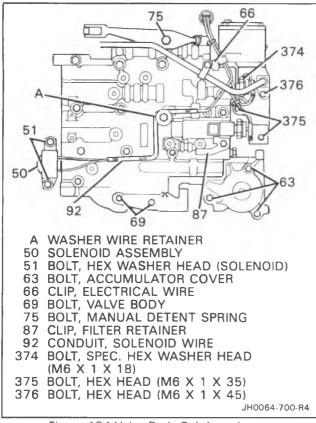


Figure 184 Valve Body Bolt Locations

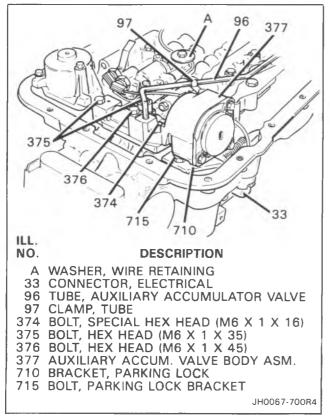


Figure 185 Outside Electrical Connector

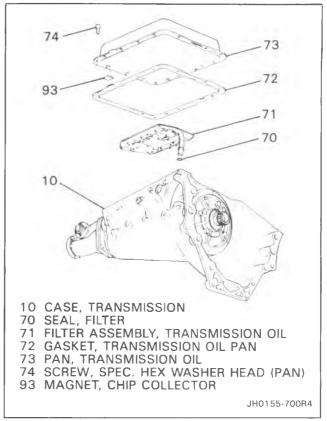


Figure 186 Case, Pan and Filter Assembly

2-4 Servo Assembly

Measure (Figure 187)

TOOLS REQUIRED:

J-33037 Band Apply Pin Tool

- 1. Install J-33037 as shown with apply pin (29).
- 2. Apply 11.0 N·m (100 in. lbs.) torque.
- 3. If white line "A" appears in the gage slot "B", pin length is correct.
- 4. Use pin selection chart to determine the correct pin length.


Inspect

- Pistons for
 - porosity or damage
 - ring groove damage
- Cover (15) for porosity or damage
- Seals for
 - nicks or cuts
 - freeness in the seal groove
- Springs for distortion
- Pin for wear or burrs

Important

Check servo bore in the case for any wear which may cut the servo seals.

7A1-52 700-R4 AUTOMATIC TRANSMISSION

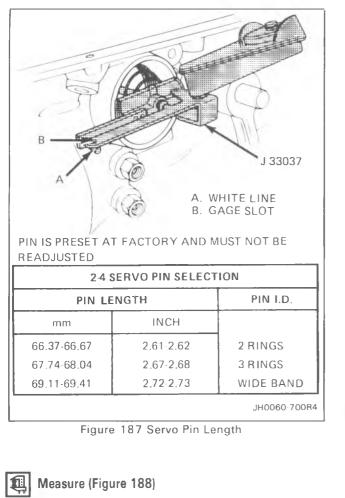

TOOLS REQUIRED:

- Vernier Calipers Scale
- 1. Measure Piston (25) Dimension *A
- 2. Measure housing (22) Dimension **B
- 3. Check Model Application

Assemble (Figures 189, 190, 191 and 192)

TOOLS REQUIRED:

J-22269-01

- J-29714
- 1. Cushion spring (26) into the 2nd apply piston (25)
- 2. Cushion spring retainer (27) on the cushion spring
- 3. Install J-22269-01.
 - compress the retainer past the snap ring groove in the 2nd apply piston.
 - install the retainer ring (28).
- 4. The 2nd apply piston (25) onto the apply pin (29) retainer goes toward the shoulder of the pin.
- 5. Servo apply pin spring (20) on the pin
- 6. Servo apply pin washer (19) and retaining clip (18)
- 7. Inner (23) and outer (24) seals on the 2nd apply piston
 - retain with petrolatum.
- 8. "O" ring seal (21) on servo piston housing

		ATION
MODEL	PISTON Dimension *A	HOUSING DIMENSION **B
YAM, YDM, YMM	44.64 mm (1.78")	45.54 mm (1.79")
FAM, FMM, MAM, MCM, MDM, MFM, MKM, MLM, MRM, MTM, MXM, PRM, TAM, TBM, THM, TJM, TKM, TLM, YNM, YPM, YTM, YXM	57.85 mm (2.28")	58.74 mm (2.31″)
FJM, MHM, MPM, MWM, MZM, PAM, PBM, PCM, TNM, TUM, TXM, YKM, YWM, YZM	63.10 mm (2.48″)	64.00 mm (2.52")
	7	ALS.
	B	


Figure 188 2nd Apply Piston and Housing Measurement

- 9. Servo piston inner housing (22) on the 2nd apply piston
- 10. Seal ring (17) onto the 4th apply piston
- 11. The 4th apply piston (16) onto the apply pin
- 12. Return spring (31) on the pin
- 13. Servo piston assembly into the servo bore
- 14. "O" ring seal (14) on the servo cover
 - lubricate the seal with transmission fluid.
- 15. Servo cover (15) into the servo bore
- 16. Install J-29714.
 - compress the servo cover.
 - install the retainer ring (13)

Governor Assembly



- Valve for free operation
- Weights for free operation
- Springs missing or distorted
- Sleeve for nicks, burrs, scored or galled
- Driven gear for damage

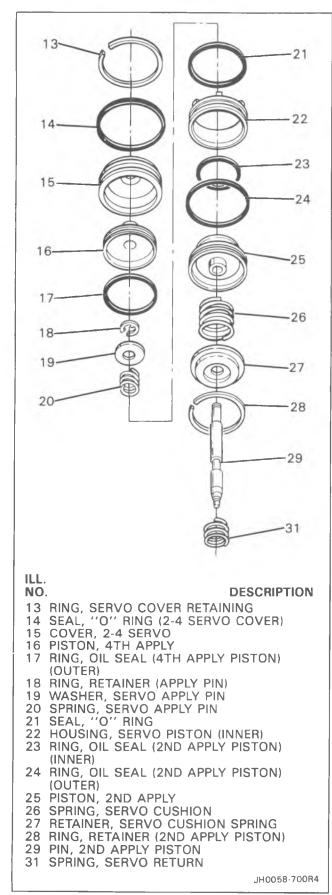

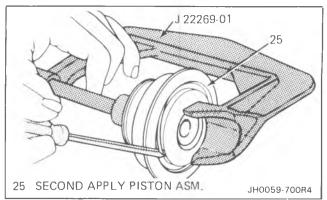


Figure 190 2nd Servo Piston - Assembly

Disassemble

DO NOT DISASSEMBLE EXCEPT, FOR CLEANING OR PART REPLACEMENT.

- 1. Cut off one end of each governor weight pin.
- 2. Pins (84)
- 3. Weights
- 4. Valve
- 5. Driven gear (83)
 - Drive out the retainer pin (82) with a small punch.
 - Support the governor assembly sleeve on plates installed in the exhaust slots. Push out the gear with an arbor press and a long punch.

🛄 Clean

✻


- Wash all parts in solvent.
- Air dry and blow out passages.

Assemble


- 1. Install a new governor drive gear.
 - support the governor or plates through the exhaust slots.
 - press gear (83) into the sleeve until seated.
 - drill a new retaining pin hole in the sleeve ninety degrees from the existing hole. Use a 3.0 mm (1/8 in.) drill.
 - Install retainer pin (82) and stake.
- 2. Valve into the sleeve
- 3. Weights, springs, and thrust cap onto the governor assembly
- 4. Retaining pins (84) into the thrust cap (85) and governor assembly
- 5. Stake the retaining pins (84).
- 6. Check for free operation of the valve and weights.

Figure 189 2-4 Servo Assembly

7A1-54 700-R4 AUTOMATIC TRANSMISSION

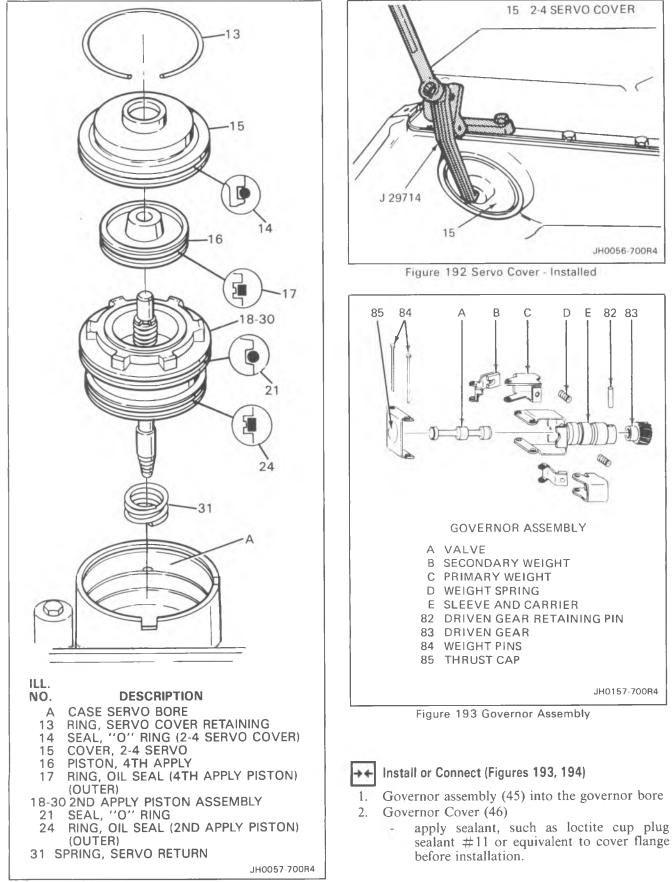



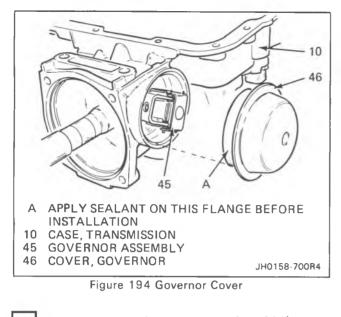

+ Install or Connect (Figures 195 thru 201)

MECHANICAL SPEEDOMETER TOOLS REQUIRED: J-23103 or J-25016 Seal Installer

- J-21426 Seal Installer
- 1. Speedometer drive gear (689) and clip (688)
 - if the output shaft has two speedometer locating holes, use the hole nearest the yoke spline for Corvette vehicles only.
- 2. "O" ring seal (691) on the output shaft sleeve
- 3. Output shaft sleeve (690) on the output shaft
 - use J-25016 or J-23103.
 - do not push the sleeve past the machined surface on the output shaft.
- 4. Seal ring (35) on the case extension
- 5. Case extension (36) and bolts (37) or, stud (100) and nut (98)
 - position extension so the speedometer bore is on the governor side of the case.
 - torque to 35 $N \cdot m$ (26 ft. lbs.)
- 6. Remove case extension oil seal (89)
 - pry out with a screwdriver
 - install new seal with J-21426
- 7. Speedometer driven gear (44) and assembly (43) or speed sensor (99)
- 8. Retainer (40) bolt and washer (41)
- 9. Outside electrical connector, manual lever and nut

Torque Converter Assembly

Inspect

- The torque converter assembly (1) must be replaced for any of the following conditions:
- Evidence of damage to the pump assembly
- Metal particles are found after flushing the cooler and cooler pipes

- External leaks in hub weld area
- Converter pilot is broken, damaged or poor fit into crankshaft
- Converter hub is scored or damaged
- Internal damage to stator
- Contamination from engine coolant
- Excess end play

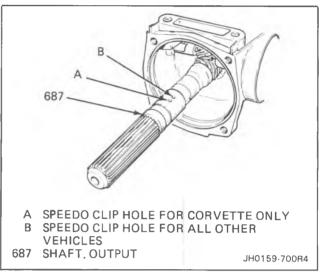


Figure 195 Speedo. Clip Holes

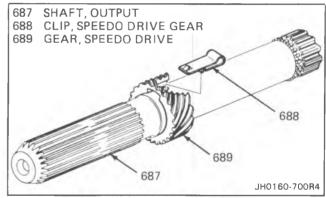


Figure 196 Speedometer Gear


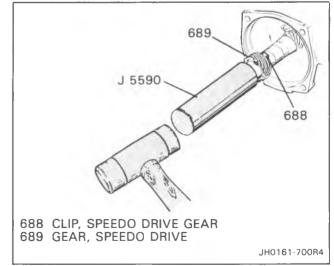


Figure 197 Speedo. Gear - Installation

7A1-56 700-R4 AUTOMATIC TRANSMISSION

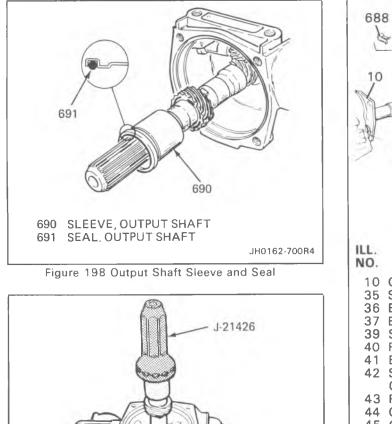

JH0163-700R4

Figure 199 Output Shaft Sleeve - Installation


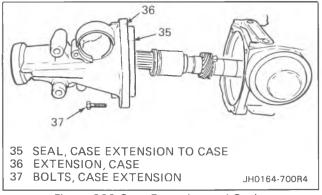


Figure 200 Case Extension and Seal

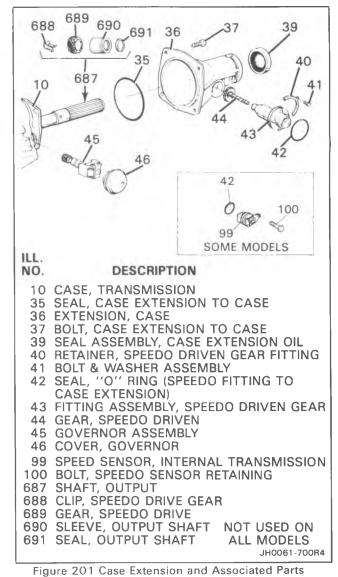

Measure (Figure 203)

- Tool Required: J-35138 Torque Converter End Play Checking Tool
 - Install J-35138 and measure end play
 - 0mm .5mm (.020") for 245mm Torque Converters
 - 0mm .6mm (.024") for 298mm Torque Converters
- The Torque Converter Should Not Be Replaced
- If:

- The fluid has an odor, discolored or no evidence of metal or clutch plate material
 - Drain out as much fluid as possible
 - Replace the oil filter and pan gasket
 - Fill to proper level (Refer to Section 7A)
- The converter bolt hole threads are damaged
 - Correct with thread insert (Refer to Section 6A)

Flushing the torque converter is not recommended.

→← Install or Connect

- 1. Torque converter (1)
- 2. J-21366 converter holding strap
- 3. Remove transmission from holding fixture

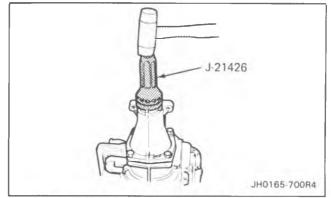


Figure 202 Case Extension Oil Seal Assembly


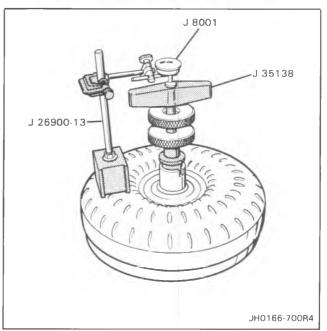


Figure 203 Checking Torque Converter End Play

7A1-58 700-R4 AUTOMATIC TRANSMISSION

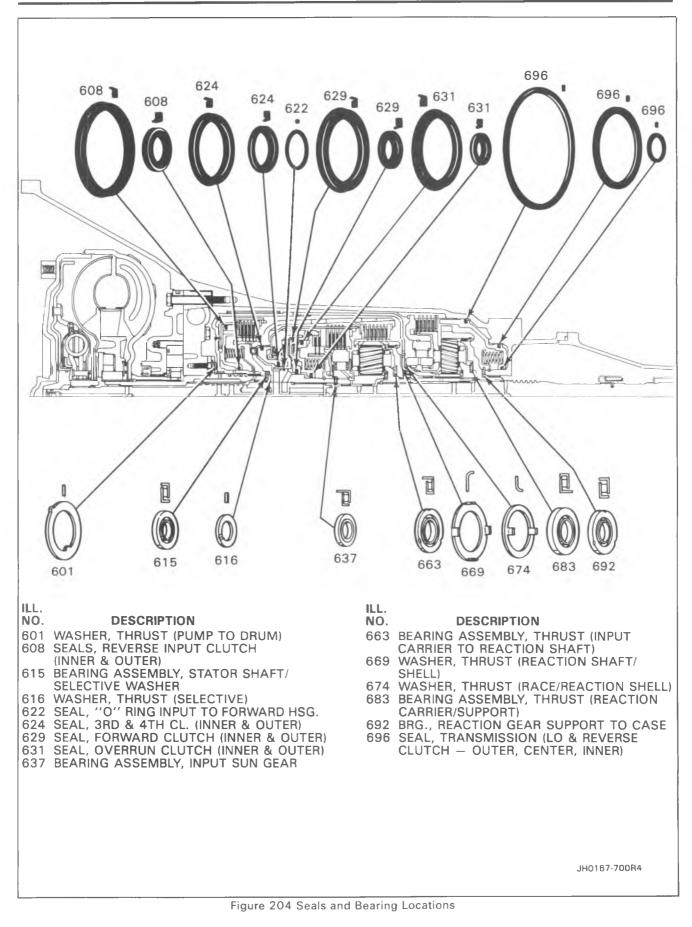

700-R4 AUTOMATIC TRANSMISSION 7A1-59


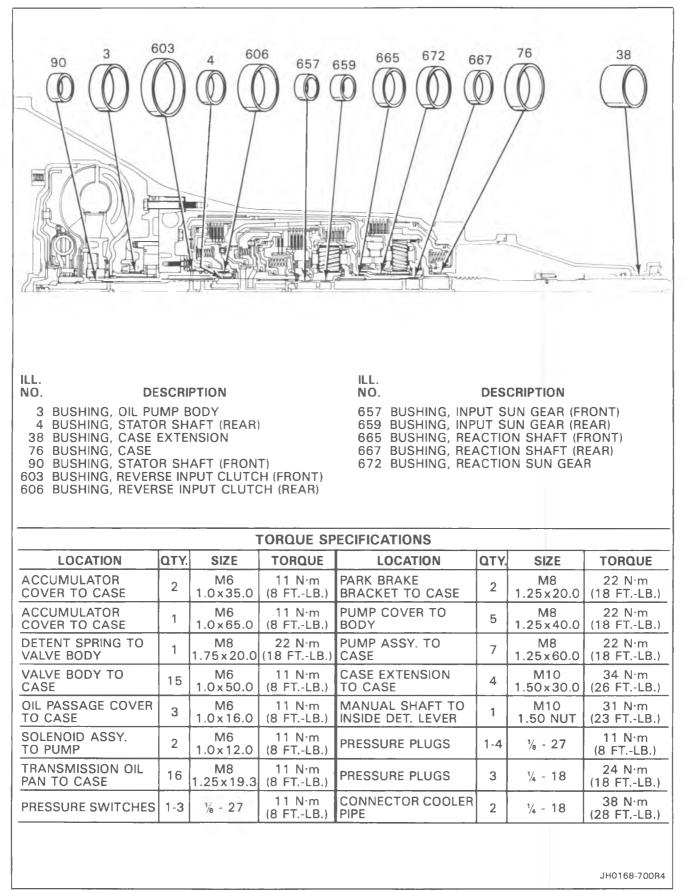



Figure 205 Torque Specifications and Bushing Locations




7A1-60 700-R4 AUTOMATIC TRANSMISSION

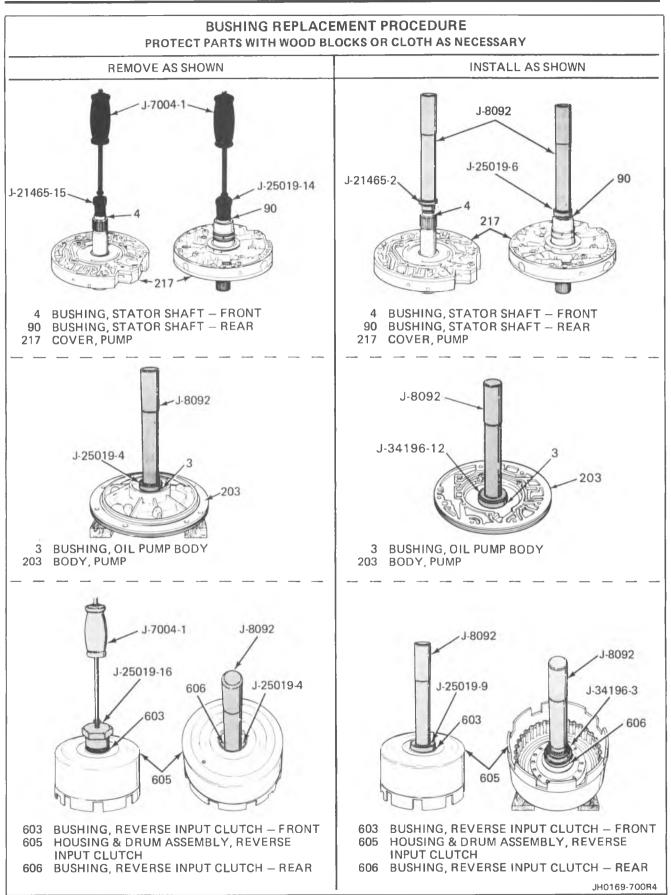

700-R4 AUTOMATIC TRANSMISSION 7A1-61

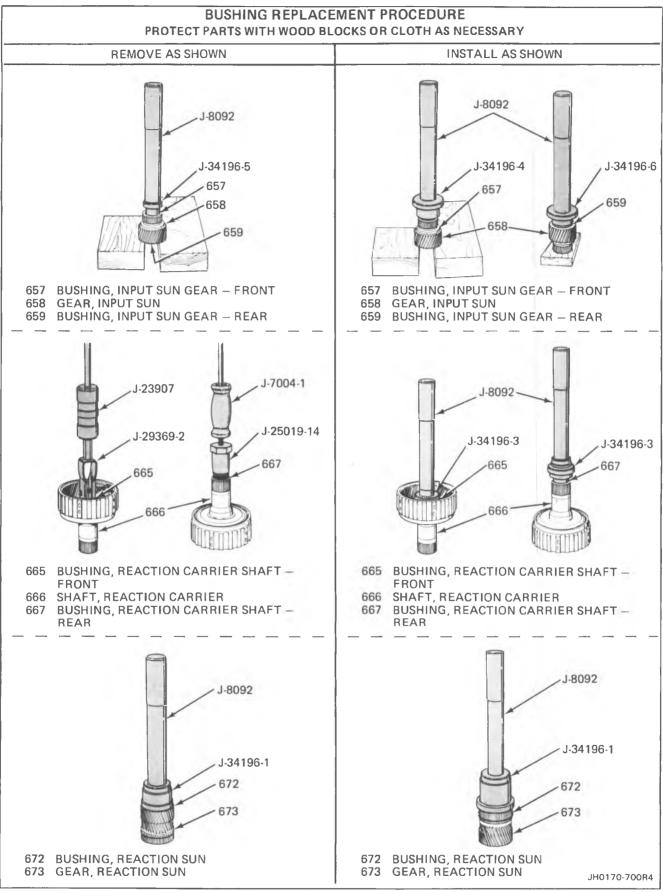



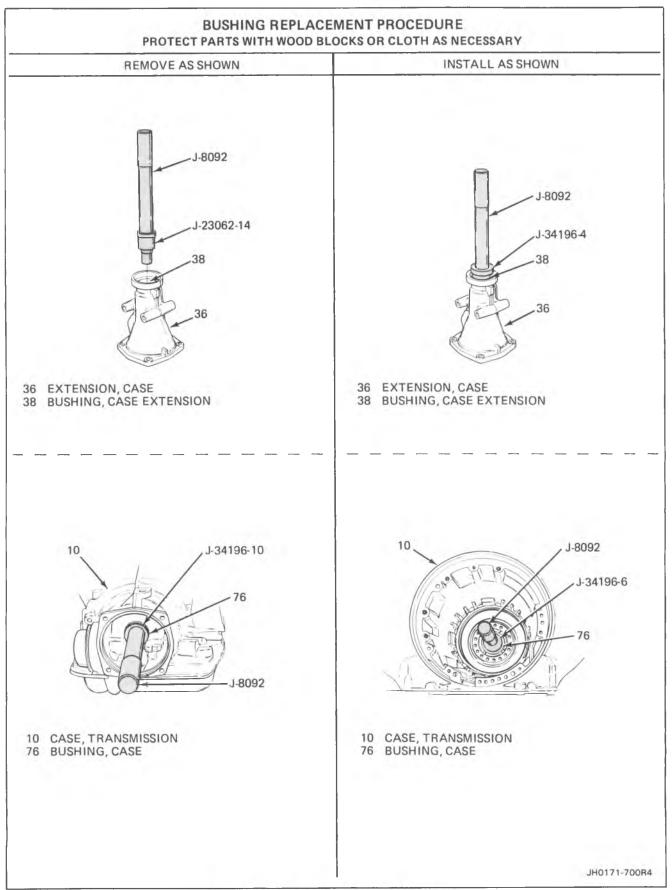

7A1-62 700-R4 AUTOMATIC TRANSMISSION



700-R4 AUTOMATIC TRANSMISSION 7A1-63

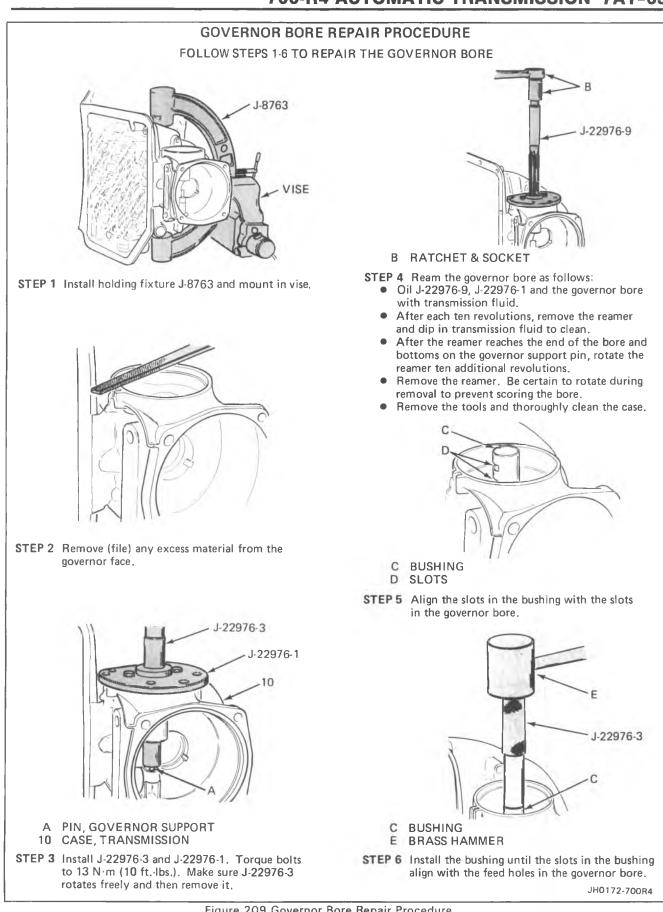


Figure 209 Governor Bore Repair Procedure





Figure 210 Special Tools

SECTION 7A2

400/475 AUTOMATIC TRANSMISSION

CONTENTS

TRANSMISSION DISASSEMBLY	7A2-	1
General Service Information	7A2-	1
Disassembly		
Vacuum Modulator Assembly	7A2-	3
Oil Pan & Filter Assembly	7 A 2-	4
Control Valve Assembly	7 A 2-	4
Solenoid Assembly	7 A 2-	4
Front and Rear Servo Assemblies	7A2-	4
*Band Apply Pin Check	7A2-	4
Governor Assembly	7A2-	5
Front End Play Check	7A2-	5
Case Extension Assembly	7A2-	6
Rear Unit End Play Check	7A2-	6
Oil Pump Assembly		
Parking Lock Pawl and Actuator		
Assembly	7A2-	7
*Forward Clutch Assembly		
*Direct Clutch Assembly		
*Intermediate Clutch Assembly		
Center Support and Gear Unit		
Assembly	7A2-	10
Transmission Case		
COMPONENT REPAIR AND		
TRANSMISSION ASSEMBLY	7A2-	15
Park Lock Pawl and Actuator		
Assembly	7A2-	15
Rear Band and Selective Thrust		
Washers	7A2-	16
Gear Unit and Output Carrier	=	
Assemblies	7A2-	16

*Speedometer Drive Gear
Speed Sensor Rotor Replacement7A2-16
Gear Unit Assembly7A2-17
Reaction Carrier Assembly
*Intermediate Clutch Piston7A2-20
Low Clutch Roller Assembly7A2-21
Direct Clutch and Intermediate
Roller Assembly
*Direct Clutch Piston
*Direct Clutch Assembly7A2-22
*Center Support and Gear Unit
Assembly
*Intermediate Clutch Assembly7A2-24
Direct Clutch Assembly and Front
Band
*Forward Clutch Assembly
Turbine Shaft Removal
Oil Pump Assembly
Pump Body
Gear Clearance
Pump Cover
Rear Unit End Play Check
Front Unit End Play Check
*Governor Assembly
Driven Gear Replacement
Rear Servo Accumulator Assembly
Front Servo Assembly7A2-35
Control Valve Assembly
Oil Pan and Filter Assembly7A2-39
Torque Converter7A2-40
TORQUE SPECIFICATIONS7A2-42
SPECIAL TOOLS
BUSHING REPLACEMENT7A2-45

*Designates significant product changes since the publication of the 1987 Service Manual.

TRANSMISSION DISASSEMBLY

GENERAL SERVICE INFORMATION

- Teflon Oil Seal Rings: During disassembly, check seals for damage and make sure that they rotate freely in their grooves. Inspect the grooves for dirt, burrs or other damage.
- Thrust washers and surfaces: These washers and the surfaces they engage may appear polished. This is a normal condition and does not indicate damage.
- Thoroughly clean the exterior of the transmission.

- As the unit is disassembled clean the assemblies or components so that proper inspection can be made.
- ←→ Remove or Disconnect (Figure 1)

Torque converter (1).




Install or Connect (Figure 3)

Tools Required:

J 3289-20 Base

J 8763-02 Holding Fixture

1. J 8763-02 onto transmission case.

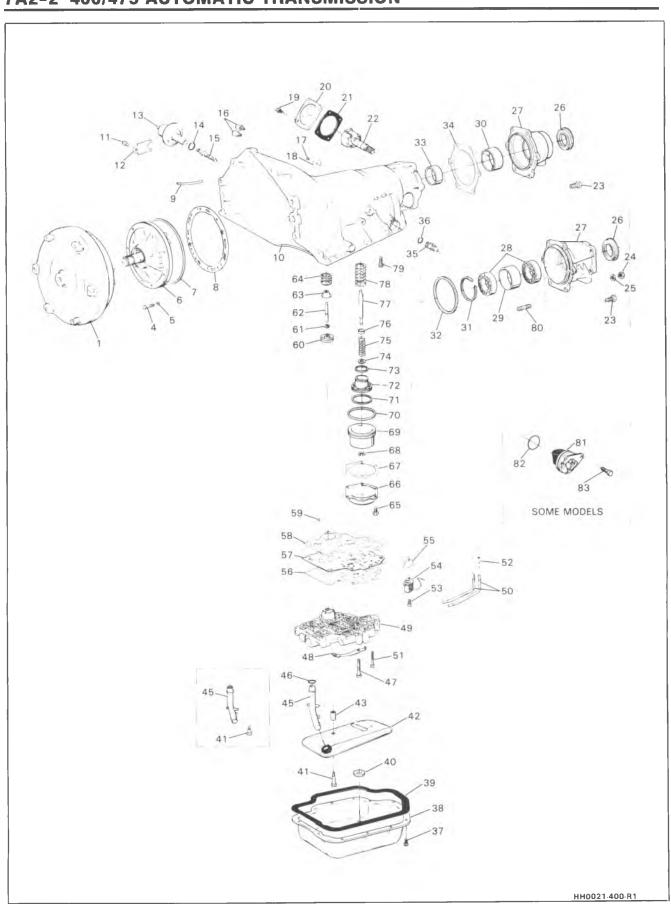

7A2-2 400/475 AUTOMATIC TRANSMISSION

Figure 1 - Case and External Parts

NO.DESCRIPTIONNO.DESCRIPTION1CONVERTER ASSEMBLY46SEAL, O-RING4BOLT, HEX HD 5/16-18 X 1.406 (PUMP TO CASE)47BOLT, HEX HD 5/16-18 X 1.875 (V.B. TO CASE)5WASHER, PUMP TO CASE BOLTS48MANUAL DETENT ROLLER & SPRING ASSEMBLY7SEAL, RING (PUMP TO CASE)50PIPE, GOVERNOR8GASKET, PUMP COVER TO CASE51BOLT9VENT, PIPE52SCREW, HEX HD & WASHER11BOLT, HEX HD 5/16-18 X .6254SOLENOID12RTAINER, MODULATOR55GASKET, SOLENOID13VACUUM MODULATOR ASSEMBLY56GASKET, SOLENOID14SEAL, O-RING57PLATE, VALVE BODY TO SPACER PLATE15CONNECTOR, COLER FITTING59BALL, (25" DIA.)16CONNECTOR, COLER FITTING59BALL, (25" DIA.)17SCREW, RAMEPLATE60PISTON, FRONT SERVO PISTON18NAMEPLATE61WASHER, FRONT SERVO PISTON19SCREW & CONICAL WASHER ASSEMBLY62PIN, FRONT SERVO PISTON20GOVERNOR ASSEMBLY63SCREW ASSEMBLY21GASKET, GOVERNOR COVER64SPRING, FRONT SERVO PISTON22GOVERNOR ASSEMBLY65CONTRE, FRONT SERVO OPISTON23BOLT, HEX HD 3/8-16 X 1 (CASE EXTENSION TO CASE)66GOVER, REAR SERVO24NUT, HEX HD 3/8-16 X 1 (CASE EXTENSION TO CASE)66GOVER REAR SERVO DISTON25SCASEGASKET, SCHOP OCVER65SEAL (ACUMULATO	ILL		ILL	
4BOLT, HEX HD 5/16-18 X 1.406 (PUMP TO CASE)47BOLT, HEX HD 5/16-18 X 1.875 (V.B. TO CASE)5WASHER, PUMP TO CASE BOLTS48MANUAL DETENT ROLLER & SPRING ASSEMBLY7SEAL, RING (PUMP TO CASE)50PIPE, GOVERNOR8GASKET, PUMP COVER TO CASE51BOLT9VENT, PIPE52SCREW, AKX MOR10CASE, TRANSMISSION53SCREW, HEX HD & WASHER11BOLT, HEX HD 5/16-18 X .6254SOLENOID ASSEMBLY12RETAINER, MODULATOR55GASKET, VALVE BODY TO SPACER PLATE14SEAL, O-RING57PLATE, VALVE BODY TO SPACER PLATE15VACUUM MODULATOR58GASKET, SPACER PLATE TO CASE16CONNECTOR, COCHER FITTING59BALL, (.25" DIA.)17SCREW, NAMEPLATE60PISTON18NAMEPLATE60PISTON19SCREW & CONICAL WASHER ASSEMBLY62PIN, FRONT SERVO19SCREW & CONICAL WASHER ASSEMBLY64SPRING, FRONT SERVO O PISTON20GOVER, GOVERNOR64SPRING, FRONT SERVO O PISTON21GASKET, SUBLY64SPRING, FRONT SERVO O SPRING22GOVERNOR COVER64SPRING, REAR SERVO COVER23BOLT, HEX HD 3/8-14 X (STUB)69PISTON, ACCUMULATOR REAR SERVO]24GASKET, CASE EXTENSION TO CASE)66COVER, REAR SERVO OSTON25SEAL, CASE EXTENSION69PISTON, ACCUMULATOR PISTON – OUTER)26SEAL, CASE EXTENSION71RING, CREAR	NO	DESCRIPTION	NC	DESCRIPTION
45 PIPE, INTAKE	$\begin{array}{c} 1 \\ 4 \\ 5 \\ 6 \\ 7 \\ 7 \\ 8 \\ 9 \\ 9 \\ 10 \\ 11 \\ 12 \\ 13 \\ 14 \\ 15 \\ 16 \\ 17 \\ 18 \\ 20 \\ 21 \\ 22 \\ 24 \\ 25 \\ 27 \\ 28 \\ 29 \\ 30 \\ 31 \\ 32 \\ 33 \\ 34 \\ 35 \\ 36 \\ 37 \\ 38 \\ 39 \\ 40 \\ 41 \\ 43 \\ \end{array}$	CONVERTER ASSEMBLY BOLT, HEX HD 5/16-18 X 1.406 (PUMP TO CASE) WASHER, PUMP TO CASE BOLTS PUMP ASSEMBLY SEAL, RING (PUMP TO CASE) GASKET, PUMP COVER TO CASE VENT, PIPE CASE, TRANSMISSION BOLT, HEX HD 5/16-18 X .62 RETAINER, MODULATOR VACUUM MODULATOR ASSEMBLY SEAL, O-RING VALVE, VACUUM MODULATOR CONNECTOR, COOLER FITTING SCREW, NAMEPLATE NAMEPLATE SCREW & CONICAL WASHER ASSEMBLY COVER, GOVERNOR GASKET, GOVERNOR GASKET, GOVERNOR GASKET, GOVERNOR GASKET, GOVERNOR GASKET, GOVERNOR COVER, GOVERNOR GASKET, GOVERNOR SCREW, AMEPLATE SCREW & CONICAL WASHER ASSEMBLY COVER, GOVERNOR GASKET, GOVERNOR GASKET, GOVERNOR GASKET, GASE MBLY BOLT, HEX HD 3/8-16 X 1 (CASE EXTENSION TO CASE) NUT, HEX 3/8-24 (STUD) WASHER, FLAT SEAL, CASE EXTENSION CASE EXTENSION ASSEMBLY BEARING ASSEMBLY SPACER, BEARING BUSHING, CASE EXTENSION RING, INTERNAL SNAP SEAL, CASE EXTENSION TO CASE BUSHING GASKET, CASE TO EXTENSION CONNECTOR, ELECTRICAL ŞEAL, O-RING SCREW & CONICAL WASHER ASSEMBLY PAN, TRANSMISSION OIL PAN MAGNET, CHIP COLLECTOR BOLT, SHOULDER (FILTER TO VALVE BODY) FILTER ASSEMBLY, TRANSMISSION OIL SPACER, VALVE BODY TO FILTER	46 47 48 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63 64 65 66 66 70 71 72 73 74 75 76 79 80 81 82	SEAL, O-RING BOLT, HEX HD 5/16-18 X 1.875 (V.B. TO CASE) MANUAL DETENT ROLLER & SPRING ASSEMBLY CONTROL VALVE ASSEMBLY PIPE, GOVERNOR BOLT SCREEN ASSEMBLY, GOVERNOR SCREEN ASSEMBLY, GOVERNOR SCREEN ASSEMBLY GASKET, SOLENOID GASKET, SOLENOID GASKET, SOLENOID GASKET, VALVE BODY TO SPACER PLATE PLATE, VALVE BODY SPACER GASKET, SPACER PLATE TO CASE BALL, (.25" DIA.) PISTON, FRONT SERVO WASHER, FRONT SERVO PIN, FRONT SERVO PISTON RETAINER, FRONT SERVO PISTON BOLT, HEX HD 5/16-18 X .62 (SERVO COVER TO CASE) COVER, REAR SERVO GASKET, REAR SERVO COVER RING, RETAINING (SERVO PISTON) PISTON, ACCUMULATOR (REAR SERVO) SEAL, REVERSE SERVO PISTON RING, OIL SEAL (ACCUMULATOR PISTON — OUTER) PISTON, ACCUMULATOR RING, OIL SEAL (ACCUMULATOR PISTON — INNER) WASHER, SERVO ASSEMBLY SPRING, REAR SERVO PIN, REAR SERVO SPRING, REAR SERVO PIN, REAR SERVO SPRING PING, OIL SEAL (ACCUMULATOR PISTON — INNER) WASHER, SERVO ASSEMBLY SPRING, REAR SERVO PIN, REAR SERVO SPRING, SEED SENSOR

Figure 2 - Case and External Parts Legend

HH0022-400-R1

Important

Do not overtighten the tool as case damage may result.

- 2. Transmission and holding fixture into J 3289-20.
- 3. Fixture pin.
- 4. Drain transmission fluid.

DISASSEMBLY

Vacuum Modulator Assembly

Remove or Disconnect (Figure 4)

Tool Required:

Magnet to capture modulator valve

- 1. Bolt (11) and retainer (12).
- 2. Vacuum modulator assembly (13), and o-ring seal (14)
 - o-ring seal may be stuck in case
- 3. Modulator valve (15) with magnet.

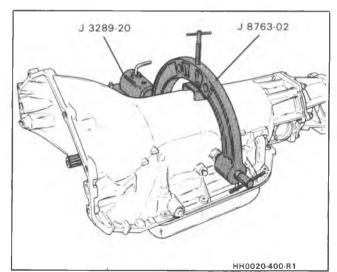


Figure 3 - Transmission Holding Fixture and Base

7A2-4 400/475 AUTOMATIC TRANSMISSION

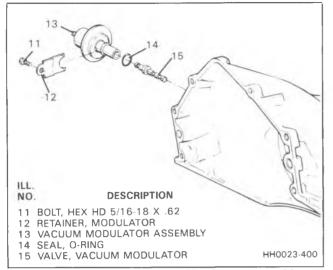


Figure 4 - Removing Vacuum Modulator Assembly

Oil Pan & Filter Assembly

Remove or Disconnect (Figure 5)

- 1. Rotate transmission upside down and lock in place with base pin.
- 2. Oil pan bolts (37)
- 3. Oil pan (38), gasket (39) and magnet (40).
- 4. Oil filter bolt (41), spacer (43), filter (42), intake pipe (45), and o-ring seal (46)
 - o-ring seal may be stuck in case

Control Valve Assembly

←→ Remove or Disconnect (Figure 6)

- 1. Bolts (47), manual detent spring and roller (48).
- 2. Bolts (51)
- 3. Governor oil pipes (50) up from case and rotate them away from their holes.
- 4. Governor oil screen (52) from the inboard hole.
- 5. Control valve assembly (49).

Solenoid Assembly

Remove or Disconnect (Figure 6)

Tool Required:

Magnet to capture check balls

- 1. Wire connecting solenoid (54) to exterior electrical connector.
- 2. Screws (53) and solenoid (54).
 - Be careful not to press against solenoid cover.
- 3. Valve body to spacer plate gasket (56), spacer plate (57) and spacer plate to case gasket (58).
- 4. Six check balls (59) with magnet

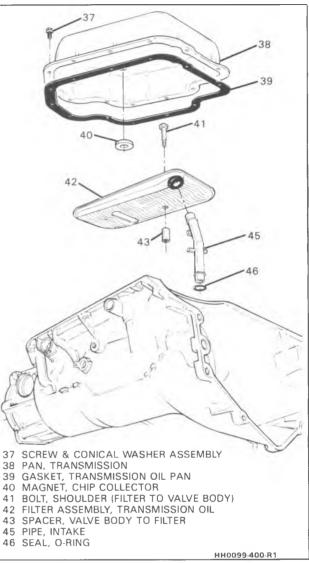


Figure 5 - Removing Oil Pan & Filter Assembly

Front and Rear Servo Assemblies

++

Remove or Disconnect (Figures 7 and 8)


- 1. Front servo piston assembly (60-62), retainer (63) and spring (64).
- 2. Rear servo bolts (65), cover (66) and gasket (67).
- 3. Rear servo accumulator assembly (68 78)

Band Apply Pin Check

Measure (Figures 9, 10 and 11)

Tools Required:

- J 21370-10 Gage Pin
- J 21370-6 Selector Gage
- 1. Place J 21370-10 in the servo pin bore.
- 2. Position J 21370-6 over the bore with the hex nut facing the parking pawl linkage.
- 3. Fasten with two 5/16-18 X 1" screws and torque to 18 lbs./ft. (24 N·m)
- 4. Make sure J 21370-10 moves freely in the tool and pin bore.

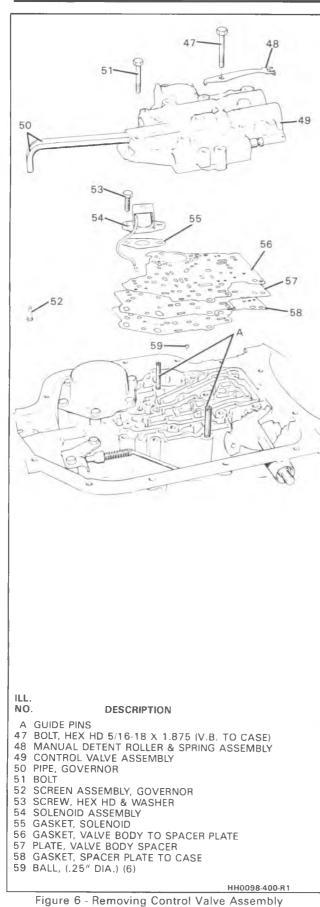

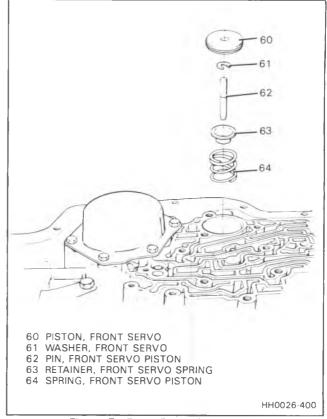


Figure 7 - Front Servo Assembly

- 5. To determine correct pin length apply 25 lbs./ft. torque to the nut on the gage.
- 6. For pin selection, see Figure 11.

Governor Assembly

←→ Remove or Disconnect (Figure 12)

- 1. Bolts (19), cover (20) and gasket (21)
- 2. Governor assembly (22)

Internal Transmission Speed Sensor (I.T.S.S.) Models

- 3. Retaining bolt (83)
- 4. Speed sensor (81) with o-ring (82)


Front End Play Check

Measure (Figures 13 and 14)

Tools Required:

- J 6125 Slide Hammer Bolt
- J 8001 Dial Indicator
- 1. Remove oil pump bolt (4) and washer (5) at the 10-o'clock position as shown and install J 6125.
- 2. Attach J 8001.
- 3. Eliminate slack by pressing turbine shaft to the rear and output shaft (691) forward.
- 4. Index J 8001 against the end of turbine shaft and set dial to "0".
- 5. Pull out on the turbine shaft and note the measurement on J 8001. End play should be between .003" and .024" (.076-.610 mm)

7A2-6 400/475 AUTOMATIC TRANSMISSION

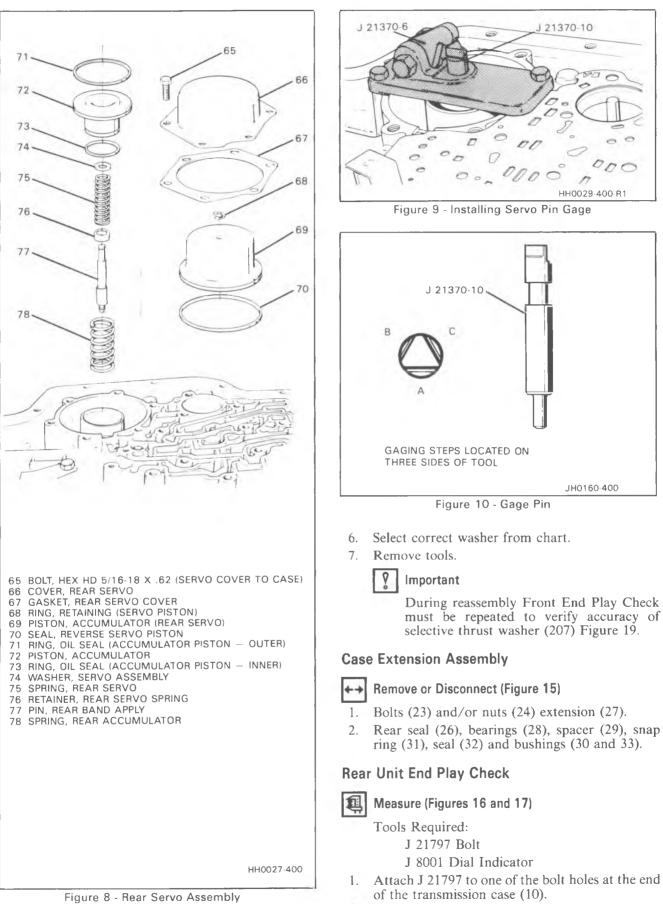

2. Mount J 8001 on the bolt and index it to the end of the output shaft (691).

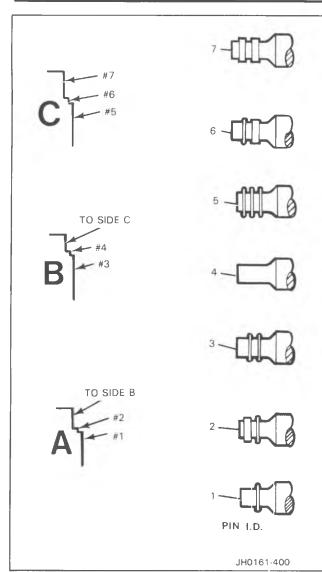


Figure 11- Band Apply Pin Selection Chart

- set the indicator to "0".
- 3. Move the output shaft in and out noting the amount of end play.
 - correct end play is between .007" and .019" (.178 - .483 mm)

9 Important

> During reassembly, Rear End Play Check must be repeated to verify accuracy of selective thrust washer (696) Figure 27.


Oil Pump Assembly

Remove or Disconnect (Figures 18 and 19) **←→**

Tool Required:

J 24773-1 Oil Pump Remover

- 1. Bolts (4) and washers (5).
- 2. Oil pump assembly (6).
- 3. Pump seal (7) and gasket (8).

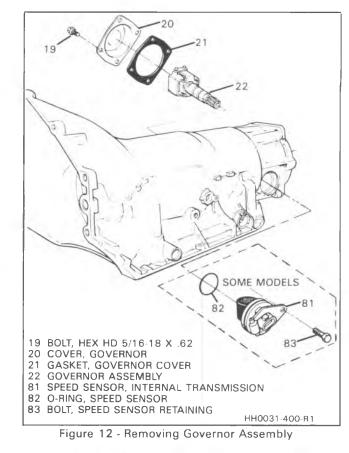

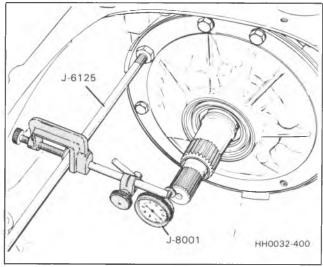


Figure 13 - Front Unit End Play Check

Parking Lock Pawl and Actuator Assembly

++ Remove or Disconnect (Figure 20 and 21)

- Nut (703) and pin (704). 1.
- Detent lever (707) and actuator (708). 2.
- Bolts (701) and parking pawl bracket (702). 3.
- Spring (710) and retainer (711). 4.
- 5. Shaft (712) and plug (709).

7A2-8 400/475 AUTOMATIC TRANSMISSION

THICKNESS (INCH)	COLOR	NO.
.060064	Yellow	0
.071075	Blue	1
.082086	Red	2
.093097	Brown	3
.104108	Green	4
.115 = .119	Black	5
.126130	Purple	6
	I	HH0033-40

Figure 14 - Selective Thrust Washer (207)

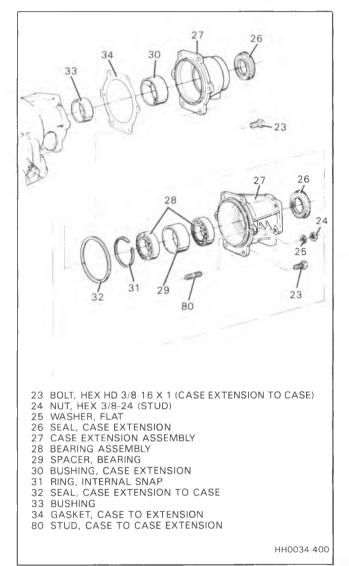


Figure 15 - Removing Case Extension Assembly

Forward Clutch Assembly



Remove or Disconnect (Figure 22)

• Forward clutch assembly (602-618).



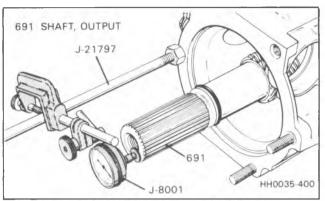


Figure 16 - Checking Rear Unit End Play

THICKNESS (INCH)	IDENTIFICATION NOTCH AND/OR NUMERAL	
.074078	None	1
.082086	ON SIDE OF 1 TAB	2
.090094	ON SIDE OF 2 TABS	3
.098102	ONE END OF 1 TAB	4
.105110	ON END OF 2 TABS	5
.114118	ON END OF 3 TABS	6
	ННО	 036-400



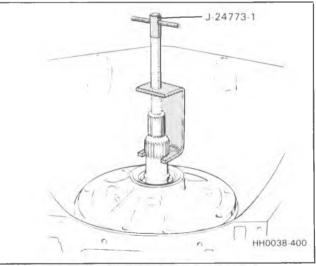


Figure 18 - Removing Pump Assembly

Direct Clutch Assembly



- Remove or Disconnect (Figures 23)
- 1. Direct clutch assembly (619 638)
- 2. Front band (639)

Intermediate Clutch Assembly

- ++ Remove or Disconnect (Figure 24)
- 1. Snap ring (640).

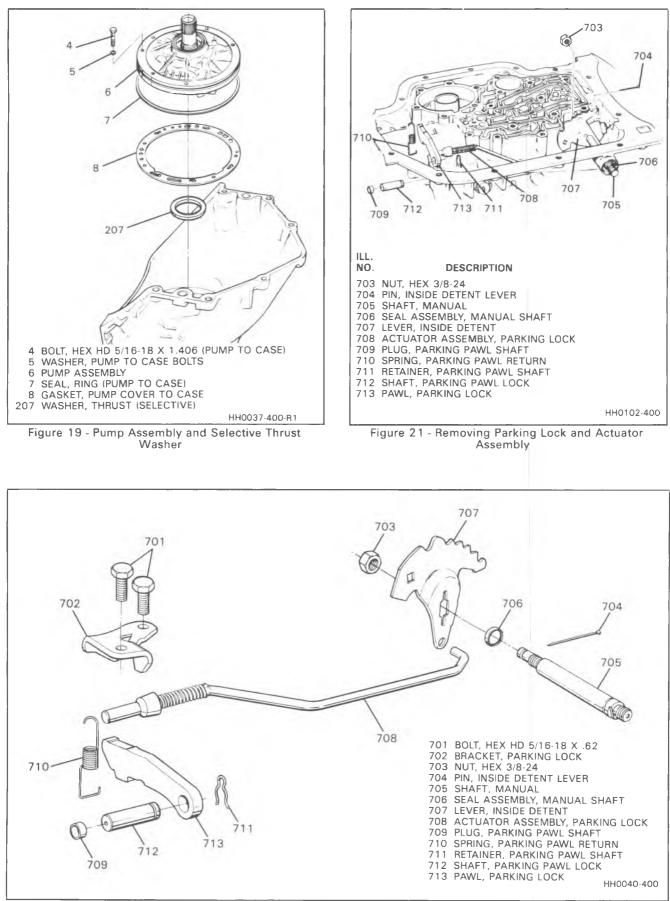


Figure 20 - Park Lock Pawl and Actuator Assembly

7A2-10 400/475 AUTOMATIC TRANSMISSION

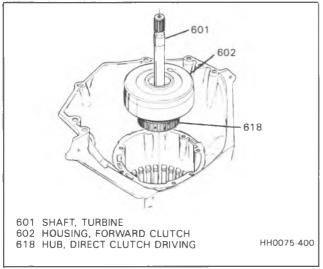


Figure 22 - Removing Forward Clutch Assembly

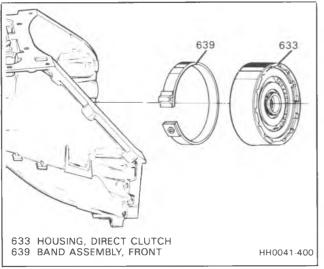


Figure 23 - Removing Direct Clutch Housing

- 2. Intermediate clutch backing plate (641).
- 3. Clutch plates (642 and 643).
- 4. Waved plate (644) when part of assembly.


Center Support and Gear Unit Assembly

Remove or Disconnect (Figures 25, 26 and 27)

Tool Required:

J 6116 Gear Unit Holding Fixture J 21795 Main Shaft Tool.

- 1. Center support bolt (79)
- 2. Snap ring (645)
- 3. Center support assembly (646-654)
- 4. Sun gear shaft (664)
- 5. Gear unit assembly (656-697)place in J 6116 fixture
- 6. Rear band (672), thrust washer (695), selective thrust washer (696).

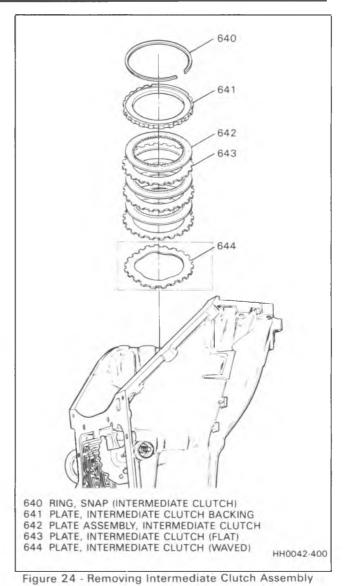

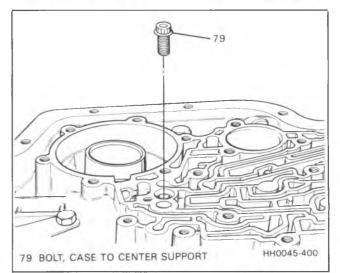


Figure 25 - Removing Center Support Bolt

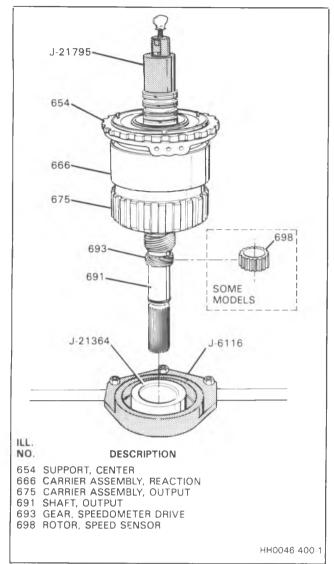


Figure 26 - Removing Center Support and Gear Unit Assembly

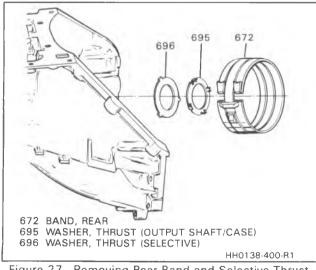


Figure 27 - Removing Rear Band and Selective Thrust Washer

Transmission Case

Inspect (Figure 30)

- Case (10) for cracks, porosity and connected passages.
- Case extension (27) for cracks, porosity, scored bushing (30).
- All threaded holes for damage.
- Heli-coil to repair. Air check all oil passages
 - see Diagnosis Section for oil passage identification.
- Front and rear servo bores for damage, porosity, or burrs.
- Cooler connectors (16) for
 - damage
 - proper torque 26-30 lbs. ft. (35-41 N·m)
- Intermediate clutch plate lugs for damage or hardening (brinelling).
- Snap ring grooves for damage.
- Governor and modulator bores for scoring or damage.

7A2-12 400/475 AUTOMATIC TRANSMISSION


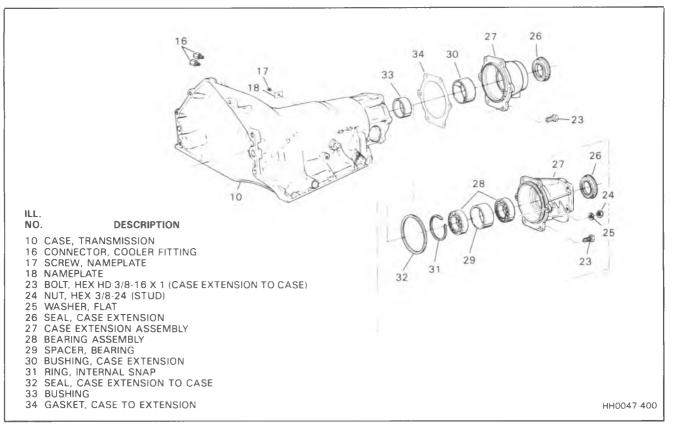


Figure 28 - Transmission Case And Extension Assembly

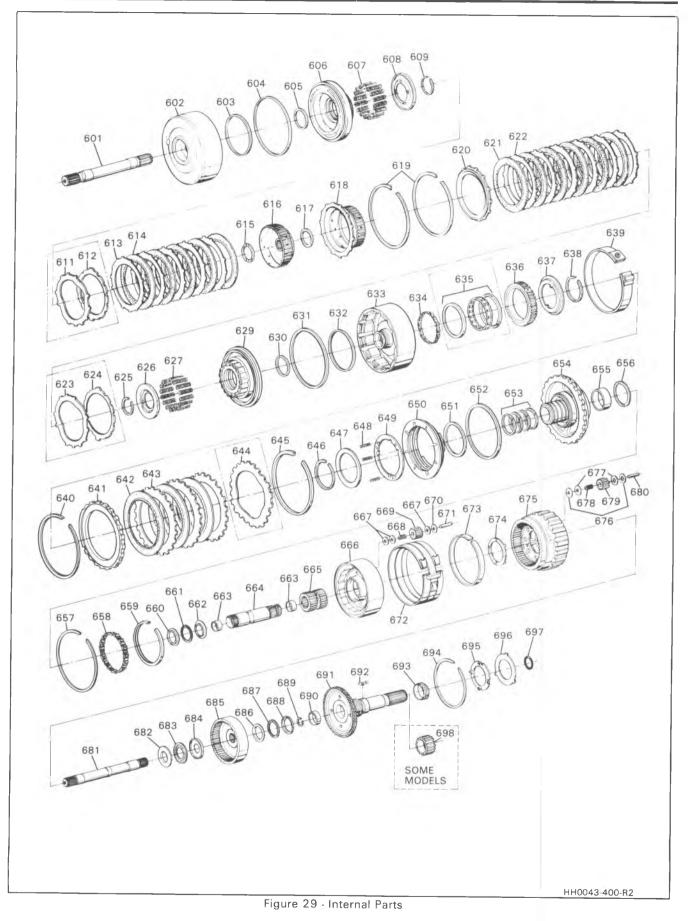

7A2-14 400/475 AUTOMATIC TRANSMISSION

ILL.		649	GUIDE, INTERMEDIATE CLUTCH
NO.	DESCRIPTION		PISTON, INTERMEDIATE CLUTCH
NO.	Description		
601	SHAFT, TURBINE		SEAL, INTERMEDIATE CLUTCH (INNER)
001	SHAFT, TURBINE HOUSING, FORWARD CLUTCH SEAL, FORWARD CLUTCH (CENTER) SEAL, FORWARD CLUTCH PISTON (OUTER)	652	SEAL, INTERMEDIATE CLUTCH (OUTER)
602	HOUSING, FORWARD CLUICH		RING, OIL SEAL (PUMP COVER)
603	SEAL, FORWARD CLUTCH (CENTER)		
604	SEAL FORWARD CLUTCH PISTON (OUTER)		SUPPORT, CENTER
007		655	BUSHING
005	SEAL, FORWARD CEUTCH FISTON (INNER)	656	WASHER, THRUST (SUPPORT/REACTION DRUM)
606	PISTON, FORWARD CLUTCH		, , , , , , , , , , , , , , , , , , , ,
607	SPRING, PISTON RELEASE (16)		RING, SNAP (CENTER SUPPORT/CASE)
1		658	ROLLER ASSEMBLY, LOW CLUTCH
	RETAINER, RELEASE SPRING	659	RING, REACTION DRUM SPACER
609	RING, SNAP		RACE, THRUST BEARING TO CENTER SUPPORT
L 611	PLATE, CLUTCH (WAVED)		
	PLATE, FORWARD CLUTCH (DISHED)		BEARING, NEEDLE THRUST
		662	RACE, THRUST BEARING TO CENTER SUPPORT
	PLATE, CLUTCH (FLAT)	663	BUSHING, STATOR SHAFT (MAIN SHAFT)
614	PLATE ASSEMBLY, CLUTCH		
615	WASHER, THRUST (CLUTCH HUB TO HOUSING)		SHAFT, SUN GEAR
		665	GEAR, SUN
	HUB, FORWARD CLUTCH	666	CARRIER ASSEMBLY, REACTION
617	WASHER, THRUST (FWD. CL. HUB/DIR. CL. HSG.)		
618	HUB, DIRECT CLUTCH DRIVING		WASHER, PINION THRUST (STEEL)
	RING, SNAP	668	ROLLER, NEEDLE BEARING (REACTION CARRIER)
		669	PINION, PLANET (REACTION CARRIER)
620	PLATE, DIRECT CLUTCH BACKING		WASHER, PINION THRUST (BRONZE)
621	PLATE ASSEMBLY, CLUTCH		
	PLATE, CLUTCH		PIN, PLANET PINION (REACTION CARRIER)
· · ·		672	BAND, REAR
	PLATE, CLUTCH (WAVED)	673	RING, FRONT INTERNAL GEAR
624	PLATE, DIRECT CLUTCH (DISHED)		
625	RING, SNAP (DIRECT CLUTCH)		WASHER, FRONT INTERNAL/REACTION CARRIER
1	RETAINER, RELEASE SPRING	675	CARRIER ASSEMBLY, OUTPUT
	,	676	WASHER, PINION THRUST (BRONZE)
627	SPRING, PISTON RELEASE		WASHER, PINION THRUST (STEEL)
629	PISTON, DIRECT CLUTCH		
630	SEAL, CLUTCH INNER		ROLLER, NEEDLE BEARING (OUTPUT CARRIER)
000	SEAL, CLUTCH OUTER	679	PINION, PLANET (OUTPUT CARRIER)
		680	PIN, PLANET PINION (OUTPUT CARRIER)
632	SEAL, CLUTCH CENTER		SHAFT, TRANSMISSION MAIN
633	HOUSING, DIRECT CLUTCH		
634	ROLLER ASSEMBLY INTERMEDIATE CLUTCH	682	RACE, THRUST BEARING TO SUN GEAR
0.54	ROLLER ASSEMBLY, INTERMEDIATE CLUTCH	683	BEARING, NEEDLE THRUST
030	SFRAG ASSEMBLI		RACE, THRUST BEARING TO REAR INTERNAL GEAR
636	RACE, INTERMEDIATE CLUTCH		,
637	RETAINER, INTERMEDIATE CLUTCH		GEAR, REAR INTERNAL
	RING, SNAP	686	RACE, THRUST BEARING TO SUN GEAR
		687	BEARING, NEEDLE THRUST
639	BAND ASSEMBLY, FRONT		RACE, THRUST BEARING TO OUTPUT SHAFT
640	RING, SNAP (INTERMEDIATE CLUTCH)		
		689	RING, SNAP
		690	BUSHING, OUTPUT SHAFT
642	PLATE, INTERMEDIATE CLUTCH BACKING PLATE ASSEMBLY, INTERMEDIATE CLUTCH PLATE. INTERMEDIATE CLUTCH (FLAT)		SHAFT, OUTPUT
643	PLATE, INTERMEDIATE CLUTCH (FLAT)		
	PLATE, INTERMEDIATE CLUTCH (WAVED)		CLIP, SPEEDOMETER DRIVE GEAR
		693	GEAR, SPEEDOMETER DRIVE
	RING, SNAP	694	RING, SNAP (OUTPUT/FRONT INT. GEAR)
646	RING, SNAP (INTERMEDIATE CLUTCH)		
647	RETAINER, INTERMEDIATE CLUTCH SPRING		WASHER, THRUST
1	SPRING, INTERMEDIATE CLUTCH RELEASE	696	WASHER, OUTPUT/CASE SELECTIVE THRUST
040	SENING, INTERVIEDIATE GEOTOT RELEASE	697	SEAL, O-RING (OUTPUT SHAFT)
1			
1		020	ROTOR, SPEED SENSOR HH0044-400-R2

Figure 30 - Internal Parts - Legend

TRANSMISSION ASSEMBLY

Park Lock Pawl and Actuator Assembly

Inspect

- Parking pawl (713) for cracks burrs, damage
- Parking pawl shaft (712) for damage and freeness of fit
- Parking pawl return spring (710) for distortion or damage
- Detent lever (707) and actuator (708) for:
 Damage or cracks
- Manual shaft for damage

++ Install or Connect (Figures 31 and 32)

- 1. Parking pawl (713).
- 2. Pawl shaft (712).
- 3. Plug (709).
- 4. Retainer (711).
- 5. Pawl return spring (710).
- 6. Detent lever (707) to actuator (708).
- 7. Actuator (708) under parking pawl (713).
- 8. Manual shaft (705) and seal (706).
- 9. Nut (703) on shaft (705).
- 10. Pin (704).
- 11. Parking lock bracket (702) with bolts (701).

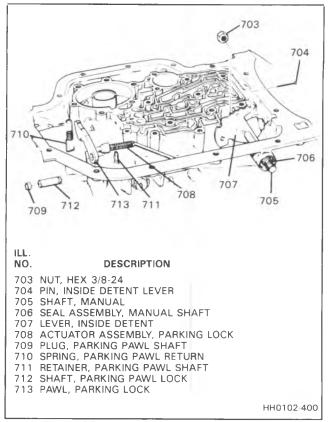


Figure 32 - Installing Park Lock Assembly

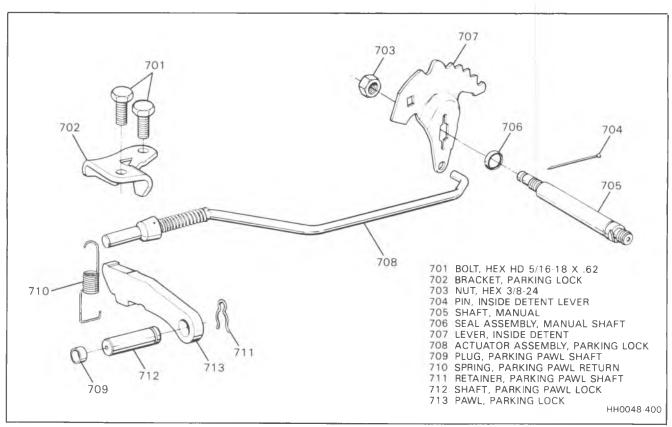


Figure 31 - Park Lock Pawl and Actuator Assembly

7A2-16 400/475 AUTOMATIC TRANSMISSION

Rear Band and Selective Thrust Washer



Inspect (Figure 33)

Rear band (672) and thrust washer (696) for: wear or damage

Install or Connect (Figure 33)

- 1. Selective thrust washer (696) from Rear End Play Check.
- 2. Output shaft to case thrust washer (695).
- 3. Rear band (672).

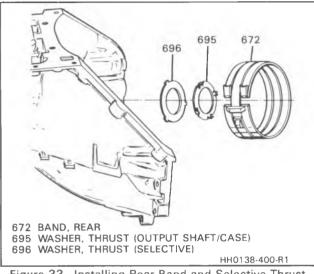


Figure 33 - Installing Rear Band and Selective Thrust Washer

Gear Unit and Output Carrier Assemblies

Disassemble (Figure 34)

- 1. Thrust bearing (661) and races (660, 662).
- 2. Reaction carrier (666)
- 3. Sun gear (665), thrust washer (674) and front internal gear ring (673).
- 4. Snap ring (694), output shaft (691) and o-ring (697).
- 5. Thrust bearing (683) and races (682 and 684) from rear internal gear (685).
- 6. Rear internal gear (685) and main shaft (681).
- 7. Snap ring (689) from main shaft (681).
- 8. Races (686 and 688) and bearing (687).

Inspect (Figures 34 and 35)

- Output shaft (691) for:
 - damaged splines
 - worn or damaged governor drive gear teeth
- Output shaft bushing (690) for:
 - wear, scoring or galling
 - See Bushing Replacement Procedure
- Speedometer drive gear (693) for:
- wear or cracks
- Main shaft (681) for:
 - scored, damaged or worn bushings (see Bushing Replacement Procedure)

- cracks
- damaged splines
- Rear internal gear (685) for:
 - stripped splines
 - damaged teeth
 - cracks
- Output carrier assembly (675) for:
 - damaged lugs
 - pinion gear damage
 - excess pinion washer wear (end play should be .009"-.024"/.228-.610 mm)
- Front internal gear ring (673) for:
 - damage
 - cracks

SPEEDOMETER DRIVE GEAR/SPEED SENSOR ROTOR REPLACEMENT (FIGURE 36)

- Tools Required:
 - J 21427-01 Speedometer Gear Puller Adapter
 - J 8433 Speedometer Gear Puller
 - J 5590 Speedometer Gear Installer
 - J 36352-3 Rotor Installer/Mechanical Press J 36352-5 Rotor Installer/Mechanical Press Do not remove rotor (698) unless damaged. After removal a new rotor must be installed to insure press fit to output shaft.
- 1. Install J 21427-01 and J 8433 puller.
- 2. Depress clip (692) and remove gear (693) or rotor (698).
- Install rotor (698) using J 36352-3 or J 36352-5. Install speedometer drive gear (693) and clip (692) using J 5590.

Pinion Gear Replacement Procedure - Output Carrier Assembly

+

←→ Remove or Disconnect (Figures 37 and 38)

1. Stake marks from pinion pins (680) with 1/2" drill.

? Important

Do not allow drill to remove stock from carrier. Excessive removal of material will weaken carrier.

- 2. Pinion pins (680) from carrier (675).
- 3. Pinion gears (679) thrust washers (676, 677) and roller needle bearings (678).


Inspect (Figures 38 and 39)


•

- Pinion pocket thrust faces for burrs.
- Output carrier (675) for:
 - cracks, damage or wear

- Assemble (Figures 38 and 39)

- 1. Needle bearings (678) in pinion gears (679).
- 2. Bronze (676) and steel (677) thrust washers on each side of pinion gears.
 - steel washers are next to pinion gears

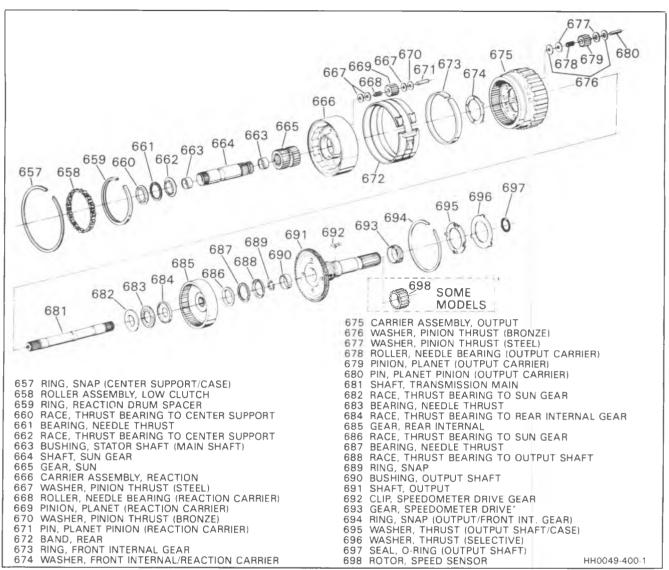

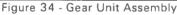

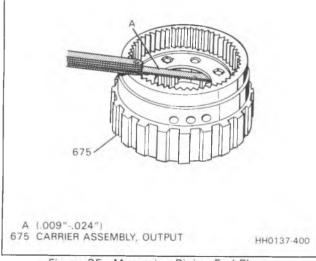


Figure 35 - Measuring Pinion End Play

- 3. Pinion gear assemblies into carriers (675).
- 4. Pinion pins (680).

- headed end of pins must be flush with carrier face.
- 5. Stake pins at three points with blunt chisel.
 - pins must not extend beyond carrier surface

Gear Unit Assembly

Assemble (Figure 40)

- 1. Race (682) thrust bearing (683), and race (684) on grooved end of mainshaft (681).
- 2. Main shaft (681) into rear internal gear (685).
- 3. Race (686), bearing (687) and race (688) on main shaft (681).
- 4. Snap ring (689) on main shaft (681).
- 5. Main shaft assembly (681-689) to output shaft (691).
- 6. Snap ring (694).
- 7. o-ring seal (697).

7A2-18 400/475 AUTOMATIC TRANSMISSION


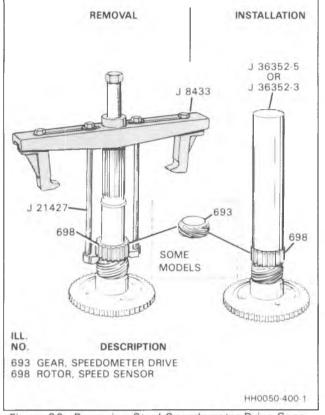


Figure 36 - Removing Steel Speedometer Drive Gear



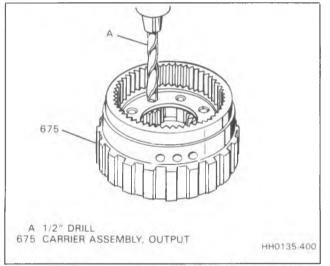



Reaction Carrier Assembly

16

Inspect (Figure 40 and 42)

- Reaction carrier assembly for:
 - pinion gear damage
 - excess pinion washer wear (end play should be .009"-.024"/.228-.610 mm)
 - cracks or damage to band apply surface
 - Roller clutch assembly for damage to:
 - rollers
 - springs

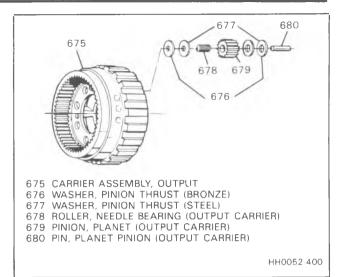

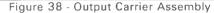

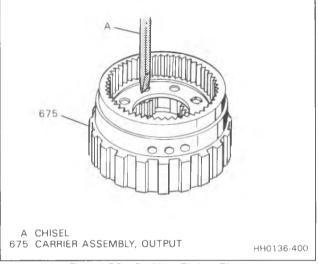


Figure 39 - Staking Pinion Pin

- cage

- Sun gear (665) and sun gear shaft (664) for:
 - nicked, scored or worn bushings (663) (see Bushing Replacement Procedure)
 - damaged splines or teeth
 - cracks

Pinion Gear Replacement Procedure - Reaction Carrier Assembly

Remove or Disconnect (Figures 42, 43 and 44)

 Stake marks from pinion pins (671) with 1/2" drill

? Important

- DO NOT ALLOW DRILL TO REMOVE STOCK FROM CARRIER. EXCESSIVE REMOVAL OF MATERIAL WILL WEAKEN CARRIER.
- 2. Pinion pins (671) from carrier (666)


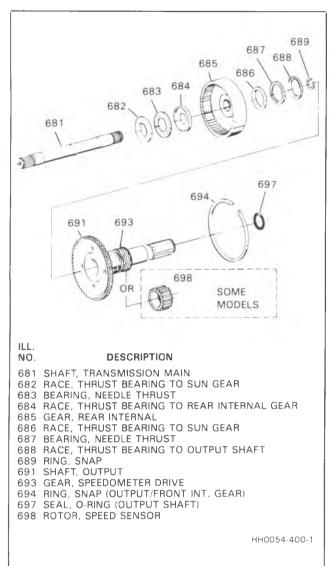


Figure 40 - Assembling Output Shaft and Rear Internal Gear



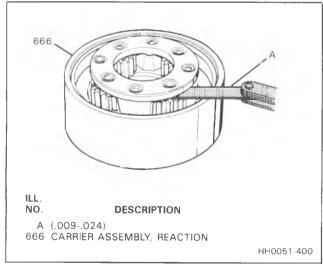

3. Pinion gears (669), thrust washers (667, 670) and roller needle bearings (668)

0 Inspect

- Pinion pocket thrust surfaces for burrs.
 - Reaction carrier (666) for:
 - cracks, damage or wear

× Assemble

- Needle bearings (668) in pinion gears (669) 1.
- Bronze washers (670) and steel washers (667) as 2. shown
- Pinion gear assemblies into carrier (666) 3.
- 4. Pinion pins (671)
 - headed end of pins must be flush with carrier face
- Stake pins at three points with blunt chisel 5

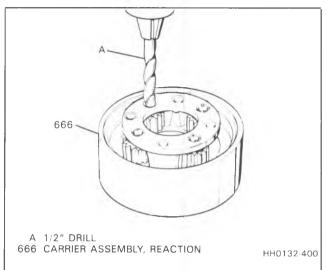


Figure 42 Removing Pinion Pins from Reaction Carrier

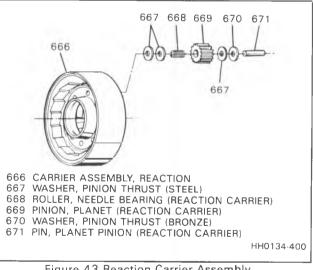


Figure 43 Reaction Carrier Assembly


-X-Assemble (Figure 45)

Gear ring (673) over output carrier (675). 1.


replace if damaged

Thrust washer (674) into output carrier (675) 2. with tabs in pockets.

7A2-20 400/475 AUTOMATIC TRANSMISSION

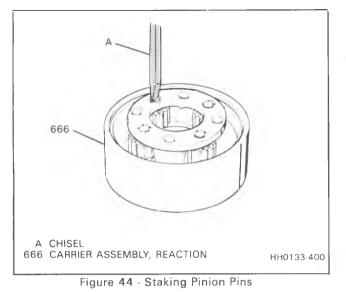

- retain with petrolatum
- 3. Reaction carrier (666) into output carrier (675)
 - lubricate pinion gears (669) with transmission fluid.
- 3. Sun gear (665) (chamfered inside diameter first) into reaction carrier assembly (666).
- 4. Sun gear shaft (664), long splined end first.
- 5. Larger I.D. race (662) on sun gear shaft (664) with flange up against sun gear (665).
- 6. Thrust bearing (661), and races (660 and 662).

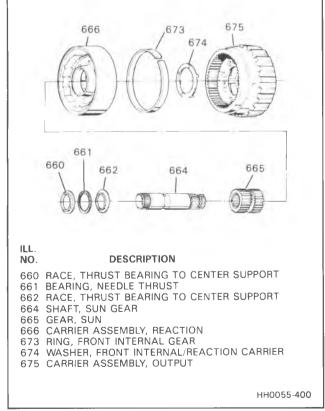



Intermediate Clutch Piston

Remove or Disconnect (Figure 46)

- 1. Oil rings (653) from center support (654).
- 2. Press in on spring retainer (647) and remove snap ring (646).
- 3. Retainer (647) and three clutch release springs (648).
- 4. Spring guide (649) and clutch piston (650).
- 5. Inner seal (651) and outer seal (652) from clutch piston (650).

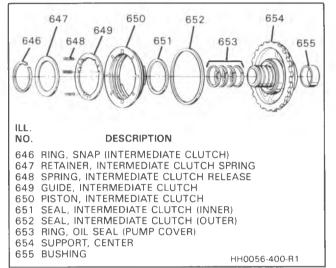


Figure 46 - Center Support and Intermediate Clutch

Important

Do not remove three screws holding roller clutch race to center support (654).

Inspect (Figures 46 and 47)

- Roller clutch race inside center support (654) for scratches, wear or damage.
- Center support (654) for:
 - cracks
 - damaged lugs
- Oil rings (653) and ring grooves for damage, burrs or cuts.
- Air check oil passages (Figure 49).
- Intermediate clutch piston (650) for cracks or damage.
- Sealing surfaces and seal grooves for scratches or other damage.
- Springs (648) for collapsed coils or distortion.
- Constant bleed orifice is open approximately .020" (.51 mm).
- Clean all components

Assemble (Figure 48)

Tool Required:

J 21363 Intermediate Clutch Inner Seal Protector

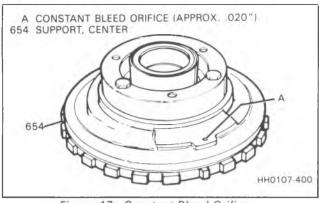


Figure 47 - Constant Bleed Orifice

- 1. Lubricate new inner and outer clutch piston seals (651 and 652) and grooves with transmission fluid.
- 2. Seals (651 and 652) on piston (650) with lips facing away from spring guide (649).
- 3. Clutch piston (650) on center support (654) with J 21363.
- 4. Spring guide (649) and clutch release springs (648).
- 5. Spring retainer (647) and snap ring (646).
- 6. Oil seal rings (653) on center support hub (654).

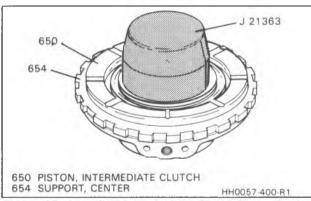


Figure 48 - Installing Intermediate Clutch Piston Seals

Inspect (Figure 49)

• Air check operation of intermediate clutch piston as shown.

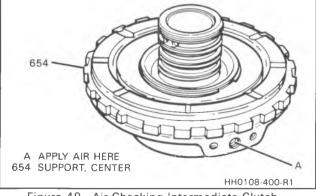



Figure 49 - Air Checking Intermediate Clutch

Low Roller Clutch Assembly

- → ← Install or Connect (Figures 50 and 51)
- 1. Thrust washer (656) in recess of center support (654).
- 2. Spacer (659) and roller assembly (658) into reaction carrier (666).
- 3. Center support (654) into reaction carrier (666).

Important

To verify correct assembly, hold reaction carrier (666) stationary. Center support (654) should turn counter clockwise only.

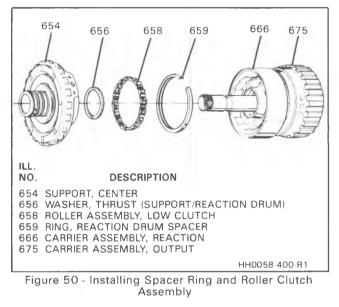

Direct Clutch and Intermediate Roller Assembly

Disassemble (Figures 52 and 53)

Tools Required:


J 4670 Spring Compressor

- J 21664 Adapter
- Mechanical Press
- 1. Snap ring (638) and clutch retainer (637).
- 2. Race (636) and roller assembly (634) (or sprag assembly 635).
- 3. Snap ring (619).
- 4. Direct clutch backing plate (620) and clutch plates (621 and 622).
- 5. Snap ring (625) with J 4670 and J 21664.
- 6. Retainer (626) and clutch release springs (627).
- 7. Piston (629).
- 8. Inner seal (630) and outer seal (631) from piston (629).
- 9. Center piston seal (632) from housing (633).



- Roller assembly (634) for damaged rollers, cage or distorted springs.
- Clutch housing (633) for cracks, wear and proper opening of oil passages.
- Clutch plates (621 and 622) for:


7A2-22 400/475 AUTOMATIC TRANSMISSION

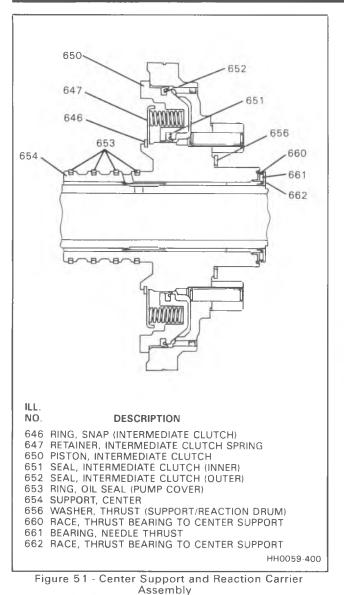

- wear
- burned
- flaking
- Backing plate (620) and piston (629) for damage or cracks.
- Clutch springs (627) for collapsed coils or distortion.
 - replace if necessary
- Housing (633) for correct operation of check ball.

Assemble (Figure 53)

- 1. Lubricate inner (630) and outer (631) clutch piston seals and grooves with transmission fluid.
- 2. Inner seal (630) and outer seal (631) with lips facing away from spring pockets.
- 3. Center seal (632).

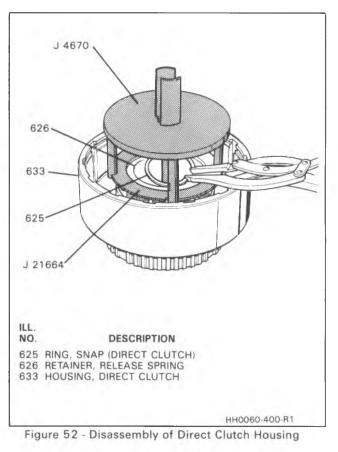

Direct Clutch Piston

Install or Connect (Figure 54 and 55)


Tools Required:

- J 21362 Seal Protector
- J 21409 Piston Installer
- J 21664 Adapter
- 1. J 21362 on housing (633) hub.
- 2. Piston (629) inside J 21409.
- 3. J 21409 and piston into housing (333).
- 4. Clutch release springs (627) in pockets.
- 5. Spring retainer (626) with J 21664.
- 6. Snap ring (625).

Direct Clutch Assembly

→← Install or Connect (Figures 56, 57 and 58)

- 1. Piston (629)
- 2. Waved clutch plate (623) or dished clutch plate (624) into direct clutch housing (633).
- 3. Clutch plates (621 and 622).
 - alternate steel and composition plates as shown in chart
- 4. Direct clutch backing plate (620) and snap ring (619).
- 5. Roller assembly (634) or sprag assembly (635).
- 6. Intermediate clutch race (636) with clockwise motion. When properly installed it should not rotate counter-clockwise.

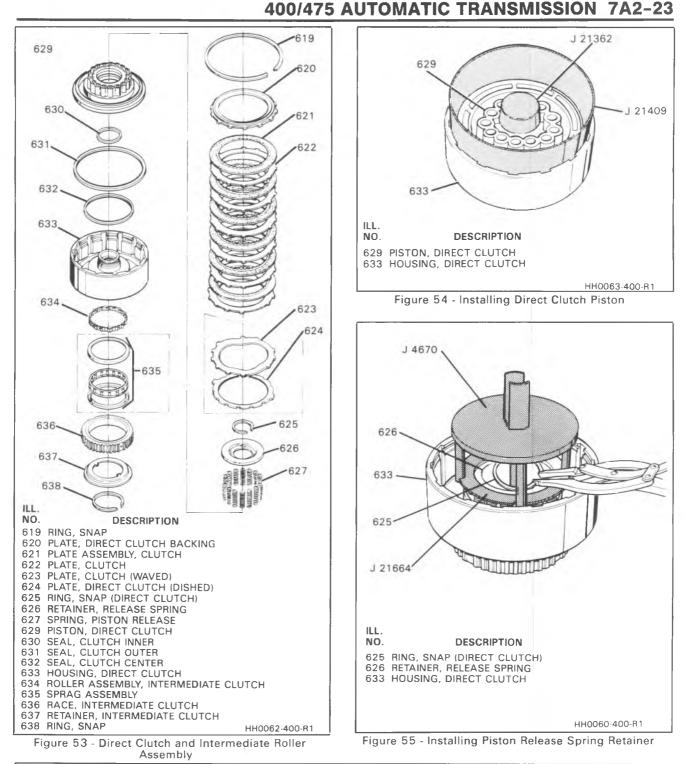

1988	3 THM 400 CLU	TCH PLAT	E APPLICA	TION CHART DIR	ECT CLUTCH	HH0123-400-R1
MODELS		NO. OF FLAT STEEL PLATES		NO. OF WAVED STEEL PLATES	NO. OF DISHED PLATES	NO. OF COMPOSITION PLATES
	THICKNESS	2.32 MM (.0915")	1.97 MM (.0775″)	1.54 MM (.0605″)	1.37 MM (.054″)	2.03 MM (.080")
FAA, FRA, FXA, FVA, LXA TDA, TFA, TKA, TLA		5				5
EVA, FBA, FKA, FSA, H	IRA, MAA, RVA	6				6
FQA, LLA, RKA	, RMA	4		1		5
RDA, RL	4	5		1		6
ALL OTH	R	2	3		1	5

Figure 56 - Direct Clutch Plate Chart

7A2-24 400/475 AUTOMATIC TRANSMISSION

7. Intermediate clutch retainer (637) and snap ring (638).



Inspect (Figure 59)

- 1. Place direct clutch assembly on center support (654) for air check operation.
- 2. Air applied to reverse passage will escape from direct passage. This condition is normal. Apply air to direct passage to actuate piston and move clutch plates.

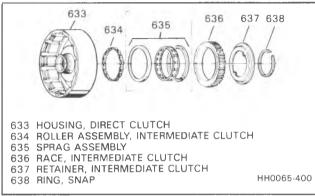


Figure 57 - Installing Roller Assembly

Center Support and Gear Unit Assembly

→← Install or Connect (Figure 60)

- Tools Required:
 - J 21795-1 Gear Assembly Remover and Installer Adapter
 - J 23093 Center Support Locating Tool
- 1. J 21795-1 to main shaft (681).
- 2. With transmission in a vertical position, align bolt hole in center support (654) with hole in case (10) and carefully lower into case.
- 3. Locate J 23093 into the center support (654) direct clutch passage through case (10). Apply pressure on J 23093, in direction of arrow (Figure 60), seating the center support splines against the case splines.
- 4. Case to center support bolt (79).
 torque to 20-25 lbs.ft. (27-34 N·m)
- 5. Snap ring (645).

Intermediate Clutch Assembly



- Inspect (Figure 61)
 - Clutch plates (642) for: wear, pitting, flaking or cracks in lining
- Clutch plates (643) for:
 - discoloration, scoring or cracks
- Backing plate (641) for burrs and dirt.
- Front band for:

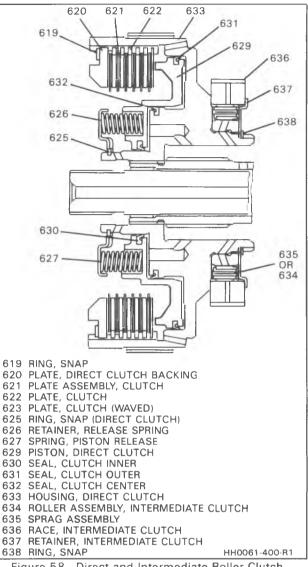


Figure 58 - Direct and Intermediate Roller Clutch Assembly


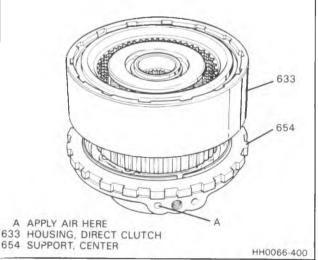


Figure 59 - Air Check Direct Clutch

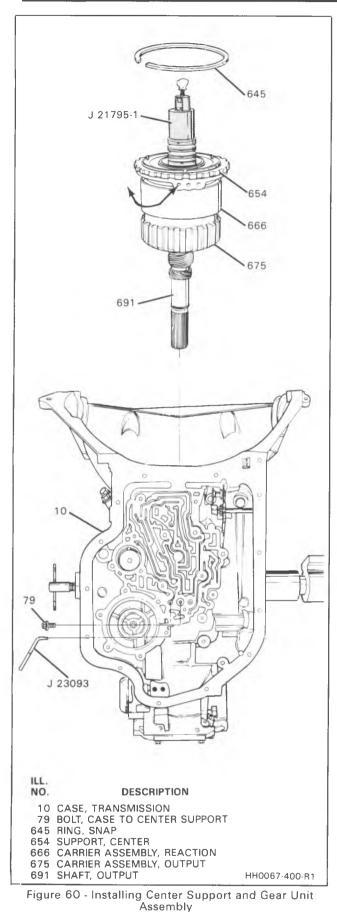

wear, pitting, flaking or cracks in lining

Assemble (Figure 61 and 62)

- Waved plate (644), if used. 1.
- Steel plates (643) and composition plates (642) 2. alternately.
 - refer to chart 1.1
- Intermediate clutch backing plate (641). 3.
- 4. Snap ring (640).

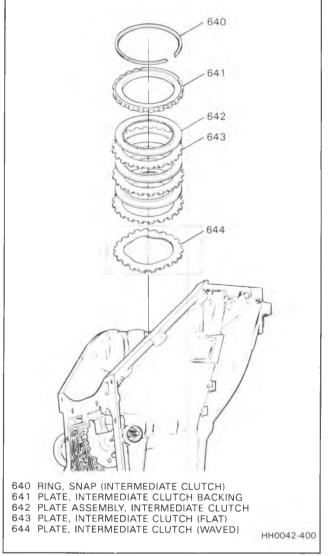


Figure 61 Intermediate Clutch Plates

Direct Clutch Assembly and Front Band

Install or Connect (Figure 63) ++

- Direct clutch assembly (619, 638) onto the 1. intermediate clutch.
- 2. Front band (639).

Forward Clutch Assembly



Disassemble (Figure 64 and 65)

Tools Required:

7A2-26 400/475 AUTOMATIC TRANSMISSION

	INTERMEDIATE CLUTCH						
MODELS		NO. OF FLAT STEEL PLATES	NO. OF WAVED STEEL PLATES	NO. OF COMPOSITION PLATES			
	THICKNESS	2.51 MM (.099")	1.74 MM (.0685″)				
	KA, FSA, HRA, MAA, ZDA, ZVA	3		3			
ALL	OTHERS	2	1	3			



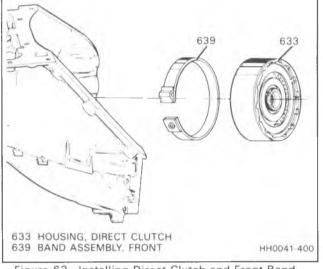


Figure 63 - Installing Direct Clutch and Front Band

- J 4670-01 Spring Compressor
- J 21364 Adapter
- J 6116-01 Holding Fixture
- J 21664 Adapter
- 1. Snap ring (619) and direct clutch driving hub (618) from forward clutch housing (602).
- 2. Forward clutch hub (616).
- 3. Thrust washers (615 and 617).
- 4. Clutch plates (613 and 614).
- 5. Waved clutch plate (611) or dished plate (612).
- 6. Snap ring (609) and release spring retainer (608) with J 4670-01 and J 21364.
- 7. Piston release springs (607), piston (606).

? Important

Unless forward clutch housing (602) and turbine shaft (601) are damaged, disassembly is not necessary.

Turbine Shaft Removal

- 1. Place housing (602) in mechanical press with turbine shaft (601) down.
- 2. Remove turbine shaft (601) by placing 3/8" drive extension on end of shaft and pressing out.

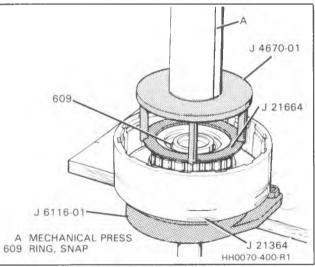



Figure 64 - Removing Forward Clutch Piston

Forward Clutch Assembly

Inspect (Figure 65)

Clutch plates (613 and 614) for:

- burning, scoring, flaking, pitting or wear.
- Release springs (607) for collapsed coils or distortion.
- Clutch hubs (616 and 618) for spline wear, open lubrication holes and damaged thrust faces.
- Piston (606) for cracks.
- Forward clutch housing (602) for wear, scoring, cracks and open oil passages.

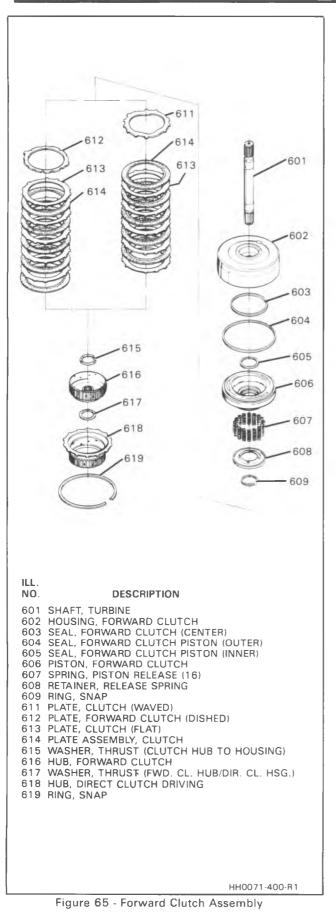

- Free operation of check ball.
- Turbine shaft (601) for spline damage, open oil passages, cracks or distortion.




- Forward clutch housing (602) in press facing up.
- 2. Turbine shaft (601) in clutch housing (602) approximately 1/8".
- 3. Continue installing in small steps, checking frequently to make sure connection is straight.

Assemble (Figure 64, 65 and 66)

Tools Required:

- J 21409 Seal Protector
- J 21362 Piston Installer
- 1. Lubricate new inner seal (605) and outer seal (604) with transmission fluid. Lubricate seal grooves with petrolatum.
- 2. Seals (604) and (605) on piston (606) with lips facing away from spring pockets.
- 3. Lubricate center piston seal (603) and groove.
- 4. Center piston seal (603) onto clutch housing (602) with lip facing up.
- 5. J 21409 over clutch hub.
- 6. Piston (606) inside J 21362 and insert assembly into housing (602) rotating slightly clockwise until seated.

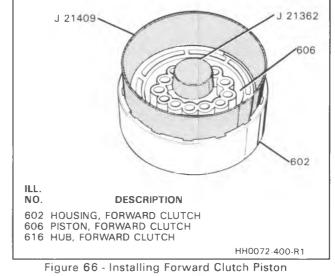

Asse

Assemble (Figures 65, 67 and 68)

Tool Required:

J 21664 Spring Compressor

- 1. Clutch release springs (607) in piston (606).
- 2. Retainer (608) on springs (607) with J 21664.
- 3. Snap ring (609).
- 4. Thrust washer (617) on outside of forward clutch hub (616).
- 5. Bronze thrust washer (615) on inside of hub (616).

7A2-28 400/475 AUTOMATIC TRANSMISSION

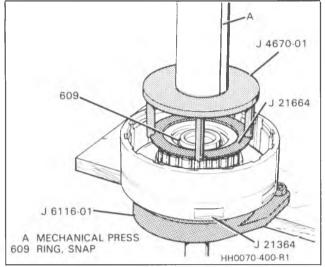


Figure 67 - Installing Forward Clutch Piston Release Springs

- retain with petrolatum

- 6. Forward clutch hub (616) in clutch housing (602).
- 7. Waved clutch plate (611) or dished clutch plate (612).
- 8. Clutch plates (614 and 613) alternately. refer to chart for model application
- 9. Direct clutch hub (618) in forward clutch housing (602) (over clutch plates).
- 10. Snap ring (619).

Inspect (Figure 69)

- Install forward clutch on oil pump assembly.
- Check piston and clutch operation by applying air to forward clutch passage in pump.
- Install forward clutch assembly (602-618) with turbine shaft (601) into transmission.


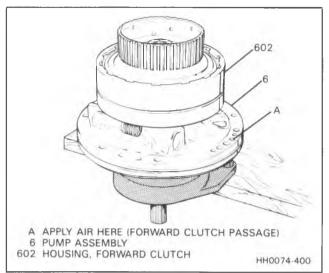


Figure 69 - Air Checking Forward Clutch



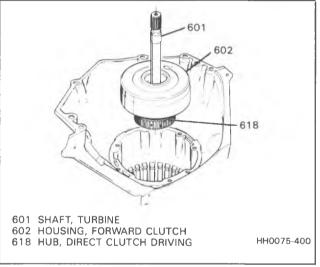

1988 THM 400 CLUTCH PLATE APPLICATION CHART FORWARD CLUTCH NO. OF COMPOSITION NO. OF FLAT STEEL NO. OF WAVED STEEL NO. OF DISHED MODELS PLATES PLATES PLATES PLATES 2.32 MM 1.97 MM 1.54 MM 1.37 MM 2.03 MM THICKNESS (.0915'')(.0775'')(.0605'')(.054'')(.080'')5 5 EVA, HRA, MAA, RVA, FAA, FQA, FRA, FVA, FXA, LLA, LXA, TAA, 4 1 5 TBA, TCA, TDA, TFA, TKA, TLA, TMA, TNA ALL OTHER MODELS 5 1 5

HH0122-400-R1

Figure 68 - Forward Clutch Plate Chart

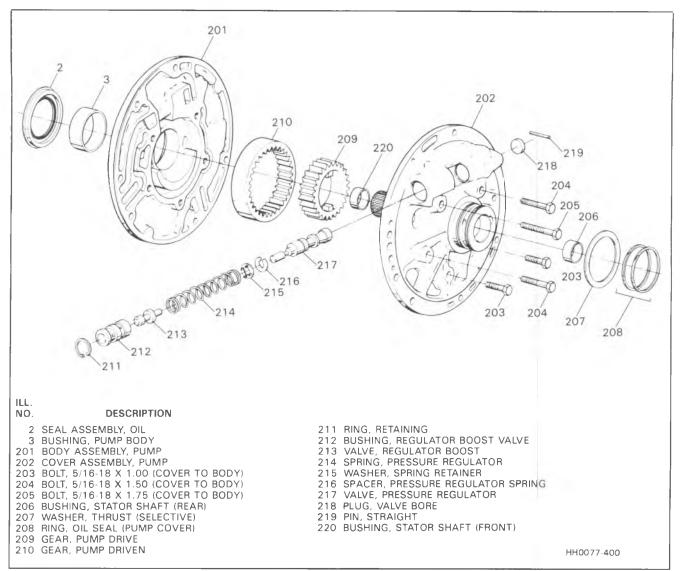


Figure 71 - Oil Pump Assembly

Oil Pump Assembly

Disassemble (Figure 71)

NOTICE: Regulator spring (214) is tightly compressed. Use care when removing bushing (212).

- 1. Retaining ring (211).
- 2. Pressure regulator and boost valve assemblies (212-217).
- 3. Bolts (203, 204 and 205).

? Important

Before removing gears (209) and (210) from pump body, mark gear faces to ensure reassembly to same position.

- 4. Pump drive gear (209) and driven gear (210).
- 5. Straight pin (219) and valve bore plug (218).
- 6. Oil seal rings (208) and thrust washer (207).

Pump Body

- Inspect (Figure 71)
- Gear pockets, crescent, pump body face, and bushing for:
 - scoring
 - nicks
 - wear
 - Oil passages for:
 - foreign material or debris
 - porosity
 - So scored or irregular mating surfaces
 - cross channel leaks
- Pump body bolt threads for damage.
- Oil seal (2), bushing (3) for wear or damage.


Gear Clearance


🗓 Measure (Figure 72)

1. Install pump gears (209 and 210) in body (201) as marked.

7A2-30 400/475 AUTOMATIC TRANSMISSION

- Measure clearance between gears and body.
 .0008"-.0035" (.02 mm-.09 mm) maximum clearance
- 3. Pump body with straight edge to assure it is flat.

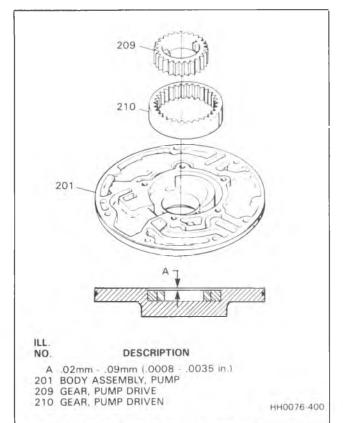

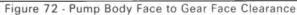

Pump Cover

Inspect (Figure 71)

- Pump gear face for:
 - wear
 - scoring
- Stripped or damaged stator shaft splines
- Bushings (220) and (206) for:
 wear, galling
- Oil ring grooves for nicks, burrs or debris
- Pressure regulator (217) and boost regulator valves (213) for:
 - free movement in regulator bore.
 - chips, burrs, distortion or plugged oil passages
- Breather hole in pump cover blocked.

Oil Pump Assembly

Assemble (Figures 71 and 73)

- 1. Drive gear (209) and driven gear (210) with alignment marks in correct position.
 - lugs on drive gear should be flush with pump body (201).

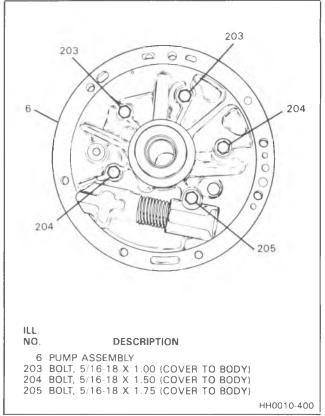


Figure 73 - Pump Cover Attaching Screws

- lubricate drive gear (209) and driven gear (210) with automatic transmission fluid.
- 2. Pressure regulator valve (217) into bore.
- 3. Pressure regulator spring spacer(s) (216), if used.
- 4. Spring retainer washer (215) and spring (214) in pressure regulator bore.
- 5. Regulator boost valve (213) into boost valve bushing (212), stem out against spring (214).
- 6. Snap ring (211).
- 7. Bore plug (218) and valve straight pin (219).
- 8. Cover (202) on body (201).
- 9. Bolts (203, 204 and 205).
 - do not fully torque


Assemble (Figures 74 and 76)


Tools Required:

- J 21368 Alignment Band
- J 21359 Oil Seal Installer
- 1. J 21368 on pump assembly.
 - torque bolts 18 lbs. ft. (24 N·m)
- New square cut o-ring (7) and oil seal (2)
 use J 21359
- 3. Correct thrust washer (207) as determined by Front End Play Check during disassembly.
- A T il 1 (200)
- 4. Two oil seals (208).

→↓ Install or Connect (Figure 75)

- 1. Gasket (8) on transmission case (10).
- 2. Oil pump assembly (6) in transmission case (10).
- 3. Bolts (4) except bolt in 10 o'clock position.

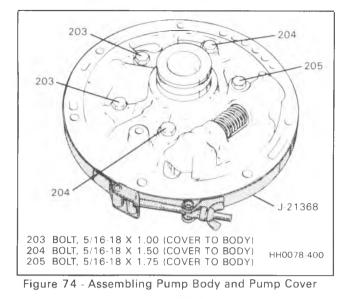

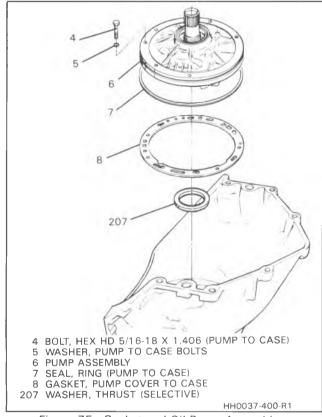





Important

If turbine shaft cannot be rotated as pump assembly is being pulled into place, the forward and/or direct clutch housings have not been installed properly to index with all the clutch plates. This condition must be corrected before pump assembly is fully installed.

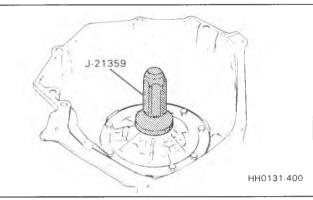


Figure 76 - Installing Pump Oil Seal

Rear Unit End Play Check

- Measure (Figures 77 and 78)
 - Tools Required:
 - J 21797 Bolt
 - J 8001 Dial Indicator
- 1. Install J 8001 on the bolt and index it to the end of the output shaft (691).
 - set indicator to "0"
- Move output shaft (691) in and out.
 proper end play is .007"-.019" (.178 mm-. 483 mm)
- 3. Remove tools and correct if necessary.

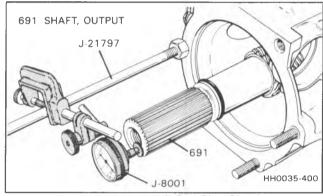


Figure 77 - Rear Unit End Play Check

THICKNESS (INCH)	IDENTIFICATION NOTCH AND/OR NUMERAL	
.074078	None	1
.082086	ON SIDE OF 1 TAB	2
.090094	ON SIDE OF 2 TABS	3
.098102	ONE END OF 1 TAB	4
.105110	ON END OF 2 TABS	5
.114118	ON END OF 3 TABS	6
 HH0036-400		

Figure 78 - Output/Case Selective Thrust Washer (696)

7A2-32 400/475 AUTOMATIC TRANSMISSION

Front Unit End Play Check

Measure (Figures 79 and 80) 1

- Tools Required:
 - J 6125 Slide Hammer Bolt J 8001 Dial Indicator
- 1. Install J 8001
- 2 Eliminate slack by pressing turbine shaft (601) to the rear and output shaft (691) forward.
- 3 Index J 8001 against end of turbine shaft. set dial to "0"
- 4. Pull out turbine shaft.
 - proper end play is .003"-.024" (.076 mm-. 610 mm)
- Remove tools and correct end play if necessary. 5.

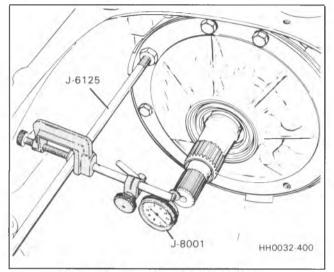


Figure 79 - Front Unit End Play Check

THICKNESS (INCH)	COLOR	NO.		
.060064	Yellow	0		
.071075	Blue	1		
.082086	Red	2		
.093097	Brown	3		
.104108	Green	4		
.115119	Black	5		
.126130	Purple	6		
I I HH0033-400				

Figure 80 - Selective Thrust Washer (207)

Governor Assembly

Important

Governor assembly is calibrated and is serviced as an assembly. However, driven gear (409) may be serviced seperately and unit may be disassembled for cleaning.

- \Rightarrow **Disassemble (Figure 81)**
- 1. Governor pins (406). use diagonal cutting pliers
- Thrust cap (401), weights (404 and 405) and 2. springs (403).
- 3. Governor valve (402) from sleeve (407).
- 4 Clean all parts in solvent and air dry.



- Sleeve (407) for nicks, burrs or galling and free operation in case bore.
- Valve (402) for damage and free operation in bore of sleeve (407).
- Driven gear (409) for damage.
- Springs (403) for distortion or damage.
- Weights (404 and 405) for free operation in retainers.

Measure (Figure 82)

- Valve opening at entry with weights minimum clearance is .020" (.51 mm). .
- Valve opening at exhaust with weights inward. ۰.
 - minimum clearance is .020" (.51 mm).

Driven Gear Replacement

Disassemble (Figure 81)

- Driven gear retaining pin (408). 1.
 - use small punch or 1/8" (.125") diameter rod
- Driven gear (409) from sleeve and carrier 2 assembly (407) with long punch and mechanical press.

Important

Support governor with plates set into exhaust slots of sleeve.

Clean

8

Chips or residue from sleeve and carrier assembly (407).

- Assemble (Figures 83 and 84)

- Governor driven gear (409) in sleeve and 1. carrier assembly (407).
- Drill new 1/8" (.125") hole in sleeve and carrier assembly (407) and governor driven 2. gear (409), 90 degrees from original hole.
- Pin (408) in new 1/8" hole. 3.
- Valve (402) in bore of sleeve (407). 4.
- Weights (404 and 405), springs (403) and 5 thrust cap (401) on sleeve (407).

6. New pins (406).

16 Inspect

Weight assemblies (404 and 405) for free movement on pins.

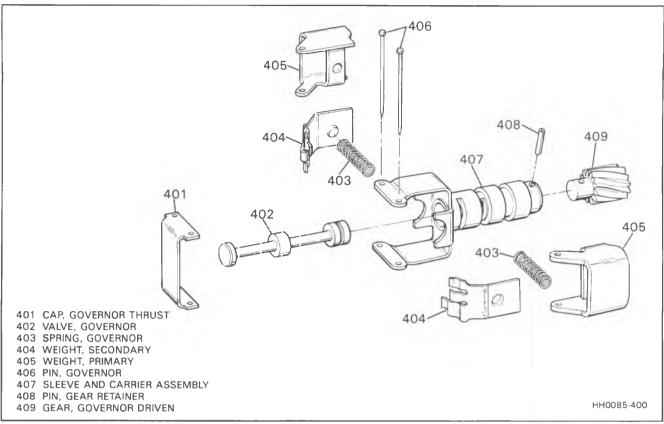


Figure 81 - Governor Assembly

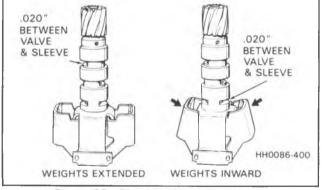


Figure 82 - Checking Valve Opening

• Valve (402) for free movement in sleeve bore.

Internal Transmission Speed Sensor (I.T.S.S.) models.

Inspect

- Sensor (81) for porosity, cracks or damage
- o-ring (82) and o-ring groove for nicks or damage
- Speed sensor bore in case for porosity, scoring or damage

→← Install or Connect (Figure 85)

- 1. Governor (22) into case (10).
- 2. Governor cover (20) and gasket (21) with bolts (19).

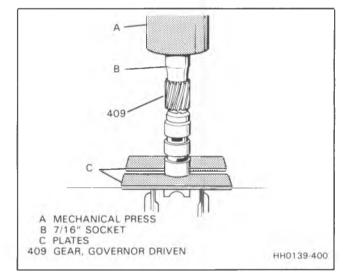


Figure 83 - Installing Driven Gear

- 3. Lubricate speed sensor bore in case with petroleum jelly.
- 4. Speed sensor (81) with new o-ring (82) into case.

NOTICE: Properly align the speed sensor before installing into the case to prevent damage to the rotor or sensor.

5. Retain sensor with bolt (83).

7A2-34 400/475 AUTOMATIC TRANSMISSION

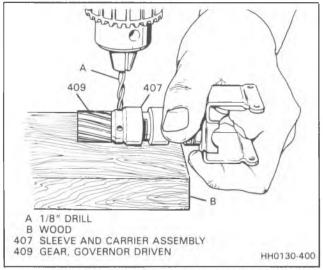


Figure 84 - Drilling Hole in Driven Gear

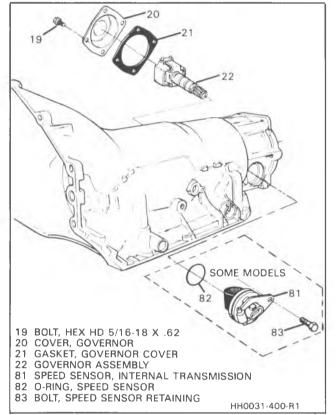


Figure 85 - Installing Governor Assembly

Band Apply Pin Check

1

Measure (Figures 86, 87 and 88)

Tools Required:

- J 21370-10 Gage Pin
- J 21370-6 Selector Gage
- 1. Place J 21370-10 in the servo pin bore.
- 2. Position J 21370-6 over the bore with the hex nut facing the parking pawl linkage.
- 3. Fasten with two 5/16-18 x 1" screws and torque to 18 lbs./ft. (24 N·m).

- 4. Make sure J 21370-10 moves freely in the tool and pin bore.
- 5. To determine correct pin length, apply 25 lbs./ft. Torque to the nut on the gage.
- 6. For pin selection, see Figure 88.


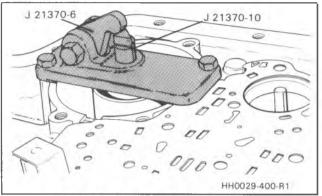


Figure 86 - Installing Servo Pin Gage

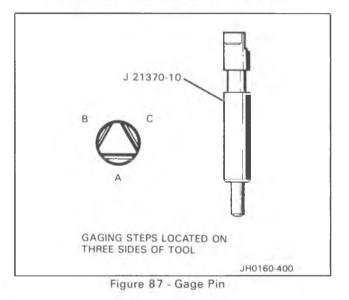


Rear Servo Accumulator

- Inspect (Figure 89)
- Remove retaining ring (68) from rear band apply pin (77) and inspect
- Accumulator pistons (69 and 72) for:
 - porosity or damage
 - ring groove damage
- Seals (70, 71, 73) for:
- nicks or cuts
- Cover (66) for:
 - porosity
- scored or damaged
- Springs (75, 78) for distortion
- Pin (77) for wear
- Servo bore for wear or scoring

-X- Assemble (Figure 89)

1. Rear accumulator spring (78).

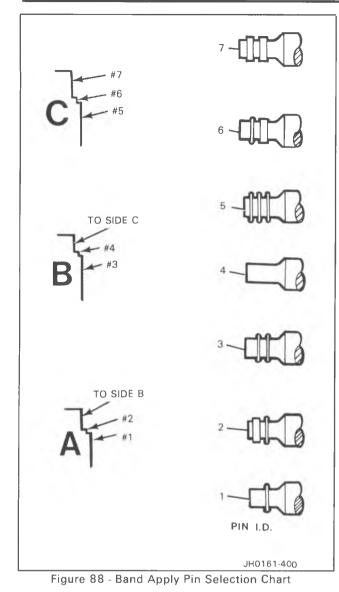

- Rear servo spring retainer (76), rear servo 2. spring (75) and servo washer (74) on rear band apply pin (77).
- Inner (73) and outer (71) accumulator 3. piston oil seals on accumulator piston (72). Place on rear band apply pin assembly.
- 4. Rear servo piston seal (70) on rear servo piston (69) and press onto rear band apply pin (77).
- 5. Retaining ring (68).

→← Install or Connect (Figure 89)

- Assembly in bore. 1.
- 2. Cover (66), gasket (67) and bolts (65).

Front Servo Assembly

-) Inspect (Figure 90)
 - Servo piston (60) for:
 - porosity or damage
 - ring groove damage

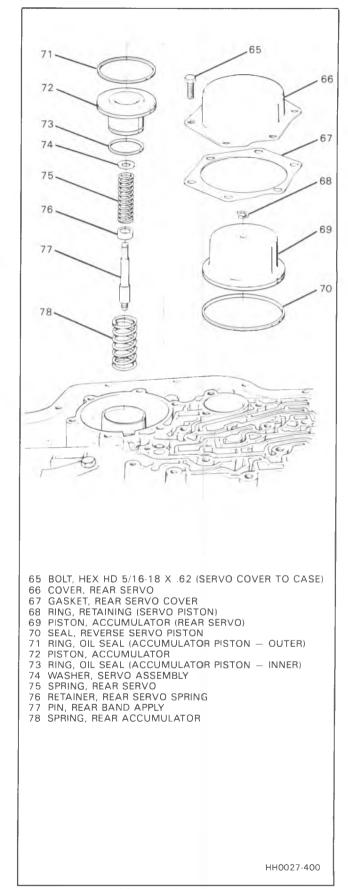


Figure 89 - Rear Servo Assembly

7A2-36 400/475 AUTOMATIC TRANSMISSION

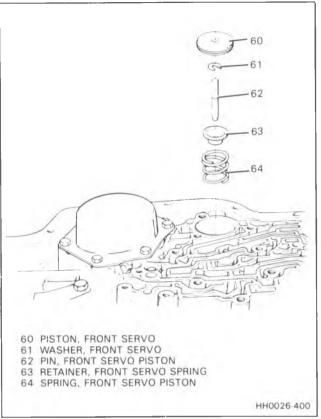


Figure 90 - Front Servo Assembly

- Piston pin (62) for wear
- Spring (64) for distortion
- Servo bore for wear or scoring

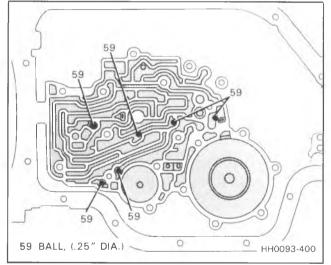


Figure 91 - Check Ball Location

++ Install or Connect (Figures 90, 91 and 92)

- 1. Front servo piston spring (64) and retainer (63).
- Washer (61), piston pin (62) and piston (60).
 make certain tapered end contacts band
- 3. Front servo assembly into case.

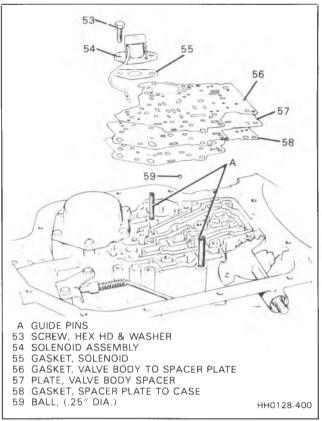


Figure 92 - Installing Solenoid and Spacer Plate

- 4. Six check balls (59) in case.
- 5. Spacer plate to case gasket (58).
- 6. Valve body spacer plate (57).
- 7. Valve body to spacer plate gasket (56).
- 8. Gasket (55) and solenoid assembly (54) with screw (53)
 - finger tight
- 9. Wire connector to case connector

Control Valve Assembly

Disassemble (Figures 93, 94 and 95)

J 21885 Piston Installer

- 1. Install J 21885 on front accumulator piston.
- 2. Retainer (302) and front accumulator piston (303).
- 3. Accumulator spring (305).
- 4. Accumulator piston seal (304).
- 5. Remove J 21885.



- Control valve assembly (49) thoroughly in clean solvent-move the the valves with a pick or small screwdriver to dislodge any dirt or debris that may have accumulated
- Air Dry

Disassemble (Figures 93 and 94)

- Control Valve Assembly
 - Position as shown on a clean surface

GQ -308 G) A 333 334 HH0095-400

Figure 93 - Control Valve Assembly

400/475 AUTOMATIC TRANSMISSION 7A2-37

7A2-38 400/475 AUTOMATIC TRANSMISSION

III. NO. DESCRIPTION 301 BODY, CONTROL VALVE 302 RING, RETAINER (ACCUMULATOR PISTON) 303 PISTON, FRONT ACCUMULATOR 304 RING, OIL SEAL (ACCUMULATOR PISTON) 305 SPRING, FRONT ACCUMULATOR PISTON 306 SWITCH, PRESSURE (RCA, RRA, RTA, RVA MODELS) 307 WIRE, LEAD (RCA, RRA, RTA, RVA MODELS) 308 PIN, GROOVED 309 PLUG, VALVE BORE (.56 O.D.) 310 VALVE, 1-2 ACCUMULATOR 311 SPRING, 1-2 ACCUMULATOR VALVE PRIMARY 312 SPRING, 1-2 ACCUMULATOR VALVE SECONDARY 313 PIN, COLED SPRING 314 PLUG, VALVE BORE (.50) 315 VALVE, DETENT 316 VALVE, DETENT REGULATOR 317 PIN. DETENT REGULATOR VALVE 318 SPRING, DETENT REGULATOR 319 VALVE, MANUAL 320 BUSHING, 1-2 MODULATOR VALVE 321 VALVE, 1-2 REGULATOR 322 SPRING, 1-2 REGULATOR VALVE 323 VALVE, 1-2 DETENT 324 VALVE, 1-2 325 SPRING, 1-2 MODULATOR VALVE 326 VALVE, 1-2 MODULATOR 327 PIN, STRAIGHT 328 BUSHING, 2-3 MODULATOR VALVE 329 SPRING, 2-3 VALVE (OUTER) 330 VALVE, 2-3 MODULATOR 331 SPRING, 2-3 VALVE (INNER) 332 VALVE, 2-3 333 PIN, STRAIGHT 334 PLUG, VALVE BORE (.437) 335 SPRING, 3-2 VALVE 336 PIN, 3-2 VALVE 337 VALVE, 3-2

Figure 94 - Control Valve Assembly Legend

Remove valve trains beginning with the upper left hand corner. **NOTE:** Some valves are under pressure - cover the bores while removing the roll pins

HH0096-400


- Remove blind hole roll pins with a modified drill bit
- Valves, springs and bushings must be laid out on a clean surface in the exact sequence they are removed
- Remove pressure switches

🛄 Clean

- All valves, springs, bushings and control valve body in clean solvent
- Dry using compressed air

Inspect

- All Valves and Bushings For:
 - Porosity
 - Scoring
 - Nicks

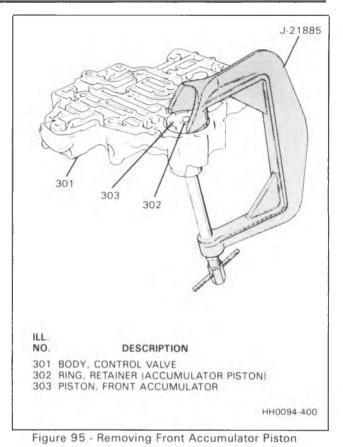

Scratches

- Springs for Damaged or Distorted Coils
- Valve Body Casting For:
 - Porosity
 - Cracks
 - Interconnected oil passages
 - Damaged machined surfaces

Assemble (Figures 93 and 94)

Control valve assembly components exactly as shown. Notice the position of the valve lands and bushing passages.


Installing Control Valve Assembly

- Assemble (Figures 95, 96 and 97)

Tool Required:

J 21885 Piston Installer

- 1. Front accumulator piston spring (305).
- 2. Front accumulator piston (303) and retainer ring (302) with J 21885.
- 3. Governor screen (52), pointed end up.
- 4. Governor oil pipes (50).
- 5. Control valve assembly (49).
- 6. Bolts (47), (51) and (53).
- 7. Detent spring and roller assembly (48) and bolt (47).

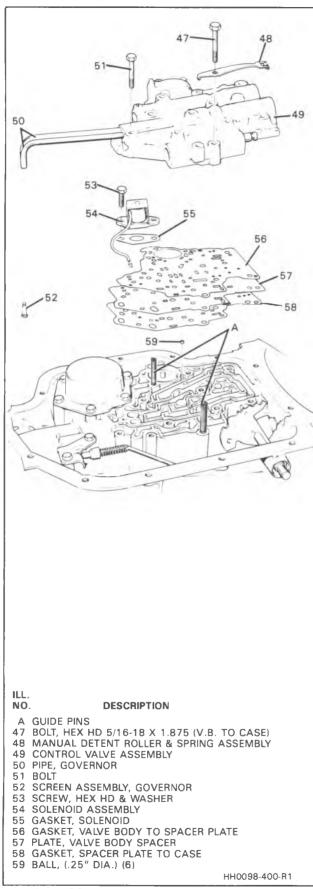



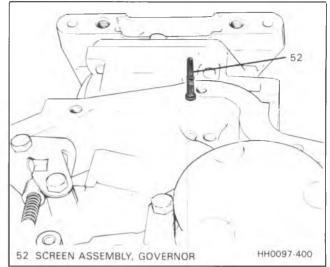


Figure 97 - Govenor Screen

Oil Pan and Filter Assembly

+ Install or Connect (Figure 98)

- 1. Intake pipe (45), o-ring (46) and filter (42).
- 2. Spacer (43) and bolt (41).
- 3. Gasket (39) to oil pan (38)
- 4. Oil pan (38) with screw and conical washer assembly (37).
 - torque to 6-10 lbs. ft. (8-14 N·m)

Case Extension Assembly



Inspect (Figure 99)

- for wear or damage
 - bearings (28)
 - spacer (29)
 - bushings (30) and (33) (See Bushing Replacement)

→+ Install or Connect (Figure 28)

- Tool Required:
- J 214426 Rear seal installer
- 1. New rear seal (26) with J 214426.
- 2. Extension to case seal (32).
- 3. Gasket (34) to extension (27)
- 4. Extension (27) to case (10) with bolts (23).

Vacuum Modulator Assembly


] Inspect (Figures 100 and 101)


Tool Required:

J 24466 Modulator Checking Tool

- 1. Modulator (13) with J 24466 and a known good modulator
 - place gage between modulators and apply pressure to both
 - if the indicator line moves out of view replace the modulator
- 2. Modulator valve (15) for nicks or damage

7A2-40 400/475 AUTOMATIC TRANSMISSION

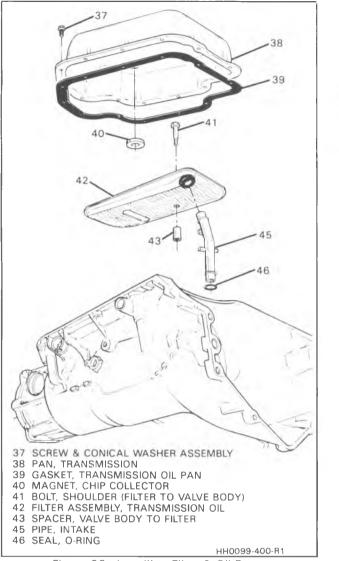

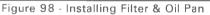

3. Modulator valve bore in the case for burrs, porosity or scoring

→← Install or Connect (Figure 101)

- Modulator valve (15) into case.
 small end first
- 2. New o-ring seal (14) into case.
- 3. Modulator assembly (13) into case.
- 4. Retainer (12) and bolt (11).
 - torque to 15-20 lbs. ft. (10-27 N·m).

TORQUE CONVERTER ASSEMBLY

Inspect

The torque converter assembly (1) must be replaced for any of the following conditions:

- Evidence of damage to the pump assembly
- Metal particles are found after flushing the cooler and cooler lines
- External leaks in hub weld area

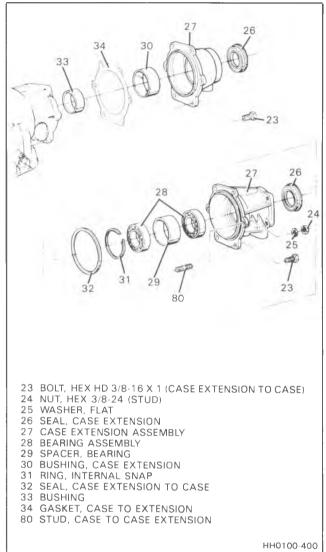


Figure 99 - Installing Case Extension


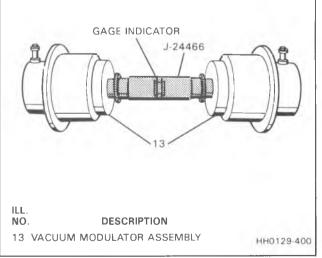


Figure 100 Checking Modulator Assembly

• Converter pilot is broken, damaged or poor fit into crankshaft

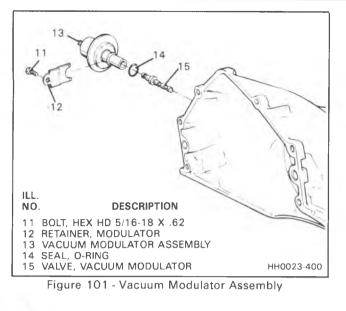

- Converter hub is scored or damaged ė
- Internal failure to stator
- Contamination from engine coolant
- Excess end play

If:

Measure (Figure 102)

Tool Required:

J 35138 Torque Converter End Play Checking Tool

Install J 35138 and measure end play .000" - .024" (.00 mm - .61 mm)

The Torque Converter Should Not Be Replaced

- The fluid has an odor, discolored or no evidence . of metal or clutch plate material
 - Drain out as much fluid as possible -
 - Replace the oil filter and pan gasket 2
 - Fill to proper level (Refer to Section 7A) .
 - The converter bolt hole threads are damaged
 - Correct with thread insert (Refer to Section -6A)

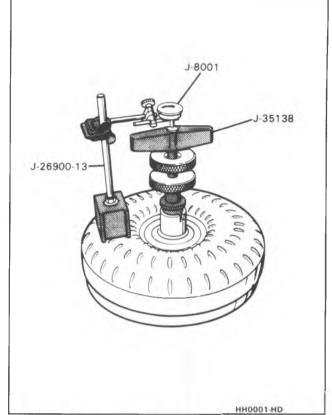


Figure 102 - Checking Torque Converter End Play

Flushing the torque converter is not recommended.



Install or Connect

Tool Required: J 21366 Converter Holding Strap

- Torque converter (1) with J 21366
 - Engage turbine shaft, stator shaft and lugs on oil pump driven gear. Three clicks will be felt as each engages slots in converter.

	ASSEMBLY TORQUE		RECHECK TORQUE	
FASTENER APPLICATION	N·m	LB. SFT.	N-m	LB: FT.
FILTER TO VALVE BODY SCREW	8 - 14	6-10	8-20	6-15
SOLENOID TO CASE SCREW	5-14	4 - 10	5-20	4 - 15
CONTROL VALVE ASSEMBLY TO CASE SCREW		6-10	8-20	6-15
LINE PRESSURE PLUG		5-10	7 - 1 4	5-10
FLYWHEEL HOUSING COVER TO TRANSMISSION SCREW		4 - 6	5-8	4 - 6
PUMP BODY TO COVER SCREW	20-27	15-20	20-34	15-25
PUMP ASSEMBLY TO CASE SCREW		15-20	20-34	15-25
REAR SERVO COVER TO CASE SCREW	20-27	15-20	20-27	15-20
GOVERNOR COVER TO CASE	11-16	8 12	5 -21.	4 - 16
PARKING PAWL BRACKET TO CASE SCREW	20-27	15-20	20-41	15-30
VACUUM MODULATOR RETAINER TO CASE SCREW	20-27	15-20	20-27	15-20
SPEEDOMETER DRIVEN GEAR RETAINER TO CASE SCREW		4 - 6	5-8	4.6
OIL PAN TO CASE SCREW	8-14	6 - 10	4-22	3-16
EXTENSION HOUSING TO CASE SCREW	27-34	20-25	20 MIN.	15 MIN
MANUAL SHAFT TO DETENT LEVER NUT	20-27	15-20	20-27	15-20
MANUAL YOKE TO MANUAL SHAFT NUT	18-24	13-18	18-24	13-18
CASE TO CENTER SUPPORT SCREW	27-34	20-25	27-52	20-38
FLYWHEEL TO CONVERTER SCREW	41-47	30-35	41-47	30-35
TRANSMISSION CASE TO ENGINE SCREW	41-47	30-35	41-47	30-35
OIL COOLER PIPE CONNECTOR NUT AT CASE & RADIATOR	35,541	26-30	35-41	26-30
COOLER PIPE CONNECTOR AT CASE	35-41	26-30	35-41	26-30
ENGINE REAR MOUNT TO TRANSMISSION BOLT		30-35	41-47	30-35
ENGINE REAR SUPPORT BRACKET TO FRAME NUT	41-47	30-35	41-47	30-35
SWITCH ASSEMBLY	3 - 5	2-3.5	3-5	2-3.5

7A2-42 400/475 AUTOMATIC TRANSMISSION

Figure 103 - Torque Specifications

HH0140-400-R1



Figure 104 - Special Tools

7A2-44 400/475 AUTOMATIC TRANSMISSION

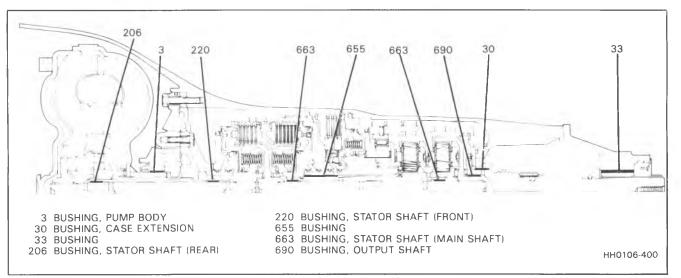


Figure 105 - Bushing Locations

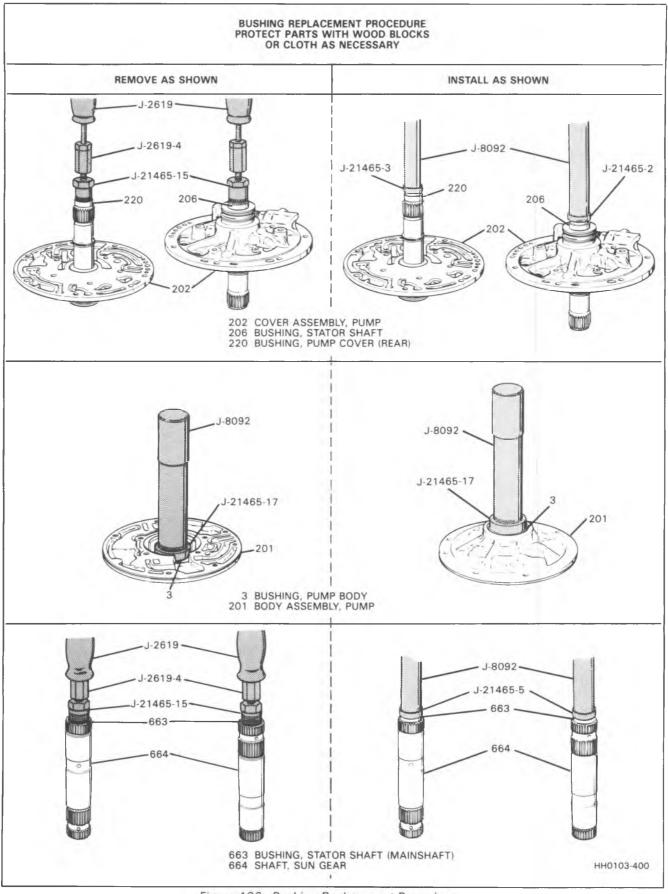


Figure 106 - Bushing Replacement Procedure

7A2-46 400/475 AUTOMATIC TRANSMISSION

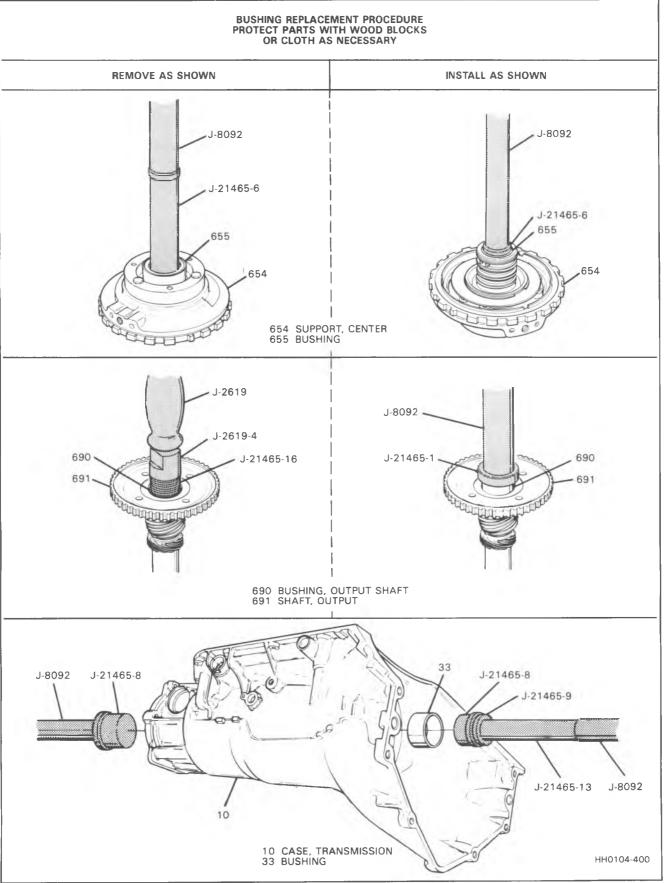


Figure 107 - Bushing Replacement Procedure

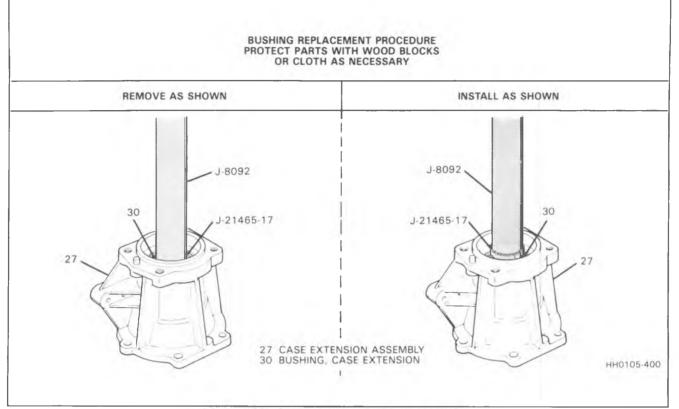


Figure 108 - Bushing Replacement Procedure

7A2-48 400/475 AUTOMATIC TRANSMISSION

SECTION 7A3

180C AUTOMATIC TRANSMISSION

CONTENTS

GENERAL INFORMATION UNIT REPAIR Selector Lever and Electrical Connector Removal7A3- 2 Modulator and Detent Valve Extension Housing, Speedometer Driven **COMPONENT REPAIR AND** TRANSMISSION ASSEMBLY......7A3- 6 Case7A3- 6 Case Interior.....7A3- 6 Selector Lever and Shaft7A3- 6

TRANSMISSION DISASSEMBLY

GENERAL SERVICE INFORMATION

Oil Seal Rings

If any seal rings are damaged, cut, or do not rotate freely in their grooves, be certain to check the ring groove for debris, burrs, or damage.

- Thrust washer surfaces The thrust washers and bearing surfaces may appear to be polished. This is a normal condition and should not be considered damage.
- Snap rings Do not over expand snap rings when removing or installing.

EXTERNAL PARTS

Clean

Thoroughly clean the exterior of the transmission.

Remove or Disconnect

Torque converter

Install or Connect

Tools Required

J-3289-20 Base

- J-8763-01 Holding Fixture
- 1. J-8763-01 onto transmission case.
- 2. Holding fixture into the base.

Planetary Carrier7A3- 6
Third Clutch Assembly
Sprag Unit7A3- 9
Reverse Clutch Parts7A3-12
Determining Selective Washer
Thickness
Converter Housing, Oil Pump and
Reverse Clutch
Governor Hub
Governor Body and Speedometer
Drive Gear
Extension Housing and Speedometer
Drive Gear
Detent Valve and Modulator
Servo Piston7A3-18
Control Valve Assembly 7A3-19
External Parts7A3-22



Remove or Disconnect

Drain the transmission fluid through the rear extension.

++ Remove or Disconnect (Figure 1)

- 1.
- Bolts, oil pan and gasket. 2. Bolts, oil strainer and gasket.
- 3.
- Manual detent roller and spring assembly. Electrical connections at the governor pressure 4
- switch.
- 5. Solenoid from transfer plate reinforcement.
- Solenoid from the solenoid pipes. 6.
- 7. Solenoid pipes from the valve body and the case.

+→| Remove or Disconnect (Figure 2)

- 1. Governor pressure switch using a 1-1/16 oil pressure switch socket.
- 2. Bolts, transfer plate reinforcement.
- 3. Bolts, servo cover, and gasket.
- Bolts, valve body, and manual valve link. 4
- Check balls. 5

Servo Piston Removal

Remove or Disconnect (Figures 3 and 4) ++

> **Tools Required** J-23075 Servo/3rd Clutch Piston Spring Compressor

- 1. Install J-23075 with tool offset to the rear case.
- 2. Compress servo piston.

7A3-2 180C AUTOMATIC TRANSMISSION

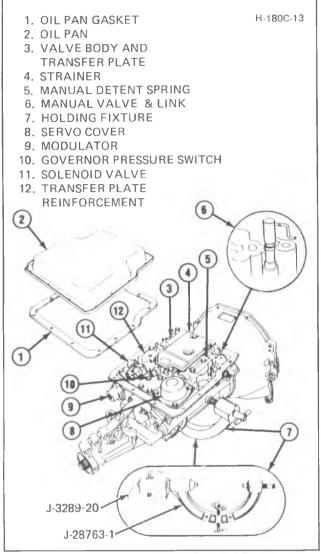


Figure 1 Exploded View - External Parts

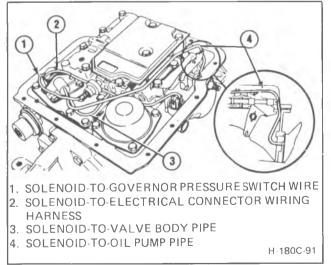
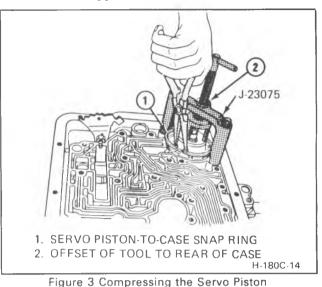


Figure 2 Hookup of Solenoid Pipes and Electrical Wires

- 3. Servo piston snap ring.
- 4. Slowly release servo piston.

5. Remove J-23075, servo piston, return spring, and the servo apply rod.





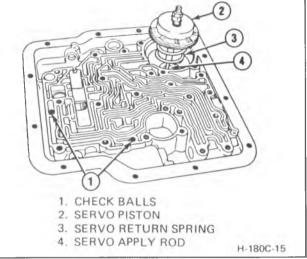


Figure 4 Check Balls and Servo Piston

Selector Lever and Electrical Connector Removal

- ←→ Remove or Disconnect (Figures 5 and 6)
- Inner selector hex nut. 1.
- 2. Inside range selector.
- 3. Range selector shaft spring pin, using diagonal pliers. Insert a wire in the center of the spring pin to prevent it from collapsing during removal.

NOTICE: Inspect the range shaft for burrs before removing shaft to prevent damage to the case.

- Range selector shaft. 4.
- 5. Selector shaft seal, if necessary.
- 6. Electrical connector and "O" ring if necessary.

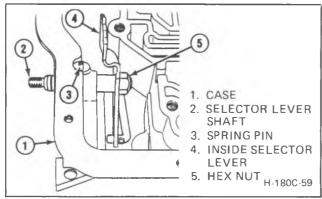


Figure 5 Selector Lever

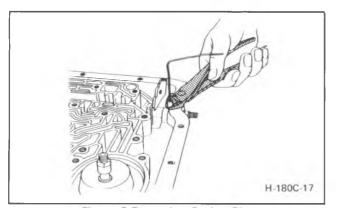


Figure 6 Removing Spring Pin

Modulator and Detent Valve Assemblies

Remove or Disconnect (Figures 7 and 8)

Tool Required

J-23100 Vacuum Modulator Wrench

NOTICE: Use of another tool to remove the vacuum modulator may result in internal damage to the modulator.

- 1. Vacuum modulator, "O" ring, and modulator plunger.
- 2. Modulator valve and sleeve.
- 3. Detent valve retaining pin using diagonal pliers. Insert a wire in the center of the spring pin to prevent it from collapsing during removal.
- 4. Detent sleeve, valve, and spring.
- 5. "O" ring.

++

Extension Housing, Speedometer, Driven Gear and Governor Assembly

Remove or Disconnect (Figures 9, 10 and 11)

Tools Required

J-7004 Slide Hammer

J-23129 Converter Housing Seal Remover

- 1. Bolt and speedometer guide bracket.
- 2. Speedometer driven gear assembly and seal ring.
- 3. Extension housing seal using J-23129 and J-7004 if necessary.

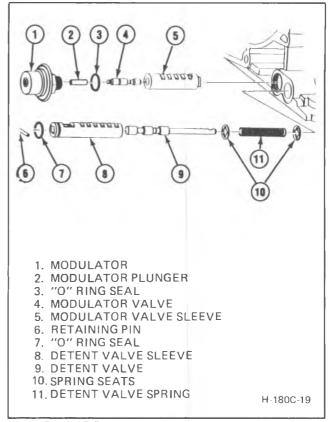


Figure 7 Detent Valve and Modulator Valve

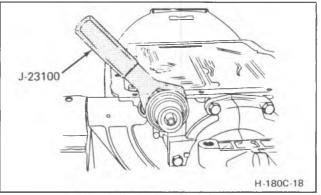


Figure 8 Vacuum Modulator

- 4. Bolts, extension housing and gasket.
- 5. Speedometer drive gear and retaining clip.
- 6. Bolt, governor body and gasket.
- 7. Governor hub snap ring, governor hub and governor hub oil screen.
- 8. Parking pawl and spring.

INTERNAL PARTS

Remove or Disconnect (Figures 12, 13 and 14)


Tools Required J-7004 Slide Hammer

J-23129 Converter Housing Seal Remover

1. Converter housing oil seal using J-7004 and J-23129, if necessary.

2. Seven outer bolts.

7A3-4 180C AUTOMATIC TRANSMISSION

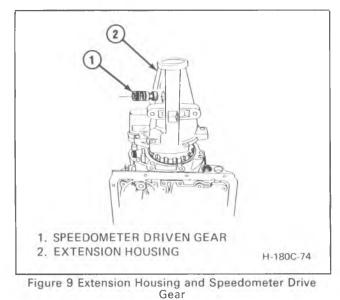

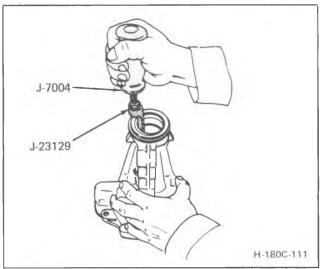


Figure 10 Removing Extension Housing Oil Seal

- 3. Loosen five inner bolts.
- 4. "O" ring from input shaft.
 - CAUTION: If the "O" ring is not removed, the second speed clutch and the third speed clutch will come out with the converter housing. The "O" ring may shear while the parts are being held, allowing the second and the third speed clutches to fall, causing personal injury.
- 5. Converter housing with the oil pump and reverse clutch assembly.
- 6. Selective washer.

++

Remove or Disconnect (Figure 15)

- 1. Second and third clutch assemblies.
- 2. Separate the second clutch and the third clutch assemblies.

NOTICE: If the reverse clutch plates are not being replaced, they must be installed in their original position.

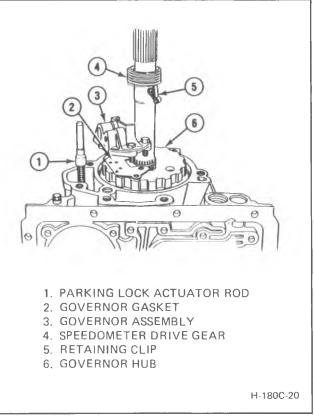


Figure 11 Speedometer Drive Gear and Governor



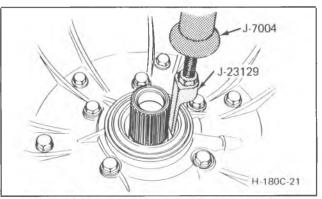


Figure 12 Removing Converter Housing Oil Seal

- 3. Reverse clutch plates and aluminum pressure plate.
- 4. Inside selector lever and parking lock actuator rod.
- 5. Bearing assembly and thrust washer.
- 6. Planetary carrier assembly, bearing assembly and thrust washer.

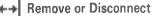

- 1. Reaction sun gear and drum.
- 2. Bearing assembly and thrust washer.
- 3. Low band.
- 4. Case vent, if necessary. If case vent is removed install a new vent.

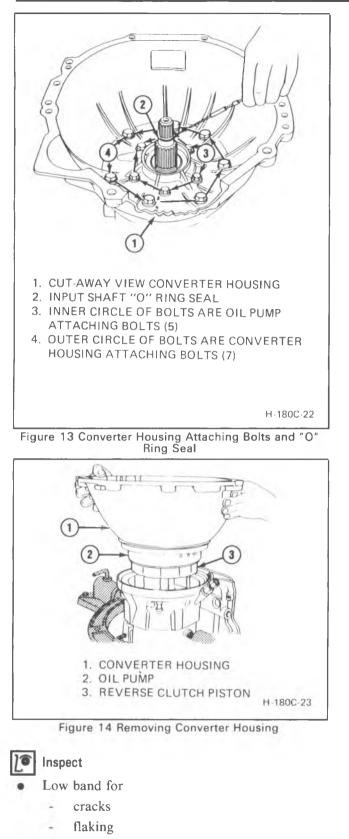

- 💼 heat damage
- Reaction sun gear and drum for
 - chipped teeth
 - worn bushing
 - scored drum

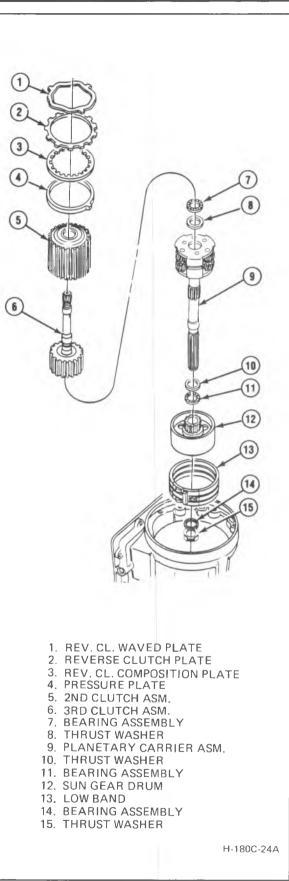


Figure 15 Internal Parts

7A3-6 180C AUTOMATIC TRANSMISSION

Inspect

- Reverse clutch plates
 - composition plates for damaged tangs, delamination or excessive wear
 - steel plates for worn lugs or heat damage.

Component Repair and Transmission Assembly

NOTICE: When assembling the transmission, do not use any "O" rings, gaskets, or oil seals that have been removed.

Case

Inspect

- Case exterior for cracks or porosity
- Case to valve body face for damage
- Interconnected oil passages for damage
- Servo bore for
 - sharp edges
 - porosity
- All bolt holes for thread damage
 Heli-coil to repair
- Cooler connections for
 - proper torque 38 N·m (28 lbs.-ft)

Case Interior

Inspect

- Ring grooves for damage
- Clutch plate lugs for wear or damage
- Band retaining pins for good retention
- Detent bore for scoring or scratches
- Modulator bore for scoring or scratches


Selector Lever and Shaft

→← Install or Connect (Figures 16, 17 and 18)

- 1. Selector seal, if necessary.
- 2. Selector shaft.
 - identification groove must be on the outside.
- 3. Spring pin. Check the selector lever shaft for free movement.
- 4. Inside selector lever and parking pawl actuator assembly.
- 5. Inside selector lever.
- 6. Electrical connector with a new "O" ring if necessary.

+ ← Install or Connect (Figure 15)

- 1. Thrust washer and bearing.
 - The case bushing acts as a guide for the thrust washer and the bearing.
- 2. Band
- 3. Reaction sun gear and drum assembly.
- 4. Bearing and thrust washer. Use petrolatum to hold the bearing and thrust bearing in place.

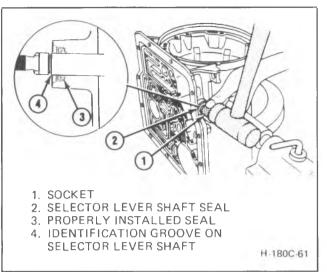



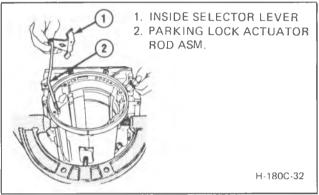


Figure 17 Installing Selector Lever

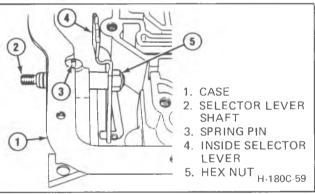


Figure 18 Selector Lever Installed

Planetary Carrier

Inspect (Figure 19)

- Planetary carrier and output shaft for:
 - damage
 - distortion
- Planetary pinions for:
 - damage
 - chipped teeth

🗓 Measure

 Pinion clearance at points A and B with a feeler gage. Clearance should be .127-.889 mm (.005-. 035").

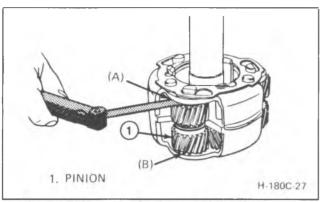


Figure 19 Planetary Carrier and Pinion Clearance



Install or Connect (Figure 20)

- 1. Planetary carrier and output shaft assembly.
- 2. Thrust washer and bearing.
 - Use petrolatum to hold the thrust washer and bearing in place.

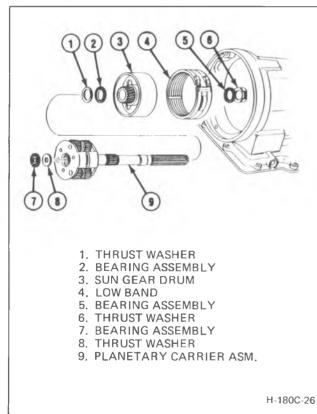


Figure 20 Installing Planetary Carrier

Third Clutch Assembly



Disassemble (Figures 21 and 22)

J-28456 Third Clutch Ring Compressor (Through early 1979)

J-29351 Third Clutch Ring Compressor (late 1979 to current)

- 1. Mount the third clutch assembly in a soft jaw vise as shown.
- Position the five pins of J-28456 in the elongated slot. DO NOT PUT A PIN INTO A SLOT IF THE INTERIOR SNAP RING IS NOT VISIBLE.
- 3. Slide compression ring of J-28456/J-29351 over the pin cage.
- 4. Pull on the input sun gear until the internal snap ring clears the ring groove.
- 5. Remove J-28456/J-29351.
- 6. Sprag assembly.
- 7. Thrust washer and bearing.

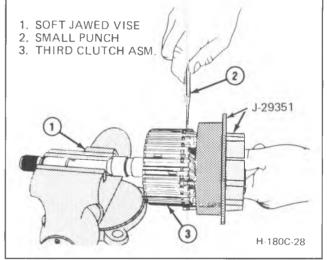


Figure 21 Removing Third Clutch Retaining Ring

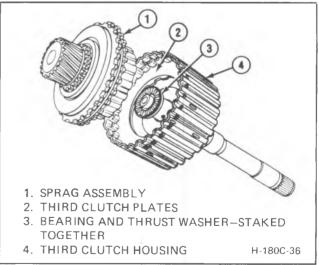


Figure 22 Sprag Assembly and Third Clutch Assembly

NOTICE: If the third clutch plates are not being replaced, they must be installed in their original position.

Tools Required

7A3-8 180C AUTOMATIC TRANSMISSION

Disassemble (Figures 23 and 24)

Tools Required

- J-23075 Servo/Third Clutch Piston Spring Compressor
- 1. Position third clutch and input shaft assembly in a press with the input shaft facing down.
- 2. Compress third clutch piston using J-23075.
- 3. Spring seat snap ring.
- 4. Release the clutch piston.
- DO NOT LET THE SPRING SEAT CATCH IN THE RING GROOVE.
- 5. Spring seat and return springs.
- 6. Clutch piston.

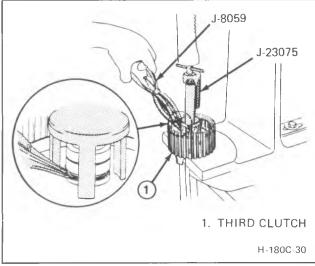


Figure 23 Removing or Installing Third Clutch Piston

Inspect (Figure 26)

- Third clutch piston check ball
 - Shake the piston and listen for check ball movement.

Replace the piston if check ball is missing or falls out.

- Clutch piston lip seal for nicks, cuts, or damage.
- Input shaft lip seal for nicks, cuts, or damage.

Inspect (Figure 26)

- Clutch plates
 - composite plates for damaged tangs, delamination or excessive wear.
 - steel plates for damaged lugs, or heat damage.
- Third clutch drum for damage or worn clutch splines.
- Thrust washer and bearing for damage.




Assemble (Figures 26 and 27)

Tools Required

J-23084 Third Clutch Seal Protector

1. Input shaft lip seal. Lip seal must point toward the input shaft. Lubricate the lip seal with transmission fluid.

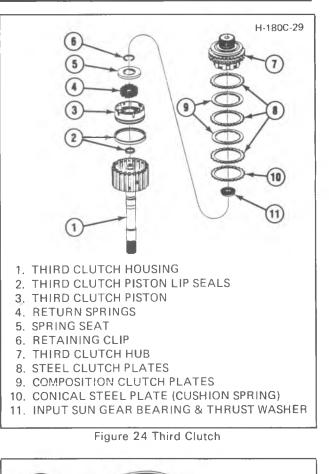



2. Piston lip seal onto the piston as shown.

Lubricate the lip seal with transmission fluid. Use J-23084 to protect the seal during installation.

H-180C-31

- 3. Piston into the clutch drum.
- 4. Remove J-23084.

VIEW A

LIP SEAL

(Figures 23 and 26)

Tools Required

J-23075 Servo/Third Clutch Piston Compressor

- 1. Third clutch piston return springs.
- 2. Spring seat.
- 3. Position the third clutch and input shaft assembly in a press with the input shaft pointing down.


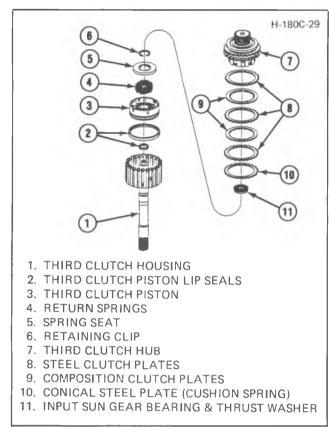


Figure 26 Third Clutch



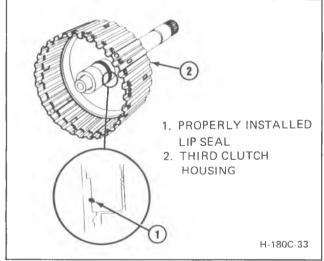


- 4. Compress the piston return springs using J-23075.
- 5. Spring seat snap ring.
- 6. Remove J-23075.

Assemble (Figure 28)

- 1. Third clutch plates into the clutch hub.
 - start with a steel clutch plate and alternate with a composition plate.
- 2. Conical steel plate.
 - bevel faces down

- 3. Align the internal clutch tangs.
- 4. Thrust washer and the bearing.
 - Use petrolatum to hold the thrust washer and the bearing in place.

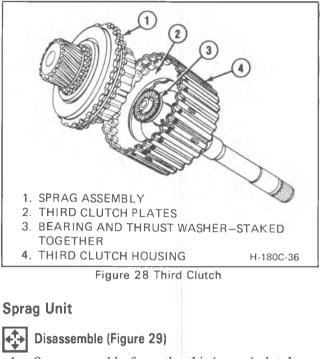

- 1. Sprag assembly from the third speed clutch sun gear.
- 2. Sprag cage and retaining washers from the outer sprag race.

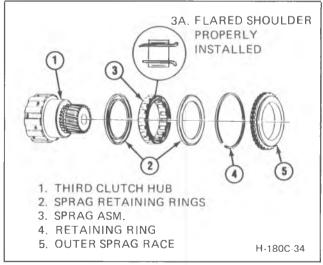


Figure 29 Sprag Assembly



Inspect (Figures 29 and 30)

- Sun gear for nicked or chipped teeth.
- Sun gear sprag surface for pitting or damage.
- Outer sprag race for pitting or heat damage.
- Retaining ring damage.

7A3-10 180C AUTOMATIC TRANSMISSION

Assemble

Retaining rings and sprag cage onto the sun gear. Flared shoulder of the sprag cage faces the sun gear.

8 Important

> This procedure must be followed exactly to be sure that the sprag assembly is installed properly.

- Outer sprag race over the sprag cage. 2.
 - Hold the sun gear with your left hand. The sprag and retainer assembly should hold firmly when turned in a clockwise direction with your right hand.
 - The sprag race and retainer assembly should rotate freely when turned in a counterclockwise direction with your right hand.

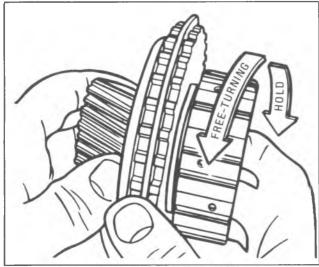


Figure 30 Testing Sprag Assembly

Assemble (Figures 28 and 31) **Tools Required**

J-29351 Third Clutch Ring Compressor (Late 1979 to current) J-28456

- 1. J-29351/J-28456 on the sprag race to compress the retaining ring.
- Sprag assembly into the clutch drum. 2.
- 3. Remove J-29351/J-28456.
- Seat the retaining ring in the ring groove. 4

Second Clutch



Disassemble (Figure 32)

- Retaining ring from the second clutch drum. 1.
- Ring gear, retaining ring, and spacer. 2.

NOTICE: If the second speed clutch plates are not being replaced, they must be installed in their original position.

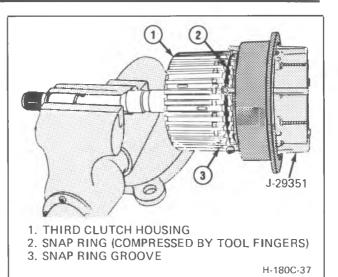


Figure 31 Installing Retaining Ring in Third Clutch

- Second speed clutch plates. 3.
- Thrust washer. 4

Disassemble (Figures 32, 33 and 34)

Tools Required

- J-23327 Clutch Spring Compressor
- J-29838 Clutch Spring Compressor Adapter
- Install J-23327 and J-29838. 1.
- Compress the piston return springs. 2.
- Retaining snap ring. 3.
- Clutch piston. Remove J-23327 and J-29838. 4
- 5. Spring seal and return springs.
- Clutch piston. 6
- Piston lip seal and the clutch drum lip seal if 7. nicked, cut or damaged.


Inspect

- Second speed clutch piston
 - Shake the piston and listen for check ball movement. Movement indicates proper check ball operation. Replace the piston if check ball is missing or falls out.
- Second speed clutch plates
 - composition clutch plates for damaged tangs or delamination
 - steel clutch plates for damaged tangs, wear, or heat damage
- Clutch hub
 - bushing for scoring or damage
 - clutch splines for wear or damage
 - thrust washer for wear or damage

Assemble

Tools Required

- J-23327 Clutch Spring Compressor
- J-29838 Clutch Spring Compressor Adapter J-23080 Second Speed Piston Seal Installer
- 1. Clutch drum lip seal with the lip facing down, if
 - necessary. Lubricate the lip seal with transmission fluid.

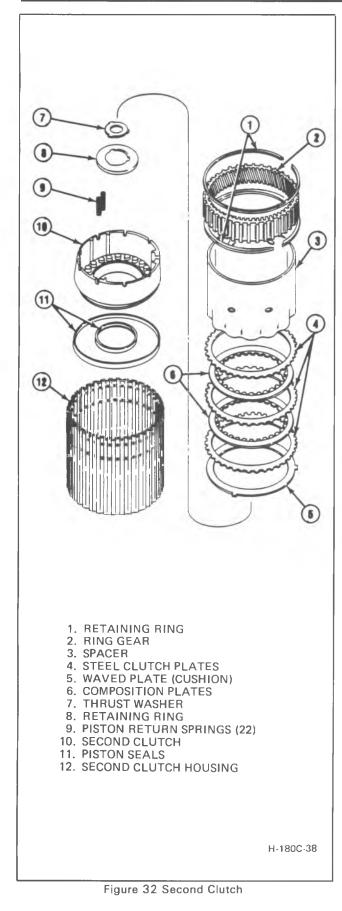

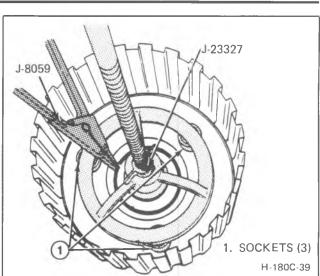


Figure 33 Removing Snap Ring From Second Clutch Piston

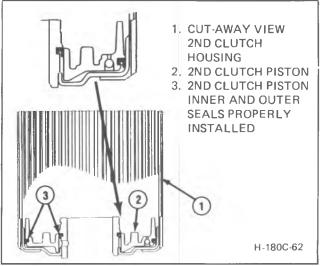


Figure 34 Second Clutch Piston Lip Seals

- Outer piston lip seal with the lip facing down, if 2. necessary. Lubricate the lip seal with transmission fluid.
- Second clutch piston into the clutch drum. 3. Lubricate the lip seals with liberal amounts of transmission fluid. Use J-23080 to protect the outer piston lip seal.
- Remove J-23080. 4.

Assemble (Figure 33)

Tools Required

J-23327 Clutch Spring Compressor

- J-29838 Clutch Ring Compressor Adapter
- J-23080 Second Speed Piston Seal Installer
- 1. Piston return springs and spring seat on the second clutch piston.

2. Use J-23327 and J-29838 to compress the second clutch piston return springs. DO NOT LET SPRING SEAT CATCH IN RING GROOVE.

3. Snap ring.

7A3-12 180C AUTOMATIC TRANSMISSION

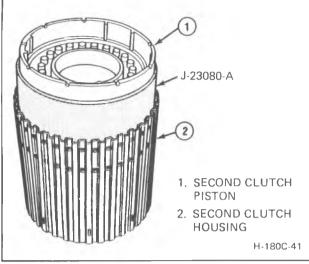


Figure 35 Installing Second Clutch Piston Into Second Clutch Drum

- 4. Remove J-23327 and J-29838.
- Thrust washer. Seat the tang in the slot on the second clutch hub.
 Use petrolatum to hold the thrust washer in
- position.6. Clutch plates into the second clutch drum in the following order:
 - Waved plate
 - Steel plate
 - Composition plate
 - Steel plate
- 7. Align the internal splines of the clutch plates.

Assemble (Figure 32)

- 1. Ring gear spacer.
 - wavy end toward the clutch plates.
- 2. Spacer retaining ring.
- 3. Ring gear.
- -•grooved edge facing up.
- 4. Ring gear retaining ring.

Assemble (Figure 36)

- 1. Third clutch and input shaft assembly into the second clutch drum.
- 2. Second and third clutch assembly.

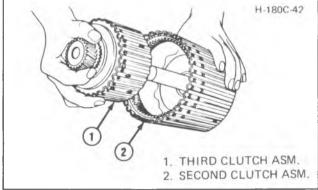


Figure 36 Installing Third Clutch Assembly Into Second Clutch Assembly

Reverse Clutch Parts

Assemble (Figure 37)

- 1. Aluminum pressure plate with the flat side up. LUGS ON PRESSURE PLATE MUST ENGAGE NARROW NOTCH IN THE CASE.
- Reverse clutch plates.
 start with a steel plate and alternate with a
 - composition plate.
- 3. Waved clutch plate. Clutch plate lugs must engage narrow notches in the case.

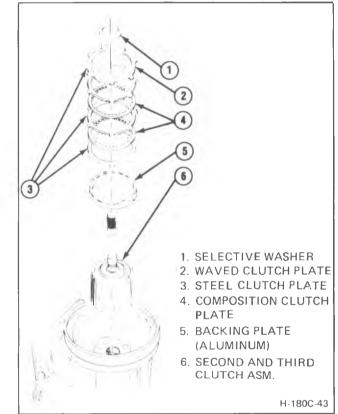


Figure 37 Installing Second/Third Clutch Assemblies Into Case

Determining Selective Washer Thickness



Measure (Figures 38 and 39)

Tools Required

J-23085 Selective Washer Gaging Tool

- 1. Install J-23085 on the case flange and against the input shaft.
- 2. Position the inner shaft of J-23085 against the thrust surface of the second speed clutch hub.
- 3. Tighten thumb screw. Remove J-23085.
- 4. Measure gap "A". Compare measurement "A" to the chart.

Select the thickest washer available without exceeding measurement "A".

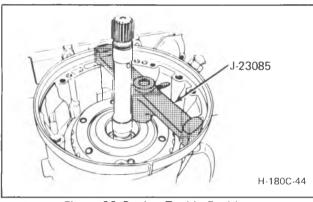


Figure 38 Gaging Tool in Position

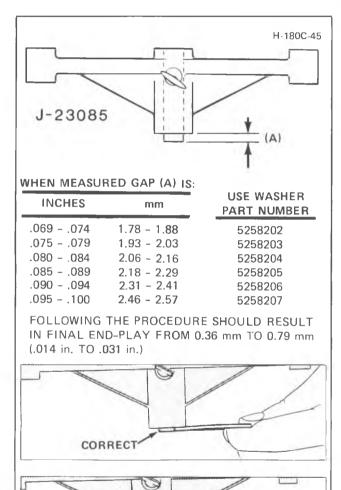


Figure 39 Selective Washer Chart

Converter Housing, Oil Pump and Reverse Clutch


←→ Remove or Disconnect (Figures 40 and 41)

1. Oil pump to case gasket.

INCORRECT-

2. Oil pump outer square cut gasket.

- 3. Five oil pump to converter bolts.
- 4. Separate the oil pump from the converter housing.
- 5. Oil pump wear plate.
- 6. Oil pump gears.

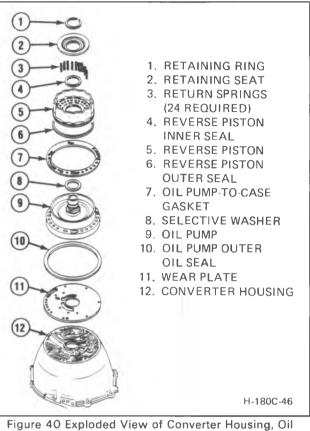

gure 40 Exploded View of Converter Housing, Oi Pump and Reverse Clutch

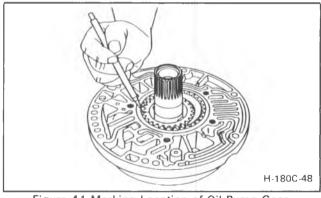


Figure 41 Marking Location of Oil Pump Gear

◆ Disassemble (Figures 40 and 42)


Tools Required

J-23327 Clutch Spring Compressor

- 1. Install J-23327.
- 2. Compress the reverse clutch return springs.
- 3. Retaining ring.
- 4. Release the reverse clutch return springs. DO NOT LET SPRING SEAT CATCH IN RING GROOVE.
- 5. Remove J-23327, spring seat, and return springs.

7A3-14 180C AUTOMATIC TRANSMISSION

- 6. Reverse clutch piston. Apply compressed air to the "apply" oil passage.
- Inner and outer piston oil seals if necessary. 7.

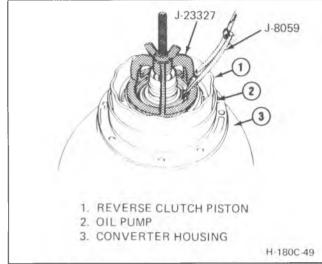



Disassemble (Figure 43)

Do not remove the converter clutch control valve, pressure regulator valve, or the reverse boost valve, unless determined by oil pressure checks to be malfunctioning.

CAUTION: Valves are under spring pressure, use caution when disassembling.

- 1. Retaining pin from the converter clutch control port.
- 2. Oil pump boost valve sleeve, boost valve, spring, spring seats, and valve.
- Screen, retainer, valve and spring. 3
- Oil pump seal rings. 4.
- 10

Inspect (Figures 43 and 44)

- Reverse boost valve, pressure regulator valve, and . the converter clutch control valve for:
 - nicks
 - scoring
 - damage
- Oil pump seal rings for:
 - side wear
 - damage

Clean

- Thoroughly clean the pressure regulator valve, reverse boost valve, and the converter clutch control valve.
- Soak valves in transmission fluid.

Assemble

- 1. Spring, valve, retainer and screen.
- 2. Plug, valve, spring seats, spring, oil pump boost valve, sleeve, and retaining ring.
- 3. (2) Piston oil seals.

-X-Assemble (Figures 45 and 46)

Tools Required

J-23327 Clutch Spring Compressor

- Inner and outer piston oil seals. 1
- 2. Reverse clutch piston onto the rear face of the oil pump.
- Clutch return springs. 3.
- 4. Spring seat and snap ring.
- 5. Install J-23327.
- Compress clutch piston return springs. 6.
- Snap ring. Remove J-23327. 7.

Assemble

Oil pump gears with tangs on the driven gear facing up.

Measure (Figure 47)

Use a straight edge and a feeler gage to measure between the gear face and the pump face. Clearance should be .0127-.0839 mm (.0005-. 00325").

-X-Assemble (Figures 40, 48 nd 49)

Tools Required

J-23082 Converter Housing to Oil Pump Alignment Tool

J-21359 Seal Installation Tool

Important

Failure to use J-23082 will cause pump damage when transmission is operated after assembly.

- 1. Oil pump wear plate.
- 2. Converter housing oil seal. Use J-21359.
- 3. Converter housing onto the oil pump.
- Loosely install oil pump bolt. 4
- 5 Install J-23082. Tool will bottom out on the oil pump gear.
- Tighten oil pump bolts to half torque, then 6. go to 19 N·m (14 lb.-ft.) in an alternating pattern.
- 7. Remove J-23082.

Assemble (Figures 50 and 51)

- Oil pump to case gasket. 1
- 2. Oil pump outer square cut oil seal.
- 3. Converter housing and reverse clutch assembly. Use guide pins.
- 4. Converter to case bolts.

Tighten

Torque bolt to 33 N·m (25 lbs.-ft.). Rotate input shaft to check for proper assembly.

Install or Connect

. Input "O" ring.



- - Ð


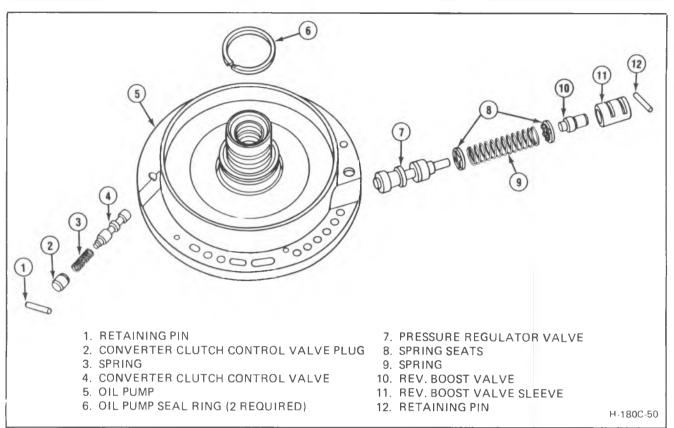


Figure 43 Exploded View - Valves in Oil Pump

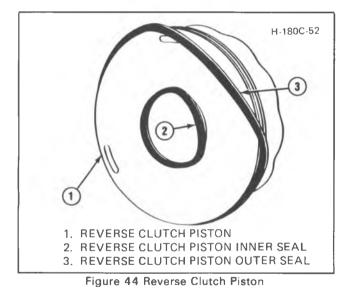

Governor Hub

Inspect (Figures 52 and 53)

- Seal rings for nicks, burrs, or damage.
- Governor hub oil screen.
- Governor hub splines for;
 - cracks
 - chipped teeth

- Assemble

1. Oil screen flush with the governor hub.

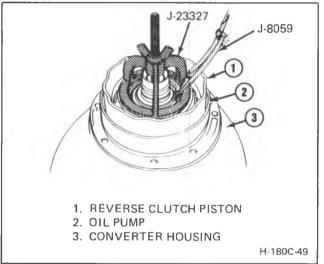


Figure 45 Compressing Reverse Clutch Piston Retainer

- 2. Seal rings if necessary.
- 3. Governor hub.
- 4. Snap ring.

Governor Body and Speedometer Drive Gear



- 1. Secondary valve spring retainer.
- 2. Secondary valve spring, secondary valve, and the primary valve.

7A3-16 180C AUTOMATIC TRANSMISSION

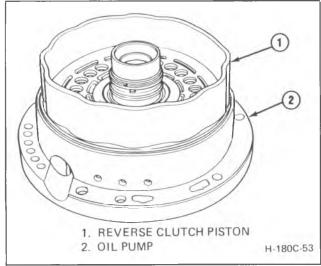


Figure 46 Installing Reverse Clutch Piston Into Oil Pump

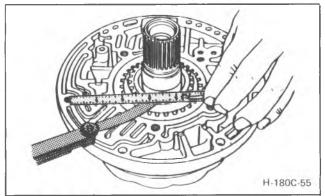


Figure 47 Checking Oil Pump Gear Clearance

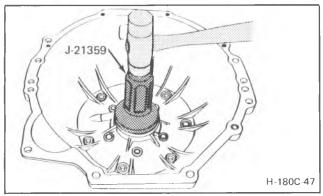


Figure 48 Installing Front Oil Seal



- Primary and secondary valves for:
 - nicks
 - burrs
 - Oil passages and valve bores for:
 - nicks
 - burrs
 - varnish

Inspect (Figure 54)

1. Primary valve, small end first.

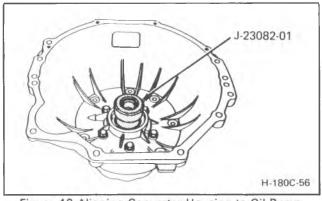


Figure 49 Aligning Converter Housing to Oil Pump


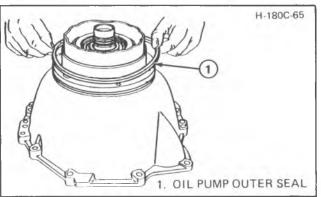


Figure 50 Installing Oil Pump Outer Seal



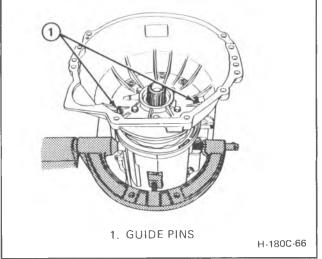


- 2. Secondary valve, small end first.
- 3. Secondary spring and retainer.
- 4. Governor body, gasket, bolts.

হ্ Tighten

Torque bolts to 8 N·m (6 lbs.-ft.).
 Valve should move freely.

Assemble

• Speedometer drive gear and retaining clip.

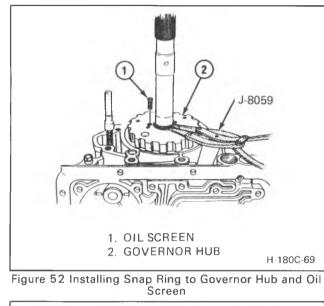

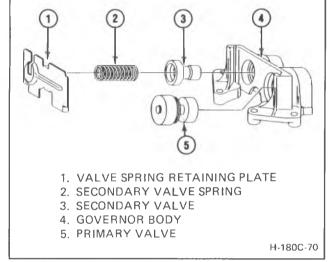


Figure 53 Governor Assembly - Exploded View

Extension Housing and Speedometer Drive Gear

- - Extension housing for cracks or porosity.
 - Parking pawl and spring.


Inspect (Figure 55)

Assemble (Figures 56 and 57)

Tools Required

J-21426 Extension Housing Seal Installer

- 1. Extension housing seal, use J-21426.
- 2. Gasket.
- 3. Align the parking pawl actuator rod into the extension housing.
- 4. Extension housing bolts.
- ົວ Tighten
- Extension housing bolts to 31 N·m (32 lbs.-ft.).

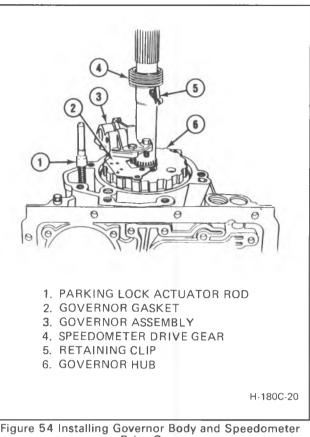

Drive Gear

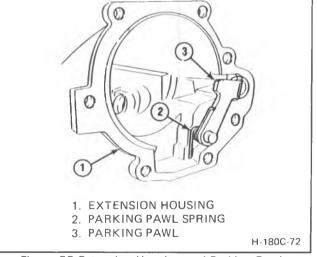


Figure 55 Extension Housing and Parking Pawl



1.


Assemble

- Speedometer driven gear housing and "O" ring if necessary.
- 2. Bolt and speedometer guide bracket.

ົວ Tighten

Torque bolt to 9.5 N·m (7 lbs.-ft.).

7A3-18 180C AUTOMATIC TRANSMISSION

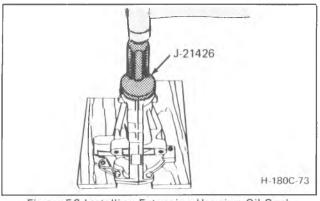



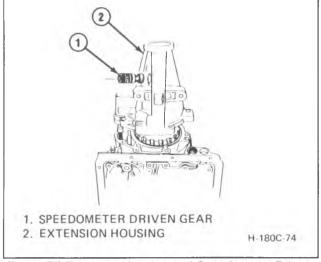


Figure 57 Extension Housing and Speedometer Driven Gear

Detent Valve and Modulator

Inspect (Figures 58 and 59)

- Detent valve sleeve for nicks, scratches, or scoring.
- Detent valve for nicks, or scoring.
- Modulator plunger for nicks, scratches, or scoring.
- Modulator valve sleeve for nickes, scratches, or scoring.
- Modulator valve for nicks, scratches, or scoring.

- Assemble

Tools Required

J-23100 Modulator Wrench

- 1. Spring seats, spring, detent valve, SLOTS FACE OIL PAN. Detent valve sleeve, oil seal, and retaining pin.
 - Lubricate with transmission fluid.
- 2. Modulator valve sleeve, small end first.
 - TAB MUST ENGAGE SLOT IN MODULATOR BORE.
- 3. Modulator valve and plunger.
- 4. "O" ring onto the modulator assembly.

NOTICE: Use of another tool to install the vacuum modulator may result in internal damage to the modulator.

5. Modulator assembly.

I Tighten

• Torque modulator to 52 N·m (38 lbs.-ft.)

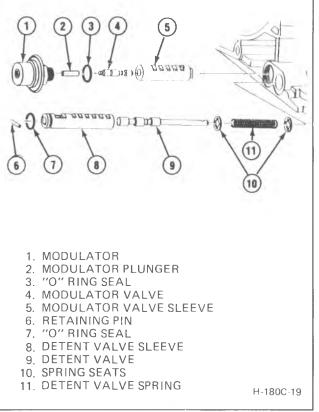


Figure 58 Installing Detent Valve and Modulator Valve

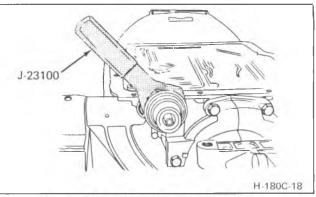


Figure 59 Installing Vacuum Modulator

Servo Piston



- 1. Servo piston and apply rod.
- 2. Locknut.
- 3. Position servo piston and sleeve in a press.
- 4. Compress the cushion spring.

180C AUTOMATIC TRANSMISSION 7A3-19

- 5. Retaining clip.
- 6. Release the cushion spring.
- 7. Sleeve, spring seat, cushion spring and adjusting bolt.



Inspect

- Servo piston ring for;
 nicks,burrs, or side damage
 - Piston sleeve for nicks, or burrs
- Apply rod for nicks, burrs, or scoring

Assemble

- 1. Spring seat and cushion spring onto the sleeve.
- 2. Insert the sleeve into the piston.
- 3. Position the piston and sleeve in a press.
- 4. Compress the cushion spring.
- 5. Retaining clip.
- 6. Release the cushion spring.

- 1. Adjusting bolt into the sleeve.
- 2. Locknut. Do not tighten.
- 3. Piston ring, if necessary.

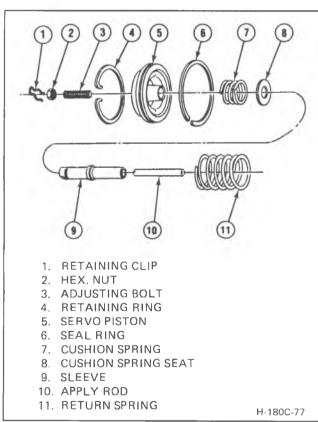


Figure 60 Servo Piston - Exploded View

Install or Connect (Figures 61, 62 and 63)

Tools Required

J-23075 Servo and Clutch Piston Compressor

- 1. Servo apply rod, return spring, and piston.
- 2. Install J-23075 with tool offset toward the rear of the case.
- 3. Compress the servo piston return spring using J-23075. Tap servo piston with a rubber mallet while compressing the return spring to seat the piston ring.
- 4. Retaining ring.
- 5. Remove J-23075.

Adjust

- 1. Torque adjusting bolt to 4.5 N·m (40 lbs.-in.).
- 2. Back off the adjusting screw exactly 5 turns.
- 3. Tighten locknut securely.

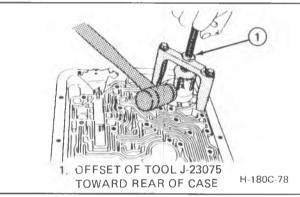


Figure 61 Installing Servo Assembly

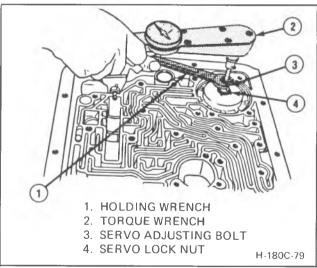


Figure 62 Adjusting Servo Apply Rod

Control Valve Assembly



Disassemble (Figure 64)

- 1. Manual valve and manual valve link.
- 2. Bolts, transfer plate and gaskets.

7A3-20 180C AUTOMATIC TRANSMISSION

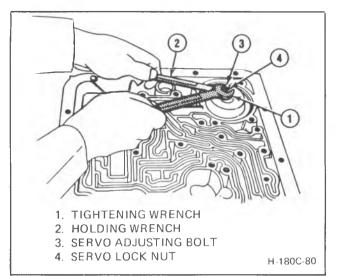


Figure 63 Tighten Servo Nut

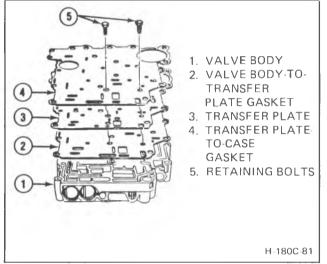


Figure 64 Removing Transfer Plate

Clean (Figure 65)

• Control valve assembly thoroughly in cleaning solvent. Move the valves with a pick or small

screwdriver to dislodge any dirt or debris that may have accumulated.

Disassemble

- Position the control valve as shown on a clean surface.
 - Remove the valve trains beginning with the upper left hand corner.
 - Some of the valves are under pressure--cover the bores while removing the retaining pins.
 - Remove blind hole roll pins with a modified drill bit.
 - Valves, springs, and sleeves must be laid out on a clean surface in the exact sequence they are removed.

Clean


- All valves, springs, sleeves and control valve body.
- Dry using compressed air.

Inspect

- All valves and sleeves for:
- porosity
 - scoring
 - nicks
- scratches
- Springs for damaged or distorted coils
- Valve body casting for:
 - porosity
 - cracks
 - interconnected oil passages
 - damaged machined surfaces.

- Assemble

- Control valve assembly exactly as shown.
- Notice the position of the valve lands and sleeves position.

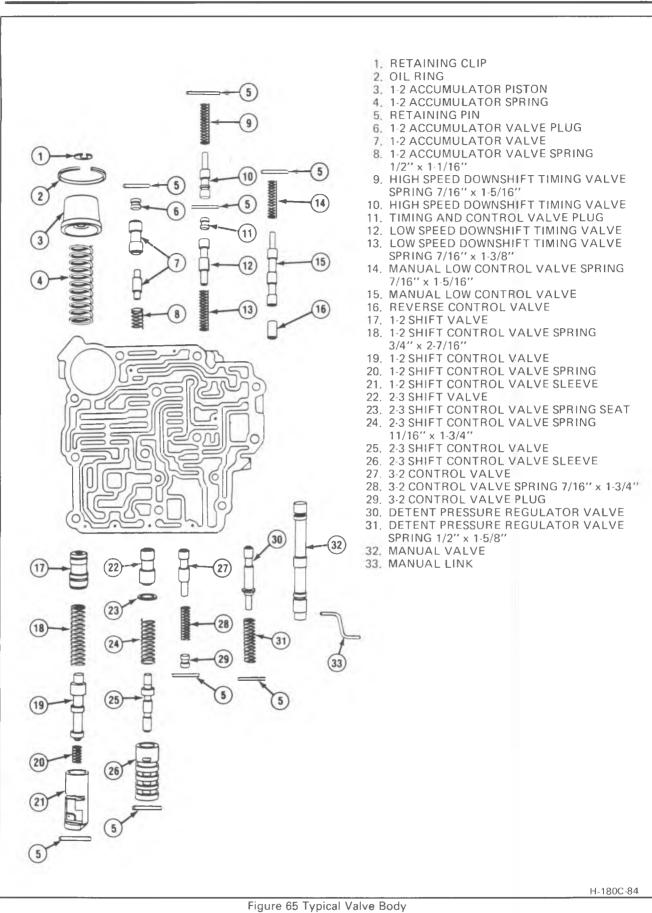

7A3-22 180C AUTOMATIC TRANSMISSION

*

- Assemble (Figures 64)

- Gasket, transfer plate, and bolts.
 Torque to 9.5 N•m (7 lbs.-ft.)
- 2. Manual valve and manual valve link.



- 1. Check balls.
- 2. Gasket
- 3. Control valve. Position manual valve link as shown.
- 4. Bolts
 - Torque to 19 N·m (14 lbs-ft.).

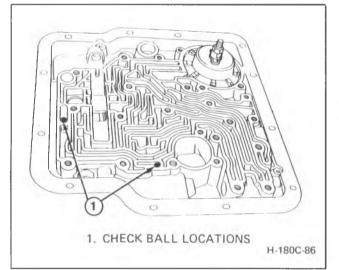


Figure 66 Installing Check Balls in Oil Passages

External Parts

→← Install or Connect (Figure 68)

- 1. Bolts and selector lever roller and spring. - torque to 13 N ⋅ m (9 lbs.-ft.).
- Bolts, reinforcement plate, and ground wire.
 torque to 19 N ⋅ m (14 lbs.-ft.).
- 3. Governor pressure switch. → torque to 10 N · m (7 lbs.-ft.).
- 4. Solenoid tubing, solenoid and bolts.
 - torque to 19 $N \cdot m$ (14 lbs.-ft.).
 - make sure tubing does not interfere with manual valve operation.
- 5. Electrical connections.

++

Install or Connect (Figures 69 and 70)

- 1. Servo cover, gasket and bolts
 - torque to 24.4 N·m (18 lbs.-ft.).

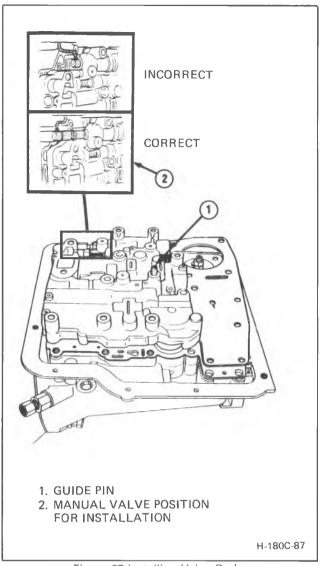


Figure 67 Installing Valve Body

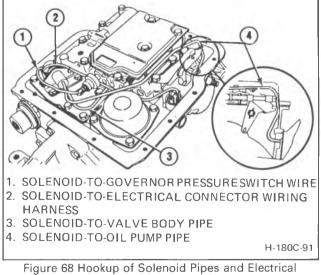


Figure 68 Hookup of Solenoid Pipes and Electrical Wires

- 2. Oil strainer, gasket, and bolts.
 - torque to 18.9 N·m (14 lbs.-ft.).

- 3. Oil pan, gasket, and bolts. ↓ torque to 11 N·m (8 lbs.-ft.).
- 4. Torque converter.

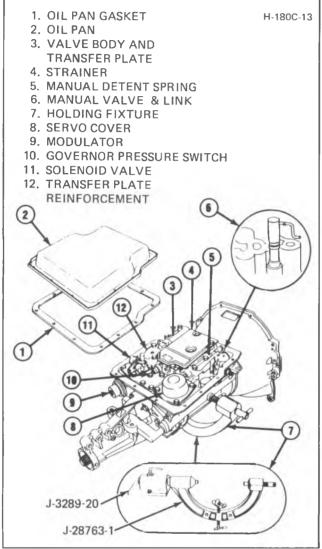


Figure 69 External Parts

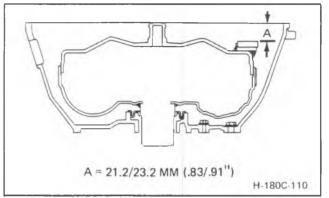



Figure 70 Proper Converter Installation

7A3-24 180C AUTOMATIC TRANSMISSION

TORQUE SPECIFICATIONS		
ITEM	N∙m	LB.FT.
OIL PAN-TO-CASE	11	8
MODULATOR ASSEMBLY	52	33
EXTENSION HOUSING-TO-CASE	31	23
OIL PRESSURE CHECK PLUG	8	6
CONVERTER HOUSING-TO-CYLINDER BLOCK	34	25
TRANSMISSION SUPPORT-TO-EXTENSION	44	33
SHIFT LEVER-TO-SELECTOR LEVER SHAFT	27	20
DETENT CABLE, RETAINER-TO-CASE	9	6
OIL COOLER FITTINGS-TO-CASE	20	15
OIL COOLER FITTINGS-TO-RADIATOR	27	20
OIL COOLER HOSE CLAMPS-TO-COOLER LINES	1	.7
SHIFTER ASS'Y-TO-CONSOLE	9	7
NEUTRAL SAFETY SWITCH-TO-BRACKET	2	1
LOWER COVER-TO-CONVERTER HOUSING	10	7
FLEXPLATE-TO-CONVERTER	48	35
TRANSFER PLATE-TO-VALVE BODY	9	7
REINFORCEMENT PLATE-TO-CASE	19	14
VALVE BODY-TO-CASE	19	14
SERVO COVER-TO-CASE	24	18
CONVERTER HOUSING-TO-OIL PUMP	19	14
CONVERTER HOUSING-TO-CASE	33	25
SELECTOR LEVER LOCKNUT	12	9
GOVERNOR BODY-TO-GOVERNOR HUB	8	6
SERVO ADJUSTING BOLT LOCKNUT	18	14
GOVERNOR PRESSURE SWITCH	10	7
SOLENOID	19	14
OIL STRAINER	18.9	14
		H-180C-9

Figure 71 Torque Specifications

180C AUTOMATIC TRANSMISSION 7A3-25

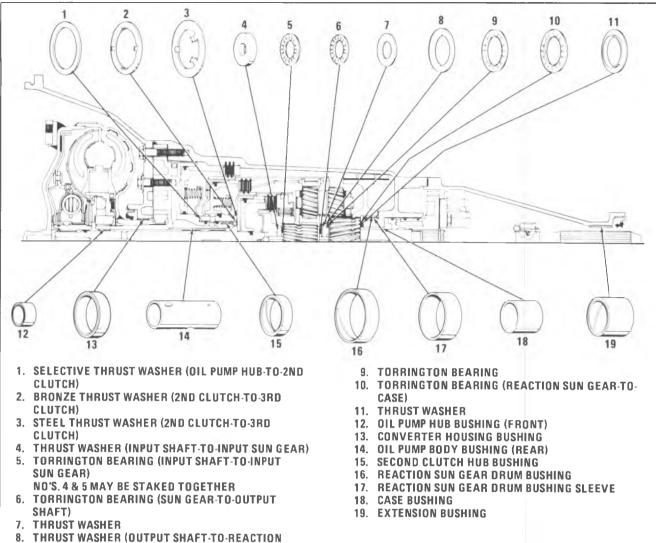



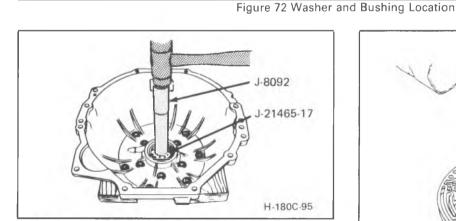


Figure 73 Removing or Installing Converter Housing Bushing

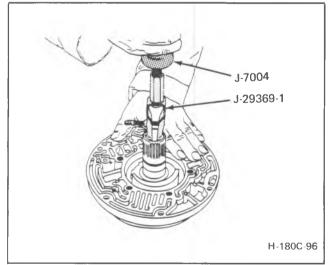


Figure 74 Removing Oil Pump Bushing - Front

H 180C-58

7A3-26 180C AUTOMATIC TRANSMISSION

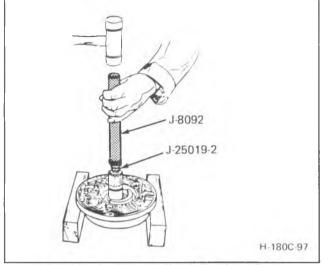


Figure 75 Installing Oil Pump Bushing - Front

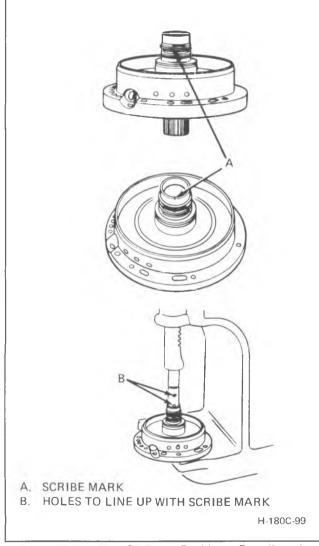


Figure 77 Installing Oil Pump Bushing – Rear (Inner)

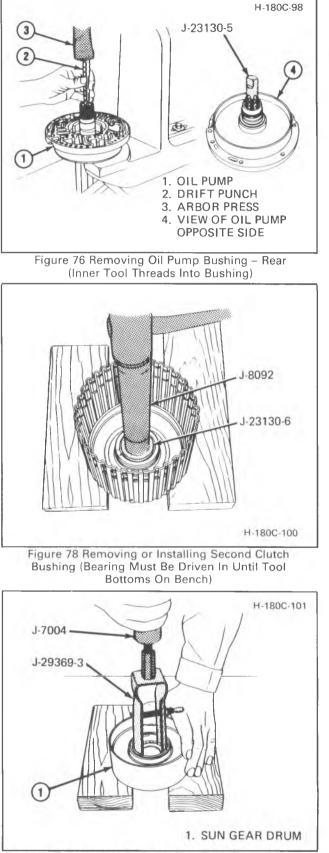
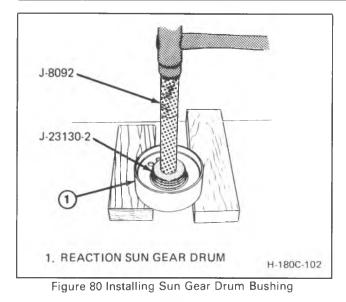


Figure 79 Removing Reaction Sun Gear Drum Bushing

180C AUTOMATIC TRANSMISSION 7A3-27



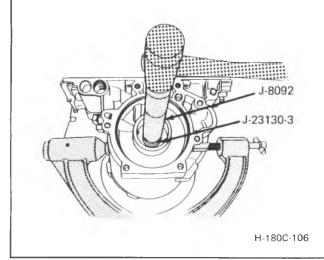


Figure 82 Removing or Installing Case Bushing

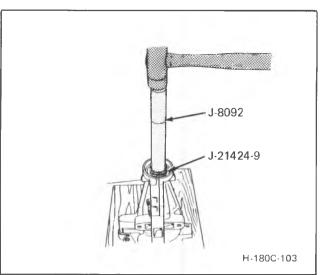


Figure 81 Removing or Installing Extension Housing Bushing

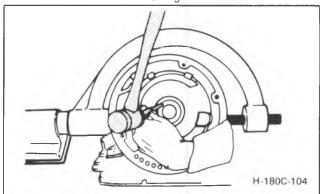


Figure 83 Removing Reaction Sun Gear Drum Bushing Sleeve

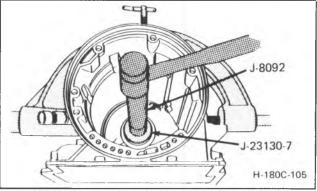


Figure 84 Installing Reaction Sun Gear Drum Bushing Sleeve

7A3-28 180C AUTOMATIC TRANSMISSION

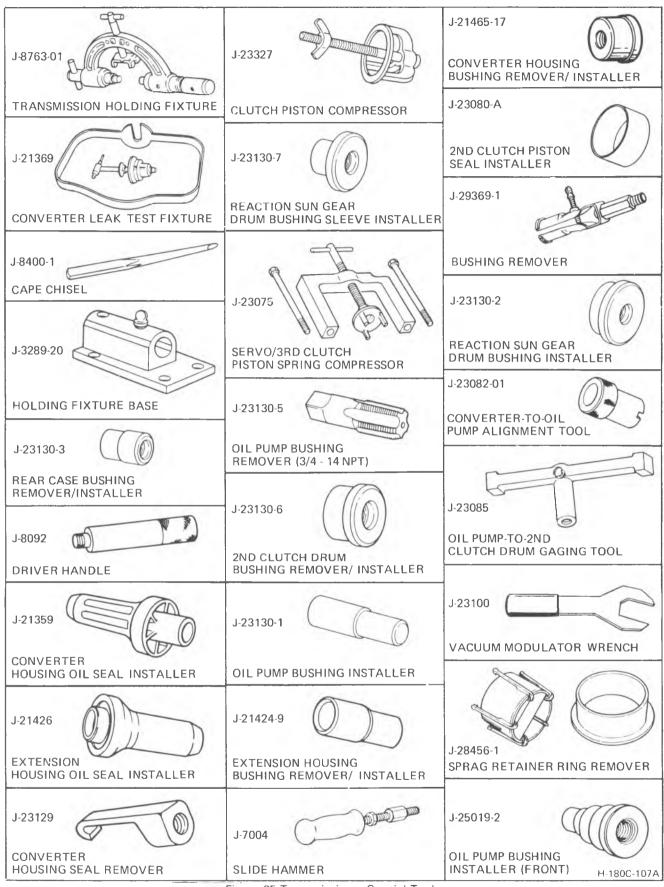


Figure 85 Transmission – Special Tools

SECTION 7B

MANUAL TRANSMISSION

CONTENTS

SUBJECT

PAGE

Hydra-matic Muncie Transmission	7B1-1
New Process Transmission	7B2 -1
Borg Warner Transmission	7B3-1

SECTION 7B1

HYDRA-MATIC MUNCIE TRANSMISSION

CONTENTS

SUBJECT

Disassembly of the HM-117 Transmission	7B1- 3
Disassembly and Assembly of Sub-Assembly	
Main Drive Gear	
Mainshaft	
Countergear	
Rear Bearing Retainer	
Main Drive Gear Bearing Retainer	
Shift Cover	
Transmission Assembly (Installation of Sub-Assemblies).	
Specifications	
Fastener Torque	
Lubrication	
Special Tools	7B1- 19

PAGE

SECTION 7B1

HYDRA-MATIC MUNCIE TRANSMISSION

CONTENTS (CONT.)

SUBJECT

PAGE

Disassembly of the HM-290 Transmission7E	31-21
General Service Information	31-21
2WD Rear Housing Removal	31-33
4WD Rear Housing Removal	31-35
Disassembly and Assembly of Mainshaft 2WD and 4WD7E	31-37
Countershaft Inspection	31-53
Disassembly and Assembly of Reverse Idler Gear	31-53
Disassembly and Assembly of Front Housing Assembly7E	31-53
Disassembly and Assembly of Rear Housing Assembly7E	31-61
Shift Shaft/Rail and Fork Assemblies Inspection	31-63
Shift Lever Housing Assembly Inspection	31-64
Input Shaft Bearing Retainer Assembly7E	31-64
Countershaft Endplay Adjustment	31-65
Input Shaft Bearing Retainer Selective Shim Procedure7E	31-68
Output Shaft Bearing Selective Shim Procedure7E	31-69
Transmission Assembly	31-70
2WD Models	31-70
4WD Models	31-74
2WD and 4WD	31-76
Specifications	31-82
Fastener Torque	
Lubrication	
Special Tools	31-83


DISASSEMBLY OF THE HM-117 TRANSMISSION

Remove or Disconnect (Figures 21 and 22)

- Tools Required:
 - J-28509-A Countergear Front Bearing Remover
 - J-8433 Bearing Puller
 - J-22832-01 Countergear and Mainshaft Rear Bearing Remover
 - J-35907 Mainshaft Lock Nut
 - Wrench (4WD models only)
- Speedometer driven gear, switches and any external components.
- 1. Shifter housing.
 - · Remove shifter housing bolts.
 - Move the reverse shift fork to partially engage the reverse idler gear.
 - Lift off the housing.
- 2. Flange nut (221).
- 3. Brake drum and the flange, or the yoke (220).
- 4. Parking brake assembly.
 - Mainshaft lock nut (256) and the washer using J-35907 (4WD models only).
- 5. Rear bearing retainer (223) and the gasket.
- 6. Speedometer gear (219).

- 7. Front bearing retainer (202) and the gasket.
- 8. Cover (238) and the gasket.
- 9. Bearing (237), using J-28509-A (figure 23).
- 10. Snap rings (225 and 226).
- 11. Bearing (228), using J-22832-01 and J-8433, (figure 24).
 - J-22832-01 must be seated in the groove completely.
- 12. Main drive gear (201).
 - Remove the bearing to case (large) snap ring.
 - Rotate the gear so the cutout portion is down to clear the countershaft, (figure 25).
 - Pull the drive gear from the case.
- 13. 4th speed blocker ring (204).
- 14. Bearing snap ring (218).
- 15. Bearing (224), using J-22832-01 and J-8433, (figure 26).
 - 1st speed thrust washer.
- 16. Mainshaft (250) from the case.
- 17. Countershaft (227) from the case.
- 18. Idler gear (230) and the shaft.
 - Drive the shaft from the case.

7B1-4 HM-117 MANUAL TRANSMISSION

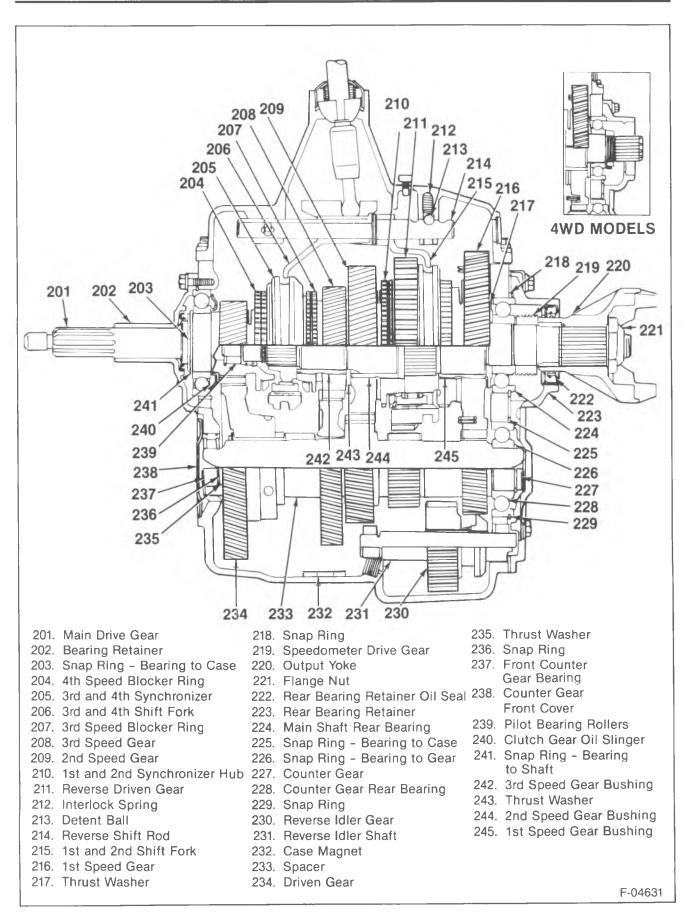



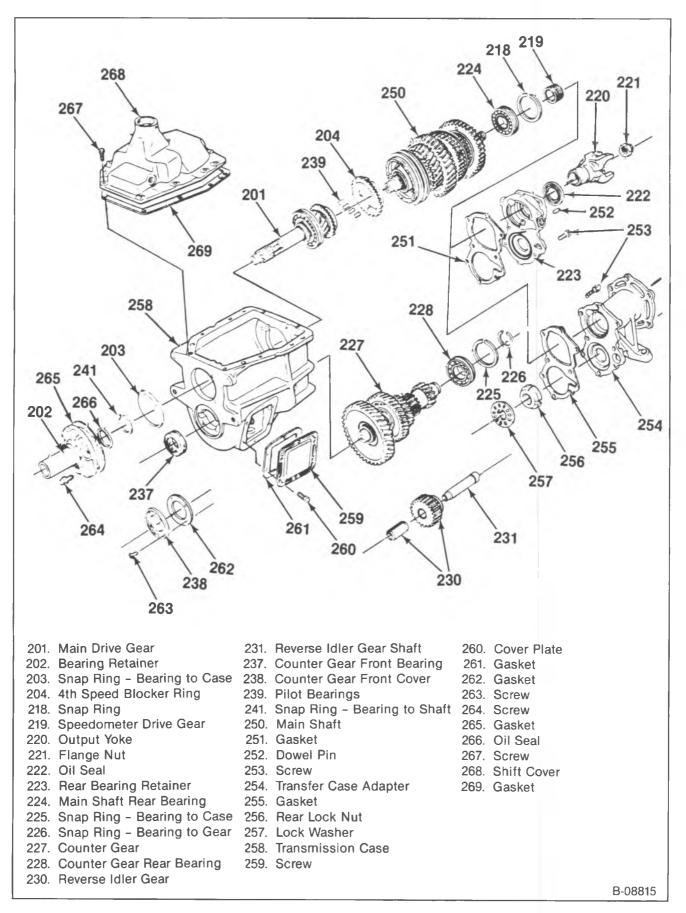


Figure 22—Transmission Components

7B1-6 HM-117 MANUAL TRANSMISSION

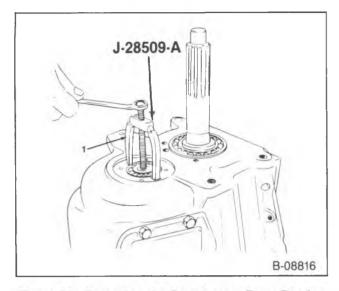


Figure 23—Removing the Countergear Front Bearing

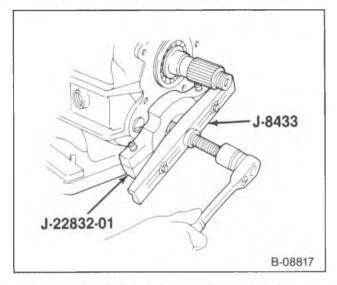


Figure 24—Removing the Countergear Rear Bearing

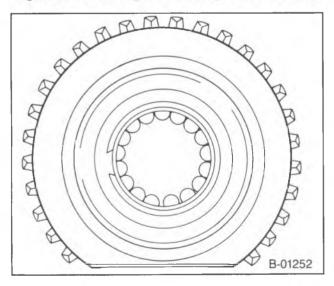


Figure 25—Main Drive Gear Cutout


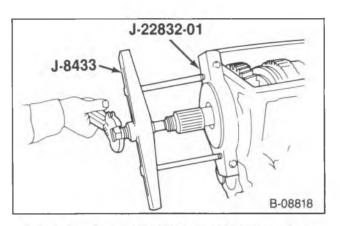


Figure 26—Removing the Mainshaft Rear Bearing

DISASSEMBLY AND ASSEMBLY OF SUB-ASSEMBLIES



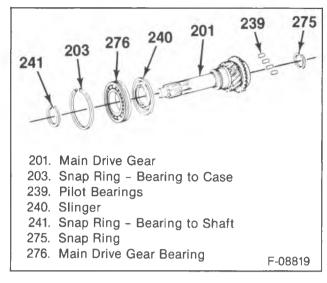

MAIN DRIVE GEAR

Disassemble (Figure 27)

- Tools Required: J-358-1 Bearing Remover Holder J-22872 Drive Gear Bearing Remover 1. Pilot bearings (239).
 - · Do not remove the snap ring from the bore.
- 2. Bearing retainer (276).
- 3. Snap ring (241).
- 4. Bearing (278), using J-358-1 and J-22872, (figures 28 and 29)
- 5. Slinger (240).

Clean

All parts in a suitable solvent.

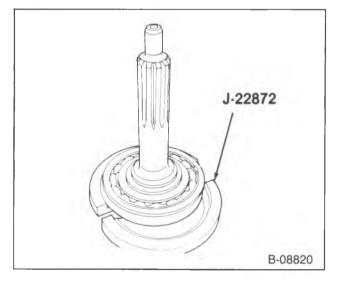


Figure 28—Installing Tool J-22872

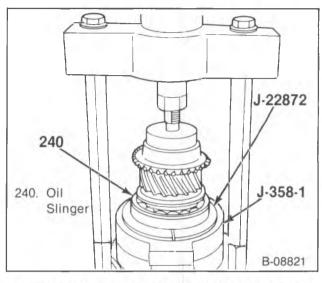


Figure 29—Removing the Main Drive Gear Bearing

Important

• Do not spin the bearings dry.

Inspect

- 1. Parts for damage and wear.
- 2. Oil the bearings and check for roughness.

🛧 Asseml

9

Assemble (Figures 27 and 30)

- Tools Required: J-358-1 Bearing Remover Holder J-22872 Drive Gear Bearing Remover
- 1. New slinger (240).
 - The concave side goes toward the gear.

Important

• Do not damage or bend the slinger when installing the bearing.


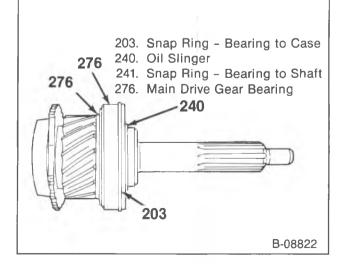


Figure 30—Main Drive Gear Assembly

7B1-8 HM-117 MANUAL TRANSMISSION



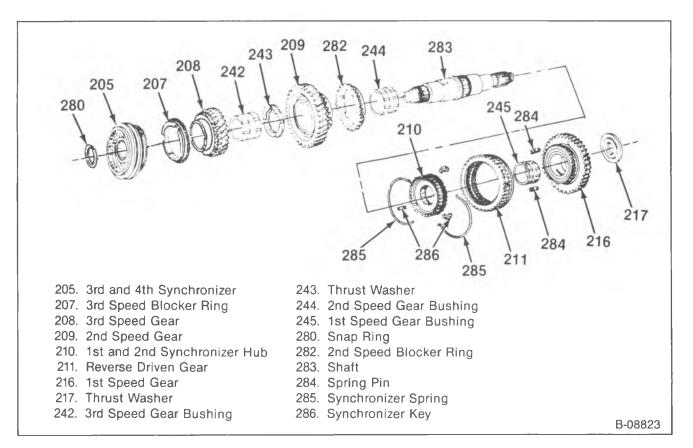

- Bearing (277), using J-358-1 and J-22872, (figures 28 and 29).
 - The bearing snap ring groove goes away from the gear.
- 3. New bearing to shaft (small) snap ring (241).
- 4. New bearing to case (large) snap ring (203).
- 5. Pilot bearings (239).
 - Use chassis grease to hold the bearings in place.

MAINSHAFT

Disassemble (Figure 31)

- 1. Thrust washer and the 1st speed gear (216).
- 2. Reverse driven gear (211), the synchronizer keys and springs.
 - Do not loose the keys and springs.
- 3. 3-4 synchronizer snap ring (280).
 - Do no let the synchronizer come apart.
- 4. 3-4 synchronizer, the 3rd speed gear (208), the 2nd speed gear (209), the bushing, and the thrust washer (243).
 - Support the second speed gear and press the mainshaft out, (figure 32).



- Important
- Do not let the mainshaft fall to the floor.
- 5. 2nd speed blocker ring (282).
- 6. 1st speed gear bushing and the 1-2 synchronizer hub (210).

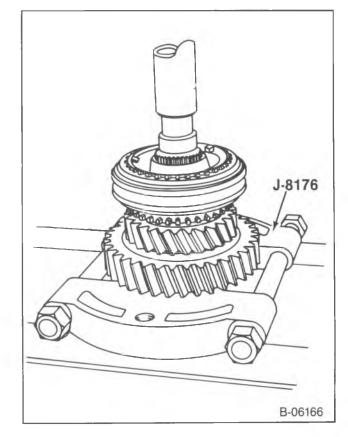


Figure 32—Removing the Mainshaft from the 2nd and 3rd Speed Gears

HM-117 MANUAL TRANSMISSION 7B1-9

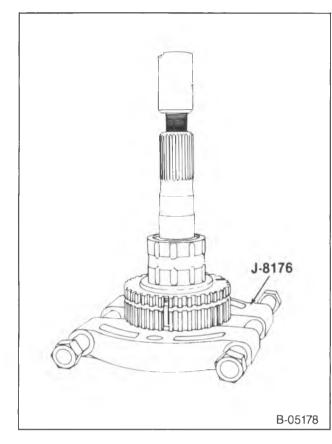


Figure 33—Removing the Mainshaft from the 1st and 2nd Speed Synchronizer Hub

• Support the hub on J-8176 and press the mainshaft out, (figure 33).

Important


• Do not let the mainshaft fall to the floor. 7. 2nd speed gear bushing (244).

 Use a cold chisel to split the bushing if it is worn or damaged.

Important

• Do not scratch or gouge the mainshaft. 8. 3-4 synchronizer (205), (figure 34).

- The synchronizer (200), (lighte 34).
 The synchronizer hub and sleeve are a select
 - fit. Do not mix the parts of the two synchronizers.

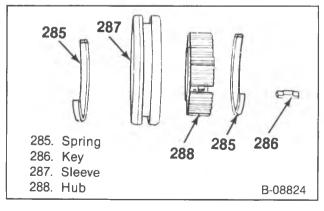



- Mark the hub and sleeve alignment for reassembly.
- Push the hub out of the sleeve while holding the springs and keys to avoid loosing them.

Clean


All parts in a suitable solvent and air dry.

Important

· Do not spin dry the bearings.

Inspect

- Gears for cracks, chipped gear teeth, and other damage that could cause gear noise.
- Thrust washers and bushings for damage and wear.
 Related surfaces on the gears like thrust faces and bearing surface diameters.
- 4. The reverse sliding gear for a sliding fit on the synchronizer hub without excess radial or circular play. If the sliding gear is not free on the hub, inspect it for burrs on the ends of the internal splines. Remove any burrs by honing as required.
- 5. Synchronizer sleeves for a sliding fit on the synchronizer hubs and for the hubs a snug fit on the mainshaft splines.
- 6. Synchronizer springs and keys for looseness and damage.
- 7. Brass synchronizer rings for excess wear and damage.
- All gear teeth for excess wear.
- 9. Bearings and bearing surfaces for nicks, burrs and wear.
- 10. Lubricate all roller bearings with light engine oil and check for rough rotation.

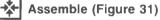

Tools Required:

J-22873 Mainshaft Bushing Installer J-22875 3rd Gear Assembly Tool

NOTICE: The mainshaft 1st, 2nd and 3rd speed gear bushings are sintered iron. The bushings could be damaged if they are not properly installed. The bushings must be installed in the proper positions.

- 1. 3-4 synchronizer (205), (figure 35).
 - Place the keys in the hub.
 - Engage the springs in different slots in either side of the hub so they support all the keys.
 - Slide the sleeve onto the hub aligning the marks made during disassembly.
- 2. 2nd speed bushing, using J-22873, (figure 36).
- 3. 1-2 synchronizer hub (210), (figure 37).
 - A minimum press of 681 kg (1500 lbs.) is required to move the hub.
 - The annulus must be to the rear of the shaft.
- 4. Synchronizer keys and the springs.
- 5. 1st speed bushing (245), using J-22873, (figure 38).
- 6. 2nd speed blocker ring, the 2nd speed gear (209)
 - and the 3rd speed thrust washer (243) (figure 39).
 The tab on the thrust washer must be in the slot in the mainshaft.
- 7. 3rd speed bushing (242) using J-22875 (figure 39).

7B1-10 HM-117 MANUAL TRANSMISSION ANUAL

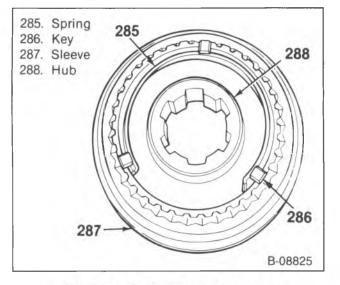


Figure 35—Synchronizer Assembled

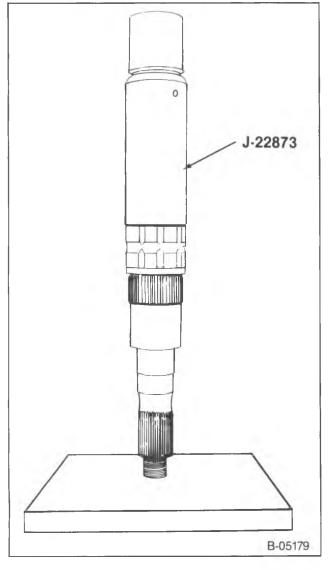


Figure 36—Installing the 2nd Speed Bushing

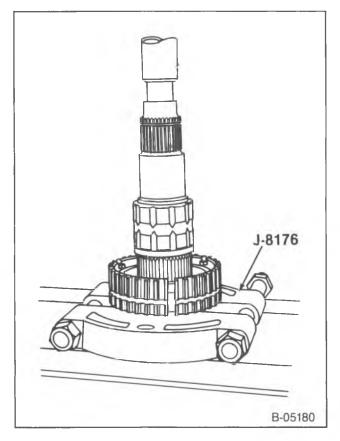


Figure 37—Installing the 1st and 2nd Synchronizer

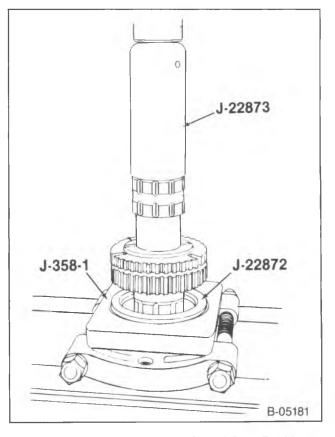


Figure 38—Installing the 1st Speed Gear Bushing

HM-117 MANUAL TRANSMISSION 7B1-11

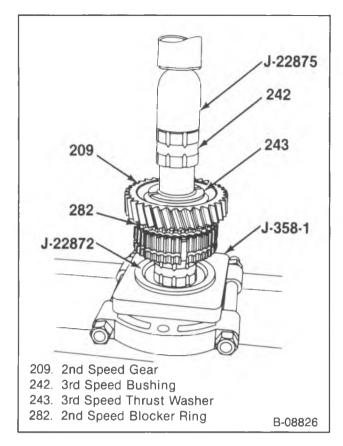


Figure 39—Installing the 3rd Speed Gear Bushing

- 8. 3rd speed gear (208) and the blocker ring (figure 40).
- 9. 3-4 synchronizer (205) using J-22873 (figure 40).
 - A minimum press of 681 kg (1500 lbs.) is required to move the hub.
 - The stepped side of the sleeve goes to the front of the mainshaft.
- 10. New snap ring, (figure 41).
- 11. Reverse gear (211).
 - The shift fork groove goes to the rear of the mainshaft.
- 12. 1st speed gear (216).
- 13. Thrust washer (217).

COUNTERGEAR

Disassemble (Figure 42)

Tools Required:

- J-22832-01 Countergear and Mainshaft Rear Bearing Remover
- 1. Snap ring and the thrust washer (235).
- 2 Driven gear (234).
 - Install J-22832-01 with the open side to the spacer (figure 43).
 - Support the gear and press the countergear through (figure 44).

Important

- Do not let the countergear fall to the floor.
- 3. Spacer (233).
- 4. 3rd speed gear (290).

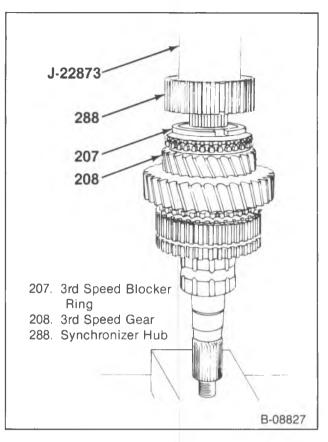


Figure 40—Installing the 3rd and 4th Speed Synchronizer Hub

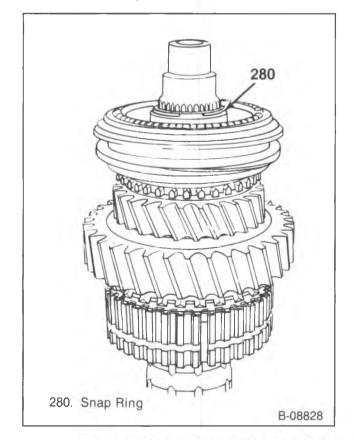


Figure 41—3rd and 4th Synchronizer Hub Snap Ring

7B1-12 HM-117 MANUAL TRANSMISSION

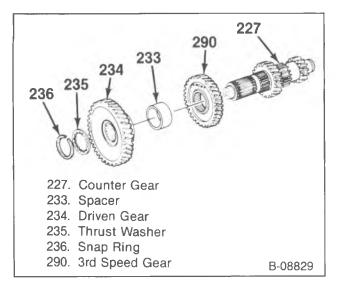


Figure 42—Countergear

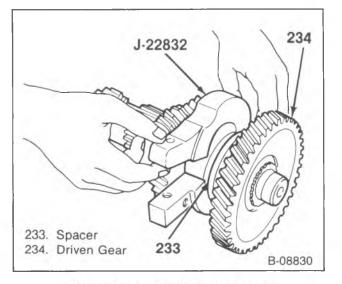


Figure 43—Installing Tool J-22832

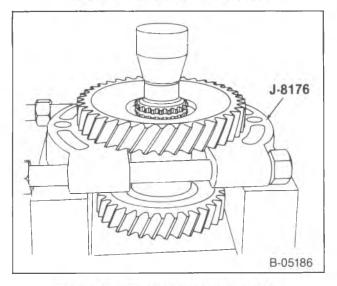


Figure 44—Removing the Driven Gear

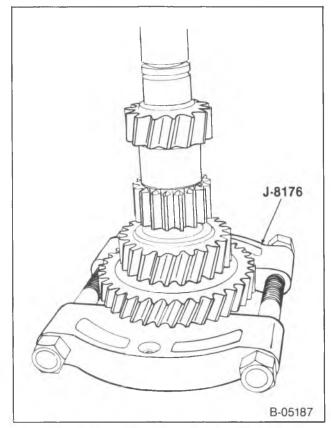


Figure 45—Installing the 3rd Speed Gear

Clean

 Countergear and the gears in suitable solvent and air dry.

Inspect

- Countergear and the gears for nicks, burrs, and broken teeth.
- The splined area on the countergear for chips and wear.

Assemble (Figure 42)

Tools Required:

J-22873 Mainshaft Bushing Installer J-22830-A Snap Ring Installer

- A minimum press of 681 kg (1500 lbs.) is required to move each gear. If less pressure is required, replace the gear(s) or the shaft, or both.
- 1. 3rd speed gear (290) (figure 45).
 - The gear is marked "FRONT" in the web area, as shown in figure 42.
- 2. Spacer (233).
- 3. Driven gear (234), using J-22873 (figure 46).
- 4. Thrust washer (235).
- 5. New snap ring (236), using J-22830-A and J-22873 (figure 47).
 - V Important
 - Do not bend or damage the thrust washer.
 - The snap ring should be tight in the groove with no side play.

HM-117 MANUAL TRANSMISSION 7B1-13

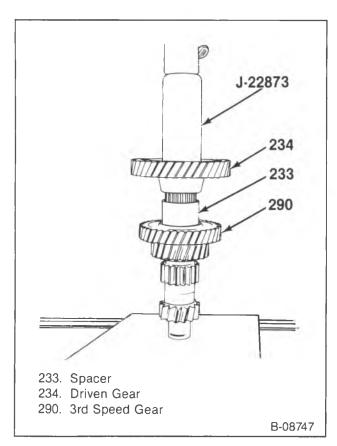
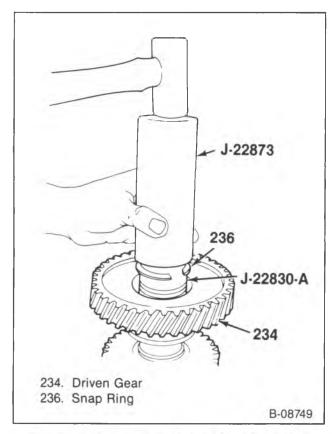
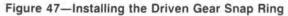


Figure 46—Installing the Driven Gear





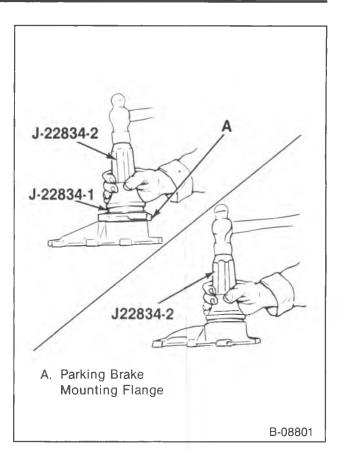


Figure 48—Installing the Rear Bearing Retainer Oil Seal

REAR BEARING RETAINER

SEAL REPLACEMENT

Remove or Disconnect (Figure 22)

1. Seal (222).

++

- Pry the seal out with a small pry bar.
- 2. Gasket material from the retainer (223) using a scraper.

• Inspect the retainer for damage.

++ Install or Connect (Figure 22)

Tools Required:

- J-22834 Extension Housing Seal Installer
- 1. Locking compound on the outside of a new seal (222).
- 2. New seal, using J-22834-2 (figure 48).
 - Use J-22834-1 if a parking brake is used.
 - Fill between the seal lips with chassis grease.

MAIN DRIVE GEAR BEARING RETAINER

SEAL REPLACEMENT

++ Remove or Disconnect (Figure 22)

- 1. Seal (222).
 - Pry the seal out with a small pry bar.
- 2. Gasket material from the retainer (202) using a scraper.

7B1-14 HM-117 MANUAL TRANSMISSION

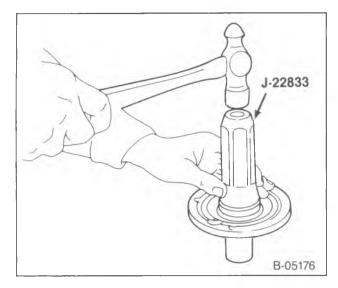


Figure 49—Installing the Drive Gear Bearing Retainer Oil Seal

Inspect

- 1. Retainer nose for scoring, wear, or cracks, especially at the flange.
- Snap ring groove for damage caused by drive gear bearing movement.
- 3. Retainer for wear and damage.

Install or Connect (Figure 22)

- Tool Required: J-22833 Front Housing Drive Gear Seal Installer
- Seal (222), using J-22833. The lip of the seal goes toward the installing tool, (figure 49).

SHIFT COVER

Disassemble (Figure 50)

1. Three plugs (297).

• Use a punch to drive the plugs out.

Important

- The reverse shift fork retaining pin cannot be removed until the other shift forks have been removed.
- Note the positions of the shift forks and the rods before removing them.
- 2. Fork retaining pins (303), (figure 51)
- 3. Shift rods and the shift forks (206, 215 and 301).
 - Shift rods must be in neutral position before any one rod can be removed.
 - Do not lose the detent balls and springs and the interlock shuttles and pin when removing the rods.
- 4. Interlock shuttles (306) and the pin (304).
- 5. Detent balls (213) and the springs (212).
- 6. Retainer (302) from the plunger (299).
- 7. Plunger (299) and spring (300) from the reverse shift fork (301).

Clean (Figure 50)

All parts in solvent and air dry.



- 1. Shift fork
 - For damage or bends.
 - For worn finger pads.
- 2. Shift rods

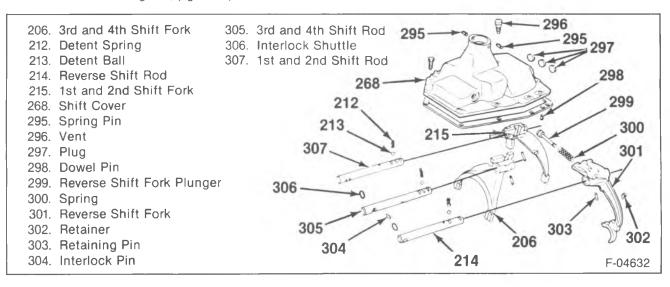


Figure 50—Shift Cover and Components

HM-117 MANUAL TRANSMISSION 7B1-15

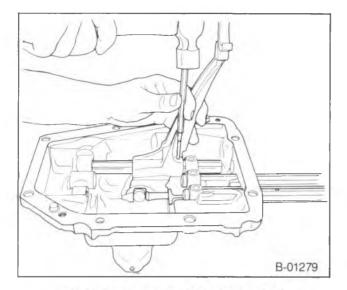


Figure 51—Removing the Retaining Pin

- · For damage and bends.
- For worn or damaged detents and detent balls.
- For broken detent springs.
- 3. Shift control cover
 - For cracks and warping.
 - For smooth shift rod fit.

Assemble (Figure 50)

1. Plunger (299), spring (300) and the retainer (302) to the reverse shift fork (301), (figure 52).

? Important

- The shift rods must be installed in the proper positions, (figure 53).
- 2. Shift rods (307, 305 and 214).
 - Place the detent springs (212) and the balls (213) in the holes in the cover, (figure 54).
 - Start the shift rods into the cover by depressing the spring loaded detent ball and pushing the rod over the ball.

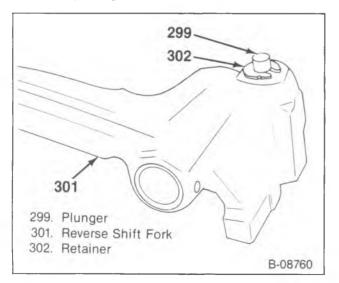


Figure 52—Plunger Retainer

 Position each rod part way into the cover with the detent groove down toward the spring loaded detent ball.

Important

- Shift forks must be installed in the following order: Reverse, 3rd-4th, and 1st-2nd.
- 3. Hold the reverse shift fork (301) in position and push the rod through the fork and into the front support bore. Install a new retaining pin through the fork and rod.
- 4. Position the 3rd-4th shift fork (206) and push the rod through the yoke but not into the front support bore.
- 5. Place an interlock shuttle (306) in the cross-bore of the front support between the reverse and the 3rd-4th shift rods, (figure 54). Then install the interlock pin (304) in the 3rd-4th shift rod hole.
- Push the 3rd-4th shift rod (306) into the front support bore and install a new retainer pin through the fork and rod.
- 7. Position the reverse and 3rd-4th shift rods in neutral position. Then place an interlock shuttle (306) in the cross-bore between the 1st-2nd and 3rd-4th shift rods, (figure 54).
- 8. Position the 1st-2nd shift fork (215) and push the rod through the fork and into the front support bore. DO NOT force the rod into the front to see that the reverse and 3rd-4th shift rods are in neutral.
- 9. Install a new retainer pin through the shift fork and rod. Move the rod to neutral position.
- 10. Apply gasket maker GM P/N 1052942 or equivalent to the edges of three new expansion plugs (297) and install them in the housing openings. Position each plug with the convex side out and drive a flat faced 13 mm (1/2-inch) dowl pin against it to seat the plug.

7B1-16 HM-117 MANUAL TRANSMISSION

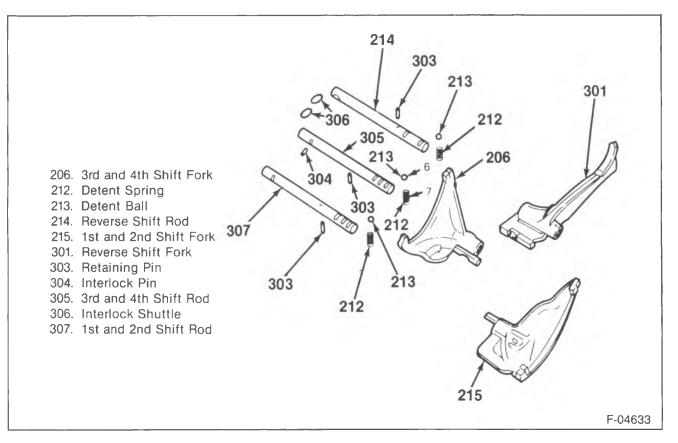


Figure 53—Shift Rod and Fork Positions

HM-117 MANUAL TRANSMISSION 7B1-17

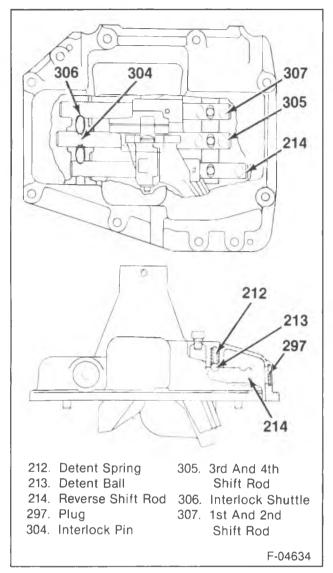


Figure 54—Interlock Shuttles and Pin

TRANSMISSION ASSEMBLY (INSTALLATION OF SUB-ASSEMBLIES)

Before assembling the transmission, check the reverse idler gear bushing for wear. Clearance between the bushing and shaft at both ends should be no more than 0.10 mm (0.004-inch). If it is more, install a new gear and bushing assembly, and/or a new shaft as required.

Use new seals, gaskets and pipe sealant with Teflon[®] GM P/N 1052080 or equivalent on all bolt threads when assembling the transmission. Tighten all bolts to specified torque.

Lubricate all assemblies as they are installed in the transmission case using transmission oil.

→+ Install or Connect (Figure 22)

Tools Required:

J-22874, Mainshaft and Countergear Bearing Installer J-35907 Mainshaft Lock

Nut Wrench (4WD models only)

1. Countergear (227) into the case.

- Do not install the bearings.
- 2. Reverse idler gear (230) and the shaft.
 - The gear teeth go forward.
 - The slot in the shaft faces down.
 - Drive the shaft flush with the case.

3. Mainshaft (250) into the case.

- The rear of the mainshaft must be through the rear bearing hole.
- Place J-22874-5 into the front bearing hole, engaged with the mainshaft, (figure 55).

Important

- Be sure the 1st speed gear thrust washer is in place.
- 4. Mainshaft rear bearing (224).
 - Install a new snap ring (218) onto the bearing.
 - Drive the bearing until the snap ring is flush with the case using J-22874-1 (figure 55).

7B1-18 HM-117 MANUAL TRANSMISSION

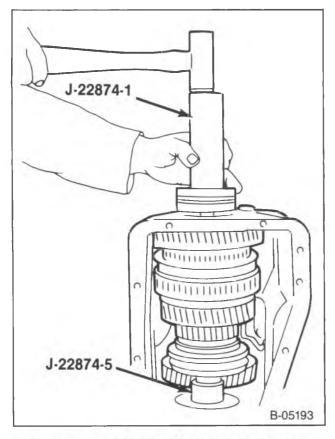


Figure 55—Installing the Mainshaft Rear Bearing

- Remove J-22874-5.
- 5. 4th speed blocker ring (204).
 Be sure the cut outs align with the synchronizer keys.

Important

- Be sure the main drive gear pilot bearings are in place.
- 6. Main drive gear (201).
 - The drive gear cutout goes down (figure 25).
 - Tap on the outer bearing race to install the assembly.
- 7. Bearing retainer (202) and a new gasket.
- 8. Countergear rear bearing (228).
 - Support the front of the countergear using J-22874-10, (figure 56).
 - New snap ring (225) onto the bearing.
 - Drive the bearing onto the countershaft until the snap ring is flush with the case, using J-22874-1, (figure 57).
- 9. New bearing retainer snap ring (226).
 Remove J-22874-10.
- 10. Countergear front bearing (237).
 - Tap the bearing into place.
- 11. Cover (238) and a new gasket.
- 12. Speedometer gear (219).
- 13. Rear bearing retainer (223) and a new gasket.
- 14. Parking brake assembly.
 - 4WD models only.
 - Back plate.
 - New mainshaft lock nut (256) and a new spring washer using J-35907.

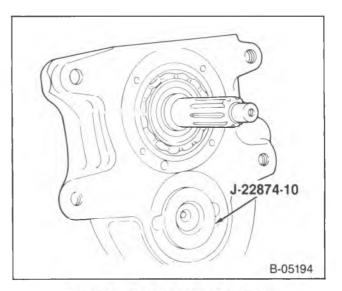


Figure 56-Tool J-22874-10 Installed

- 15. Brake drum and the flange or yoke (220).
 - Lubricate the flange sealing surface with transmission oil.
- 16. Flange nut (221).
- 17. Shift cover (268) and a new gasket.
 - Move the transmission gears and shift rods to the neutral position.
 - Partially engage the reverse idler gear with the countergear and move the reverse shift fork an equal distance in the shift cover.
 - Position the cover over the transmission case (not cocked or tilted) and lower the cover with the reverse shift fork entering the case first. As the cover is near its resting point on the case, observe that the 1-2 and 3-4 shift forks engage with the synchronizer collars.
 - Repeat above procedures if needed to install.
- 18. Shift cover screws (267).
- Speedometer driven gear, switches and any external components that were removed.

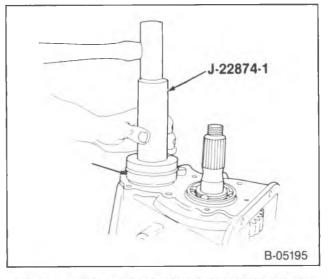


Figure 57—Installing the Countergear Rear Bearing


SPECIFICATIONS FASTENER TORQUE

	N·m	Ft. Lbs.
Rear Bearing Retainer Screws		
Тор	27	20
Bottom	40	30
Plug, Drain and Fill	23	17
Drive Gear Bearing Retainer Screws	32	25
Shift Lever to Shift Shaft Nut	27	20
Cover Screws	27	20
Parking Brake Plate Screws	41	30
Mainshaft Lock Nut (K model only)	135	100
Universal Joint Flange Nut	135	100
Power Take Off Cover Bolts	23	17
Countergear Front Cover Screws	3	4.5
Parking Brake Flange Plate Bolts.	41	30

LUBRICATION

Capacity	4.0L	4.2 qts.
Type Recommended	API GL5	SAE 80W9
	/1	L OAE OOL

80W90 (Use SAE 80W GL5 in Canada)

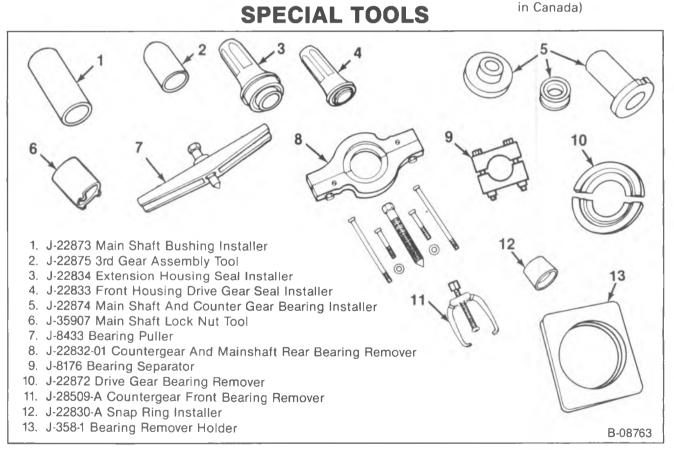

7B1-20 HM-117 MANUAL TRANSMISSION

BLANK

HM-290 MANUAL TRANSMISSION 7B1-21

DISASSEMBLY OF THE HM-290 TRANSMISSION

++ Remove or Disconnect (Figure 1, 2, 3 and 4).

GENERAL SERVICE INFORMATION

• Lubricant

The lubricant may appear to be very dark in color, almost black. This is a normal condition. The silicon imbedded into the shift forks to reduce wear is reacting with the lubricant.



Thoroughly clean the exterior of the transmission.

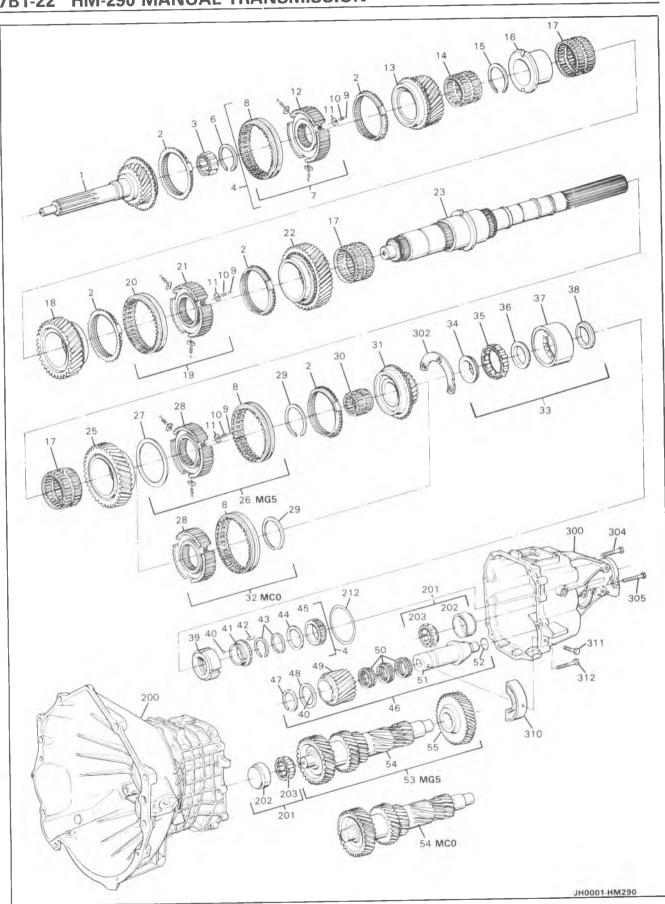


Figure 1 Transmission-2WD Gear Components

7B1-22 HM-290 MANUAL TRANSMISSION

HM-290 MANUAL TRANSMISSION 7B1-23

3 4 6 7	SHAFT, INPUT RING, SYNCHRONIZER BEARING, PILOT SHAFT ASSEMBLY, MAIN (2WD – MCO & MG5) RING, SNAP (SELECTIVE) SYNCHRONIZER ASSEMBLY, 3-4 SLEEVE, SYNCHRONIZER
9 10 11	BALL, SYNCHRONIZER DETENT SPRING, SYNCHRONIZER DETENT KEY, SYNCHRONIZER HUB, 3-4 SYNCHRONIZER GEAR ASSEMBLY, 3RD SPEED
16 17 18 19 20	RING, SNAP (SELECTIVE) RACE, 2ND SPEED GEAR NEEDLE BEARING (INNER) BEARING ASSEMBLY, SPEED GEAR NEEDLE GEAR ASSEMBLY, 2ND SPEED SYNCHRONIZER ASSEMBLY, 1-2 SLEEVE, 1-2 SYNCHRONIZER
22 23 25 26 27	HUB, 1-2 SYNCHRONIZER GEAR, 1ST SPEED SHAFT, OUTPUT (2WD) GEAR ASSEMBLY, REVERSE SPEED SYNCHRONIZER ASSEMBLY, 5TH-REVERSE (MG5) RING, SPIRAL LOCK (MG5 ONLY) HUB, 5TH-REVERSE SYNCHRONIZER
29 30 31 32	RING, SNAP (SELECTIVE) BEARING ASSEMBLY, 5TH SPEED GEAR NEEDLE (MG5) GEAR ASSEMBLY, 5TH SPEED (MG5) SYNCHRONIZER ASSEMBLY, REVERSE (MC0) BEARING ASSEMBLY, OUTPUT SHAFT RACE, ROLLER BEARING
40	BEARING, ROLLER RACE, BALL BEARING (INNER) RACE, BEARING ASSEMBLY (OUTER) RACE, BALL BEARING (OUTER) RING, THREADED THRUST (OUTER) BALL, 4mm
43 44	RING, THREADED THRUST (INNER) PIN SPRIL ROLL RING, SNAP WASHER, SPEEDO GEAR THRUST (2WD) ROTOR, SPEED SENSOR IDLER ASSEMBLY, REVERSE RING, SNAP
48 49	WASHER, THRUST GEAR, REVERSE BEARING ASSEMBLY, NEEDLE SHAFT, REVERSE IDLER O-RING COUNTERSHAFT ASSEMBLY, (MG5)
55 200 201 202 203	COUNTERSHAFT, (MCO) GEAR, 5TH (MG5) HOUSING, FRONT BEARING ASSEMBLY, COUNTERSHAFT RACE, COUNTERSHAFT BEARING BEARING, COUNTERSHAFT
300 302 304 305	SHIM, (SELECTIVE) HOUSING, REAR (2WD) RETAINER, OUTPUT SHAFT BEARING (2WD) BOLT, HEX HEAD (M8 X 50) (2WD) BOLT, HEX HEAD (M8 X 60) (2WD) SUPPORT, IDLER SHAFT BOLT, HEX HEAD (M8 X 50)
312	BOLT, HEX HEAD (M8 X 50)
	JH0002-HM290
	Figure 1 Legend

7B1-24 HM-290 MANUAL TRANSMISSION

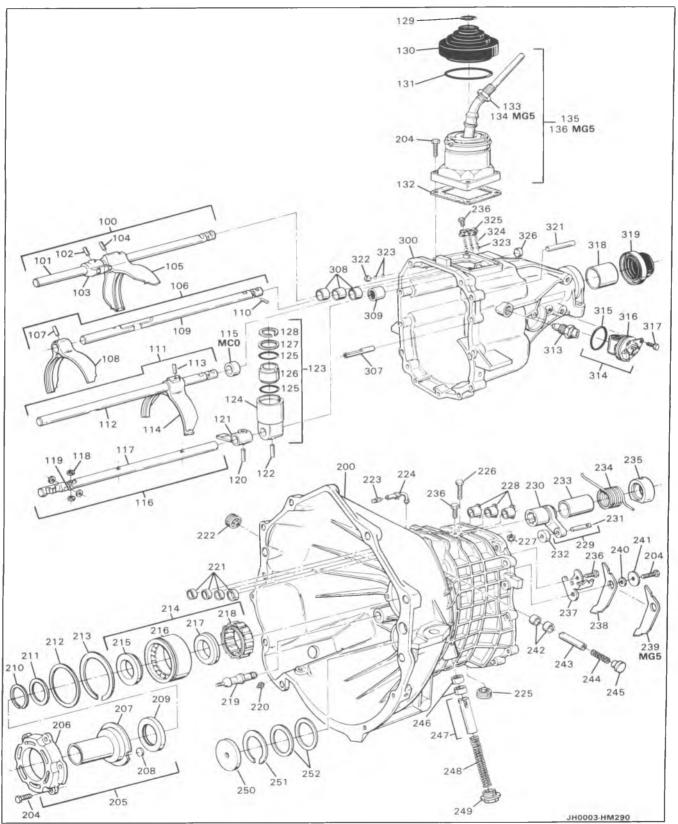


Figure 2 Transmission-2WD Shift Mechanism and Case Components

100 RAIL ASSEMBLY, 1ST & 2ND SHIFT 101 RAIL, 1ST & 2ND SHIFT 102 PIN, ROLL 103 YOKE, 1ST & 2ND SHIFT 104 PIN, ROLL 105 FORK, 1ST-2ND SHIFT 106 RAIL ASSEMBLY, 3RD & 4TH SHIFT 107 PIN, ROLL (3RD & 4TH FORK) 108 FORK, 3RD & 4TH SHIFT 109 RAIL, 3RD & 4TH 110 PIN, 3RD & 4TH SHIFT INTERLOCK 111 RAIL ASSEMBLY, 5TH & REVERSE SHIFT 112 RAIL, 5TH & REVERSE 113 PIN, ROLL 113 PIN, ROLL
114 FORK, STH & REVERSE SHIFT
115 BLOCK, SPACER (MCO)
116 SHAFT ASSEMBLY, SHIFT
117 SHAFT, SHIFT
118 ROLLER, SHIFT SHAFT
119 PIN, ROLLER
120 PIN, ROLL (6 X 28mm)
121 FINGER 121 FINGER 122 PIN, ROLL 123 SOCKET ASSEMBLY, SHIFT SHAFT 124 SOCKET, SHIFT SHAFT 125 O-RING 126 BUSHING, SHIFT SOCKET 127 WASHER, SHIFT SOCKET 128 RING, SNAP 129 O-RING 130 BOOT 131 O-RING 132 SEAL, SHIFT LEVER HOUSING 132 SEAL, SHIFT LEVER HOUSING
133 NUT, HEX JAM (MCO)
134 NUT, HEX JAM (MG5)
135 HOUSING ASSEMBLY, SHIFT LEVER (MCO)
136 HOUSING ASSEMBLY, SHIFT LEVER (MG5)
200 HOUSING, FRONT
204 BOLT, HEX HEAD (M6 X 25mm)
205 DETAINER ASSEMBLY, NIPLIT CHAFT READ 205 RETAINER ASSEMBLY, INPUT SHAFT BEARING 206 RETAINER, INPUT SHAFT BEARING 207 PILOT, CLUTCH RELEASE BEARING 208 WASHER, INPUT BEARING RETAINER 209 SEAL, INPUT SHAFT BEARING RETAINER OIL 210 RING, SNAP (SELECTIVE) 211 SPACER, INPUT SHAFT 212 SHIM, (SELECTIVE) 212 SHIM, ISELECTIVE) 213 RING, INPUT SHAFT BEARING ASSEMBLY SNAP 214 BEARING ASSEMBLY, INPUT SHAFT 215 RACE, BALL BEARING (OUTER) 216 RACE, BEARING ASSEMBLY (OUTER) 217 RACE, BEARING ASSEMBLY (OUTER)

217 RACE, BALL BEARING (INNER)

218 BEARING, ROLLER 219 PIVOT ASSEMBLY, CLUTCH FORK 220 FITTING, LUBE 221 PLUG, SHIFT SHAFT/RAILS 222 PLUG, OIL FILL 223 BREATHER-ASSEMBLY 224 ADAPTER, BREATHER HOSE 225 PLUG, OIL DRAIN 226 BOLT, HEX HEAD (M10 X 25.4mm) 227 NUT, LOCK 228 BEARING, SHIFT RAIL FRONT HOUSING 229 LEVER ASSEMBLY, SHIFT SHAFT (230 & 231) 230 LEVER, SHIFT SHAFT 230 LEVER, SHIFT SHAFT 231 PIN, SHIFT SHAFT LEVER 232 ROLLER, C/OVR DETENT 233 SLEEVE, BIAS SPRING 234 SPRING, BIAS LOAD TORSIONAL 235 SEAT, BIAS SPRING & SLEEVE 236 BOLT, HEX HEAD (M6 X 16mm) 237 SUPPORT, 5TH & REVERSE DETENT CAM 238 CAM, 5TH & REVERSE DETENT (MCO) 239 CAM, 5TH & REVERSE DETENT (MG5) 240 SLEEVE, DETENT CAM PIVOT 241 WASHER, RETAINING 242 BUSHING, DETENT PLUNGER 243 PLUNGER, SHIFT SHAFT DETENT 244 SPRING, SHIFT SHAFT DETENT PLUNGER 245 PLUG 246 BUSHING, 5 & REVERSE DETENT PLUNGER
247 PLUNGER ASSEMBLY, 5TH & REVERSE DETENT
248 SPRING, 5TH & REVERSE DETENT
249 PLUG, HEX HEAD
250 PLUG, COUNTERSHAFT BEARING
251 PLUG, COUNTERSHAFT BEARING 251 RING, SNAP 252 SHIM(S) 300 HOUSING, REAR (2WD) 307 TUBE ASSEMBLY, OIL DELIVERY 308 BEARING, REAR HOUSING SHIFT RAIL 309 BEARING, REAR HOUSING SHIFT SHAFT 313 SWITCH ASSEMBLY, BACK-UP LAMP 314 SENSOR ASSEMBLY, ELECTRONIC SPEED 315 O-RING 316 SENSOR, ELECTRONIC SPEED 317 BOLT, HEX HEAD (M6 X 16) 318 BEARING, REAR EXTENSION (2WD) 319 SEAL, SLIP YOKE OIL (2WD) 321 PIN, DOWEL 322 PLUG 323 BALL, DETENT/INTERLOCK 324 SPRING, DETENT 325 COVER, DETENT SPRING 326 PLUG

JH0004-HM290




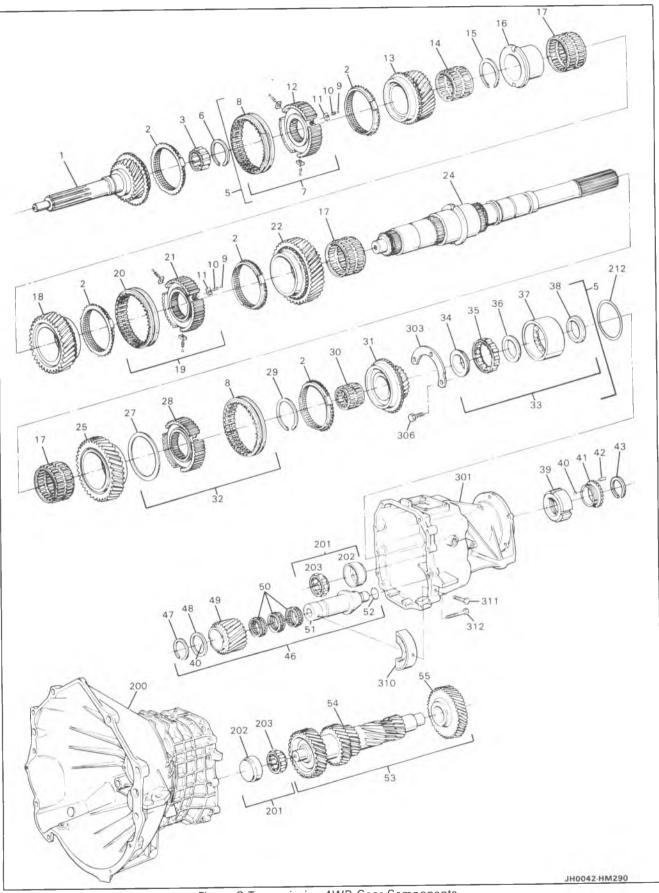


Figure 3 Transmission-4WD Gear Components

 SHAFT, INPUT RING, SYNCHRONIZER BEARING, PILOT SHAFT ASSEMBLY, MAIN (4WD) RING, SNAP (SELECTIVE) SYNCHRONIZER ASSEMBLY, 3:4 SLEEVE, SYNCHRONIZER BALL, SYNCHRONIZER DETENT SFRING, SYNCHRONIZER DETENT SFRAR ASSEMBLY, 3RD SPEED HUB, 3:4 SYNCHRONIZER HUB, 3:4 SYNCHRONIZER HUB, 3:4 SYNCHRONIZER HUB, 3:4 SYNCHRONIZER BEARING ASSEMBLY, 3RD SPEED GEAR NEEDLE RING, SNAP (SELECTIVE) RACE, 2ND SPEED GEAR NEEDLE BEARING (INNER) BEARING ASSEMBLY, NPEED GEAR NEEDLE GEAR ASSEMBLY, 2ND SPEED SYNCHRONIZER ASSEMBLY, 1-2 SLEEVE, 1:2 SYNCHRONIZER HUB, 1:2 SYNCHRONIZER HUB, 1:2 SYNCHRONIZER HUB, 1:2 SYNCHRONIZER HUB, 5:1: REVERSE SYNCHRONIZER HUB, STH-REVERSE SYNCHRONIZER HUB, STH-REVERSE SYNCHRONIZER BEARING, ASSEMBLY, STH SPEED GEAR ASSEMBLY, STH SPEED SYNCHRONIZER ASSEMBLY, POUTD SHAFT RACE, ROLLER BEARING (SINNER) RACE, BALL BEARING (INNER) RING, SNAP KING, SNAP KING, SNAP WASHER, THRUST GEAR, REVERSE DEARING ASSEMBLY, NEEDLE SHAFT, REVERSE IDLER PHRIALURUL RING, SNAP KUDSING, FRONT BEARING, COUNTERSHAFT EARING (AWD) SUPRORT, IDLER SHA
JH0043-HM290
Figure 3 Legend

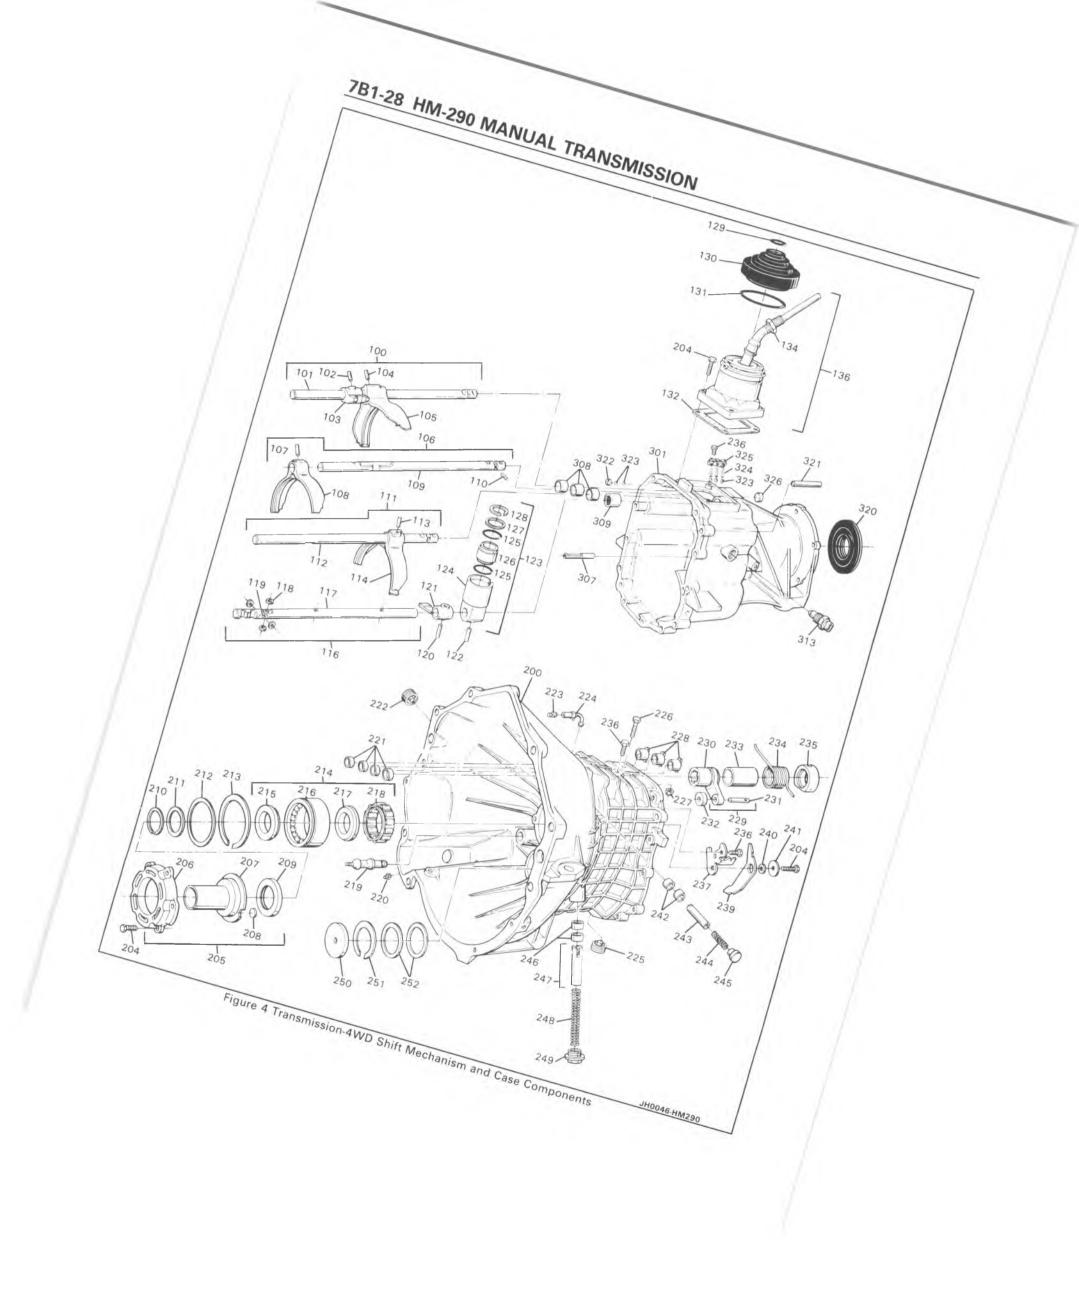

101 102 103 104 105 106 107 109 110 111 112 113 114 116 117 118 120 121 122 123 124 125 126 127 128 129 130 131 132 134 136 206 207 208 209 210 211 212	SHIM, (SELECTIVE)
210 211 212 213 214 215	RING, SNAP (SELECTIVE) SPACER, INPUT SHAFT


217 RACE, BALL BEARING (INNER) 218 BEARING, ROLLER 219 PIVOT ASSEMBLY, CLUTCH FORK 220 FITTING, LUBE 221 PLUG, SHIFT SHAFT/RAILS 222 PLUG, OIL FILL 222 PLUG, OIL FILL
223 BREATHER ASSEMBLY
224 ADAPTER, BREATHER HOSE
225 PLUG, OIL DRAIN
226 BOLT, HEX HEAD (M10 X 25.4mm)
227 NUT, LOCK
228 BEARING, SHIFT RAIL FRONT HOUSING
229 LEVER ASSEMBLY, SHIFT SHAFT (230 & 231)
230 LEVER, SHIFT SHAFT
231 PIN SHIET SHAFT 230 LEVER, SHIFT SHAFT 231 PIN, SHIFT SHAFT LEVER 232 ROLLER, C/OVR DETENT 233 SLEEVE, BIAS SPRING 234 SPRING, BIAS LOAD TORSIONAL 234 SPRING, BIAS LOAD TORSIONAL
235 SEAT, BIAS SPRING & SLEEVE
236 BOLT, HEX HEAD (M6 X 16mm)
237 SUPPORT, 5TH & REVERSE DETENT CAM
239 CAM, 5TH & REVERSE DETENT
240 SLEEVE, DETENT CAM PIVOT 241 WASHER, RETAINING 242 BUSHING, DETENT PLUNGER 243 PLUNGER, SHIFT SHAFT DETENT 244 SPRING, SHIFT SHAFT DETENT PLUNGER 245 PLUG 246 BUSHING, 5 & REVERSE DETENT PLUNGER 247 PLUNGER ASSEMBLY, 5TH & REVERSE DETENT 248 SPRING, 5TH & REVERSE DETENT 249 PLUG, HEX HEAD 250 PLUG, COUNTERSHAFT BEARING 251 RING, SNAP 252 SHIM(S) 301 HOUSING, REAR (4WD) 301 HOUSING, REAR (4WD) 307 TUBE ASSEMBLY, OIL DELIVERY 308 BEARING, REAR HOUSING SHIFT RAIL 309 BEARING, REAR HOUSING SHIFT SHAFT 313 SWITCH ASSEMBLY, BACK-UP LAMP 320 SEAL, OUTPUT SHAFT OIL (4WD) 321 PIN, DOWEL 322 PLUG 323 BALL, DETENT/INTERLOCK 324 SPRING, DETENT 325 COVER, DETENT SPRING 326 PLUG

Figure 4 Legend


JH0047-HM290

7B1-30 HM-290 MANUAL TRANSMISSION

- Tools Required: J 3289-20 Base Holding Fixture J 8763-02 Holding Fixture C-Clamp J 8763-21 Balance Bracket for C-Clamp J 36824 Transmission Adapters J 36509 Clutch Pivot Remover/Detent Spring Plug Remover J 23907 Slide Hammer J 36825 4WD Output Shaft Oil Seal Remover (4WD models only) J 36515 Assembly Pallet J 36515-12 Countershaft Adapter for 1988 and 1989 models
- 1. Idler shaft support bolt (311) and bottom two bolts (312) (Figure 5).

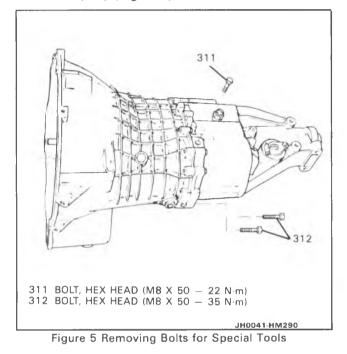

J 8763-21 onto J 8763-02 (Figure 6)

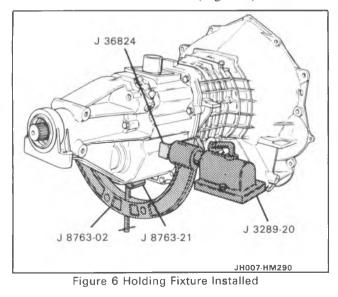

- J 36824 onto the transmission case.
- J 8763-02 onto J 36824.
- 2. Backup lamp switch assembly (313) (Figure 7).

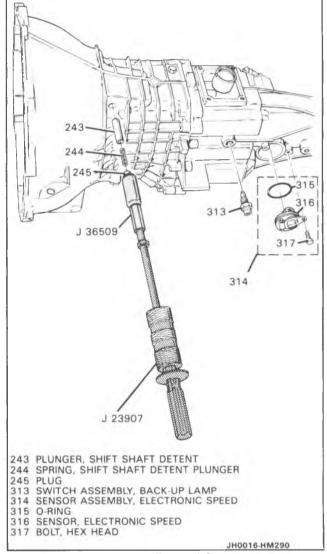


Figure 7 Removing External Components

3. Bolt (317) and electronic speed sensor assembly (314).

- 2WD models only.

- 4. Detent plug (245) using J 36509 and J 23907, Spring (244) and plunger (243).
- 5. Two bolts (236), detent spring cover (325), springs (324), and balls (323) (Figure 8).
 - It may be necessary to remove sealant from inside of holes to remove the balls (323).
- 6. Output shaft oil seal (320) using J 36825 and J 23907 (Figure 9).
 - 4WD models only
 - Screw J 36825 into one of the three perforated holes in the seal.
- Position vertical.
- 7. Six bolts (204) and input shaft bearing retainer assembly (205) (Figure 10).




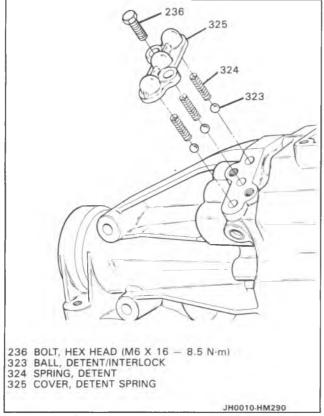


Figure 8 Removing Shift Rail Detent System

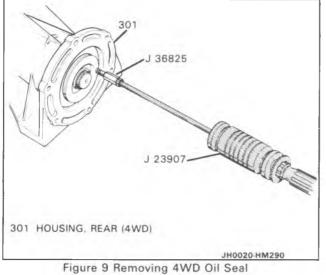

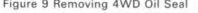

- Tap on clutch release bearing pilot with a rubber hammer.
- Save the input bearing retainer washer (208).
- 8. Snap ring (selective) (210), input shaft spacer (211), ball bearing inner race (215) and shim (212).
- Position horizontally. .
- 9. Front housing to rear housing bolts (312) (Figure 11)
- 10. Drive dowels (321) into front housing.
- 11. Front Housing (200).

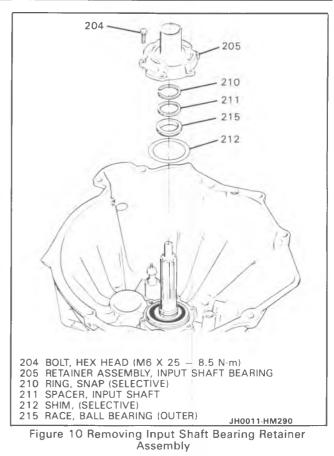

- 12. Countershaft bearing (203).
- 13. Ball bearing inner race (217) and roller bearing (218).
 - Degreasing with a liquid cleaner will make it easier to remove.
 - Grab on OD edge (non-machined surface) of the inner race (217) and remove with large pliers.

Important

Do not damage bearing cage while removing ball bearing inner race.


- 14. Idler shaft support (310).
 - . snap out
- 15. Four rollers (118) (Figure 12). **Roll Pin**
 - Pull shift shaft forward. .
 - Cock to detent cover side.
- 16. Roll Pin (120)

Important

Support the shift shaft end while driving out finger roll pin.

- Slide the shaft (116) all the way back and cocked over to the detent spring cover side.
- Shift shaft socket assembly roll pin (122) (Figure 17. 13).
 - . Pin will fall into the case.

7B1-32 HM-290 MANUAL TRANSMISSION

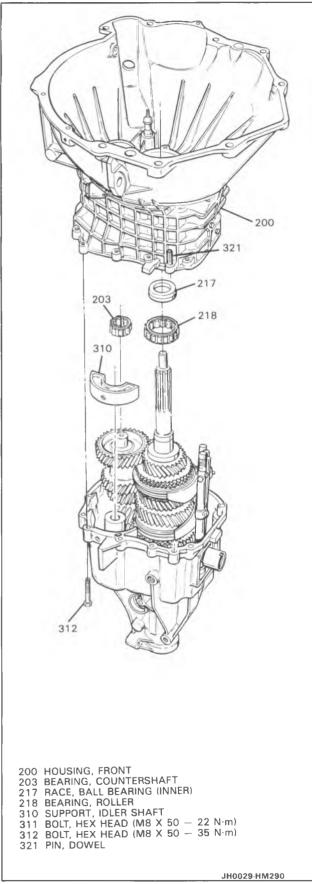



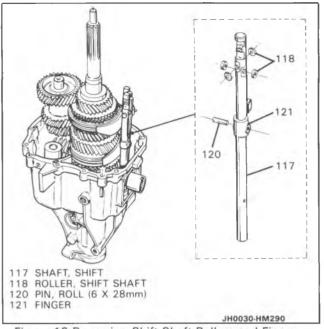


Figure 12 Removing Shift Shaft Rollers and Finger

NOTICE: Excessive force will "peen" the shift shaft and damage the rear housing shift shaft bearing (309) causing increased shift effort.

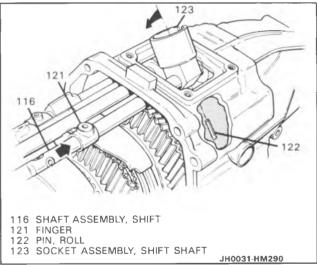


Figure 13 Removing Shift Socket Assembly Roll Pin

- 18. Shift Shaft (116), shift shaft socket assembly (123) and finger (121).
- 19. 3rd and 4th shift fork roll pin (107) (Figure 14).
 - With a large pair of diagonal cutters pry out.

Important

If roll pin (107) breaks off, put the transmission in 3rd gear and cut off remainder of roll pin then drive through.

20. Plug (326).

• By hitting on one side - cocking it.

21. 3rd and 4th rail (109) (Figure 15).

- Make sure the 1-2 and 5-reverse rails are in neutral.
- Drive through the plug hole (326) enough to expose the roll pin hole (107) then insert a 3/8 punch or equivalent through the roll pin hole (107) and pull (while twisting) out the shift rail.
- Two interlock balls (323). 22.
- Install J 36515 with J 36515-12 (Figure 16).
- Remove J 8763-02 and J 36824.


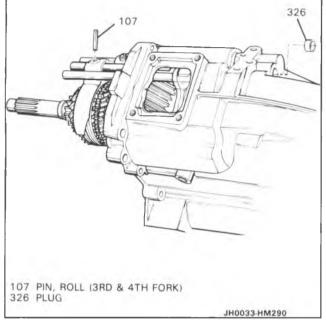


Figure 14 Removing 3-4 Rail Plug and Roll Pin

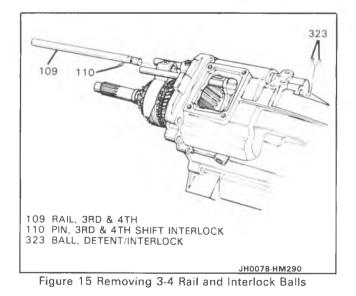

2WD REAR HOUSING REMOVAL

Important

Steps 1 through 13 are for 2WD models only. The 4WD section follows step 13.

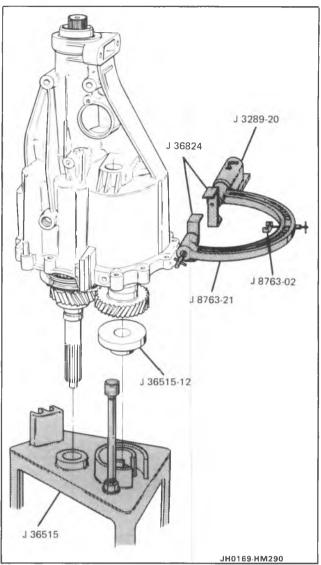


Figure 16 Removing and Installing Special Tools

4----

Remove or Disconnect (Figure 17)


Tools Required:


J 8105 Gear Puller (2WD models only) J 21427-01 Speedometer Gear Puller Adapter (2WD models only)


J 36516 Output Shaft Spanner Nut Wrench 1. Bolts (304) and (305).

- 2.
 - 2WD rear housing assembly (300).
 - Tap upwards on the housing with a rubber hammer (alternately on each side).
- 3. 2WD output shaft bearing retainer (302).
- 4. Shim (212).
 - Lock up the transmission in 2nd and 4th gear by sliding the 1st-2nd rail assembly (100) and the 3rd-4th shift fork (108) downward towards J 36515 (Figure 18).
- Slide the snap ring (43) and washer (44) away from the rotor to make clearance for J 21427-01 (Figure 19).
- 5. Speed sensor rotor (45) using J 21427-01 and J 8105


7B1-34 HM-290 MANUAL TRANSMISSION

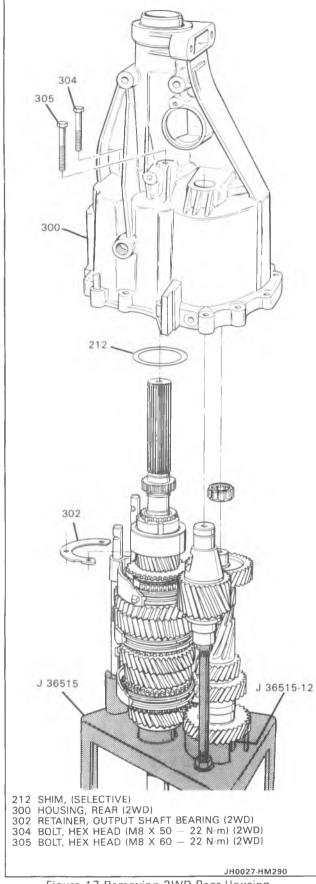

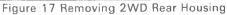

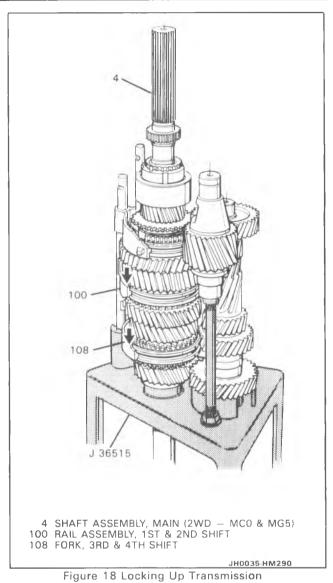

- DO NOT REUSE ROTOR AFTER REMOVAL.
- 6. Washer (44) and snap ring (43).
- 7. Spiral roll Pin (42) using J 36516 (Figure 20).
 - Move the black depth locating tang for the spiral roll pin remover/installer out of the way, then drive down.
 - Put the black depth locating tang back in place with the rod going through it.
 - Turn J 36516 clockwise till it stops.
- 8. Snap ring (43).
- 9. Threaded thrust ring (inner) (41), ball (40) and threaded thrust ring (outer) (39).
 - Hold the countershaft against the mainshaft.
 - Turn J 36516 clockwise till both threaded thrust rings (39) and (41) are completely apart.
- 10. Reverse idler gear assembly (46) and countershaft (4-speed) (54) or (5-speed) (53) (Figure 21).

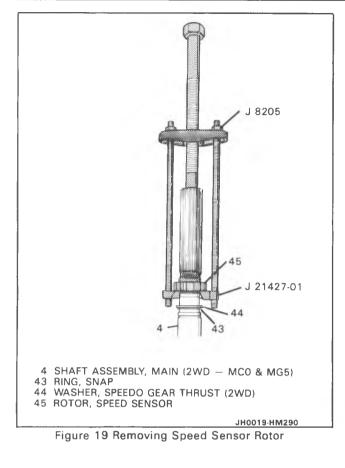

- 11. 1-2 shift rail assembly (100), 5-Reverse shift rail assembly (111), 3-4 shift fork (108), and (4-speed) spacer block (115).
 - By Snapping them off
- 12. Mainshaft assembly (4).



Leave the synchronizer ring (2) on the 3-4 synchronizer assembly (7) to prevent the synchronizer detent balls (9) from popping

out.

13. Input shaft gear (1) and pilot bearing (3).

4WD REAR HOUSING REMOVAL

Important Steps 1 through 10 are for 4WD models only.


↔ Remove or Disconnect

Tools Required:

J 36516 Output Shaft Spanner Nut Wrench

• Lock up the transmission in 2nd and 4th gear by sliding the 1st and 2nd Shift rail assembly (100) and the 3rd and 4th shift fork (108) downward towards J 36515 (Figure 22).

1. Spiral roll pin (42) using J 36516 (Figure 23).

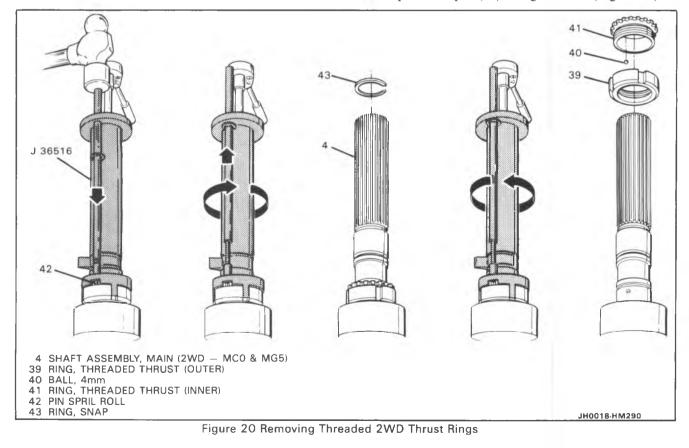

7B1-36 HM-290 MANUAL TRANSMISSION


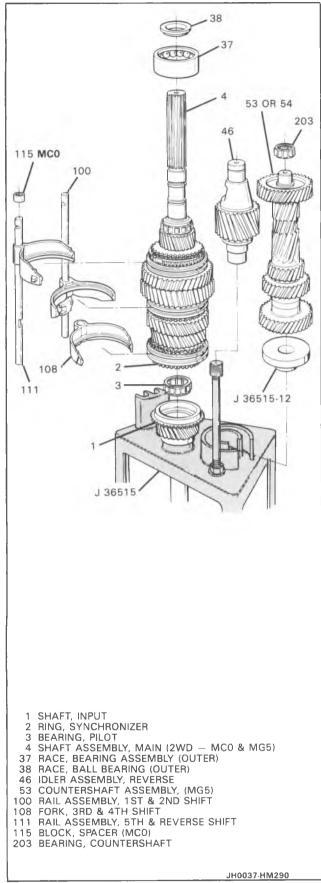


Figure 21 Removing Gears and Shift Rails

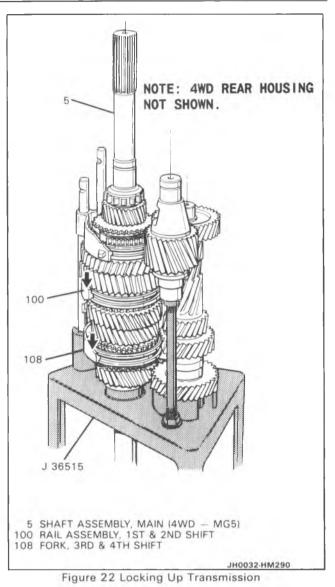

- Move the black depth locating tang for the spiral roll pin remover/installer out of the way, then drive roll pin down.
- Put the black depth locating tang back.
- Turn J 36516 counter clockwise till it stops.
- 2. Snap ring (43).
- 3. Threaded thrust ring inner (41), ball (40) and threaded thrust ring outer (39).
 - Turn J 36516 clockwise till both threaded thrust rings (39) and (41) are completely apart.
- 4. 4WD Rear Housing Assembly (301) (Figure 24).
 - Tap upwards on the housing with a rubber hammer (alternately on each side).
 - Save the ball bearing outer race (38) that will be left in the rear housing.
- 5. Countershaft bearing (203).
- 6. Countershaft (53).
- 7. Reverse idler assembly (46).
- 8. 5th and reverse shift rail assembly (111), 1st and 2nd shift rail assembly (100) and 3rd and 4th shift fork (108).

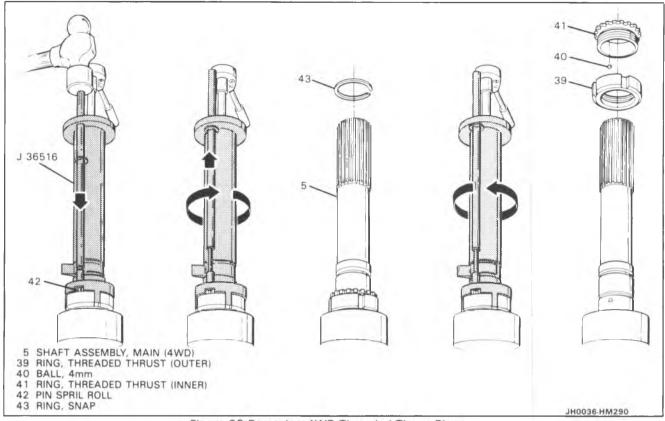


Figure 23 Removing 4WD Threaded Thrust Rings

- By snapping them off
- 9. Mainshaft assembly (5).

Important

Leave the synchronizer ring (2) on the 3-4 synchronizer assembly (7) to prevent the synchronizer detent balls (9) from popping out.

10. Input shaft gear (1) and pilot bearing (3).

DISASSEMBLY AND ASSEMBLY OF MAINSHAFT 2WD AND 4WD

NOTICE: Optional method in Figure 25 can be used if the service press bed is not wide enough for the 1st speed to pass through. This method can be used to totally disassemble the main shaft, if necessary.

Disassemble

Tools Required:

Hydraulic Press


J 36513 Gear and Bearing Separator Plate

J 22912-01 Small Gear Puller

- (4-speed models only).
- 1. Snap ring (selective) (6) (Figure 25).
- 3-4 synchronizer assembly (7), synchronizer rings
 (2) and third speed gear (13) using J 36513 and hydraulic press.

- Scribe on hub and sleeve so the parts can be installed in the same position.
- Leave the synchronizer rings (2) to prevent the synchronizer detent balls (9) from popping out.
- 3. Third gear bearing (14).
- 4. Snap ring (selective) (15) (Figure 26).
- 5. Second speed gear assembly (18) and second speed gear bearing race (16) using J 36513 and hydraulic press.
- 6. Speed gear bearing assembly (17).
 - Leave the synchronizer ring (2) on the 1-2 synchronizer assembly (19) to prevent the synchronizer detent balls (9) from popping out.
- 7. First speed gear (22) and 1-2 synchronizer assembly (19) using J 36513 and hydraulic press.
 - Scribe on hub and sleeve so the parts can be installed in the same position.
 - Leave the synchronizer rings (2) on the 1-2 synchronizer assembly (19) to prevent the synchronizer detent balls (9) from popping out.
- 8. Speed gear bearing assembly (17).
- 9. Inner ball bearing race (36), roller bearing (35) and roller bearing race (34) using J 22912-01 and hydraulic press (Figure 28).
 4-speed only
- 10. Inner ball bearing race (36), roller bearing (35), roller bearing race (34) and fifth speed gear (31) using J 36513 and hydraulic press (Figure 29).
- 11. Fifth speed gear bearing (30).

7B1-38 HM-290 MANUAL TRANSMISSION

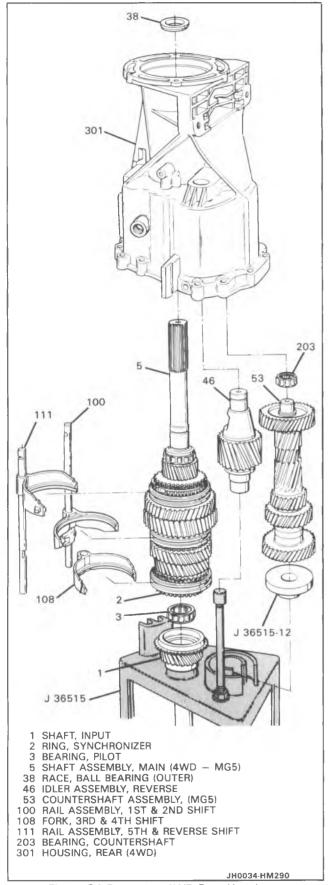


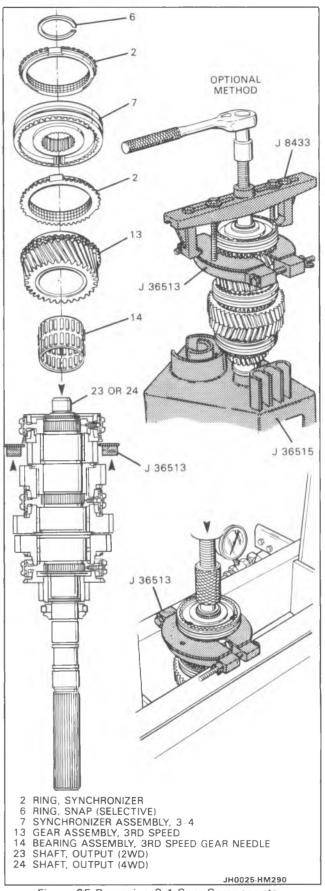


Figure 24 Removing 4WD Rear Housing


Figure 25 Removing 3-4 Gear Components

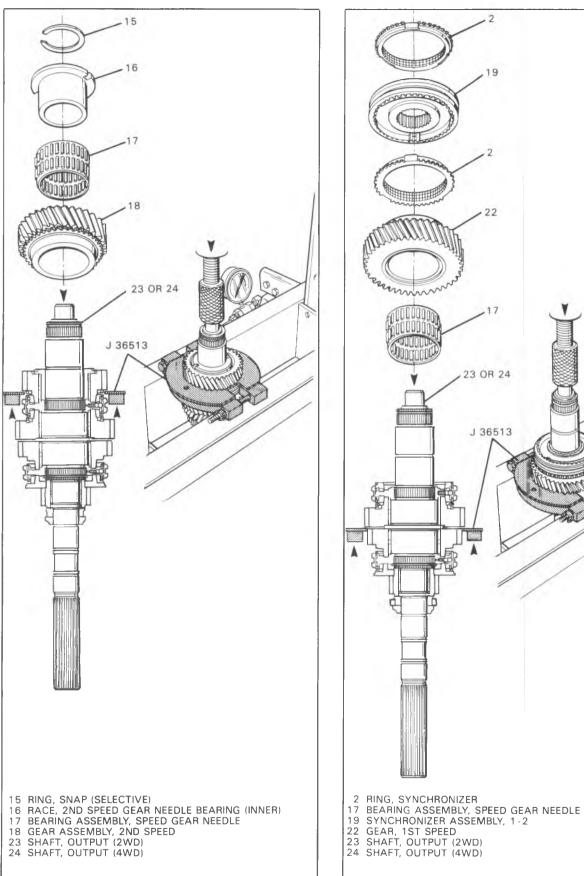

JH0023-HM290 Figure 27 Removing 1st Gear Components

JH0024-HM290 Figure 26 Removing 2nd Gear Components

7B1-40 HM-290 MANUAL TRANSMISSION

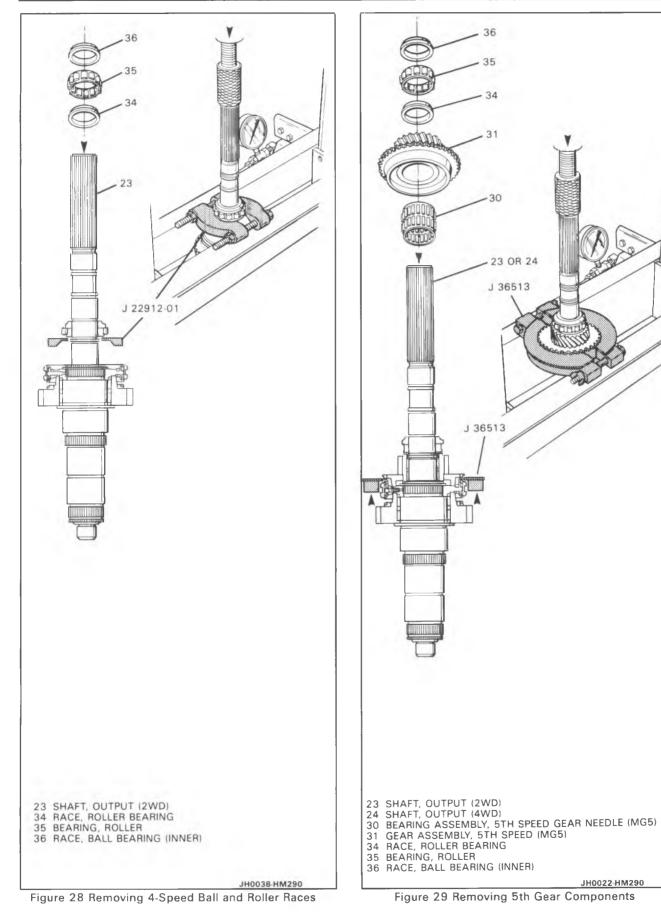

- 12. Snap ring (selective) (29) (Figure 30).
- Reverse speed gear assembly (25) and (5-speed) 5th-reverse synchronizer assembly (26) or (4-speed) reverse synchronizer assembly (32) using J 36513 and hydraulic press.
 - Scribe on hub and sleeve so the parts can be installed in the same position.
 - Leave the synchronizer ring (2) on the 5th-reverse synchronizer assembly (26) to prevent the synchronizer detent balls (9) from popping out.
- 14. Speed gear bearing assembly (17).
- 15. Place 1-2, 3-4, and 5th speed synchronizers in separate shop towels, wrap assemblies and press against inner hub.

? Important

- DO NOT MIX PARTS
- 📜 Clean
- All parts in a suitable solvent and air dry.

Important

• Do not spin dry the ball bearings.

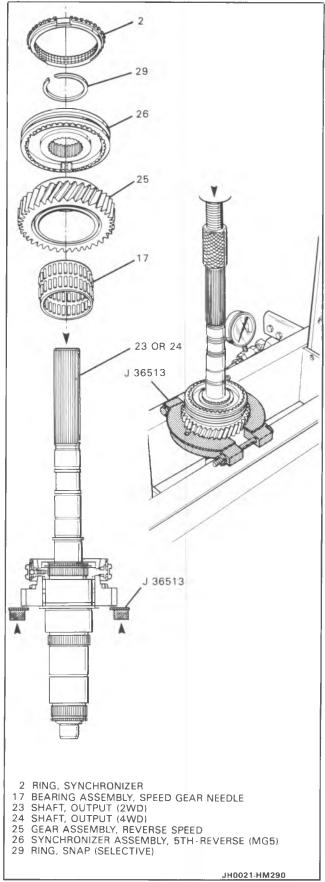


Figure 30 Removing Reverse Gear Components

7B1-42 HM-290 MANUAL TRANSMISSION

1 Inspect (Figure 31, 32, and 33)

- 1. Gears for cracks, chipped gear teeth, and other damage that could cause gear noise.
- 2. Related surfaces on the gears like thrust faces and bearing surface diameters.
- 3. Synchronizer sleeves for a sliding fit on the synchronizer hubs and for the hubs to have a force fit on the mainshaft splines.
- 4. Synchronizer springs and keys for damage.
- 5. Synchronizer rings for excess wear.
- 6. Synchronizer clutching teeth for wear, scuffed, nicked, burred or broken teeth.
- 7. Speed gear clutching cones for synchronizer ring metal transfer.
- 8. All gear teeth for excess wear.
 - The black phosphate coating will develop wear patterns, this is a normal condition.
- 9. Bearings and bearing surfaces for nicks, burrs, bent cages and wear.
- 10. Lubricate all bearings with light engine oil and check for rough rotation.
 - If scuffed, nicked, burred, scoring, or synchronizer ring metal transfer conditions cannot be removed with a soft stone or crocus cloth, replace the component and inspect mating parts.
 - Lubricate all components as assembly progresses. Use lubricant 5W-30 GM P/N 1052931 or equivalent.

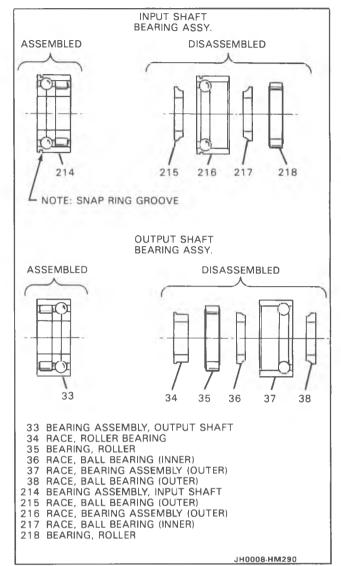


Figure 31 Main Bearing Components

BLANK




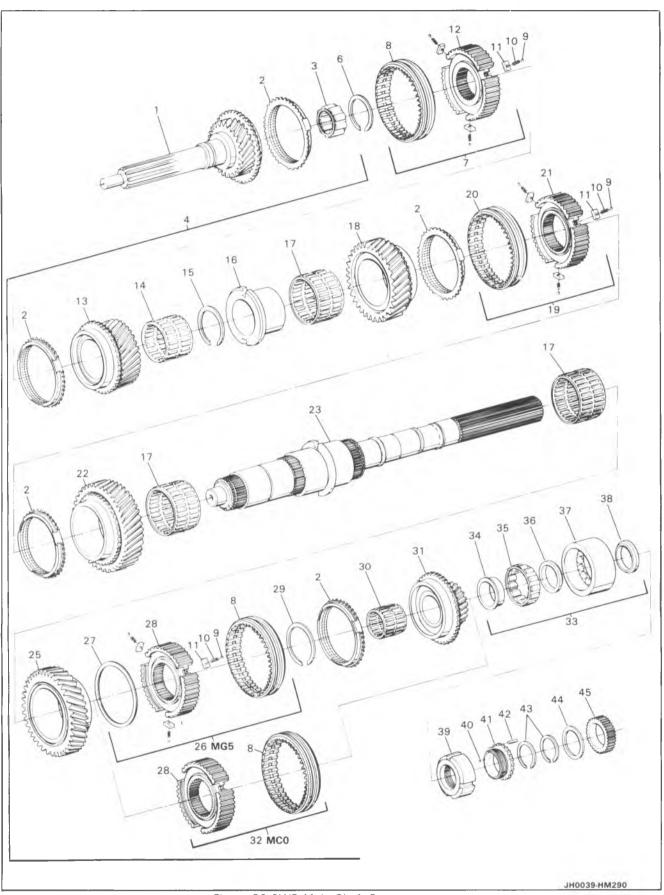


Figure 32 2WD Main Shaft Components

 3 BEARING, PILOT 4 SHAFT ASSEMBLY, MAIN (2WD – MCO & MG5) 6 RING, SNAP (SELECTIVE) 7 SYNCHRONIZER ASSEMBLY, 3-4 8 SLEEVE, SYNCHRONIZER DETENT 10 SPRING, SYNCHRONIZER DETENT 11 KEY, SYNCHRONIZER DETENT 11 KEY, SYNCHRONIZER 12 HUB, 3-4 SYNCHRONIZER 13 GEAR ASSEMBLY, 3RD SPEED 14 BEARING ASSEMBLY, 3RD SPEED GEAR NEEDLE 15 RING, SNAP (SELECTIVE) 16 RACE, 2ND SPEED GEAR NEEDLE BEARING (INNER) 17 BEARING ASSEMBLY, 2ND SPEED 18 GEAR ASSEMBLY, 2ND SPEED 19 SYNCHRONIZER ASSEMBLY, 1-2 20 SLEEVE, 1-2 SYNCHRONIZER 21 GEAR, 1ST SPEED 23 SHAFT, OUTPUT (2WD) 25 GEAR, 1ST SPEED 26 SYNCHRONIZER ASSEMBLY, 5TH - REVERSE (MG5) 27 RING, SPIRAL LOCK (MG5 ONLY) 28 HUB, 5TH - REVERSE SYNCHRONIZER 29 RING, SNAP (SELECTIVE) 30 BEARING ASSEMBLY, 5TH SPEED GEAR NEEDLE (MG5) 31 GEAR ASSEMBLY, 5TH SPEED GEAR NEEDLE (MG5) 32 SYNCHRONIZER ASSEMBLY, 5TH SPEED GEAR NEEDLE (MG5) 33 BEARING ASSEMBLY, 5TH SPEED GEAR NEEDLE (MG5) 34 GEAR ASSEMBLY, 5TH SPEED (MG5) 35 SYNCHRONIZER ASSEMBLY, TH SPEED GEAR NEEDLE (MG5) 34 GEAR ASSEMBLY, 5TH SPEED GEAR NEEDLE (MG5) 35 SYNCHRONIZER ASSEMBLY, NUTPUT SHAFT 34 RACE, ROLLER BEARING (INNER) 37 RACE, BALL BEARING (INNER) 38 RACE, BALL BEARING (INNER) 39 RING, THREADED THRUST (OUTER) 39 RING, THREADED THRUST (INNER) 42 PIN SPRIL ROLL 43 RING, SNAP 44 WASHER, SPEEDO GEAR THRUST (2WD) 45 ROTOR, SPEED SENSOR
--

Figure 32 Legend

JH0040-HM290

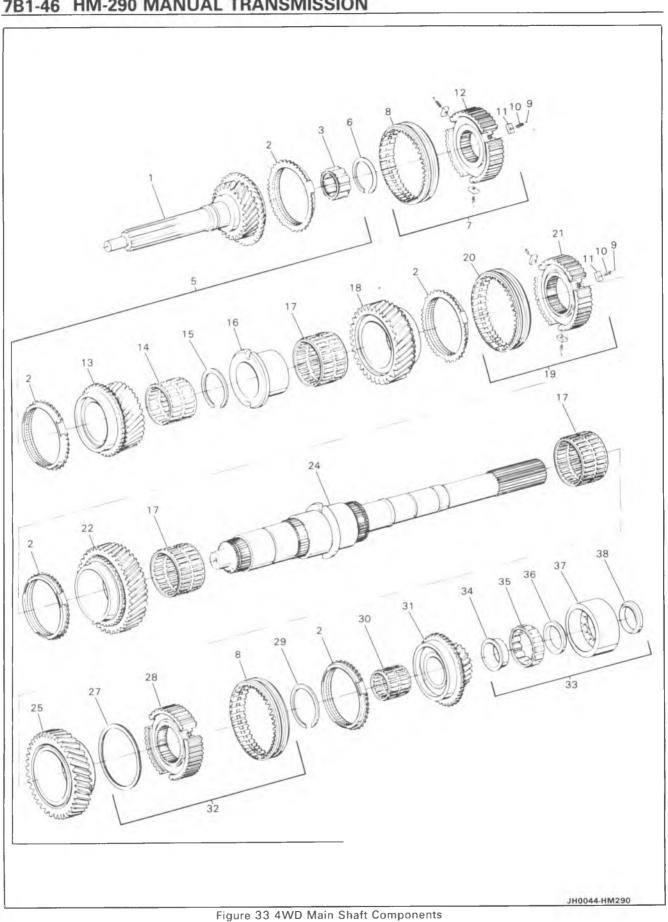

7B1-46 HM-290 MANUAL TRANSMISSION

 SHAFT, INPUT RING, SYNCHRONIZER BEARING, PILOT SHAFT ASSEMBLY, MAIN (4WD) RING, SNAP (SELECTIVE) SYNCHRONIZER ASSEMBLY, 3-4 SLEEVE, SYNCHRONIZER BALL, SYNCHRONIZER DETENT SPRING, SYNCHRONIZER DETENT SPRING, SYNCHRONIZER BALL, SYNCHRONIZER BALL, SYNCHRONIZER BALL, SYNCHRONIZER BALL, SYNCHRONIZER GEAR ASSEMBLY, 3RD SPEED HUB, 3-4 SYNCHRONIZER GEAR ASSEMBLY, 3RD SPEED BEARING ASSEMBLY, 3RD SPEED GEAR NEEDLE RING, SNAP (SELECTIVE) RACE, 2ND SPEED GEAR NEEDLE BEARING (INNER) BEARING ASSEMBLY, SPEED GEAR NEEDLE GEAR ASSEMBLY, 2ND SPEED SYNCHRONIZER ASSEMBLY, 1-2 SLEEVE, 1-2 SYNCHRONIZER GEAR ASSEMBLY, REVERSE SPEED SYNCHRONIZER ASSEMBLY, 1-2 SLEEVE, 1-2 SYNCHRONIZER HUB, 1-2 SYNCHRONIZER HUB, 1-2 SYNCHRONIZER GEAR ASSEMBLY, REVERSE SPEED SYNCHRONIZER ASSEMBLY, 5TH-REVERSE RING, SPIRAL LOCK HUB, STH-REVERSE SYNCHRONIZER BEARING ASSEMBLY, 5TH SPEED GEAR NEEDLE GEAR ASSEMBLY, 5TH SPEED SYNCHRONIZER ASSEMBLY, REVERSE BEARING ASSEMBLY, OUTPUT SHAFT RACE, BALL BEARING (NNER) RACE, BALL BEARING (OUTER) RACE, BALL BEARING (OUTER) RACE, BALL BEARING (OUTER) 	2 RING, SYNCHRONIZER 3 BEARING, PILOT 5 SHAFT ASSEMBLY, MAIN (4WD) 6 RING, SNAP (SELECTIVE) 7 SYNCHRONIZER ASSEMBLY, 3-4 8 SLEEVE, SYNCHRONIZER 9 BALL, SYNCHRONIZER DETENT 10 SPRING, SYNCHRONIZER DETENT 11 KEY, SYNCHRONIZER 13 GEAR ASSEMBLY, 3RD SPEED 14 BEARING ASSEMBLY, 3RD SPEED GEAR NEEDLE 15 RING, SNAP (SELECTIVE) 16 RACE, 2ND SPEED GEAR NEEDLE BEARING (INNER) 17 BEARING ASSEMBLY, SPEED GEAR NEEDLE 18 GEAR ASSEMBLY, 2ND SPEED 19 SYNCHRONIZER ASSEMBLY, 1-2 20 SLEEVE, 1-2 SYNCHRONIZER 21 HUB, 1-2 SYNCHRONIZER 22 GEAR, 1ST SPEED 24 SHAFT, OUTPUT (4WD) 25 GEAR ASSEMBLY, FEVERSE SPEED 26 SYNCHRONIZER ASSEMBLY, 5TH-REVERSE 27 RING, SPIRAL LOCK 28 HUB, 5TH-REVERSE SYNCHRONIZER 29 RING, SNAP (SELECTIVE) 30 BEARING ASSEMBLY, 5TH SPEED GEAR NEEDLE 31 GEAR ASSEMBLY, 5TH SPEED 32 SYNCHRONIZER ASSEMBLY, REVERSE 33 BEARING ASSEMBLY, 5TH SPEED 34 SHAFT, OUTPUT (4WD) 35 GEAR, SSEMBLY, 5TH SPEED GEAR NEEDLE 36 GEAR ASSEMBLY, 5TH SPEED 37 RING, SPIRAL LOCK 38 HUB, 5TH-REVERSE SYNCHRONIZER 39 BEARING ASSEMBLY, 5TH SPEED GEAR NEEDLE 31 GEAR ASSEMBLY, 5TH SPEED 32 SYNCHRONIZER ASSEMBLY, REVERSE 33 BEARING ASSEMBLY, OUTPUT SHAFT 34 RACE, ROLLER BEARING 35 BEARING, ROLLER 36 RACE, BALL BEARING (INNER) 37 RACE, BALL BEARING (OUTER) 38 RACE, BALL BEARING (OUTER)
--	--

Figure 33 Legend

7B1-48 HM-290 MANUAL TRANSMISSION

- Assemble

? Important

The following components will require heating prior to installation during assembly procedures.

- 7-10 minutes, 120° C (250° F). race (34) and (36)
 - 2WD speed sensor rotor (45)
- 20 minutes MINIMUM, 120° C (250° F)
 2nd speed gear race (16)
 - Tools Required:
 - Hydraulic Press
 - J 36183 Press Tube
 - J 36184 Adapter, Press Tube Reducer J 36513 Gear and Bearing Separator Plate J 22912-01 Small Gear Puller
 - J 6133-01 Speedo Gear and Bearing Installer
- 1st-2nd gear synchronizer assembly (19), (Figure 34)
- 3rd-4th gear synchronizer assembly (7), (Figure 35)
- 3. 5th-reverse gear synchronizer assembly (26) (4-speed) or (32) (5-speed), (Figure 36)
- 4. Bearing assembly (17), reverse speed gear (25) (Figure 37).

Important

- When pressing the 5th-reverse synchronizer assembly (32) (4-speed) or (26) (5-speed):
 - Manually align and engage splines.
 - Press until seated.
 - Be sure all shavings are removed.
- 5. 5th-Reverse synchronizer assembly (26) with synchronizer ring (2) (5-speed) or (32) (4-speed) using J 36183, J 36184, J 36513 and hydraulic press.
 - Check scribe marks for correct positions.
 - With spiral lock ring (27) (5-speed) or groove (4-speed) in hub (28) towards reverse speed gear (25).
- 6. NEW selective snap ring (29).
 - Install the thickest snap ring that will fit in the groove.
- 7. Bearing assembly (30) and 5th speed gear (31) (5-speed) (Figure 38).
 - 5-speed only

Important

- When pressing the bearing races onto the main shaft (23) or (24):
- Press until there is no clearance between roller bearing race and stop on main shaft.
- 8. Roller bearing race (34) HEATED using J 6133-01, J 36513 and hydraulic press.
 - Shoulder down towards reverse gear.

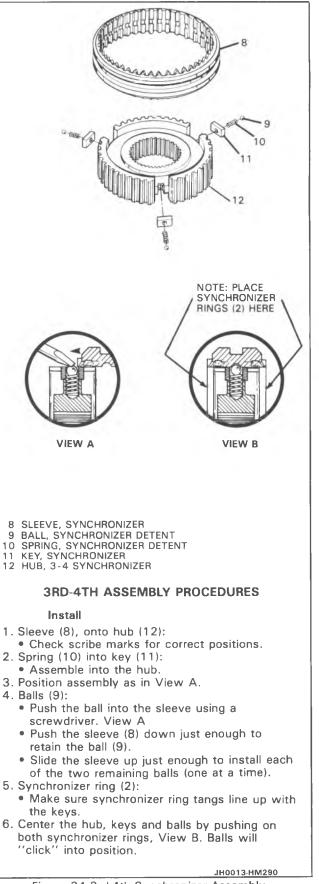


Figure 34 3rd-4th Synchronizer Assembly

28

VIEW F


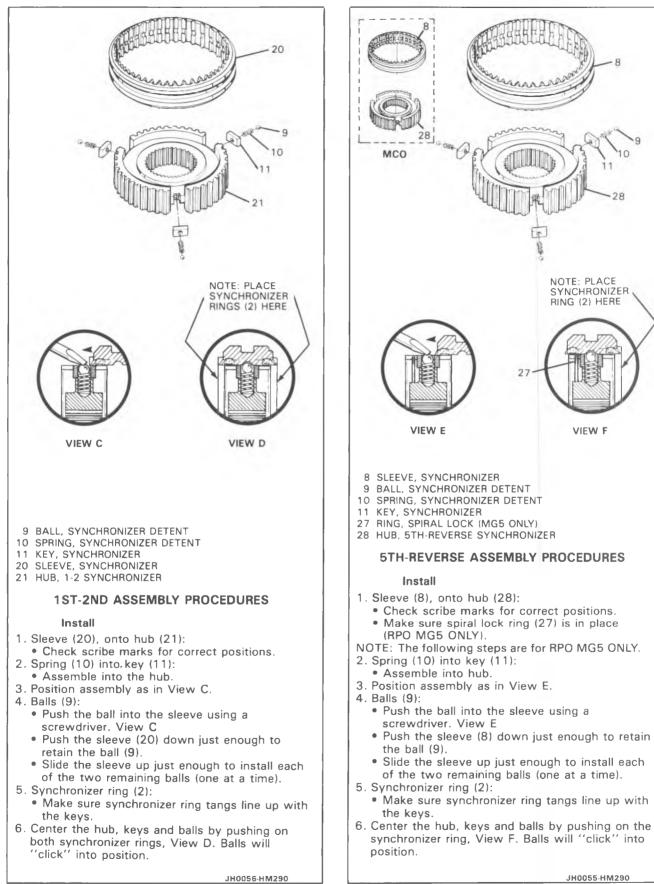


Figure 35 1st-2nd Synchronizer Assembly

JH0055-HM290 Figure 36 5th-Reverse Synchronizer Assembly

7B1-50 HM-290 MANUAL TRANSMISSION

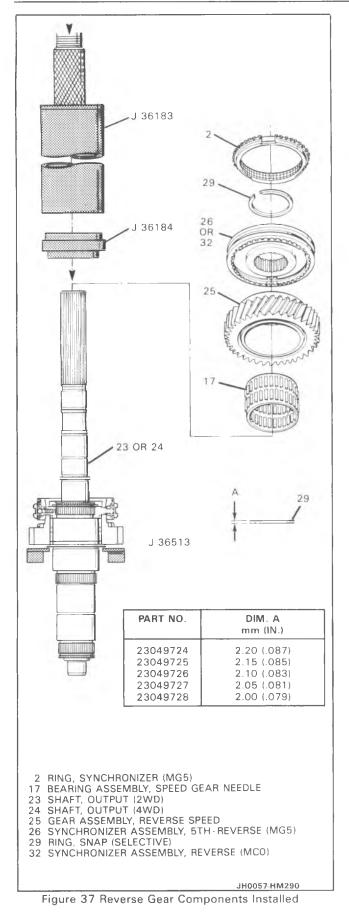

- 9. Roller bearing (35), ball bearing (inner) race (36) HEATED using J 6133-01, J 36513 and hydraulic press.
 - Apply grease to roller bearing.
 - SMALLER DIAMETER OF BEARING CAGE UP.
 - Shoulder of ball bearing (inner) race down towards reverse gear.
- 10. Bearing assembly (17) and 1st speed gear (22) (Figure 39).

Important

9

- When pressing the 1st-2nd synchronizer assembly (19):
 - Manually align and engage splines.
 - Start press operation, STOP before tangs engage.
 - Lift and rotate gear (22), to engage synchronizer ring (2).
 - Continue to press until seated.
 - Be sure all shavings are removed.
- 11. 1-2 synchronizer assembly (19) with both synchronizer rings (2) using J 36183, J 36184, J 22912-01 and hydraulic press.
 - Check scribe marks for correct positions.

Important

- The groove on the outside of the sleeve MUST GO TOWARDS THE 2ND SPEED GEAR to prevent gear clash during 1st and 2nd gear shifts (the teeth on the sleeve have different angles).
- 12. Bearing assembly (17) and 2nd speed gear (18) (Figure 40).
 - Make sure bearing cage is together.
- 13. 2nd gear race (16) HEATED using J 36183, J 36184, J 22912-01 and hydraulic press.
- 14. NEW selective snap ring (15)
 - Install the thickest snap ring that will fit in the groove.
- 15. Bearing assembly (14) and 3rd speed gear (13) (Figure 41).

Important

- When pressing the 3rd-4th synchronizer assembly (7):
 - Manually align and engage splines.
 - Start press operation, STOP before tangs engage.
 - Lift and rotate gear (13), to engage synchronizer ring (2).
 - Continue to press until seated.
 - Be sure all shavings are removed.
- 16. 3-4 synchronizer assembly (7) with both synchronizer rings (2) using J 36183, J 36184, J 22912-01 and hydraulic press.
 - Check scribe marks for correct positions.
- 17. NEW selective snap ring (6)
 - Install the thickest snap ring that will fit in the groove.



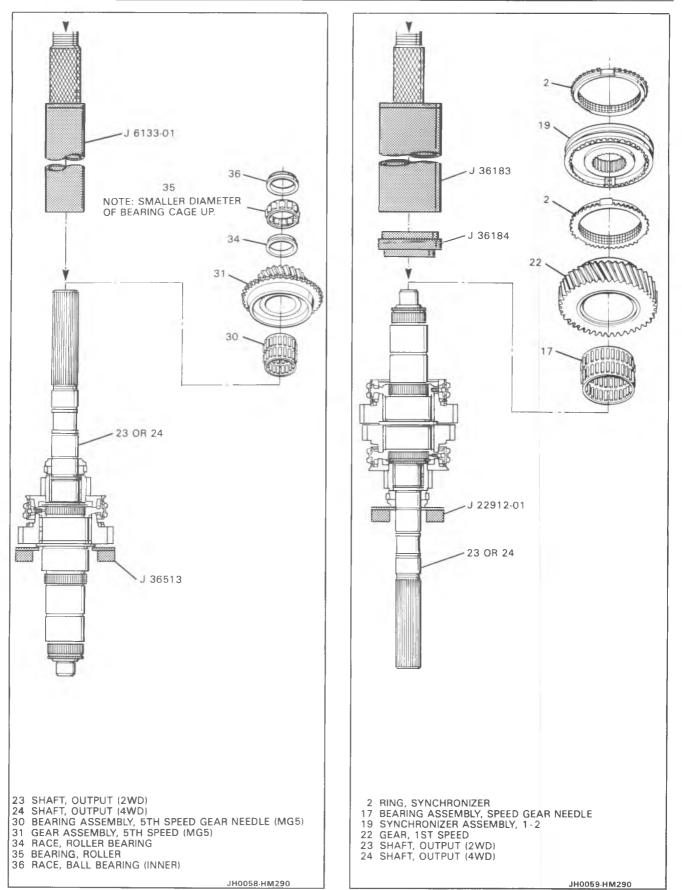


Figure 38 Bearing Races and 5th Gear Installed

Figure 39 1st Gear and Components Installed

7B1-52 HM-290 MANUAL TRANSMISSION

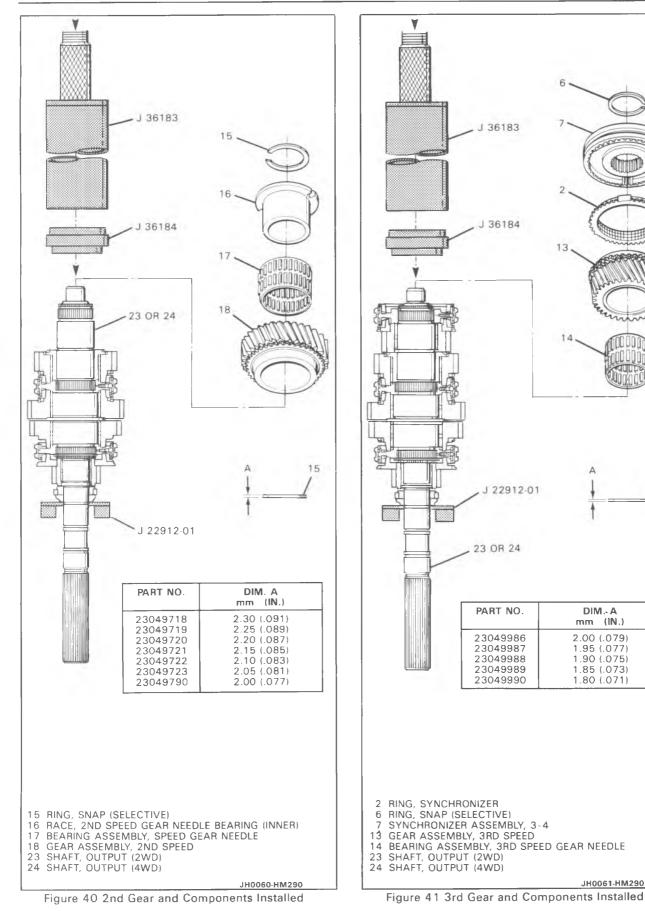

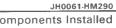

6

2

13

14

A

DIM.-A

mm (1N.) 2.00 (.079) 1.95 (.077) 1.90 (.075)

1.85 (.073)

1.80 (.071)

6

COUNTERSHAFT INSPECTION

Clean


• All parts in a suitable solvent and air dry.

Inspect (Figure 42)

- 1. Shaft (54) or (53), for cracks, replace if these conditions exist.
- 2. Gear teeth (54) and (53) for scuffed, nicked, burred, or broken teeth.
- 3. Bearings (203) for roughness of rotation, burred or pitted condition, replace if these conditions exist (Figures 1 or 3).
- 4. Bearing races (202) for scoring, wear or overheating (Figures 1 or 3).

Important Important

- If scuffed, nicked, burred or scoring conditions cannot be removed with a soft stone or crocus cloth, replace the component.
- Fifth gear (55) (5-speed) CANNOT be pressed off the countershaft assembly (53), replace as an assembly only.

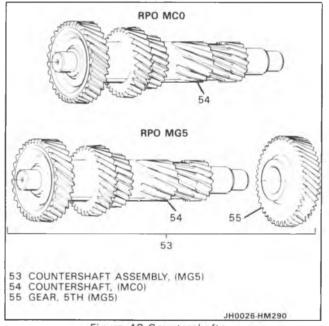



DISSASSEMBLY AND ASSEMBLY OF REVERSE IDLER GEAR



Disassemble (Figure 43)

- 1. Snap ring (47).
- 2. Thrust washer (48).
- 3. Ball (40).
- 4. Reverse gear (49).
- 5. Bearing assemblies (50) (THREE).
- 6. O-ring (52).

Clean

.

All parts in a suitable solvent and air dry.

Inspect

- 1. Gear teeth (49), for scuffed, nicked, burred or broken teeth.
- 2. Bearing assemblies (50) for roughness of rotation, burred or pitted condition and gage damage, replace if these conditions exist.
- 3. Shaft (51), for scoring, wear or overheating.

? Important

If scuffed, nicked, burred or scoring conditions cannot be removed with a soft stone or crocus cloth, replace the component.

Assemble (Figure 43)

- Lubricate all components as assembly progresses. Use lubricant 5W-30 GM P/N 1052931 or equivalent.
- 1. Three bearing assemblies (50).
- 2. Reverse gear (49).
 - Extended part of the hub faces thrust washer.
- 3. Thrust washer (48) and ball (4mm) (40).
 - Retain ball with petroleum jelly.
- 4. NEW snap ring (47)
- 5. NEW o-ring (52).

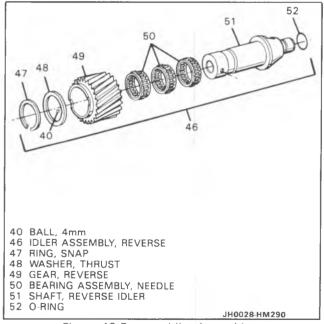



Figure 43 Reverse Idler Assembly

DISASSEMBLY AND ASSEMBLY OF FRONT HOUSING ASSEMBLY



Tools Required:

7B1-54 HM-290 MANUAL TRANSMISSION

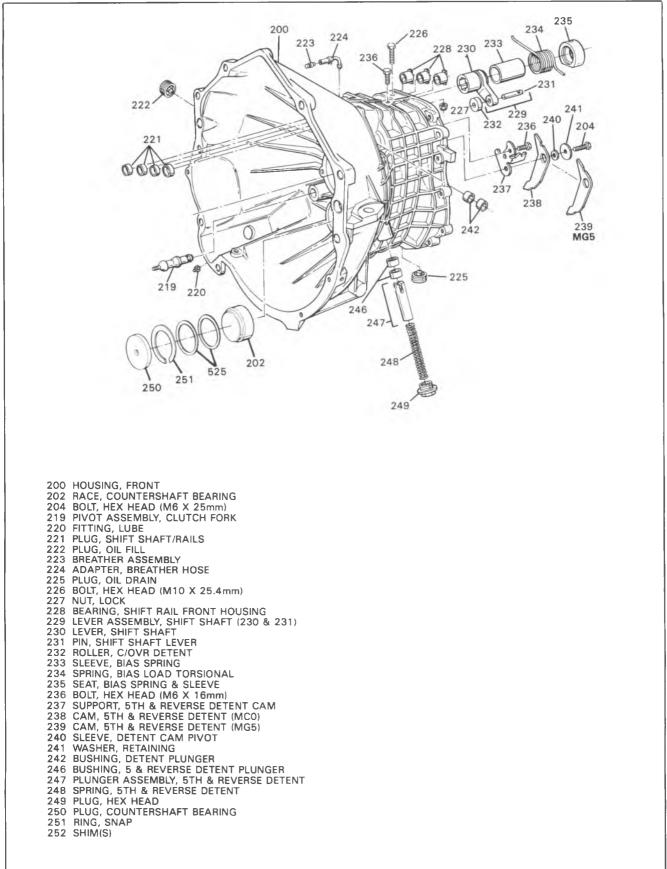

JH0064-HM290

J 8092 Universal Drive Handle J 36507 Detent Bushing Remover and Installer J 36509 Clutch Pivot Remover/Detent Spring Plug Remover J 36800 Shift Rail Bushing Remover J 36506 Reverse Detent Bushing Remover and Installer J 23907 Slide Hammer J 36511 Oil Fill Plug Hex Bit (17mm) J 36799 Countershaft Bearing Race Shimming Tool

←→ Remove or Disconnect

- 1. Ball bearing outer race (216), using brass drift.
- 2. Three shift rail front housing bearings (228), using J 36800 and J 23907 (Figure 45).

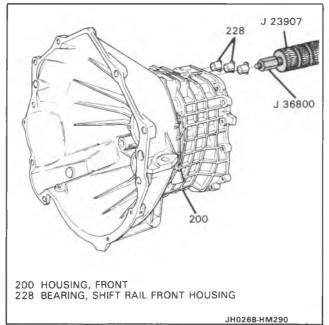


Figure 45 Removing Shift Rail Bearings

- 3. Clutch fork pivot assembly (219), using J 36509 and J 23907 (Figure 46).
- 4. Shift shaft/rails plugs (221)
 - Use a punch to drive the plugs out.
- 5. Countershaft bearing plug (250) (Figure 47).
 - Destake first.
 - Tap using 3/8-16 bottom tap.
 - Screw 3/8-16 adapter into the plug.
 - Remove the plug with J 6725-B.
- 6. Snap ring (251), shim(s) (252) and countershaft bearing race (202) using J 36799 and J 8092.
 - Tap in countershaft bearing race (202) before removing snap ring (251).

Important 2

If countershaft bearing race (202) is removed refer to COUNTERSHAFT ENDPLAY ADJUSTMENT.


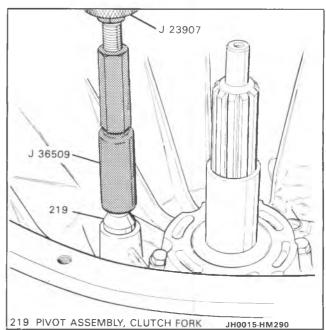


Figure 46 Removing Clutch Fork Pivot Assembly



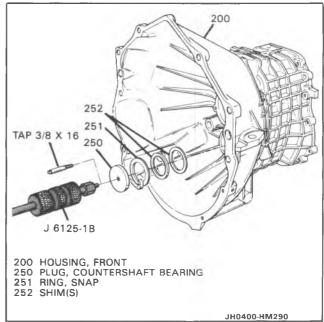


Measure (Figure 48)


The countershaft bearing race bore in two places diagonally, 4mm (0.157 inch) in from the inside of the transmission housing. Replace the housing if the bore is not within 51.946 to 51.965mm (2.045 to 2.046 inch).

- 7. Hex head plug (249), 5th-reverse detent spring (248), 5th-reverse detent plunger assembly (247) (Figure 49).
- Bolt (204), washer (241), reverse detent cam (238) (4-speed) or 5th-reverse cam (239) (5-speed) and bushing (240) (Figure 50).

7B1-56 HM-290 MANUAL TRANSMISSION

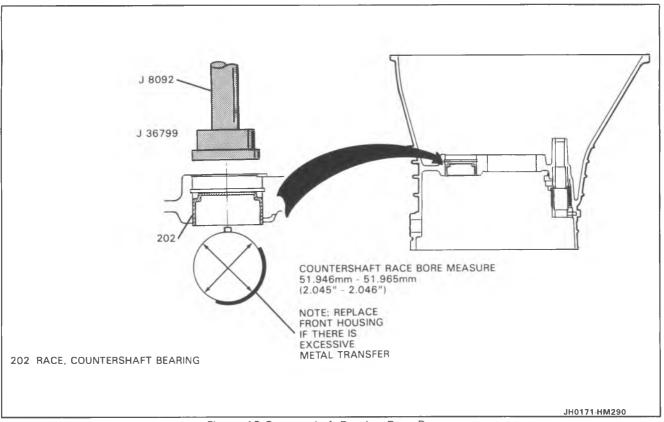




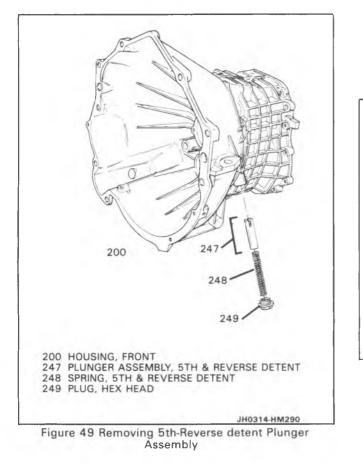

Release tension of bias spring (234) from the end of the shift shaft lever pin (231) using a screwdriver.

CAUTION: Spring is under high tension

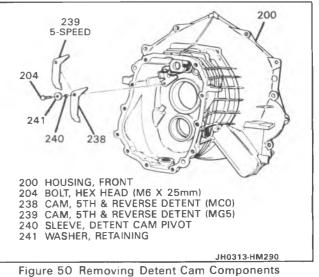

- 9. Bolt (236), bias spring and sleeve seat (235), bias load torsional spring (234), bias spring sleeve (233), shift shaft lever assembly (229) and detent roller (232) (Figure 51).
- 10. Bolt (236), detent cam support (237).


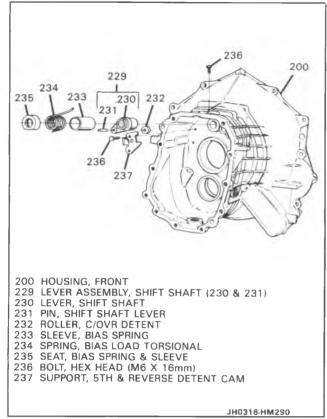



Figure 51 Removing Bias Spring Components

- 11. Two 5th-reverse detent bushings (246), using J 36506 (Figure 52).
 - Drive J 36506 till BOTH bushings are removed.

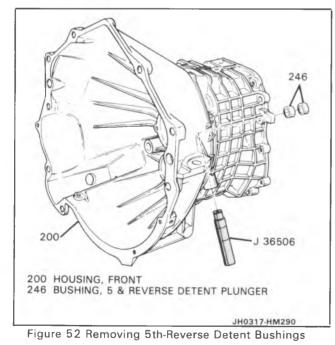


12. Two detent plunger bushings (242), using J 36507 (Figure 53).

• Remove ONE bushing at a time

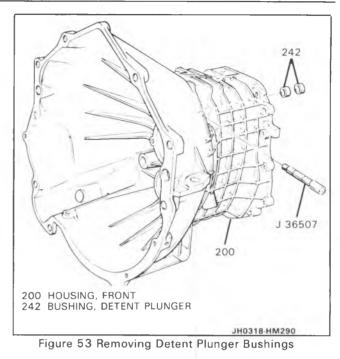

- 13. Breather assembly (223).
- DO NOT REMOVE metal tube from case.
 14. Oil fill plug (222) and oil drain plug (225), using J 36511 (Figure 54).

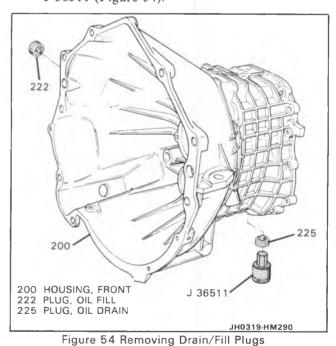

- 15. Gasket material from the case using liquid gasket remover.



Clean

All parts in a suitable solvent and air dry.

7B1-58 HM-290 MANUAL TRANSMISSION

- Bearing race bore, for wear, scratches or grooves; 1 if countershaft bearing race is worn or damaged the rear housing MUST be replaced.
- Bushings, for scores, burrs, roundness or 2. evidence or overheating;
- 3. Case, for cracks, threaded opening for damaged threads, mounting faces for nicks, burrs, or scratches; if case is cracked, it must be replaced.
- Machined mating surfaces for flatness, check 4. with a straight edge.

Important

- If scratches, grooves or scoring cannot be removed with a soft stone or crocus cloth, replace the component.
- Clean-up damaged threads with correct size tap.
 - Important

The following component will require cooling prior to installation during assembly procedures.

- 20 minutes MINUMUM, O° C (32° F).
 - countershaft bearing plug (250). (If removed)

Assemble

Tools Required:

J 36190 Drive handle

J 36507 Detent Bushing Remover and Installer Plug Remover

- J 36510 Clutch Pivot Installer
- J 36800 Shift Rail Bushing Remover

J 36506 Reverse Detent Bushing Remover and Installer

J 36511 Oil Fill Plug Hex Bit (17mm) J 36799 Countershaft Bearing Race Shimming Tool

- 1. Ball bearing outer race (216), using brass driff.
 - Put a shop towel over the bearing during installation.
- Three shift rail front housing bearings (228), 2 using J 36798-1 and J 36190 (Figure 55).
 - Install flush and stake using J 36798-2, J 36798-1 and J 36190.
 - DO NOT STAKE the tabs on the bushings.
- 3 Clutch fork pivot assembly (219), using J 36510 and J 36190 (Figure 56).
 - Grease after installation through lube fitting (220).
- 4 Two detent plunger bushings (242), using J 36507 (Figure 57).
 - Install one at a time. •
 - Install the first bushing till the second scribe mark on the tool lines up with the housing.
 - Install the second bushing till the first scribe mark on the tool lines up with the housing.
- Countershaft bearing race (202) using J 36799 and J 8092 (Figure 58).
 - Align lube slot in race with groove in the housing.

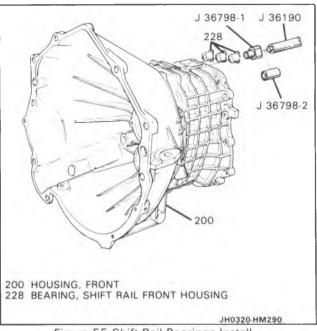


Figure 55 Shift Rail Bearings Install

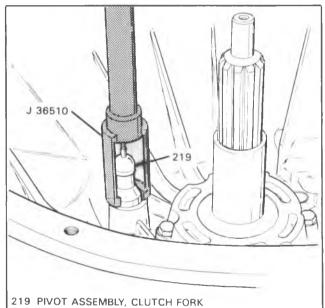


Figure 56 Clutch Fork Pivot Assembly Install


- Shim(s) (252).
- Snap ring (251).

Important

If any of the parts listed below are COUNTERSHAFT replaced the **ENDPLAY** SHIMMING PROCEDURE must be performed:

JH0014-HM290

- Countershaft bearing races.
- Countershaft bearings
- Countershaft
- Front or rear housing

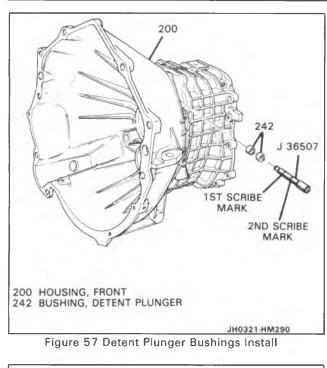


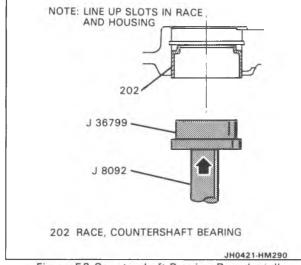


Figure 58 Countershaft Bearing Race Install

Important

Countershaft bearing plug MUST be cooled at O° C (32° F) for a MINIMUM of 20 minutes before installation.

- 6. NEW Countershaft bearing plug (250) using J 36799 and J 8092.
 - Apply gasket maker GM P/N 1052943 or equivalent to the outside edge of the plug.
 Stake in three places evenly apart.
- Two 5th-reverse detent bushings (246), using J 36506 (Figure 59).
 - Install one at a time.
 - Install the first bushing till the second scribe mark on the tool lines up with the housing.
 - Install the second bushing till the first scribe mark on the tool lines up with the housing.
- 8. Detent cam support (237) and bolt (236) (Figure 60).

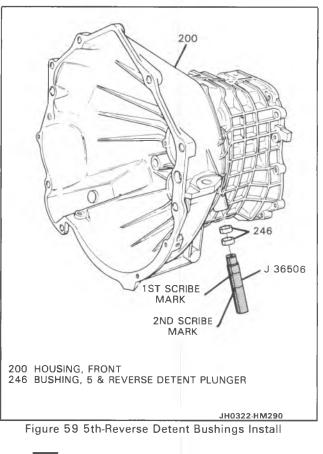

Tighten

Bolt (236) to 8.5 N·m (7 Lb. Ft.).

9. Reverse detent cam (238) (4-speed) or 5th-reverse cam (239) (5-speed), bushing (240), washer (241) and bolt (204).



Bolt (204) to 8.5 N·m (7 Lb. Ft.).

- 10. Detent roller (232) on shift shaft lever assembly (229) and install into housing (Figure 61).
- 11. Bias spring sleeve (233), bias load torsional spring (234), bias spring and sleeve seat (235) and bolt (236).


J Tighten

- Bolt (236) to 8.5 N·m (7 Lb. Ft.).
- 12. Bias load torsional spring (235) end back onto the shift shaft lever pin (231).
- 13. 5th-reverse plunger assembly (247), 5th-reverse detent spring (248), hex head plug (249) (Figure 62).
 - Make sure slot in plunger is lined up with reverse cam.
 - Apply pipe sealant with Teflon([™]) GM
 P/N 1052080 or equivalent to the threads.


হ্ Tighten

Hex head plug (249) to 60 $N \cdot m$ (46 Lb. Ft.).

7B1-60 HM-290 MANUAL TRANSMISSION

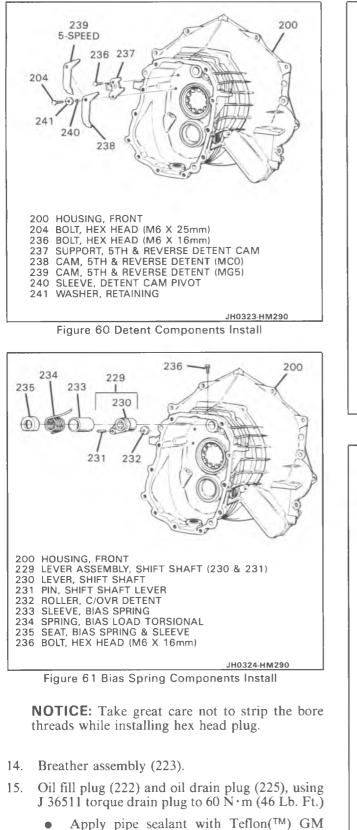

- Apply pipe sealant with Teflon(TM) GM P/N 1052080 or equivalent to the threads.
- 16. Shift shaft/rails plugs (221)
 - Apply gasket maker GM P/N 1052943 to the edge of the plugs.
 - Install flush

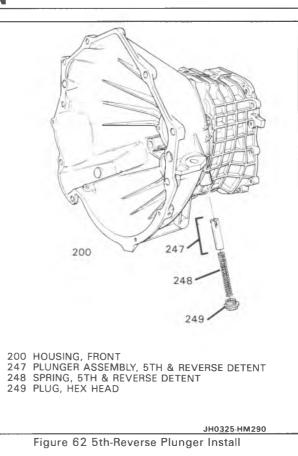


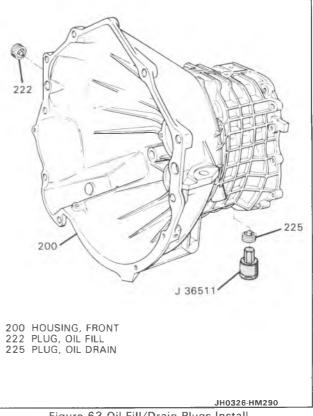


Figure 63 Oil Fill/Drain Plugs Install

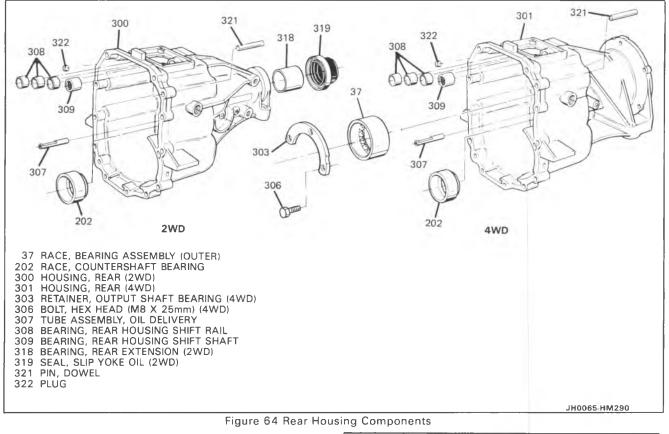

DISASSEMBLY AND ASSEMBLY OF REAR HOUSING ASSEMBLY

Disassemble (Figure 64)

Tools Required:

J 36800 Shift Rail Bushing Remover J 23907 Slide Hammer with pilot bearing puller

J 26941 2WD Output Shaft Oil Seal Remover (2WD models only)

←→ Remove or Disconnect

- 1. Rear housing shift rail bearings (308) (three), using J 36800 and J 23907 (Figure 65).
 - Screw J 36800 into the bearing, then slide hammer out.
- 2. Rear housing shift shaft bearing (309), using J 23907 with pilot bearing puller (Figure 66).
 - Position pilot bearing puller legs behind ball bearing cage.
 - Tighten.
 - Slide hammer out.
- 3. Three bolts (306), output shaft bearing retainer (303) (4WD), bearing assembly (outer) race (37), using brass drift then remove shim(s) (212).

4WD models only.

- 4. Slip yoke oil seal (319), using J 26941 and J 23907 (Figure 67).
 - 2WD models only.



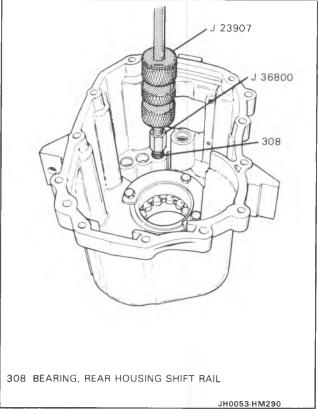


Figure 65 Removing Shift Rail Bearing

7B1-62 HM-290 MANUAL TRANSMISSION

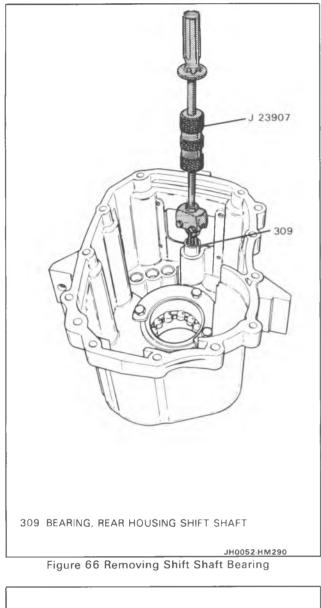

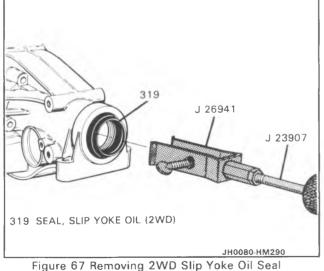

- 5. Plug (322).
 - Use a punch to drive the plug out.

6. Gasket material from the case using liquid gasket remover.

```
Inspect
```

🕎 Clean

- 1. Bearing race bore, for wear, scratches or grooves; if counter shaft bearing race is worn or damaged the rear housing MUST be replaced.
- 2. Bushings, for scores, burrs, roundness or evidence of overheating; 2WD output shaft bushing (318) cannot be serviced, replace the rear housing (300) (no service for bushing).
- 3. Case, for cracks, threaded opening for damaged threads, mounting faces for nicks, burrs, or scratches; if case is cracked, it must be replaced.
- 4. Machined mating surfaces for flatness, check with a straight edge.

Important

- If scratches, grooves or scoring cannot be removed with a soft stone or crocus cloth, replace the component.
- Clean-up damaged threads with correct size tap.

Assemble

Tools Required:

J 36190 Drive Handle

J 36503 Extension Housing Seal Installer (2WD models only) J 36798-1 Shift Rail Bushing

Installing Tool J 36798-2 Shift Rail Bushing Staking Tool

- 1. Rear housing shift rail bearings (308) (three), using J 36190 and J 36798-1 (Figure 68).
 - Stake with J 36798-2, J 36798-1 and J 36190.
- Rear housing shift shaft bearing (309), using J 36506 (Figure 69).
 - Install flush.
- 3. Shim(s) (212), bearing assembly (outer) race (37), using brass drift.
 - 4WD models only
 - Output shaft bearing retainer (303).
 - Bolts (Three) (306) apply threadlocker GM P/N 12345382 or equivalent to the threads.


হ্ Tighten

Bolts (306) to 22 N·m (17 Lb. Ft.).

Important

The OUTPUT BEARING SELECTIVE SHIM PROCEDURE MUST be performed before installing a new bearing assembly.

4. Two dowel pins (321).

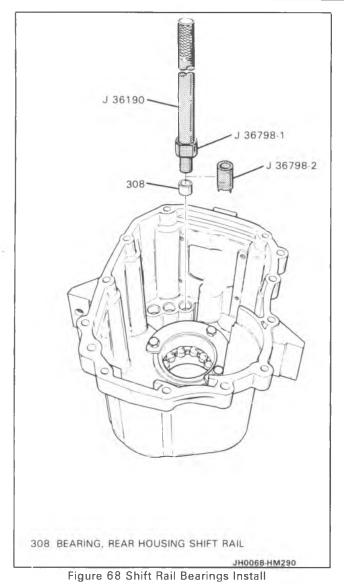


- Drive till flush.
- Slip yoke oil seal (319), using J 36503 (Figure 70).
 2WD models only.
- Fill between the seal lips with chassis grease 6. Plug (322).
 - Apply gasket maker GM P/N 1052943 or equivalent around the edge of the plug.


SHIFT SHAFT/RAIL AND FORK ASSEMBLIES INSPECTION

Inspect (Figure 71)

Clean

- All parts in a suitable solvent and air dry.
- The parts that compose the 1-2 (100), 5th-reverse (111) shift rail and fork assemblies are serviceable as an assembly only.
- 1. Shafts (101, 109, 112 and 117) for wear or scoring.

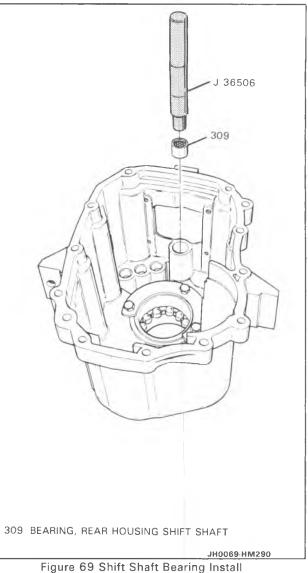

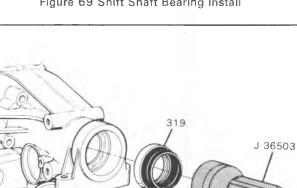

319 SEAL, SLIP YOKE OIL (2WD)

JH0079-HM290 Figure 70 2WD Slip Yoke Oil Seal Install

2. Forks (105, 108 and 114) for wear, scoring or distortion. The edges will turn black in color, this is a normal condition.

7B1-64 HM-290 MANUAL TRANSMISSION

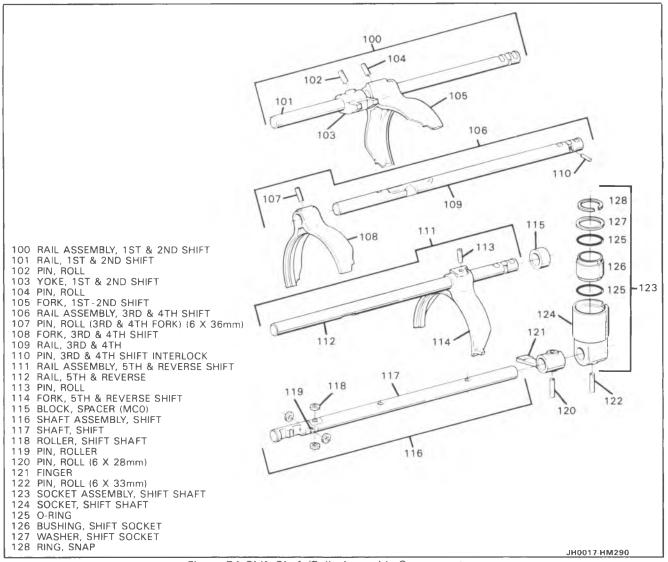


Figure 71 Shift Shaft/Rails Assembly Components

- 3. Levers (103 and 121) for wear or distortion.
- 4. Pins (119 and 110) for wear or distortion.
- 5. Shift shaft socket assembly (123) components for wear or distortion.

Important

• Wear, scoring or distortion requires replacement of assembly and close inspection of mating parts.

SHIFT LEVER HOUSING ASSEMBLY INSPECTION

Clean

• The gasket material from the machined mating surface with liquid gasket remover.

Inspect (Figure 72)

• The parts that compose the shift lever housing assembly (4-speed) (135) or (5-speed) (136) are

serviceable as an assembly only. Replace the assembly for any shift lever rattle/buzz.

- 1. O-rings (129) or (131) (some models) for cracks, tears or distortion. Replace the o-rings if any of these conditions exist.
- 2. Boot (130) for cracks, tears or distortion. Replace the boot if any of these conditions exist.
- 3. Machined mating surface for flatness, check with a straight edge.




Shift lever housing assembly (4-speed) (135) and hex jam nut (4-speed) (133) have left handed threads, While shift lever housing assembly (5-speed) (136) and hex jam nut (5-speed) (134) have right handed threads.

INPUT SHAFT BEARING RETAINER ASSEMBLY

Seal Replacement

Remove or Disconnect (Figure 73)

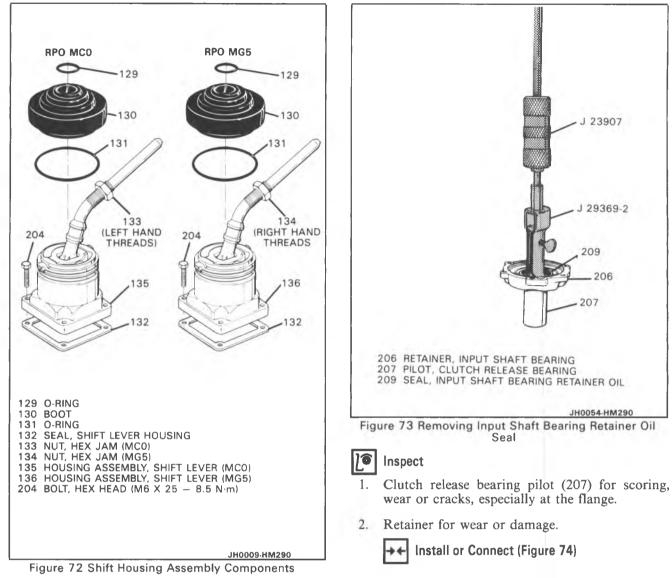

Tools Required

J 29369-2 Input Shaft Bearing Retainer Oil Seal Remover

- J 23907 Slide Hammer
- J 25070 Heat Gun
- 1. Rubber seal lip with pliers
 - Exposing the metal lip.
 - Save the input bearing retainer washer (208).
 - Install J 29369-2 below metal lip of . seal.
 - Expand to finger tight. .
 - Turn five full additional revolutions. •
 - Install J 23907 into J 29369-2.
- 2. Input shaft bearing retainer oil seal (209).
 - Heat oil seal with J 25070 for a minimum of one minute.
 - Hold clutch release bearing pilot (207) with heat resisting glove or equivalent, then slide hammer out seal.
- 3. Gasket material from the retainer (205) using liquid gasket remover.



J 36504 Input Shaft Bearing Oil Seal Installer

J 23907

J 29369-2

206

JH0054-HM290

209

207

- NEW oil seal (209), using J 36504. 1.
 - Fill between the seal lips with chassis grease.

COUNTERSHAFT ENDPLAY ADJUSTMENT

9 Important

- This procedure must be performed when any of the following components are replaced:
 - Countershaft bearings (203) and/or front housing countershaft bearing race (202).
 - Front housing (200), rear housing (300) (2WD) or (301) (4WD).
 - Gear rattle noise complaint (not clutch disc related).

7B1-66 HM-290 MANUAL TRANSMISSION

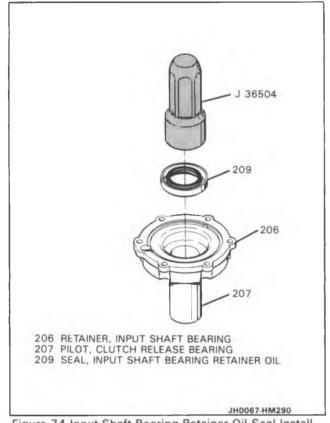


Figure 74 Input Shaft Bearing Retainer Oil Seal Install

Remove or Disconnect (Figure 75)

Important

The following component will require cooling prior to installation during assembly procedures.

- 20 minutes MINIMUM, 0° C (32° F).
 - countershaft bearing plug (250).

Tools Required:

J 36799 Countershaft Bearing Race Shimming Tool

J 6125-B Slide Hammer with 3/8-16 Adapter

- J 8092 Universal Drive Handle
- J 8001 Dial Indicator Set

J 25025-A Dial Indicator Stand and Guide Pin Set

- 1. Bearing race (216) using brass drift.
- 2. Countershaft bearing plug (250).
 - Destake first.
 - Tap using 3/8-16 bottom tap.
 - Screw 3/8-16 adapter into the plug.
 - Remove the plug with J 6125-B.
- 3. Snap Ring (251) and shim(s) (252).
- 4. Oil fill plug (222).

Inspect

1. Bearing (203) and countershaft (54) (4-speed) or (53) (5-speed).

Important

- SMALLER DIAMETER OF BEARING CAGE INTO BEARING RACE (202).
- Install bearings (203) in bearing races (202) prior to assembly.
- Retain with petroleum jelly.
- 2. Bolts (312).
 - Use only 4 or 5 (evenly spaced).

J Tighten

Bolts (312) to 35 N·m (27 Lb. Ft.).

3. J 8001 and J 25025-A to front housing in one of the input shaft bearing retainer bolt holes.

I Measure

Use a long screwdriver to pry the counter shaft upward, noting the dial indicator travel. Use the fill plug hole to reach the third gear part of the countershaft for prying.

? Important

- Measure off gear tooth.
- Make sure that J 8001 stays on gear tooth while measuring endplay.
- Allow the countershaft to lower to its original position, noting the dial indicator travel. Total travel should be 0.13 0.23mm (0.005 0.009 inches).
- 4. Move bearing race (202) with J 8092 and J 36799 to achieve specified endplay.
- 5. Select shim(s) (252) to retain specified endplay.
 - Using least number of shims.

→← Install or Connect

- 6. Selected shim(s) (252).
- 7. Snap ring (251).
- 8. Seat countershaft bearing race (202) using J 8092 and J 36799.
- 9. Repeat MEASURE procedure.
 - To make sure endplay is still correct after step 8.
- 10. NEW countershaft bearing plug (250) with gasket maker GM P/N 01052943 applied to the outside edge of the plug.

Important |


It will be necessary to cool the plug for 20 minutes at 0° C (32° F) before installation. Stake in three places evenly apart.

++ Remove or Disconnect

- 11. Front housing (200) and rear housing (300) (2WD) or (301) (4WD).
- 12. Countershaft (54) (4-speed) or (53) (5-speed) and bearings (203).

→+ Install or Connect

13. Fill plug (222) and drain plug (225).

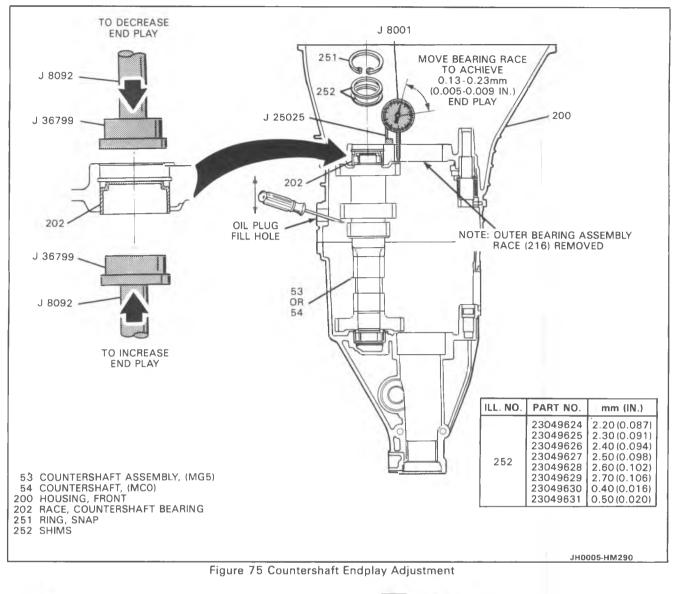

- Apply pipe sealant with Teflon([™]) GM P/N 1052080 or equivalent to the threads.
- Do not tighten fill plug. ø

Ð

Tighten

- Drain plug (225) to 60 N·m (46 Lb. Ft.). 14. Bearing race (216) using brass drift.
 - Cover with shop towel before installing •


7B1-68 HM-290 MANUAL TRANSMISSION

INPUT SHAFT BEARING RETAINER SELECTIVE SHIM PROCEDURE

Measure (Figure 76)

Tools Required:

- Dial Depth Gage or Equivalent
- The distance between the sealing flange of the retainer and the flanged part of the release guide. Record this measurement.
- The height of the input bearing outer race from the sealing surface of the front housing. Record this measurement.
- Subtract the bearing race height from the retainer depth and select a shim the same (or next smaller) size as the difference in measurements.

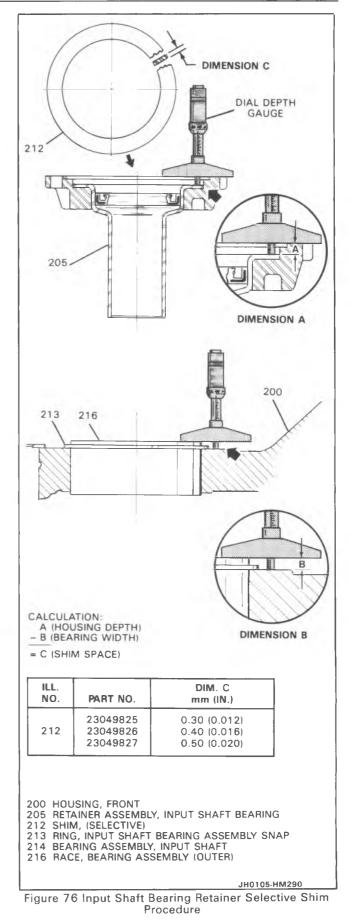

OUTPUT SHAFT BEARING SELECTIVE SHIM PROCEDURE

📵 Measure (Figure 77)

Tools Required:

Dial Depth Gage or Equivalent

- The distance between the bearing retainer surface and the bottom of the bearing bore in the rear housing. Record this measurement.
- The width of the main shaft rear bearing. Record this measurement.
- Subtract the bearing width from the housing bore depth. Select a shim which is the same (or next smaller) size as the difference in measurements.

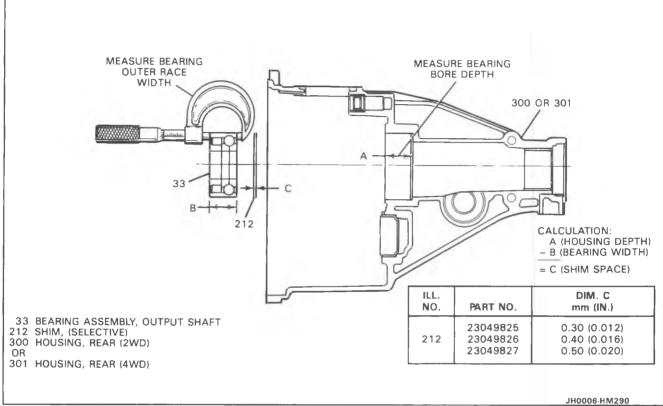


Figure 77 Output Shaft Bearing Selective Shim Procedure

7B1-70 HM-290 MANUAL TRANSMISSION

TRANSMISSION ASSEMBLY

-🔆 Assemble (Figure 78, 79 and 80)

- Tools Required:
 - J 36515 Assembly Pallet J 36515-12 Countershaft Adapter for 1988 and 1989 Models

Important

The following component will require heating prior to installation during assembly procedures.

- 7-10 minutes, 120° C (250° F).
 2WD speed sensor rotor (45)
- 1. Pilot bearing (3) into input shaft (1).
 - SMALLER DIAMETER OF BEARING CAGE TOWARD INPUT SHAFT.
 - Retain with petroleum jelly.
- Input shaft (1), pilot bearing (3), synchronizer ring (2) and mainshaft assembly (4) (2WD -4-Speed and 5-speed) or (5) (4WD 5-speed into J 36515.
- 3. J 36515-12 onto countershaft (53) (5-speed) or (54) (4-speed).
 - Install the assembly onto J 36515.
- 4. Reverse idler assembly (46) and NEW o-ring (52).
- 5. Bearing assembly (outer) race (37) and ball bearing (outer) race (38).
 - 2WD models only.
- 6. Install on main shaft assembly (4) or (5)
 3-4 shift fork (108).
 - TAPER ON FORK TOWARDS 3RD GEAR
 - 1-2 shift rail assembly (100).
 - Reverse shift rail assembly (111) and spacer block (115) (4-speed ONLY).
- Lock up transmission by sliding the 3-4 shift fork (108) and 1-2 shift rail assembly downward towards J 36515 (Figure 81).

2WD MODELS ONLY

Important

Steps 1 through 12 are for 2WD models only. The 4WD section follows step 12.

Install or Connect

Tools Required:

J 25070 Heat Gun

J 36515-10 Retainer Alignment Cables (2WD models only)

J 36516 Output Shaft Spanner Nut Wrench J 61133-01 Speedometer Rotor and Bearing Race Installer

- 1. Ball (4mm) (40) (Figure 82).
 - Retain in output shaft with petroleum jelly.

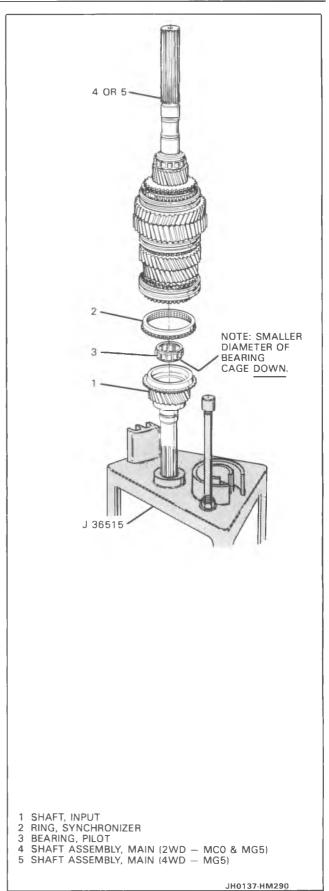


Figure 78 Mainshaft Components Install

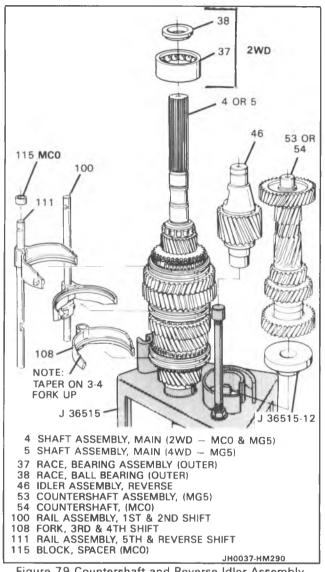


Figure 79 Countershaft and Reverse Idler Assembly Install

- 2. Threaded thrust (inner) ring (41) and threaded thrust (outer) ring (39).
 - MAKE SURE THE OLD SPIRAL ROLL PIN (42) IS REMOVED FROM THREADED THRUST RING (OUTER) (39)

? Important

- Screw the rings together completely, then back the rings off till BOTH ID SLOTS FOR THE BALL (40) LINE UP.
- Slide the assembled rings over the ball that is retained on the output shaft.

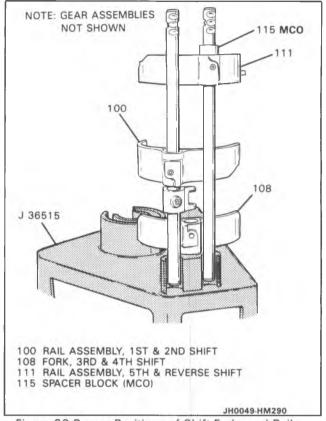
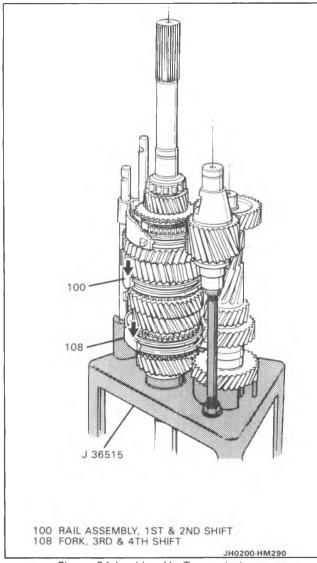


Figure 80 Proper Positions of Shift Forks and Rails

- Slide up the rod on J 36516, turn the black depth locating tang over, slide the rod through (so the roll pin will be installed to the correct depth).
- MAKE CLEARANCE FOR THE SNAP RING BY FIRST screwing the rings together completely by turning J 36516 counterclockwise.
- 3. NEW snap ring (43) (2.00mm thickness).
- Turning J 36516 clockwise, torque to 15 N·m (12 Lb. Ft.) then ADVANCE to the next spiral roll pin notch.
 - Hold the countershaft against the mainshaft while setting torque.
- 5. NEW spiral roll pin (42).
 - Install roll pin in the bottom of J 36516, retain with petroleum jelly.
 - Put J 36516 on with the roll pin hole and roll pin lined up.
 - Drive roll pin into thrust ring (outer).
 - Remove tool.

7B1-72 HM-290 MANUAL TRANSMISSION






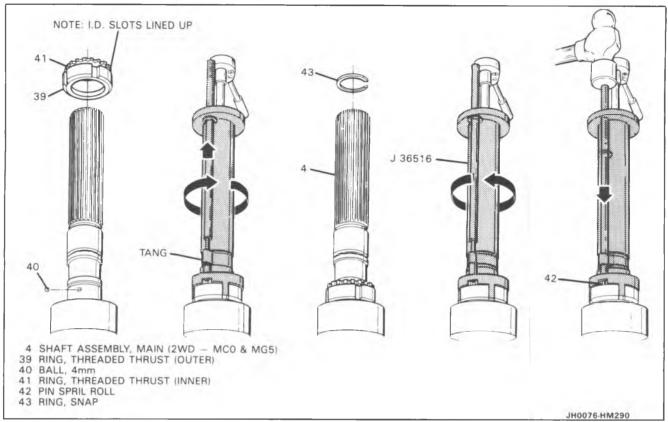


Figure 82 2WD Threaded Thrust Rings Assemble

7B1-74 HM-290 MANUAL TRANSMISSION

6. Snap-ring (43) and speedo gear thrust (2WD) washer (44) (Figure 83).



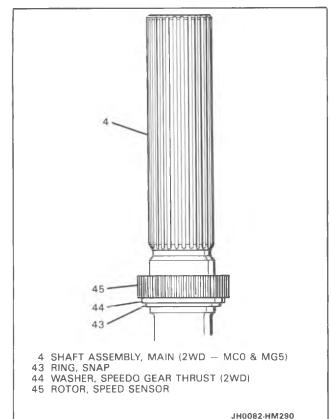

- 7. Speed sensor rotor (45) HEATED.
 - If necessary seat with J 6133-01.
- 8. Shim (212) onto output shaft bearing assembly (33).
 - Retain with petroleum jelly.

Important (Figure 84)

The 2WD rear housing output shaft bearing assembly bore MUST be heated for three to five minutes with J 25070 before assembly.

- 9. J 36515-10 through bolt (304) and (305) holes in the rear housing (Figure 85).
 - Screw into the output shaft bearing retainer (302).
 - Notch in retainer towards oil delivery tube assembly (307).
- 10. Bearing (203).
 - Install in bearing race (202) of the housing.
 - SMALLER DIAMETER OF BEARING CAGE INTO BEARING RACE.
 - Retain with petroleum jelly.



- PRESS EACH ROLLER TOWARDS THE RACE TO SECURE THEM FOR EASIER ASSEMBLY.
- 11. Rear housing assembly (300).

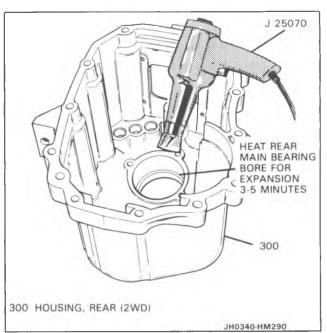


Figure 84 Heating 2WD Rear Main Bore

- Make sure the reverse idler shaft is lined up with the hole in the case.
- Rotate back and forth while pulling down.
- Pull up on J 36515-10 while installing rear housing.

Important

Bring housing straight down. If resistance is felt at about 1/4 inch then the rollers are (203) cocked. Repeat above procedures to install. DO NOT FORCE HOUSING DOWN.

- Remove J 36515-10.
- 12. Bolts (304) and (305) (Figure 86).
 - Apply pipe sealant with Teflon(TM) GM P/N 1052080 or equivalent to the bolt holes of the rear housing.
 - Apply threadlocker GM P/N 12345382 to bolt threads.

হ্ Tighten

• Bolts (304) and (305) to 22 N·m (17 Lb. Ft.).

4WD MODELS ONLY

🛛 🛛 Important


Steps 1 through 9 are for 4WD models only.

→← Install or Connect (Figure 87)

- Tools Required:
 - J 36502 4WD Oil Seal Installer


J 36516 Output Shaft Spanner Nut Wrench

- 1. Bearing (203).
 - Install in bearing race (202) of the housing.
 - SMALLER DIAMETER OF BEARING CAGE INTO BEARING RACE.

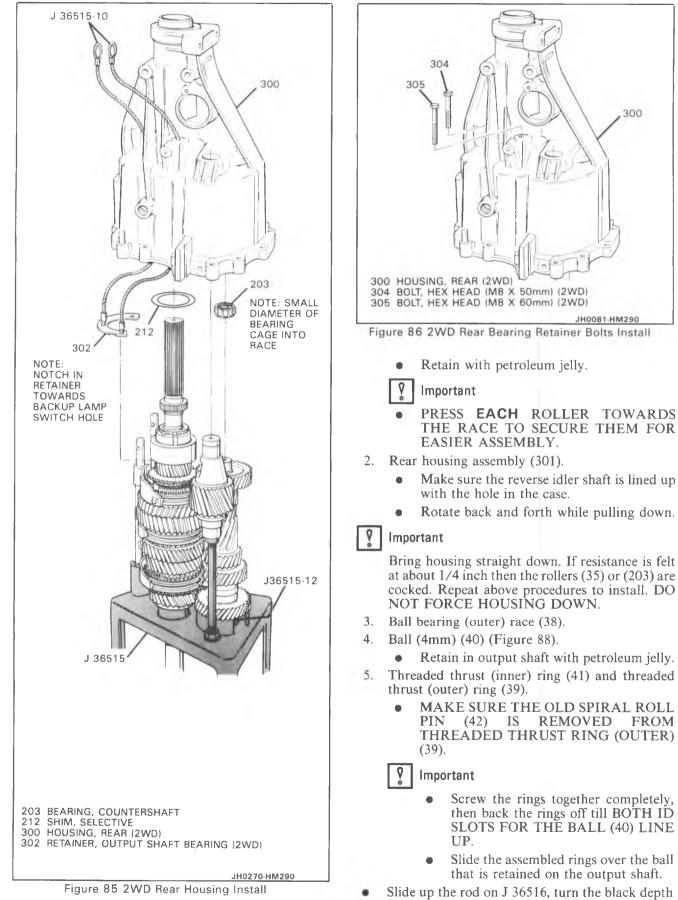

Slide up the rod on J 36516, turn the black depth locating tang over, slide the rod through (so the roll pin will be installed to the correct depth).

7B1-76 HM-290 MANUAL TRANSMISSION

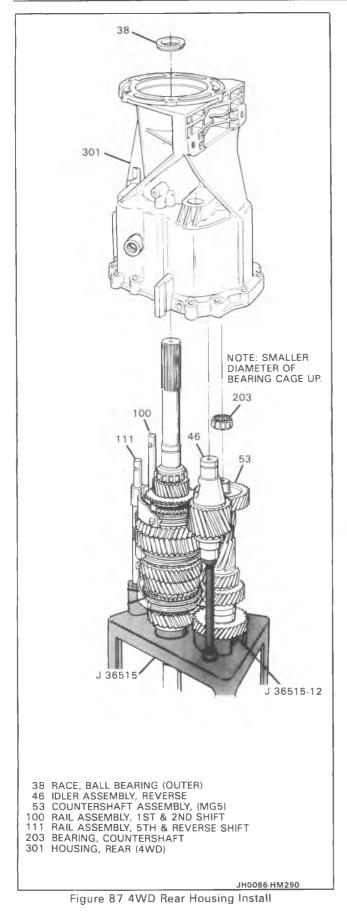

- MAKE CLEARANCE FOR THE SNAP RING BY FIRST screwing the rings together completely by turning J 36516 counterclockwise.
- 6. NEW snap ring (43) (2.00mm thickness).
- Turning J 36516 clockwise, torque to 15 N·m (12 Lb. Ft.) then ADVANCE to the next spiral roll pin notch.
- 8. NEW spiral roll pin (42).
 - Install roll pin in the bottom of J 36516, retain with petroleum jelly.
 - Put J 36516 on with the roll pin hole and roll pin lined up.
 - Drive roll pin into thrust ring (outer).
 - Remove tool.
 - Install seal protector onto output shaft.
- 9. 4WD output shaft oil seal (320) using J 36502 (Figure 89).
 - Fill between the seal lips with chassis grease.
 - Remove seal protector.

2WD AND 4WD

Tools Required:

- J 36515 Assembly Pallet
- J 36515-12 Countershaft Adapter for 1988 and 1989 Models
- J 3289-20 Base Holding Fixture
- J 8763-02 Holding Fixture C-Clamp
- J 8763-21 Balance Bracket for C-Clamp
- J 36824 Transmission Adapters
- Lay the unit down on the workbench and remove J 36515.

Install or Connect (Figure 90)

- Idler shaft support (310), bolt (311).
 - Line up the bolt threads in the idler shaft support with bolt hole.


NOTICE: Machined surface on the face of casting MUST be installed down into case because the bolt hole is slightly off center. Incorrect installation will cause incorrect reverse gear tooth pattern under load.


- Apply pipe sealant with Teflon([™]) GM P/N 1052080 or equivalent to the bolt hole.
- Apply threadlocker GM P/N 12345382 or equivalent to the bolt threads.
- Hold reverse idler shaft against idler support while torqueing.

र्री Tighten

3.

- Bolt (311) to 22 N·m (17 Lb. Ft.).
- J 8763 21 on J 8763-02.
- 2. J 36824 onto the transmission case.
 - J 8763-02 onto J 36824.
 - Two interlock balls (323) (Figure 91).
 - All forks MUST be in neutral position.
 - Coat balls with petroleum jelly.

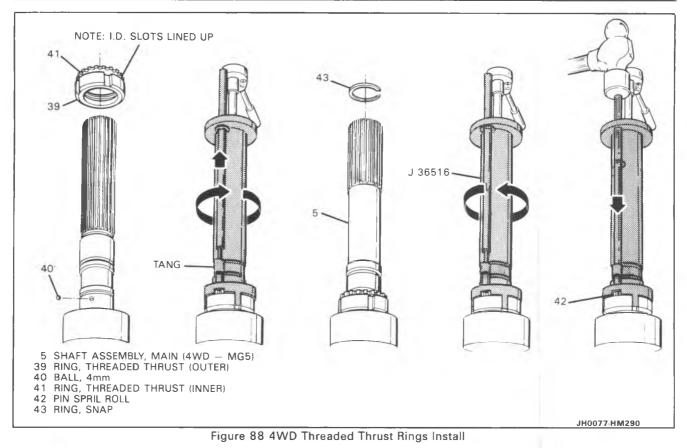

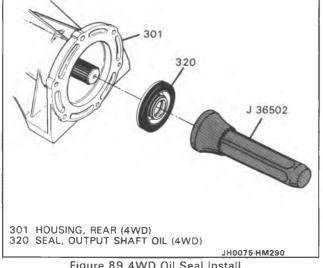



- Using a magnetic screwdriver or equivalent, insert one interlock ball (one at a time) through the plug hole (326).
- With a small blade screwdriver, push one ball to the 1-2 shift rail side and the other to the 3-4 shift rail side.
- 4. 3-4 shift rail (109), with interlock pin (110).
 - Retain pin with petroleum jelly.
 - Detent slots in 3-4 shift rail UP.
 - Install through 3-4 shift fork and into the rear housing shift rail bearing.

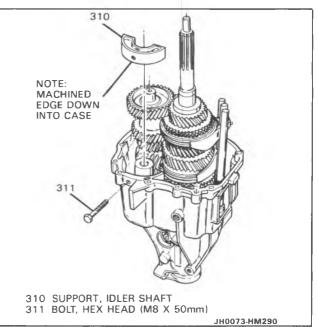


Figure 90 Reverse Idler Support Install

Q Important

- The 1-2 AND 5th-REVERSE SHIFT RAIL MUST BE IN THE NEUTRAL POSITION or the interlock system will not allow the 3-4 rail to engage.
- 5. Roll pin (107) (36mm) (Figure 92).
 - Install to a depth where a MAXIMUM of 12.5mm of the roll pin (measured from the

7B1-78 HM-290 MANUAL TRANSMISSION

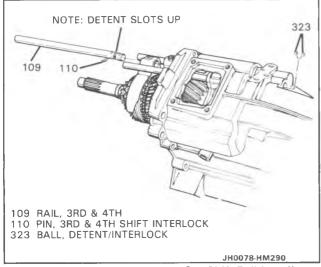


Figure 91 Interlock Balls and 3-4 Shift Rail Install

edge of the 3-4 rail to the top of the roll pin) is left remaining.

NOTICE: IF THE ROLL PIN IS NOT AT PROPER DEPTH IT MAY RUB ON FRONT HOUSING AND CAUSE 3RD OR 4TH GEAR HOP-OUT.

- Test interlock system to make sure interlock balls are in place by trying to move two shift rails.
- 6. NEW plug (326).
 - Apply gasket maker GM P/N 1052943 or equivalent to the edge of the plug.
 - Install flush.

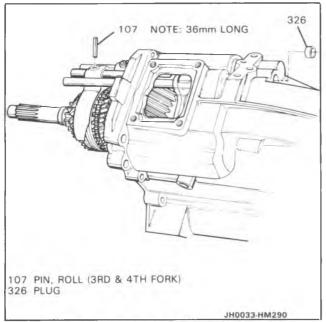


Figure 92 3-4 Fork Roll Pin and Plug Install

7. Shift shaft (116), finger (121) and shift shaft socket assembly (123) (Figure 93).

- Detent slots towards idler support side of transmission.
- Finger extension must be on the underside of the 5-reverse shift rail.
- 8. Roll pin (120) (28mm) and roll pin (122) (33mm).

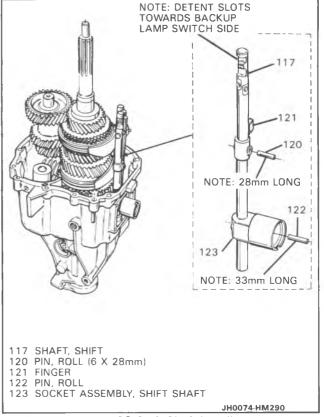


Figure 93 Shift Shaft Install


- 9. Three detent balls (323) and three springs (324) (Figure 93).
- 10. Detent spring cover (325) and two bolts (236).
 - Apply gasket maker GM P/N 1052943 or equivalent to the outside of the bolt hole pattern of the detent spring cover.

[) Tighten

- Bolts (236) to 8.5 N·m (7 Lb. Ft.).
- 11. Four rollers (118) (Figure 95).
 - Retain with petroleum jelly.
- 12. Countershaft bearing (203) (Figure 96).
 - Install in bearing race (202) of the front housing.

Important 9

- SMALLER DIAMETER OF BEARING CAGE INTO BEARING RACE.
- Retain with petroleum jelly and press on each roller towards the outside of the bearing race to lock it in place.
- Apply petroleum jelly to bearing race on input shaft.
- 13. Roller bearing (218) and ball bearing (outer) race (217).

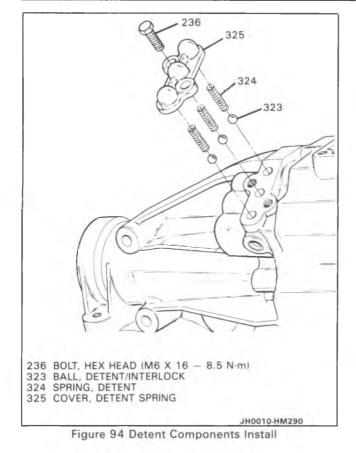

117 SHAFT, SHIFT 118 ROLLER, SHIFT SHAFT JH0071.HM290

Figure 95 Rollers Install

Important

• INSTALL SMALLER DIAMETER OF BEARING CAGE FACING input gear splines THEN PRESS ON EACH ROLLER TO LOCK IT TO THE BEARING RACE.

- Apply gasket maker GM P/N 1052943 or equivalent to the outside of the bolt hole pattern of the rear housing.
- 14. Front housing (200).

? Important

- Bring housing straight down. If resistance is felt at about 1/4 inch then the roller(s) (218) or (203) are cocked, repeat steps 12, 13 and 14. DO NOT FORCE DOWN THE HOUSING.
- 15. Two dowels (321).
- 16. Bolts (312).
 - Do not tighten.
 - Tip vertically.
- Ball bearing (outer) race (215), input shaft spacer (211) and NEW selective snap ring (210) (Figure 97).
 - Install the thickest snap ring into the groove that will fit.
 - It may be necessary to pull out on the input shaft to install the selective snap ring.
 - Apply gasket maker GM P/N 1052943 or equivalent to the inside cover bolt hole pattern.

? Important

DO NOT APPLY too much gasket maker around the oil drain back hole. This could clog the hole causing a low fluid flow through the bearing resulting in premature bearing failure.

- 18. Shim (212) into input shaft bearing retainer assembly (205).
 - Make sure input bearing retainer washer (208) is in place.
 - Retain with petroleum jelly.
- 19. Input shaft bearing retainer assembly (205) and six bolts (204).
 - Make sure oil drain back hole is lined up with the hole in the housing.

Tighten

Bolts (204) to 8.5 N·m (7 Lb. Ft.)


- 20. Shift shaft detent plunger (243), shift shaft detent spring (244) and plug (245) using brass drift (Figure 98).
 - Apply pipe sealant with Teflon(™) GM P/N 1052080 or equivalent to the plug.
- 21. NEW o-ring (315) onto electronic speedo sensor assembly (316).
 - 2WD models only.
 - Coat the o-ring with a thin film of transmission oil.
- 22. Electronic speed sensor assembly (316) and bolt (317).
 - 2WD models only.


री Tighten

• Bolt (317) to 9 N·m (7 Lb. Ft.).

23. Backup lamp switch assembly (313).

7B1-80 HM-290 MANUAL TRANSMISSION

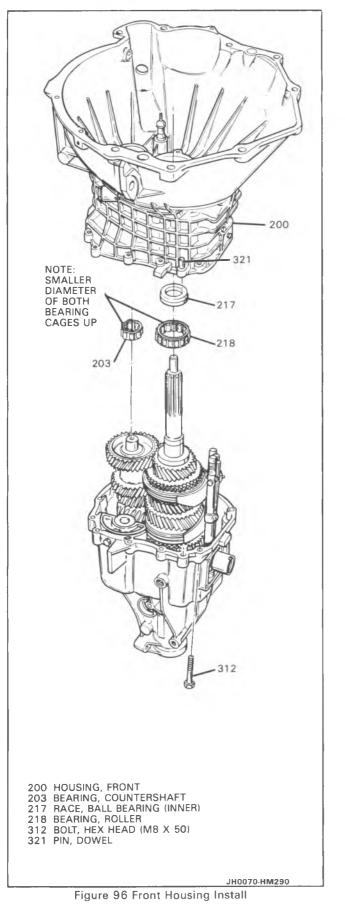

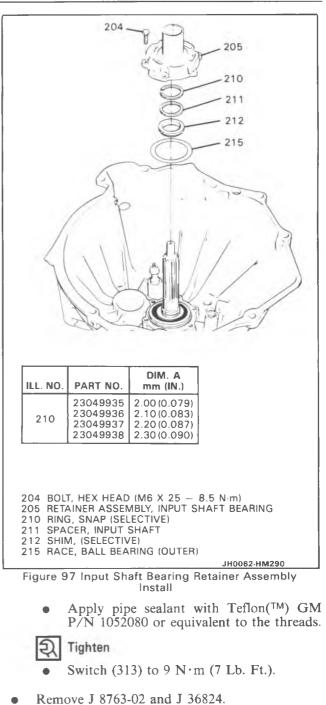

- 24. Bolts (312) (Figure 99).
 - र्री Tighten
 - Bolts (312) to 35 N·m (27 Lb. Ft.).

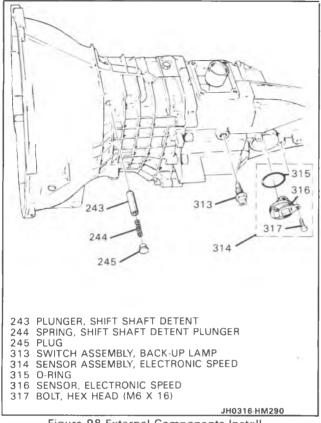


Figure 98 External Components Install

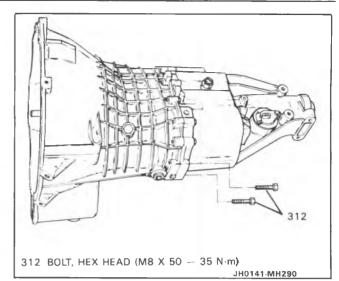


Figure 99 Bolts Install

7B1-82 HM-290 MANUAL TRANSMISSION

SPECIFICATIONS

FASTENER TORQUE

ILLUSTRATION NUMBERS


N ⋅ m – Ft.Lbs.

39 & 41 204	Ring, Threaded Thrust Assembly Retainer Assembly, Input Bearing		12
	Bolts	8.5	7
222	Plug, Oil Fill Plug, Oil Drain	60	46
225	Plug, Oil Drain	60	46
226	5th & Reverse Rail Deflection		
	Bolt	35	27
236	Seat, Bias Spring and Sleeve		
	Bolt	8.5	7
249	Spring, 5th & Reverse Detent		
	Hex Head Plug	60	46
304-306	Retainer, Output Shaft Bearing		
	Bolts	22	17
311	Support, Idler Shaft Bolt	22	17
312	Housing Front/Rear	35	27
317	Sensor, Electronic Speed Bolt		7
204	Housing Assembly, Shift Lever		7

LUBRICATION

Capacity RPO MCO (4-SPEED)	2.03L	2.13 qts.
RPO MG5 (5-SPEED)	1.98L	2.08 qts.
Type Recommended:		-

Manual Transmission Fluid 5W-30 GM P/N 1052931

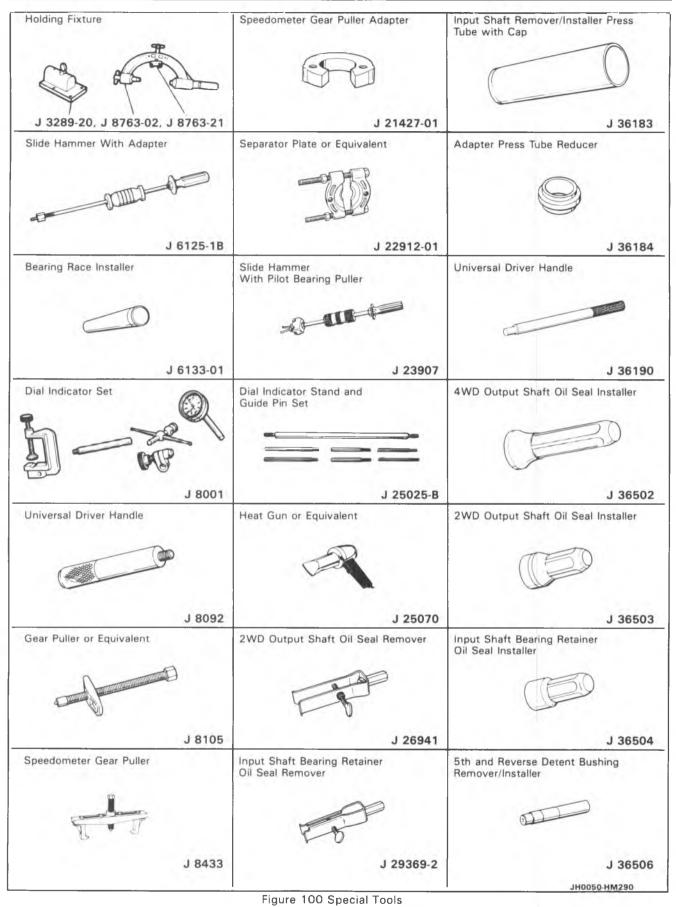

7B1-84 HM-290 MANUAL TRANSMISSION

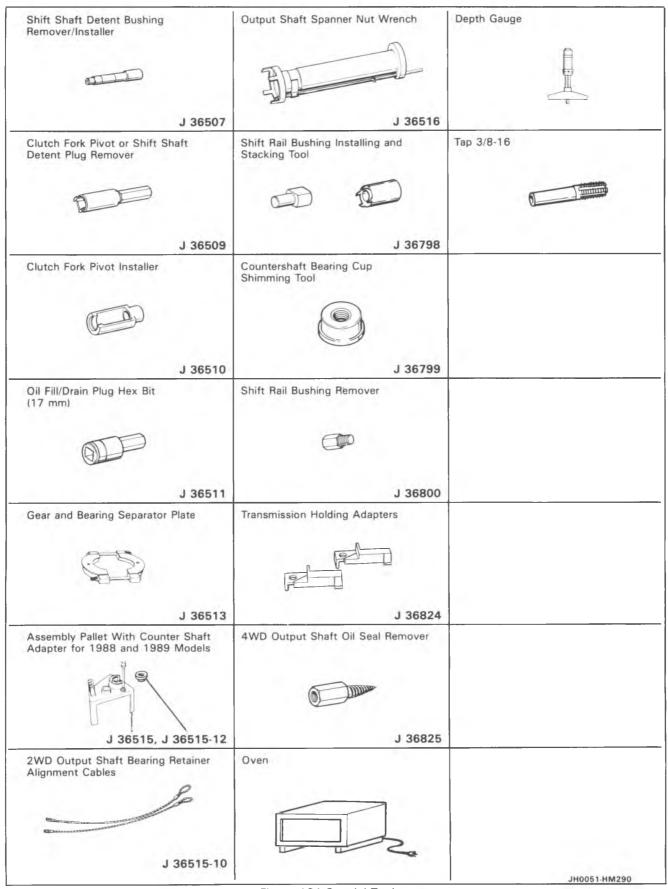


Figure 101 Special Tools

DACE

SECTION 7B2

NEW PROCESS TRANSMISSION

CONTENTS

SOBOLOT	FAGE
Description	7B2- 1
Disassembly of the Transmission	7B2- 3
Disassembly and Assembly of Sub-Assemblies	7B2- 6
Main Drive Gear	7B2- 6
Mainshaft	7 B2 - 6
Countergear	7B2- 8
Extension Housing	
Main Drive Gear Bearing Retainer	7B2- 9
Side Cover	7B2- 9
Transmission Assembly (Installation of Sub-Assemblies)	7B2-10
Specifications	7B2-11
Fastener Torque	7B2-11
Lubrication	
Special Tools	7B2-12

DESCRIPTION

The New Process 89 mm 4 speed transmission (RPO MY6) is an overdrive transmission and is fully synchronized in all speeds except reverse (figure 1).

- The main components are:
- 1. Main drive gear.

- An integral shaft is splined to engage with the clutch driven plate.
- The gear drives the countergear.
- A ball bearing supports the shaft in the case. 2. Countershaft.
 - The countergear is keyed to the countershaft for constant rotation with the main drive gear.
 - Roller bearings align the countergear on the shaft.
 - Thrust washers and a spacer limit the countershaft end play.
 - The countershaft is not a press fit, and a plug seals the case bore.
- 3. Mainshaft.
 - The drive gears rotate freely on the mainshaft and are in constant mesh with the counter-gear.
 - Key type synchronizers are splined to the mainshaft and engage with the drive gears to turn the mainshaft.
 - A ball bearing supports the mainshaft in the extension housing.

- Roller bearings support the mainshaft independently in the input shaft.
- The input shaft and mainshaft are engaged by a synchronizer for direct drive in top gear.
- 4. Reverse idler shaft.
 - An idler gear drives the mainshaft in reverse.
 - A bushing supports the gear on the shaft.
- 5. Side cover.
 - Shift forks mounted in the cover move the synchronizers to engage the gears.
 - The reverse shift lever and a detent ball and spring are mounted in the case.

Certain precautions should be followed when repairing the transmission. Unless proper care is taken, the components of the transmission may be damaged.

- Repair of the transmission should be done in a clean work area. The outside of the case should be clean to keep dirt out of the transmission. On transmissions with a standard gearshift lever, install the lever before cleaning the outside of the transmission.
- During the transmission repair, all the parts should be cleaned in cleaning solvent and then air dried. Wiping cloths or rags should not be used to dry the parts as lint may get on the parts and cause trouble later. All the parts, except those being worked on, should be kept covered with clean paper.

405 407 403 413 409 411 417 415 408 404 406 410 412 414 416 419 402 418 421 420 401 434 424 433 425 426 432 427 427 428 428 431 429 430 401. Drive Gear Bearing Retainer 413. 1st Speed Blocker Ring 425. Snap Ring, Bearing to Shaft 402. Seal 414. 1st Speed Gear 426. Woodruff Key 403. Snap Ring, Bearing to Shaft 415. Main Shaft Rear Bearing 427. Thrust Washer 404. Drive Gear Bearing 416. Extension Housing 428. Countershaft Roller Bearings 405. Main Drive Gear 417. Vent Plug 429. Countershaft 406. 3rd Speed Blocker Ring 418. Main Shaft 430. Counter Gear 407. 3rd and Overdrive Synchronizer 419. Retainer 431. Countershaft Spacer 408. Overdrive Blocker Ring 432. Expansion Plug 420. Speedometer Gear 409. Overdrive Gear 421. Rear Extension Seal 433. Snap Ring 422. Reverse Idler Gear 434. Pilot Bearings 410. 2nd Speed Gear 423. Reverse Idler Gear Bushing 411. 2nd Speed Blocker Ring B-08838 412. 1st and 2nd Synchronizer (Reverse Gear) 424. Reverse Idler Shaft

7B2-2 NEW PROCESS TRANSMISSION

DISASSEMBLY OF THE TRANSMISSION

Remove or Disconnect (Figure 2)

Tool Required:

- J 29793 Countershaft Alignment Tool
- Speedometer driven gear, switches and any external components.
- Shift the transmission into neutral.
- 1. Reverse shift lever (445).
- 2. Side cover (450) and the gasket.
 - Detent ball and the spring.
 - Shift forks (452 and 453). Note the positions they were removed from.
- 3. Extension housing screws (439), (figure 3).
 - Turn the housing upside down on the mainshaft.
 - Install one screw to hold the housing, as shown.

Important

- Do not damage the countershaft or bearings when removing the plug and the countershaft.
- 4. Countershaft plug (432).
 - Punch or drill a hole in the center of the plug.
 Reaching through the hole, drive the countershaft to the rear until the woodruff key can be removed.

- Drive the countershaft to the front until it pushes the plug out of the case.
- 5. Countershaft (429), using J 29793.
- Drive the countershaft out the rear of the case.Extension housing screw (439).
 - Turn the housing to the normal position.
- 7. Bearing retainer (401) and the gasket.
- 8. Main drive gear (405).
 - Drive the gear out the front of the case.
- 9. Extension housing (416) and the mainshaft.
 - Slide the 3rd and overdrive synchronizer sleeve (407) to the front (figure 1).
 - Slide the reverse idler gear (422) to the center of the idler shaft.
 - Drive the housing to the rear.
- 10. Snap ring (454) and the mainshaft (418) from the extension housing (figure 4).
- 11. Countergear (430) and the thrust washers.
- 12. Reverse idler shaft (424)
 - Place a ³/8-inch x 3¹/2-in screw and nut into a ³/8-inch drive, deep ⁷/16-inch socket.
 - Place the screw head against the case and the socket against the shaft.
 - Turn the nut against the socket, driving the shaft out of the bore (figure 5).
 - Remove the shaft, the gaer and the key.
- 13. Reverse shift shaft (443) and the seal.

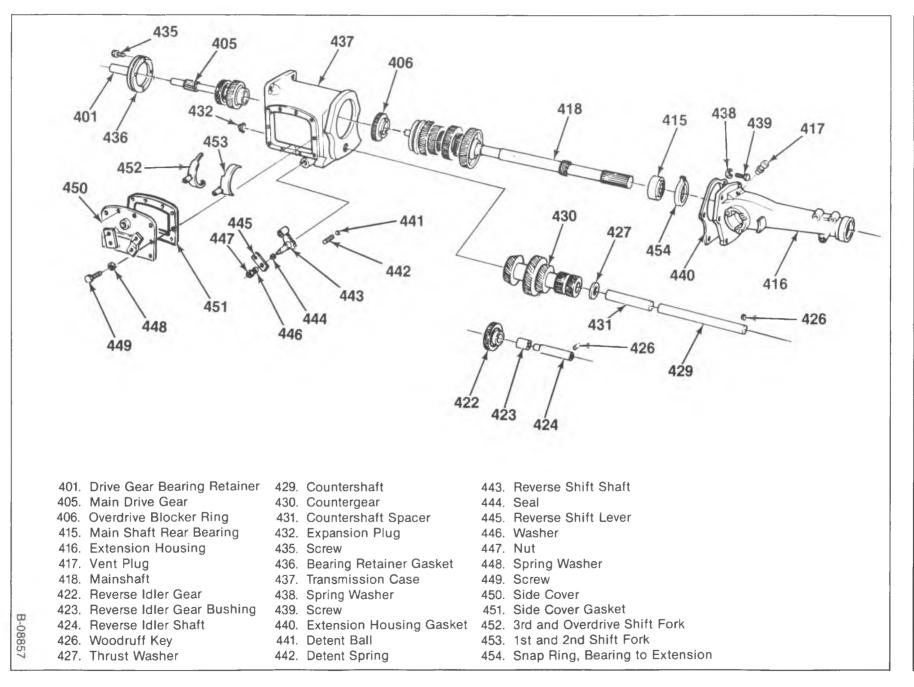


Figure 2—89 mm Transmission Components

NEW PROCESS TRANSMISSION

7B2-4

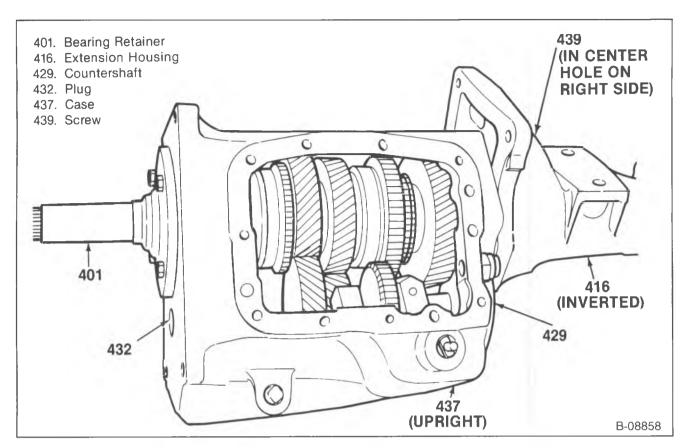


Figure 3—Turning the Extension Housing

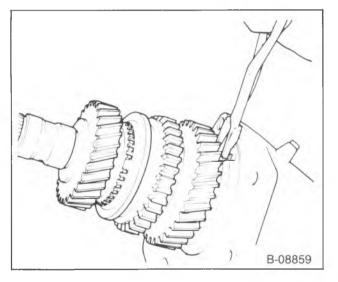


Figure 4—Removing the Mainshaft



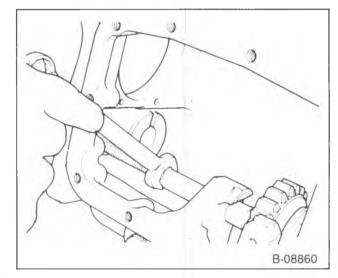


Figure 5—Removing the Reverse Idler Shaft

DISASSEMBLY AND ASSEMBLY OF SUB-ASSEMBLIES

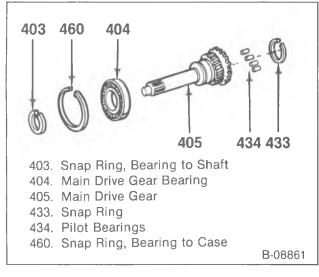

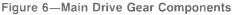

MAIN DRIVE GEAR

Disassemble (Figure 6)

- 1. Pilot bearings (434) and the snap ring.
- 2. Bearing to case snap ring (460).
- Bearing to shaft snap ring (403).
- Bearing (404).

Clean (Figure 6)

 All parts in a suitable solvent. (Do not spin the bearings dry).

Inspect (Figure 6)

- 1. Parts for damage and wear.
- 2. Oil the bearings and check for roughness.

Assemble (Figure 6)

1. Bearing (404).

- · Press the bearing against the shoulder on the shaft.
- 2. New bearing to shaft snap ring (403).
- 3. New bearing to case snap ring (460).
- 4. Pilot bearings (434).
 - · Use chassis grease to hold the bearings in place.

MAINSHAFT



Disassemble (Figure 7)

- 1. Slide the 3rd speed blocker ring (406) off.
- 2 Remove the snap ring and slide the 3rd and overdrive synchronizer (407) off.
 - Do not let the synchronizer come apart.
- 3. Remove the overdrive blocker ring and the overdrive gear (409)
- Speedometer drive gear (420).
 - Press the retaining clip down.

Tap the gear off.

ð Important

- Do not let the mainshaft fall to the floor.
- 5. Rear bearing (415) and the 1st speed gear (414).
 - · Remove the snap ring.
 - Support the gear in a press.
 - · Press the mainshaft through the bearing and the gear (figure 8).
- 6. Slide the 1st speed blocker ring off.
- 7. Remove the snap ring and the 1st and 2nd synchronizer (412).
 - Do not let the synchronizer come apart.
- 8. Remove the 2nd speed blocker ring and the 2nd speed gear (410).
- 9. Synchronizers (407 and 412) (figure 9).
 - · The synchronizer hub and sleeve are a select fit, do not mix the parts of the two synchronizers.
 - · Mark the hub and sleeve alignment for reassembly.
 - · Push the hub out of the sleeve while holding the springs and keys to avoid losing them.

Clean

All parts in a suitable solvent and air dry.

Important

Do not spin dry the bearings.

1 Inspect

- 1. Gears for cracks, chipped gear teeth, and other damage that could cause gear noise.
- 2. Thrust washers and bushings for damage and wear.
- 3. Related surfaces on the gears like thrust faecs and bearing surface diameters.
- 4. The reverse sliding gear for a sliding fit on the synchronizer hub without excess radial, or circular play. If the sliding gear is not free on the hub, inspect it for burrs on the ends of the internal splines. Remove any burrs by honing as required.
- 5. Synchronizer sleeves for a sliding fit on the synchronizer hubs, also, the hubs have to be a snug fit on the mainshaft splines.
- 6. Synchronizer springs and keys for looseness and damage
- 7. Brass synchronizer rings for excess wear and damage.
- All gear teeth for excess wear.
- 9 Bearings and bearing surface for nicks, burrs and wear.
- 10. Lubricate all roller bearings with light engine oil and check for rough rotation.



Assemble (Figures 7 and 10)

- Coat all parts with transmission oil before installing them onto the shaft.
- 1. Synchronizers (407 and 412) (figure 9).
 - · Place the keys into the hub

]T

-×-



NEW PROCESS TRANSMISSION 7B2-7

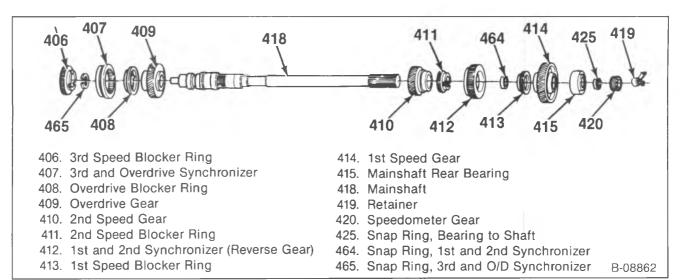


Figure 7—Mainshaft and Components

- Engage the springs in different slots in either side of the hub, so they support all the keys.
- Slide the sleeve onto the hub, aligning the marks made during disassembly.

Important

- The long side of the hub center (A) must be to the front.
- 2. 2nd speed gear (410) and the blocker ring.
 - Slide the gear on, with the cone to the rear.Slide the blocker ring onto the gear cone with the clutching teeth to the front.
- 3. Install the 1st and 2nd synchronizer (412) and a new snap ring.
 - The hub slots must be engaged with the blocker ring.
- 4. 1st speed gear (414) and the blocker ring.
 - Slide the blocker ring on with the clutching teeth to the rear, engaged in the synchronizer hub slots.

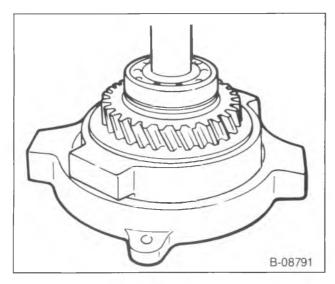


Figure 8—Pressing the Mainshaft through the Bearing

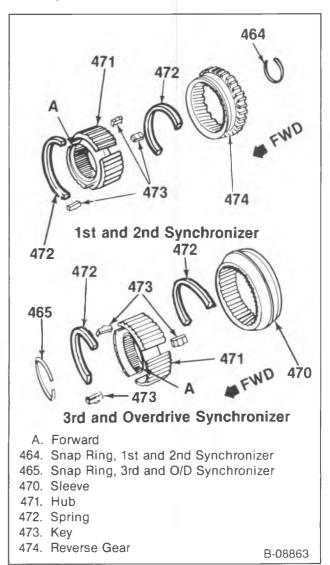


Figure 9—Synchronizer Components

7B2-8 NEW PROCESS TRANSMISSION

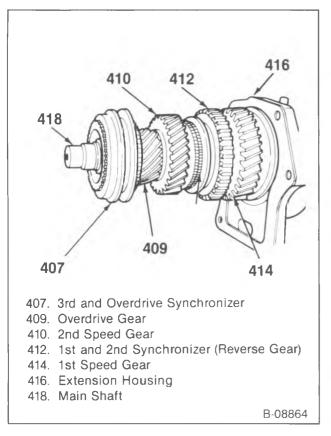


Figure 10—Mainshaft Assembled

- Install the gear with the cone into the blocker ring.
- 5. Press the rear bearing (415) on and install a new snap ring.

? Important

- Use the correct snap ring, it is a select fit to limit the mainshaft end play.
- 6. Install the speedometer drive gear (420) and the retaining clip.
- 7. Overdrive gear (409) and the blocker ring.
 - Slide the gear on with the cone to the front.
 - Slide the blocker ring onto the gear cone with the clutching teeth to the rear.
- 8. Install the 3rd and overdrive synchronizer (407) and a new snap ring.
 - The shift fork slot must be to the rear.
 - The hub slots must be engaged with the blocker ring.
- 9. Install the 3rd speed blocker ring with the clutching teeth to the front.
 - The ring must be engaged with the synchronizer hub slots.
 - Hold the ring in place with grease.

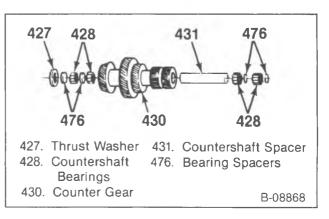


Figure 11—Countergear and Components

COUNTERGEAR



Tool Required:

- J 29793 Countershaft Alignment Tool
- 1. Remove tool J 29793.
- 2. Remove the bearings (428) and the spacers.
- 3. Remove the countershaft spacer (431).

Clean

All parts in suitable solvent and air dry.

Inspect

- Countergear for nicks, burrs, and broken teeth.
- Bearings for wear and rough surfaces.
- Spacers for wear and grooves.
- Countershaft for wear, nicks and burrs.



• Countershaft to case bore clearance. Clearance must be no more than 0.127 mm (0.005-in.).

Assemble (Figure 11)

Tool Required:

- J 29793 Countershaft Alignment Tool
- Coat the inside of the countergear with grease.
- 1. Install the countershaft spacer (431) using J 29793.
- 2. Install the bearings (428) and the spacers.
 - Be sure the bearings and the spacers are centered.
- 3. Install a thrust washer (427) to the front of the countergear with the tab inside the countergear.

EXTENSION HOUSING

Remove or Disconnect (Figure 12)

Tools Required:

J 23062-14 Extension Housing Bushing Remover

J 8092 Driver Handle

- 1. Seal (421).
- 2. Gasket material from flange of the extension (416).
- 3. Bushing (478) if it is worn or damaged, using J 23062-14.

NEW PROCESS TRANSMISSION 7B2-9

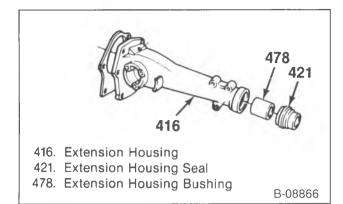


Figure 12—Extension Housing and Components

Inspect

- 1. Extension for scoring, wear or cracks, especially at the flange.
- 2. Snap ring groove for wear and damage.

++ Install or Connect (Figure 12)

Tool Required:

J 21426 Rear Extension Seal Installer

- 1. New bushing (478) if needed, using a suitable tool.
 - · Coat the bushing with transmission oil.
 - Drive the bushing into the extension.
- 2. Locking compound on the ouside of a new seal (421).
- 3. New seal (421) using J 21426 (figure 13).
 - · Fill between the seal lips with chassis grease.

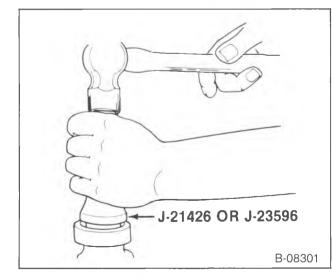


Figure 13—Installing the Rear Extension Bushing and Seal

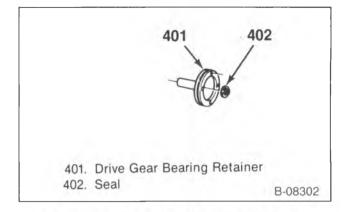


Figure 14—Bearing Retainer and the Seal

MAIN DRIVE GEAR BEARING RETAINER

++	Remove or Disconnect (Figure 14)		
	Seal (402). Gasket material from flange of retainer (401).		
10	Inspect		
	Retainer nose for scoring, wear or cracks, especially at the flange.		
	Snap ring groove for damage caused by drive gear bearing movement. Replace the retainer if it is worn or damaged.		
++	Install or Connect (Figure 14)		
	Tool Required: J 23096 Drive Gear Seal Installer New seal (402), using J 23096. Coat the inside of the seal with transmission oil.		
	SIDE COVER		
++++	Disassemble (Figure 15)		
	Remove the shift levers (484 and 487). Shift shafts (480 and 481).		
_	 Remove any burrs from the shafts to avoid scoring the cover bores. Pull the shafts out of the cover. Tag the shafts so they can be installed in the positions they were removed from. 		
З.	Remove the retaining clip, the detent cams (488)		

- 3. Remove the retaining clip, the detent carns (488) and the spring.
- 4. Pry the seals (482) and the retainers (483) from the cover.



Clean (Figure 15)

All parts using cleaning solvent. Air dry.

Inspect (Figure 15)

- All parts for wear and damage.
- · Gasket surface for nicks and scratches.
- · Shift shafts and the forks for burrs and wear.
- Seal bores for cracks and damage.

7B2-10 NEW PROCESS TRANSMISSION

- Assemble (Figure 15)

- 1. Install the detent cams (488), a new retainer clip and the spring.
- 2. Shift shafts (480 and 481).
 - Coat the cover bores with grease.
 - Install the shafts in the positions they were removed from.
- 3. Install new seals and the retainers (483).
- 4. Install the shift levers (484 and 487).
 - The 3rd and overdrive lever must point down.

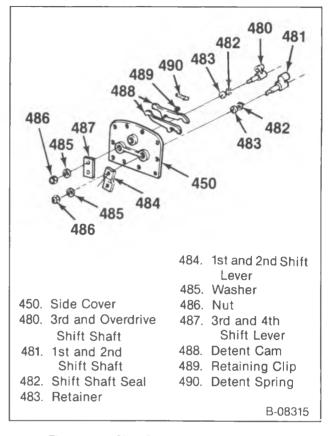


Figure 15—Side Cover and Components

TRANSMISSION ASSEMBLY (INSTALLATION OF SUB-ASSEMBLIES)

Use new seals, gaskets and thread sealer on all bolt threads when assembling the transmission. Tighten all bolts to specified torque.

Lubricate all assemblies as they are installed in the transmission case using transmission oil.

Install or Connect (Figure 2)

Tool Required:

J 29793 Countershaft Alignment Tool

- 1. Countergear (430) and the thrust washers.
 - Lower the countergear into place with the front thrust washer tabs inthe case slots.
 - Align the rear thrust washer tabs with the case slots and slide it in.
- 2. Mainshaft (418) and a new snap ring (454) into the extension housing (416).
- 3. Extension housing (416) and a new gasket onto the case.
 - Turn the extension housing upside down and install one screw to hold it in place (figure 3).
- 4. Main drive gear (405).
 - Tap the gear in until the bearing snap ring bottoms against the case.

Important

- The main drive gear must fit smoothly into place, if it does not, check to see that all components of the mainshaft are in the proper positions.
- 5. Countershaft (429) and the woodruff key.
 - Lift the countergear into mesh with the mainshaft. Be sure the thrust washers are in place.
 - Push the countershaft half way into the countergear and install the woodruff key.
 - Push the countershaft into place and remove J 29793.
- 6. Reverse shift shaft (443) and a new seal.
- 7. Reverse idler shaft (424) and the reverse gear.
 - Push the shaft in part way.
 - Put the gear onto the shaft with the fork slot to the rear and engage the slot with the reverse shift shaft fork (figure 16).
 - Install the woodruff key and drive the shaft flush with the case.
- 8. Extension housing screws.
 - Do not damage the gasket when turning the housing into place.
- 9. Bearing retainer (401) and a new gasket.
- 10. New countershaft plug (432).

NEW PROCESS TRANSMISSION 7B2-11

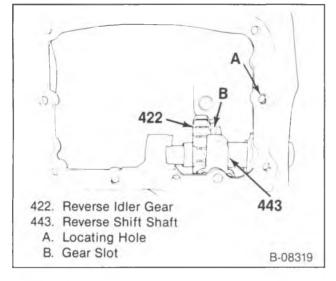


Figure 16—Reverse Idler Gear and Case

- Coat the outside of the plug with sealing compound.
- 11. 1st and 2nd shift fork (453) into the synchronizer slot.
- 12. 3rd and overdrive shift fork (452) into the side cover.

- 13. New side cover gsket (451) and the detent ball and spring.
- 14. Side cover (450).
 - Move the synchronizer sleeves and the reverse idler gear to the neutral positions.
 - Move the shift levers to neutral (straight up).
 - Hold the detent cam against the 1st and 2nd shift lever, then lift the cam over the fork to install the cover.

? Important

- Be sure the detent ball and the spring are in position.
- 15. Side cover screws (449) and new spring washers.
 - Install the locating (long shoulder) screw finger tight in the locating hole (A), (figure 16).
 - · Install the remaining screws finger tight.
 - Tighten the screws evenly.
- 16. Reverse shift lever (445).
 - Shift the transmission through all gears to check the operation.
 - Speedometer driven gear, switches and any external components that were removed.

SPECIFICATIONS

FASTENER TORQUE


	N∙m	Ft. Lbs.
Shift Lever Nut	25	18
Extension Housing Screw	68	50
Drive Gear Bearing Retainer	41	30
Side Cover Screw	20	15

LUBRICATION

Capacity	4.0 L	4.2 qts.
Type Recommended	Dexron II Automatic	Transmission Fluid

7B2-12 NEW PROCESS TRANSMISSION

SPECIAL TOOLS

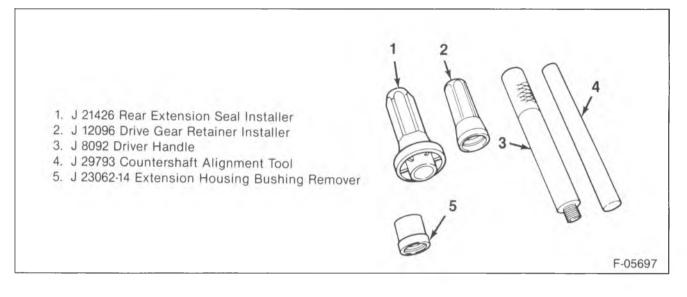

PAGE

SECTION 7B3

BORG WARNER TRANSMISSIONS

CONTENTS

Description	7B3- 1
Disassembly of the 77 mm Transmission	7B3- 2
Disassembly and Assembly of Sub-Assemblies	7B3- 7
Main Drive Gear	7B3- 7
Mainshaft	7B3- 7
Extension Housing	7B3-10
Main Drive Gear Bearing Retainer	7B3-10
Shift Cover	7B3-11
Transmission Assembly (Installation of Sub-Assemblies)	7B3-12
Specifications	7B3-14
Fastener Torque	7B3-14
Lubrication	7B3-14
Special Tools	7B3-15

DESCRIPTION

The 77 mm 4 speed and 5 speed are constant mesh transmissions, synchronized in all speeds except reverse. The main components are:

1. Main drive gear.

SUBJECT

- An integral shaft is splined to engage with the clutch driven plate.
- · The gear drives the countergear.
- A tapered bearing supports the shaft in the case.
- 2. Countergear.
 - The countergear is one unit for constant rotation with the main drive gear.
 - · Bearings support the countergear in the case.
 - Thrust washers limit the play of the countergear.
 - An extra gear is mounted to the countergear for 5th speed.
- 3. Mainshaft.
 - The drive gears rotate freely on the mainshaft and are in constant mesh with the countergear.
 - Key type synchronizers engage the gears.
 - The 1st and 2nd synchronizer hub is machined in place.
 - A tapered bearing supports the mainshaft in the rear of the case.
 - Roller bearings support the mainshaft independently in the main drive gear.

- The main drive gear and mainshaft are engaged by a synchronizer for direct drive in top gear.
- · Thrust washers limit the play of the mainshaft.
- 4. Reverse idler gear.
 - The idler gear drives the mainshaft in reverse.
 - The idler gear is supported on it's own shaft.
- 5. Shift lever.
 - The shift lever is mounted on the extension housing and holds the shift lever.
 - The shift lever moves the shafts which are mounted in the transmission top cover.
 - Shift forks mounted on shafts move the synchronizers to engage the gears.
 - A pin-type interlock blocks the other shafts when one is moved.

Certain precautions should be followed when repairing the transmission. Unless proper care is taken, the components may be damaged.

- Repair of a transmission should be done in a clean work area. The outside of the case should be clean to keep dirt out of the transmission. On transmissions with a standard gearshift lever, install the lever before cleaning the outside of the transmission.
- During transmission repair. all the parts should be cleaned in cleaning solvent and then air dried. Wiping cloths or rags should not be used to dry the parts as lint may get on the parts and cause trouble later. All the parts, except those being worked on, should be kept covered with clean paper.

DISASSEMBLY OF THE 77 mm TRANSMISSION

600.	Screw	626.	Pin Roller
601.	Shift Cover	627.	Lock Spring
602.	Seal	628.	Reverse Shift Fork
603.	Transmission Case	629.	5th Speed and Reverse Shift Shaft
604.	Mainshaft	*630.	5th Speed Synchronizer
605.	Bearing Race	*631.	5th Speed Blocker Ring
*606.	5th Speed Gear Snap Ring	*632.	5th Speed Drive Gear
607.	Retaining Clip	*633.	Snap Ring
608.	Ball	*634.	Countergear Spacer, Rear
609.	Speedometer Drive Gear	635.	Countergear Ring Bearing
*610.	Snap Ring	636.	Countergear Spacer, Front
*611.	Front Thrust Race	637.	Reverse Idler Shaft
612.	Countergear Thrust Bearing	638.	Reverse Idler Gear
613.	Extension Housing	639.	Pin
614.	Screw	640.	Countergear
*615.	Funnel	641.	Countergear Thrust Washer
616.	Snap Ring	642.	Countergear Front Bearing
*618.	5th Speed Shift Fork	643.	Main Drive Gear
*619.	Pin	644.	Main Drive Gear Bearing Race
620.	Pin Roller	645.	Bearing Shim Pack
621.	Shaft Pin	646.	Main Drive Gear Bearing Retainer
622.	Fork Pin	647.	Screw
623.	5th Speed and Reverse Shift Lever	648.	Magnet
624.	Pivot Bolt	649.	Nut to Consider the State
625.	Retaining Ring		*5 Speed Only
			B-08501

Figure 1-77 mm Transmission and Components

Remove or Disconnect (Figures 1, 2 and 3)

- Speedometer driven gear, switches and any external components.
- 1. Control lever (653).
- Boot and the dust cover.
- 2. Pin (659) from the offset lever (655), (figure 4).
- 3. Extension housing (613) and the offset lever.

? Important

- The offset lever is engaged into the extension housing and cannot be removed when the extension housing is mounted to the transmission.
- Detent ball and the spring from the offset lever, (figure 5).
- 5. Countergear rear thrust bearing (612).
 - Plastic funnel (5 speed only) (figure 6).
 - Front thrust race (5 speed only).
- 6. Shift cover (601).

Important

- Two of the cover mounting screws are alignment screws. Note the positions they were removed from for installation.
- 7. 5th speed drive gear (632) (5 speed only).
 - Support the 5th speed shift fork (618) and drive the pin out, (figure 7).

- Snap ring and the 5th gear synchronizer (630) and shift fork together (figure 8).
- 5th speed blocker ring (631) and the 5th speed gear (632).
- 8. Speedometer drive gear (609) and the clip.
- 9. 5th speed driven gear snap ring (606) (5 speed only).
- 10. Main drive gear bearing retainer (646).
 - Mark the retainer and the case for alignment (figure 9).
- 11. Bearing race (644) and the shim pack (figure 10).
- 12. Main drive gear (643).
 - Turn the gear so the cut-out is toward the countergear (figure 11).
- 13. Retaining ring and the reverse shift shaft lever pivot bolt (624) (figure 12).
- 14. Mainshaft rear bearing race (605).
- 15. Mainshaft (604).
- 16. 5th speed and reverse shift shaft (629) (figure 13).
 - Unhook the lock spring. Turn the shaft to disengage it from the reverse lever.
 - Remove the shaft from the rear of the transmission case.
- 17. 5th speed and reverse shift lever (623).
- 18. Reverse idler gear (638).
 - Drive the pin through the front of the idler shaft (637) (figure 14).
 - · Idler shaft and the seal.

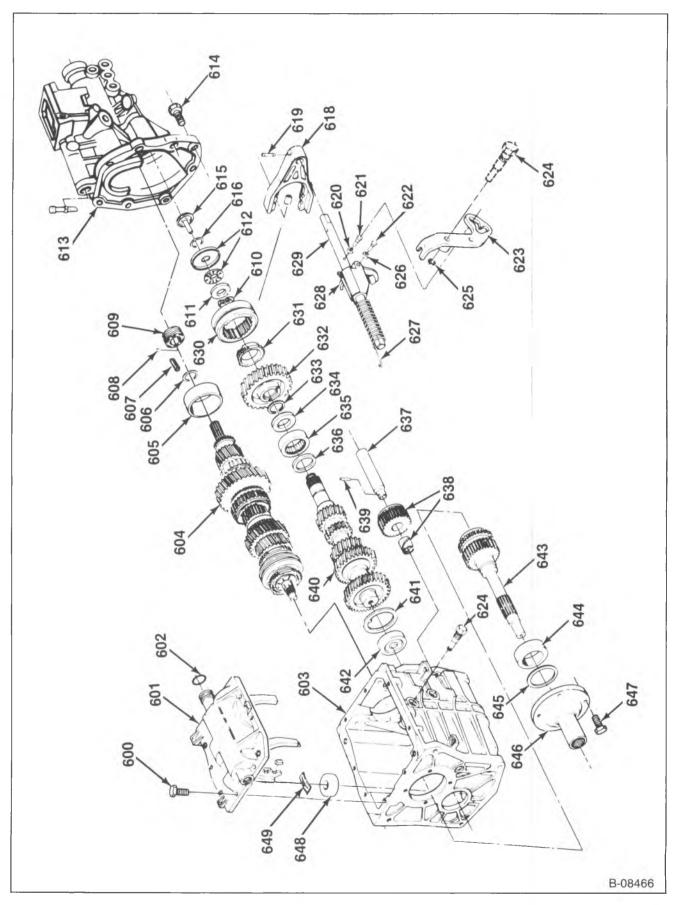


Figure 2-77 mm Transmission and Components

7B3-4 BORG WARNER TRANSMISSIONS

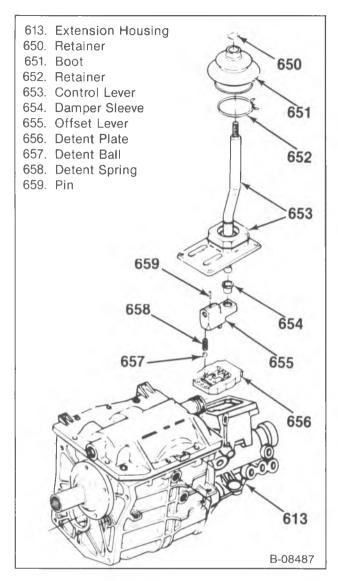
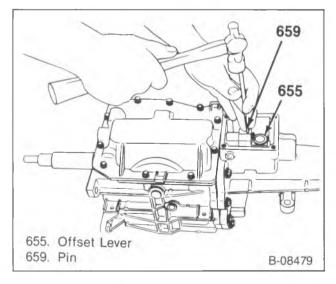


Figure 3—Shift Lever Components





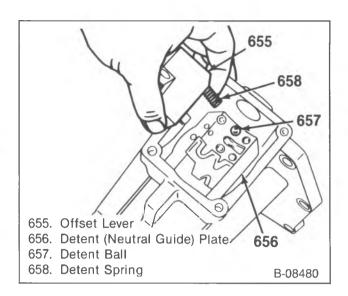


Figure 5—Detent Ball and the Spring

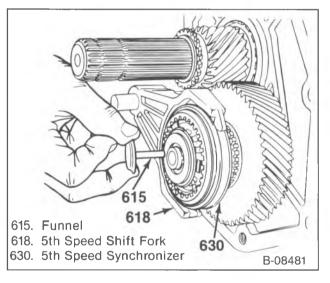


Figure 6—Plastic Funnel

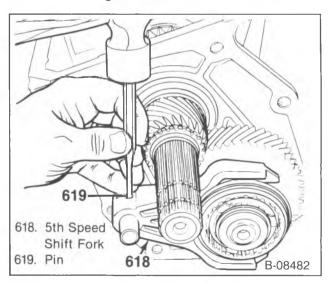


Figure 7—Removing the 5th Speed Shift Fork Pin

BORG WARNER TRANSMISSIONS 7B3-5

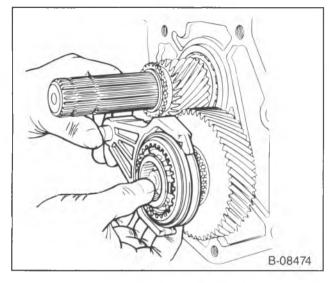


Figure 8—Removing the 5th Speed Shift Fork and the Synchronizer

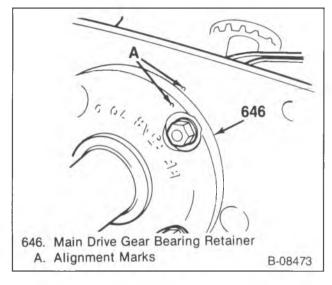


Figure 9—Bearing Cap Alignment Marks

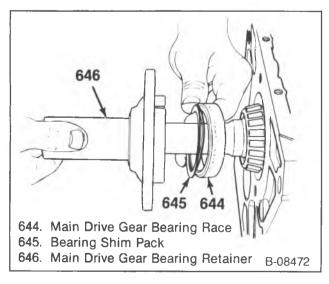


Figure 10—Main Drive Gear Shim Pack

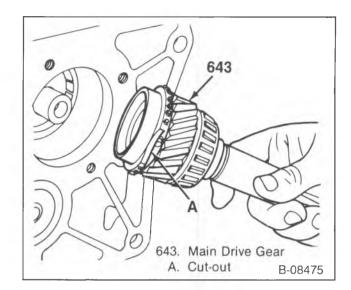


Figure 11-Main Drive Gear Cut Out

- Idler gear.
- 19. Snap ring and the countergear rear bearing spacer (634) (5 speed only).
- 20. Countergear rear bearing (635).
 - Drive the countergear (640) to the rear to remove the bearing (figure 15).

? Important

- Note the direction the bearing faces.
- 21. Countergear (640) and the rear bearing spacer (636).
- 22. Countergear thrust washer (641).
- 23. Countergear front bearing (642).
 - · Press the bearing from the case.

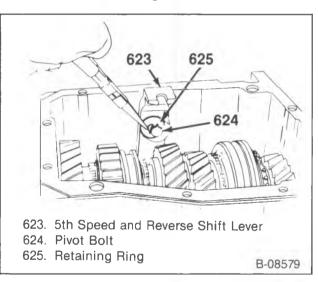


Figure 12—5th Speed and Reverse Shift Lever Retaining Ring

7B3-6 BORG WARNER TRANSMISSIONS

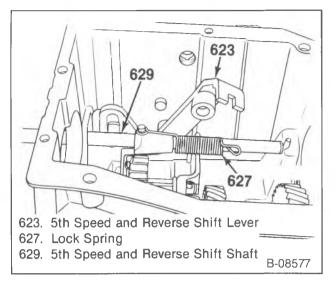


Figure 13—5th Speed and Reverse Shift Shaft

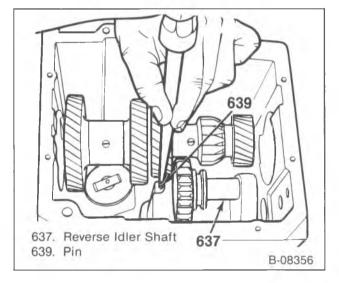


Figure 14—Removing the Reverse Idler Shaft Pin

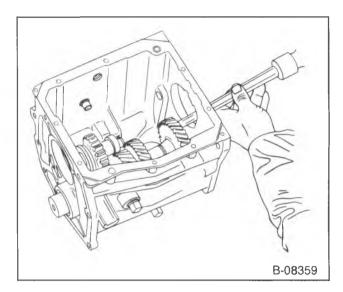


Figure 15—Removing the Countergear Rear Bearing

DISASSEMBLY AND ASSEMBLY OF SUB-ASSEMBLIES

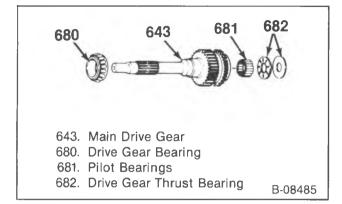


Figure 16—Main Drive Gear Bearings

MAIN DRIVE GEAR

-*-

Disassemble (Figure 16)

Tool Required:

J 22912-01 Bearing and Gear Puller

- 1. Thrust bearing and the race (682).
- 2. Pilot bearings (681).
- 3. Bearing (680) using J 22912-01 (figure 17).

Clean (Figure 16)

 All parts in a suitable solvent. (Do not spin the bearings dry.)

Inspect (Figure 16)

- Parts for damage and wear.
- 2. Oil the bearings and check for roughness.

Assemble (Figure 16)

Tool Required:

- J 22912-01 Bearing and Gear Puller
- 1. Bearing (680), using J 22912-01 (figure 17).
- 2. Pilot bearings.

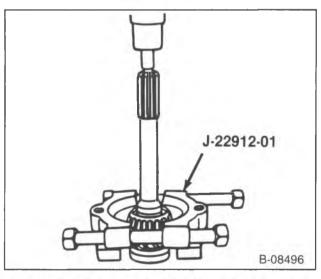


Figure 17—Removing the Main Drive Gear Bearing

- Use chassis grease to hold the bearings in place.
- 3. Thrust bearing and the race (682).

MAINSHAFT

Disassemble (Figure 18)

Tool Required:

J 22912-01 Bearing and Gear Puller

- 1. 4th speed blocker ring (661).
- 2. 3rd and 4th synchronizer and the 3rd speed gear (664).
 - Press the mainshaft through the synchronizer, the blocker ring and the gear using J 22912-01 (figure 19).
 - Do not let the synchronizer come apart.
 - ? Important
 - Do not let the mainshaft fall to the floor.
- 3. Remove the snap ring and the 2nd speed gear thrust washer (666).
- 4. Remove the 2nd speed gear (667) and blocker ring.
- 5. Press the mainshaft through the 5th speed driven gear (679) using J 22912-01 (figure 20) (5 speed only).

Important

• Do not let the mainshaft fall to the floor.

- 6. Mainshaft rear bearing (678).
 - It may be necessary to press the mainshaft through the bearing using J 22912-01 (figure 20).

Important

- Do not let the mainshaft fall to the floor.
- 7. Remove the 1st speed gear thrust washer (677).
- 8. Pull the retaining pin out and remove the 1st speed gear (676) (figure 21).
- 9. 1st and 2nd speed synchronizer sleeve (674) (figure 22).
 - Mark the hub and sleeve alignment for reassembly.
 - Push the hub out of the sleeve while holding the springs and keys to avoid losing them.
 - Do not lose the antirattle ball and spring (669) (5 speed only).

Important

• Do not remove the hub. The hub and the mainshaft are machined together as a set.

- 10. Synchronizers (630 and 662) (figure 22).
 - The synchronizer hub and sleeve are a select fit, do not mix the parts of the two synchronizers.
 - Mark the hub and sleeve alignment for reassembly.
 - Push the hub out of the sleeve while holding the springs and keys to avoid losing them.

7B3-8 BORG WARNER TRANSMISSIONS

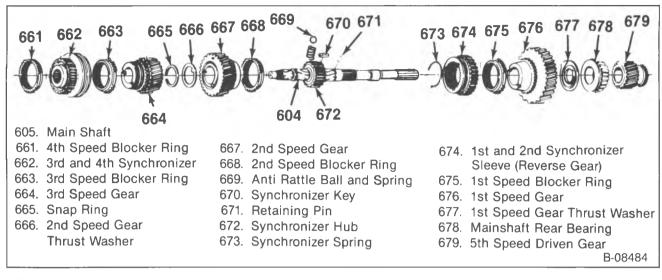


Figure 18—Mainshaft and Components

Clean (Figure 18)

All parts in a suitable solvent and air dry.

Important

• Do not spin dry bearings.

Inspect (Figure 18)

- 1. Gears for cracks, chipped gear teeth, and other damage that could cause gear noise.
- Thrust washers and bushings for damage and wear.
 Related surfaces on the gears like thrust faces and bearing surface diameters.
- 4. The reverse sliding gear for a sliding fit on the synchronizer hub without excess radial, or circular play. If the sliding gear is not free on the hub, inspect it for burrs on the ends of the internal splines. Remove any burrs by honing as required.
- Synchronizer sleeves for a sliding fit on the synchronizer hubs, also, the hubs have to be a snug fit on the mainshaft splines.

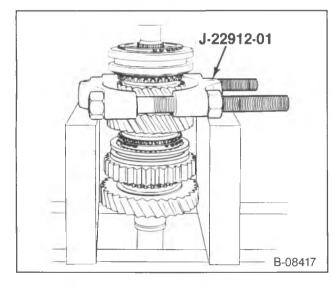


Figure 19—Removing the 3rd and 4th Synchronizer

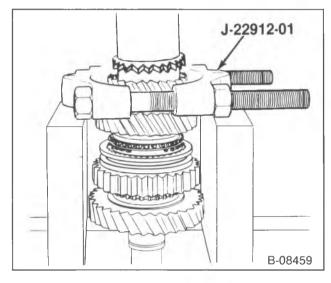


Figure 20—Removing the 5th Speed Driven Gear

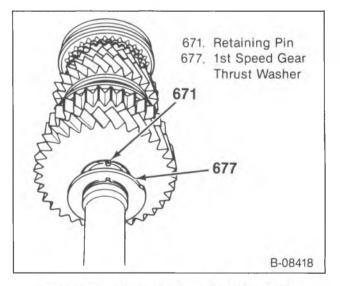


Figure 21—1st Speed Gear Retaining Ring

BORG WARNER TRANSMISSIONS 7B3-9

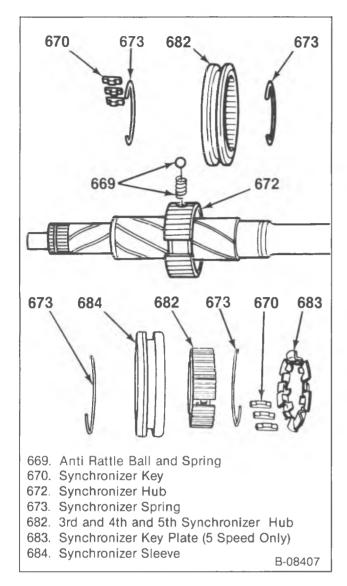


Figure 22—Synchronizer Components

- 6. Synchronizer springs and keys for looseness and damage.
- Brass synchronizer rings for excess wear and damage.
- 8. All gear teeth for excess wear.
- 9. Bearings and bearing surfaces for nicks, burrs and wear.
- 10. Lubricate all roller bearings with light engine oil and check for rough rotation.

Assemble (Figure 18)

Tools Required:

- J 22912-01 Bearing and Gear Puller
- J 25234 Countergear Rear Bearing Installer
- Coat all parts with transmission oil before installing them.
- 1. Synchronizers (630 and 662) (figure 22).
 - Place the keys into the hub.
 - Engage the springs in the same key with the open ends away from each other (figure 23).
 - Slide the sleeve onto the hub, aligning the marks made during disassembly.

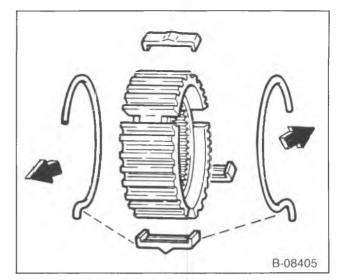


Figure 23—Synchronizer Spring Location

- 2. 1st and 2nd speed synchronizer sleeve (674) (figure 22).
 - Hold the antirattle ball and spring (669) in the hub (5 speed only).
 - · Place the keys into the hub.
 - Engage the springs in the same key with the open ends away from each other.
 - Slide the sleeve onto the hub, aligning the marks made during disassembly.
- Slide the 2nd speed blocker ring (668) onto the mainshaft.
 - · The clutching teeth must be to the front.
- 4. Slide the 2nd speed gear (667) on with the cone into the blocker ring.
- 5. 2nd speed gear thrust washer (666) and a new snap ring.
 - Be sure the thrust washer tab is seated in the mainshaft groove.
- 6. Slide the 1st speed blocker ring (675) onto the mainshaft.
 - The clutching teeth must be to the rear.
- 7. Install the 1st speed gear (676) and a new retaining pin (figure 21).
- 8. Slide the 1st speed gear thrust washer (677) against the gear.
- 9. Install the mainshaft rear bearing (678).
 - The bearing may have to be pressed on using J 25234 (figure 24).
- 10. Install the 5th speed driven gear (679) using J 22912-01 (5 speed only).
- 11. Slide the 3rd speed gear (664) on with the cone to the front.
- 12. Slide the 3rd speed blocker ring (663) onto the 3rd speed gear.
 - The clutching teeth must be against the gear.
- 13. Install the 3rd and 4th synchronizer (662) with the hub offset to the front.
- 14. Slide the 4th speed blocker ring (661) into the 3rd and 4th synchronizer.
 - The clutching teeth must be to the front.

7B3-10 BORG WARNER TRANSMISSIONS

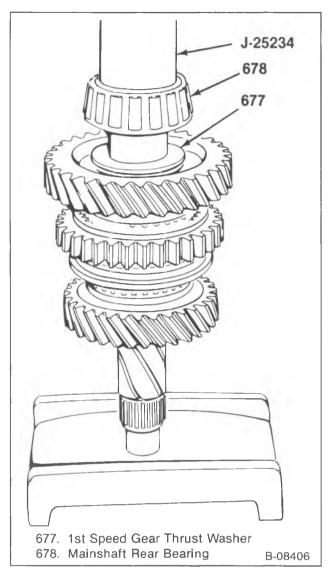


Figure 24-Installing the Mainshaft Rear Bearing

EXTENSION HOUSING

Remove or Disconnect (Figure 25)

- Tools Required:
 - J 8092 Driver Handle

J 23062-14 Extension Housing Bushing Remover and Installer

- 1. Seal (681).
- 2. Sealing compound from the flange of the extension.
- 3. Bushing (680) if it is worn or damaged, using J 8092 and J 23062-14.

10

- Inspect (Figure 25)
 Extension for scoring, wear or cracks, especially at
- the flange.
- 2. Snap ring groove for wear and damage.

Install or Connect (Figure 25)

Tools Required: J 8092 Driver Handle

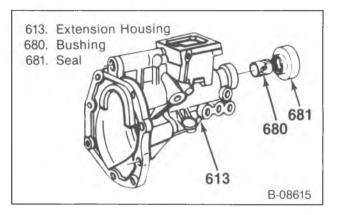


Figure 25—Extension Housing and Components

J 23062-14 Extension Housing Bushing Remover and Installer

- J 21426 Extension Housing Oil Seal Installer 1. New bushing (680) if needed, using J 8092 and J 23062-14 (figure 26).
 - Coat the bushing with transmission oil.
 - Drive the bushing into the extension.
- 2. Locking compound on the outside of a new seal (681).
- 3. New seal (681) using J 21426 (figure 27).
 - Fill between the seal lips with chassis grease.

MAIN DRIVE GEAR BEARING RETAINER

←→ Remove or Disconnect (Figure 28)

1. Seal (683).

2. Sealing compound from flange of retainer (646).

Inspect (Figure 28)

- 1. Retainer nose for scoring, wear or cracks, especially at the flange.
- 2. Snap ring groove for damage caused by drive gear bearing movement.

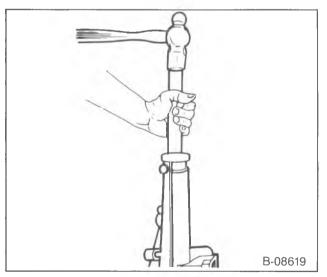


Figure 26—Installing the Extension Housing Bushing

BORG WARNER TRANSMISSIONS 7B3-11

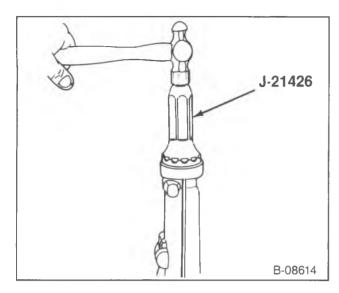


Figure 27—Installing the Extension Housing Oil Seal

3. Replace the retainer if it is worn or damaged.

++ Install or Connect (Figure 28)

Tool Required:

- J 23096 Front Housing Drive Gear Seal Installer
- New seal (683) using J 23096. Coat the inside of the seal with transmission oil (figure 29).

SHIFT COVER

Disassemble (Figure 30)

- The shift shaft and shift fork plates must be in the neutral position (centered).
- 1. Turn the shift shaft (685) until the selector arm (689) is disengaged from the fork plates (688).
- 2. Drive the retaining pin out of the selector arm (689) (figure 31).
- 3. Remove the shift shaft (685).
 - Shift forks and the plates.
 - Selector arm.
 - Interlock plate.
- 4. Pry the oil seal (602) out.

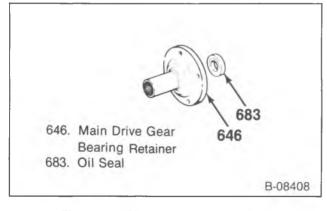


Figure 28—Main Drive Gear Bearing Retainer Oil Seal

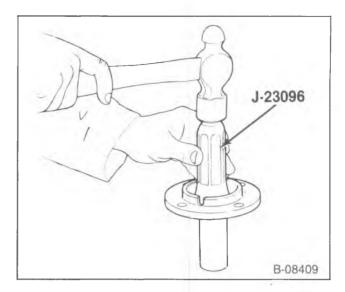


Figure 29—Installing the Bearing Retainer Oil Seal

- 5. Remove the inserts (686) from the forks.
- Clean (Figure 30)

.

- All metal parts in solvent and air dry.
- Inspect (Figure 30)
- 1. Shift forks.
 - For damage or bends.
 For worn inserts.
- 2. Shift shaft.

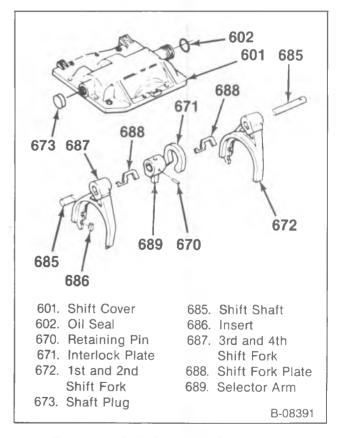


Figure 30—Shift Cover and Components

7B3-12 BORG WARNER TRANSMISSIONS

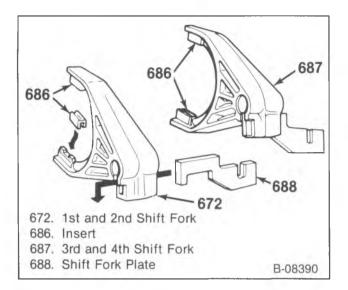


Figure 31—Shift Forks and Selector Plates

- For damage and bends.
- · For worn or damaged plates.
- For smooth fit in the cover.
- 3. Shift cover.
 - For cracks and warping.
 - · For smooth shift shaft fit.
 - Shaft plug for damage or leaks.

Assemble (Figure 30)

- Coat the shift shaft and the cover bores lightly with grease.
- 1. Install a new shift shaft plug (673), if needed.
 - Coat the outside of the plug with sealing compound.
- 2. Fit the inserts (686) and the fork plates (688) into the shift forks (figure 31).
- 3. 1st and 2nd (largest) shift fork (672).
 - Fit the shift shaft into the cover rear bore.
 - Hold the shift fork in the cover with the fork offset to the rear (figure 32).
 - Push the shift shaft through the fork.
- 4. Selector arm (689) and the interlock plate (671).

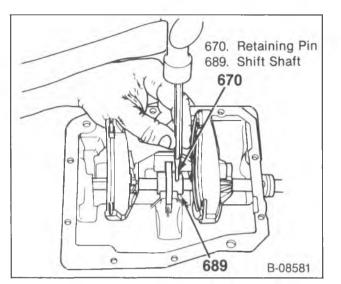


Figure 32—Removing the Shift Shaft Retaining Pin

- Hold the selector arm and the interlock plate in the cover with the widest part of the plate away from the cover.
- The shift arm retaining pin hole must be away from the cover and to the rear (figure 32).
- Push the shift shaft through the arm.
- 5. 3rd and 4th shift fork (687).
 - Hold the shift fork in the cover with fork offset to the rear (figure 32).
 - The fork plate must be under the 1st and 2nd shift fork plate.
 - Push the shift shaft through the fork, into the cover front bore.
- 6. Turn the shift shaft until the front fork plate is away from the cover and parallel to it.
- 7. Drive a new retaining pin (670) into the selector arm and the shift shaft.
 - Be sure the arm and shaft pin holes are aligned.
 - The retaining pin must be flush with the selector arm.
- 8. Install a new oil seal (602).
 - Coat the seal with transmission oil.

TRANSMISSION ASSEMBLY (INSTALLATION OF SUB-ASSEMBLIES)

Use new seals, gaskets, and thread sealer on all bolt threads when assembling the transmission. Tighten all bolts to specified torque.

Lubricate all assemblies as they are installed in the transmission using transmission oil.

++ Install or Connect (Figures 1, 2 and 3)

Tools Required:

J 29895 Countershaft Rear Bearing Installer J 33032 Rear Cluster Bearing Assembly Tool

- 1. Countergear front bearing (642) (figure 33).
- Coat the bearing bore with Loctite #601 or equivalent.

- The bearing must be flush with the transmission case.
- 2. Countergear thrust washer (641).
 - Coat the thrust washer with grease.
- 3. Countergear (604) and the rear bearing spacer (636).
 - Tip the transmission case up.
 - Fit the countergear into the front bearing.
 - Install the rear bearing spacer.
- 4. Countergear rear bearing (635) (figures 34 and 35).Coat the bearing with grease.
 - Install the bearing using J 33032 and J 29895.

BORG WARNER TRANSMISSIONS 7B3-13

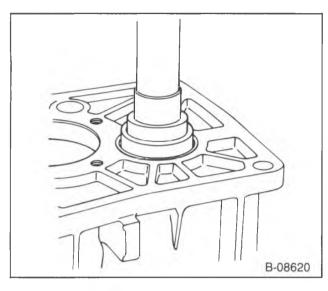


Figure 33—Installing the Countergear Front Bearing

Important

 Be sure the bearing is installed in the direction it was removed from.

4 Measure

- Countergear rear bearing. It must extend 3 mm (0.125-inch) past the transmission case.
 5. Reverse idler gear (638) and the shaft.
 - Hold the gear in the case with the shift lever groove to the rear.
 - Install the reverse idler shaft from the rear.
 - Install a new retaining pin (figure 14).
- 6. Fit the mainshaft (604) into place.
- 7. Mainshaft rear bearing race (605).
- 8. Main drive gear (643).
 - Turn the gear so the cut-out is toward the countergear (figure 11).
 - Be sure the 4th speed blocker ring is engaged in the synchronizer properly.
- 9. Main drive gear bearing race (644).

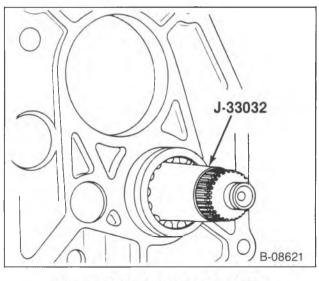


Figure 34—Installing Tool J 33032

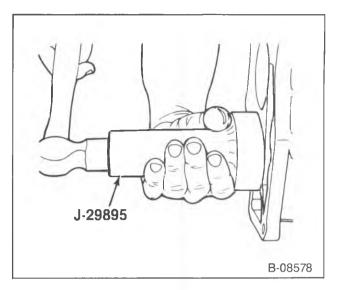


Figure 35—Installing the Countergear Ring Bearing

- 10. Main drive gear bearing retainer (646) and the screws.
 - Be sure to align the marks (figure 9).
- 11. 5th speed and reverse shift lever (623), and the pivot bolt.
 - Coat the pivot bolt threads with a non-hardening sealer.
 - Be sure the reverse lever fork is engaged in the idler gear slot.
- 12. New reverse shift lever retaining ring (625).
- 13. Countergear rear bearing spacer (634) and a new snap ring (5 speed only).
- 14. 5th speed drive gear (632) (5 speed only).
- 15. 5th speed and reverse shift shaft (629) (figure 13).Install the shaft from the rear of the case.
 - Install the shaft to exceed it in the reverse la
 - Turn the shaft to engage it in the reverse lever.Hook the lock spring to the front of the case.
- 16. 5th speed shift fork (618) and the synchronizer (5 speed only).
 - · Engage the shift fork in the synchronizer.
 - Engage the 5th speed blocker ring into the synchronizer.
 - Install the synchronizer onto the countergear and the shift fork onto the shift shaft together.
- 17. New pin (619) (5 speed only).
 - Align the holes in the 5th speed shift fork and the shift shaft.
 - Support the shift fork and install the pin (figure 7).
- 18. Front thrust race (611) and a new snap ring (5 speed only).
- 19. Countergear thrust bearing (612).
 - · Coat the bearing with petroleum jelly.
 - The bearing race lip must be over the bearing.
 - Plastic funnel (615) into the bearing (5 speed only).
- 20. Extension housing (613) and the screws.
 - Turn the transmission on end and mount a dial indicator ot the extension housing (figure 36).

7B3-14 BORG WARNER TRANSMISSIONS

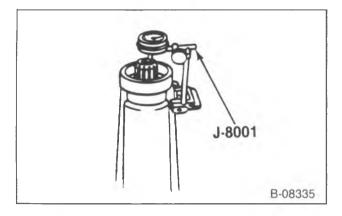


Figure 36—Measuring Mainshaft End Play

4 Measure

- · Mainshaft end play.
- Select a shim pack 0.03-0.13 mm (0.001-0.005inch) LARGER than the end play measured, to preload the mainshaft bearings 0.03-0.13 mm (0.001-0.005-inch).
- 21. Main drive gear bearing shim pack (645).
 - Remove the bearing retainer.
 - Install the correct shim pack (figure 10).
 - Apply a 3 mm (1/8-inch) diameter bead of RTV #732, or equivalent, sealer to the case mating surface.
 - Install the bearing retainer, aligning the marks (figure 9).

- 22. Shift cover (601).
 - Remove the extension housing.
 - Move the shift forks and the synchronizers to the neutral positions.
 - Apply a 3 mm (1/8-inch) bead of RTV #732, or equivalent, sealer to the cover mating surface.
 - Lower the cover onto the case, aligning the shift forks into the synchronizers.
 - The offset lever to shift shaft pin hole must be up.
- 23. Shift cover screws.
 - Install the two locating screws in the holes they were removed from first.
- 24. Speedometer drive gear (609) and the retaining clip.Do not lose the balls from the gear.
- 25. Extension housing (613).
 - Apply a 3 mm (1/8-inch) diameter bead of RTV #732, or equivalent, sealer to the mating surface.
 - Hold the extension housing so the shift shaft just enters the shift cover opening.
- 26. Offset lever (655), the detent ball and the spring (figure 5).
 - Press the offset lever into place and seat the extension housing.
 - Install the extension housing scerws.
- 27. New pin (659) into the offset lever and shift shaft.
- 28. Control lever (653), the boot and the dust cover.
 - Silicone sealer in the groove around the dust cover.

SPECIFICATIONS

FASTENER TORQUE


	N·m	Ft. Lbs.
Drive Gear Bearing Retainer Screws	20	15
Shift Cover Screws	13	10
Rear Extension Screws.	30	25
Reverse Pivot Bolt	27	20

LUBRICATION

Capacity	2.0 L	2.0 qts.
Type Recommended	omatic Tran	smission Fluid

BORG WARNER TRANSMISSIONS 7B3-15

SPECIAL TOOLS

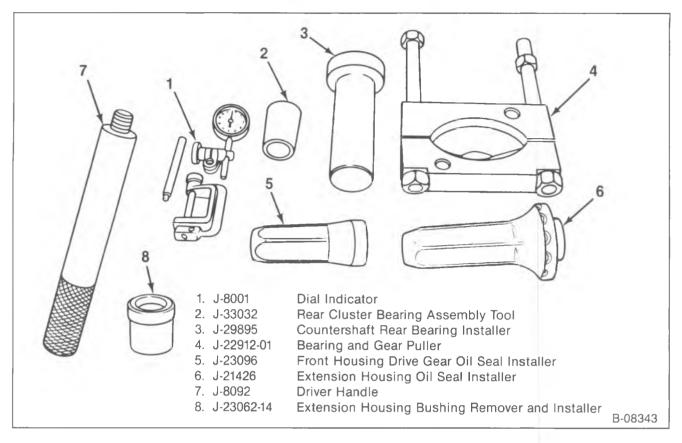

7B3-16 BORG WARNER TRANSMISSIONS

PAGE

PAGE

SECTION 7D

TRANSFER CASE

CONTENTS

New Process 205 Transfer Case	7D1-1
New Process 207 Transfer Case	
New Process 208 Transfer Case	7D3-1
New Process 241 Transfer Case	7 D4-1
New Process 231 H.D. Transfer Case	7 D5-1

SECTION 7D1

NEW PROCESS 205 TRANSFER CASE

CONTENTS

SUBJECT

SUBJECT


Description	7D1- 1
Disassembly	
Rear Output Shaft and Yoke Assembly	
Front Output Shaft Assembly	7D1- 2
Shift Rail and Fork Assemblies	7 D1- 3
Idler Gear	7D 1- 3
Miscellaneous	7D1- 3
Cleaning and Inspection	
Assembly	
Idler Gear	7D1- 8
Shift Rail and Fork Assemblies	7D1- 8
Front Output Shaft Assembly	7D1- 8
Rear Output Shaft Assembly	7D1- 9
Miscellaneous	7D1-10
Specifications	
Special Tools	

DESCRIPTION

A transfer case mounts behind the transmission and allows drive torque to be transmitted in a proportional split to both the front axle and the rear axle, resulting in four-wheel drive. The shift control lever for the transfer case is floor-mounted in the passenger compartment. Depending on the type of transfer case and the shift lever position, various combinations of rear wheel drive, four wheel drive, high traction (gear reduction) or direct drive may be selected.

The model 205 transfer case is a two-speed unit which can be used for either two-wheel or four-wheel drive. Direct drive (1:1 ratio) is available in two modes, 2H for two-wheel drive, or 4H for four-wheel drive. Gear reduction (1.96:1 ratio) is used in the 4L position. This unit uses constant mesh helical gears to connect the input shaft, idler gear and two out put gears, thus allowing gear selection to match driving conditions. The front input shaft gear is in constant mesh with the idler gear and, through the idler gear, with the front output gears and the rear output gear. Sliding clutches allow for selective gear engagement resulting in High or Lo range, and two-wheel or four-wheel drive. Ball bearings support the input shaft, rear output shaft and front output shaft. Tapered roller bearings are used on the idler shaft. When driving in a four-wheel mode (4L or 4H) the hubs on the front wheels must be turned to the "Locked" position.

7D1-2 NEW PROCESS 205 TRANSFER CASE

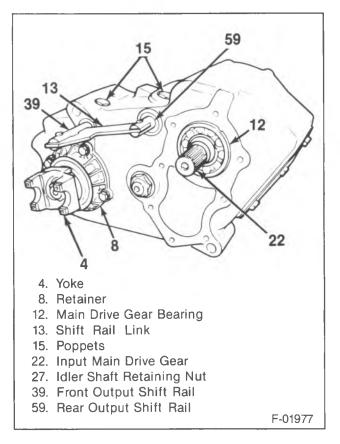

DISASSEMBLY

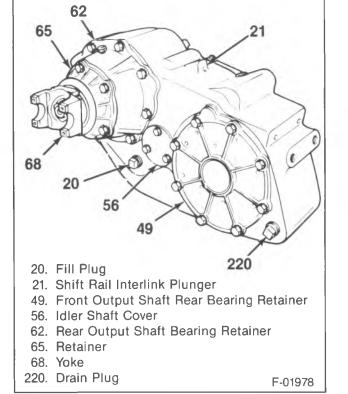


Figure 2—NP205 — Rear View

- 15. Retainer ring (23).
- 16. Washer (24).
- 17. Oil seal retainer (65).
- 18. Ball bearing (9) and bearing retaining snap ring.
- 19. Speedometer gear (63).
- 20. Oil seal (67) from the retainer (65).
- 21. Needle bearing (61) from the rear output shaft bearing retainer (62), using a suitable tool.

FRONT OUTPUT SHAFT ASSEMBLY

Remove or Disconnect (Figures 1, 2, 3, 4 and 5)

Tools Required:

J 23432-1 Snap Ring Picks J 23232 Snap Ring Pliers

- 1. Lock nut (1).
- 2. Washer (2 and 3).
- 3. Yoke (4).
- 4. Front bearing retainer bolts (6).
- 5. Retainer (8).
- 6. Front output shaft rear bearing retainer attaching bolts (6) and retainer (49).
- 7. Front output shaft (40), gear assembly, and rear bearing retainer (49) from the case (19).
 - Tap on the output shaft with a soft hammer.

Figure 1—NP205 — Front View

REAR OUTPUT SHAFT AND YOKE ASSEMBLY

Clean

The transfer case exterior using a solvent and a stiff brush.

Remove or Disconnect (Figures 1, 2, 3, and 4)

Tool Required:

- J 23432 Snap Ring Pliers
- Loosen the rear output shaft yoke nut (79).
- 1. Rear output shaft housing bolts (6).
- 2. Housing and retainer assembly (62) from the case (19).
- 3. Yoke nut (79) and washers (80 and 69).
- 4. Yoke (68).
- 5. Shaft assembly (26) from the housing (62).
- 6. Snap ring (46) using Tool J 23432. Discard the snap
- ring. 7. Thrust washer (81).
- 8. Washer pin (45).
- 9. Tanged bronze washer (60).
- 10. Gear roller bearings, 32 per row (41).
- 11. Spacer (42).
- 12. Gear roller bearings, 32 per row (41).
- 13. Tanged bronze thrust washer (60).
- 14. Pilot rollers (25).

NEW PROCESS 205 TRANSFER CASE 7D1-3

- 8. Clutch hub (34) from the output high gear (33).
 Output high gear, washer and bearing are still in the case.
- 9. Low gear retaining ring (46) from the shaft (40), using J 23432-1. Discard the ring.
- 10. Thrust washer (44) from the shaft.
- 11. Pin (45) from the shaft.
- 12. Low gear (43).
- 13. Roller bearings 32 per row (41) first row.
- 14. Spacer (42).
- 15. Roller bearings 32 per row (41) second row.
- 16. Front output shaft rear bearing (47).
 - Support the cover.
 - Press the bearing from the cover (figure 5).

SHIFT RAIL AND FORK ASSEMBLIES

****** Remove or Disconnect (Figures 3, 4, 6, and 7)

- 1. Two poppet screws (15) on top of the case (19).
- 2. Two poppet springs (17).
- 3. Poppet balls (18).
 - Use a magnet.
- 4. Cup plugs.
 - Drive the cup plugs into the case, using a 6.35 mm (1/4-inch) punch (figure 6).
- 5. Shift fork pins (36).
 - Position both shift rails into neutral.
 - Drive the shift fork pins through the shift rails and into the case.
- 6. Clevis spring clips (37) and clevis pins (38).
- 7. Shift rail link (13).
- 8. Upper shift rail (39) (figure 7).
- 9. Lower shift rail (59)
- 10. Shift forks (77 and 35).
- 11. Sliding clutch hub (34).
- 12. Front output high gear (33).
- 13. Washer (32).

- 14. Bearing (9).
- 15. Shift rail cup plugs and shift fork pins (36) from the case.
- Snap ring (11) in front of the main drive gear bearing (12).
- 17. Main drive shaft (22).
 Tap the shaft out the rear of the case.
 18. Main drive gear bearing (12).
- Tap the bearing out the front of the case.
 19. Interlock pins (21).
 - tenock pins (21).

IDLER GEAR

Remove or Disconnect (Figures 3, 4 and 8)

Tool Required:

Tool-A

- 1. Idler gear shaft nut (27) and washer (28).
- 2. Idler shaft rear cover bolts (58) and rear cover (56).
- 3. Idler gear shaft (54), using Tool A and a soft hammer (figure 8).
- 4. Idler gear (51).
 Roll the gear to the front output shaft hole and remove it from the case.
- 5. Bearing cups (50), as required, from the idler gear (51).
- 6. Spacer (52).
- 7. Shims (53).

MISCELLANEOUS

✦→ Remove or Disconnect

- 1. Lock pins (37).
- 2. Clevis pins (38).
- 3. Shift rail cross link (13).
- 4. Drain plugs and filler plugs.
- 5. PTO cover bolts (30).
- 6. PTO cover (31).
- 7. PTO cover gasket (29).

7D1-4 NEW PROCESS 205 TRANSFER CASE

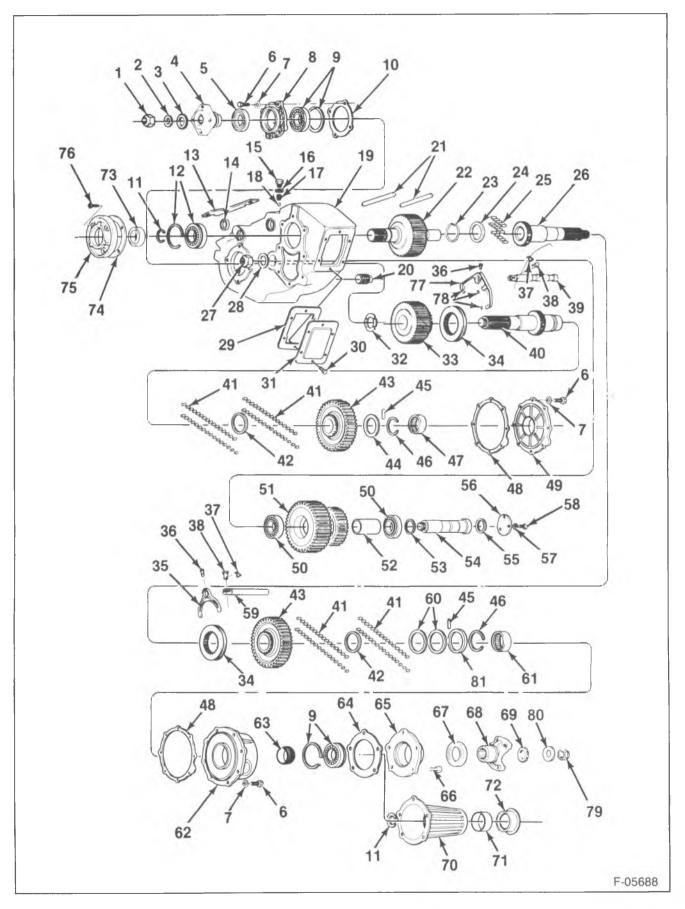


Figure 3—New Process 205 Transfer Case

NEW PROCESS 205 TRANSFER CASE 7D1-5

- 1. Yoke Nut
- 2. Washer
- 3. Washer (Rubber)
- 4. Yoke
- 5. Seal
- 6. Retainer Bolt
- 7. Washer, Toothed
- 8. Retainer
- 9. Front and Rear Output Shaft Bearing
- 10. Gasket
- 11. Bearing Retaining Snap Ring
- 12. Main Drive Gear Bearing
- 13. Shift Shaft Link
- 14. Shift Shaft Oil Seal
- Poppet Plug (on Rear Output Shift Shaft) or Four Wheel Indicator Lamp Switch (on Front Output Shift Shaft)
- 16. Poppet Plug Gasket
- 17. Poppet Plug Spring
- 18. Poppet Ball
- 19. Transfer Case
- 20. Fill Plug
- 21. Shift Rail Interlink Plunger
- 22. Input Main Drive Gear
- 23. Pilot Roller Retainer Ring
- 24. Rear Output Shaft Roller Bearing Thrust Washer
- 25. Rear Output Shaft Pilot Bearing Roller
- 26. Rear Output Shaft
- 27. Idler Shaft Yoke Nut
- 28. Washer
- 29. Power Take-Off Cover Gasket
- 30. Bolt
- 31. Power Take-Off Cover
- 32. Front Output Shaft Bearing Thrust Washer
- 33. Front Output Shaft Front Gear
- 34. Front Output Gear Clutch Hub
- 35. Front Wheel Shift Fork
- 36. Lock Pin
- 37. Shift Link Clevis Spring Clip
- 38. Clevis Pin
- 39. Two/Four Wheel Shift Shaft

- 40. Front Output Shaft
- 41. Bearing Roller
- 42. Spacer
- 43. Front and Rear Output Shaft Low Gear
- 44. Thrust Bearing
- 45. Thrust Washer Retainer Pin
- 46. Snap Ring
- 47. Bearing
- 48. Gasket
- 49. Front Output Shaft Rear Bearing Retainer
- 50. Idler Gear Bearing
- 51. Transfer Case Idler Gear
- 52. Idler Gear Bearing Spacer
- 53. Idler Gear Shim
- 54. Idler Gear Shaft
- 55. Idler Shaft Cover Gasket
- 56. Idler Shaft Cover
- 57. Washer
- 58. Bolt
- 59. Hi-Lo Range Shiaft Shaft
- 60. Thrust Washer
- 61. Rear Output Shaft
- Retainer Bearing 62. Rear Output Shaft
- Bearing Retainer
- 63. Speedometer Gear
- 64. Retainer Oil Seal Gasket
- 65. Retainer
- 66. Bolt
- 67. Oil Seal
- 68. Yoke
- 69. Washer (Rubber)
- 70. Extension
- 71. Bushing
- 72. Seal
- 73. Input Drive Gear Seal
- 74. Gasket
- 75. Retainer
- 76. Bolt
- 77. Front Output Shift Fork
- 78. Fork Insert
- 79. Rear Output Shaft Nut
- 80. Rear Output Washer
- 81. Thrust Washer

F-05799

7D1-6 NEW PROCESS 205 TRANSFER CASE

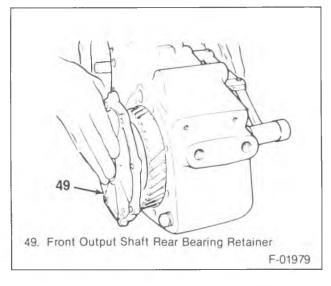


Figure 5—Front Output Shaft Rear Bearing Removal

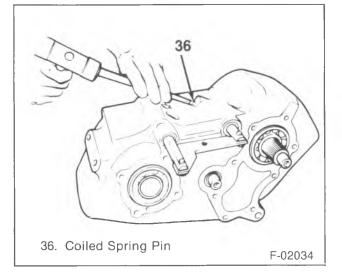
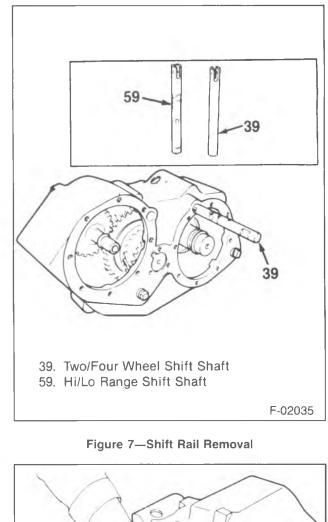


Figure 6—Shift Fork Pin Removal



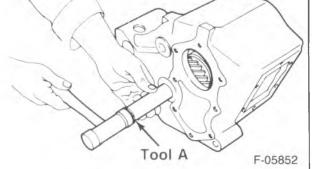


Figure 8—Idler Gear Shaft Removal

CLEANING AND INSPECTION

Tean

- 1. Bearings and rollers.
- Remove all old lubricant and dirt. 2. Shafts and gears.
 - Remove all old lubricant and dirt.
- Transfer case, cover and bearing cups.
 Remove all old lubricant and dirt.
 - Remove all traces of gaskets.

• Hemove an fraces of gas

Inspect

1. Bearings and thrust washers for wear, spalling, brinneling, or corrosion.

- 2. Rollers for wear, spalling or corrosion.
- 3. Shaft splines for excessive wear, chipped teeth, or cracks.
- 4. Gears for excessive wear, chipped teeth, spalling, cracks, or corrosion.
- 5. Housing, retainers and case for cracks, warpage or damage.
- 6. Shafts for wear, corrosion, cracks, and damage.
- 7. Bolts and threaded holes for wear, damage, stretched threads or corrosion.

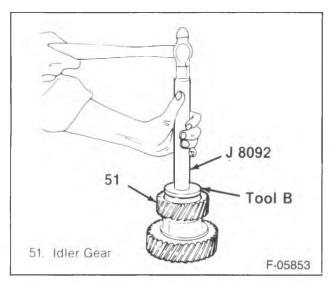


Figure 9—Bearing Cup Installation

IDLER GEAR

Install or Connect (Figures 3, 4, 9, 10, 11, 12, and 13)

Tools Required:

J 8092 Driver Handle Tool-B Tool-A

- 1. Two bearing cups (50) in the idler gear (51) using Tool-B and J 8092 (figure 9).
- 2. Two bearing cones (50), spacer (52), shims (53), and idler gear (51) on J 23429 with the bore up.

4 Measure

- End play. Limits are .025-.051 mm (0.001-0.002-inch) (figure 10).
- 3. Idler gear assembly with Tool-A into the case. Go through the front output bore, large end first (figure 11).
- 4. Idler shaft (54) from the large bore side.

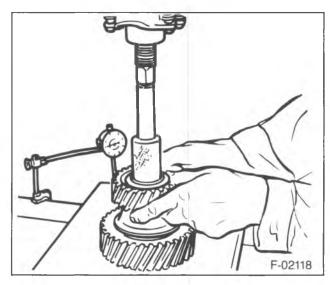


Figure 10—Idler Gear End Play Check

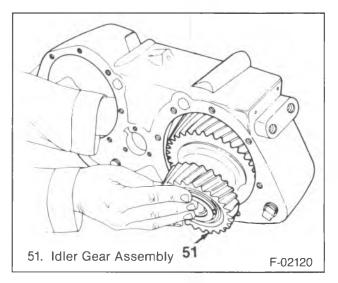


Figure 11—Idler Gear Assembly Installation

ASSEMBLY

7D1-8 NEW PROCESS 205 TRANSFER CASE

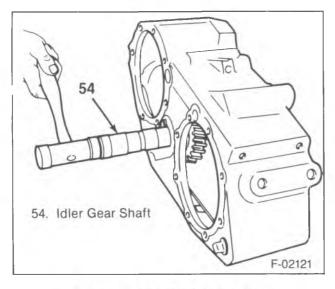


Figure 12—Idler Shaft Installation

- Drive the shaft through, using a soft hammer (figure 12).
- 5. Washer (28).
- 6. New locknut (27).
 - Check for end play and free rotation.
 - री Tighten
 - Nut to 202 N·m (150 ft. lbs.).
- 7. Idler shaft cover gasket (55).
- 8. Idler shaft cover (56) (figure 13).
 - The flat on the cover must be located adjacent to the front output shaft rear cover.
 - 9. Idler shaft cover bolts (58).



• Bolts to 27 N·m (20 ft. lbs.).

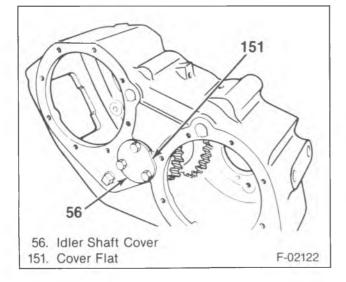


Figure 13-Idler Shaft Cover Alignment

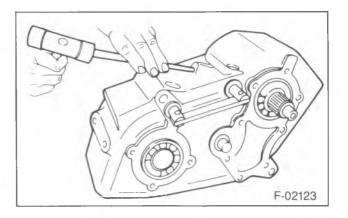


Figure 14---Shift Fork Lock Pin Installation

SHIFT RAIL AND FORK ASSEMBLIES

Install or Connect (Figures 3, 4, and 14)

- 1. Two rail seals (14) into the case (19).
 - Seals should be installed with the metal lip outward.
- 2. Interlink plungers (21) through the large bore or PTO opening.
- 3. Hi-Lo range shift rail (59).
 - Start the rail into the case from the back, slotted end first, with the poppet notches up.
- 4. Shift fork (35).
 - Install the shift fork (long end forward) into the front output drive shift rail (59).
 - Push the rail through to the neutral position.
- 5. Input shaft bearing (12) and shaft (22) into the case.
- 6. Range rail (39) into the case.
 - Start the range rail into the case from the front, with the poppet notches up.
- 7 Sliding clutch (34) and fork (77).
 - Install the sliding clutch onto the fork.
 - Place the assembly over the input shaft (40) in the case.
 - Position the assembly to receive the range rail (39).
 - Push the range rail through to the neutral position.
- 8. Lock pins (36).
 - Install the new lock pins through the holes at the top of the case.
 - Drive the lock pins into the forks (figure 14).
 - Tip the case onto the PTO opening when installing the range rail lock pin.

FRONT OUTPUT SHAFT ASSEMBLY

Install or Connect (Figures 3, 4 and 15)

Tools Required:

- J 23432 Snap Ring Pliers
- J 22836 Front Output Shaft Bearing Retainer Seal Installer

NEW PROCESS 205 TRANSFER CASE 7D1-9

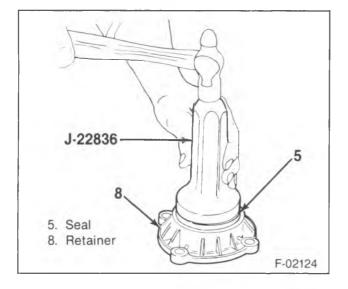


Figure 15—Front Output Bearing Retainer Seal Installation

- 1. Roller bearings 32 per row (41) in the front low gear (43).
- · Use grease to retain the roller bearings.
- 2. Spacer (42).
- 3. Roller bearings 32 per row (41) in the front low gear (43).
- 4. Front low gear (43) on the front output shaft (40).
 - Place the front output shaft in a soft jawed vise, with the spline end down.
 - Install the front low gear on the shaft with the clutch gear facing down.
- 5. Thrust washer pin (45) in the shaft (40).
- 6. Thrust washer (44) on the shaft (40).
- 7. New snap ring (46), using tool J 23432.
 - Position the snap ring so that the opening is opposite the pin.
- 8. Front output shaft front bearing (9) into the case (19).
- 9. Front output shaft front bearing retainer seal (5), using J 22836 (figure 15).
- 10. Front output shaft front bearing retainer (8).
- 11. Retainer bolts (6).

Tighten

Bolts to 40 N m (30 ft. lbs.).

- 12. Washer (32) in the case
- 13. Front output shaft high gear (33) in the case.
- 14. Shift fork (77) in the sliding clutch hub (34).
- Shift fork (77) and rail (39) in the front wheel drive (4H) position with the clutch teeth in mesh with the front output high gear teeth.
- 16. Front output shaft and low gear assembly through the high gear assembly.
 - Line up the washer (32), high gear (33), and the clutch hub (34) with the bearing bore before installing the front output shaft (40).
- 17. Bearing (47) in the front output rear bearing retainer (49).
- Front output rear bearing retainer (49) onto the case (19).
 - · Use one gasket.

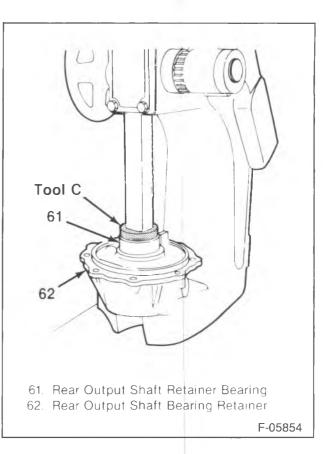


Figure 16—Rear Output Shaft Retainer Bearing Installation

19. Retainer bolts (6).Dip the bolts into sealant before installing



- Bolts to 40 N m (30 ft. lbs.).
- 20. Front output yoke (4).
- 21. Washers (2 and 3).
- 22. Lock nut (1).
 - री Tighten
 - Nut to 202 N m (150 ft. lbs.).

REAR OUTPUT SHAFT ASSEMBLY

Install or Connect (Figures 3, 4, 16, 17, and 18)

Tools Required:

- J 22875 Rear Output Shaft Rear Bearing Installer
- J 23432 Snap Ring Pliers

J 23432-1 Snap Ring Picks

Tool-C

J 21359 Rear Output Shaft Bearing Retainer Seal Installer

- First row of roller bearings (41) 32 each, in the rear output shaft low gear (43).
 - Use grease to retain the rollers.
- 2. Spacer (42) in the rear output shaft low gear (43).

7D1-10 NEW PROCESS 205 TRANSFER CASE

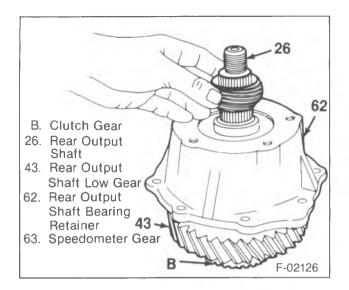


Figure 17—Speedometer Gear Installation

- 3. Second row of roller bearings (41) 32 each, in the rear output shaft low gear (43).
- 4. Thrust washer (60) onto the rear output shaft (26).
 - Install the washer with the tang down in the clutch gear groove.
- 5. Rear output shaft low gear (43) onto the rear output shaft (26).
 - Install the gear with the clutch teeth facing toward the clutch hub (34).
- 6. Thrust washer (60) over the gear (43).
 - Install the washer with the tab pointing up and away from the gear.
- 7. Washer pin (45).
- 8. Large thrust washer (44) over the shaft (26) and the pin (45).
 - Rotate the washer until the tab fits into the slot 90 degrees away from the pin.
- 9. Snap ring (46) using J 23432 and J 23432-1.

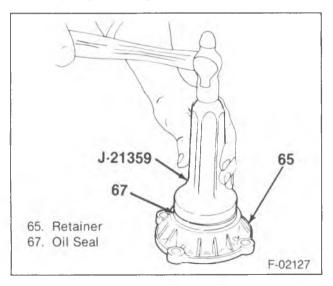


Figure 18—Rear Bearing Retainer Seal Installation

🖳 Measure

- End play of .05-.56 mm (0.002-0.027-inch).
- 10. Grease in the pilot bore of the rear output shaft (26).
- 11. Roller bearings 15 each (25).
- 12. Thrust washer (24).
- 13. New snap ring (23) in the bore.
- New bearing (61) in the retainer housing (62), using Tool-C (figure 16).
 - Grease the bearing before installing it.
- 15. Retainer housing (62) onto the output shaft assembly (26).
- 16. Retainer housing and output shaft to the case (19).
- 17. Retainer bolts (6).
 - री Tighten
 - Bolts to 40 N m (30 ft. lbs.)
- 18. Speedometer gear (63) (figure 17).
- 19. Rear output shaft bearing (9) in the bearing retainer housing (62), using J 22875.
- 20. Rear bearing seal (67) in the seal retainer (65), using J 21359 (figure 18).
- 21. Seal retainer (65) on the retainer housing (62).
 Use one or two seals, depending on the needed clearance.
- 22. Retainer bolts (66).

A

री Tighten

Bolts to 40 N m (30 ft. lbs.).

MISCELLANEOUS


++ Install or Connect

- 1 PTO cover gasket (29).
- 2. PTO cover (31).
- 3. PTO cover bolts (30).
 - ि रि Tighten
 - Bolts to 20 N m (15 ft. lbs.).
- 4. Cup plugs at the rail pin holes.
 - Apply sealant to the plugs before installing.
- Drain plugs and filler plugs.
 - री Tighten
 - Plugs to 55 N m (40 ft. lbs.).
- 6. Shift rail cross link (13).
- 7. Clevis pins (38).
- 8. Lock pins (37).

SPECIFICATIONS

NEW PROCESS 205 TRANSFER CASE

	MM	INCH
Idler Gear End Play	0.025-0.051	0.001-0.002
Rear Output Shaft End Play.	0.05-0.56	0.002-0.027
	N·m	FT. LBS.
Idler Gear Lock Nut	202	150
Idler Shaft Cover Bolts	27	20
Front Output Shaft Front Bearing Retainer Bolts	40	30
Front Output Rear Bearing Retainer Bolts	40	30
Front Output Yoke Lock Nut	202	150
Retainer Housing Bolts	40	30
Seal Retainer Bolts		30
Lubricant: Dexron* II	5.2	Pints

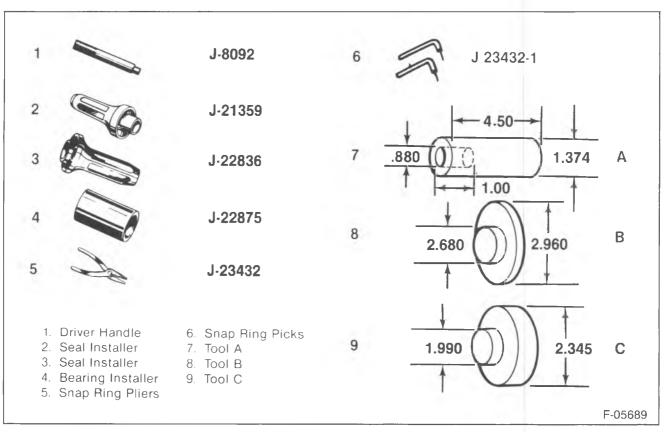

SPECIAL TOOLS

7D1-12 NEW PROCESS 205 TRANSFER CASE

PAGE

SECTION 7D2 NEW PROCESS 207 TRANSFER CASE

CONTENTS

Description.7D2- 1Disassembly.7D2- 1Transfer Case.7D2- 1Mainshaft Assembly.7D2- 6Planetary Gear.7D2- 6Cleaning and Inspection.7D2- 8Assembly.7D2- 8Planetary Gear.7D2- 8Mainshaft.7D2- 8Transfer Case.7D2- 8Specifications.7D2- 8Specifications.7D2- 8.7D2- 11.7D2- 8Specifications.7D2- 11Special Tools.7D2-12

DESCRIPTION

The 207 transfer case is an aluminum case, chain drive, four position unit providing four-wheel drive high and low ranges, a two-wheel high range, and a neutral position. The 207 is a part-time four-wheel drive unit. Torque input in four-wheel high and low ranges is undifferentiated. The range positions on the 207 transfer case are selected by a floor mounted gearshift lever.

The 207 case is a two-piece aluminum case containing front and rear output shafts, two drive sprockets, a shift mechanism and a planetary gear assembly. The drive sprockets are connected and operated by the drive chain. The planetary assembly which consists of a three pinion carrier and an annulus gear provide the four-wheel drive low range when engaged.

IDENTIFICATION

SUBJECT

An identification tag is attached to the rear half of the transfer case. This tag provides the transfer case model number, low range reduction ratio, and assembly number. The information on this tag is necessary for servicing information. If the tag is removed or becomes dislodged during service operations, it should be reattached using an adhesive sealant such as Loctite 312 or equivalent.

POWER FLOW

In all drive range positions input torque is transmitted to the transfer case gear train through the transfer case input gear. In 2H range, torque flows from the input gear to the planetary assembly and annulus gear which rotate as a unit. Torque is transferred to the mainshaft through the planetary carrier which is splined to the mainshaft. Torque flow continues through the mainshaft and rear yoke which is splined to the mainshaft, and finally to the rear propeller shaft and axle. In 2H range, the sliding clutch remains in a neutral position and does not lock the drive sprocket to the mainshaft. As a result, torque is not transferred to the front output shaft.

In 4H range, input torque from the input gear is transmitted through the planetary and annulus gear and through the mainshaft in exactly the same fashion as in 2H range. However, in 4H position, the sliding clutch is shifted rearward and into engagement with the sprocket clutch teeth. This locks the drive sprocket to the mainshaft through the sliding clutch. Torque is now transmitted through the sliding clutch. Torque is now transmitted through the drive sprocket to the front output shaft by the connecting drive chain. The torque then flows through the front output shaft to the front propeller shaft and axle resulting in high range four-wheel drive.

In 4L range, the path of torque through the transfer case is exactly the same as in 4H range but with one major difference. In 4L range, the annulus gear is shifted forward and into engagement with the lock plate. Since the lock plate is fixed in the case, the annulus gear is held stationary and does not rotate. This causes the planetary pinions to rotate about the annulus gear internal teeth producing a gear reduction ratio of 2.61:1.



TRANSFER CASE



The transfer case exterior using a solvent and a stiff

++ Remove or Disconnect (Figures 1 and 2)

Tools Required:

- J 8092 Driver Handle
- J 29369-1 Input Gear Pilot Bearing Remover
- J 29369-2 Front Output Shaft Rear Bearing Remover

7D2-2 NEW PROCESS 207 TRANSFER CASE

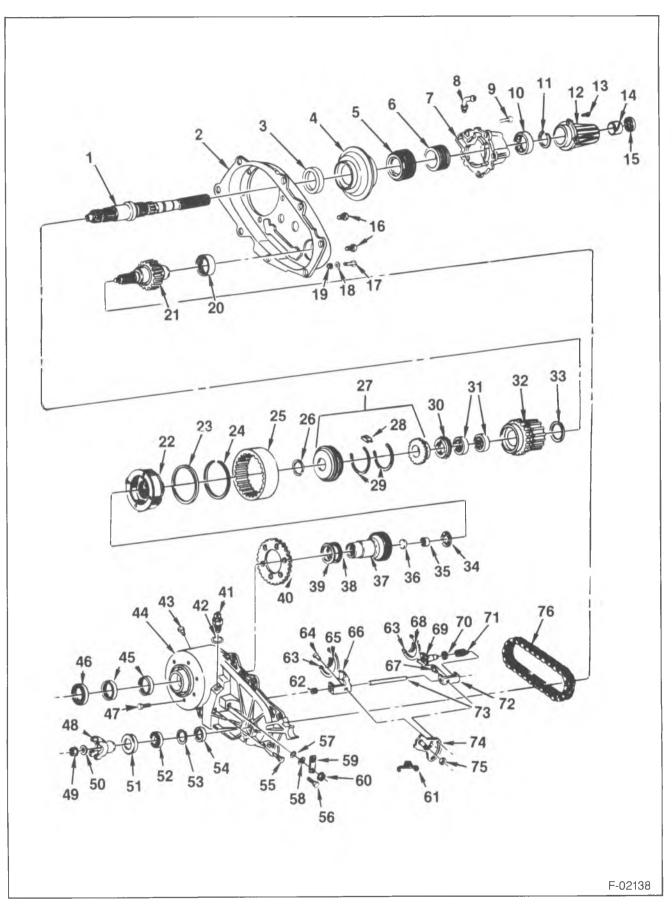


Figure 1—New Process 207 Transfer Case

NEW PROCESS 207 TRANSFER CASE 7D2-3

- 1. Main Drive Shaft
- 2. Case Housing
- 3. Oil Pump Housing Seal
- 4. Oil Pump Housing
- 5. Oil Pump
- 6. Speedometer Drive Gear 7. Main Shaft Rear Bearing
- Retainer 8. Case Vent Connector
- 9. Bolt
- 10. Main Shaft Rear Bearing
- 11. Retaining Ring
- 12. Main Shaft Extension
- Housing
- 13. Bolt
- 14. Bushing
- 15. Oil Seal
- 16. Plug Fill or Drain
- 17. Bolt
- 18. Alignment Dowel Washer 47. Bolt
- 19. Alignment Dowel
- 20. Front Output Shaft Pilot Bearing
- 21. Front Output Shaft
- 22. Planet Gear Carrier Assembly
- 23. Thrust Washer
- 24. Retainer Ring
- 25. Annulus Gear
- 26. Synchronizer Retaining
- Rina
- 27. Synchronizer Assembly
- 28. Synchronizer Strut
- 29. Strut Spring

- 30. Stop Ring
- 31. Sprocket Bearing
- 32. Sprocket
- 33. Sprocket Thrust Washer
- 34. Input Main Drive Gear Thrust Washer
- 35. Input Drive Gear Pilot Bearing
- 36. Cup Plug
- 37. Input Main Drive Gear Assembly 70. Fork Spring Cup
- 38. Input Drive Gear Thrust Bearing
- 39. Input Drive Gear Thrust Bearing
 - Washer
- 40. Low Range Lock Plate
- 41. Indicator Lamp Switch
- 42. Indicator Lamp Switch Seal
- 43. Oil Access Hole
- 44. Case Housing (Front Half)
- 45. Input Drive Gear Bearing
- 46. Input Drive Gear Seal
- 48. Yoke
- 49. Yoke Nut
- 50. Yoke Washer (Rubber)
- 51. Yoke Deflector
- 52. Front Output Shaft Seal
- 53. Bearing Retainer Ring
- 54. Front Output Shaft Bearing
- 55. Shift Sector Spring Screw
- 56. Shift Lever Stop Bolt
- 57. Oil Seal
- 58. Shift Sector and Shaft Retainer
- 59. Shifter Shaft Lever
- 60. Nut
- 61. Shift Sector Detent Spring

62. Range Fork Bushing

- 63. Fork End Pad
- 64. Range Shift Fork Pin
- 65. Fork Center Pad
- 66. Range Shift Fork
- 67. Mode Shift Fork Bracket Pin
- 68 Mode Shift Fork Center Pad
- 69. Mode Shift Fork
- 71. Fork Spring
- 72. Mode Shift Fork Bracket Assembly
- 73. Shift Fork Shaft
- 74. Shift Sector
- 75. Shift Sector Shaft Spacer
- 76. Drive Chain

F-02140

Figure 2-New Process 207 Transfer Case

- J 33367 Bearing Cup Puller Bridge
- J 33826 Rear Output Bushing Installer and Mainshaft Sprocket Bearing Remover
- J 33839 Rear Output Bushing Remover
- J 33841 Input Drive Gear Roller Bearing Remover
- 1. Fill plug (16) and drain plug.
- 2. Yoke nut (49). Discard the nut.
- 3. Yoke (48).
- 4. Yoke seal washer (50). Discard the washer.
- · Position the transfer case on end.
- · Position the front case on wood blocks.
- · Shift the transfer case to 4 Lo.
- 5. Extension housing attaching bolts (13).
 - Tap the shoulder with a soft hammer on the extension housing to break the sealer loose (figure 3).
- 6. Extension housing (12).
- 7. Snap ring (11) for the rear bearing (10) from the main shaft (1). Discard the snap ring (figure 4).
- 8. Rear retainer attaching bolts (9).

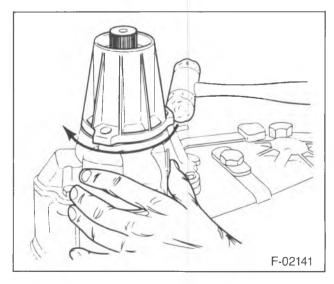


Figure 3—Extension Housing Removal

7D2-4 NEW PROCESS 207 TRANSFER CASE

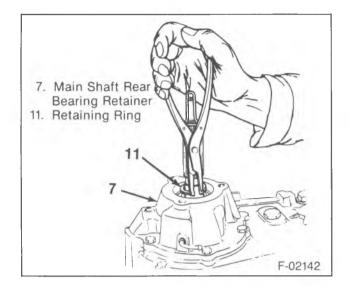


Figure 4—Rear Output Bearing Retaining Ring Removal

- Using a hammer, tap the shoulder on the retainer to break the sealer loose (figure 5).
- 9. Rear retainer (7) from the case.
- 10. Pump housing (4) from the case.
- 11. Pump seal (3) from the pump housing (4). Discard the seal.
- 12. Case halves retaining bolts (17).
- 13. Rear case (2) from the front case (44).
 - Insert screwdrivers into the slots casted in the case ends. Pry upward (figure 6).
- 14. Front output shaft (21) and drive chain (76) as an assembly.
 - Raise the mainshaft slightly for the output shaft to clear the case.
- 15. Mode fork shaft (73) from the transfer case.
 - Pull up on the shaft until the shaft clears the range fork (figure 7).
 - Rotate the mode fork and shaft (69) and remove the assembly from the transfer case.
- 16. Main drive shaft (1).

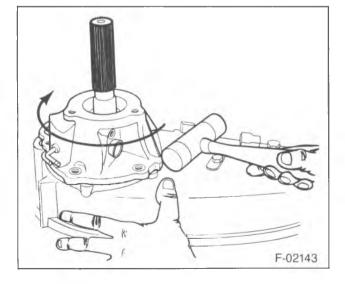


Figure 5—Rear Retainer Removal

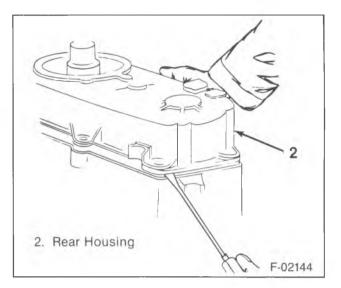


Figure 6—Rear Housing Removal

- Pull up on the drive shaft until it separates from the planetary assembly.
- Remove the drive shaft from the transfer case (figure 8).
- 17. Planetary assembly with the range shift fork (66) from the transfer case (2) (figure 9).
- 18. Main drive gear thrust washer (34).
- 19. Main drive gear (37).
- 20. Input gear thrust bearing (38).
- 21. Front thrust washer (39) (figure 10).
- 22. Shift sector detent spring retaining screw (55).
- 23. Shift sector detent spring (61).
- 24. Nut (60).
- 25. Shift shaft lever (59).
- 26. Retainer (58).
- 27. Seal (57).
- 28. Shift sector (74) (figure 11).
- 29. Spacer (75).
- 30. Locking plate retaining bolts (47).
- 31. Lock plate (40) (figure 12).

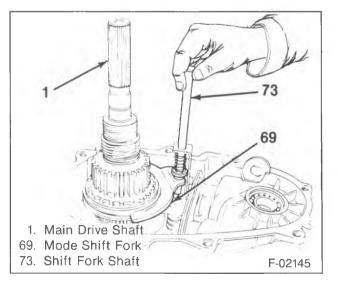


Figure 7—Shift Shaft Removal

NEW PROCESS 207 TRANSFER CASE 7D2-5

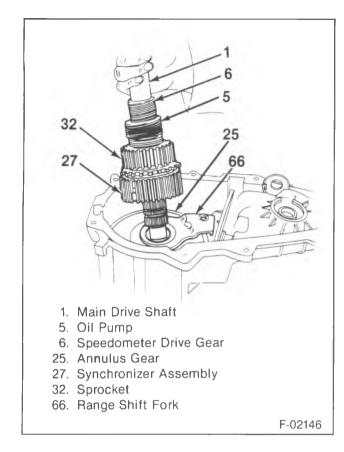


Figure 8—Main Drive Shaft Removal

- 32. Input gear pilot bearing (35), using J 29369-1 with a slide hammer (figure 13).
- 33. Front output shaft seal (52).
- 34. Input gear seal (46).
- 35. Rear extension seal (15).
- 36. Input drive gear caged roller bearings (45).
 - Use J 33841 with J 8092. Press out the bearings (figure 14).
- 37. Front output shaft rear bearing (20).

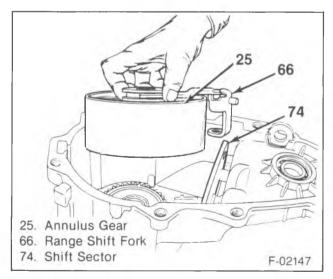


Figure 9—Planetary Gear and Range Fork Removal

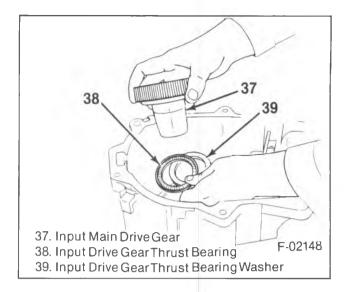


Figure 10—Input Gear and Bearing Removal

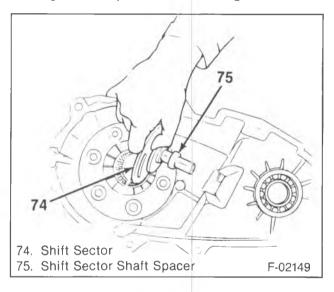


Figure 11—Shift Sector Removal

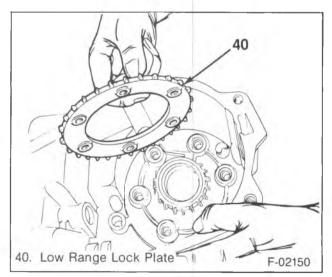


Figure 12—Low Range Lock Plate Removal

7D2-6 NEW PROCESS 207 TRANSFER CASE

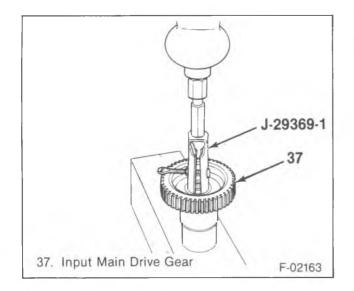


Figure 13—Input Gear Pilot Bearing Removal

Use J 29369-2 with J 33367 (figure 15).

- Rear mainshaft bearing (10) from the rear retainer
 using a hammer and a drift.
- **39**. Front output shaft bearing retaining snap ring (53), using a screwdriver (figure 16).
- 40. Front output shaft bearing (54), using a hammer and drift.
- 41. Extension housing bushing (14).
 - Use J 33839 with J 8092. Press the bushing out (figure 17).

MAINSHAFT ASSEMBLY

Remove or Disconnect (Figures 1, 2 and 18)

Tools Required:

- J 8092 Driver Handle
 - J 33826 Mainshaft Sprocket Bearing Remover
- 1. Speedometer gear (6).
- 2. Pump gear (5) from the mainshaft (1).

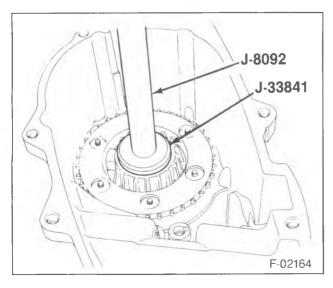


Figure 14—Input Gear Front Bearing Removal

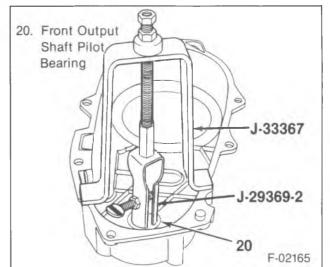


Figure 15—Front Output Shaft Rear Bearing Removal

- 3. Synchronizer hub retaining snap ring (26) from the mainshaft.
- 4. Synchronizer hub (27) from the mainshaft.Tap the hub off with a brass hammer.
- 5. Drive sprocket (32)
- 6. Thrust washer (33)
- Caged roller bearings (31) from the drive sprocket (32), using J 33826 and J 8092 (figure 18).
- 8. Synchronizer keys (28) from the synchronizer hub.
- 9. Retaining rings (29) from the synchronizer hub (27).

PLANETARY GEAR



Remove or Disconnect (Figure 1, 2, and 19)

- 1. Snap ring (24) retaining the planetary gear (22) in the annulus gear (25).
- 2. Outer thrust ring (23). Discard.
- 3. Planetary gear (22) from the annulus gear (25).

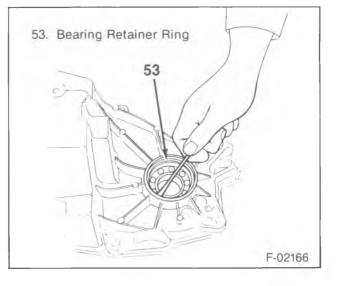


Figure 16—Front Output Shaft Front Bearing Retainer Ring Removal

NEW PROCESS 207 TRANSFER CASE 7D2-7

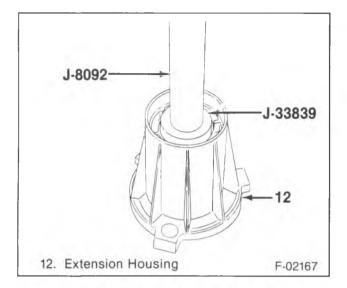


Figure 17—Extension Housing Bushing Removal

4. Inner thrust ring (23) from the planetary assembly. Discard the ring.

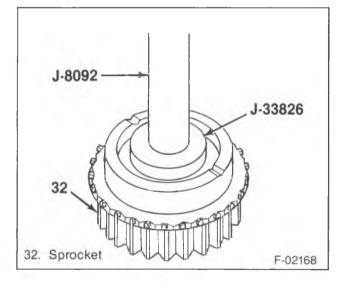


Figure 18—Drive Sprocket Bearing Removal

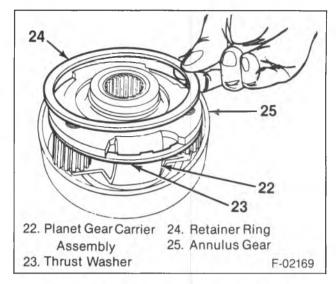


Figure 19—Planetary Gear Thrust Rings

7D2-8 NEW PROCESS 207 TRANSFER CASE

CLEANING AND INSPECTION

ASSEMBLY

🕎 Clean

- 1. Bearings and rollers.
 - Remove all old lubricant and dirt.
- 2. Shafts and gears.
 - Remove all old lubricant and dirt.
- 3. Transfer case.
 - Remove all old lubricant and dirt. Apply compressed air to each oil feed port and channel in each case half to remove obstructions or cleaning solvent residue.
 - · Remove all traces of gaskets and sealers.

Inspect

- Bearings and thrust washers for wear, spalling, brinneling, or corrosion.
- A. Shoulder up for front bearing.

Figure 20—Drive Sprocket Front Bearing Installation

PLANETARY GEAR

++ Install or Connect (Figures 1, 2, and 19)

- 1. Inner thrust ring (23) on the planetary assembly (22).
- 2. Planetary assembly (22) into the annulus gear (25).
- 3. Outer thrust ring (23).
- 4. Snap ring (24).

MAINSHAFT

Install or Connect (Figures 1, 2, 20, and 21)

Tools Required:

- J 33828 Front Drive Sprocket Bearing Installer J 8092 Driver Handle
- Front drive sprocket bearing (31) into the sprocket (32), using J 33828 and J 8092 (figure 20).

- 2. Rollers for wear, spalling or corrosion.
- 3. Shaft splines for excessive wear, chipped teeth, or cracks.
- 4. Shafts for wear, corrosion, cracks, or damage.
- 5. Gears for excessive wear, chipped teeth, spalling, cracks, or corrosion.
- 6. Case halves for cracks, porosity, damaged or warped mating surfaces, stripped or damaged threaded holes, and damaged bearing bores.
- 7. Bearing bores in the input gear, rear output shaft and rear retainers for damage.
- 8. Low range lock plate teeth for cracks, chipped teeth, or excessive wear.

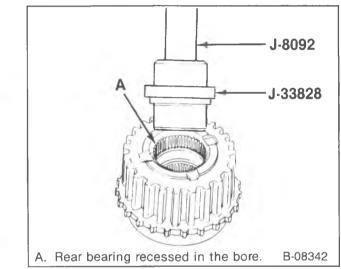


Figure 21—Drive Sprocket Rear Bearing Installation

- Press the bearing until the tool bottoms out. The bearing should be flush with the front surface.
- Rear drive sprocket bearing (31) into the sprocket (32), using J 33828 and J 8092 (figure 21).
 - Reverse J 33828.
 - Press the bearing into the sprocket until the tool bottoms out. The rear bearing should be recessed after installation.
- 3. Thrust washer (33) on the mainshaft (1).
- 4. Drive sprocket (32) on the mainshaft.
- 5. Block ring (30) on the mainshaft.
- 6. Synchronizer assembly (27) on the mainshaft.
- 7. New snap ring (26) on the main shaft.
- 8. Pump gear (5). Tap the gear with a soft hammer to seat it on the mainshaft.
- 9. Speedometer gear (6) on the mainshaft.

NEW PROCESS 207 TRANSFER CASE 7D2-9

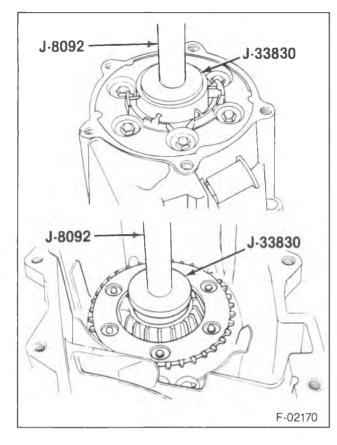


Figure 22—Input Gear Bearing Installation

TRANSFER CASE

 Bearings must be aligned with the bearing oil feed holes.

Install or Connect (Figures 1 and 2)

Tools Required:

++

- J 8092 Driver Handle
- J 33826 Rear Output Bushing Installer
- J 33829 Pllot Bearing Installer
- J 33830 Front Input Bearing Installer
- J 33831 Input Seal Installer
- J 33832 Front Output Rear Bearing Installer
- J 33833 Output Main Bearing Installer
- J 33834 Front Output Seal Installer
- J 33835 Pump Housing Seal Installer
- J 33843 Extension Housing Seal Installer
- 1. Lock plate (40) in the transfer case.
 - · Coat the case and the lock plate surfaces around the bolt holes with Locktite 515 or equivalent.
- 2. Lock plate retaining bolts (47).

된 Tighten

- Bolts to 35 N m (25 ft. lbs.).
- 3. Input gear roller bearings (45) into the transfer case using J 33830 and J 8092. Press the bearings until the tool bottoms in the bore (figure 22).
- 4. Front output shaft rear bearing (20) using J 33832 and J 8092. Press the bearing until the tool bottoms in the case (figure 23).

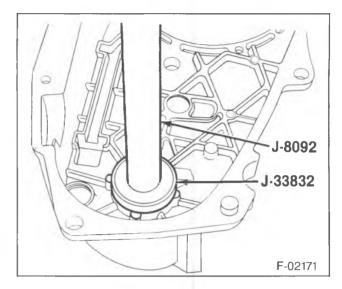


Figure 23—Front Output Shaft Rear Bearing Installation

- 5. Front output shaft front bearing (54) using J 33833 and J 8092. Press the bearing until the tool bottoms in the bore.
- 6. Front output shaft bearing retaining snap ring (53) in the case.
- 7. Front output shaft seal (52) using J 33834 (figure 24).
- 8. Input main drive gear seal (46), using J 33831.
- 9. Spacer (75) on the shift sector shaft.
- 10. Shift sector (74) in the transfer case.
- 11. Oil seal (57).
- 12. Retainer (58)
- 13. Shifter lever (59).
- 14. Nut (60).
 - 된 Tighten
 - Nut to 24 N·m (18 ft. lbs.).
- 13. Shift sector detent spring (61).
- 14. Spring retaining screw (55).

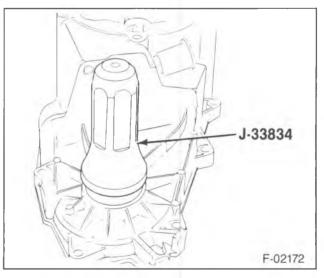


Figure 24—Front Output Shaft Seal Installation

7D2-10 NEW PROCESS 207 TRANSFER CASE

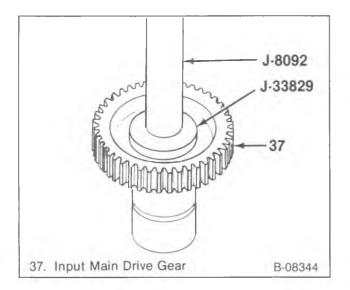


Figure 25—Input Main Drive Gear Pilot Bearing Installation

- Pilot bearing (35) into the input gear (37) using J 33829 and J 8092. Press the bearing until the tool bottoms out (figure 25).
- 16. Input gear front thrust bearing (38 and 39) in the transfer case.
- 17. Input gear (37) in the transfer case.
- Planetary gear thrust washer (34) on the input gear (37).
- 19. Range fork (66) on the planetary assembly.
- 20. Planetary assembly into the transfer case.
- 21. Mainshaft (1) into the transfer case.
 - Make sure the thrust washer is aligned with the input gear and planetary assembly before installing the mainshaft.
- Mode fork (69) on the syunchronizer sleeve (27). Rotate until the mode fork is aligned with the range fork.
- 23. Shift fork shaft (73). Slide the mode fork rail down through the range fork until the shaft is seated in the bore of the transfer case.
- 24. Drive chain (76) on the front output shaft (21) and the drive sprocket (32).
- 25. Front output shaft (21) in the transfer case. Slightly raise the mainshaft to seat the output shaft in the case.
- 26. Magnet into the pocket in the transfer case.
- 27. Rear case (2) on the front case (44).
 - Apply a 3 mm (1/8-inch) bead of Loctite 515 or equivalent to the mating surface of the front case.
 - Align the rear case to the front case aligning dowel pins.
- 28. Case bolts (17).
 - Install the two bolts with washers into the dowel pin holes (figure 26).



- Bolts to 31 N m (23 ft. lbs.).
- 29. Output bearing (10) into the rear retainer (7) using J 33833 and J 8092. Press the bearing until its seated in the bore (figure 27).

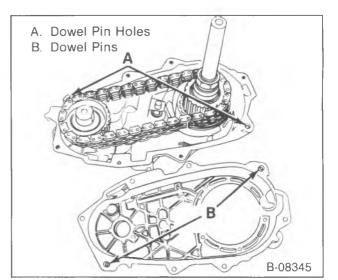


Figure 26—Dowel Pin Location

- Pump seal (3) in the pump housing (4) using J 33835 (figure 28).
- 31. Pump housing (4) in the rear retainer (7).
 - Apply petroleum jelly to the pump housing tabs before installation.
- 32. 3 mm (1/8-inch) of Loctite 515 or equivalent to the mating surface of the rear retainer.
- 33. Retainer (7) to the case.
- 34. Retainer bolts (9).

र्श्त Tighten

- Bolts to 24 N m (18 ft. lbs.).
- 35. New snap ring (11) on the main shaft.
 - Pull up on the main shaft and seat the snap ring in its groove.
- Bushing (14) in the extension housing (12) using J 33826 and J 8092. Press the bushing in until the tool bottoms in the bore.
- 37. New seal (15) in the extension housing (12), using J 33843.

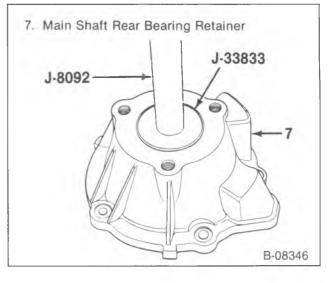


Figure 27—Rear Output Shaft Bearing Installation

NEW PROCESS 207 TRANSFER CASE 7D2-11

- 38. 3 mm (1/8-inch) of Loctite 515 or equivalent to the mating surface of the extension housing (12).
- 39. Extension housing (12) to the rear retainer (7).
- 40. Extension housing retaining bolts (13).

री Tighten

- Bolts to 31 N m (23 ft. lbs.).
- 41. New front yoke seal washer (50) in the yoke (48).
- 42. Front yoke (48).
- 43. New yoke nut (49).

री Tighten

• Nut to 150 N m (110 ft. lbs.).

44. Drain plug (16) and fill plug (16).

Tighten

• Plugs to 47 N m (35 ft. lbs.).


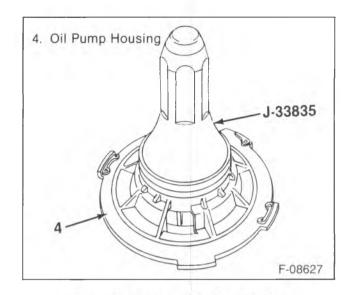


Figure 28—Oil Pump Seal Installation

SPECIFICATIONS

NEW PROCESS 207 TRANSFER CASE

	N:m	FT. LBS.
Bolt—Locking Plate to Transfer Case	34	25
Nut — Front Output Yoke	150	110
Switch — Vacuum	27	20
Nut — Shift Lever	24	18
Bolt — Transfer Case	31	23
Bolt — Rear Retainer	24	18
Bolt — Extension Housing	31	23
Plug — Drain, Fill	47	35
Bolt — Adapter to Transfer Case	33	24
Bolt - Shift Bracket	75	55
Bolt — Shift Lever Pivot	130	96
Bolt — Shift Lever Adjusting	41	30
Lubricant: Dexron* II	4.7 Pints	

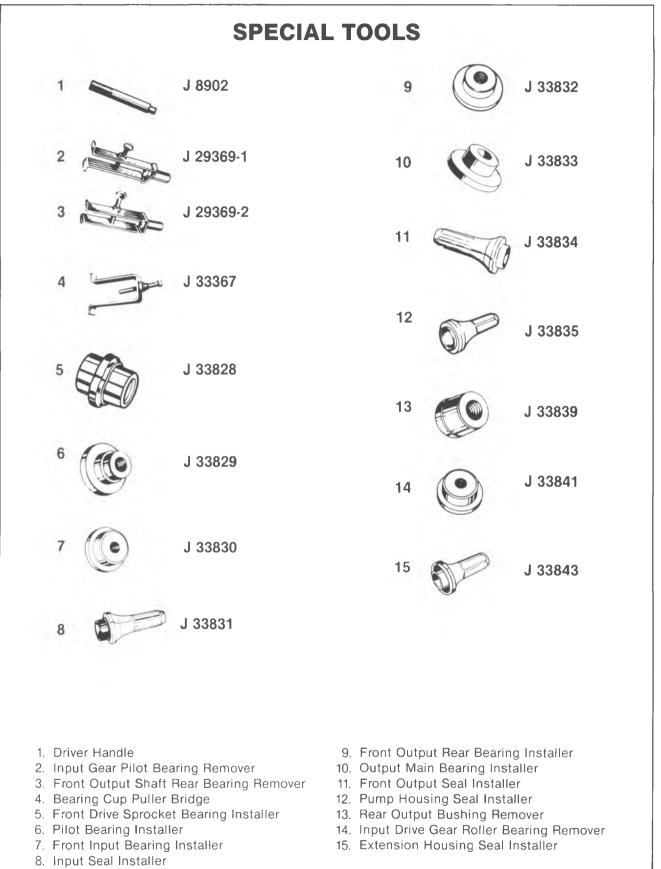

F-05810

PAGE

SECTION 7D3

NEW PROCESS 208 TRANSFER CASE

CONTENTS

SUBJECT

DESCRIPTION

The Model 208 transfer case is an aluminum case, chain drive, four position unit providing four-wheel drive high and low ranges, a two-wheel high range, and a neutral position. The model 208 is a part-time four-wheel drive unit. Torque input in four-wheel high and low ranges is undifferentiated. The range positions on the Model 208 are selected by a floor mounted gearshift lever.

The model 208 case is a two-piece aluminum case containing front and rear output shaft, two drive sprockets, a shift mechanism and a planetary gear assembly. The drive sprockets are connected and operated by the drive chain. The planetary assembly which consists of a four pinion carrier and an annulus gear provide the four-wheel drive low range when engaged. Reduction ratio is 2.61:1 in this range.

IDENTIFICATION

An identification tag is attached to the rear half of the transfer case. This tag provides the transfer case model number, low range reduction ratio, and assembly number. The information on this tag is necessary for servicing information. If the tag is removed or becomes dislodged during service operations, it should be reattached using an adhesive sealant such as Loctite 312, or equivalent.

POWER FLOW

In all drive range positions input torque is transmitted to the transfer case gear train through the transfer case input gear. In 2H range, torque flows from the input gear to the planetary assembly and annulus gear which rotates as a unit. Torque is transferred to the mainshaft through the planetary carrier which is splined to the mainshaft. Torque flow continues through the mainshaft and rear yoke which is splined to the mainshaft, and finally to the rear propeller shaft and axle. In 2H range, the sliding clutch remains in a neutral position and does not lock the drive sprocket to the mainshaft. As a result, torque is not transferred to the driven sprocket.

In 4H range, input torque from the input gear is transmitted through the planetary and annulus gear and through the mainshaft in exactly the same fashion as in 2H range. However, in 4H position, the sliding clutch is shifted forward and into engagement with the mainshaft clutch gear. This locks ine drive sprocket to the mainshaft through the sliding clutch. Torque is not transmitted through the sliding clutch. Torque is not transmitted through the drive sprocket to the driven sprocket by the connecting drive chain. Since the front output shaft is splined to the driven sprocket, torque now flows through the front output shaft to the front propeller shaft and axle resulting in high range four-wheel drive.

In 4L range, the path of torque through the transfer case is exactly the same as in 4H range but with one major difference. In 4L range, the annulus gear is shifted forward and into engagement with the lock plate. Since the lock plate is fixed in the case, the annulus gear is held stationary and does not rotate. This causes the planetary pinions to rotate about the annulus gear internal teeth producing a gear reduction ratio of 2.61:1.

DISASSEMBLY

EXTERNAL COMPONENTS

Clean

 The transfer case exterior using a solvent and a stiff brush.

←→ Remove or Disconnect (Figures 1 and 2)

- 1. Fill plug (15).
- 2. Drain plug (15).
- 3. Front yoke nut (61). Discard.
- 4. Front yoke (63).
- 5. Yoke seal washer (62).
 - Turn the transfer case on end. Position the front case on wood blocks. Cut "V" notches in the wood blocks to clear the mounting studs in the front case.
- 6. Indicator lamp switch (53) and washer.
- 7. Poppet screw (60).
- 8. Poppet screw spring (59).
- 9. Range section plunger (58).

MAINSHAFT EXTENSION

+> Remove or Disconnect (Figures 1 and 2)

- 1. Extension bolts (14).
- 2. Mainshaft extension (9) and pump housing (6) as an assembly.
 - Tap the retainer from the case using a plastic mallet. Do not pry.
- 3. Pump housing (6) from the retainer (9).
- 4. Pump seal (5) from the housing. Discard the seal.
- 5. Speedometer drive gear (2) from the mainshaft (1).
- 6. Oil pump gear (7) from the mainshaft (1).
 - Note the position of the pump for assembly reference. The side facing the case interior has a recess in it.

INTERNAL COMPONENTS

←→ Remove or Disconnect (Figures 1, 2, and 3)

- 1. Case bolts (4).
- 2. Rear case (3) from the front case (54).
 - Insert screwdrivers into the slots cast in the case ends and gently pry upward. Do not attempt to wedge the case halves apart at any point on the mating surfaces.
- 3. Front output shaft rear thrust bearing assembly (71, 70 and 69).
 - Note the position of the bearing and races for assembly reference.
- 4. Driven sprocket retainer ring (74).
- 5. Drive sprocket retainer ring (35).
- 6. Thrust washer (34).
- 7. Drive sprocket (33), driven sprocket (73) and drive chain (75) as an assembly (figure 3).
 - Lift evenly on both sprockets to remove the assembly. The mainshaft roller bearings may drop out of the drive sprocket.

- 8. Front output shaft (72) and front thrust bearing assembly (69, 70, and 71)
- 9. Synchronizer stop ring (30)
- Synchronizer (27), mode fork bushings (43 and 42), mode fork (44) and bracket (38) as an assembly. The synchronizer keys may fall free from the hub.
- 11. Shifter fork shaft (41).
- Mainshaft (1) with the synchronizer hub and retainer ring (26) attached.
- 13. Annulus gear snap ring (25).
- 14. Thrust washer (23).
- 15. Annulus gear (22) and range fork (36) as an assembly.
 - Turn the fork to the left in order to disengage the fork lug from the range sector and lift the assembly out of the case.
- 16. Planetary thrust washer (21).
- 17. Planetary assembly (20).
- Mainshaft thrust bearing (46) from the input gear (49).
- 19. Input gear (49).
 - Lift the gear straight up and out of the case.
- 20. Input gear thrust bearing (50) and race (51).
 - Note the position of the bearing and the race for assembly reference.
- 21. Range sector operating lever attaching nut (81) and washer (80).
- 22. Lever (79).
- 23. Sector shaft seal (68).
- 24. Seal retainer (67).
- 25. Range sector (52).
- 26. Front output shaft seal (65).
- 27. Input gear seal (56).
- 28. Lock plate attaching bolts (55).
- 29. Lock plate (19) from the case.

FRONT AND REAR BEARINGS

Tools Required:

- J 2619-01 Slide Hammer
- J 8092 Driver Handle
- J 26941 Front Output Shaft Rear Bearing Remover
- J 29168 Front Output Shaft Front Bearing Remover J 29170 Input Gear Front and Rear Bearing Remover
- J 29369-1 Input Drive Gear Pilot Bearing Remover

Remove or Disconnect (Figures 4 through 7)

- Mainshaft rear bearing (8) from mainshaft extension (9). Use a brass drift and mallet.
- 2. Rear seal (12). Use a brass drift.
- 3. Front output shaft front bearing (66) using J 8092 and J 29168 (figure 4).
- Front output shaft rear bearing (76) using J 26941 and J 2619-01 (figure 5).
- 5. Input gear front/rear bearing (57) using J 8092 and J 29170 (figure 6).
- 6. Input drive gear pilot bearing using J 2619-01 and J 29369-1 (figure 7).

7D3-4 NEW PROCESS 208 TRANSFER CASE

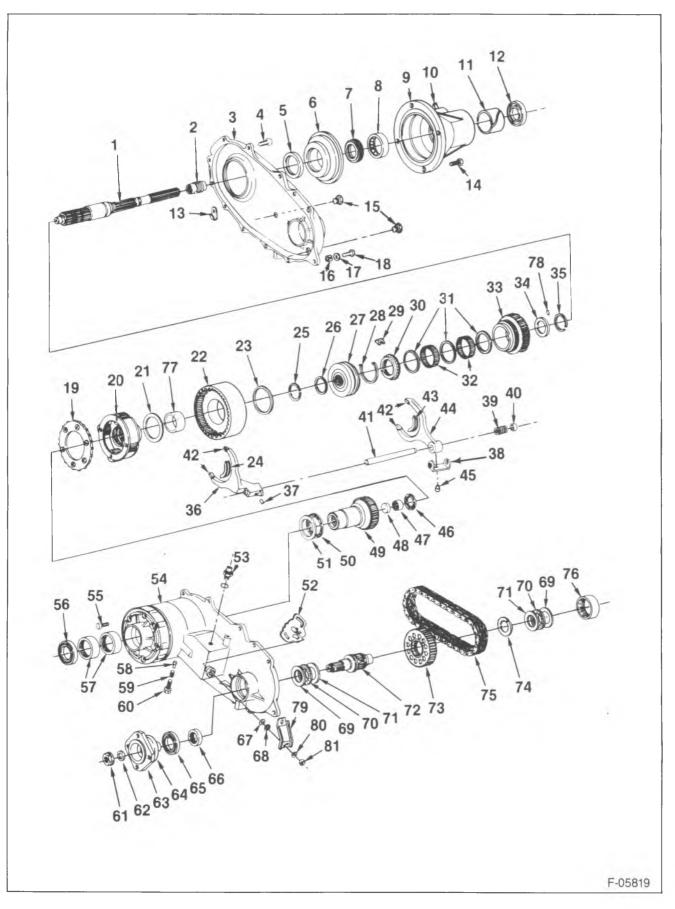


Figure 1—New Process 208 Transfer Case

- 1. Main Driveshaft
- 2. Speedometer Drive Gear
- 3. Rear Housing

4. Bolt

- 5. Oil Pump Seal
- 6. Oil Pump Housing
- 7. Oil Pump Gear
- 8. Main Shaft Rear Bearing
- 9. Main Shaft Extension
- 10. Vent Pipe
- 11. Main Shaft Extension Bushing
- 12. Main Shaft Extension Seal
- 13. Indicator Switch Wire Clip

14. Bolt

- 15. Oil Fill/Drain Plug & Gasket
- 16. Alignment Dowel
- 17. Dowel Washer

18. Bolt

- 19. Low Range Lock Plate
- 20. Planetary Gears Carrier
- 21. Planetary Gear Thrust Washer
- 22. Annulus Gear
- 23. Annulus Gear Thrust Washer
- 24. Range Fork Center Pad
- 25. Annulus Gear Retainer Ring
- 26. Synchronizer Retainer Ring
- 27. Synchronizer
- 28. Synchronizer Strut Spring
- 29. Synchronizer Shift Strut
- 30. Synchronizer Stop Ring
- 31. Sprocket Roller Spacer
- 32. Sprocket Rollet
- 33. Sprocket
- 34. Drive Sprocket Thrust Washer
- 35. Drive Sprocket Retainer Ring
- 36. Range Fork
- 37. Range Fork Shift Pin
- 38. Mode Fork and Spring Retainer
- 39. Mode Fork Shifter Spring
- 40. Mode Fork Spring Cup
- 41. Shifter Fork Shaft

- 42. Fork End Pad
- 43. Mode Fork Center Pad
- 44. Mode Fork
- 45. Mode Fork Shifter Pin
- 46. Input Drive Gear Thrust Bearing
- 47. Input Drive Gear Pilot Bearing
- 48. Input Drive Gear Plug
- 49. Input Drive Gear
- 50. Input Drive Gear Thrust Bearing
- 51. Input Drive Gear Thrust Washer
- 52. Range Sector, with Shaft
- 53. Indicator Lamp Switch and Washer
- 54. Front Housing
 - 55. Lock Plate Bolt
 - 56. Input Drive Gear Seal
 - 57. Input Drive Gear Bearing
 - 58. Range Sector Plunger
 - 59. Poppet Screw Spring
 - 60. Poppet Screw
 - 61. Front Output Yoke Nut
 - 62. Front Output Yoke Seal Washer
 - 63. Yoke
 - 64. Yoke Deflector
 - 65. Front Output Shaft Seal
 - 66. Front Output Shaft Bearing
 - 67. Range Sector Shaft Oil Seal
 - 68. Sector and Shaft Retainer
- 69. Outer Thrust Washer
- 70. Thrust Bearing
- 71. Inner Thrust Washer
- 72. Front Output Shaft
- 73. Sprocket
- 74. Driven Sprocket Retainer Ring
- 75. Drive Chain
- 76. Front Output Shaft Pilot Bearing
- 77. Annulus Gear Hub Bushing
- 78. Dowel Pin
- 79. Lever
- 80. Washer
- 81. Nut

7D3-6 NEW PROCESS 208 TRANSFER CASE

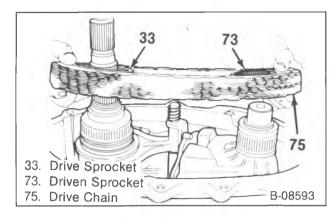


Figure 3—Sprocket and Chain Removal

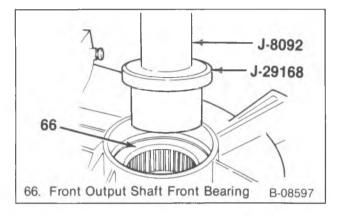


Figure 4—Front Output Shaft Front Bearing Removal

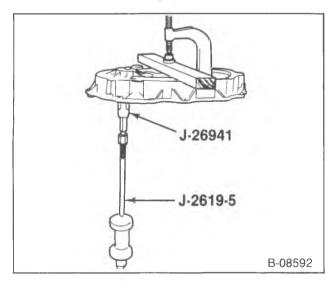
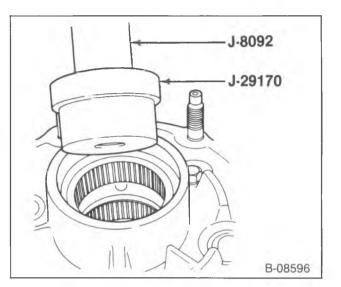


Figure 5—Front Output Shaft Rear Bearing Removal





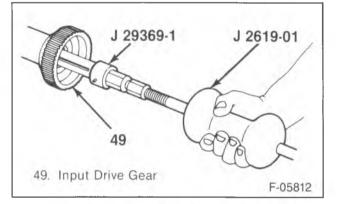


Figure 7—Main Shaft Pilot Bearing Removal

CLEANING AND INSPECTION

Clean

- 1. Bearings.
 - Remove all old lubricant and dirt.
- 2. Shafts.
- 3. Sprockets.
- 4. Chain.
- Oil feed ports and channels in each case half. Apply compressed air to each oil feed port and channel in order to remove any obstructions or cleaning solvent residue.

Inspect

16

1. Bearings and thrust washers for wear, spalling, brinneling, or corrosion.

- 2. Gear teeth for excessive wear or damage, spalling, cracks, or corrosion.
- 3. Gear splines for excessive wear, spalling, cracks, twist or corrosion.
- 4. Shaft splines for excessive wear, spalling, cracks, distortion or corrosion.
- 5. Retainer rings for excessive wear, distortion or damage.
- 6. Case halves for damaged or warped mating surfaces, cracks, porosity, or damaged threaded holes.
- 7. Lock plate teeth for cracks, chips, spalling, or excessive wear.
- 8. Lock plate hub for cracks or distortion.

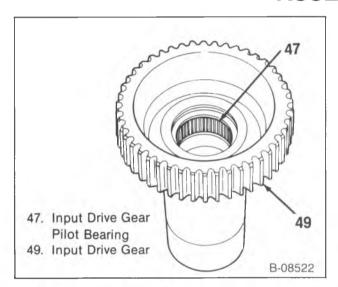


Figure 8—Main Shaft Pilot Bearing Installation

FRONT AND REAR BEARINGS

Install or Connect (Figures 8 through 12)

Tools Required:

- J 8092 Driver Handle
- J 29174 Mainshaft Bearing Installer
- J 29169 Input Gear Bearing Installer
- J 29163 Front Output Shaft Rear Bearing
- Installer J 29167 Front Output Shaft Front Bearing Installer
- J 29162 Extension Oil Sealer Installer
- J 7818 Rear Output Bearing Installer
- 1. Input drive gear pilot bearing (47) using J 8092 and J 29174 (figure 8).

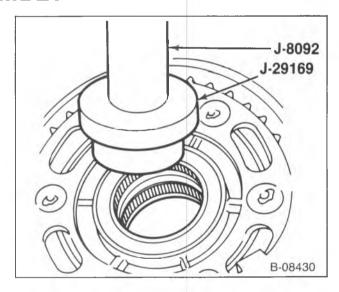


Figure 9—Input Gear Bearing Installation

- Check that the oil feed hole is not covered.
- Make sure the bearing is seated flush with the edge of the oil hole.
- 2. Input gear rear bearing (57) using J 8092 and J 29169 (figure 9).
- 3. Input gear front bearing (57) using J 8092 and J 29169.
- 4. Front output shaft pilot bearing (76) using J 8092 and J 29163 (figure 10).
 - · Check that the oil feed hole is not covered.
 - The bearing is seated flush with the edge of the case bore to allow room for the thrust bearing assembly.
- 5. Front output shaft front bearing (66) using J 8092 and J 29167 (figure 11).
- 6. Mainshaft rear bearing (8) using J 8092 and J 7818 (figure 12).

ASSEMBLY

7D3-8 NEW PROCESS 208 TRANSFER CASE

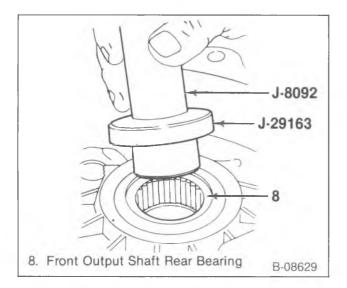


Figure 10—Front Output Shaft Rear Bearing Installation

• The shielded side of the bearing faces the interior of the case.

INTERNAL COMPONENTS

Install or Connect (Figures 1, 2, and 13)

- 1. Lock plate (19).
 - Coat the case and the lock plate surfaces around the bolt holes with Loctite 515 sealant or equivalent.
 - · Position the new lock plate in the case.
 - · Align the bolt holes
- 2. Lock plate attaching bolts (55).
 - Coat the new lock plate attaching bolts with Loctite 271 sealant, or equivalent.

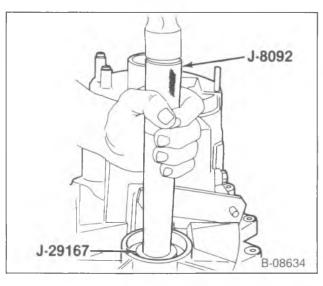


Figure 11—Front Output Shaft Front Bearing Installation

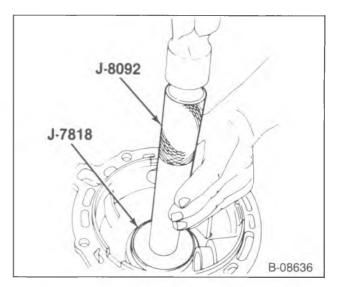


Figure 12—Rear Output Bearing Installation

री Tighten

- Bolts to 41 N m (30 ft. lbs.).
- 3. Input gear race (51) in the front case.
- 4. Thrust bearing (50).
- 5. Input gear (49).
- 6. Mainshaft thrust bearing (46) in the input gear (49).
- 7. Range sector (52).
- 8. Range sector shaft oil seal (67).
- 9. Range sector shaft retainer (68).
- 10. Operating lever (79) on the range sector shaft.
- 11. Shaft washer (80).
- 12. Lock nut (81). Tighten
 - Nut to 24 N m (18 ft. lbs.).
- 13. Planetary assembly (20) over the input gear (49). Be sure the planetary is fully seated and meshed with the gear (figure 13).
- 14. Planetary thrust washer (21) on the planetary hub (20).

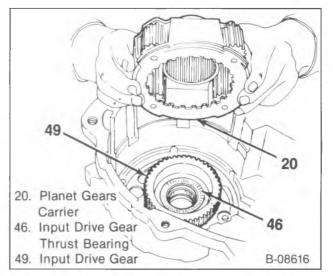


Figure 13—Input Gear, Mainshaft Thrust Bearing, and Planetary Gear Installation

- 15. Pads (42, 24) in the range fork (36).
- 16. Range fork (36) in the annulus gear (22).
- Annulus gear (22) over the planetary assembly (20). The range fork lug should be fully inserted in the range sector slot.
- 18. Annulus gear retainer ring (25).
- 19. Shift shaft (41).
 - Align the shaft bores in the case and range fork.
 - Install the shift shaft.
- 20. Mainshaft (1). The mainshaft thrust bearing (46) must be properly seated in the input gear before installing the mainshaft.
- 21. Synchronizer (27) and the mode fork (44) as an assembly. Position the synchronizer keys before installing the synchronizer.
- 22. Synchronizer stop ring (30).
- 23. Sprocket roller spacer (31).
- Coat the mainshaft with petroleum jelly.
- 24. First row of bearing rollers (32); 60 rollers in the row.
- 25. Sprocket roller spacer (31).
- 26. Second row of bearing rollers (32); 60 rollers in the row.
- 27. Sprocket roller spacer (31).
- Front output shaft front thrust bearing assembly (69, 70, 71) in the front case.
 - The installation sequence is: thick race, thrust bearing, and thin race. The thick race is next to the case.
- 29. Front output shaft (72).
- 30. Sprockets (73, 33) and the drive chain (75) as an assembly.
 - · Position the sprockets in the chain.
 - · Align the sprockets with the shafts.
 - Install the assembly. The drive sprocket is installed with the tooth side of the sprocket facing the case interior.
- 31. Drive sprocket thrust washer (34).
- 32. Sprocket retainer ring (35).
- 33. Driven sprocket retainer ring (74).
- Front output shaft rear thrust bearing assembly (69, 70, 71) on the front output shaft.
 - The sequence is thin race, thrust bearing, thick race. The thick race is next to the housing.
- 35. Oil pump gear (7) on the mainshaft. Be sure the recessed side of the pump faces downward toward the case interior.
- 36. Speedometer drive gear (2) on the mainshaft.
- 37. Magnet in the front case.
- 38. Spring (39) on the shift shaft (41).
- 39. Retainer (38) on the shaft shaft (41).
- 40. Loctite 515 sealant, or equivalent, to the mating surface of the front case.
- 41. Rear case (3) on the front case (54). The front output shaft rear thrust bearing assembly should be seated in the rear case.
- 42. Case bolts (4).
 - Align the case bolt holes and alignment dowels before installing the bolts.
 - Install flat washers (17) on the two bolts (18) installed at the opposite ends of the case.

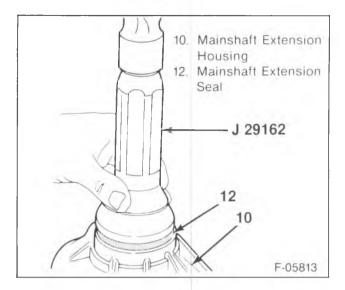


Figure 14—Rear Output Bearing Seal Installation

री Tighten

The bolts alternately and evenly to 31 N m (23 ft. lbs.).

MAINSHAFT EXTENSION

Tool Required:

J 29162 Rear Output Bearing Seal Installer

++ Install or Connect (Figure 1, 2, and 14)

- 1. Pump seal (5).
- 2. Petroleum jelly to the pump housing tabs.
- 3. Pump housing (6) in the main shaft extension (9).
- 4. Loctite 515 sealant, or equivalent, to the mating surface of the main shaft extension (9).
- 5. Main shaft extension (9).
 - Align the extension and case index marks before installing the extension.
- 6. Extension bolts (14).
 - री Tighten

Bolts to 31 N/m (23 ft. lbs.).

- 7. Extension oil seal (12) in the extension bore using J 29162 (figure 14).
 - Coat the seal lip with petroleum jelly before installing the seal.

EXTERNAL COMPONENTS

- 1. Washer on the indicator switch (53).
- 2. Indicator switch (53).
 - री Tighten
 - Switch to 24 N m (18 ft. lbs.).
- 3. Loctite 515 sealant to the poppet screw (60).
- 4. Range sector plunger (58), spring (59), and screw (60).

7D3-10 NEW PROCESS 208 TRANSFER CASE

री Tighten

Screw to 31 N·m (23 ft. lbs.).
5. Drain plug and gasket (15).



- Plug to 24 N m (18 ft. lbs.).
- 6. Front case output shaft oil seal (65) in the shaft bore.
- 7. Front yoke seal washer (62).

- 8. Front yoke (63)
- 9. Yoke nut (61).



• Nut to 163 N⁴m (120 ft. lbs.).


- 10. 10 pints of Dexron II into the transfer case.
- 11. Fill plug (15).
 - री Tighten
 - Plug to 24 N m (18 ft. lbs.).

SPECIFICATIONS

NEW PROCESS 208 TRANSFER CASE

	N m	FT. LBS.
Lock Plate Retaining Bolt	41	30
Range Sector Shaft Retaining Nut.	24	18
Transfer Case Bolts	31	23
Extension Bolts	31	23
Indicator Switch	24	18
Poppet Screw	31	23
Drain Plug	24	18
Front Yoke Nut.	163	120
Fill Plug	24	18
Lubricant: Dexron* II	10 Pints	

NEW PROCESS 208 TRANSFER CASE 7D3-11

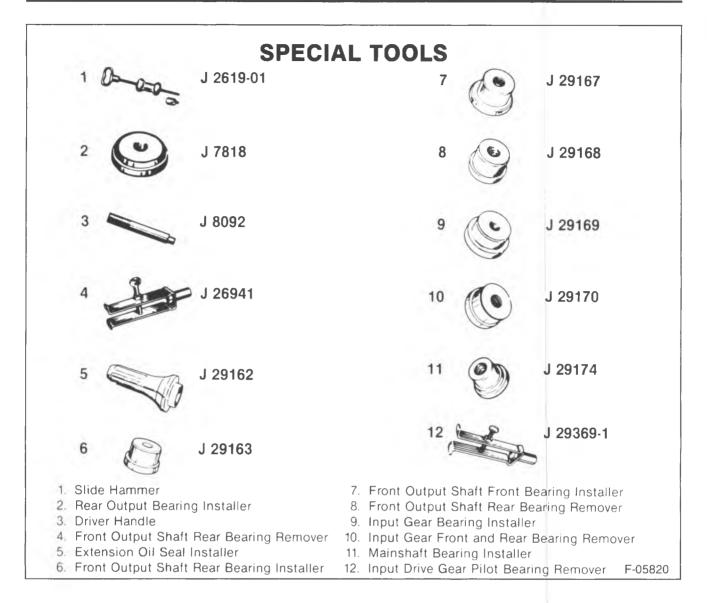

7D3-12 NEW PROCESS 208 TRANSFER CASE

PAGE

SECTION 7D4

NEW PROCESS 241 TRANSFER CASE

CONTENTS

New Process 241 Transfer Case	7D4- 1
Description	7D 4- 1
Disassembly of Transfer Case	7 D4- 4
External Components	7D4- 4
Mainshaft Extension and Oil Pump Housing	7D4- 4
Internal Components	7D 4- 4
Cleaning and Inspection	7D4- 7
Assembly	7D4- 8
Bearing and Seal Replacement.	7D4-8
Internal Components	7 D4- 9
External Components	7D4-10
Specifications	7D4-14
Special Tools	7D4-14

NEW PROCESS 241 TRANSFER CASE

DESCRIPTION

The Model 241 transfer case is an aluminum case, chain drive, four position unit providing four-wheel drive high and low ranges, a two-wheel high range, and a neutral position. The model 241 is a part-time four-wheel drive unit. Torque input in four-wheel high and low ranges is undifferentiated. The range positions on the Model 241 are selected by a floor mounted gearshift lever.

The case is a two-piece aluminum case containing front and rear output shafts, two drive sprockets, a shift mechanism and a planetary gear assembly. The drive sprockets are connected and operated by the drive chain. The planetary assembly which consists of a six pinion carrier and an annulus gear provide the four-wheel drive low range when engaged. Reduction ratio is 2.72:1 in this range (figures 1 and 2).

IDENTIFICATION

SUBJECT

An identification tag is attached to the rear half of the transfer case (figure 3). This tag provides the transfer case model number, low range reduction ratio, and assembly number. The information on this tag is necessary for servicing information. If the tag is removed or becomes dislodged during service operations, it should be reattached using an adhesive sealant such as Loctite 242, or equivalent.

POWER FLOW

In all drive range positions input torque is transmitted to the transfer case gear train through the transfer case input gear.

In 2H range, torque flows from the input gear to the range shift hub and main shaft. Torque flow continues through the slip yoke which is splined to the mainshaft, and finally to the rear propeller shaft and axle. In 2H

range, the mode synchronizer remains in the neutral position and does not lock the drive sprocket to the mainshaft. As a result, torque is not transferred to the driven sprocket.

In 4H range, input torque from the input gear is transmitted to the mainshaft in exactly the same fashion as in 2H range. However, in 4H position, the mode synchronizer sleeve is shifted into engagement with the clutch teeth of the drive sprocket. This locks the drive sprocket to the mainshaft through the synchronizer. Torque is transmitted through the drive sprocket to the driven sprocket by the connecting drive chain. Since the front output shaft is splined to the driven sprocket, torque flows through the front output shaft to the front propeller shaft and axle resulting in high range four-wheel drive.

In 4L range, the path of torque through the transfer case is exactly the same as in 4H range but with one major difference. In 4L range the range shift hub is shifted into engagement with the planetary carrier. This causes the input gear to rotate the planetary pinions inside the annulus gear, causing the planetary carrier, range shift hub and mainshaft to rotate at a gear reduction ration of 2.72:1.

7D4-2 NEW PROCESS 241 TRANSFER CASE

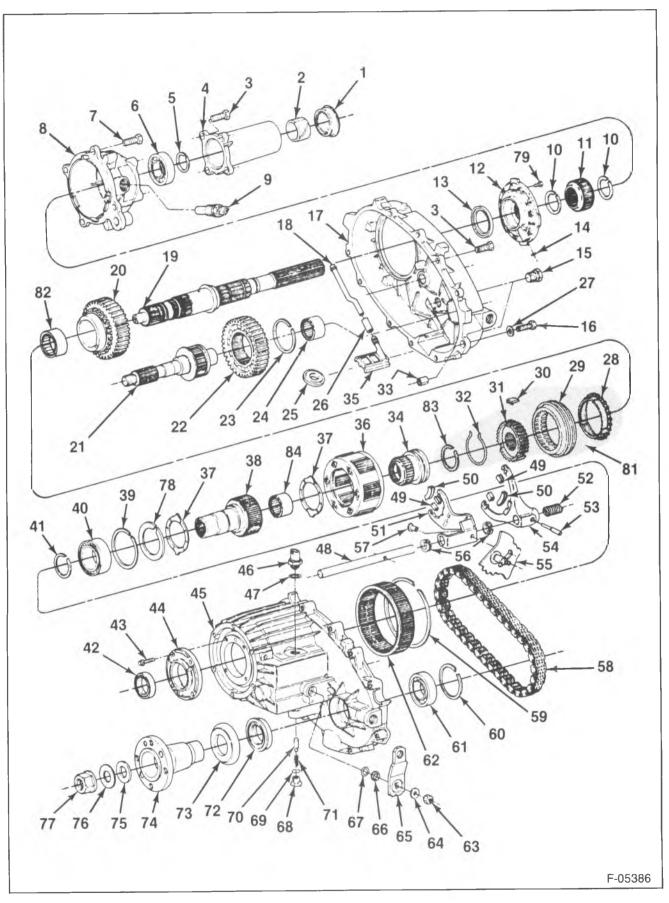


Figure 1—New Process 241 Transfer Case Components

NEW PROCESS 241 TRANSFER CASE 7D4-3

- 1. Oil Seal
- 2. Bushing
- 3. Rear Extension Housing Bolts/Case Bolts
- 4. Rear Extension
- 5. Retainer Snap Ring
- 6. Front Output Bearing
- 7. Pump Retainer Housing Bolts
- 8. Pump Retainer Housing
- 9. Speedometer Sensor
- 10. Retainer (Snap Ring)
- 11. Speedometer Tone Wheel
- 12. Oil Pump
- 13. Oil Pump Seal
- 14. O-Ring
- 15. Plug
- 16. Bolt
- 17. Rear Case Half
- 18. Oil Pump Pick Up Tube
- 19. Mainshaft
- 20. Drive Sprocket
- 21. Front Output Shaft
- 22. Driven Sprocket
- 23. Retainer (Snap Ring)
- 24. Front Output Rear Bearing
- 25. Magnet
- 26. Oil Tube Connector
- 27. Washer
- 28. Main Drive Synchronizer Stop Ring
- 29. Synchronizer Sleeve
- 30. Strut
- 31. Synchronizer Hub
- 32. Spring Retainer
- 33. Dowel
- 34. Range Shift Hub
- 35. Pump Pick Up Screen
- 36. Planetary Carrier
- 37. Thrust Washer
- 38. Input Gear
- 39. Retainer Snap Ring
- 40. Input Bearing
- 41. Retainer Snap Ring
- 42. Input Bearing Retainer Seal

- 43. Input Retainer Bolt
- 44. Input Bearing Retainer
- 45. Front Case Half
- 46. Indicator Lamp Switch
- 47. O-Ring Seal
- 48. Shift Rail
- 49. Pads
- 50. Pads (Center)
- 51. Range Shift Fork
- 52. Fork Shift Spring
- 53. Pin
- 54. Mode Shift Fork
- 55. Sector With Shaft
- 56. Bushing
- 57. Range Fork Pin
- 58. Chain
- 59. Retainer Snap Ring
- 60. Retainer Snap Ring
- 61. Front Output Bearing
- 62. Annulus Gear
- 63. Shift Lever Nut, Prev. Torque
- 64. Washer
- 65. Shift Lever
- 66. Washer Plastic
- 67. O-Ring Seal
- 68. Poppet Screw
- 69. O-Ring Seal
- 70. Selection Plunger
- 71. Poppet Spring
- 72. Front Output Shaft Seal
- 73. Deflector
- 74. Front Output Flange
- 75. Rubber Sealing Washer
- 76. Washer
- 77. Nut Front Output Flange
- 78. Carrier Lock Ring
- 79. Oil Pump Screw
- 80. Identification Tag
- 81. Synchronizer Assembly
- 82. Drive Sprocket Bearing
- 83. Mode Synchronizer Hub Snap Ring
- 84. Mainshaft Pilot Bearing

F-05387

Figure 2—New Process 241 Transfer Case Components

7D4-4 NEW PROCESS 241 TRANSFER CASE

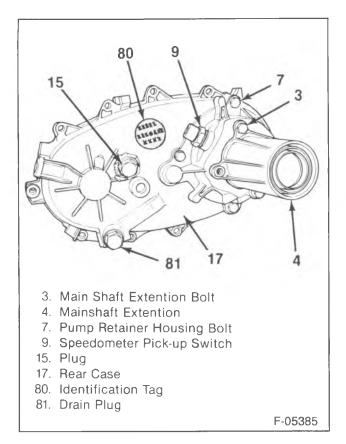


Figure 3—Rear View — 241 Transfer Case

DISASSEMBLY OF THE TRANSFER CASE

EXTERNAL COMPONENTS

Tean

 The transfer case exterior using a solvent and a stiff brush.

Remove or Disconnect (Figures 1, 2, 3 and 4)

- 1. Front output flange nut (77), washer (76), rubber sealing washer (75) and front output flange (74) from the front output shaft.
- 2. Indicator lamp switch (46) and O-ring seal (47).
- 3. Speedometer sensor (9) and seal.
- Poppet screw (68), O-ring seal (69), poppet spring (71) and poppet plunger (70).

MAINSHAFT EXTENSION AND OIL PUMP HOUSING

✦✦ Remove or Disconnect (Figures 1, 2, 3 and 4))

- 1. Rear extension housing bolts (3) and rear extension (4).
- Bearing retainer (snap ring) (5) from the mainshaft (19).
- 3. Pump retainer housing bolts (7).

· Pump retainer housing bolts are shouldered.

- Pump retainer housing (8) from the rear case half (17).
- 5. Retainer (snap ring) (10), speedometer tone wheel (11) and retainer (snap ring) (10) from the mainshaft (19).
- 6. Case bolts (3) from the case halves.
 - Note two longer case bolts and washers go into doweled case holes (33).
- Separate case halves. Insert screwdrivers into the slots cast in the case ends and pry apart. Do not attempt to wedge the case halves apart at any point on the mating surfaces.
 - Be careful not to damage the oil pump (12) (located in the rear case half) while removing the rear case half (17).


INTERNAL COMPONENTS

Remove or Disconnect (Figures 5, 6 and 7)

Tools Required:

- J 2619-5 Slide Hammer
- J 8092 Driver Handle
- J 22912-1 Bearing Remover
- J 29369-1 Needle Bearing Remover
- J 29369-2 Needle Bearing Remover

NEW PROCESS 241 TRANSFER CASE 7D4-5

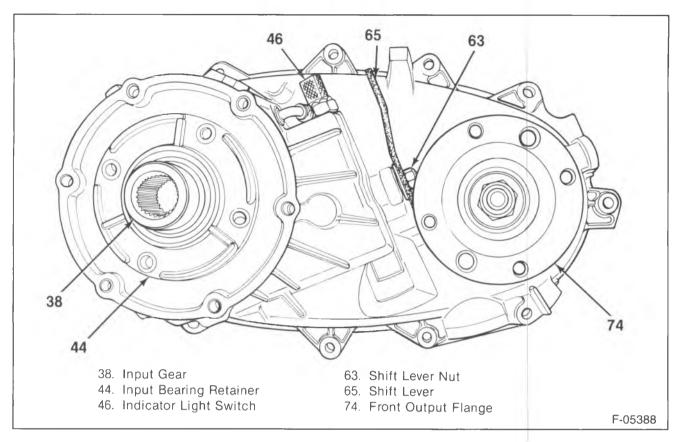



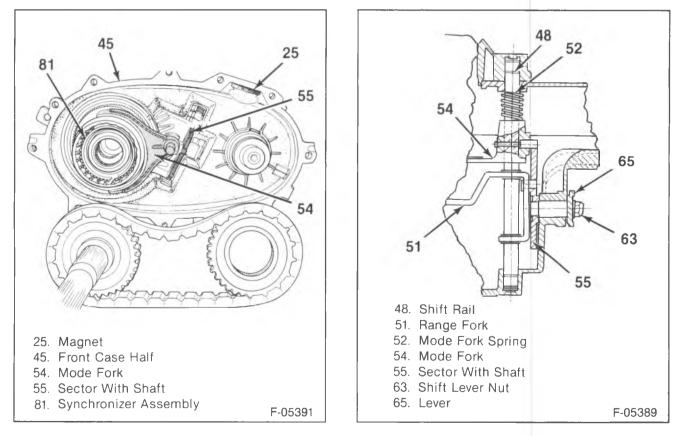


Figure 5-Mode Fork and Shaft Assembly

Figure 6—Shift Rail Assembly

7D4-6 NEW PROCESS 241 TRANSFER CASE

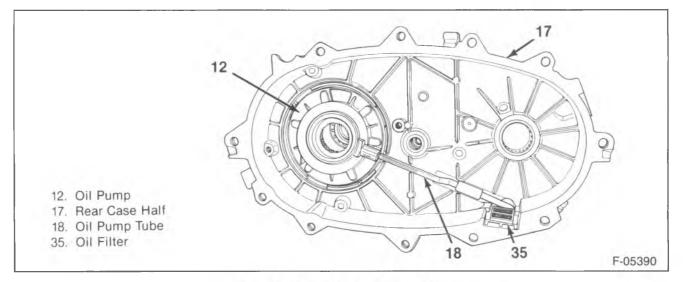


Figure 7—Pump Housing Installation

- J 33832 Bearing Installer and Remover
- J 9276-21 Adapter
- J 2619-01 Slide Hammer
- 1. Oil pump (12), pickup tube (18), O-ring (14) and pump pickup filter (35) from the rear case half (figure 7).
- 2. Fork shift spring (52).
- 3. Retainer (snap ring) (23) from the front output shaft (21).
- 4. Mainshaft (19), chain (58), and driven sprocket (22) from the front case half (45) as a unit. Mode shift fork (54) and shift rail (48) will be removed with the mainshaft.
- 5. Retainer (snap ring) (41) from the mainshaft (19).
- 6. Synchronizer assembly (81). Drive sprocket (20) from the mainshaft (19) (figure 5).
- Range shift fork (51) and range shift hub (34) and sector with shaft (55) from the planetary carrier (36).
 - It is necessary to rotate the sector with shaft (55) to obtain clearance when removing the range fork (51) (figure 6).
- 8. Shift lever nut (63), washer (64), shift lever (65), plastic washer (66) and the O-ring seal (67) from the front case half (45).
- 9. Input bearing retainer bolts (43) and input bearing retainer (44) from the front case half (45).
- 10. Bearing retainer (snap ring) (39).
- 11. Planetary carrier (36) and the input gear (38) from the annulus gear (62) using a soft faced hammer.
- 12. Retainer ring (snap ring) (41) from the input gear (38).
- 13. Input bearing (40) from the input gear (38) with J 22912-1 (Bearing Remover).
 - Carrier lock ring (78).
 - Thrust washer (37).
- Drive sprocket bearing (82) from the drive sprocket (20) using J 29369-1 and J 2619-01.
- Needle bearings (84) from the input geart (38) using J 29369-2, J 9276-21 and J 2619-01 (figure 8).
- 16. Front output bearing retainer ring (snap ring) (60).
- Front output shaft seal (72) from the front case half (45).

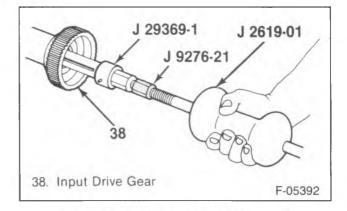


Figure 8—Input Gear Bearing Removal

- Front output bearing (61) from the front case half (45) using J 33832 and J 8092.
- 19. Seal (1) from the mainshaft extension housing (4).
- 20. Seal (42) from the input bearing retainer (44).

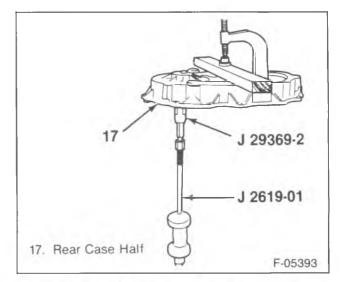


Figure 9—Front Output Shaft Rear Bearing Removal

NEW PROCESS 241 TRANSFER CASE 7D4-7

- 21. Front output rear bearing (24) from the rear case half (17).
 - Insert J 29369-2 behind the needle bearings.
 - Using J 2619-5, hammer the bearing from the case (figure 9).
- 22. Mainshaft bearing (6) from the oil pump retainer (8). 23. Magnets (25) from the front case half (45).

Disassemble

 Scribe location of synchronizer hub and sleeve to aid in assembly.

CLEANING AND INSPECTION

- 4. Shaft splines for excessive wear, spalling, cracks, distortion or corrosion.
 - 5. Retainer rings for excessive wear, distortion or damage.
 - 6. Case halves for damaged or warped mating surfaces, cracks, porosity, or damaged threaded holes.
 - 7. Synchronizer stop ring for cracks, chips, spalling, or excessive wear.
 - 8. Synchronizer hub and sleeve for cracks, chips, spalling, or excessive wear.
 - 9. Pads on the mode fork and the range fork for wear, distortion.
 - 10. Oil pump gears and case halves for wear, spalling, cracks, and damage. Replace complete assembly if there is wear.
 - 11. Input gear, planetary carrier and range shift hub tooth chamfers for excessive wear.

Clean

- 1. Bearings.
 - Remove all old lubricant and dirt.
- 2. Shafts.
- 3. Sprockets.
- 4. Chain.
- 5. Oil feed ports and channels in each case half. Apply compressed air to each oil feed port and channel in order to remove any obstructions or cleaning solvent residue.
- 6. All mating and sealing surfaces.

10 Inspect

- 1. Bearings and thrust washers for wear, spalling, brinneling, or corrosion.
- 2. Gear teeth for excessive wear or damage, spalling, cracks, or corrosion.
- 3. Gear splines for excessive wear, spalling, cracks, twist or corrosion.

- synchronizer sleeve (29). 2. Spring retainer (32) from the synchronizer sleeve (29).
 - 3. Synchronizer hub (31) from the synchronizer (29).

1. Main drive synchronizer stop ring (28) from the

- 4. Oil pump screws (79) from the oil pump (12).
- 5. Inner gear.



7D4-8 NEW PROCESS 241 TRANSFER CASE

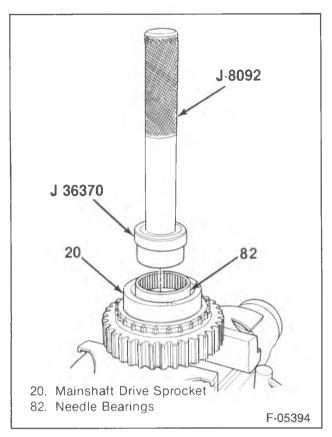


Figure 10—Installing the Needle Bearings to the Front Drive Sprocket

BEARING AND SEAL REPLACEMENT

++ Install or Connect)

Tools Required:

- J 8092 Driver Handle
- J 36370 Drive Gear Needle Bearing Installer J 36371 Front and Rear Output Shaft Bearing Installer

J 36372 Input Gear Bearing Installer (Needle Bearing)

J 36373 Input Gear Bearing Installer (Ball Bearing)

- · Use ATF or equivalent where needed in assembly.
- 1. Needle bearings (82) to the drive sprocket (20) using J 36370 and J 8092 (figure 10).
 - Drive the bearings into the driven sprocket so that it is flush on the synchronizer side.
- Needle bearing (24), to the rear case half (17) using J 36372 and J 8092.
 - Bearing must be flush with the boss on case housing.
- 3. Bearing (61) to the front case half (45) using J 37371.
- 4. Retainer (60) (figures 11 and 12).
- 5. Bearing (6) to the pump retainer housing (8) using J 36371 (figures 13 and 14).

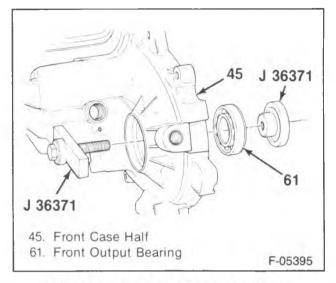


Figure 11-Front Output Bearing Installation

- 6. Bearing (84) to the input gear (38) using J 36372 and J 8092.
- 7. Thrust washer (37).
- 8. Carrier lock ring (78).
- 9. Retainer (39).
- 10. Bearing (40) to the input gear (38) using J 36372.
- 11. Retainer ring (snap ring) (41) to the input gear (38).
- 12. Oil seal (1) to the rear extension (4).
- 13. Input bearing retainer seal (42) to the input bearing retainer (44).
- Front output shaft seal (72) to the front case half (45).
- 15. Magnet (25) into front case half (45).

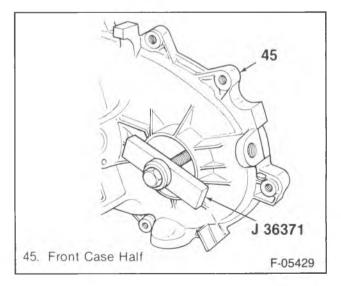


Figure 12—J-36371 and Bearing Installation

ASSEMBLY

NEW PROCESS 241 TRANSFER CASE 7D4-9

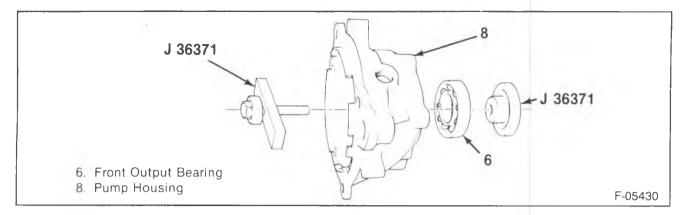


Figure 13—Pump Housing Bearing Installation

INTERNAL COMPONENTS

Assemble

- Synchronizer hub (31) to the synchronizer sleeve (29) along with the three struts (30).
 - Align the previously made scribe marks.
- 2. Spring retainer (32) to the synchronizer sleeve (29).
- 3. Main drive synchronizer stop ring (28) to the synchronizer sleeve (29).

Install or Connect

- 1. Drive sprocket (20) to the mainshaft (19).
- 2. Planetary input gear assembly (38) into the annulus gear (62) using a soft faced hammer.
- Bearing retainer (snap ring) (39) to the input bearing (40).
- 4. Input bearing retainer bolts (43) and input bearing retainer (44) to the front case half (45).
 - Apply RTV or equivalent on bearing retainer mating surfaces.
 - Apply Loctite 242 or equivalent on bearing retainer bolts.

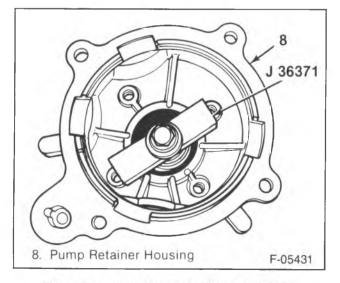


Figure 14—J-36371 and Bearing Installation

री Tighten

- Bolts (3) to 19 N m (14 ft. lbs.).
- 5. Sector with shaft (55) into the front case half (45).
- Shift lever O-ring (67), plastic washer (66), shift lever (65), washer (64), and nut (63) to the front case half (figure 15).



- Nut (63) to 27 N m (20 ft. lbs.).
- 7. Range shift hub (34) and the range shift fork into the front case half (45).
 - It is necessary to rotate the sector to align the range shift fork.
- 8. Synchronizer assembly, mode shift fork (54) and rail into the front case half (45) (figure 16).
- 9. Front output shaft (21) to the front case half (45).
- 10. Driven sprocket (22) into the chain (58).
- 11. Drive sprocket (20) and mainshaft (19(=) into the chain (58).
 - Mainshaft (19), drive sprocket (20), driven sprocket (22) and chain (58) are installed as a unit.
- 12. Retainer (snap ring) (23) onto the front output.
- 13. Fork shift spring (52) onto the mode shift rail (48).,
- Oil pump pick up tube (18), oil tube connector (26) and pump pick up screen (35) into the rear case half (17) (figuer 17).
- Oil tube O-ring (14) onto the oil pump pick up tube (18).

NOTICE: Do not damage the O-ring during assembly as this could result in pump failure.

- 16. Oil pump (12) to the oil pump pick up tube (18).
 - Apply RTV sealer to the case mating surfaces.
- 17. FRear case (17) over mainshaft (19) and onto the front case half (45).
 - Be careful not to damage the oil pump (12) while installing the rear case half (figure 7).
- 18. Case bolts (3) into case halves.
 - Apply Loctite 242 or equivalent to case bolts.
 - The two longer case bolts and washers to into doweled case holes (33) (figure 17).

7D4-10 NEW PROCESS 241 TRANSFER CASE

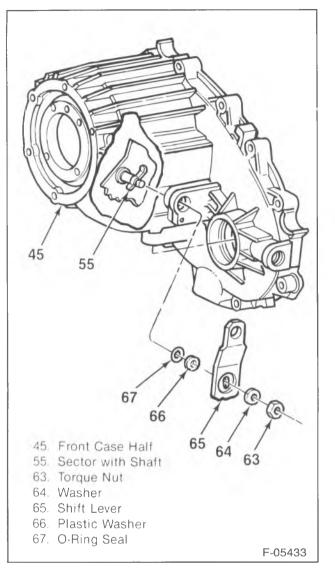


Figure 15—Sector with Shaft

(玌 Tighten

- Bolts to 31 N⁻m (23 ft. lbs.).
- 19. Pump retainer housing (8) and pump housing bolts (7) to the rear case half (17).
 - Apply Loctite 242 or equivalent on pump housing bolt threads.
 - · Pump housing bolts are shouldered (7).

री Tighten

- Bolts to 41 N·m (30 ft. lbs.).
- 20. Input bearing retainer (snap ring) (5) to the mainshaft (19).
- Retainer (snap ring) (10), speedometer tone wheel (11) and retainer (snap ring) (10) to the mainshaft (19).
- 22. Rear extension housing (4) and extension housing bolts (3) to the pump retainer housing (8).
 - Apply RTV sealer to the mating surfaces.
 - Apply Loctite 242 or equivalent on the extension housing bolts.

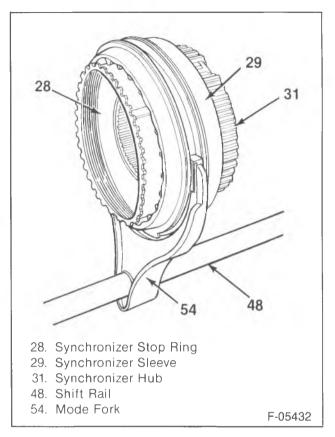


Figure 16—Synchronizer Hub Assembly and Mode Fork

된 Tighten

• Bolts to 31 N m (23 ft. lbs.).

EXTERNAL COMPONENTS

++ Install or Connect

- 1. Selection plunger (70), poppot spring (71), O-ring seal (69) and poppet screw (68) to the front case half (45).
 - र्च्स Tighten

• Poppet screw to 31 N m (23 ft. lbs.).

2. Speedometer sensor (9) and O-ring to the pump retainer housing (8).



• Sensor to 31 N·m (23 ft. lbs.).

3. Indicator lamp switch (46) and O-ring (47) to the front case housing.

হ	Tighten
---	---------

• Switch to 24 N m (17 ft. lbs.).

4. Front output flange (74), rubber sealing washer (75), washer (76) and flange nut (77).



• Nut (26) to 149 N m (110 ft. lbs.).

NEW PROCESS 241 TRANSFER CASE 7D4-11

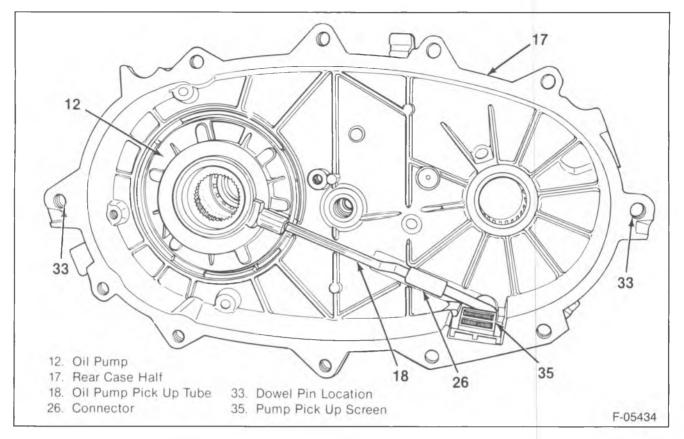


Figure 17—Oil Pump, Pickup, Screen, Doweled Case Holes

7D4-12 NEW PROCESS 241 TRANSFER CASE

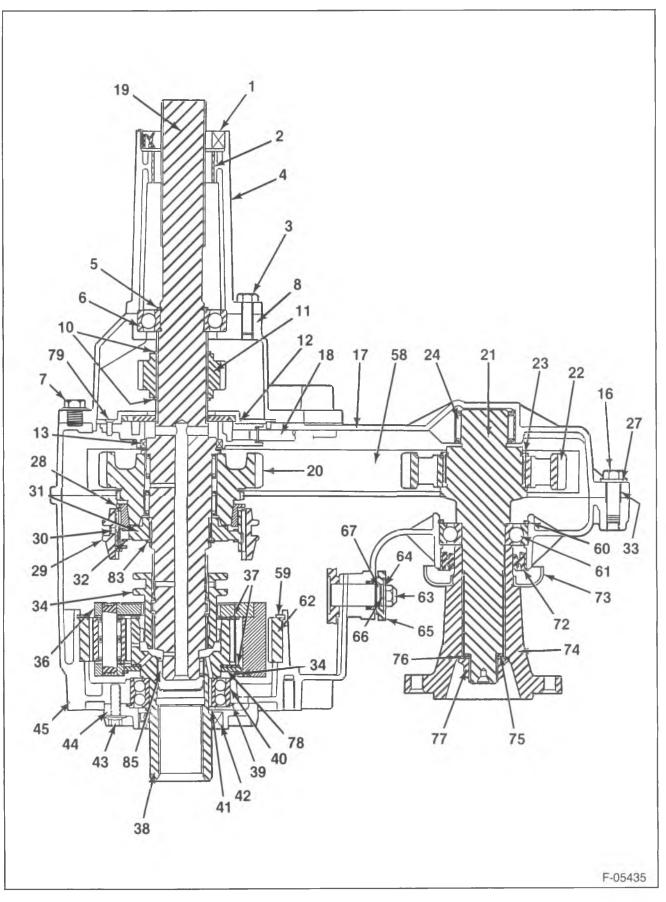


Figure 18-241 Transfer Case Cut Away

NEW PROCESS 241 TRANSFER CASE 7D4-13

- 1. Extension Housing Oil Seal
- 2. Bushing
- 3. Rear Extension Housing Bolts/Case Bolts
- 4. Rear Extension Housing
- 5. Retainer (Snap Ring)
- 6. Front Output Bearing
- 7. Pump Retainer Housing Bolts
- 8. Pump Retainer Housing
- 10. Retainer (Snap Ring)
- 11. Speedometer Tone Wheel
- 12. Oil Pump
- 13. Oil PUmp Seal
- 16. Bolt
- 17. Rear Case Half
- 18. Oil Pump Pick Up Tube
- 19. Mainshaft
- 20. Drive Sprocket
- 21. Front Output Shaft
- 22. Driven Sprocket
- 23. Retainer (Snap Ring)
- 24. Front Output Rear Bearing
- 27. Washer
- 28. Main Drive Synchronizer Stop Ring
- 29. Synchronizer Sleeve
- 30. Strut
- 31. Synchronizer Hub
- 32. Spring Retainer
- 33. Dowel
- 34. Range Shift Hub
- 36. Planetary Carrier

- 37. Thrust Washer
- 38. Input Gear
- 39. Retainer Snap Ring
- 40. Input Bearing
 - 41. Retainer (Snap Ring)
 - 42. Input Bearing Retainer Seal
 - 43. Input Bearing Retainer Bolt
- 44. Input Bearing Reatiner
 - 45. Front Case Half
 - 58. Chain
 - 59. Retainer (Snap Ring)
 - 60. Retainer (Snap Ring)
 - 61. Front Output Bearing
 - 62. Annulus Gear
 - 63. Shift Lever Nut (Prev. Torque)
 - 64. Washer
 - 65. Shift Lever
 - 66. Washer (Plastic)
 - 67. O-Ring Seal
- 72. Front Output Shaft Seal
- 73. Deflector
- 74. Front Out Flange
- 75. Rubber Sealing Washer
 - 76. Washer
 - 77. Front Output Flange Nut
 - 78. Carrier Lock Ring
 - 79. Oil Pump Screw
 - 83. Mode Synchronizer Hub Snap Ring
 - 85. Mainshaft Pilot Bearing

F-05436


Figure 19-241 Transfer Case Cut Away

7D4-14 NEW PROCESS 241 TRANSFER CASE

SPECIFICATIONS

NEW PROCESS 241 TRANSFER CASE

	N-m	FT. LBS.
Input Shaft Retainer Bolts	19	14
Shift Selector Lever Nut	27	20
Shift Selector Light Switch	31	23
Case Half Bolts	31	23
Pump Housing Bolts	41	30
Mainshaft Extension Housing Bolts	31	23
Speedometer Pick-up Switch	31	23
Front Propeller Shaft Flange Bolts	149	110
Drain and Fill Plugs	47	35
Lubricant: Dexron® II	4.6	Pints

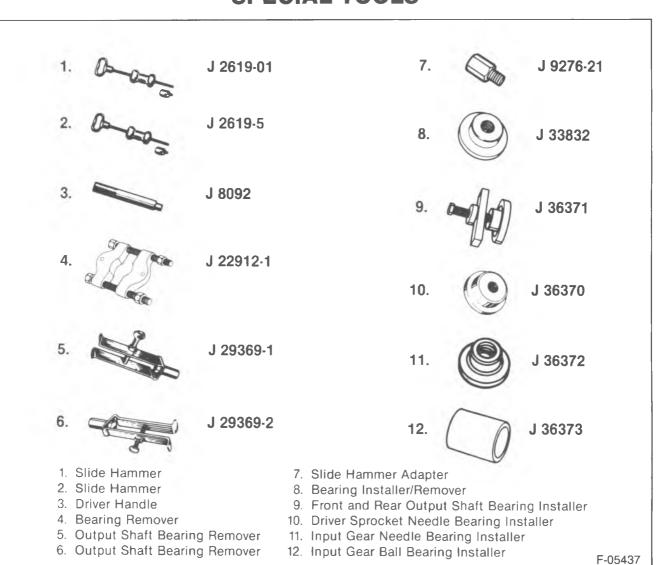

SPECIAL TOOLS

7D5-1

PAGE

SECTION 7D5

NEW PROCESS 231 H.D. TRANSFER CASE

CONTENTS

SUBJECT

Description	
	.7D5- 2
Disassembly of Transfer Case	
External Components	.7D5- 2
Mainshaft Extension and Oil Pump Housing	.7D5- 2
Internal Components	.7D5- 3
Cleaning and Inspection	.7D5- 7
Assembly of Transfer Case	.7D5- 7
Bearing and Seal Replacement.	.7D5- 8
Internal Components	.7D5- 9
External Components	.7D5-10
Specifications	.7D5-10
Special Tools	.7D5-11

DESCRIPTION

The Model 231 heavy duty transfer case is an aluminum case, chain drive, four position unit providing four-wheel drive high and low ranges, a two-wheel high range, and a neutral position. This model is a part-time four-wheel drive unit. Torque input in four-wheel high and low ranges is undifferentiated. The range positions are selected by a floor mounted gear shift lever.

The case is a two-piece aluminum case containing front and rear output shafts, two drive sprockets, a shift mechanism and a planetary gear assembly. The drive sprockets are connected and operated by the drive chain. The planetary assembly which consists of a 6-pinion planetary (3-pinion planetary 231) carrier and an annulus gear provide the four-wheel drive low range when engaged. Reduction ratio is 2.72:1 in this range.

IDENTIFICATION

An identification tag is attached to the rear half of the transfer case (figure 1). This tag provides the transfer case model number, low range reduction ratio, and assembly number. The information on this tag is necessary for servicing information. If the tag is removed or becomes dislodged during service operations, it should be reattached using an adhesive sealant such as Loctite 242 or equivalent.

POWER FLOW

In all drive range positions input torque is transmitted to the transfer case gear train through the transfer case input gear. In 2H range, torque flows from the input gear to the range shift hub and main shaft. Torque flow continues through the slip yoke which is splined to the mainshaft, and finally to the rear propeller shaft and axle. In 2H range, the mode synchronizer remains in the neutral position and does not lock the drive sprocket to the mainshaft. As a result, torque is not transferred to the driven sprocket.

In 4H range, input torque from the input gear is transmitted to the mainshaft in exactly the same fashion as in 2H range. However, in 4H position, the mode synchronizer sleeve is shifted into engagement with the clutch teeth of the drive sprocket. This locks the drive sprocket to the mainshaft through the synchronizer. Torque is transmitted through the drive sprocket to the driven sprocket by the connecting drive chain. Since the front output shaft is splined to the driven sprocket, torque flows through the front output shaft to the front propeller shaft and axle resulting in high range four-wheel drive.

In 4L range, the path of torque through the transfer case is exactly the same as in 4H range but with one major difference. In 4L range the range shift hub is shifted into engagement with the planetary carrier. This causes the input gear to rotate the planetary pinions inside the annulus gear, causing the planetary carrier, range shift hub and mainshaft to rotate at a gear reduction ratio of 2.72:1.

7D5-2 NEW PROCESS 231 H.D. TRANSFER CASE

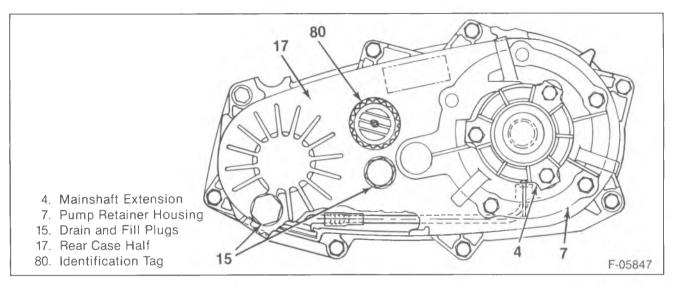


Figure 1-231 H.D. Rear Case Half

DISASSEMBLY OF THE TRANSFER CASE

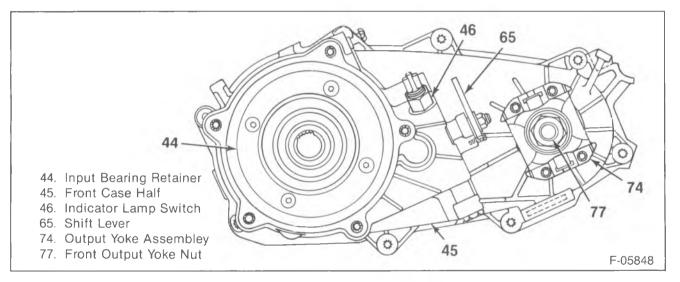


Figure 2—231 H.D. Front Case Half

EXTERNAL COMPONENTS

Clean

 The transfer case exterior using a solvent and a stiff brush.

←→ Remove or Disconnect (Figure 2, 3, and 4)

- 1. Front output yoke nut (77), washer (76), rubber sealing washer (75) and front output flange (74) from the front output shaft.
- 2. Indicator lamp switch (46) and O-ring seal (47).

3. Poppet screw (68), O-ring seal (69), poppet spring (71) and poppet plunger (70).

MAINSHAFT EXTENSION AND OIL PUMP HOUSING

++ Remove or Disconnect (Figures 2, 3, and 4)

- 1. Rear extension housing bolts (3) and rear extension (4).
- 2. Bearing retainer (snap ring) (5) from the mainshaft (19).
- 3. Pump retainer housing bolts (7).

NEW PROCESS 231 H.D. TRANSFER CASE 7D5-3

- 4. Pump retainer housing (8) from the rear case half (17).
- 5. Speedometer drive gear (11) from the mainshaft (19).
- 6. Case bolts (3) from the case halves.
 - Note two longer case bolts and washers go into doweled case holes (33).
- Separate case halves. Insert screwdrivers into the slots cast in the case ends and pry apart. Do not attempt to wedge the case halves apart at any point on the mating surfaces.
 - Be careful not to damage the oil pump (12) (located in the rear case half) while removing the rear case half (17).

INTERNAL COMPONENTS

Remove or Disconnect (Figures 3, 4, and 5 through 9)

Tools Required:

- J 8092 Driver Handle
- J 36370 Bearing Installer/Remover
- J 29170 Bearing Remover
- J 29369-1 Bearing Remover
- J 9276-21 Adapter
- J 2619-01 Slide Hammer
- J 33790 Bearing Remover
- 1. Oil pump (12) pickup tube (18), O-ring (14) and pump pickup filter (35) from the rear case half (figure 5).
- 2. Fork shift spring (52).
- 3. Mainshaft (19), chain (58), and driven sprocket (22) from the front case half (45) as as unit. Mode shift fork (54) and shift rail (48) will be removed with the mainshaft.
- 4. Retainer (snap ring) (83) from the mainshaft (19).
- 5. Synchronizer assembly (81). Drive sprocket (20) from the mainshaft (19) (figure 6).
- 6. Range shift fork (51) and range shift hub (34) and sector with shaft (55) from the planetary carrier (36).
 - It is necessary to rotate the sector with shaft (55) to obtain clearance when removing the range fork (51) (figure 7).
- 7. Shift lever nut (63), washer (64), shift lever (65), plastic washer (66) and the O-ring seal (67) from the front case half (45).
- 8. Input bearing retainer bolts (43) and input bearing retainer (44) from the front case half (45).
- 9. Bearing retainer (snap ring) (39).
- 10. Planetary carrier (36) and the input gear (38) from the annulus gear (62) using a soft faced hammer.
- Input bearing (40) from the front case half (45) using J 36370 and J 8092.
- Drive sprocket bearings (82) from the drive sprocket (20) using J 29170 and J 8092.
- Needle bearings (84) from the input gear (38) using J 29369-1, J 9276-21 and J 2619-01 (figure 8).
- 14. Front output shaft seal (72) from the front case half (45).
- 15. Front output bearing retainer ring (snap ring) (60).
- Front output bearing (61) from the front case half (45) using J 33790 and J 8092.

- 17. Seal (1) from the mainshaft extension housing (4).
- 18. Seal (42) from the input bearing retainer (44).
- 19. Front output rear bearing (24) from the rear case half (17) using J 2619-01 and J 29369-2 (figure 9).
- 20. Mainshaft bearing (6) from the oil pump retainer (8) using J 33790.
- 21. Magnets (25) from the front case half (45).

Disassemble

- Mark location of synchronizer hub and sleeve to aid in assembly.
- 1. Main drive synchronizer stop ring (28) from the synchronizer sleeve (29).
- 2. Spring retainer (32) from the synchronizer sleeve (29).
- 3. Synchronizer hub (31) from the synchronizer (29).
- 4. Oil pump screws (79) from the oil pump (12).
- 5. Inner gear.

7D5-4 NEW PROCESS 231 H.D. TRANSFER CASE

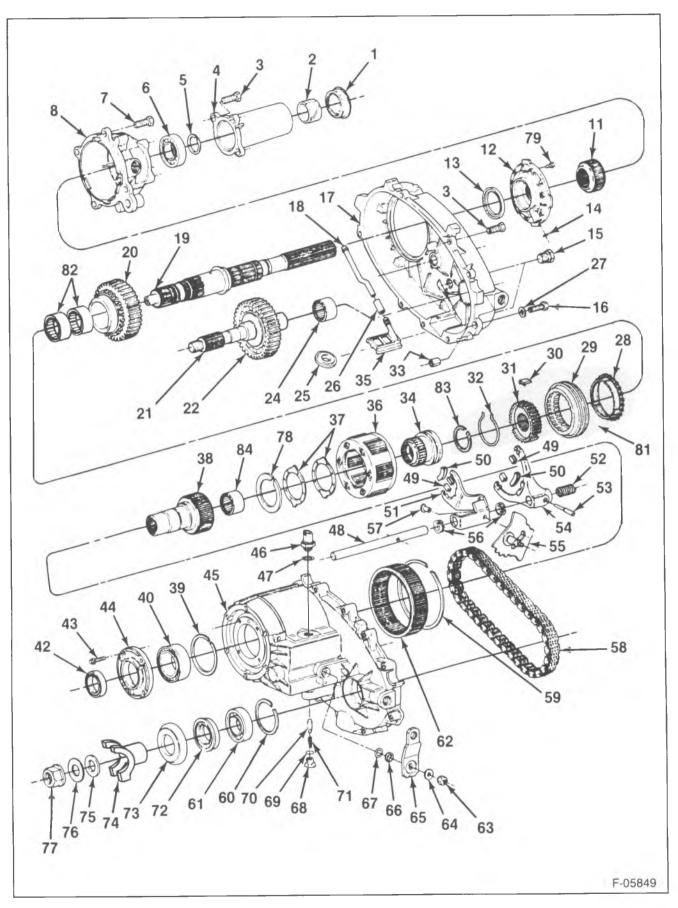


Figure 3—New Process 231 H.D. Transfer Case Components

NEW PROCESS 231 H.D. TRANSFER CASE 7D5-5

- 1. Oil Seal
- 2. Bushing
- 3. Rear Extension Housing Bolts/Case Bolts
- 4. Rear Extension
- 5. Retainer Snap Ring
- 6. Front Output Bearing
- 7. Pump Retainer Housing **Bolts**
- 8. Pump Retainer Housing
- 11. Speedometer Drive Gear
- 12. Oil Pump
- 13. Oil Pump Seal
- 14. O-Ring
- 15. Plug
- 16. Bolt
- 17. Rear Case Half
- 18. Oil Pump Pick Up Tube
- 19. Mainshaft
- 20. Drive Sprocket
- 21. Front Output Shaft
- 24. Front Output Rear Bearing
- 25. Magnet
- 26. Oil Tube Connector
- 27. Washer
- 28. Main Drive Synchronizer Stop Ring
- 29. Synchronizer Sleeve
- 30. Strut
- 31. Synchronizer Hub
- 32. Spring Retainer

- 33. Dowel
- 34. Range Shift Hub
- 35. Pump Pick Up Screen
- 36. Planetary Carrier
- 37. Thrust Washer
- 38. Input Gear
- 39. Retainer Snap Ring
- 40. Input Bearing
- 42. Input Bearing Retainer
 - Seal
- 43. Input Retainer Bolt
- 44. Input Bearing Retainer
- 45. Front Case Half
- 46. Indicator Lamp Switch
- 47. O-Ring Seal
- 48. Shift Rail
- 49. Pads
- 50. Pads (Center)
- 51. Range Shift Fork
- 52. Fork Shift Spring
- 53. Pin
- 54. Mode Shift Fork
- 55. Sector With Shaft
- 56. Bushing
- 57. Range Fork Pin
- 58. Chain
- 59. Retainer Snap Ring
- 60. Retainer Snap Ring
- 61. Front Output Bearing
- 62. Annulus Gear
- 63. Shift Lever Nut,
- Prev. Torque
- 64. Washer

- 65. Shift Lever
- 66. Washer Plastic
- 67. O-Ring Seal
- 68. Poppet Screw
- 69. O-Ring Seal
- 70. Selection Plunger
- 71. Poppet Spring
- 72. Front Output Shaft Seal
- 73. Deflector
- 74. Front Output Yoke
- 75. Rubber Sealing Washer
- 76. Washer
- 77. Nut Front Output Yoke
- 78. Carrier Lock Ring
- 79. Oil Pump Screw
- 80. Identification Tag
- 81. Synchronizer Assembly
- 82. Drive Sprocket Bearing
- 83. Mode Synchronizer Hub Snap Ring
- 84. Mainshaft Pilot Bearing

F-05850

Figure 4-New Process 231 H.D. Transfer Case

7D5-6 NEW PROCESS 231 H.D. TRANSFER CASE

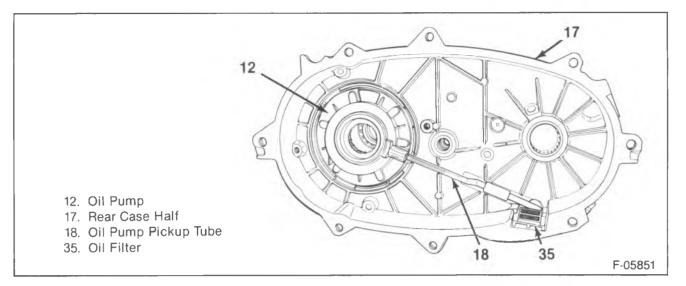


Figure 5—Oil Pump, Pickup Tube and Screen

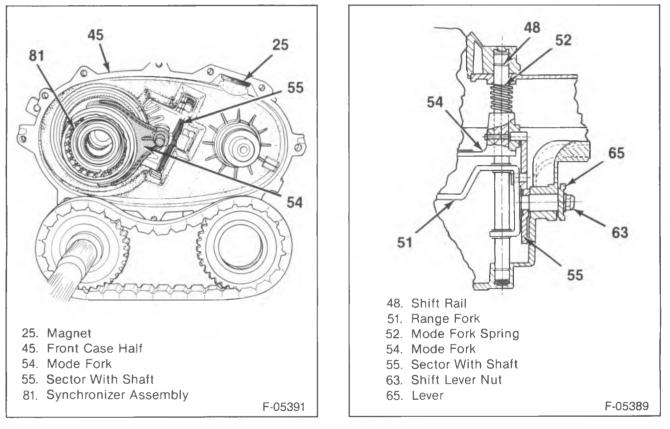


Figure 6—Mode Fork and Shaft Assembly

Figure 7—Shift Rail Assembly

NEW PROCESS 231 H.D. TRANSFER CASE 7D5-7

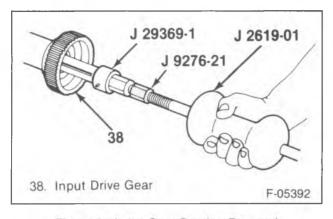


Figure 8—Input Gear Bearing Removal

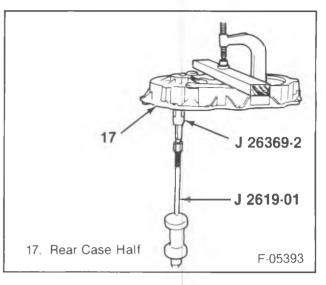


Figure 9—Front Output Shaft Rear Bearing Removal

CLEANING AND INSPECTION

Clean

- 1. Bearings.
 - Remove all old lubricant and dirt.
- 2. Shafts.
- 3. Sprockets.
- 4. Chain.
- 5. Oil feed ports and channels in each case half. Apply compressed air to each oil feed port and channel in order to remove any obstructions or cleaning solvent residue.
- 6. All mating and sealing surfaces.

Inspect

- 1. Bearings and thrust washers for wear, spalling, brinneling, or corrosion.
- 2. Gear teeth for excessive wear or damage, spalling, cracks, or corrosion.
- 3. Gear splines for excessive wear, spalling, cracks, twist or corrosion.

- 4. Shaft splines for excessive wear, spalling, cracks, distortion or corrosion.
- 5. Retainer rings for excessive wear, distortion or damage.
- Case halves for damaged or warped mating surfaces, cracks, porosity, or damaged threaded holes.
- Synchronizer stop ring for cracks, chips, spalling, or excessive wear.
- 8. Synchronizer hub and sleeve for cracks, chips, spalling, or excessive wear.
- 9. Pads on the mode fork and the range fork for wear, distortion.
- 10. Oil pump gears and case halves for wear, spalling, cracks, and damage. Replace complete assembly if there is wear.
- 11. Input gear, planetary carrier and range shift hub tooth chamfers for excessive wear.

ASSEMBLY OF TRANSFER CASE

BEARING AND SEAL REPLACEMENT

Install or Connect (Figures 10, 11, and 12) Tools Required:

- J 8092 Driver Handle
- J 36370 Bearing Installer
- J 33833 Bearing Installer
- J 36372 Bearing Installer
- J 33843 Seal Installer
- J 33831 Seal Installer
- · Use ATF or equivalent where needed in assembly.

- Needle bearings (82) to the drive sprocket (20) using J 36370 and J 8092 (figure 10).
- 2. Needle bearing (24), to the rear case half (17) using J 36372 and J 8092.
 - Bearing must be flush with the boss on case housing.
- 3. Bearing (61) to the front case half (45) using J 9092 and J 33833.
- 4. Retainer (60).
- 5. Bearing (6) to the pump retainer housing (8) using J 33833 and J 8092 (figure 11).
- 6. Bearing (84) to the input gear (38) using J 36372 and J 8092.

7D5-8 NEW PROCESS 231 H.D. TRANSFER CASE

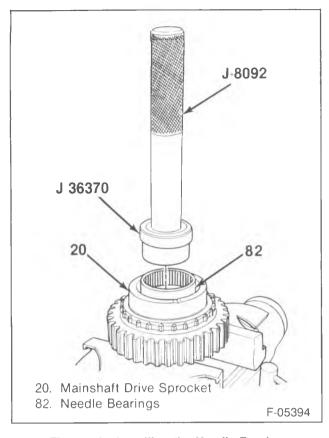


Figure 10—Installing the Needle Bearing to the Front Drive Sprocket

- 7. Thrust washer (37).
- 8. Carrier lock ring (78).
- 9. Retainer (39).
- 10. Bearing (40) to the front case half (45) using J 36372.
- 11. Oil seal (1) to the rear extension (4) using J 33843.
- 12. Input bearing retainer seal (42) to the input bearing retainer (44) using J 33831.
- 13. Front output shaft seal (72) to the front case half (45) using J 33834 (figure 12).
- 14. Magnet (25) into front case half (45).

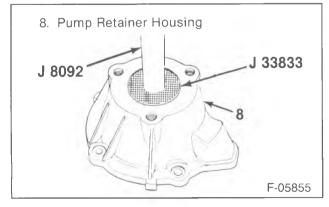


Figure 11—Pump Retainer Housing Bearing Installation

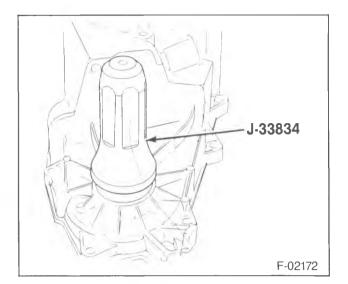


Figure 12—Front Output Shaft Seal Installation

INTERNAL COMPONENTS

Assemble (Figures 13, 14, and 15)

- Synchronizer hub (31) to the synchronizer sleeve (29) along with the three struts (30).
 - Align the previously made scribe marks.
- 2. Spring retainer (32) to the synchronizer sleeve (29).
- 3. Main drive synchronizer stop ring (28) to the synchronizer sleeve (29).

Install or Connect

- 1. Drive sprocket (20) to the mainshaft (19).
- 2. Planetary input gear assembly (38) into the annulus gear (62) using a soft faced hammer.
- Bearing retainer (snap ring) (39) to the input bearing (40).
- 4. Input bearing (40) to the front case half (45).
- 5. Input bearing retainer bolts (43) and input bearing retainer (44) to the front case half (45).
 - Apply RTV or equivalent on bearing retainer mating surfaces.
 - Apply Loctite 242 or equivalent on bearing retainer bolts.

री Tighten

- Bolts (43) to 19 N-m (14 ft. lbs.).
- 6. Sector with shaft (55) into the front case half (45).
- Shift lever O-ring (67), plastic washer (66), shift lever (65), washer (64), and nut (63) to the front case half (figure 13).



- Nut (63) to 27 N·m (20 ft. lbs.).
- 8. Range shift hub (34) and the range shift fork into the front case half (45).
 - It is necessary to rotate the sector to align the range shift fork.
- 9. Synchronizer assembly, mode shift fork (54) and rail into the front case half (45) (figure 14).
- 10. Front output shaft (21) to the chain (58).

NEW PROCESS 231 H.D. TRANSFER CASE 7D5-9

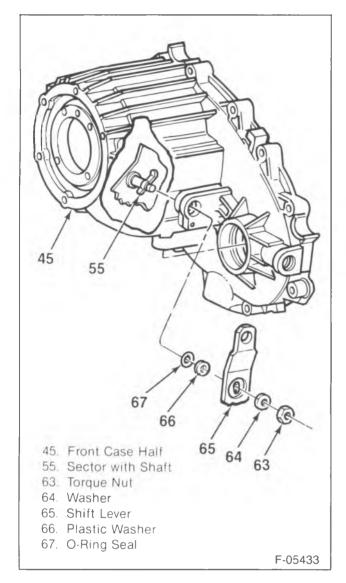


Figure 13—Sector with Shaft

- 11. Drive sprocket (20) and mainshaft (19) into the chain (58).
 - Mainshaft (19), drive sprocket (20), driven sprocket (22) and chain (58) are installed as a unit.
- 12. Fork shift spring (52) onto the mode shift rail (48).
- Oil pump pick up tube (18), oil tube connector (26) and pump pick up screen (35) into the rear case half (17) (figure 15).
- Oil tube O-ring (14) onto the oil pump pick up tube (18).

NOTICE: Do not damage the O-ring during assembly as this could result in pump failure.

- 15. Oil pump (12) to the oil pump pick up tube (18).
- Apply RTV sealer to the case mating surfaces.
 16. Rear case (17) over mainshaft (19) and onto the front case half (45).
 - Be careful not to damage the oil pump (12) while installing the rear case half.
- 17. Case bolts (3) into case halves.
 - Apply Loctite 242 or equivalent to case bolts.

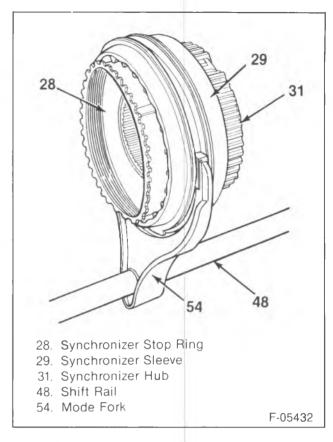


Figure 14—Synchronizer Hub Assembly and Mode Fork

• The two longer case bolts and washers into doweled case holes (33) (figure 16).



- Bolts to 31 N m (23 ft. lbs.).
- Pump retainer housing (8) and pump housing bolts
 (7) to the rear case half (17).
 - Apply Loctite 242 or equivalent on pump housing bolt threads.

Tighten

- Bolts to 41 N-m (30 ft. lbs.).
- 19. Input bearing retainer (snap ring) (5) to the mainshaft (19).
- 20. Retainer (snap ring) (10), speedometer gear (11) and retainer (snap ring) (10) to the mainshaft (19).
- 21. Rear extension housing (4) and extension housing bolts (3) to the pump retainer housing (8).
 - Apply RTV sealer to the mating surfaces.
 - Apply Loctite 242 or equivalent on the extension housing bolts.



[•] Bolts to 31 N m (23 ft. lbs.).

7D5-10 NEW PROCESS 231 H.D. TRANSFER CASE

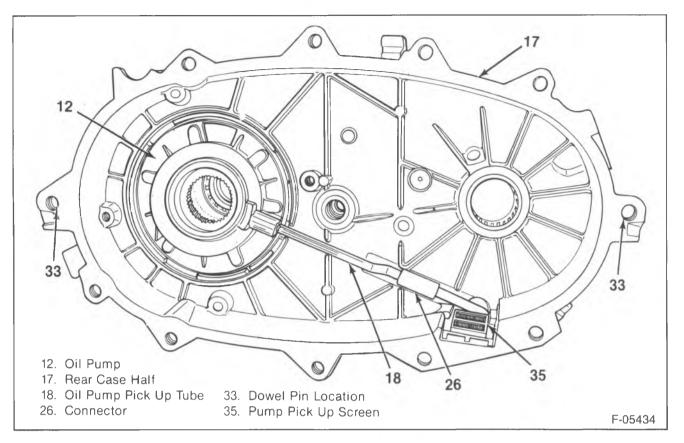


Figure 15—Oil Pump Pick Up Screen Doweld Case Holes

EXTERNAL COMPONENTS

1. Selection plunger (70) poppet spring (71), O-ring

seal (69) and poppet screw (68) to the front case half

++ Install or Connect (Figures 1 and 2)

(45).



Poppet screw to 31 N·m (23 ft. lbs.).

- 2. Indicator lamp switch (46) and O-ring (47) to the front case housing.
 - री Tighten

Switch to 24 N·m (17 ft. lbs.).

3. Front output flange (74), rubber sealing washer (75), washer (76) and flange nut (77).


SPECIFICATIONS

NEW PROCESS 231 H.D. TRANSFER CASE

	N·m	Ft. Lbs.
Input Shaft Retainer Bolts	19	14
Shift Selector Lever Nut	31	23
Shift Selector Light Switch	24	17
Case Half Bolts	31	23
Pump Housing Bolts	31	23
Mainshaft Extension Housing Bolts	31	23
Fill and Drain Plugs	47	35
Front Propeller Shaft Flange Bolts	149	110
Lubricant: Dexron II	2.5	pints

NEW PROCESS 231 H.D. TRANSFER CASE 7D5-11

SPECIAL TOOLS

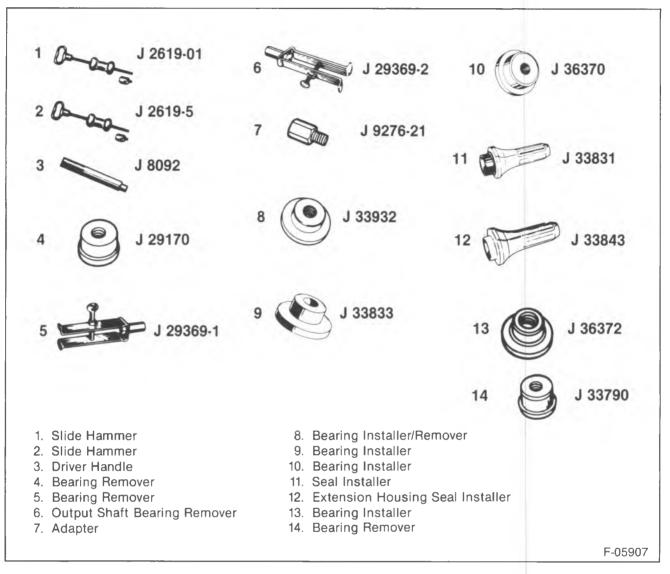

Special Tools



